


SNAPPERTM KEES

PRO DIVISION

SULKY ATTACHMENT MODEL 60848

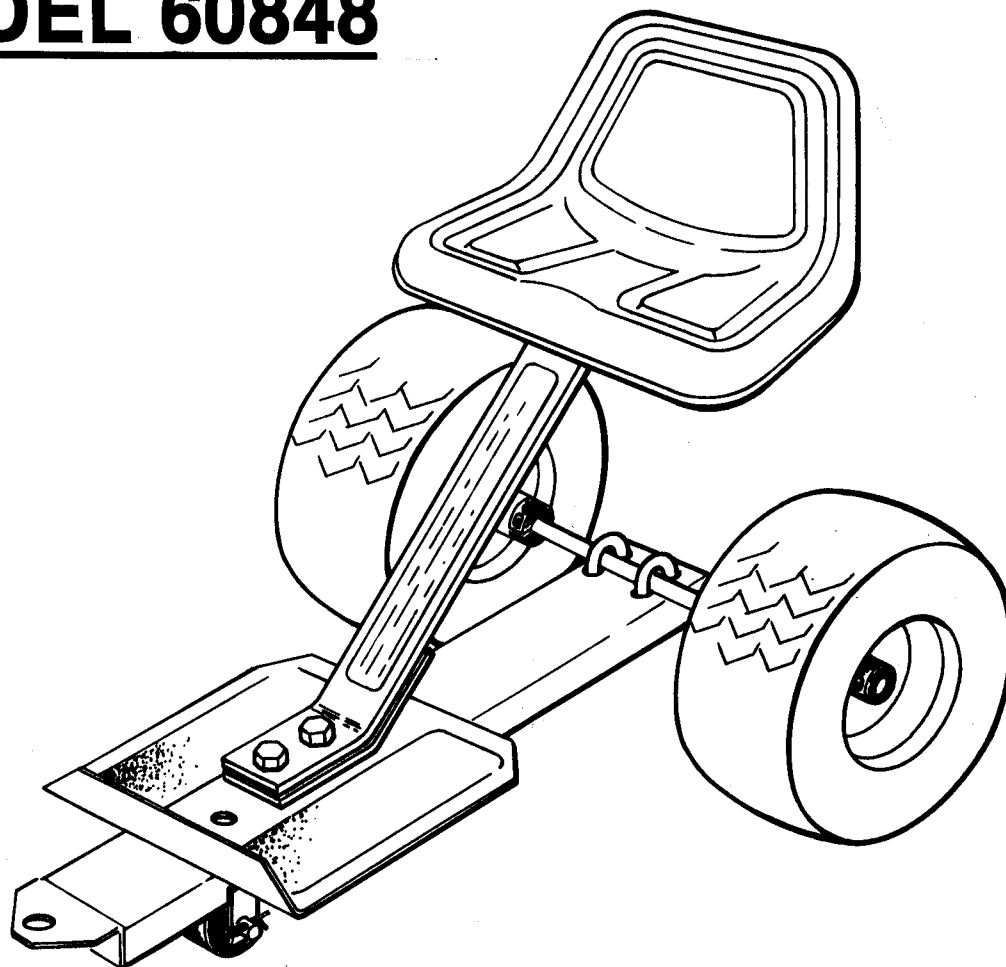

*Thank you for buying this SNAPPER product! Before riding your SULKY, read this manual (SAFETY/OPERATING INSTRUCTIONS carefully. Read and pay particular attention to the **Important Safety Instructions** on page 2 in your Commercial Mower Operator's Manual. Remember, mowers and all other power equipment can be dangerous if used improperly. Keep in mind that safety requires careful use in accordance with the instructions and common sense.*

SNAPPER POWER EQUIPMENT

McDonough, GA., 30253 U.S.A.



INTRODUCTION

This manual covers the set-up, and proper SAFE operation of Model 60848 SULKY. It is designed to be operated with **SNAPPER** 32", 36", & 48" Commercial Mowers.

When riding the SULKY, always follow the safety and operating instructions below as well as those covered in the Commercial Mower Operator's Manual:

SAFETY/OPERATING INSTRUCTIONS

- A. DO NOT USE SULKY ON SLOPES, HILLSIDES, OR ROUGH TERRAIN.
- B. BE ALERT! SLOW DOWN WHEN OPERATING MOWER/SULKY ON IRREGULAR TERRAIN.
- C. AVOID MAKING SHARP TURNS/JACKKNIFING
- D. KEEP FEET ON FOOT REST AT ALL TIMES!
- E. DO NOT CARRY PASSENGERS!
- F. USE ONLY THE STANDARD "HOOK-UP" BETWEEN MOWER AND SULKY.
- G. NEVER TOW LOADS BEHIND SULKY.

ASSEMBLY

Before starting assembly, refer to illustration for proper location of parts and fasteners.

- STEP 1:** Lay FRAME (9) on smooth, flat surface with flanges UP. Insert both 5/16"x7/8" "U" BOLTS (6) UPWARD through the four holes in rear of FRAME - the threaded studs will be exposed in "Channel" area. Slip one 5/16" FLAT WASHER (20) on, and screw one 5/16" HEX LOCK NUT (21) on each of the four studs. Slide the AXLE (10) through "U" BOLTS until it is centered. Securely tighten the four LOCKNUTS.

- STEP 2:** Align ANTI-SCALP ROLLER (1) between "tabs" on front of FRAME (9) and slip CLEVIS PIN (13) through matching holes in "tabs" and ROLLER. Secure with COTTER PIN (17) inserted through hole in end of CLEVIS PIN - bend legs over.

- STEP 3:** Turn AXLE/FRAME assembly over (right side up). Slip one CLAMP COLLAR (7) on each end of AXLE, followed by a TIRE ASSEMBLY (2) with the "long" hub inward, toward the "U" BOLTS. Place one remaining CLAMP COLLAR on each AXLE end so that each clamp is "flush" with the AXLE end. Securely tighten the four clamps against the two TIRE ASSEMBLIES with an allen wrench.

- STEP 4:** Match the two holes in the SEAT SPRING (3), SPRING STIFFENER (4), and rear two in FOOT REST (11) (flange FORWARD) with those in the FRAME (9) and secure with two 1/2"x2" HEX HEAD CAP SCREWS (18), 1/2" SPLIT LOCKWASHERS (15) and 1/2" HEX NUTS (16) - securely tighten!

- STEP 5:** Attach SEAT (5) to the SEAT SPRING (3) at the square hole with one 1/2"x1" HEX BOLT (19) and 1/2" SPLIT LOCKWASHER (15). Be sure the two "ridges" on underside of SEAT are properly located on the sides of the SPRING before securely tightening the HEX BOLT.

- STEP 6:** Remove the two 5/16" HEX CAP SCREWS from the rear flange of mower case. Place HITCH (8) on case and then reinstall the two screws. Insert two 5/16"x1" HEX HEAD CAP SCREWS (14) through matching holes in HITCH and top of mower case and secure with 5/16" HEX LOCK NUTS (21). Securely tighten these fasteners.

- STEP 7:** Check and tighten all fasteners. Check tires - Inflate to 28 p.s.i. max. Lubricate BALL BEARINGS through grease fittings in wheels until a slight amount of grease becomes visible between the collar and flange bearings.

[illegible]

Attach the SULKY by lowering hole in tongue of FRAME (9) over HITCH (8) post and then disengage LYNCH PIN ring and insert pin through hole in post - "flip" ring over top of post to secure hook-up of SULKY to mower.

Periodically, (throughout mowing season), lubricate the wheel bearings with a couple of shots of grease through the fittings.

3

MANUFACTURER'S ONE YEAR LIMITED WARRANTY

For one year from purchase date for the original purchaser's commercial, rental, or other non-residential use, SNAPPER POWER EQUIPMENT, through any SNAPPER dealer will replace, free of charge, any part or parts found upon examination by the factory at McDonough, Georgia, to be defective in material or workmanship or both.

All transportation cost incurred by the purchaser in submitting material to a SNAPPER dealer for replacement under this warranty must be borne by the purchaser.

This warranty does not apply to engines and their components, as these items are warranted separately by their manufacturers, and does not apply to batteries which are covered separately. This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper lubrication, normal wear, or other cause beyond our control.

There is no other express warranty.


Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year from purchase date for the original purchaser's commercial, rental or other non-residential use, and to the extent permitted by law any and all implied warranties are excluded. This is the exclusive remedy. Liabilities for consequential damages, under any and all warranties are excluded.

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WARNING: THE USE OF REPLACEMENT PARTS OTHER THAN GENUINE SNAPPER PARTS MAY IMPAIR THE SAFETY OF SNAPPER PRODUCTS AND WILL VOID ANY LIABILITY AND WARRANTY BY SNAPPER ASSOCIATED WITH THE USE OF SUCH PARTS.

IMPORTANT: Please fill out the attached SNAPPER Product Registration Card immediately and mail to: SNAPPER POWER EQUIPMENT, McDONOUGH, GEORGIA 30253

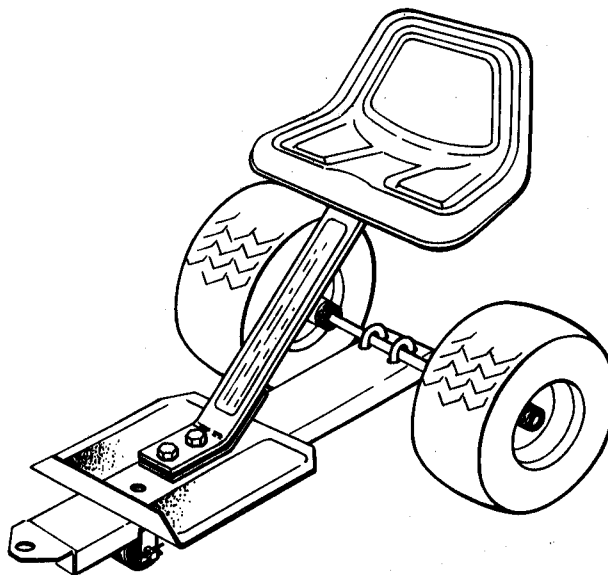

SNAPPER POWER EQUIPMENT  
McDonough, GA., 30253 U.S.A.