



INSTALLATION INSTRUCTIONS

REFRIGERATOR WATER FILTER

MODEL: RFWF1CB1PK

COMPATIBILITY:

FRIGIDAIRE PURESOURCE® WFCB, WF1CB, WSF-1, NGRG-2000, RF-100, RG-100, 218710901, 218710902, 218717805, 218732306, 218907800, 240389101, 240389102, 240394501

KENMORE® 9910, 9910P, 469906, 469910, 46-9910, 4609910000, RF100, RWF1030, MPF16135, RWF2300A, BCF84, 9913, 9906

FILTER USE: 6 MONTHS OR 400 GALLONS, WHICHEVER COMES FIRST WILL VARY BASED ON WATER CONDITION

INSTALLATION INSTRUCTIONS:

1. Turn off the ice maker in your refrigerator (refer to owners manual if needed).
2. Locate the filter cup inside your refrigerator, and remove by turning to the left multiple turns.
3. Remove old filter and discard.
4. Wash the filter cup with warm water and liquid soap then dry.
5. Insert filter into filter cup. O-ring end should be facing up.
6. Insert cup with filter into refrigerator and turn to the right until cup is seated firmly.
7. Turn on refrigerator ice maker.
8. Run water from the dispenser for 5 minutes at 0.5 gpm (about 2½ gallons) to clear the system and prevent sputtering.

NOTE: Initial flow rate may be slower than expected. Full flow rate should be restored within 24-36 hours.

RESETTING YOUR CHANGE FILTER INDICATOR:

Note: These are the most common filter reset instructions. If the instructions don't work for your refrigerator brand, see the documentation that came with your refrigerator.

REFRIGERATOR BRAND	INSTRUCTIONS
LG®	Press and hold the Filter Status button (on the dispenser) for three seconds, until the display changes from "Replace" to "Good".
Kenmore®	The water filter reset for Kenmore refrigerators varies by model. See the documentation that came with your refrigerator.

CAUTION: This filter should not be use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

OPERATING SPECIFICATIONS

Operating Temperature:33°F-100°F/0.6°C-38°C
Working Pressure: 20 psi-100 psi/140 kPa-689 kPa
Rated Capacity: 400 gallons/1,514 liters
Flow Rate: 0.5 gpm/1.9 lpm

FREQUENTLY ASKED QUESTIONS:

Q: Do I need remove the filter prior to descaling equipment?

A: Yes, remove filter prior to descaling and inspect for integrity. If needed replace with a new **RFWF1CB1PK**

Q: Why are there black specks in the water or why does my water taste funny?

A: Water filters are made from the purest carbon blocks. When the filter ships it bounces around and knocks carbon granules loose from the block. These little carbon granules are called fines. All of the quality filters in the market place require a preliminary flushing to remove the carbon fines.

Some systems may need to be flushed more than once. This is especially true if you have scale or lime water. If you go on vacation and do not use your filtered water for several days, flush the systems again to remove any stagnant water.

Q: If I do not change my filter every 6 months, can this damage the system?

A: Yes, you must replace the filter every six months or whenever the filter light comes on (whichever comes first), or sooner if water flow to dispenser or icemaker is reduced or if there is heavy sediment/rust present. Filters left in longer will fatigue and burst causing water damage. We recommend a water hammer arrester be installed in any home that uses a refrigerator water filter.

WARNING:

To reduce the risk of property damage due to water leakage, this filter **MUST** be installed in accordance with the manufacturer's specifications and instructions. This filter unit must be replaced every 400 gallons or 6 months. Failure to follow instructions and operating specifications will void your warranty. Further, manufacturer assumes no responsibility or liability for damages arising out of misuse of the product.

Frigidaire® is a registered trademark of Electrolux Co., Ltd.

Kenmore® is a registered trademark of KCO LP, LLC.