

burst kids™

Water Flosser Manual



What's in the box:



7 tips before you blast off!

Once a day keeps the gunk away

Food, plaque, and bacteria love hiding in tight spots between your teeth — yuck! Using your water flosser once a day helps flush away the sneaky stuff your toothbrush can't reach.

After brushing is best

Want your mouth feeling super clean? Use your flosser after brushing to rinse out food and bacteria. It's the perfect one-two punch!

Choose your power mode

Start slow, then grow! If it's your first time, begin with the gentle mode. Once you're a pro, try the higher pressure settings for an extra fresh feel.

Aim between your teeth

Point the nozzle right where food likes to hide: between your teeth and along the gums. Glide it slowly to let the water do its job!

Keep your lips closed (mostly)

To avoid a splash zone, close your lips just enough to keep the water in — but leave room for it to trickle out into the sink.

Make it part of your routine

Morning or night, pick a time that works and stick with it! Flossing daily builds habits that help your smile stay strong for life.

Don't forget to drink water too!

Water helps clean between meals and keeps your mouth feeling fresh. Sip often — your teeth will thank you.

Pass this part to your parents!

Can my child use the BURSTkids Water Flosser with braces, crowns, or other dental work?

Yes! The BURSTkids Water Flosser is a gentle and effective way to clean around braces, crowns, and other tricky spots that trap food. It's a great addition to daily brushing and flossing routines — especially if string floss is difficult for your kiddo to use. Make sure to consult your dental pros before using this product if you are undergoing oral care treatment.

What kind of liquids can I use in the water flosser?

We recommend sticking to room temperature water.

Should my child use the water flosser every day?

Definitely. Once a day is ideal! It helps build healthy habits and keeps little smiles extra clean between dental visits.

How do I clean the water flosser?

- Empty and rinse the water tank after every use.
- Wipe the outside with a soft cloth.
- Once a week, clean the nozzle and charging port.

How do I change the flosser mode?

Just press and hold the **mode button** to cycle through three options: Low High, and Pulse. Lights will indicate which mode is active.

What happens if my kiddo loses the nozzle or charging cable?

No worries — replacements are easy! Just visit burstoralcare.com to order what you need.

How often should we replace the nozzle?

Dental pros recommend swapping it out every 6 months, or sooner if your child has been sick or recovering from a cold.

How often does it need to be charged?

When used once a day, the BURSTkids Water Flosser can go up to 35 days on a single charge. Just recharge when the red light comes on.

Is it water-resistant?

Yes! It's safe to use at the sink and even in the shower — just don't fully submerge it in water or place it on the charger while wet or it might stop working.

Contact support

Give us a shout at hello@burstoralcare.com — our friendly and knowledgeable team members can't wait to help!

Safety information

When using electrical products, especially when children are present, basic safety precautions should always be followed. To reduce the risk of accidents and/or injuries:

- Adult supervision recommended for children under 12.
- Do not use if any part of the product appears damaged in any way. If your item becomes damaged, visit burstoralcare.com/register to learn more on what to do.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Unplug immediately before reaching for a device that has fallen into water.
- Use product only for its intended purpose.
- The BURSTkids Water Flosser is compatible with BURST recommended products. Do not pair with off-brand attachments or products.
- Store charger in a cool, dry place.
- Only use water or dental professional-recommended solutions in the reservoir.
- The charger is compatible with any standard US 110V wall charging block. If you do not have a standard US 110V wall charging block, use a USB port to ensure maximum safety.
- To dispose of your water flosser properly, visit burstoralcare.com/battery-disposal.
- To clean, rinse after each use and air dry thoroughly. If extra care is needed, gently wash with soap and warm water. Do not wash it in the dishwasher.
- Consult your dental professional before using this product if you are undergoing treatment for any oral care condition or dental work.
- Consult your physician if you have other medical concerns or conditions (such as a pacemaker or other implanted devices).
- **Do not** use if you have an open wound anywhere in the mouth.
- **Do not** insert foreign objects into openings on the device.
- **Do not** direct water into the ear, nose, or other delicate areas. This product is capable of producing pressures that may cause serious damage. Use only as intended.
- Remove oral jewelry prior to use.

- **Do not** insert foreign objects into openings on the device.
- **Do not** direct water into the ear, nose, or other delicate areas. This product is capable of producing pressures that may cause serious damage. Use only as intended.
- Remove oral jewelry prior to use.

