


PowerShot S5 IS SYSTEM MAP

DIGITAL CAMERA

Canon

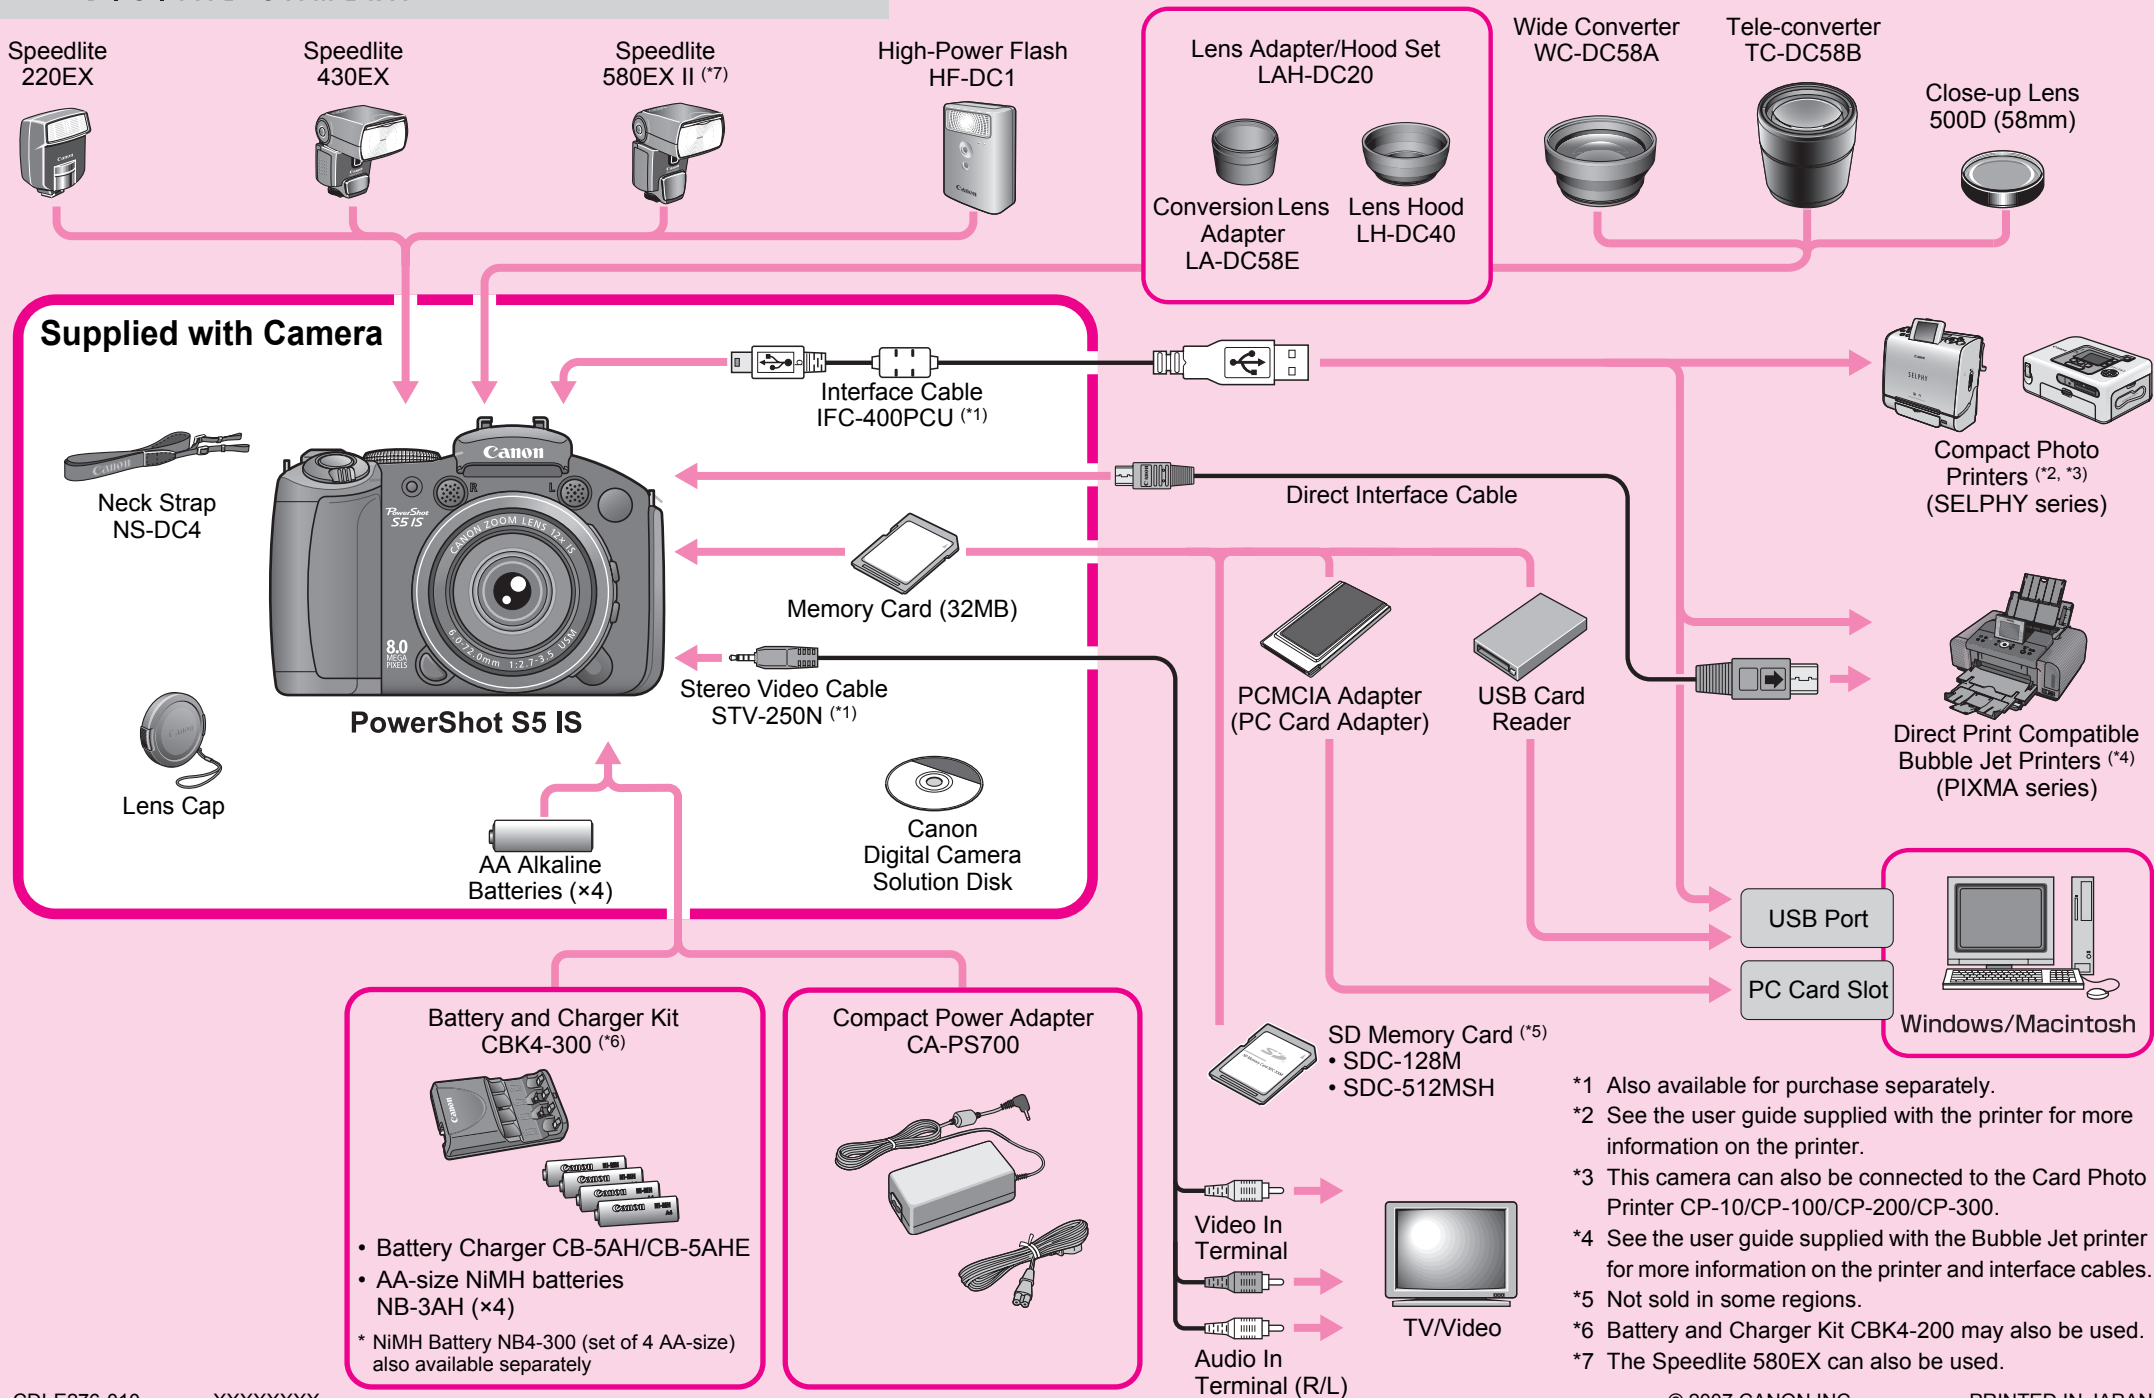

- *1 Also available for purchase separately.
 *2 See the user guide supplied with the printer for more information on the printer.
 *3 This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.
 *4 See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
 *5 Not sold in some regions.
 *6 Battery and Charger Kit CBK4-200 may also be used.
 *7 The Speedlite 580EX can also be used.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Lens Cap
- Neck Strap NS-DC4
- AA Alkaline Batteries (×4)
- Memory Card (32MB)
- Interface Cable IFC-400PCU
- Stereo Video Cable STV-250N
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- “Canon Customer Support” Leaflet

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Lenses, Lens Adapter

- **Lens Adapter/Lens Hood Set LAH-DC20**
This conversion lens adapter and hood set is required for mounting the wide converter and tele-converter to the camera.
- **Wide Converter WC-DC58A**
Converts the focal length of the body lens by a factor of approximately 0.75 when attached.
- **Tele-converter TC-DC58B**
Converts the focal length of the body lens by a factor of approximately 1.5 when attached.
- **Close-up Lens 500D (58mm)**
This lens can be used to take close-ups of subjects that are 35 to 50 cm (1.1 to 1.6 ft.) (at maximum telephoto) from the front of the lens.

Flash

- **EX-Series Speedlites**
Speedlites for Canon EOS models. Subjects are optimally illuminated for crisp, natural images.
 - Speedlite 220EX/430EX/580EX II
- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **Compact Power Adapter CA-PS700**
This adapter lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery and Charger Kit CBK4-300**
This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images.
- **NiMH Battery NB4-300**
A set of four rechargeable AA-size NiMH batteries.

Other Accessories

- **SD Memory Card**
SD Memory Cards are used to store images recorded by the camera. Canon brand cards are available in 128 MB and 512 MB capacities.
- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **Stereo Video Cable STV-250N**
Use this cable to connect the camera to a TV set (sound can be played in stereo).

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Bubble Jet Printers (PIXMA series)**

For more information, visit your nearest Canon retailer.