

Supplied with Camera



Wrist Strap WS-600



Battery Pack NB-4L(*1)



Cover for Battery Pack



Battery Charger CB-2LV / CB-2LVE(*1)



SD Memory Card 16MB




Canon Digital Camera Solution Disk

AV Cable AVC-DC300(*1)


AC Adapter Kit ACK-DC10




DC Coupler DR-10

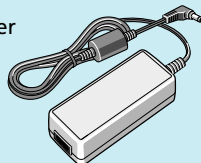

Compact Power Adapter CA-DC10

 

AC Cable

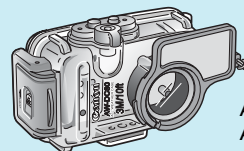

All Weather Case AW-DC30



High-Power Flash HF-DC1

 
Interface Cable IFC-400PCU(*1)

Direct Interface Cable(*2)


PCMCIA Adapter

USB Card Reader


SD Memory Card(*3)
SDC-128M
SDC-512MSH



 Compact Photo Printer (SELPHY CP series)



Card Photo Printer

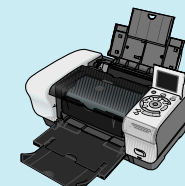

Direct Print Compatible Bubble Jet Printer(*3)
(PIXMA series/SELPHY DS series)


PC Card Slot

USB Port



Windows/Macintosh

Audio / Video in Terminal

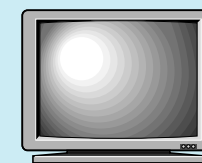

TV / Video

This camera can also be connected to the Card Photo printers.

- CP-100/CP-10: To connect the camera to these printers, use the Direct Interface Cable DIF-100(*1) supplied with the printers.
- Other than CP-100/CP-10: To connect the camera to these printers, use the Interface Cable IFC-400PCU supplied with the camera.

• (*1) Also available for purchase separately.

• (*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.

• (*3) Not sold in some regions.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-600
- Battery Charger CB-2LV/CB-2LVE
- Battery Pack NB-4L
- Cover for Battery Pack
- SD Memory Card (SDC-16M)
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "For Windows® XP and Mac OS X Users" Leaflet*
- "Canon Customer Support" Leaflet*
- "Use of Genuine Canon Accessories Recommended" Leaflet*

* These leaflets are printed together on one sheet of paper. Please separate them before reading.

Optional Accessories

The following camera accessories are sold separately.

Some accessories are not sold in some regions.

Flash

- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **AC Adapter Kit ACK-DC10**
The kit includes the following accessories.
 - **Compact Power Adapter CA-DC10**
An adapter for supplying power to operate the camera.
 - **DC Coupler DR-10**
Coupler used with the power adapter.
 - **AC Cable**
- **Battery Charger CB-2LV/CB-2LVE**
An adapter for charging Battery Pack NB-4L.
- **Battery Pack NB-4L**
Rechargeable lithium-ion battery.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 Second Edition (SE), Windows Me, Windows 2000 Service Pack 4, or Windows XP (including Service Pack 1 and Service Pack 2).

Macintosh: Mac OS X (v10.1.5 – v10.3)*
* Only systems equipped with genuine built-in USB interfaces.

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), Card Photo Printer (other than CP-100/CP-10), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).

Other Accessories

- **SD Memory Card**
SD memory cards are used to store images recorded by the camera.
Canon brand cards are available in 128 MB and 512 MB capacities.
- **AV Cable AVC-DC300**
Use this cable to connect the camera to a TV set.
- **All Weather Case AW-DC30**
A waterproof case for the PowerShot SD400 DIGITAL ELPH/DIGITAL IXUS 50.
You can use this case to take underwater shots at depths of up to 3 meters (10 feet), and of course it's ideal for taking worry-free pictures in the rain, at the beach, or on the ski slopes.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

- **Compact Photo Printers (SELPHY series)**
- **Card Photo Printers**
- **Bubble Jet Printers**

For more information, visit your nearest Canon retailer.