

Supplied with Camera

Interface Cable IFC-400PCU (*1)



Wrist Strap WS-600



 
Battery Pack NB-4L (*1)



Cover for Battery Pack




Battery Charger CB-2LV / CB-2LVE (*1)

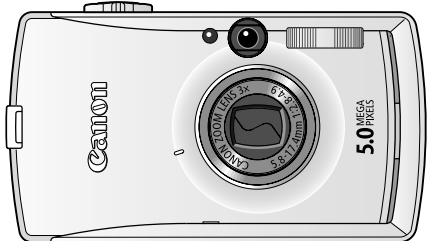

Canon Digital Camera Solution Disk



 SD Memory Card SDC-16M

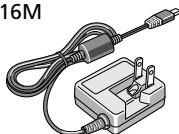

Compact Power Adapter CA-DC20 (*1)



AV Cable AVC-DC300 (*1)

Compact Power Adapter CA-DC20E (*1)(*4)

 


High-Power Flash HF-DC1


AC Adapter Kit ACK-DC10




DC Coupler DR-10



Power Cord

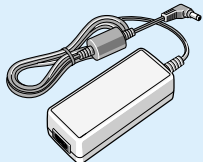 


Compact Power Adapter CA-DC10

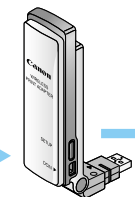 


Wireless Print Adapter WA-1



 SD Memory Card (*4)
SDC-128M
SDC-512MSH




PCMCIA Adapter

 

USB Card Reader



 
Compact Photo Printer (*3)
(SELPHY CP series)

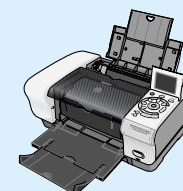

Direct Print Compatible
Bubble Jet Printer
(PIXMA series/SELPHY DS series)



 Windows/Macintosh

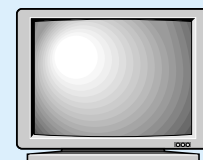

TV / Video

Wireless Connection (*5)

Audio / Video
IN Terminal

- (*1) Also available for purchase separately.
- (*2) See the user guide supplied with the Bubble Jet printer for more information on the printer and interface cables.
- (*3) This camera can also be connected to the Card Photo Printer CP-10/CP-100/CP-200/CP-300.
- (*4) Not sold in some regions.
- (*5) Connecting wirelessly between the camera and a computer is only possible with the Windows XP SP2 operating system.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wireless Print Adapter WA-1
- Wrist Strap WS-600
- Battery Charger CB-2LV/CB-2LVE
- Battery Pack NB-4L
- Cover for Battery Pack
- SD Memory Card SDC-16M
- Compact Power Adapter CA-DC20
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software & Wireless Guide
- System Map (this sheet)
- For Customers wanting to Use a Wireless Connection
- Warranty Card
- "For Windows® XP and Mac OS X Users" Leaflet*
- "Canon Customer Support" Leaflet*
- "Use of Genuine Canon Accessories Recommended" Leaflet*

* These leaflets are printed together on one sheet of paper. Please separate them before reading.

Optional Accessories

The following camera accessories are sold separately.

Some accessories are not sold in some regions.

Flash

- **High-Power Flash HF-DC1**
This attachable supplementary flash can be used to capture photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

- **AC Adapter Kit ACK-DC10**
The kit includes the following accessories.
 - **Compact Power Adapter CA-DC10**
An adapter for supplying power to operate the camera.
 - **DC Coupler DR-10**
Coupler used with the power adapter.
 - **Power Cord**
- **Battery Charger CB-2LV/CB-2LVE**
An adapter for charging Battery Pack NB-4L.
- **Battery Pack NB-4L**
Rechargeable lithium-ion battery.
- **Compact Power Adapter CA-DC20**
This adapter is for supplying power from a domestic power outlet to the wireless print adapter WA-1.

Other Accessories

- **SD Memory Card**
SD memory cards are used to store images recorded by the camera.
Canon brand cards are available in 128 MB and 512 MB capacities.
- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Compact Photo Printer (SELPHY series), or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **AV Cable AVC-DC300**
Use this cable to connect the camera to a TV set.
- **Soft Case IXC-700 Series**
Protect the camera from scratches and dirt.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. When you attach the wireless print adapter (supplied with the camera) to a printer and start a wireless connection, you can use the camera controls to print images taken with the camera.

- **Compact Photo Printers (SELPHY series)**
- **PictBridge Compliant Bubble Jet Printers**

For more information, visit your nearest Canon retailer.