 


CHEFMAN®


Countertop 0.7 Cu. Ft. Microwave

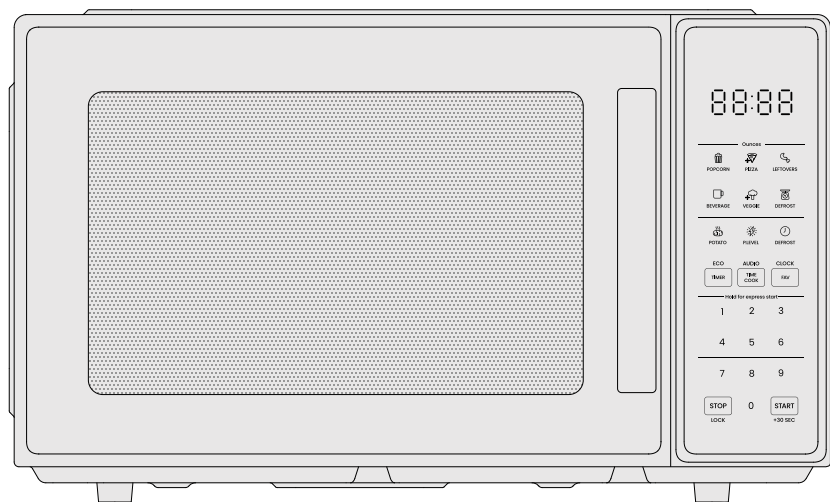

RJ55-7-V2

Get to Know Your Microwave


- | | |
|-----------------------------|---------------------------|
| 1. Childproof lock button | 5. Interior light |
| 2. Door and window assembly | 6. Turntable shaft |
| 3. Safety interlock system | 7. Glass turntable |
| 4. Control panel | 8. Turntable support ring |

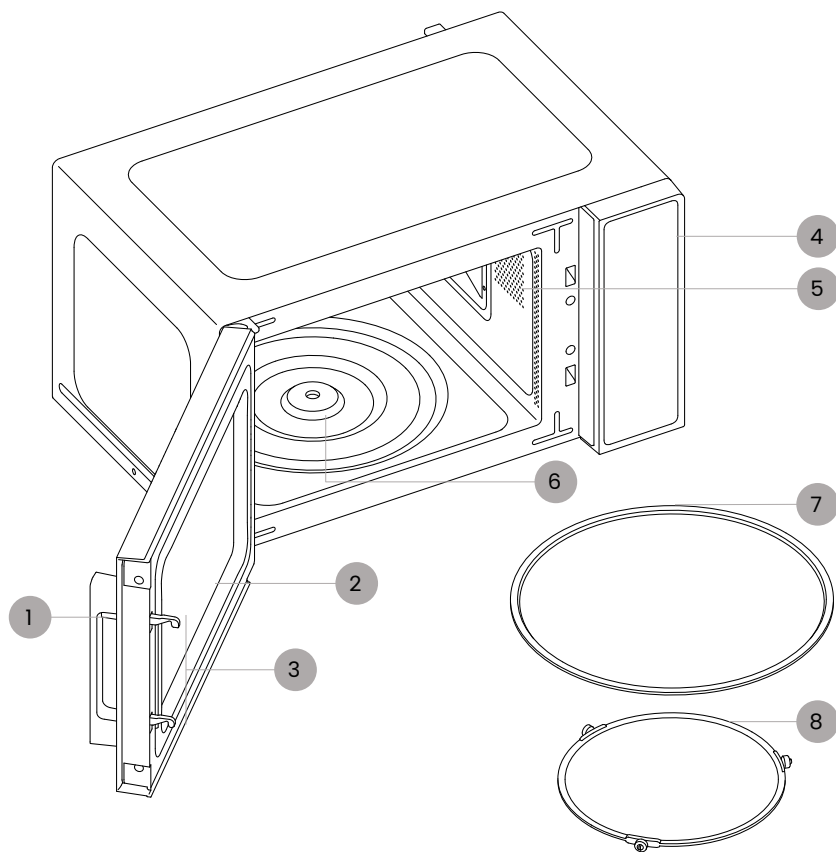 

READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

 Control Panel

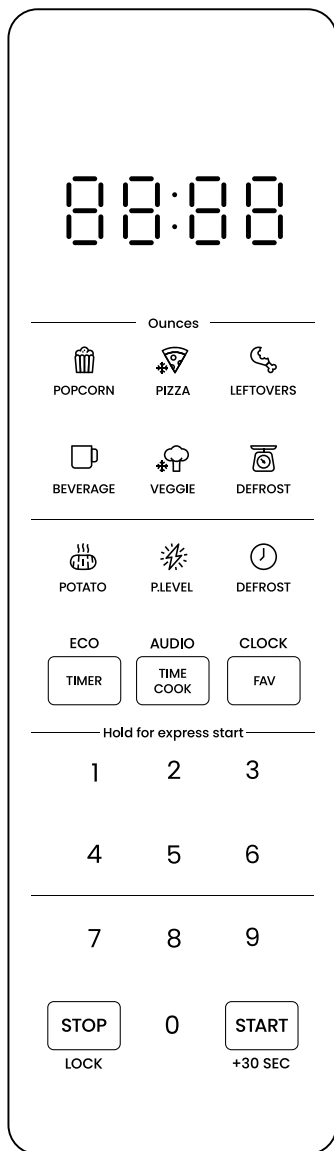

Clock/Timer Display Counts down to the end of an active cooking cycle. Displays time of day in Standby Mode.

Preset Icons Use to select preset cooking functions for six popular foods (see p. 15).

P. LEVEL Button Press to set power level from 0 to 10 (default power is 100%).

DEFROST Buttons (2) Press to defrost by weight or by time (see p. 16).

TIMER/ECO Button Press to set a timer for kitchen tasks (with no microwaving). Press and hold for ECO Mode (see p. 17).

TIME COOK/AUDIO Button Press to set cooking time. Press and hold to mute beeps.

FAV/CLOCK Button Press to set and use favorites (see p. 16); press and hold to set microwave's clock (see p. 10).

Number Pad Use to manually enter cooking time or set clock or kitchen timer. Numbers 1 through 6 can also be used for one-touch quick cooking (see p. 14).

STOP/LOCK Button Use to stop active cooking or return to Standby Mode. Press and hold to put button in Lock Mode.

START/+30 SEC Button Use to start cooking after selecting a preset or entering time manually OR to add 30 seconds of cooking at any time.

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. **Do NOT** attempt to operate this oven with the door open, since that can result in harmful exposure to microwave energy. It is important not to disable or tamper with the safety interlock system.
2. **Do NOT** place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. **Do NOT** operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
 - a. DOOR (bent)
 - b. HINGES AND LATCHES (broken or loosened)
 - c. DOOR SEALS AND SEALING SURFACE
4. The oven should not be adjusted or repaired. If the oven breaks, please contact Chefman® Customer Support for assistance.

Specifications	
Model	RJ55-7-V2
Voltage	120V~, 60Hz
Microwave Power	700W
Capacity	0.7 cu ft
External dimensions	17.5 x 12.6 x 9.7 in
Turntable diameter	9.6 in
Weight	21.2 lb

To reduce the risk of burns, electrical shock, fire, injury to persons, or exposure to excessive microwave energy when using your oven, follow basic safety precautions, including:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" above.
3. As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

4. To reduce the risk of fire in the oven cavity:
 - a. **Do NOT** overcook food. Carefully attend the appliance when paper, plastic, or other combustible materials are used in the oven.
 - b. Remove wire twist ties and metal handles from paper or plastic containers or bags before placing them in the oven.
 - c. If materials inside the oven ignite, keep the oven door closed. Turn the oven off and unplug the appliance.
 - d. **Do NOT** use the oven cavity for storage purposes. **Do NOT** leave paper products, cooking utensils, or food in the cavity when not in use.
5. This oven must be grounded. Connect only to a properly grounded outlet. See "GROUNDING INSTRUCTIONS" on p. 7.
6. Install or locate this oven only in accordance with the installation instructions provided on pp. 9–10.
7. Some products—such as whole eggs, sealed glass jars, and other sealed food containers—are liable to explode and should not be heated in the oven. Closed containers should be opened and plastic pouches should be pierced before cooking.
8. Use this appliance only for its intended uses as described in this manual. **Do NOT** use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
9. **HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE.** Use caution when removing hot items.
10. **Do NOT** operate any appliance if it has a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Chefman® Customer Support for examination, repair, or adjustment.
11. **Do NOT** attempt to service or repair this microwave. Instead, contact Chefman® Customer Support for assistance.
12. **Do NOT** cover or block any openings on the oven.
13. **Do NOT** store or use this appliance outdoors.
14. **Do NOT** use this oven near water—for example, near a kitchen sink, in a wet basement, near a swimming pool, or in similar locations.
15. **Do NOT** immerse the cord or plug in water.

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

16. Keep the cord away from heated surfaces.
17. **Do NOT** let the cord hang over the edge of a table or counter.
18. When cleaning the oven, door, and sealing surfaces, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.
19. This appliance is for private household use only.
20. In a microwave, liquids such as water, coffee, or tea can become overheated beyond the boiling point without appearing to be boiling. Visible bubbling is not always present when the container is removed from the microwave oven. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**
 - a. **Do NOT** overheat liquids.
 - b. Stir liquids both before and halfway through heating them.
 - c. **Do NOT** use straight-sided containers with narrow necks.
 - d. After heating, allow the container to stand in the oven for a short time before removing it.
 - e. Use extreme care when inserting a spoon or other utensil into a container.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

GROUNDING INSTRUCTIONS

DANGER

Electrical Shock Hazard

Touching some of the internal components can cause serious personal injury or death.

Do NOT disassemble this appliance.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current. To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type electrical outlet. **Do NOT** alter the plug for use in a 2-prong outlet. If the plug will not fit into an outlet, have a proper outlet installed by a qualified electrician.

WARNING: Improper use of the grounding plug can result in electrical shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

1. A short power-supply cord is provided to reduce the risks of entanglement or tripping over a longer cord.
2. Extension cords may be used if care is exercised in their use.
3. If an extension cord is used:
 - a. The marked electrical rating of the cord set and/or the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The extension cord must be a 3-wire cord that has a 3-pronged grounding plug and a 3-slot receptacle to accept the appliance's plug.
 - c. The longer cord should be arranged so that it will not drape over a countertop or tabletop where it can be pulled on by children or tripped over.

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

Utensil Test

Certain nonmetallic utensils and containers may not be safe to use in the microwave. For more details on microwave-safe materials, refer to the chart on pp. 11–12. If in doubt, you can test the utensil or container with the following procedure:

1. Fill a microwave-safe container with 1 cup of cold water.
2. Place the water container and the empty container/utensil being tested on the glass turntable and microwave for 1 minute. Do not exceed the 1-minute cooking time.
3. Carefully feel the container or utensil. If the empty container or utensil is warm, do not use it in the microwave.

DO NOT OPERATE THE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.



California Proposition 65:

(Applicable for California Residents only)

WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov

Do not place the appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.



How to Use the Microwave



 
Before First Use

1. Remove all packaging materials, and read and remove all removable stickers. (Leave the rating label on the unit.) Be sure that all parts and accessories are accounted for before throwing away any packaging.
2. To unlock the door, press up on the childproof lock button with your index finger, then pull the handle toward you.
3. Gently wipe the exterior and interior of the oven with a clean, damp cloth and dry thoroughly. Wash the interior with a mild liquid soap and a damp cloth or sponge. **NOTE:** Do not use abrasive cleansers, such as steel wool pads, as they may damage the finish. Never immerse the unit in water or other liquids.
4. Hand-wash the glass turntable and dry thoroughly. (The turntable is also dishwasher safe.)
5. Install the microwave as directed below, and install the turntable as directed on p. 10.

Countertop Installation

1. Place the microwave on a firm, level surface with the following clearance for intake and outtake openings:
 - right side of microwave must be open a minimum clearance of 3 inches between the other sides and any adjacent walls
 - a minimum clearance of 12 inches between the top of the microwave and any upper cabinets
 - a minimum installation height of 3 feet

NOTE: Blocking openings can damage the oven.

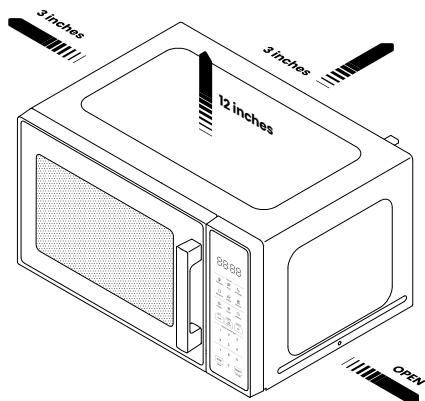

2. Place the oven far away from radios and television sets, as the operation of the oven may cause interference with them. If there is still interference, it can be reduced by taking the following measures:
 - Clean the door and sealing surface of the oven.
 - Reorient the receiving antenna of the radio or television.
 - Plug the oven into a different outlet so that the oven and receiver are on different branch circuits.
3. Plug your oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label. **WARNING:** Do not install the oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged, and the warranty would be void.
4. This device complies with part 18 of the FCC rules.

Turntable Installation

Both the glass turntable and the turntable support must be used whenever you operate the oven.

1. Set the turntable support in the oven interior so the wheels make contact with the oven floor.
2. Place the glass turntable over the support, aligning the hub on the underside of the turntable with the turntable shaft in the oven floor. Never place the turntable upside down.
3. ALWAYS use the turntable and place food in a microwave-safe bowl or plate. **NOTE:** If the turntable or turntable support cracks or breaks, contact Chefman® Customer Support.

Setting the Clock

1. Press and hold the **FAV/CLOCK** button for 3 seconds.
2. Enter the current time using the keypad (1:00 to 12:59).
3. Press the **START/+30 SEC** button to confirm the setting.

Materials You Can and Can't Use in the Microwave

Material	Can Use in the Oven?	Notes
Dinnerware	Yes, microwave-safe only	Refer to manufacturer's label and/or instructions. Do not use cracked or chipped dishes.
Glass jars	Yes	Always remove lid. Use to heat food only until just warm. Most glass jars are not heat-resistant and may break.
Glassware	Yes, heat-resistant only	Make sure there is no metallic trim. Do not use cracked or chipped glassware.
Paper oven-cooking bags	Yes	Follow manufacturer's instructions. Do not close with metal twist ties. Make slits to allow steam to escape.
Plastic bags	Yes, microwave-safe only	Follow manufacturer's instructions. "Boiling bags" and tightly closed plastic bags should be slit, pierced, or vented as directed on package.
Aluminum foil	No	May cause arcing.
Paper plates and cup	Yes	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Yes	Use with supervision for short-term cooking only. Use to cover food while reheating to prevent splatter and absorb fat.
Parchment paper	Yes	Use as a cover to prevent splattering or as a wrap for steaming.
Wax paper	Yes	Use as a cover to prevent splattering and retain moisture.
Plastic wrap	Yes, microwave-safe only	Use to cover food containers during cooking to retain moisture. Do not allow plastic wrap to touch food.
Plastic containers	Yes, microwave-safe only	Check manufacturer's label and instructions. Some plastic containers soften as the food inside gets hot.
Thermometer	Yes, microwave-safe only	Check manufacturer's label and instructions.
Browning dish	Yes, microwave-safe only	Follow manufacturer's instructions. The bottom of the browning dish must be at least $\frac{3}{16}$ inch (5 mm) above the turntable. Incorrect usage may cause the turntable to break.
Aluminum trays	No	May cause arcing. Transfer food to a microwave-safe dish.


Materials You Can and Can't Use in the Microwave

Material	Can Use in the Oven?	Notes
Food carton with metal handle (i.e., Chinese takeout carton)	No	May cause arcing. Transfer food to a microwave-safe dish.
Metal twist ties	No	May cause arcing and could cause a fire in the oven.
Paper bags	No	May cause a fire in the oven.
Plastic foam (Styrofoam)	No	May melt or contaminate food when exposed to high temperatures.
Wood	No	Will dry out and may catch fire when used in the microwave oven.


Quick Start:

How to Microwave in Manual Mode

 
1. Ensure the oven is plugged in and the turntable is properly installed. Open the door by pushing the childproof lock button up with your index finger while pulling forward on the handle.

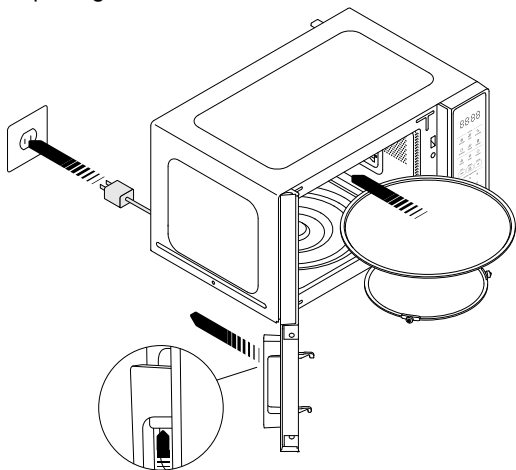

 2. Place your food on the turntable in a microwave-safe vessel and close the door. **NOTE:** ALWAYS use the turntable and place food in a microwave-safe bowl or plate.

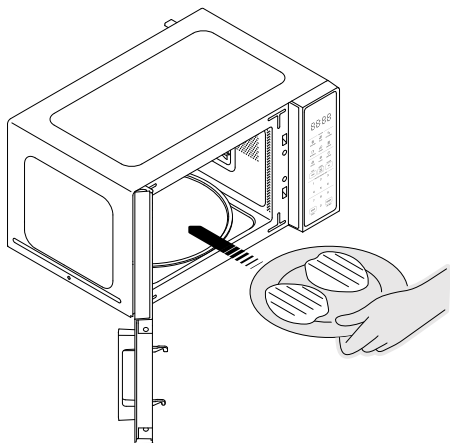

 - For express-start cooking at 100% power, press and hold any of the keypad numbers 1 through 6. for the specified number of minutes. The microwave will automatically start cooking for that many minutes. Alternatively, to cook for longer than 6 minutes, enter the time in minutes and seconds (e.g., "7-3-0" for 7 minutes and 30 seconds),, then press **START**.

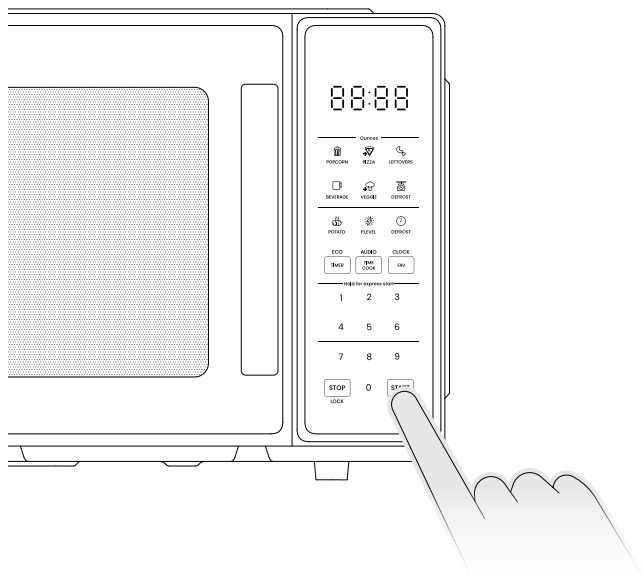

- You can also adjust the power level for your cook: Press **P.LEVEL**, then enter your preferred power level (1 for 10%, 2 for 20%, etc). Press **TIME COOK**, then enter your desired time in minutes and seconds and press **START** again.
- Opening the door or pressing **STOP** pauses cooking while the unit is operating. Close the door and press **START** to resume, or press **STOP** again to return to Standby Mode.
- To add time during cooking, press **+30 SEC** (same as the **START** button) as many times as needed.
- After the timer finishes counting down, the unit will beep five times. Open the door, remove the food, and enjoy!

Presets & Special Functions

To Use Preset Functions

The preset functions make it quick and easy to program the oven for cooking some popular foods.

1. Open the door and place your food on the turntable in a microwave-safe vessel. **NOTE:** ALWAYS use the turntable and place food in a microwave-safe bowl or plate.
2. Press one of the preset icons and continue pressing that button to toggle through the size/quantity choices that appear on the display. (The menu reflects only the relevant choices for your chosen preset.) See the chart below for more information on the preset functions.
3. Press **START**. The unit will begin cooking and counting down.
4. After the timer finishes counting down, the unit will beep five times.

Preset Function Chart

Preset Name	Size/Quantity Options	Notes
POPCORN	1.75 oz, 2.7 oz, 3.2 oz	Choose closest size if your packet does not match one of the size options.
PIZZA	4 oz, 8 oz, 12 oz	Reflects time to reheat from frozen.
LEFTOVERS	9 oz, 12 oz, 16 oz	Reflects time to reheat refrigerated leftovers.
BEVERAGE	6 oz, 8 oz, 10 oz, 12 oz	Reflects time to reheat a beverage that has cooled to room temperature.
VEGGIE	4 oz, 8 oz, 16 oz	Reflects time to defrost and cook frozen vegetables.
POTATO	1, 2, 3 count	Based on whole potatoes, approx. 8 oz each (prick skin with a fork first).

To Defrost

1. You can defrost frozen foods either by weight or by time. Open the door and place your food on the turntable in a microwave-safe vessel.
NOTE: ALWAYS use the turntable and place food in a microwave-safe bowl or plate.
2. Press the **WEIGHT DEFROST** button, then use the keypad to enter the ounce weight of your food (from 4 to 50 oz). Alternatively, press the **TIME DEFROST** button and use the keypad to enter your desired defrosting time in minutes and seconds.
3. Press **START**. The unit will begin defrosting and counting down. For even defrosting, flip your food halfway through the running time.
4. After the timer finishes counting down, the unit will beep five times.

To Use the Favorites Function

You can program up to three favorite cooking cycles (for instance, 5 minutes and 30 seconds at 50% power) to be stored in memory and activated with one touch.

1. To program: Press the **FAV** button on the keypad once. (Press it twice to program a second favorite cycle.)
2. Enter the cooking time using the keypad, in numbers and seconds (e.g., "5-3-0" for 5 minutes and 30 seconds).
3. Press **P.LEVEL**, then enter your power level, from 1 to 10 (e.g., press "5" for 50% power).
4. Press **START** to save the setting. The unit will beep and display "F1" on the screen (or "F2" or "F3" if this is your second or third favorite saved).
5. To use the saved favorite: Press the **FAV** button on the keypad once and the screen will display "F1" (or to select an already-programmed second favorite, press the button twice; the screen will display "F2"; for a third favorite, press the button three times; the screen will display "F3"). Press **START** and cooking will begin.

Turning Sound Off and On

To mute all beeps on the unit, press and hold the **TIME COOK/AUDIO** button on the keypad for 3 seconds. To turn the sound back on, press and hold the same button for 3 seconds.

TIMER

The built-in kitchen timer gives you a timer at your fingertips for all sorts of tasks that don't use the microwave. To use it, press the **TIMER** button, set the desired time, and press **START** (maximum time is 99 minutes and 99 seconds). When the timer ends, the microwave will beep 5 times. **NOTE:** The timer does not start or stop the microwave oven, and the oven cannot be used to cook when the timer is in use.

ECO Mode

To put the unit in power-saving ECO Mode, press and hold the **TIMER/ECO** button on the keypad for 3 seconds. In ECO Mode, the clock will not display when the microwave is not in use. To turn the clock back on, press any button.

LOCK Mode

To put the unit in childproof LOCK Mode, press and hold the **STOP/LOCK** button for 3 seconds. The unit will give a long beep. In LOCK Mode the screen displays as , and the microwave cannot be started. To turn off the Lock Mode, press and hold the **STOP/LOCK** button for 3 seconds again.

Keep It Clean

Periodically wipe down the interior of the microwave with a damp cloth.

If food splatters on the interior or on the glass turntable, clean both with mild soap and a damp cloth. The turntable is also top-rack dishwasher safe.

Do not immerse the unit in water. The unit and turntable support are not dishwasher safe.

Having Trouble?

If you encounter problems with your oven, refer to the chart below for possible causes and solutions. If you continue to have trouble, please contact Chefman Customer Support.

Problem	Possible Cause	Solution
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into a three-prong outlet b. Close the door and try again. c. Check instructions.
Arcing or sparkling while oven is running	a. Wrong materials used in the microwave. b. The oven is operated while empty. c. Spilled food remains in the oven interior.	a. Refer to chart on pp. 11–12 for materials you can and can't use in the microwave. b. Do not operate the oven while empty. c. Clean the interior with a damp cloth.
Unevenly cooked food	a. Wrong materials used in the microwave. b. Cooking time and power level are not suitable. c. Food is not flipped or stirred.	a. Refer to chart on pp. 11–12 for materials you can and can't use in the microwave. b. Use correct cooking time and power level. c. Flip or stir food midway through cooking cycle.
Overcooked food	a. Cooking time is too long or power is too high.	a. Reduce cooking time and/or power.
Undercooked food	a. Cooking time is too short or power is too low. b. Food is not completely defrosted. c. Wrong materials used in the microwave. d. Oven ventilation ports are restricted.	a. Increase cooking time and/or power. b. Completely defrost food before cooking. c. Refer to chart on pp. 11–12 for materials you can and can't use in the microwave. d. Move unit so there is ample space around ventilation ports (see p. 9).
Incompletely or unevenly defrosted food	a. Defrosting time is too short or power is too low. b. Wrong materials used in the microwave. c. Food is not flipped or stirred.	a. Increase defrosting time and/or power. b. Refer to chart on pp. 11–12 for materials you can and can't use in the microwave. c. Flip or stir food midway through defrosting cycle.
An error code displays on the screen.	a. Err0: sensor has short-circuited. b. Err1: open circuit on sensor.	Contact Chefman Customer Support

Terms & Conditions

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is nontransferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine Warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.

What the Warranty Covers

- **Manufacturer Defects**

Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

This Warranty Does Not Cover

- **Misuse**

Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;

- **Poor Maintenance**

General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Keep It Clean directions in this Chefman® User Guide for information on proper maintenance;

- **Commercial Use**

Damage that occurs from commercial use;

- **Normal Wear and Tear**

Damage or degradation expected to occur due to normal use over time;

- **Altered Products**

Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;

- **Catastrophic Events**

Damage that occurs from fire, floods, or natural disasters; or

- **Loss of Interest**

Claims of loss of interest or enjoyment.

 
For product information, please visit us at Chefman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

Warranty Registration

What do I need to register my product?

- Contact Information
- Model Number (see example below)
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code (see example below)
- Access Code (see example below)

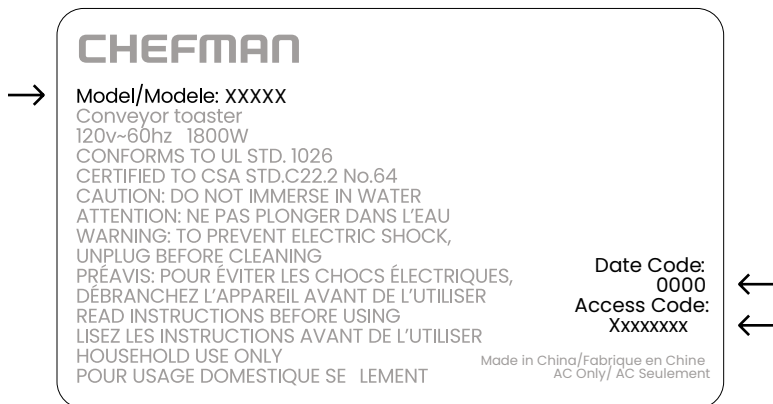

NOTE: Label depicted here is an example.

Please see label on your product for actual model/date code/access code.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

- Visit Chefman.com/register.
- Scan the QR code to the right to access site.



CHEFMAN.

Countertop
0.7 Cu. Ft.
Microwave

RJ557V2UG2124