 




CHEFMAN®

Programmable Coffee Maker

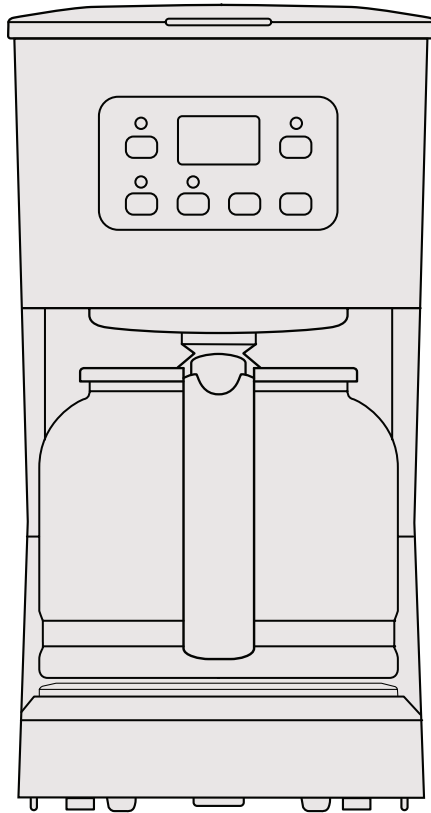

RJ14-12-SQ



Get to Know Your Coffee Maker

1. Brewing chamber lid
2. Shower head
3. Water reservoir
4. Brewing chamber
5. Water gauge window
6. Control panel
7. Glass carafe
8. Heating plate
9. Reusable coffee filter
10. Removeable filter holder

 


READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.




Get to Know Your Coffee Maker

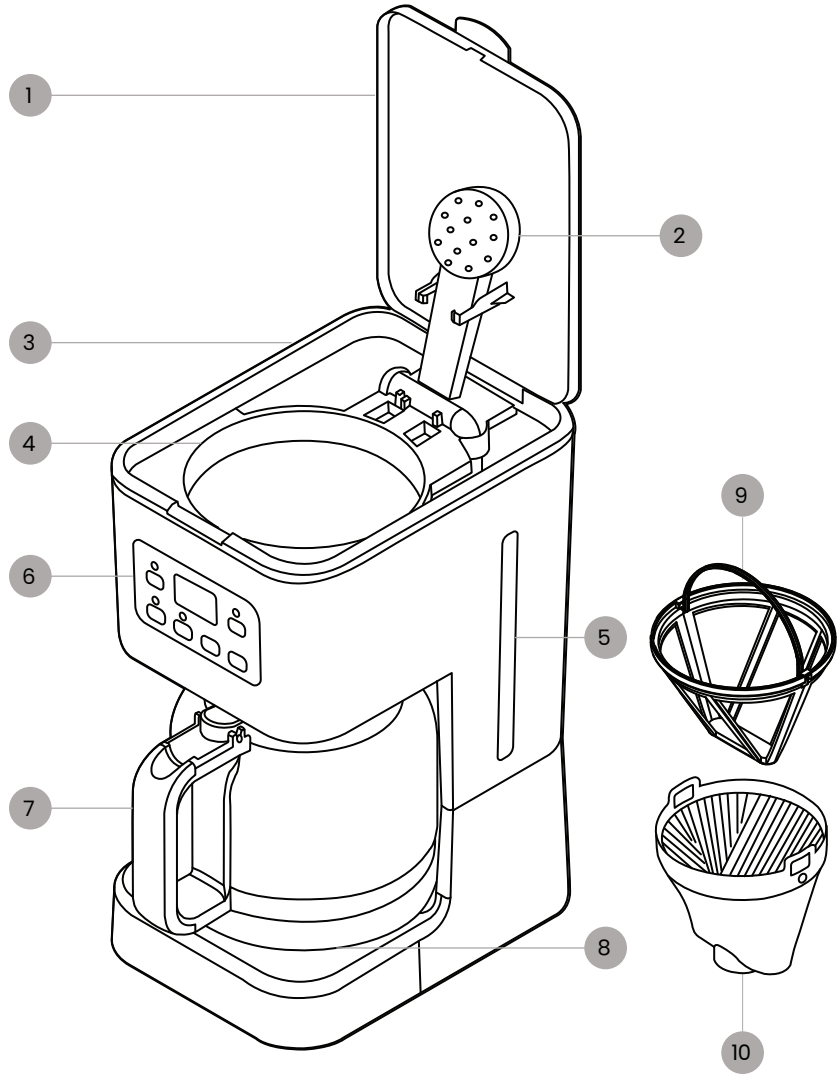



Control Panel

 1. HOUR select button
2. Time display
3. MIN (Minute) select button
4. CLEAN button
5. BOLD button
6. PROG (Program) button
7. ON/OFF button

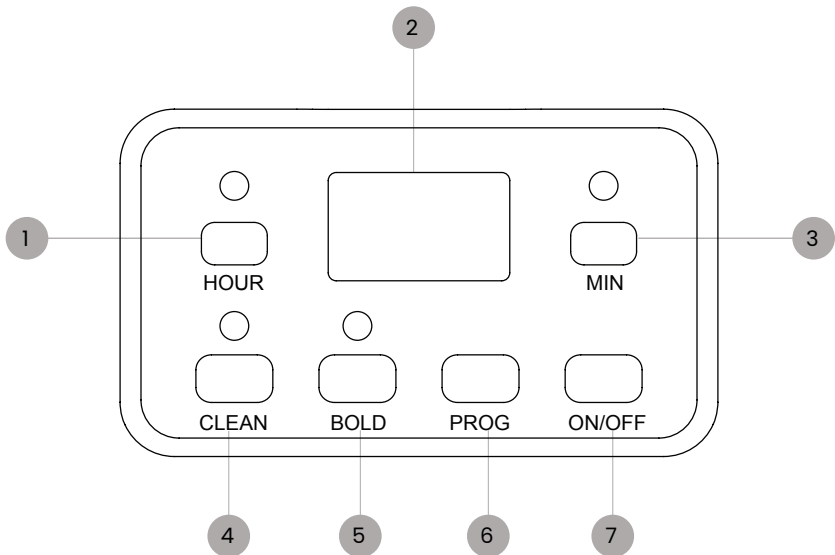



Safety Instructions & Important Safeguards

WARNING: When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. **Do not** touch hot surfaces. Use handle or knobs.
3. To protect against fire, electric shock and injuries to persons do not immerse cord, plug charging base, or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. **Do not** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If this should occur, contact Chefman Customer Service.
7. The use of accessory attachments not recommended by Chefman may result in fire, electric shock, or injury to persons.
8. **Do not** use outdoors.
9. **Do not** let cord hang over edge of table or counter, or touch hot surfaces.
10. **Do not** place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to off, then remove plug from wall outlet.
12. **Do not** use appliance for other than intended use.
13. Scalding may occur if lid is opened during heating cycle.

Save these instructions For household use only





Safety Instructions & Important Safeguards

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to modify the plug in any way or force it into the outlet. This could result in injury or electric shock.

Short Cord Instructions

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.



Safety Instructions & Important Safeguards

Power Cord Safety Tips

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the plug and remove it from the outlet.
4. Never use the product if the power cord shows signs of abrasion or excessive wear. Contact Chefman® Customer Support for additional guidance and support.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE THE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.



California Proposition 65:

(Applicable for California Residents only)

WARNING: Cancer and Reproductive Harm

www.P65Warnings.ca.gov

Do not place the appliance on a
stovetop or any other heatable surface,
even if stovetop is not on.
Doing so is a fire hazard.





Before First Use



1. Remove all packaging materials, such as plastic bags and stickers. Ensure you have all parts and accessories before discarding packaging.
2. Wipe exterior of coffee maker with damp lint-free cloth. Wash carafe, reusable filter, and filter holder in warm, soapy water.
3. Place coffee maker on a hard, flat surface, and plug it in. Set time if you like. (See directions below.)
4. Fill carafe to the 12-cup line with cold water, then pour the water into the water reservoir at the back of the brewing chamber.
5. If not already in place, set the filter holder with reusable filter in the brewing chamber with the holder's handles in the 3:00 and 9:00 positions; press down on the handles to lock holder in place. Do not add ground coffee.
6. Close the brewing chamber lid, pressing down firmly to close.
7. Place the carafe with its lid closed on the heating plate.
8. Press **ON** button.
9. After the carafe has filled, turn off the coffee maker by pressing **OFF**. Let cool for at least 10 minutes. Pour water out of carafe. Refill with fresh water, and repeat steps four through eight.
10. For best results, run the coffee maker through two brewing cycles with just water (directions follow) to remove any dust or residues from manufacturing and shipping.

 
 
To Set Time

Simply press the **HOUR** and **MIN** buttons until desired time is displayed. Hold button down to quickly scroll through numbers; when the displayed number nears the desired setting, pulse the button to advance one digit at a time. The 24-hour clock differentiates between a.m. and p.m., and displays both, so be sure to choose the right 12-hour time period as well as the correct time. The display will maintain the time so long as the coffee maker is plugged in and has power.



Quick Start: How to Make Coffee



1. Fill the carafe with fresh cold water to between the 4- and 12-cup lines, then pour the water into the water reservoir at the back of the brewing chamber.
2. Place the carafe with the lid closed on the heating plate making sure it is fully seated in the coffee maker. **CAUTION:** If the carafe is not properly positioned on the warming plate, hot water or hot coffee can overflow.

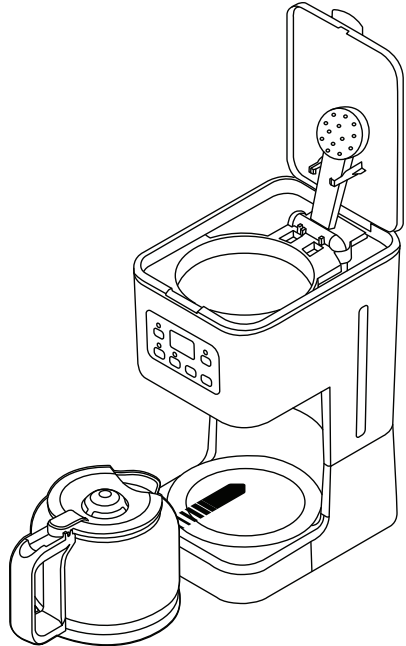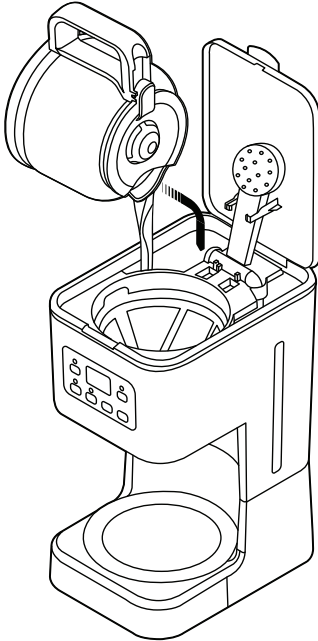



Quick Start: How to Make Coffee

  3. Check that the coffee filter holder is situated in the brewing chamber. Then insert either the reusable coffee filter or a #4 paper cone filter into the filter holder. (**Do not** use both together or the filter can clog and coffee can overflow.)
4. Add the desired amount of ground coffee to the filter. Shut the lid to the brewing chamber, pressing down on it to close securely.

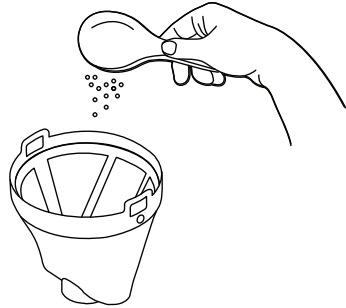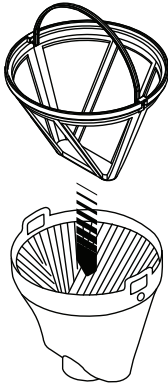

5. Press the **ON** button. A blue LED light above the **MIN** button will flash to indicate brewing. **CAUTION:** Never open the brewing chamber during brewing as hot steam, water, and coffee within can cause injury. If water/coffee is not draining from the filter basket, unplug the unit and wait 10 minutes before opening and checking the filter.
6. When brewing ends, the indicator light will turn a solid blue. The water gauge will show the water reservoir is empty, but there will still be hot liquid in the filter, so it's best to wait for a minute or two before serving to allow for the rest of the liquid to drip into the carafe before serving. **CAUTION:** Coffee maker becomes very hot during the brew cycle. Please handle with extreme care.



Special Functions

How to Program for Auto Brewing

Enjoy a fresh-made pot of coffee as soon as you wake up by programming the brewing to start automatically at your choice of time up to 24 hours in advance.

1. Before programming, be sure the current time is set correctly on the coffee maker.
2. Prepare coffee maker with ground coffee and water as if you are going to brew right away; do not press **ON**.
3. Press the **PROG** button, then set the time you want coffee to begin brewing by using the **HOURL** and **MIN** buttons. Once auto-brew time is set, a green light will illuminate above the **HOURL** button and the word **AUTO** will appear in the time display. Your coffee maker will automatically begin brewing at the pre-set time. When the brew cycle begins, the blue light will flash to indicate the coffee maker is brewing. **NOTE:** To check auto-brew time, press the **PROG** button. To cancel auto brewing, hold the **PROG** button down until the word **AUTO** disappears from the display, about 3 seconds.

How to Use Bold Function

A cup of coffee's strength depends on many variables, including the type of coffee beans, how finely they're ground, and the amount. Another variable is how long the water is in contact with the beans. The Bold function on our coffee maker lengthens the amount of time the water is in contact with the beans for a bolder cup of coffee.

If you want a strong cup of joe, simply press the **BOLD** button at the start of brewing. If using auto-brew, press **BOLD** when setting auto-brew time. You'll know a bolder cup of coffee is on its way when the light over the **BOLD** button is illuminated. To turn off the Bold function, simply press the **BOLD** button again.

How to Use the Pause-and-Serve Function

The pause-and-serve function interrupts coffee flow to let you pour a cup before brewing has finished. To pause the flow, simply remove the carafe from the heating plate any time during brewing. When returning the carafe, be sure to reposition it firmly against the back of the coffee maker for the flow to continue.



Coffee-Making Tips

For best results, use a medium-fine grind of coffee — too fine can clog the coffee filter—and don't make less than four cups.

For best flavor, consider using bottled or filtered water.

For a rich, full-bodied cup, we suggest one level scoop for each cup listed on the carafe, but you should experiment with the amount of ground coffee you use and adjust the amount to your taste.

While pause-and-serve is a convenient way to pour a cup of coffee mid-cycle, it's better to wait until brewing is complete as the strength of the coffee poured mid-cycle may vary from the finished brew and will affect the finished brew's strength and flavor.

The heating plate will operate so long as the coffee maker is on, keeping coffee hot. The coffee maker will shut off automatically two hours after the brewing cycle begins. As soon as the carafe is empty, or when you no longer want coffee kept hot, turn off the coffee maker manually by pressing the **OFF** button. Though the heating plate will stop heating if it senses the carafe is empty, it's always best to turn the coffee maker off when the carafe is empty.

If making multiple pots of coffee, allow the coffee maker to cool for 10 minutes between each brewing. Use a new disposable filter or rinse the reusable filter after each brewing.



Keep it Clean

1. Allow the coffee maker to cool completely before cleaning.
2. Lift the brewing chamber cover. Lift the filter holder out by grabbing its two handles and lifting straight up. Remove and discard the used coffee grinds and paper filter, if using.
3. Wash carafe/carafe lid, reusable filter, if using, scoop, and filter holder in hot, sudsy water, or place in top rack of the dishwasher. Do not place any other parts of your coffee maker in the dishwasher.
4. To clean the exterior of the unit, simply wipe it with a soft, damp cloth.
5. The heating plate may be wiped with a clean, damp cloth as necessary. For hard-to-remove stains, use a plastic mesh pad or a cloth dampened in vinegar.
6. Never use harsh or abrasive cleansers on any part of your coffee maker.
7. Periodically—we suggest at least four times a year—use the Clean function (see p. 14) to deep clean the coffee maker.

CAUTION: Never immerse the heating plate or main housing in water or any other liquid. Do not try to clean the inside of the water chamber with a cloth; this can leave a residue of lint and may clog your coffee maker.



Keep it Clean

How to Use the Clean Function

Calcium buildup frequently occurs in drip coffee makers. This buildup is normal and is caused by minerals commonly found in drinking water. We recommend decalcifying your coffee maker four times a year, and more often as needed. You'll know your coffee maker needs decalcifying when you notice an obvious slowing of the brewing time. We suggest using a mixture of vinegar and water to remove calcium or other mineral deposits that may form. Here's how:

1. Insert filter holder without a filter.
2. Put 2 tablespoons of white vinegar in the carafe then fill the carafe to the 12-cup line with cold water. Pour this solution into the water reservoir. Place carafe on heating plate.
3. Press the **CLEAN** button.
4. When the Clean cycle is finished, let the coffee maker cool for 10 minutes, then empty the carafe and rinse with water.
5. Using just cold water and no filter, run the coffee maker through two brew cycles to rinse out any remaining vinegar solution.
6. **NOTE:** After 60 uses, the light above the **CLEAN** button will flash as a reminder to decalcify the coffee maker. It will continue to flash until the machine has gone through the Clean cycle.



Notes

[illegible]



Terms and Conditions

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is non-transferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine Warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.



Terms and Conditions

What the Warranty Covers

- **Manufacturer Defects** – Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

This Warranty Does Not Cover

- **Misuse**
Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;
- **Poor Maintenance**
General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Cleaning and Maintenance directions in the Chefman® User Guide for information on proper maintenance;
- **Commercial Use**
Damage that occurs from commercial use;
- **Normal Wear and Tear**
Damage or degradation expected to occur due to normal use over time;
- **Altered Products**
Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;
- **Catastrophic Events**
Damage that occurs from fire, floods, or natural disasters; or
- **Loss of Interest**
Claims of loss of interest or enjoyment.



Terms and Conditions

For product information, please visit us at Chefman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.



Warranty Registration

What do I need to register my product?

- Contact Information
- Model Number (see example below)
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code (see example below)
- Access Code (see example below)



CHEFMAN

Model/Modele: XXXXX

Conveyor toaster

120v~60hz 1800W

CONFORMS TO UL STD. 1026

CERTIFIED TO CSA STD.C22.2 No.64

CAUTION: DO NOT IMMERSE IN WATER

ATTENTION: NE PAS PLONGER DANS L'EAU

WARNING: TO PREVENT ELECTRIC SHOCK,

UNPLUG BEFORE CLEANING

PRÉAVIS: POUR ÉVITER LES CHOCS ÉLECTRIQUES,

DÉBRANCHEZ L'APPAREIL AVANT DE L'UTILISER

READ INSTRUCTIONS BEFORE USING

LISEZ LES INSTRUCTIONS AVANT DE L'UTILISER

HOUSEHOLD USE ONLY

POUR USAGE DOMESTIQUE SEULEMENT

Date Code:

0000

Access Code:

XXXXXXX

Made in China/Fabrique en Chine
AC Only/ AC Seulement



NOTE: Label depicted here is an example.

Please see label on your product for actual model/date code/access code.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form.
You can easily access the form in one of the two ways listed below:

- Visit Chefman.com/register.
- Scan the QR code to the right to access site.





CHEFMAN.

Programmable
Coffee Maker

RJ14125QUG013024

Chefman® is a registered trademark of RJ Brands, LLC.