




CHEFMAN®

Roll n' Go Rollable Warming Mat

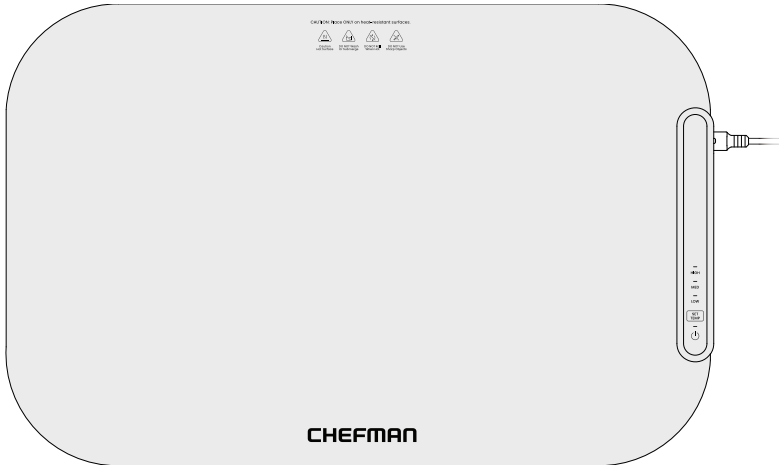

RJ22-S-SERIES



Get to Know Your Warming Mat

1. Silicone warming mat surface
2. Power cord port
3. Control panel
4. Temperature setting indicator lights (LOW, MED, HIGH)
5. SET TEMP button
6. Power button
7. Power cord
8. Storage bag
9. Heating coils (underside)
10. Feet (underside)




READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.



Get to Know Your Warming Mat

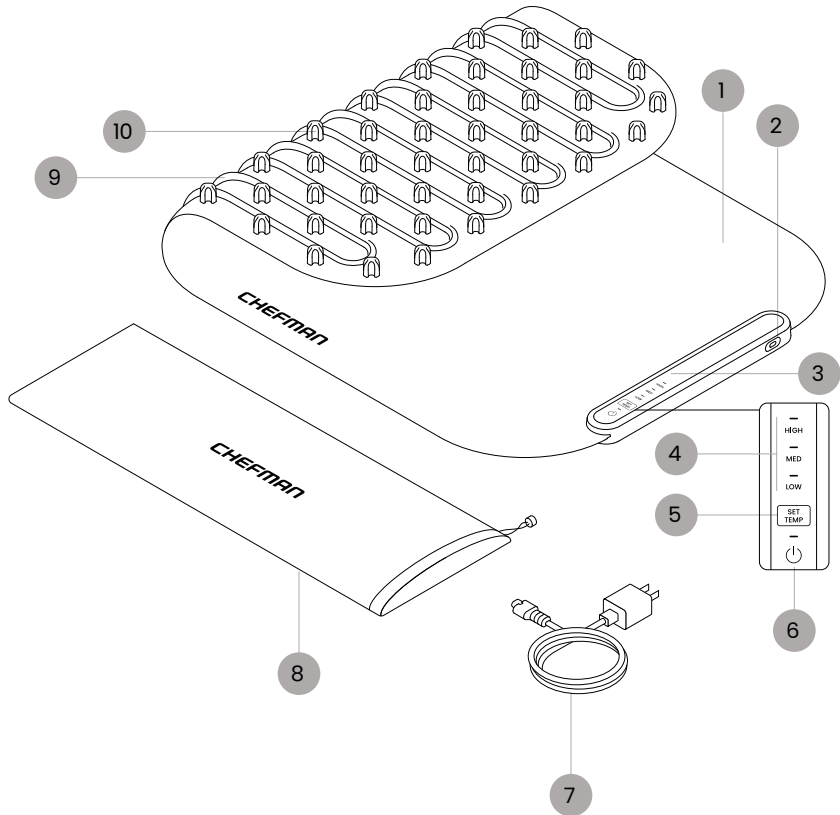



SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, basic safety precautions should always be followed

1. Read all Instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plugs, or warming mat in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Chefman for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the Chefman may cause injuries.
8. Do not use outdoors
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving any appliance used for warming food products.
12. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to off, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Clean warming mat with caution. If a wet sponge is used to wipe spills on a hot cooking area, be careful to avoid steam burns, some cleaners can produce noxious fumes if applied to a hot surface.
15. Always place the warming mat on a flat, steady surface. Keep at least 8 inches of space between the warming mat and other objects.
16. Only place the unit on heat resistant surfaces.



SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

17. Do not place non-heat resistant objects or containers on the warming mat. This includes plastic containers.
18. This warming mat can be kept on for up to 24 hours. Do not use for prolonged periods of time.
19. Do not leave the warming mat unattended while in use.
20. Do not place the warming mat in a dishwasher.
21. Do not cover the surface of the warming mat. Covering this unit can cause a fire hazard.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**



SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electrical shock.

Short Cord Instructions

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.



SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

Power Cord Safety Tips

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect appliance, grasp the plug and remove it from the outlet.
4. Never use the product if the power cord shows signs of excessive wear. Contact Chefman® Customer Support for additional guidance and support.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.



California Proposition 65:

(Applicable for California Residents only)

WARNING: Cancer and Reproductive Harm

www.P65Warnings.ca.gov

Do not place the appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.





How to Use the Warming Mat



Before First Use

1. Remove all packaging materials, such as plastic bags and foam inserts.
2. Read and remove all stickers on the unit except for the rating label.
3. Wipe the surface with a damp towel to remove any packaging dust. (Never immerse the warming mat, its cord, or plug in water or any other liquid.)

Warming Instructions

1. Place the mat on a hard, flat, heat-resistant surface near an outlet. Ensure it is at least 8 inches away from all objects and sources of liquid.
WARNING: Do not place the warming mat on butcher block, wood, recycled material, bamboo, or plastic, as they are not heat resistant. Heat-resistant surfaces include granite, stainless steel, quartz, marble, glass, soapstone, travertine, and limestone.
2. Connect the power cord to the power port, then plug it in to an electrical outlet. The unit will beep, all lights will flash, and then the unit will enter standby mode with only the Power button illuminated.
3. Use the temperature control button to select a heat level. The selected indicator light will remain lit. **WARNING:** Never cover or wrap the tray in foil, plastic, cloth, or any other material. Doing so blocks airflow, which can cause a fire.
4. Once the mat is warm, place hot or warm food in heat-resistant containers (such as a pot, pan, or tempered glass dish) on the top. Do not place plastic containers on the surface. **CAUTION:** The surface of the mat is HOT. Do not touch the surface with bare hands. Use potholders to handle hot dishes and pans.
5. Never move the mat when it is in use or items are on top of it.
6. When finished using the mat, press the Power button to turn the unit off, then unplug the mat from the power outlet. Let cool completely before cleaning.



Temperature Guide and Tips

Setting	Temperature	Best Use
LOW	140°F	Keeping hot food and beverages warm.
MED	176°F	Warming up coffee, tea, or other hot beverages that have cooled; keeping larger quantities of food warm.
HIGH	212°F	Reheating room-temperature (not chilled) dishes; keeping food warm in a cooler environment such as a drafty room or a room with extra-cool air conditioning.

- The warming mat is not a cooking appliance. It is designed to keep already-cooked food warm. It is NOT designed to cook or defrost food.
- Only use containers that are heat resistant on the warming mat. Plastic containers or other materials that are not heat resistant may melt and cause damage to the mat and run a risk of burning or fire.
- Never place any non-heat-resistant items, such as plastic utensils, on or near the mat.
- To retain both heat and moisture, consider covering any foods kept on the mat.
- The mat is ideal for keeping hot drinks like mulled wine warm during serving.
- Be sure to follow proper food-safety guidelines for keeping and serving warm foods.
- Check that the bottoms of dishes and pans are clean before placing on the tray; if dirty, they can leave marks on the mat.



Keep It Clean

The warming mat requires only minimal maintenance and cleaning.

1. Before cleaning, turn off the unit, unplug it from the power outlet, and let it cool completely.
2. When it is completely cool, clean the silicone surface with dish soap and a sponge, then wipe down with a damp cloth, and dry with a cloth or let it air dry. Do not use abrasive cleansers or scouring pads, which can damage the surface.
3. Never rinse the mat or immerse it, its cord, or its plug in water or any other liquids.
4. Dry completely with a soft cloth. When completely dry, roll the mat up and place it in the included bag for compact storage.





Having Trouble?

Problem	Likely Cause	Solution
Unit does not light up or heat.	1. Power cord is not fully inserted in either port or electrical outlet. 2. Electronic components are broken.	1. Re-insert the power cord into the unit and the plug into the outlet. 2. Contact Customer Service.
Unit lights up but does not produce heat.	Heating element failure.	Contact Customer Service.
Temperature control or Power button are not responsive.	1. Food or debris on keypad. 2. Electronic components are broken.	1. Clean the keypad. 2. Contact Customer Service.
Unit produces an odor on first use.	This is normal.	Odor should dissipate after no more than 3 hours of use.





Terms & Conditions

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is non-transferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine Warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.



What the Warranty Covers

- **Manufacturer Defects**

Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

This Warranty Does Not Cover

- **Misuse**

Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;

- **Poor Maintenance**

General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Keep It Clean directions in the Chefman® User Guide for information on proper maintenance;

- **Commercial Use**

Damage that occurs from commercial use;

- **Normal Wear and Tear**

Damage or degradation expected to occur due to normal use over time;

- **Altered Products**

Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;

- **Catastrophic Events**

Damage that occurs from fire, floods, or natural disasters; or

- **Loss of Interest**

Claims of loss of interest or enjoyment.



Terms & Conditions

For product information, please visit us at Chefman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.



Warranty Registration

What do I need to register my product?

- Contact Information
- Model Number (see example below)
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code (see example below)
- Access Code (see example below)



CHEFMAN

Model/Modele: XXXXX

Conveyor toaster

120v~60hz 1800W

CONFORMS TO UL STD. 1026

CERTIFIED TO CSA STD.C22.2 No.64

CAUTION: DO NOT IMMERSE IN WATER

ATTENTION: NE PAS PLONGER DANS L'EAU

WARNING: TO PREVENT ELECTRIC SHOCK,

UNPLUG BEFORE CLEANING

PRÉAVIS: POUR ÉVITER LES CHOCS ÉLECTRIQUES,

DÉBRANCHEZ L'APPAREIL AVANT DE L'UTILISER

READ INSTRUCTIONS BEFORE USING

LISEZ LES INSTRUCTIONS AVANT DE L'UTILISER

HOUSEHOLD USE ONLY

POUR USAGE DOMESTIQUE SEULEMENT

Date Code:

0000

Access Code:

XXXXXXX

Made in China/Fabrique en Chine
AC Only/ AC Seulement



NOTE: Label depicted here is an example.

Please see label on your product for actual model/date code/access code.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form.
You can easily access the form in one of the two ways listed below:

- Visit Chefman.com/register.
- Scan the QR code to the right to access site.





CHEFMAN.

Roll n' Go
Rollable Warming Mat

RJ225SERIESUGIO1824

Chefman® is a registered trademark of RJ Brands, LLC.