 


CHEFMAN®


Smart Touch™ 2-Slice Digital Toaster

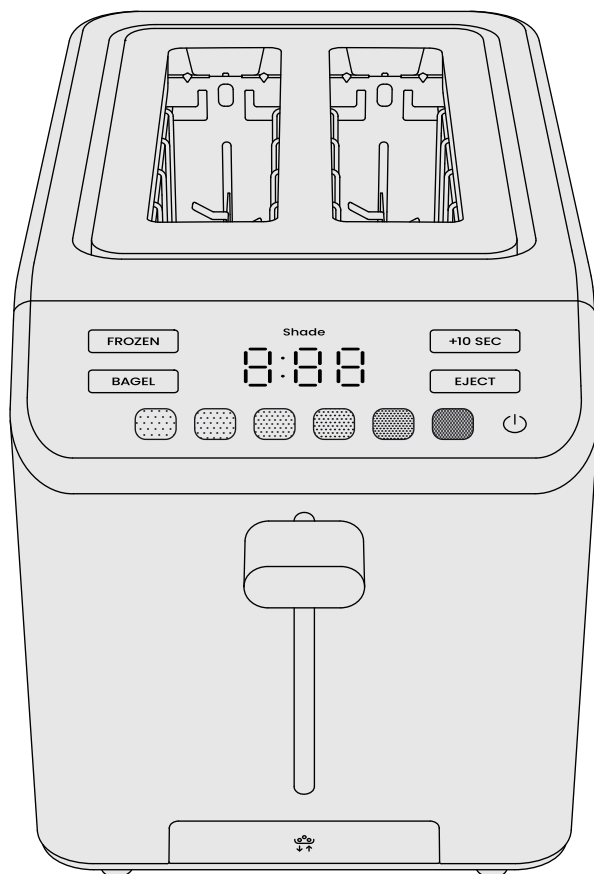

RJ31-T-2S-SERIES

Get to Know Your Toaster

 1. Toasting Slots
2. Control Panel
3. Lever
4. Removable Crumb Tray
5. Nonskid Feet
6. Power Cord Storage (on bottom)

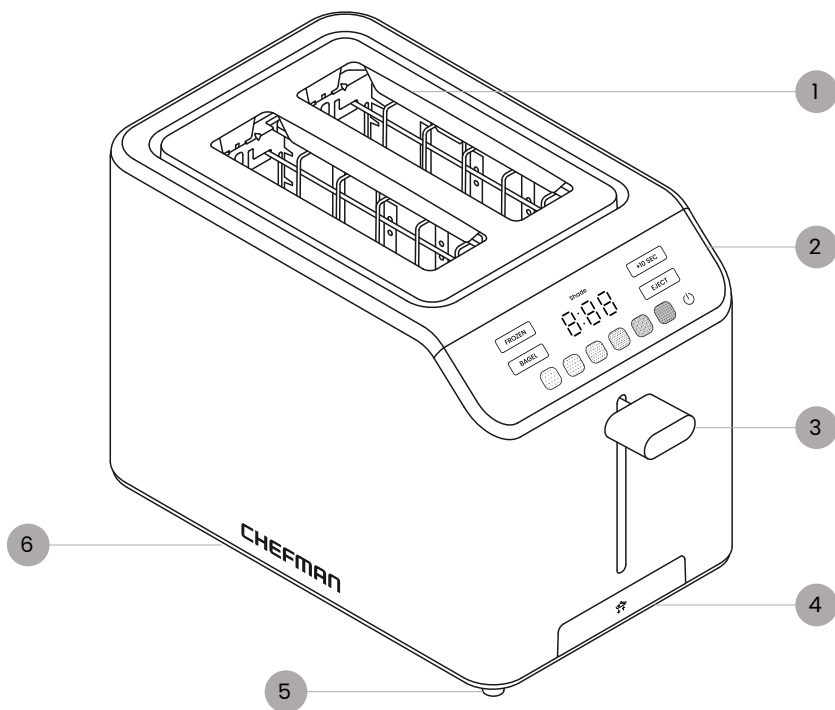


READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

Control Panel

 1. **POWER** button
2. **Shade settings** buttons: Press to select your desired toast shade; the higher the number, the darker and crispier the result
3. **BAGEL** button: Select when toasting bagels or English muffins (see p. 12 for function descriptions)
4. **FROZEN** button: Use when toasting frozen foods like bread and waffles
5. **Shade/Time** display: Shows the number of your selected shade; during toasting, displays a countdown timer for the selected shade and toast function
6. **+10 SECONDS** button: Press to toast for an additional 10 seconds
7. **EJECT** button: Press to stop toasting at any time

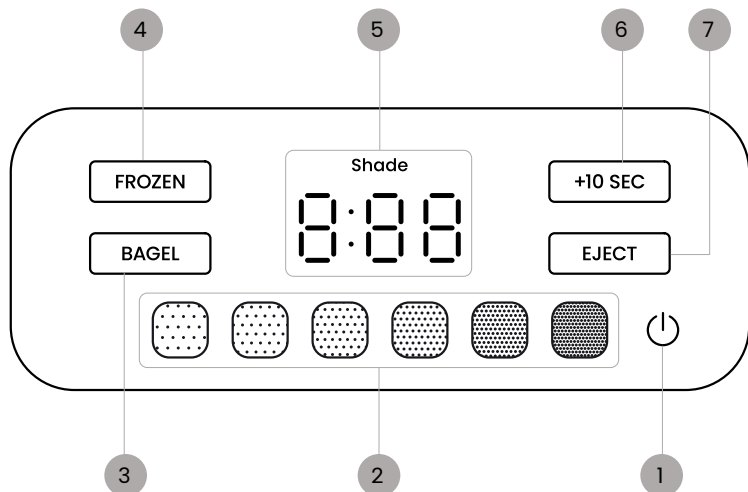

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions.
2. **Do NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord or plugs into water or other liquid.
4. Close supervision is necessary when this toaster is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. **Do NOT** operate toaster with a damaged cord or plug, or after the toaster malfunctions or has been damaged in any manner. Contact Chefman® Customer Support for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Chefman® may cause injuries.
8. **Do NOT** use outdoors.
9. **Do NOT** let cord hang over edge of table or counter or touch hot surfaces.
10. **Do NOT** place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to toaster first, then plug cord into the wall outlet. To disconnect, turn any control to **OFF**, then remove plug from wall outlet.
12. **Do NOT** use toaster for other than intended use.
13. Oversized foods, metal foil packages, or utensils must not be inserted in toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. **Do NOT** attempt to dislodge food when toaster is plugged in.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Short Cord Instructions

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

Power Cord Safety Tips

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect appliance, grasp the plug and remove it from the outlet.
4. Never use the product if the power cord shows signs of abrasion or excessive wear. Contact Chefman Customer Support for additional guidance and support.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

IMPORTANT: During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after the appliance has been used a few more times. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



California Proposition 65:

(Applicable for California Residents only)

WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov

Do not place the appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.



Before First Use

 


1. Remove all packing materials and any removable stickers from the inside and outside of the toaster except for the rating label, which should remain on the unit.
2. Gently wipe down the exterior with a damp cloth or paper towel to remove any packaging residue. Dry completely.
3. **CAUTION:** Never immerse the toaster, cord, or plug in water or any other liquid; do not use scouring pads or abrasive cleaners, as they can damage the finish.
4. Unwrap the power cord from the compartment under the base. Place the unit on a flat, heat-resistant surface positioned at least 2 inches away from the wall or any other objects.
5. Ensure that the crumb trays are inserted in position at the bottom front of the toaster.


How to Use the Toaster

With your digital toaster, you can choose from 6 custom shade settings to get your perfect piece of toast every time.


1. Unwrap the power cord and plug the toaster in. Press the **POWER** button to turn on the control panel. Check to ensure the crumb tray is pushed all the way in.

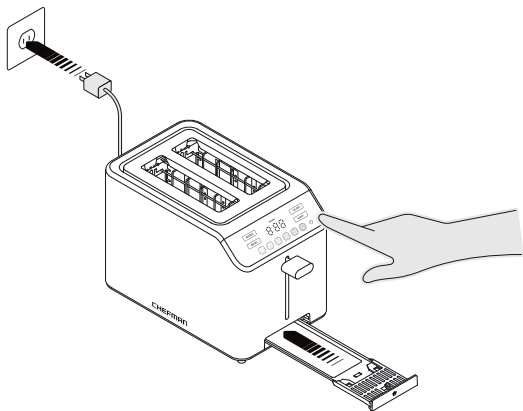

 
2. Place your desired food into the toasting slots. **Do NOT** overcrowd or overlap food in the slots, as this can cause foods to burn or toast unevenly. **NOTE:** Use only bread products and products designed for toasters, such as toaster pastries.

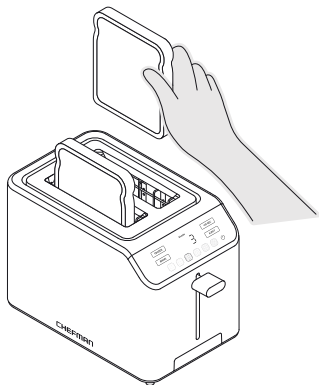


3. If toasting bagels or English muffins, press the **BAGEL** button. If toasting frozen bread or other frozen toaster foods, press the **FROZEN** button (see p. 12 for more information on these functions).
4. Choose your desired shade by pressing one of the shade settings buttons (Shade 3 is the default). The button you choose will illuminate and the shade number will appear on the display. **NOTE:** The shades depicted on the unit are based on regular-thickness white sandwich bread. Whole-grain bread and extra-thick or -thin slices will brown at different rates and may take some experimentation.

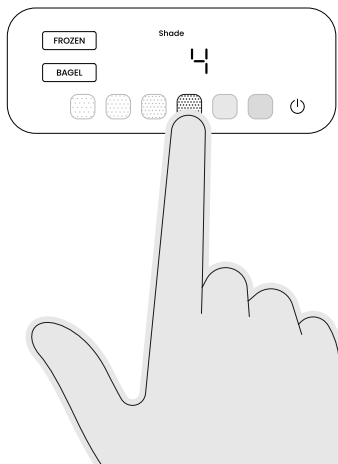 

 
5. Push the lever all the way down to start toasting. The timer will begin counting down according to the selected toast function and shade.

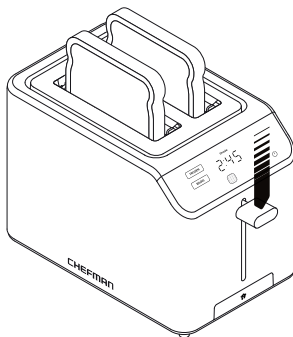

 
6. When toasting is complete, the lever will pop up and the unit will beep.

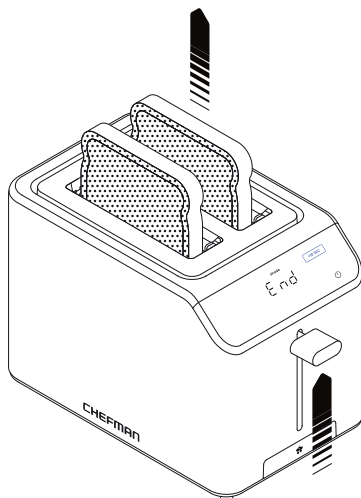

 7. If you would like your toast to be slightly darker, press the **+10 SECONDS** button and a time of 10 seconds will appear on the display. Push the lever down again and the timer will count down until toasting is complete.

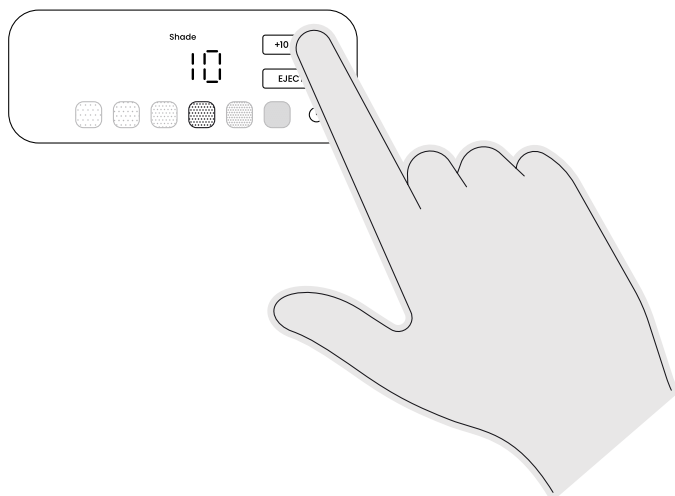

 8. Lift the lever up above the ready position to raise the food higher for easier retrieval. Carefully remove the food from the toaster and serve.
CAUTION: Never use metal utensils to remove food from the toaster.
CAUTION: Beware of hot surfaces when removing food from the toaster.

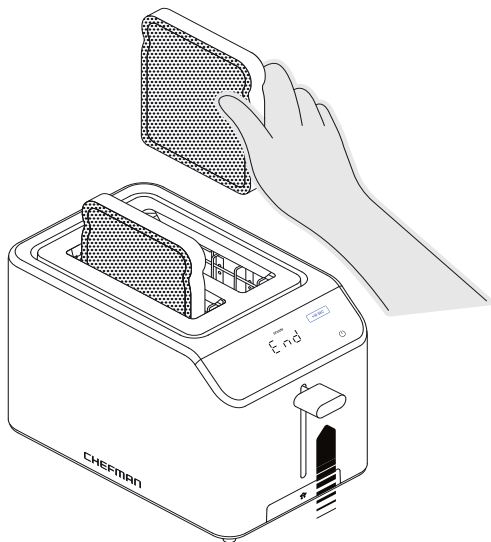

9. To stop or check on your food at any time during toasting, press the **EJECT** button. The lever and food will pop up and your chosen settings will appear on the display. To continue toasting, push the lever back down.
NOTE: When toasting is resumed, the timer will restart from the beginning.
10. To toast additional foods, repeat steps 2–8. The toaster will continue to use your last settings; if desired, change to different settings. When finished toasting, unplug the unit to turn it off and let it cool completely before storing. **NOTE:** If not unplugged, the unit will automatically go into sleep mode after 20 minutes of inactivity (all buttons except the **POWER** button will disappear from the display). Press the **POWER** button to wake the unit up.

Settings and Special Features

The toaster has 4 buttons available and a special anti-jam safety feature that automatically kicks in if food gets stuck in the toaster.

- **BAGEL:** Use for bagels, English muffins, or sandwich rolls. For best results, insert food into the toaster with the cut side facing out. This way, the toaster applies more heat to the cut side, creating a golden-brown, crunchy cut side and soft, chewy outside.
- **FROZEN:** Use for frozen foods like frozen bread, waffles, pancakes, or toaster pastries. This setting defrosts and toasts simultaneously by increasing the toasting time for each shade.
- **+10 SECONDS:** Press to add 10 seconds to toasting time. This function ensures that you get the exact toast shade you like, even if it falls between two of the preset shade settings.
- **EJECT:** Use to stop toasting at any time. When the button is pressed, food will automatically pop up. When toasting is resumed, the timer will restart from its initial time.
- **Anti-Jam Safety Feature:** The toaster is equipped with an anti-jam feature. If food gets stuck in the toaster, the unit will automatically power off. Unplug the unit, remove the food, and plug the unit back in to continue toasting.

Toasting Tips

- **Do NOT** put buttered bread or pastries with frosting into the toaster, as this can create a fire hazard.
- Never force food into the slots. Food should lower smoothly when the lever is pressed down or it could get stuck.
- **Do NOT** overcrowd the toasting slots or overlap foods within the slots. Each slot is designed to hold 1 piece of standard bread or 1 toaster product. Overcrowding or overlapping can cause food to burn or toast unevenly.
- Load bagels with cut sides facing out when using **BAGEL** mode. This way, the cut sides get more heat, ensuring bagels are toasted to crisp-chewy perfection.
- If toasting a single slice, choose one shade lighter than desired, to help prevent overbrowning.
- If using fresh or very thick bread, try choosing a darker shade. Moisture in bread slows down toasting, so a longer toast time is required to achieve the same shade. For drier or thinner bread, choose a lighter shade.
- Make quick and easy croutons by toasting your desired bread on a higher setting, then crumbling it over salad or soup.
- Choose thicker slices of gluten-free bread to toast. Store-bought gluten-free bread tends to be thin and crumble easily, making it difficult to evenly toast and keep in one piece. When shopping for gluten-free bread to toast, choose thicker slices with sturdier crusts.
- When toasting raisin bread or other fruit breads, remove loose fruit from the surface of the bread before toasting. This will prevent fruit pieces from sticking to the insides of the toasting slots.

Having Trouble?

Problem	Likely Cause	Solution
The toaster won't turn on.	a. Toaster is not plugged in. b. Power cord is damaged.	a. Plug toaster in. b. Do not use the toaster. Contact Chefman® Customer Support for assistance.
The toaster turned off when I started to toast.	Food is stuck in the toaster and its Anti-Jam Safety Feature causes the unit to power off.	Check to ensure that food is not stuck in the toaster. If food is stuck, unplug the unit, remove the food, and plug the unit back in to resume toasting. If food is not stuck, contact Chefman® Customer Support for assistance.
My food is not burned, but a burning smell is coming from the toaster.	Crumbs can collect in the crumb tray and burn during subsequent toasting cycles.	Refer to Keep It Clean on p. 15 for how to remove and clean the crumb tray to prevent a buildup of crumbs. If emptying the crumb tray doesn't fix the problem, let the toaster cool completely, then turn it upside down and gently shake over a trash bin to remove any excess crumbs.
My bread has fallen apart and crumbled inside the toaster. How do I remove it?	Thin slices, quick breads, and gluten-free breads can crumble easily.	Never insert metal utensils or forks into the toaster. Unplug the toaster and turn it upside down over the counter or sink. If the entire piece does not come out, raise and lower the lever a few times.

Keep It Clean

Your toaster requires very little maintenance besides the regular removal of crumbs, making it super easy to clean.

1. Unplug the toaster and cool completely.
2. Gently wipe down the exterior with a damp cloth or paper towel, if necessary. **CAUTION:** Never immerse the toaster, cord, or plug in water or any other liquid; do not use scouring pads or abrasive cleaners, as they can damage the finish.
3. Remove and clean the crumb tray periodically to avoid the buildup of crumbs. Pull the crumb tray out from its position at the bottom back of the toaster. Wash with a sponge and warm, soapy water and dry completely. The crumb tray is NOT dishwasher safe. Be sure to push the crumb tray all the way back inside the bottom of the toaster before the next use.
4. Wrap the cord through its compartment underneath the toaster before storing.

Terms & Conditions

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is nontransferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine Warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.

What the Warranty Covers

- **Manufacturer Defects**

Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

This Warranty Does Not Cover

- **Misuse**

Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;

- **Poor Maintenance**

General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Keep It Clean directions in this Chefman® User Guide for information on proper maintenance;

- **Commercial Use**

Damage that occurs from commercial use;

- **Normal Wear and Tear**

Damage or degradation expected to occur due to normal use over time;

- **Altered Products**

Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;

- **Catastrophic Events**

Damage that occurs from fire, floods, or natural disasters; or

- **Loss of Interest**

Claims of loss of interest or enjoyment.

 
For product information, please visit us at Chefman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

Warranty Registration

What do I need to register my product?

- Contact Information
- Model Number (see example below)
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code (see example below)
- Access Code (see example below)

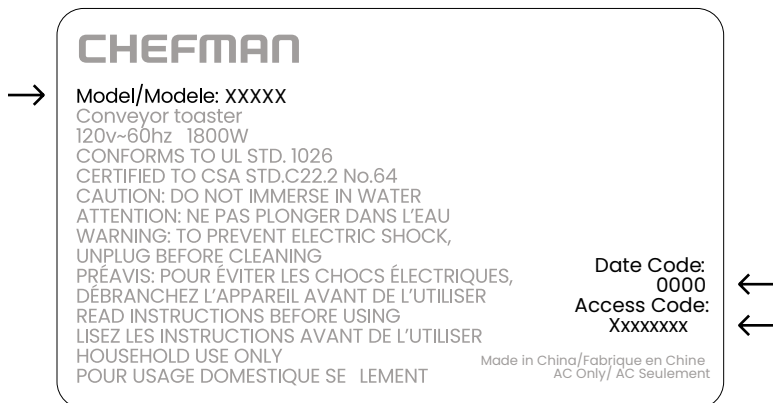

NOTE: Label depicted here is an example.

Please see label on your product for actual model/date code/access code.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

- Visit Chefman.com/register.
- Scan the QR code to the right to access site.



CHEFMAN.

Smart Touch™
2-Slice Digital Toaster

RJ3T25SERIESUG022625

Chefman® is a registered trademark of RJ Brands, LLC.

Smart Touch™ is a trademark of RJ Brands, LLC.