


CHEFMAN®

CHEFMAN
WARMING
URN®

USER GUIDE

- Safety Instructions
- Features
- Operating Instructions
- Cleaning and Maintenance
- Terms and Conditions
- Warranty

 RJ16-EW

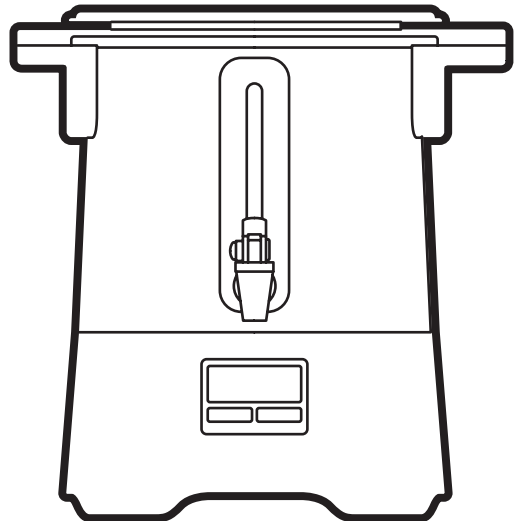

COOKING FORWARD™

Welcome!

Thank you for choosing the Chefman Warming Urn® for use on Shabbos and beyond. Whether this is your first Chefman® appliance or you're already part of our family, we're happy to be in the kitchen with you.

The urn's revolutionary design and cyclical algorithm automatically keeps water hot over Shabbos and even allows for water to be added on Yom Tov. In addition, a first-of-its-kind child safety lock offers true peace of mind. The urn also comes with a specially designed lid and tray that allows dry foods to be placed on Shabbos, a pull-up button cover to use when in Shabbos Mode, and a unique water gauge constructed to avoid potential halachic issues.

To ensure safe and proper use of your new urn, please take a few minutes to read our directions, safety instructions, and warranty information.

From our kitchen to yours,

The Chefman® Team



READ ALL INSTRUCTIONS BEFORE USE
For your safety and continued enjoyment of this product, always read the instruction manual before using.

CONTENTS

- 1 Safety Instructions**
- 5 Features**
- 8 Operating Instructions**
- 13 Cleaning and Maintenance**
- 15 Terms and Conditions**
- 17 Warranty**

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all Instructions.
2. Do not touch hot surfaces. Use handles.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. In such cases, return appliance to Chefman Customer Service.
7. The use of accessory attachments not recommended by Chefman may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to off, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Care should be used when opening the lid as scalding may occur.
14. Ensure lid is securely closed before serving any beverages.
15. Do not set a hot container on a wet surface.
16. Do not immerse this unit in water. May cause serious harm to the user and damage to the unit. Immersing this unit in water will void the warranty. Please note that the Chefman Warming Urn® was produced under Jewish ownership and does not require tevillah provided it has remained under Jewish ownership.

SAVE THESE INSTRUCTIONS

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

*California Proposition 65:
(Applicable for California Residents only)*



WARNING:

Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.



**Do not place the appliance
on a stovetop or any other
heatable surface.**

SAFETY INSTRUCTIONS


IMPORTANT SAFEGUARDS

POWER CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced, and the power cord replaced. Please contact Chefman® Support for assistance.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS
ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY
OR STOPS WORKING ENTIRELY.**


FEATURES

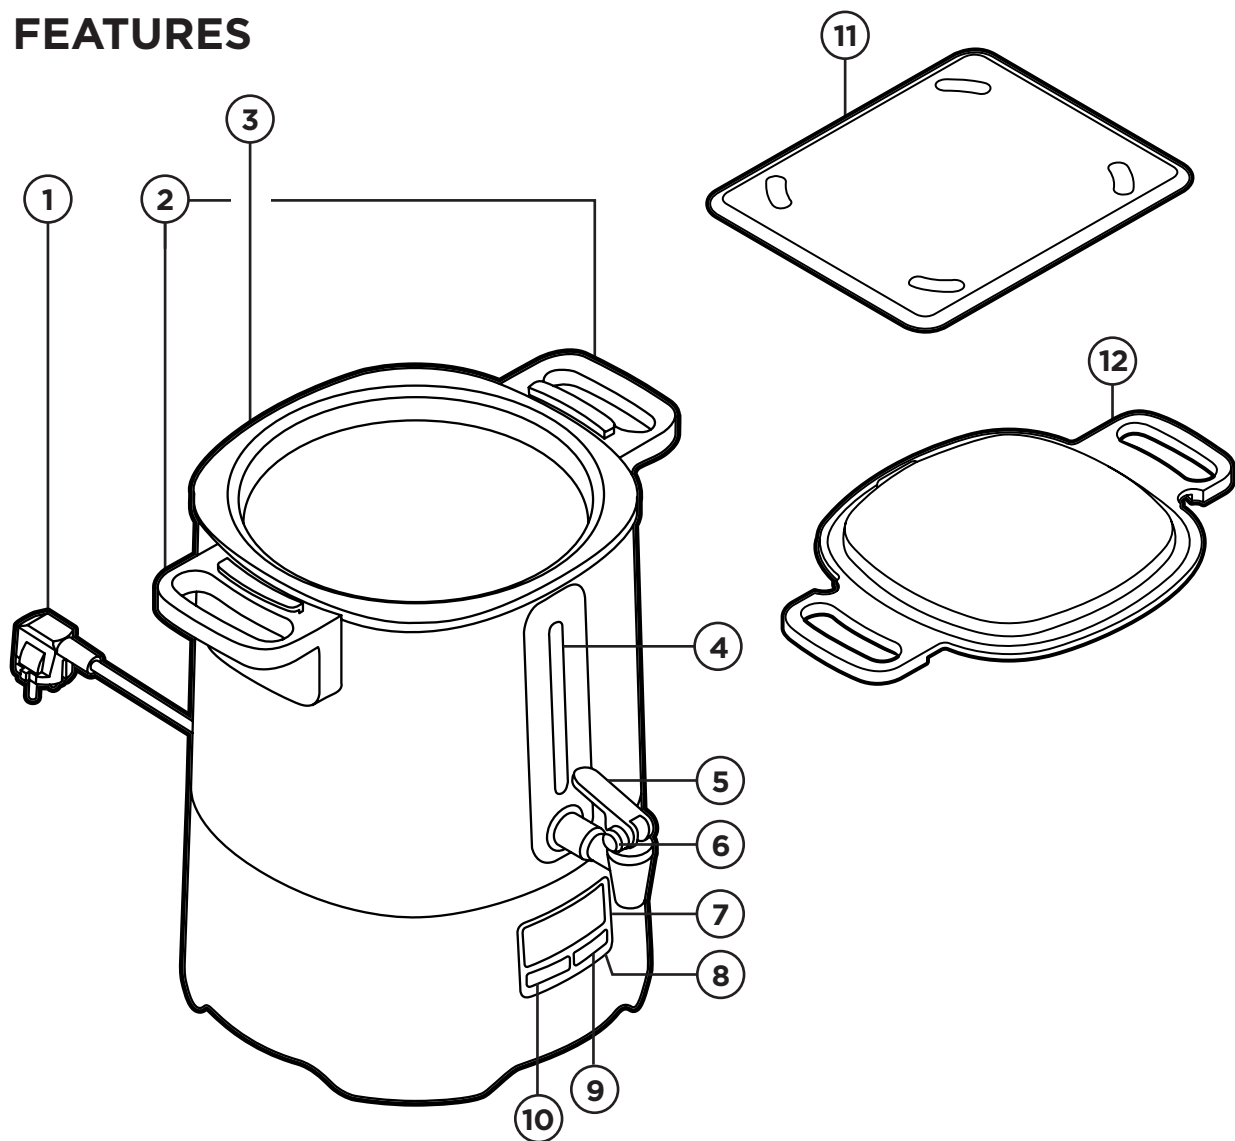

FEATURES

1. **DETACHABLE POWER CORD** - attach cord to unit before plugging into outlet
2. **COOL TOUCH HANDLES** - on tank and lid for added safety
3. **STAINLESS STEEL TANK** - 40-cup volume with double wall design
4. **WATER LEVEL VIEW WINDOW** - with water level lines and Max line
5. **DUAL-DIRECTION FAUCET** - press down or pull up to release water
6. **CHILD SAFETY LOCK** - default is lock mode; press and hold to unlock
7. **LED DISPLAY** - shows functions and warnings when not in Shabbos Mode
8. **PULL-UP BUTTON COVER** - designed to cover buttons when in Shabbos Mode
9. **SHABBOS MODE BUTTON** - activates cyclical reheating algorithm for use on Shabbos
10. **ON/OFF BUTTON** - powers unit and shuts it off
11. **ALUMINUM TRAY** - fits on lid for placement of dry foods
12. **STAINLESS STEEL LOCKING LID** - uniquely designed flat lid locks securely in place
13. **LOW-WATER SENSOR** - (not shown; inside tank) detects when water is low

FEATURES

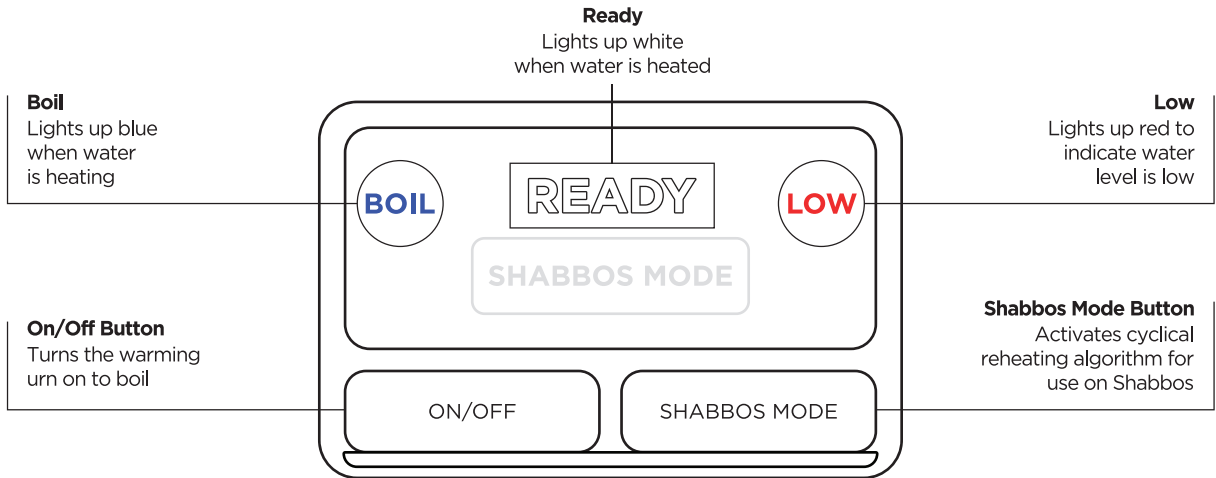

Weekday Mode



Shabbos Mode

OPERATING INSTRUCTIONS

BEFORE FIRST USE

1. Read and remove all packing materials and stickers from the inside and outside of the Chefman Warming Urn® except for rating label on bottom and other stickers that state they should remain on unit. Be sure that all accessories are accounted for before throwing away any packaging.
2. Gently wipe the exterior and interior of the urn and the lid and tray with a clean, damp cloth and dry thoroughly.
3. To clean the urn of packaging residue, bring one tankful of water to a boil following the directions below. Be sure to dispense some hot water through the urn's faucet. Let water cool then discard water and dry well.

HOW TO USE THE URN IN WEEKDAY MODE

Although the Chefman Warming Urn® was specially designed for use on Shabbos, you can use it all week long. When power is turned on, the Weekday Mode is the default mode.

NOTE: This appliance is intended for water only. Using liquids other than water can damage the unit.

1. Place unit on a flat surface and attach cord if not already in place.
2. Using another vessel, such as a jug, fill the tank with water; do not exceed the Max line shown inside tank.

WARNINGS: Do not fill the urn under a running sink faucet as overfilling can damage the unit. Do not fill the tank past the Max line, which can be both dangerous and cause damage to the unit.

OPERATING INSTRUCTIONS

3. Lock the lid into place by positioning it on top of urn and turning the lid clockwise as arrows indicate, until the handles of the lid align with the handles of the urn and lid is secure.
4. Plug in unit then Press the On/Off button to turn it on.
5. The water will immediately begin to heat. The LED display will show the word Boil in blue (it will blink briefly before becoming steady).

NOTE: You may notice a plastic smell the first time you use the urn. This is normal and will fade over time.

6. Once the water is heated, the Boil light will turn off and the display will show the word Ready in white. During this time, the urn will be in a keep warm mode. It will automatically return to boil mode (and Boil will display in blue) when water temperature drops.

NOTE: If a brief power outage occurs, the unit will return to Weekday Mode when power is restored.

7. To dispense hot water, unlock the faucet by pressing and holding the red child safety lock on its side, then lift the faucet handle up or down.

WARNING: Water is hot; use care when dispensing water from the faucet and use a heatproof cup or container.

8. Refill the urn as needed. If water is added and the water temperature in the urn drops below 176°F, the unit will begin reheating. At this time, the Ready light will turn off and Boil will come back on until the water is heated.

OPERATING INSTRUCTIONS

SAFETY FEATURES IN WEEKDAY MODE

Low Water Warning

If the word Low lights up on the display (it will be red), it means the water level has dropped too low. The unit will beep multiple times with a pause between beeps as a warning, and the heater will automatically turn off. Should this occur, you need only to turn the unit off; it does not need to be unplugged. To resume heating, add water and press On; the unit will return to heating. If no water is added, the unit will remain in the low water warning mode without heating.

Boil Dry Protection

In the event the urn runs dry, Boil Dry Protection will automatically initiate to switch off the unit. Just prior to shut off, the unit will emit rapid-fire beeps as a warning. In order to resume heating, you must unplug the unit, add water, then plug it back in.

OPERATING INSTRUCTIONS

HOW TO USE THE URN IN SHABBOS MODE

The Chefman Warming Urn® was specifically engineered from the ground up with unique features designed for Shabbos needs.

NOTE: This appliance is intended for water only. Using liquids other than water can damage the unit.

1. Place unit on a flat surface and attach cord if not already in place.
2. Using another vessel, such as a jug, fill the tank with water; do not exceed the Max line shown inside tank.

WARNINGS: Do not fill the urn under a running sink faucet as overfilling can damage the unit. Do not fill the tank past the Max line, which can be both dangerous and cause damage to the unit.

3. Lock the lid into place by positioning it on top of the urn and turning it clockwise, as arrows indicate, until its handles align with the handles of the urn and the lid is secure.
4. Before the onset of Shabbos, plug in unit, then Press the On/Off button to turn it on.
5. Press the Shabbos Mode button. The LED display will show the phrase Shabbos Mode; no other functions or warnings will display. The water will immediately begin to heat and will come to a full boil.

NOTE: We recommend sliding the button cover up at this point to keep from inadvertently touching the buttons during Shabbos.

6. During Shabbos Mode, the water will automatically reheat at regular intervals.

NOTE: If a brief power outage occurs, the unit will return to Shabbos Mode when power is restored without the need to press any buttons.

OPERATING INSTRUCTIONS

7. To dispense hot water, position a heatproof cup or other container under faucet. Unlock the faucet by pressing and holding the red child safety lock on its side, then lift faucet handle up or down.

WARNING: Water is hot; use care when dispensing water from the faucet and use a heatproof cup or container.

8. To place food on the urn, secure the included tray on top of the lid, then place the food on top of the tray. Liquidy foods may be placed on the tray before Shabbos; dry foods may be placed on Shabbos.
9. During Yom Tov, the urn may be refilled as needed. The sophisticated algorithm initiated when in Shabbos Mode is programmed to make it halachically permissible.

WARNING: Use care when removing the lid to add water as there may be hot steam as well as hot water accumulated on the inside of the lid, which can cause injury.

SAFETY FEATURES IN SHABBOS MODE

Boil Dry Protection

During Shabbos Mode, the low water warning will never be triggered. For your safety, however, the unit will automatically activate Boil Dry Protection in the event that all the water in the tank has evaporated. If this happens, the urn will automatically switch off. (There will be no audible warning.) To reset the urn, it must be unplugged, water added, and plugged back in. Please note that the unit will revert to the default Weekday Mode when plugged back in.

CLEANING AND MAINTENANCE

Cleaning the Chefman Warming Urn® is easy, usually requiring little more than rinsing and drying.

1. After using the urn, unplug it and allow it to cool completely. Remove the power cord before cleaning and be sure that the socket is kept dry.
2. Carefully discard any remaining water from the tank being sure not to get display area of tank wet.

NOTE: Any water left in the tank can cause an unpleasant odor and mineral deposits.

3. Wipe the exterior and interior with a soft, damp cloth. Do NOT use abrasive cleaners or scouring pads on the inside or outside or you may damage the unit.

WARNING: Do NOT immerse the appliance in water.

4. Hand wash the urn tank, lid, and tray with soap and water and dry well. The lid is also top-rack dishwasher safe; the tray is not.
5. Be sure the unit is completely dry before storing.

CLEANING AND MAINTENANCE

DECALCIFYING INSTRUCTIONS

Due to minerals in water, deposits may form on the base of the tank and cause discoloration. The deposits are not dangerous to ingest, but they can affect looks and performance of the urn. To get the best performance from your urn, decalcify it from time to time. How often you decalcify your urn depends on the hardness of your water and how often you use the urn.

1. Fill the tank past the low-water sensor (located toward the bottom of the pot) with equal parts water and white vinegar
NOTE: For best results, use filtered, non-tap water for cleaning.
2. Bring the water and vinegar to a boil in the urn following the directions on p. 8.
3. Be sure to run ample water through the faucet to eliminate any mineral buildup there.
4. Unplug the unit, let solution cool to room temperature, then discard liquid.
5. Carefully rinse interior with fresh water.
6. Bring fresh water to a boil in urn. Be sure to run water through the faucet to rinse it.
7. Let remaining water in the tank cool, then discard.
8. Dry urn thoroughly before storing.

TERMS AND CONDITIONS

Limited Warranty

Our products are backed by a limited 1-year warranty. To register, follow the instructions on the Chefman® Warranty Registration page in this User Guide.

We offer a limited 1-year warranty from the date of purchase. This warranty is void without proof of purchase within the USA, Canada, or Mexico. Service centers and retail stores do not have the right to alter or change the Terms and Conditions of this warranty.

WHAT THE WARRANTY COVERS

- **Manufacturer Defects**

Chefman® products are warranted against defects in material and workmanship for a period of 1 year from the date of purchase when used in accordance with the Chefman® User Guide.

- **Qualified Replacements**

If your product does not work as it should, we will send you a new one. If the product is no longer available, we will replace it with one that is comparable.

TERMS AND CONDITIONS


Limited Warranty

THIS WARRANTY DOES NOT COVER

- **Misuse** - Damage that occurs from neglectful or improper use of products; damage that occurs as a result of usage with incompatible voltage. See Safety Instructions for information on proper use.
- **Poor Maintenance** - General lack of proper care. See Cleaning and Maintenance for information on proper maintenance.
- **Commercial Use** - Damage that occurs from commercial use.
- **Altered Products** - Damage that occurs from alterations or modifications by any entity other than Chefman®; removal of rating label.
- **Catastrophic Events** - Damage that occurs from fire, floods, or natural disasters.
- **Loss of Interest** - Claims of loss of interest or enjoyment.

CHEFMAN® WARRANTY REGISTRATION

What do I Need to Register my Product

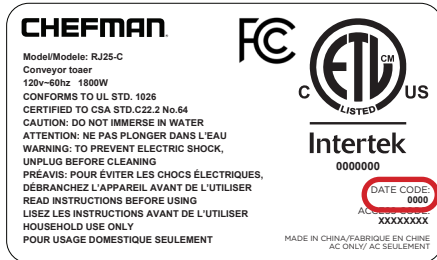

- Contact Information
- Model Number
- Proof of Purchase
(online confirmation, receipt, gift receipt)
- Date code

NOTE: Label depicted here is an example.

How Do I Register my Product?

We offer two convenient ways to access the Chefman® registration form:

1. Visit chefman.com/register.
2. Scan the QR code below to access site:



CHEFMAN® WARRANTY REGISTRATION

For product information, visit chefman.com and www.warmingurn.com

OTHER LIMITATIONS: ALL WARRANTIES OF ANY KIND WHATSOEVER, EXPRESS, IMPLIED AND STATUTORY, ARE HEREBY DISCLAIMED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED, PROVIDED THAT IF ANY IMPLIED WARRANTIES OF ANY KIND IS REQUIRED BY ANY JURISDICTION, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, THE DURATION OF SUCH IMPLIED WARRANTY IS LIMITED TO ONE (1) YEAR. THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

This Warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province. Some states or provinces do not allow the exclusions or limitations set forth in this Warranty, so the above limitations or exclusions may not apply to you depending on the jurisdiction of purchase.

Chefman® is a registered trademark of RJ BRANDS, LLC.

Chefman Warming Urn® is a registered trademark of RJ BRANDS, LLC.

Cooking Forward™ is a trademark of RJ Brands, LLC.

Intertek® is a registered trademark of Intertek Group, PLC.

CHEFMAN®

@mychefman



www.chefman.com

www.warmingurn.com

©CHEFMAN 2020