

CHRYSLER



2009 | Town & Country Quick Reference Guide



INSTRUMENT

Headlight Switch/
Overhead (Halo) Light

Turn Signal/Wiper/
Washer Lever
(Behind Steering Wheel)


Electronic Vehicle
Information Center
(EVIC) Controls

EVIC Display

Speed
Control Lever



PANEL

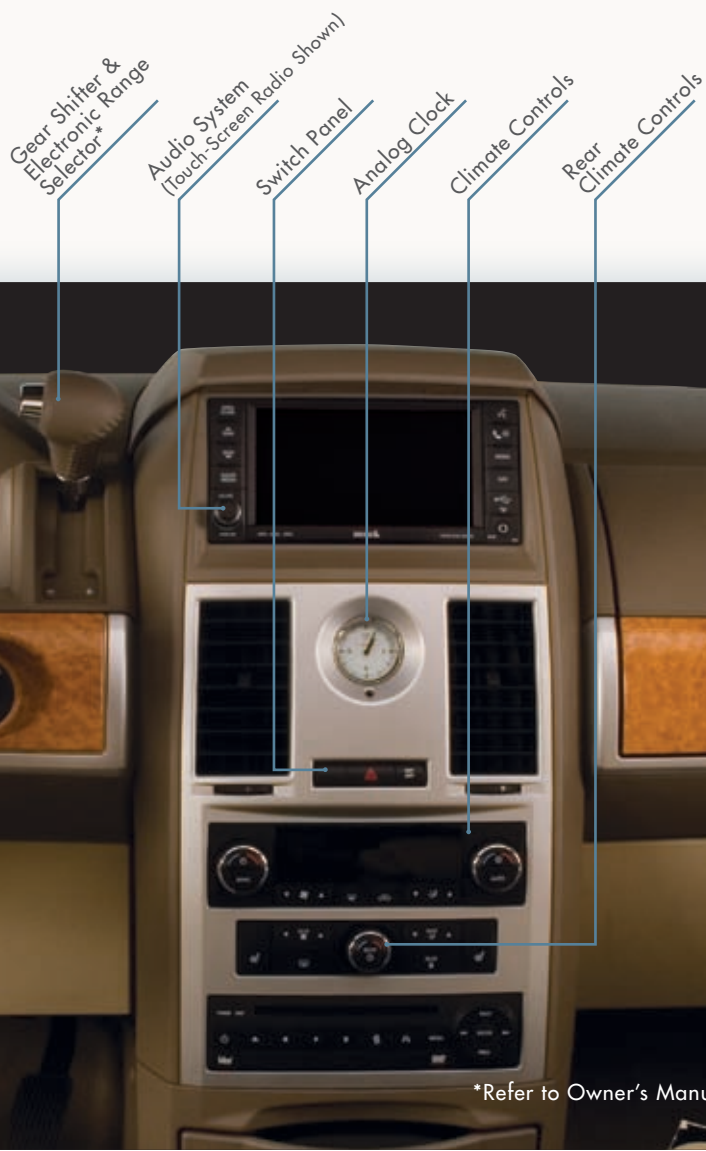

*Refer to Owner's Manual

VEHICLE FEATU



Headlight Switch

AUTOMATIC HEADLIGHTS/PARKING LIGHTS/HEADLIGHTS

- Rotate the headlight switch to the first detent for parking lights and to the second detent for headlights.
- Rotate the headlight switch to "A" for AUTO headlights.
- When set to "A" (AUTO), the system automatically turns the headlights on or off based on ambient light levels.

SMARTBEAMS

- This system automatically controls the use of the headlight high beams.
- When set to "A" (AUTO) and the high beams are on, Smartbeams are enabled. Refer to your Owner's Manual for operation.

INSTRUMENT PANEL DIMMER

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control up to increase the brightness of the instrument panel when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio when the parking lights or headlights are on. Refer to your Multimedia or Navigation User Manual for display dimming.
- Rotate the dimmer control up to the last detent position to turn on the interior lighting.

OVERHEAD (HALO) LIGHT

- Push the button to turn ON/OFF the overhead (halo) lighting.



● Speed Control Lever

CRUISE ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- CRUISE will appear on the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, push down and release the lever to set a desired speed.

ACCEL/DECEL

- Push and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected speed in memory, push the lever up and release.

● Wind Buffeting

- Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.
- If buffeting occurs with the sunroof open, adjust the sunroof opening, or adjust any window. This will minimize the buffeting.

VEHICLE FEATU

● Fuel Cap

LOOSE GAS CAP MESSAGE


- If a "gas cap" message (shown as gASCAP) appears, tighten the gas cap until a clicking sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.

● Tire Pressure Monitoring System (TPMS)

- A Tire Pressure Monitoring Light and a "low tire" message will display in your instrument cluster, along with an audible chime, if one or more of your vehicle's four road tires are significantly under-inflated.
- Check the inflation pressure of each tire and inflate to the recommended pressure for your vehicle. The tire pressures recommended for your vehicle are found on the "Tire and Loading Information" label located on the driver's side door opening. The TPMS light should not be used as a tire pressure gauge when adjusting your tire pressure.
- It is recommended that you check the tire pressure in the morning when tires are cool; inflate each tire to the recommended pressure for your vehicle. The light will turn off after your vehicle's tire pressures are properly inflated and the pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressure, causing the TPMS light to turn on.** Tire pressures will also increase as the vehicle is driven - this is normal and you should not adjust for this increased pressure.
- Driving on under-inflated tires reduces your vehicle's fuel efficiency and tire tread life. If a spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner's Manual.

● uconnect™ phone

- uconnect™ phone requires a cellular phone equipped with the Bluetooth® Hands-Free Profile, Version 0.96 or higher. See the www.chrysler.com/uconnect website for supported phones.
- Refer to your Owner's Manual for further information.

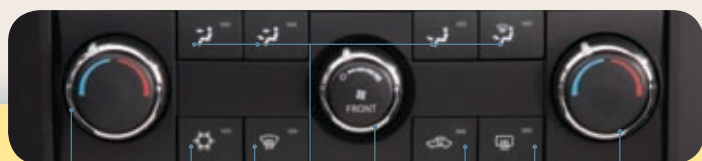

Rotate Driver Temp. Control

Push A/C Button

Push Defrost Button

 
Push Mode Buttons

Rotate Blower Control

Push Air Recirc. Button

Push Rear Window Defroster Button

Rotate Passenger Temp. Control



Rotate Rear Blower Control

Rotate Rear Temp. Control

Manual Climate Controls

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

ACTIVATING REAR PASSENGER CLIMATE CONTROLS

- Rotate the rear blower control, located on the instrument panel, to the "RR" position. This enables the rear passenger climate controls located in the headliner above the second row seats.


Oil Change Indicator

MESSAGE

- If an "oil change" message (shown as CHAnGE Oil or Oil Change Required) appears, and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

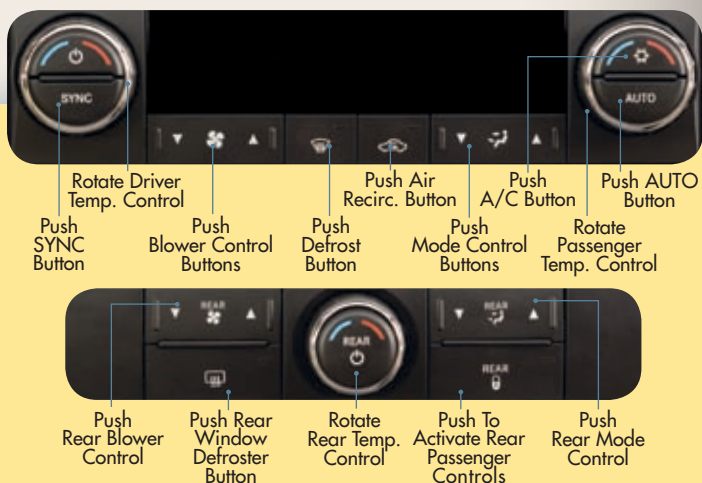

Automatic Temperature Control (ATC)

AUTOMATIC OPERATION

- Push the AUTO mode button to activate the ATC system.
- Select the desired temperature by rotating the temperature controls for the driver or passenger.
- The system will maintain the set temperature automatically.

AIR CONDITIONING (A/C)

- If the A/C button is pushed while in AUTO mode, the indicator light may flash three times to indicate the air conditioning is being controlled automatically.

SYNC TEMPERATURE BUTTON

- Push the SYNC button once to control driver and passenger temperatures simultaneously. Push the SYNC button a second time to control the temperatures individually.

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- If the recirculation button is pushed while in the AUTO mode, the indicator light may flash three times to indicate the cabin air is being controlled automatically.
- Refer to your Owner's Manual for further information.



● Key Fob with Integrated Key

POWER LIFTGATE/SLIDING DOORS

- To open/close the power liftgate, push the LIFTGATE button  twice within five seconds.
- To open/close the power sliding doors, push the LEFT/RIGHT sliding door button twice within five seconds.

PANIC ALARM

- Push the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and push the button a second time to turn the panic alarm off.

REMOTE START

- Push the REMOTE START button  twice within five seconds. Pushing the REMOTE START button a third time shuts the engine off.
- To drive the vehicle, press the UNLOCK button, insert the key in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

● Electronic Vehicle Information Center (EVIC) Controls

- The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the steering wheel allows the driver to select vehicle information and Personal Settings.

● Universal Consumer Interface – iPod®

- An iPod® can be plugged into the vehicle's audio system, using the provided cable, through a connector located in the upper glove box. Refer to your Owner's Manual for operation.

● **Clock Setting**

NON-TOUCH-SCREEN RADIOS

- Push and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Push the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Push the TUNE/SCROLL control knob to save the time change.

TOUCH-SCREEN RADIOS

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where "User Clock" is displayed (Navigation Radio Only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word "Save" is displayed.

● **Power Sliding Doors**

AUTOMATIC/MANUAL OPERATION


- Pull the handle once on the power sliding door for automatic operation and twice for manual operation. Refer to your Owner's Manual for additional Power Sliding Door Features.

● **Sliding Side Door Child Protection Lock**

- When this system is engaged, the inside manual door handle will not open the sliding door even though the inside door lock is in the unlocked position.

TO ENGAGE THE CHILD PROTECTION DOOR LOCK

- Open the sliding side door.
- Slide the Child Protection Door Lock control, located on the rear of the sliding door, inward (toward the vehicle) to engage.
- Repeat steps for the opposite sliding door.

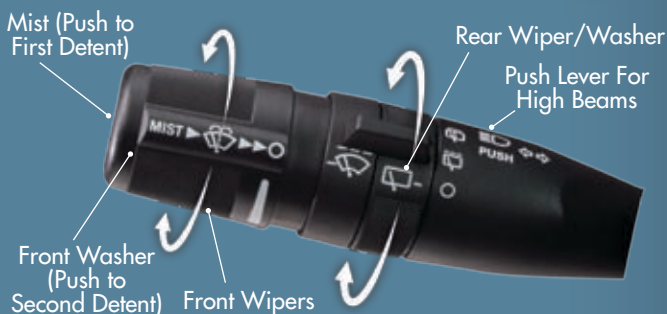

Turn Signals/Wiper/Washer Lever

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times and automatically turn off.
- Vehicles equipped with Blind Spot Monitoring may be programmed to add a visual alert when signaling a lane change; refer to your Owner's Manual for operation.

FRONT WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Rain Sensing Wipers

- This feature senses moisture on the vehicle's windshield and automatically activates the wipers for the driver when the switch is in the intermittent positions. Refer to your Owner's Manual for further details.

Mist

- Push the end of the lever inward to the first detent when a single wipe is desired.

Washer Operation

- Push the end of the lever inward to the second detent and hold for as long as spray is desired.

REAR WIPER

- Rotate the center portion of the lever forward to the first detent for rear wiper operation.

Rear Washer

- Rotate the center portion of the lever past the first detent to activate the rear washer.

MOPAR ACCESSORIES:

The following highlights just some of the Authentic Chrysler Accessories by Mopar that have been engineered to customize your Chrysler Town & Country.

EXTERIOR:

- Running Boards
- Air Deflectors
- Splash Guards
- Front End Cover
- Vehicle Cover

INTERIOR:

- Premium Carpet Floor Mats
- Slush Floor Mats
- Door Sill Guards
- Cargo Bins
- Cargo Liner

ELECTRONICS:

- Rear Seat Video
- uconnect™ web (WiFi)
- SIRIUS Satellite Radio
- Blind Spot Detection
- Park Distance Sensors
- iPod® Adapter

CARRIERS:

- Roof-Mount Carriers
- Trailering Accessories

To see the full line of accessories, stop by your Chrysler dealer or visit **mopar.com**.

This guide has been prepared to help you get quickly acquainted with your new Chrysler and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit **mopar.com** or your local Chrysler dealer.



81-316-0981
Town & Country
Second Printing
Quick Reference Guide

www.chrysler.com

Chrysler is a registered trademark of Chrysler LLC.