



POWERSPORTS

EV

E-BIKE

500W LITHIUM E-BIKE



Provincial/Municipal governments have different regulations pertaining to owning and operating an off-road vehicle, learn the regulations in your area.

4120 E. Scyene Road, Mesquite, Texas 75181
champmoto.com

Contents

Congratulations on your purchase	01
Don't Ride Until You Read This	02
Warning Message	03
Unpacking and Product Specs	07
Get to Know Your E-Bike	08
1. Handlebar	09
2. Seat	11
3. Front Wheel & Front Brake	12
4. Pedals	13
5. Fenders	14
6. Front Rack Installation	15
7. Installation of the phone holder	16
8. Removing the battery	17
9. Reinstalling The battery	18
10. Adjustments	19
Charge your E-Bike	20
Charge your Battery	21
Tire Inflation Instructions	22
Maintenance & Repair	24
Meter Function	27
Function Mode	39
Battery Information	40
Troubleshooting Guidance	42
Warranty	43



POWERSPORTS

Congratulations on your purchase!

This user manual will help you assemble and operate your new electric bicycle. Be sure to read **ALL OF THE INFORMATION** in this manual before riding.

NOTE TO ALL RIDERS UNDER THE AGE OF 18:

It's very important that you get parental permission before riding your electric bicycle.

TOOLS INCLUDED: 15mm&18mm open-end wrench, combination wrench.





Don't Ride Until You Read This:



ALWAYS wear a helmet when riding your electric bike.



Make sure your electric bike has a **full battery** before taking it out to ride.



Always be aware of local road laws, and follow them.



Do not ride the bike under the influence of drugs or alcohol.



Always respect pedestrians.



Do not ride under wet conditions. The electric bike may slide from under your feet causing injury. Wet conditions may damage the electronics and void the warranty.



To conserve electricity, use assist mode and avoid zero starting, frequent braking, driving against the wind, carrying heavy loads including other people and riding with insufficient air pressure.




WARNING: Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov




Warning Message

1. **Avoid water** - The electric bike is not waterproof. The electronics may be damaged due to water and water damage is not covered by our warranty. Riding in wet conditions is also very dangerous and may result in injury.
2. **Avoid prolonged exposure** to sun or rain and avoid storage in places with high temperatures or corrosive gas.
3. **Abuse** - We do not cover physical damage due to negligent care and extreme riding.
4. **Whenever you ride** the **COLEMAN** Electric Bike, you risk severe injury or even death from loss of control, collisions, and falls. Use caution and ride at your own risk.
5. **Do not modify** the product from the manufacturers original design.
6. **Do not exceed** the posted speed limit and obey all traffic laws.
7. **Avoid touching** the charging port directly and do not let it make contact with a metal object.
8. **Keep hands and all body parts away** from moving parts while operating the electric bike.
9. **Before riding** - be sure to check the electric bike over and make sure the electric bike is operating correctly before each use.
10. **Before riding** - be sure to check that the braking system is functioning properly; also be sure to check that all safety labels are in place and you understand the safety warnings.
11. **Before riding** - be sure that any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition.
12. **Before riding** - be sure to check that the tires are in good condition, inflated properly, and have sufficient tread remaining.
13. **Never exceed** the 264lbs (120 kg) maximum load rating.
14. **The electric bike should never** be used by children under the age of 16.

15. **Maximum Speed** - Your electric bike goes the maximum speed of 20 mph.
16. **Make note that additional insurance may be required** to cover situations you encounter while riding an electric bike. It is recommended that you contact an insurance company or broker for advice and consultation.
17. **To conserve electricity**, use assist mode and avoid zero starting, frequent braking, driving against the wind, carrying heavy loads including other people and riding with insufficient air pressure.

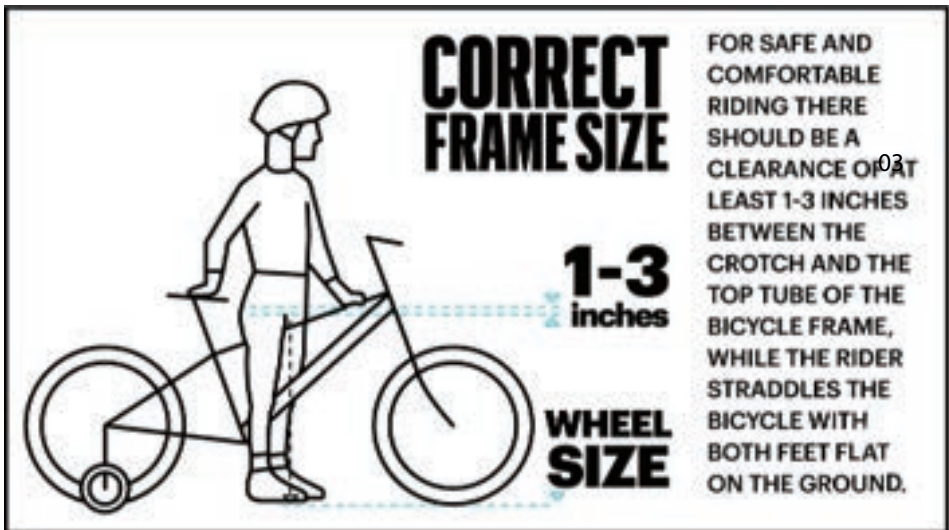

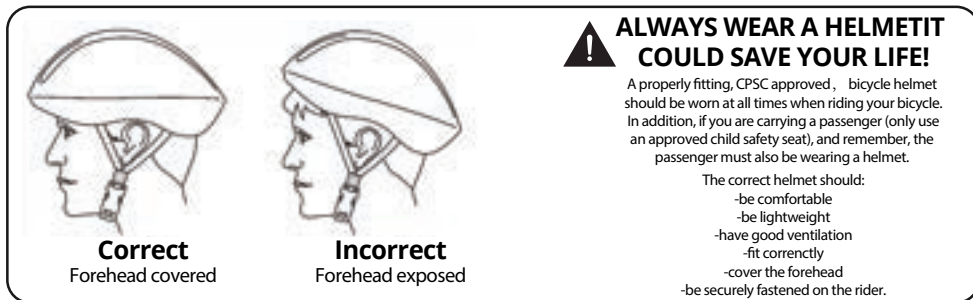

FCC REGULATIONS This device complies with **Part 15 of the FCC Rules**. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

 
following measures:

- *Reorient or relocate the receiving antenna.
- *Increase the separation between the equipment and receiver.
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- *Consult the dealer or an experienced radio/TV technician for help.




Unpacking and Product Specs

The following accessories are included with your 90% pre-assembled GOTRAX bike.



Multi Tool

 


Pedal / Wheel Wrench



Front Reflector



Phone Holder

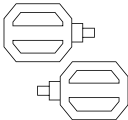


Pedal



Battery Charger



 Battery Keys



Small Bell




Cup Holder

ITEM	SPECIFICATIONS
Model	EV6
Product Dimensions	1890x710x1180 mm (74.4x27.9x46.4 in)
Package Dimensions	1520x385x860mm (59.8*15.2*33.8)
Max Load	120 kg (264 lbs)
Max Speed	32km (20 mph)
Battery	48Vdc 19.2Ah
Max Angle of Climb	15 degrees
Charging Time	7hours
Charger	Input 100-240V 50/60Hz AC Plug; Output 54.6Vdc 3A Three-core charging port
Tire Pressure	5-30 P.S.I
Bell/Horn Specifications	Bell
Frame Material	6061 Aluminum Alloy
IP Level	IPX4



Get To Know Your E-Bike

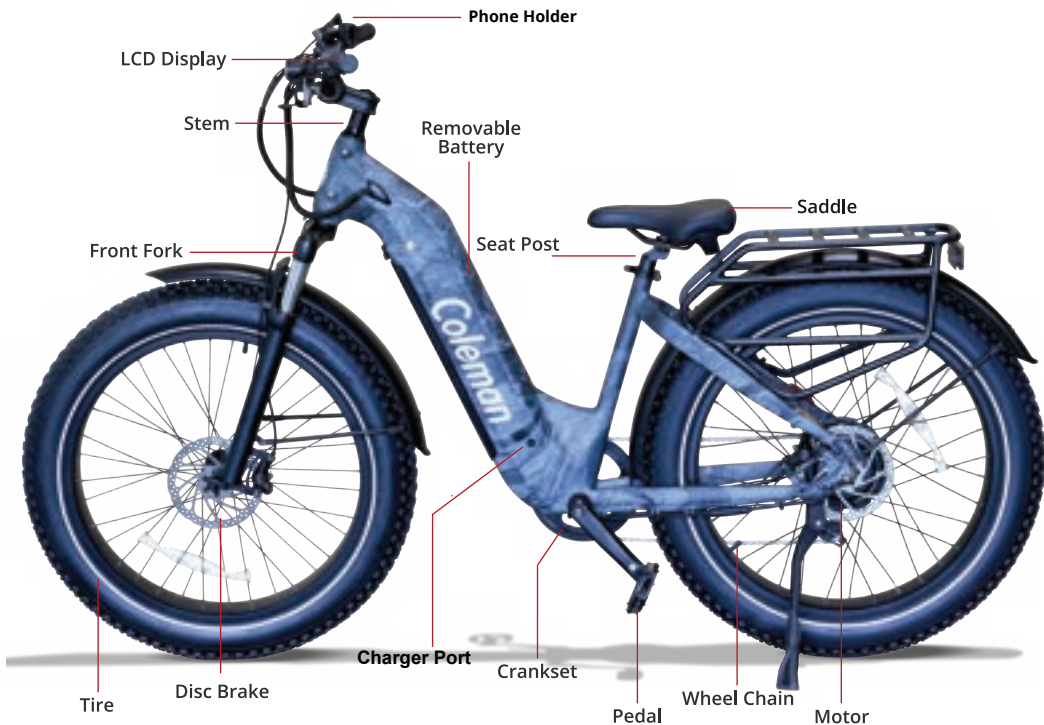

1. HANDLEBAR

HANDLEBAR COMPONENTS HAS BEEN PRE-ASSEMBLED

Please tighten and secure all bolts

You will use the 5mm allen key on the multi tool for these steps.



1. Using the 5mm allen key, unscrew bolt and remove cap, bolt, and sleeve. You will need the top cap and bolt in the next step. Leave all spacers in place.



2. Place stem on steer tube & secure with bolt and top cap that was removed in STEP 1. Using the 5mm allen key, secure so no movement in headset area but it moves smoothly.



3. Align stem to the center position and using the 4mm allen key, secure and tighten bolts on both sides of the stem.



4. Tighten and secure ALL bolts on the stem. 7 positions to check and secure.



5. Add top cap to stem bolt.



6. Upon final assembly, revisit this step to confirm alignment with stem and front wheel.

You will need the +/-phillips screw driver in the multi tool to install.



Light Installation.

Remove allen bolt and wrap bracket around center of stem. Reapply bolt and using the 4mm allen key tighten and secure. Adjust light angle for preference.

You will need the 3mm allen key on the multi tool to install.



Monitor Installation.

Remove bolts and place monitor on handlebar with a bracket on each side of the stem. Make sure that you can clearly see the monitor while sitting the the seat. Insert the bolts - tighten and secure.

You will need the +/-phillips screw driver in the multi tool to install.



Front Reflector Installation.

Remove the screw and place bracket over the handlebar on the left side closest to the monitor, if you are sitting on the seat. Tighten and secure the screw.

2. SEAT



1. Push the saddle down.



2. Open the clamp of the seat tube.



3. Adjust and rotate



4. Finally lock the clamp.

3. FRONT WHEEL & FRONT BRAKE

YOUR BIKE HAS A BOLT ON MECHANISM



1. Remove packing block from disc brake caliper – Do Not Throw Away – Re-install Packing Block whenever you remove your front wheel.



2. Position the front wheel so it's centered between the front fork legs with the axle resting inside the fork drop outs.



3. Align the disc brake rotor so it is centered in the slot of the brake caliper.



4. Tighten one axle nut part way then tighten the other nut, repeat until both sides are tightened securely. Be sure that the wheel is centered between the fork legs.

CAUTION

Tighten nuts securely to the fork drop outs

4. PEDALS



1. Drive side of bike select R-Right pedal
2. Insert pedal into Crank/Drive side and start to turn CLOCKWISE.
3. Once hand tight apply pedal wrench to pedal and tighten and secure.



1. NON drive side of bike select L-Left pedal
2. Insert pedal into Crank Arm/NON- Drive side and start to turn COUNTER CLOCKWISE.
3. Once hand tight apply pedal wrench to pedal and tighten and secure.

MATCH PEDAL and CRANK ARM CAREFULLY

Right pedal is applied to drive side/side with crank and gears and threads/twist on CLOCKWISE
Left pedal is applied on NON-DRIVE side/side with disk rotors and twist COUNTERCLOCKWISE

USE PEDAL WRENCH AND CONFIRM PEDALS ARE TIGHTENED AND SECURE

Check frequently

5. FENDERS

You will use the 5mm allen key on this step



1. Locate front fork brake arch center hole and align front fender and insert bolt and nut thru brake arch and mounting bracket on fender. Secure and tighten.


You will use the 4mm allen key on the following 2 steps



2. Align and secure fender support rods with included bolt into tapped area towards the bottom of the front fork.



6. FRONT RACK INSTALLATION

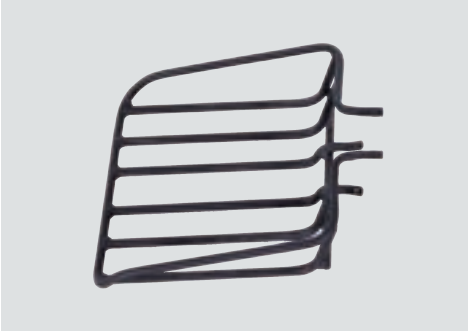

1. Find the front rack among the items carried on the vehicle.



2. Use a 4mm hex tool to remove the four screws on the front stem separately.



3. Align the mounting holes of the front rack with those of the stem rack, then use a 4mm hex tool to securely fasten the four screws individually.



7. INSTALLATION OF THE PHONE HOLDER



1. Find the phone holder among the items carried on the vehicle.







2. Use a Phillips screwdriver to loosen the locking screw.



3. After fitting the phone holder onto the handlebars, use a Phillips screwdriver to tighten it.




8. REMOVING THE BATTERY

1. Turn key until you hear CLICK
2. Move latch holder at top of battery and pull top of battery away from the frame.
3. Lifting battery out
4. Frame area is clear of battery. Check connectors toward the bottom of battery cavity

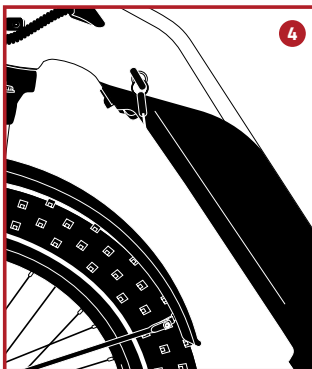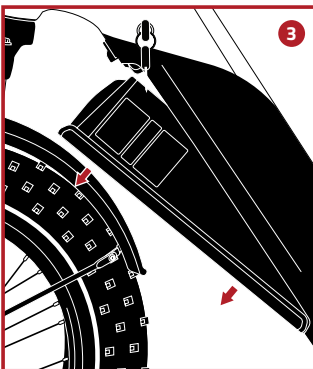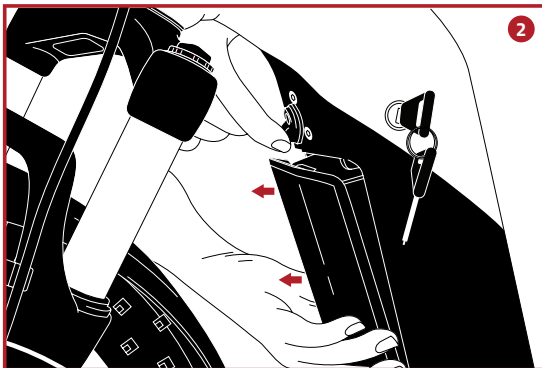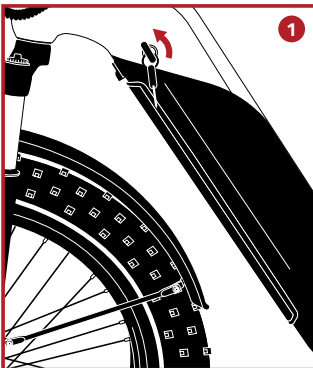



9. REINSTALLING THE BATTERY

1. With open battery cavity, check connectors.
Key is not needed to install battery
2. Place bottom of battery into frame cavity and slide up to connect
3. Battery should be inside cavity and press closed to hear a click
4. Key is not needed to install battery but if in place remove and enjoy the ride

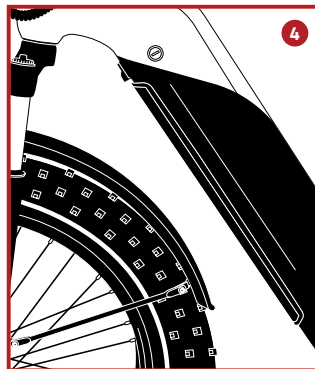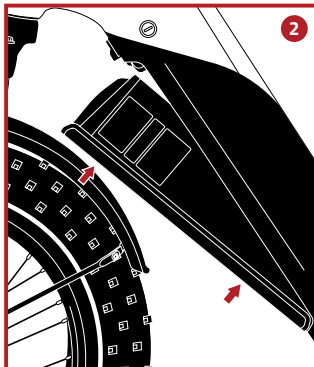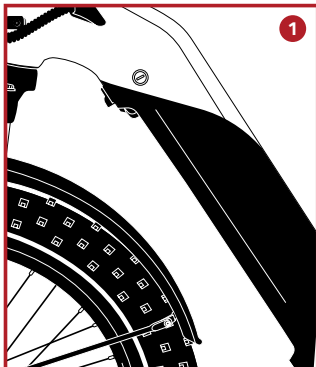

10. ADJUSTMENTS

Please confirm **STEM AND FRONT WHEEL** are in alignment.

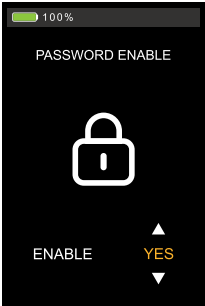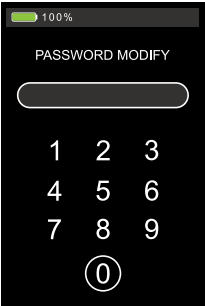

Monitor Setting.

You have a special OPTIONAL feature of PASSWORD SECURITY that if activated you will need to input your unique code to activate your eBike features prior to each ride. If not activated then you will be able to operate your eBike without this feature.

Charge your E-Bike

Before using the electric bike, you must fully charge the battery.



1. Locate the charging port.
2. Plug the charger into a power supply.
3. A red light indicates the battery is charging, green indicates the battery is full.
4. Charging Time: 7 hours.



Charge your Battery

1



Plug one end of the charger into the battery and the other end into the power supply.

2



Red light shows the battery is charging, green light is full.

3



Power indicator:

Press the button to light up.

The three-color light corresponds to the power: blue(high), green(middle) and red(LOW).



Tire Inflation Instructions

Tires and Tubes

After assembling your bike, it will be necessary to inflate the tires. Check the sidewall of the tire for the correct tire pressure (PSI) and inflate tires accordingly with a MANUAL BICYCLE PUMP.

Improper inflation is the biggest cause of tire failure. Due to the slightly porous nature of bicycle inner tubes, it is normal for your bike tires to lose pressure over time. For this reason it is critically important to maintain the proper tire inflation on your bike.

1. Your bicycle has been equipped with tires which the bike's manufacturer felt were the best balance of performance and value for the use for which the bike was intended. The tire size and pressure rating are marked on the sidewall of the tire. CAUTION: Pencil type automotive tire gauges and gas station air hose pressure settings can be inaccurate and should not be relied upon for consistent, accurate pressure readings. Instead, use a high quality dial gauge.




WARNING: NEVER INFLATE A TIRE BEYOND THE MAXIMUM PRESSURE MARKED ON THE TIRE'S SIDEWALL. EXCEEDING THE RECOMMENDED MAXIMUM PRESSURE MAY BLOW THE TIRE OFF THE RIM, WHICH COULD CAUSE DAMAGE TO THE BIKE AND INJURY TO THE RIDER AND OTHERS. THE BEST WAY TO INFLATE A BICYCLE TIRE TO THE CORRECT PRESSURE IS WITH A BICYCLE PUMP. NEVER USE A SERVICE STATION AIR HOSE TO INFLATE A BICYCLE TIRE. IT IS DESIGNED FOR LARGER TIRES AND IT CAN EXCEED THE RECOMMENDED MAXIMUM PRESSURE AND IT MAY BLOW THE TIRE OFF THE RIM.


Tire pressure is given either as maximum pressure or as a pressure range. How a tire performs under different terrain or weather conditions depends largely on tire pressure. Inflating the tire to near its maximum recommended pressure gives the lowest rolling resistance; but also produces the harshest ride. High pressures work best on smooth, dry pavement. Very low pressure, at the bottom of the recommended pressure range, gives the best performance on smooth, slick terrain such as hard-packed clay, and on deep, loose surfaces such as deep, dry sand. Tire pressure that is too low for your weight and the riding conditions can cause a puncture of the tube by allowing the tire to deform sufficiently to pinch the inner tube between the rim and the riding surface.

Some special high-performance tires have unidirectional treads: their tread pattern is designed to work better in one direction than in the other. The sidewall marking of a unidirectional tire will have an arrow showing the correct rotation direction. If your bike has unidirectional tires, be sure that they are mounted to rotate in the correct direction.

2. The tire valve allows air to enter the tire's inner tube under pressure, but doesn't let it back out unless you want it to. There are primarily two kinds of bicycle tube valves: The Schraeder Valve and the Presta Valve. The bicycle pump you use must have the fitting appropriate to the valve stems on your bicycle. The Schraeder is like the valve on a car tire, this is the type of valve stem you should have on your bike. To inflate a Schraeder valve tube, remove the valve cap and push the air hose on you bike. To inflate a Schraeder valve tube, remove the valve cap and push the air hose or pump fitting onto the end of the valve stem. To let air out of a Schraeder valve, depress the pin on the end of the valve stem with the end of a key or other appropriate object.

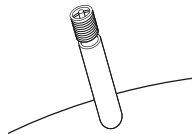

Schraeder Valve

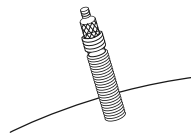

Presta Valve



Maintenance & Repair

Correct routine maintenance of your new bike will ensure a longer life for your bike and a safer ride for you.

Every time you ride your bike, its condition changes. The more you ride, the more frequently maintenance will be required. We recommend you spend a little time on regular maintenance tasks. The following schedules will assist you in knowing what tasks need to be performed and how often. **If you have any doubts about your abilities to accomplish these tasks, we recommend you take your bike to a professional bicycle mechanic periodically to have them done.**

Schedule1 - Lubrication

Frequency	Component	Lubricant	How to Lubricate
Weekly	chain derailleur wheels derailleurs brake calipers brake levers	chain lube or light oil chain lube or light oil oil oil oil	brush on or squirt brush on or squirt oil can 3 drops from oil can 2 drops from oil can
Monthly	shift levers	lithium based grease	disassemble
Every Six Months	shift levers brake cables	oil lithium based grease	2 drops from oil can disassemble
Yearly	bottom bracket pedals derailleur cables wheel bearings headset seat pillar	lithium based grease lithium based grease lithium based grease lithium based grease lithium based grease lithium based grease	bicycle mechanic disassemble disassemble bicycle mechanic bicycle mechanic disassemble

Note: The frequency of maintenance should increase with use in wet or dusty conditions. Do not over lubricate-remove excess lubricant to prevent dirt build up. Never use a degreaser to lubricate your chain (WD-40T™)

Schedule2 - Service Checklist

NOTE: Many instructions for adjustments can be found in the assembly portion of this manual.

Frequency	Task
Before every ride	check wheel and pedal tightness check tire pressure check brake operation check wheels for loose spokes, loose axle nuts or quick release make sure all fasteners are tightened securely
After every ride	quick wipe down with damp cloth
Weekly	lubrication as per schedule 1
Monthly	lubrication as per schedule 1 check derailleur adjustment check brake adjustment check brake and gear cable adjustment check tire wear and pressure check wheels are true and spokes tight check hub, head set and crank bearings for looseness check pedals are tight check handlebars are tight check seat and seat post are tight and comfortably adjusted check frame and fork for trueness

	check all nuts and bolts are tight
Every six months	lubrication as per schedule 1 check all points as per monthly service check and replace brake pads, if required check chain for excess paly or wear
Yearly	lubrication as per schedule 1

NOTE: OWNERS ARE RESPONSIBLE FOR ALL MAINTENANCE AND SERVICE OF THE BICYCLE. FAILURE TO DO SO MAY VOID YOUR WARRANTY, CAUSE DAMAGE TO YOUR BIKE OR ITS COMPONENTS, AND MAY CAUSE AN ACCIDENT.



Meter Function

 
Power on/off:

After press and hold  for 2 seconds, the meter will light up. In the power-on state, press and hold the  to turn off the power of the E-bike. The bike will automatically shut down after 10 minutes of inactivity.



Switch between normal display interface and statistics interface:

When the meter power on, it will show default normal display interface. Press and hold



+



to switch from the normal display interface to the statistics interface, press




to switch to the next page; press and hold



to switch from the statistics interface to the

normal display interface.

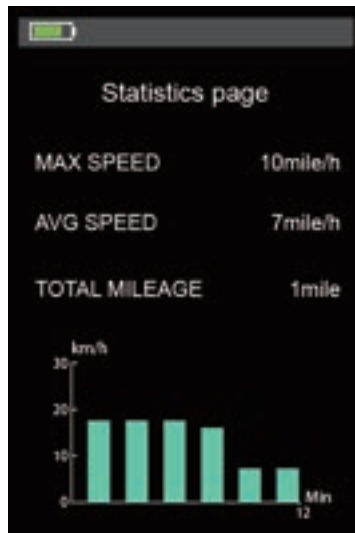

Normal Interface:

When the meter is powered on, the boot interface will be displayed. This interface can display the real-time battery capacity, real-time speed (SPEED), single trip mileage (TRIP), and total mileage (ODO) of E-bike.




Statistics Interface:

When the meter speed is 0, press and hold  +  to switch from the normal display interface to the data statistics interface.

The statistics interface is the statistics of the single riding data of the E-bike. Maximum speed (MAX SPEED), average speed (AVG SPEED), total mileage of single riding (TOTAL MILEAGE), calorie consumption (CALORIE), carbon dioxide savings (REDUCED), fat consumption (FAT REDUCED), column chart of speed change of single riding. Press  to switch to the next page, press and hold  to switch to the normal interface.

Note: The statistical time range of the column chart is 12 minutes, after more than 12 minutes, it will be displayed incrementally.

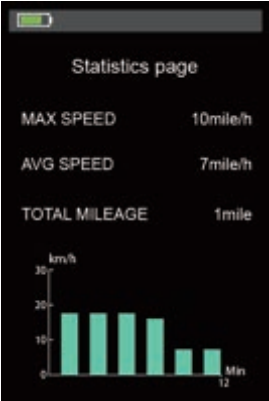

Push-Assisted Model:

Press and hold  the E-bike will enter the push-assisted model. The E-bike travels at a constant speed of 6 km/h.

 The push-assisted model can only be used when the user pushes the E-bike, please do not use when riding.



Turn on the headlights:

After press and hold  for 2 seconds in the power-on state, the headlights and rear taillights are turned on (taillight status: lights off, brake tail lights on, lights on, Brake tail light is highlighted). Press and hold  again for 2 seconds, the meter headlights are turned off.




Power-Assist gear selection:

Press the  or  button to switch the E-bike power-assist gear and change the output power of the motor. The default output power range of the meter is 0-5 gears. The default gear is 0.




Battery Capacity Display:

The battery capacity is displayed in bars. When the battery capacity is low, it will display red to remind the user to charge.

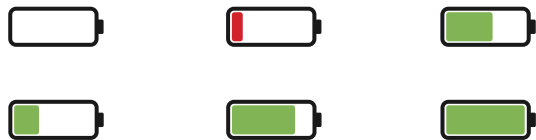


Setting Interface:

In the power-on state, press the  and  at the same time for 2 seconds, the meter will enter the setting state. In the setting list interface, press  and  to switch the setting items. (Wheel diameter, speed limit value cannot be adjusted)

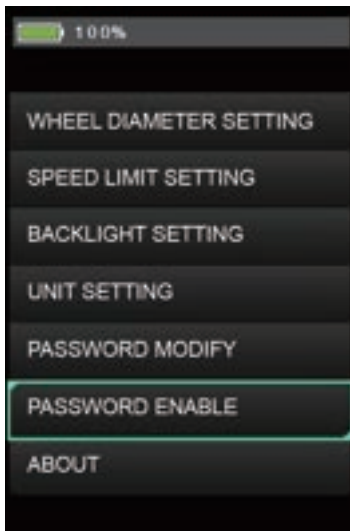

Backlights setting:

Press and hold  to enter the setting interface. The setable parameters are 1, 2, 3, Auto, indicating the brightness of the backlight, 1 is the darkest, 2 is the standard brightness, 3 is the brightest, and the Auto has recognized automatically the brightness. The default value of the meter is 3. Press and hold  to return to the setting list interface.

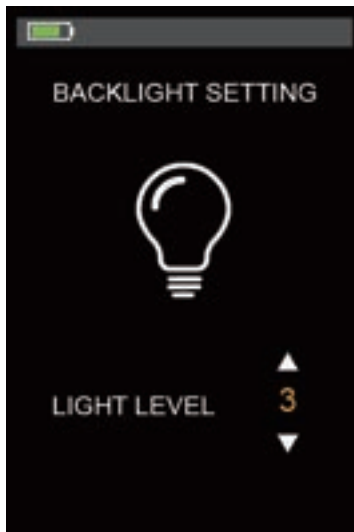

Unit setting:


Press and hold  to enter the setting interface. The setting parameters are optional km and mile. The default mile indicates that the unit is imperial. Select km or mile by pressing the  and . km means the unit is metric, mile means the unit is imperial. Press and hold  to return to the setting list interface.




POP Modify:

Press  to enter the setting interface.

Press the  and , select number, press the  to confirm the input, there are 4 digits in total, you need to enter the original password first, and then change it to a new password. In this interface, press and hold the ,  and  at the same time to restore the initial password (0000). After restoring the initial password, it will automatically jump back to the main interface.

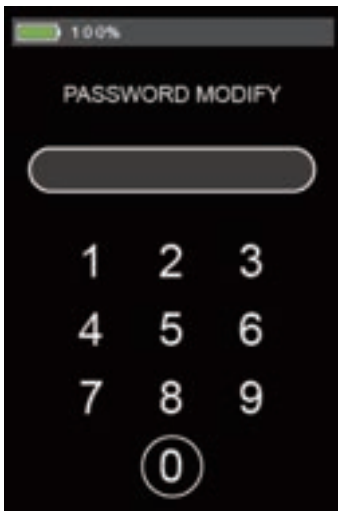

Password Modify interface

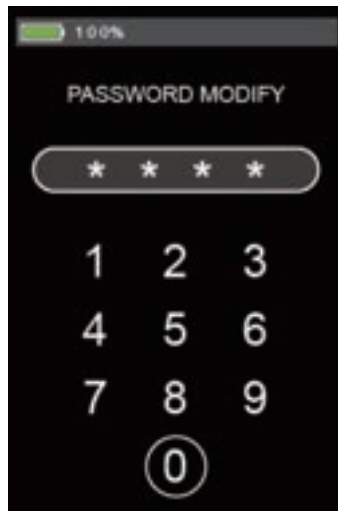

Restore Initial Password



Function Mode

1. **Three Riding Modes:** Electric Assisted Mode, Pedal-Assisted Mode, Bicycle Mode.
2. **Throttle Assisted Mode:** When you turn the bike on, the assist level will be at 0. Press the **+** button to increase auxiliary levels 1-5. Press the throttle to reach the start motor and move the bike. Throttle Assist mode Stages 1-5 assist keep same speed.
3. **Pedal-Assist Mode:** When you turn the bike on, the assist level will be at level 0. Press the **+** key to increase the auxiliary level to 1-5, and press the **-** key to decrease the gearing level.
4. **Bicycle Mode:** When riding in the off state or neutral, the motor has no power output.



Battery Information

Before using the charger locate the voltage selector switch (li-ion chargers only) on the back of the charger. Select either 115 volts or 230 volts depending on your country of residence. Using the wrong voltage setting will permanently damage the charger and/or electrical components on the hybrid electric bicycle.

BATTERY ASSEMBLY

1. Use the matching charger.
2. Insert the round plug into the E-Bike first and then insert the charger plug into the electrical socket.
3. A red light indicates the battery is charging.
4. A green light indicates the battery is fully charged.
5. The Key lock position will vary from model to model.
6. The battery is removable, the battery can be charged attached to the E-Bike or pulled out and charged separately.

CHARGING THE BATTERY

1. When using the charger for the first time, carefully check whether the rated output voltage of the charger is consistent with the battery voltage and check whether the charger input voltage is consistent with the grid voltage.
2. When charging, first put the charger in a ventilated place, then insert the charger output plug into the charging port. Plug the electrical power plug into the 100-240V 50/60Hz AC Power Supply. Be sure to keep the input plug in contact with the AC outlet.
3. After charging, the input plug of the charger shall be pulled out first, and then the output plug connected with E-Bike shall be pulled out. Do not leave the charge plugged in.

PRECAUTIONS FOR BATTERY PROTECTION

1. Do not place anything on the battery and charger when charging, otherwise the charger may overheat and cause serious damage.
2. Only use the charger supplied by the original factory to charge the battery, if you use a different charger your battery will be disqualified from warranty.
3. You can charge your battery at any time if the battery loses power.
4. If you do not use or charge your battery for an extended period of time, battery performance will decrease. If you do not plan to ride your bike for an extended period of time it is recommended to plug in and charge the battery Insert Care/Maintenance section an extended period every 4-6 weeks.
5. Protection can make your battery maintain about 80% of its capacity after more than 500 cycles. But overall decline is inevitable.
6. If the battery remains in a status not charged a long time, it will lead to permanent loss of performance.
7. If you want to store your battery for an extended period, please store and discharge it in a cool and dry place.
8. Keep the temperature between 32-113°F and avoid direct sunlight. Take the battery out for charging every 30 days.
9. Do not intentionally short-circuit the battery which will cause very serious damage and void the warranty.
10. Dispose of your batteries responsibly. Research local recycling regulations.
11. If you have questions about battery use, maintenance, or storage, please contact customer service.
12. Only use the battery supplied with this electronic bike.
13. Never charge a lithium battery unsupervised.



Troubleshooting Guidance

When the E-bike electric control system fails, the display will show the error codes, and only when the fault is removed can you exit the fault display program.

After the fault occurs, the E-bikes can't able to continue working.

Troubleshooting tips	Code meaning	Troubleshooting clearing
ERROR 22	The accelerator failure	Check the accelerator connection cable. If the connection cable is normal, replace the accelerator
ERROR 23	The motor troubleshooting	Check the motor connection cable. If the connection cable is normal, replace the motor
ERROR 24	The motor troubleshooting	Check the motor connection cable. If the connection cable is normal, replace the motor
ERROR 25	The Brake faulire	Check the brake connection cable, if the connection line is normal, replace the brake handle.
ERROR 30	Display communication failure	Check the display connection cable. If the connection cable is normal, replace the display

Warranty

Limited Warranty

ONE YEAR

THE WARRANTY

Champion Motorsports Group offers the following warranty to the initial purchaser of this new COLEMAN POWERSPORTS product. The initial purchaser is defined as the first person to purchase a new COLEMAN POWERSPORTS product from an Authorized Retailer.

The limited warranty period for this product is **1 YEAR(S)** from the date of the purchase as shown on the original sales receipt.

WHAT IS A DEFECT?

The Product is warranted to be free from manufacture defects in material and workmanship for a period of **1 YEAR(S)** from the date of purchase shown on the sales receipt. During this period of time Champion Motorsports Group will, at its option, either repair, refund the purchase amount, or replace any original Coleman Powersports unit/part which is covered by this warranty that is proven to be defective in workmanship or material.

TO QUALIFY FOR THIS WARRANTY THE PRODUCT:

3. Must have been purchased from Champion Motorsports Group or from an Authorized Coleman Powersports Retailer.
4. Must not have been used in a manner inconsistent with the intended use of the vehicle such as competition or used in a manner not consistent with the intended use for the vehicle which would also include rental or commercial use.

WHO CAN PERFORM REPAIRS UNDER THIS WARRANTY?

Repairs under this warranty should be performed by an Authorized COLEMAN POWERSPORTS Retailer or comparable servicing dealer.



Warranty

HOW TO GET SERVICE UNDER THIS WARRANTY

To get warranty service, call Champion Motorsports Group at 888-405-8725 for the location of your local service retailer/dealer. Please do not return the product to the retailer where the product was purchased unless instructed to do so by Champion Motorsports Group. The retailer of this product does not make any warranty on behalf of Champion Motorsports Group without the approval of Champion Motorsports Group. A COPY OF YOUR VEHICLE SALES RECEIPT IS REQUIRED FOR WARRANTY SERVICE.

WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover the following:

8. Damage to lack or improper maintenance as described in this manual.
9. Damage which is caused by normal use and not caused by a defect in materials or workmanship.
10. Use of the product which is not consistent with the intended use as described in the operating instructions.
11. Any expendable maintenance items which need replacement or service as normal maintenance requires unless these normal maintenance items become defective prior to their normal life due to a material defect or a defect in workmanship.
12. Any product which has been altered or modified in a manner not consistent with the original design of the product or in a manner not approved by Champion Motorsports Group.
13. Tires
14. Damage or failures due to abuse, neglect, or misuse of the product.

LIMITATIONS OF THIS WARRANTY

This warranty does not cover, and Champion Motorsports Group disclaims any responsibility for:

4. Loss of time or loss of use of the product.
5. Transportation costs to and from the authorized center.
6. Other loss or damage to other equipment or personal items.



Warranty

LENGTH OF IMPLIED WARRANTIES

Any implied warranties are limited to the duration set forth in this warranty. Champion Motorsports Group does not make any claim as to the merchantability or fitness for a particular purpose which would extend longer than the duration of this written warranty.

Check your State Laws, as some State Laws do not allow limitations as to the duration of an implied warranty. Some States may also not allow limitation or exclusions based on incidental or consequential damages.



POWERSPORTS

4120 E. Scyene Road, Mesquite, Texas 75181

CHAMPMOTO.COM



@colemanpowersportsusa



@colemanpowersports_usa



Coleman Powersports