

Cub Cadet®

ILLUSTRATED PARTS MANUAL

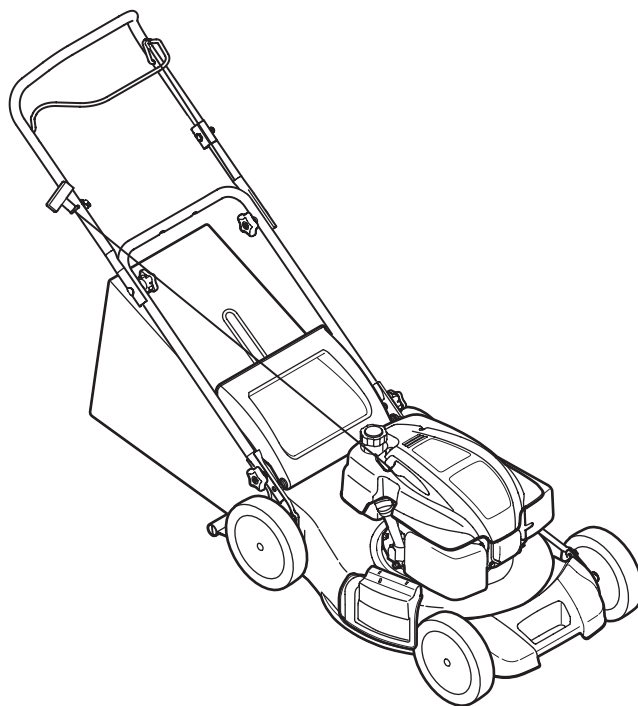

Push and Self-Propelled Mowers

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Lawn Mower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Model CC 500	4	Engine Model 1P70MC	34
Model CC 550 ES	6	Engine Model 2P70MOB	36
Model CC 550 SP	8	Engine Model 5P65MOB	38
Model CC 46 ES (Briggs & Stratton Engine)	10	Engine Model 5P70MOB	42
Model CC 46 ES (MTD Engine)	12	Briggs & Stratton Model 122L05-0768-F1	46
Model CC 94M	14	Briggs & Stratton Model 12S905-0707-B1	52
Model CC 98H	18	Honda Model GCV190LAS3A	63
Model CC 98M	22	Kohler XT173-0084	78
Model CC 999 ES	26	Briggs & Stratton Model 11P905-0826-B1	95
Model CC 99M	30		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)

0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)

This page left intentionally blank.


Model CC 500

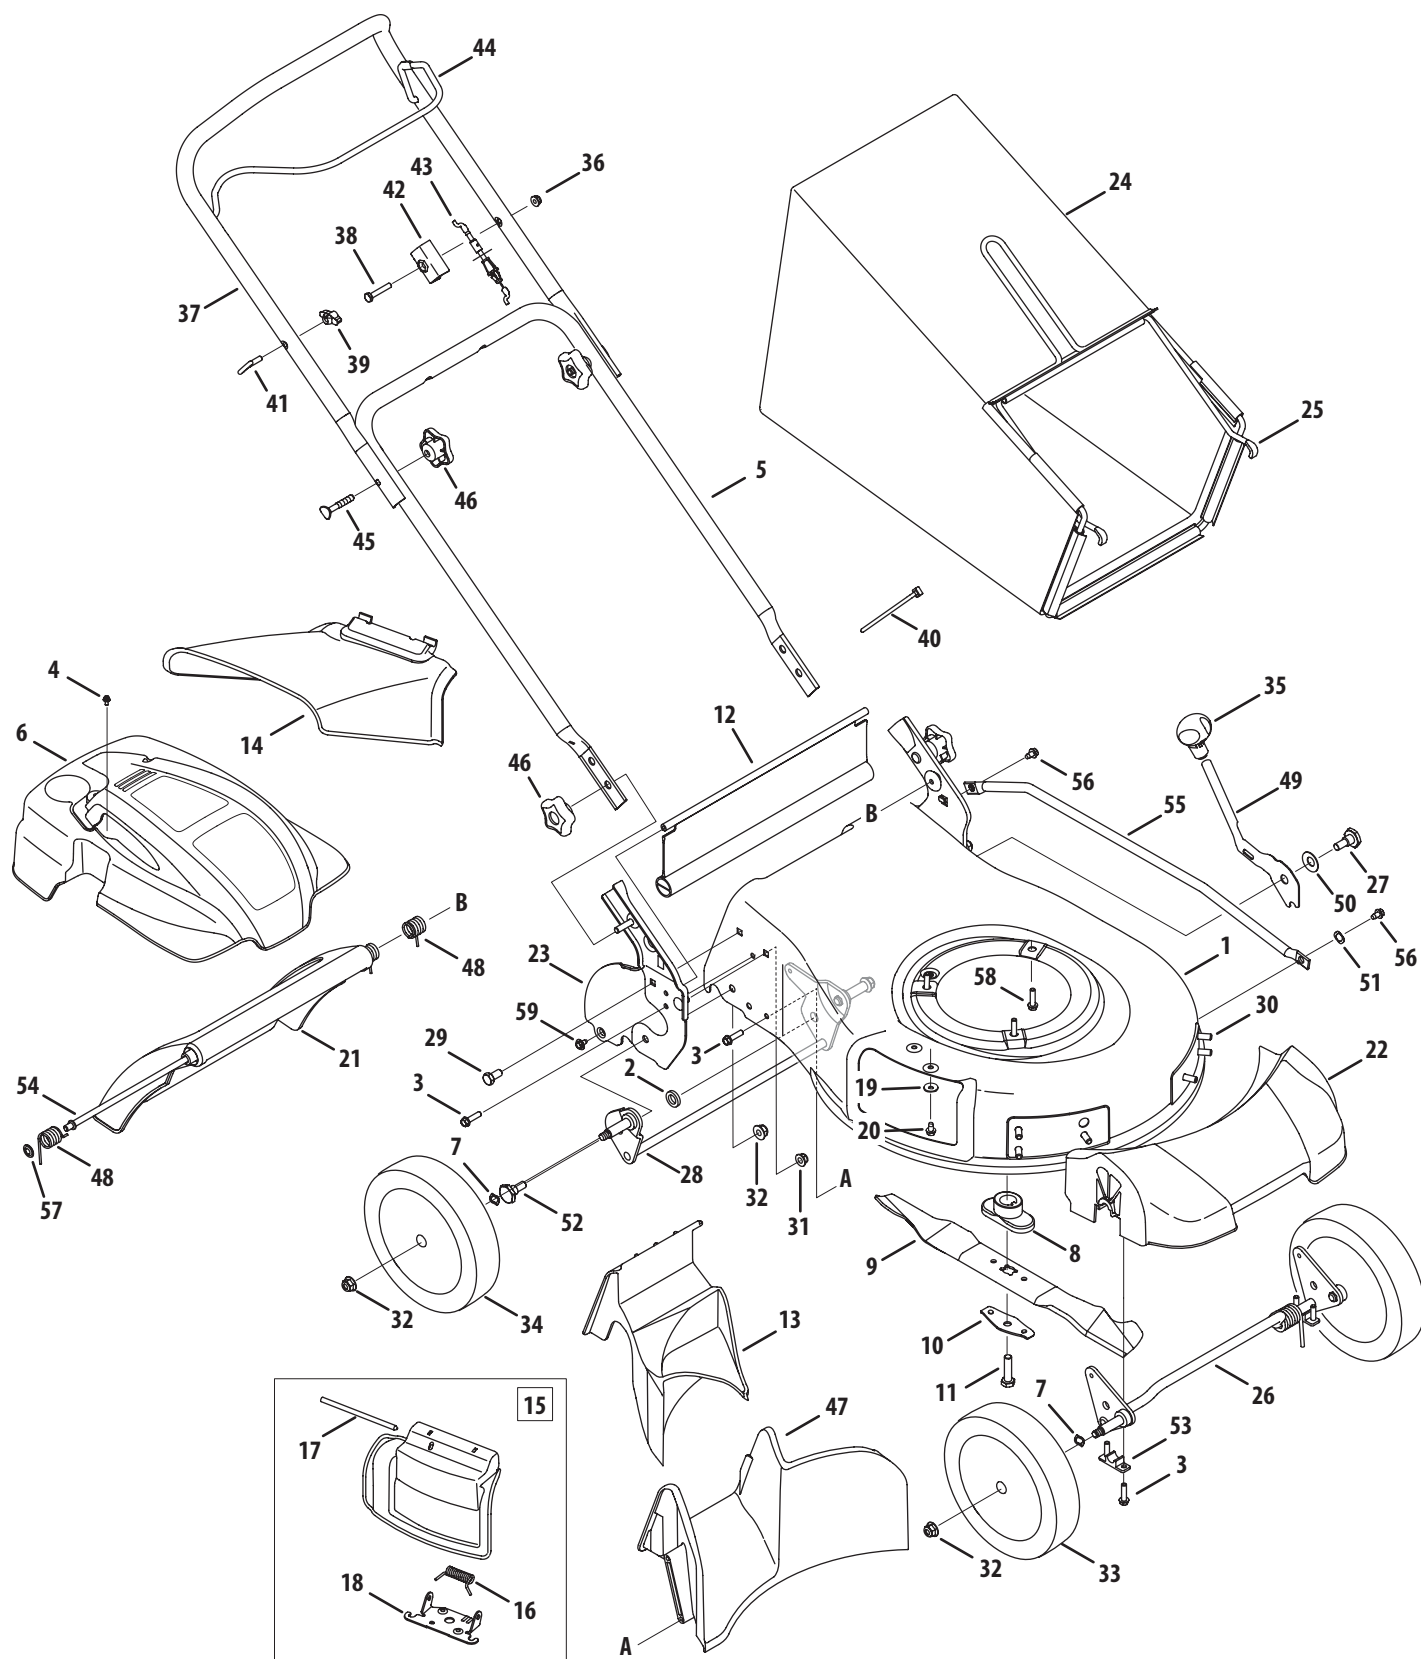

Ref No.	Part Number	Description
1	787-01649-4021	19" Deck
2	731-05880	Spacer, .515 x 1.00 x .310 Lg.
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04232B	Engine Shroud
7	936-0504	Washer, Wave, .510 x .750 x .017
8	748-0376E	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710	Hinge Pin
18	17032A	Chute Deflector Adapter
19	736-0270	Beleville Washer
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05673	Front Cover
23	687-02325-0637	Handle Bracket - RH
	687-02324-0637	Handle Bracket - LH
24	964-04066	Grass Bag
25	647-04082-0637	Grass Bag Frame
26	687-02225-0637	Front Bracket Assembly
27	938-0148	Screw, Shoulder, .50 x .66
28	687-02228-0637	Rear Bracket Assembly
29	710-3025	Hhcs, 5/16-18 x .625
30	710-04995	Screw, 5/16-14 x .750

Ref No.	Part Number	Description
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	634-04347	Rear Wheel
35	720-04096	Knob
36	712-04064	Nut, Flange Lock, 1/4-20
37	749-04550	Upper Handle
38	710-0606	Screw, 1/4-20 x 1.50
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	731-06749	Control Cable Mount
43	946-04535	Control Cable
44	747-05045	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-05710A	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04377C	Spring Lever
50	936-0255	Washer, Bell, .510 x 1.14 x .040
51	736-04413	Washer, Wave, .385 x .598
52	938-0507B	Screw, Shoulder, .500 Dia. X .434
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307-0637	Cross Bracket
56	738-04278	Screw, 1/4-20 x .50
57	726-0201	Nut, Spd.
58	710-0654A	Screw, tt, 3/8-16 x 1.00
59	710-0779A	Screw, #10-16 x .500


Model CC 550 ES

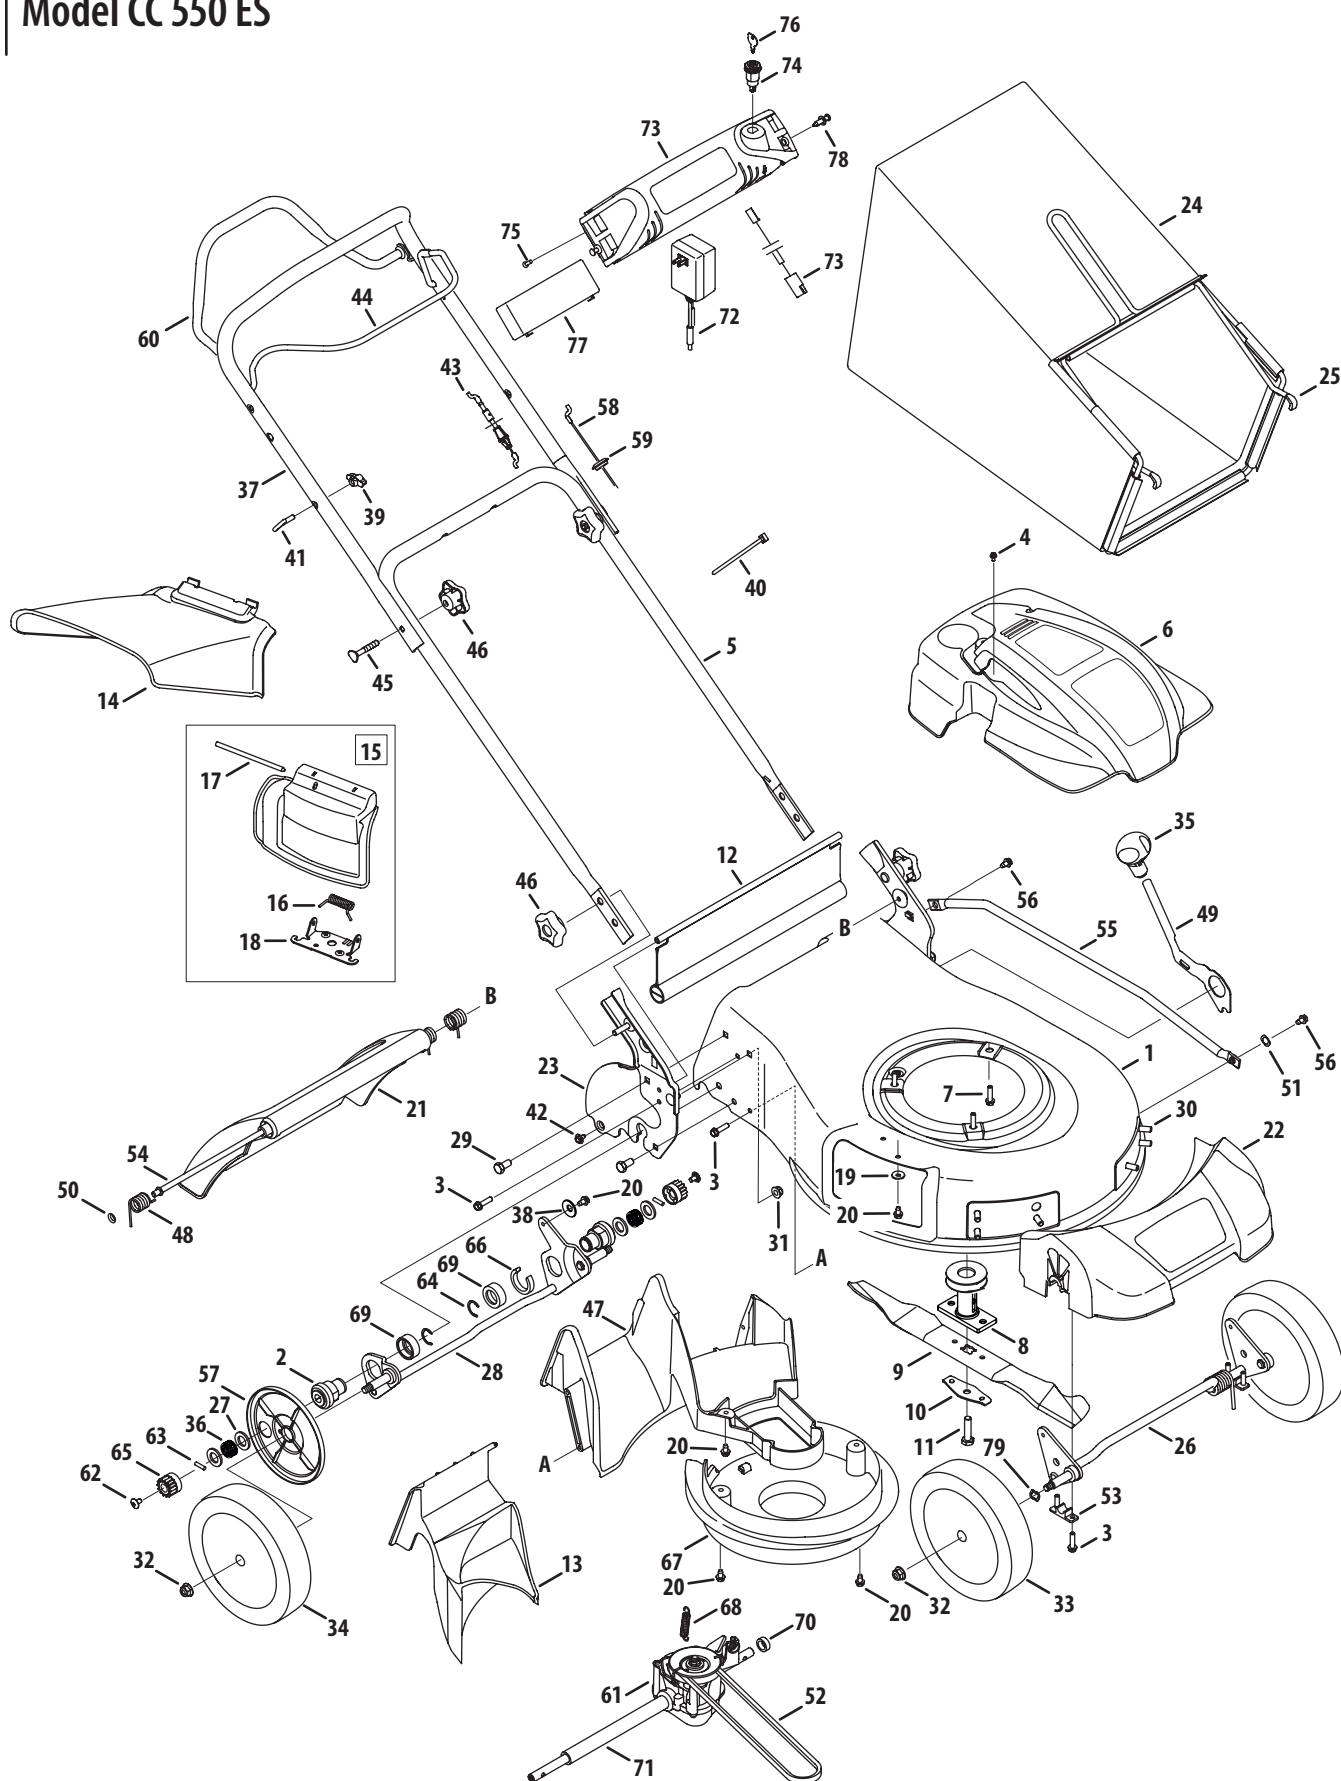

Ref No.	Part Number	Description
1	787-01629-4021	19" Deck
2	687-02415	Transmission Support Bearing
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04232B	Engine Shroud
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02555	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710	Hinge Pin
18	17032A	Chute Deflector Adapter
19	736-0270	Belleville Washer
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05673	Front Cover
23	687-02323-0637	Handle Bracket - RH
	687-02322-0637	Handle Bracket - LH
24	964-04066	Grass Bag
25	647-04082-0637	Grass Bag Frame
26	687-02225-0637	Front Bracket Assembly
27	936-0369	Washer, Flat, .508 x 1.00 x .020
28	687-02304-0637	Self Propelled Bracket Ass'y
29	710-3025	Hhcs, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	934-04348	Rear Wheel
35	720-04096	Knob
36	732-04650	Wave Spring
37	749-04550	Upper Handle
38	736-0242	Washer, Bell, .340 x .872 x .060
39	720-0279	Knob
40	725-0157	Cable Tie

Ref No.	Part Number	Description
41	710-1205	Rope Guide
42	710-0779A	Screw, #10-16 x .500
43	746-04523	Control Cable
44	747-05045	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-06190	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04338C	Spring Lever
50	726-0101	Nut, Spd
51	736-04413	Wshr, Wave, .385 ID x .598 OD
52	954-04158	V-Belt
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307-0637	Cross Bracket
56	738-04278	Scr., Shldr., 1/4-20 x .50
57	731-06974	Wheel Dust Cover
58	946-04519B	Drive Cable
59	735-04059	Grommet
60	747-05047A	Drive Control
61	918-04463A	Transmission
62	710-04531	Screw, 1/4-20 x .390
63	915-0221	Dowel Pin
64	716-0198	Retainer Ring
65	917-04192C	Spur Gear - RH
	917-04184C	Spur Gear - LH
66	731-05872	Spacer, Clip
67	731-06164	Engine Baffle
68	932-04262	Exten. Spring, .429OD x 2.515
69	748-0390	Bearing Support Spacer
70	750-04870	Sleeve Spacer, .550ID x .340 Lg.
71	750-04853	Sleeve Spacer, .550ID x 7.97 Lg.
72	725-04329	Battery Charger
73	925-04072	Electric Start Harness Assembly
74	925-04347	Key Switch
75	710-1667A	Screw, #10-16 x .750
76	925-0201	Key
77	925-04323	Battery
78	728-0199	Rivet
79	936-0504	Washer, Wave, .510 x .750 x .017


Model CC 550 SP

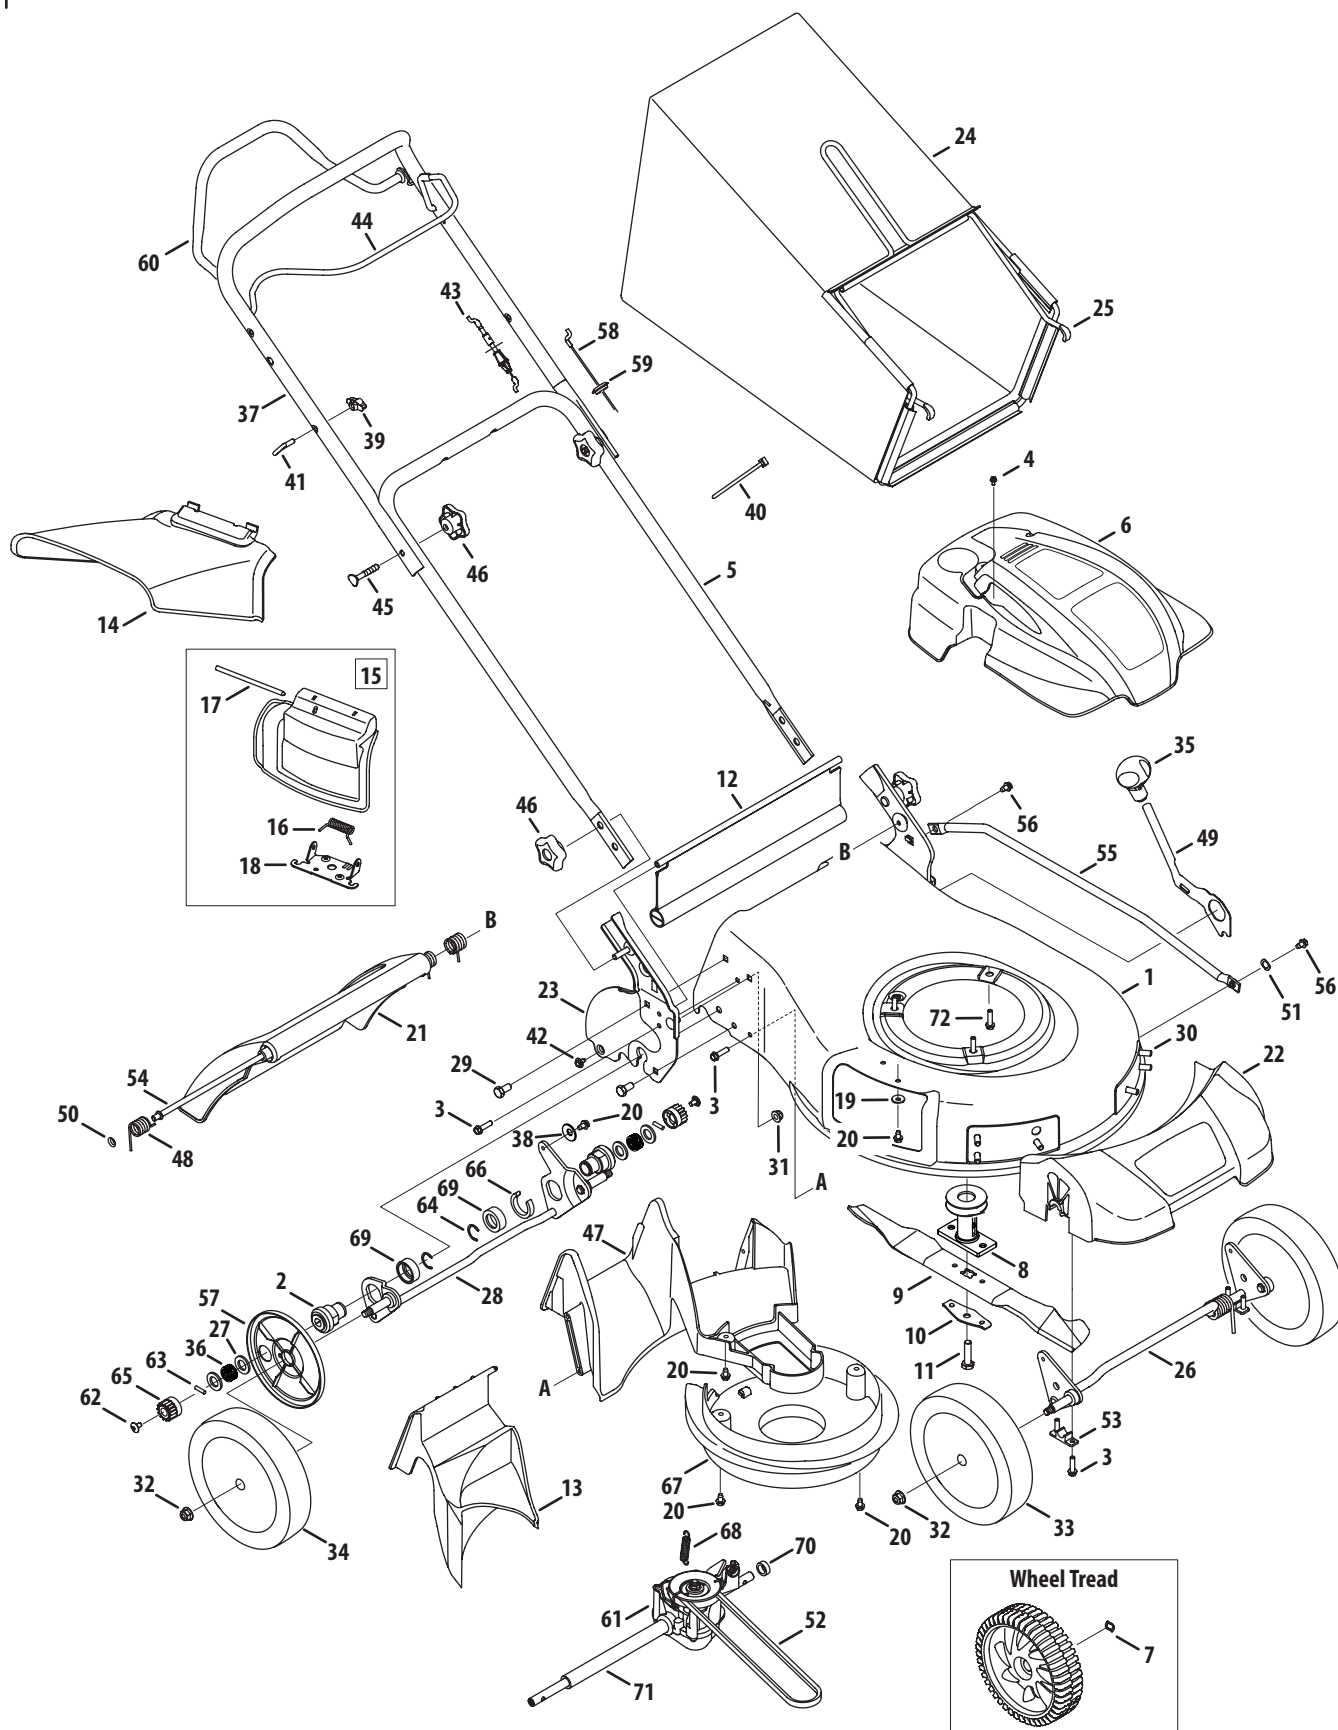

Ref No.	Part Number	Description
1	787-01629-4021	19" Deck
2	687-02415	Transmission Support Bearing
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04232B	Engine Shroud
7	936-0504	Washer, Wave, .510 x .750 x .017
8	687-02555	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710	Hinge Pin
18	17032A	Chute Deflector Adapter
19	736-0270	Belleville Washer
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05673	Front Cover
23	687-02323-0637	Handle Bracket - RH
	687-02322-0637	Handle Bracket - LH
24	964-04066	Grass Bag
25	647-04082-0637	Grass Bag Frame
26	687-02225-0637	Front Bracket Assembly
27	936-0369	Washer, Flat, .508 x 1.00 x .020
28	687-02304-0637	Self Propelled Bracket Ass'y
29	710-3025	Hhcs, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	934-04348	Rear Wheel
35	720-04096	Knob
36	732-04650	Wave Spring
37	749-04550	Upper Handle

Ref No.	Part Number	Description
38	736-0242	Washer, Bell, .340 x .872 x .060
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	710-0779A	Screw, #10-16 x .500
43	946-04637	Control Cable
44	747-05045	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-06190	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04338C	Spring Lever
50	726-0101	Nut, Spd
51	736-04413	Wshr, Wave, .385 ID x .598 OD
52	954-04158	V-Belt
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307-0637	Cross Bracket
56	738-04278	Scr., Shldr., 1/4-20 x .50
57	731-06974	Wheel Dust Cover
58	946-04519B	Drive Cable
59	735-04059	Grommet
60	747-05047A	Drive Control
61	918-04463A	Transmission
62	710-04531	Screw, 1/4-20 x .390
63	915-0221	Dowel Pin
64	716-0198	Retainer Ring
65	917-04192C	Spur Gear - RH
	917-04184C	Spur Gear - LH
66	731-05872	Spacer, Clip
67	731-06164	Engine Baffle
68	932-04262	Exten. Spring, .429OD x 2.515
69	748-0390	Bearing Support Spacer
70	750-04870	Sleeve Spacer, .550ID x .340 Lg.
71	750-04853	Sleeve Spacer, .550ID x 7.97 Lg.
72	710-0654A	Screw, 3/8-16 x 1.00

Model CC 46 ES (Briggs & Stratton Engine)

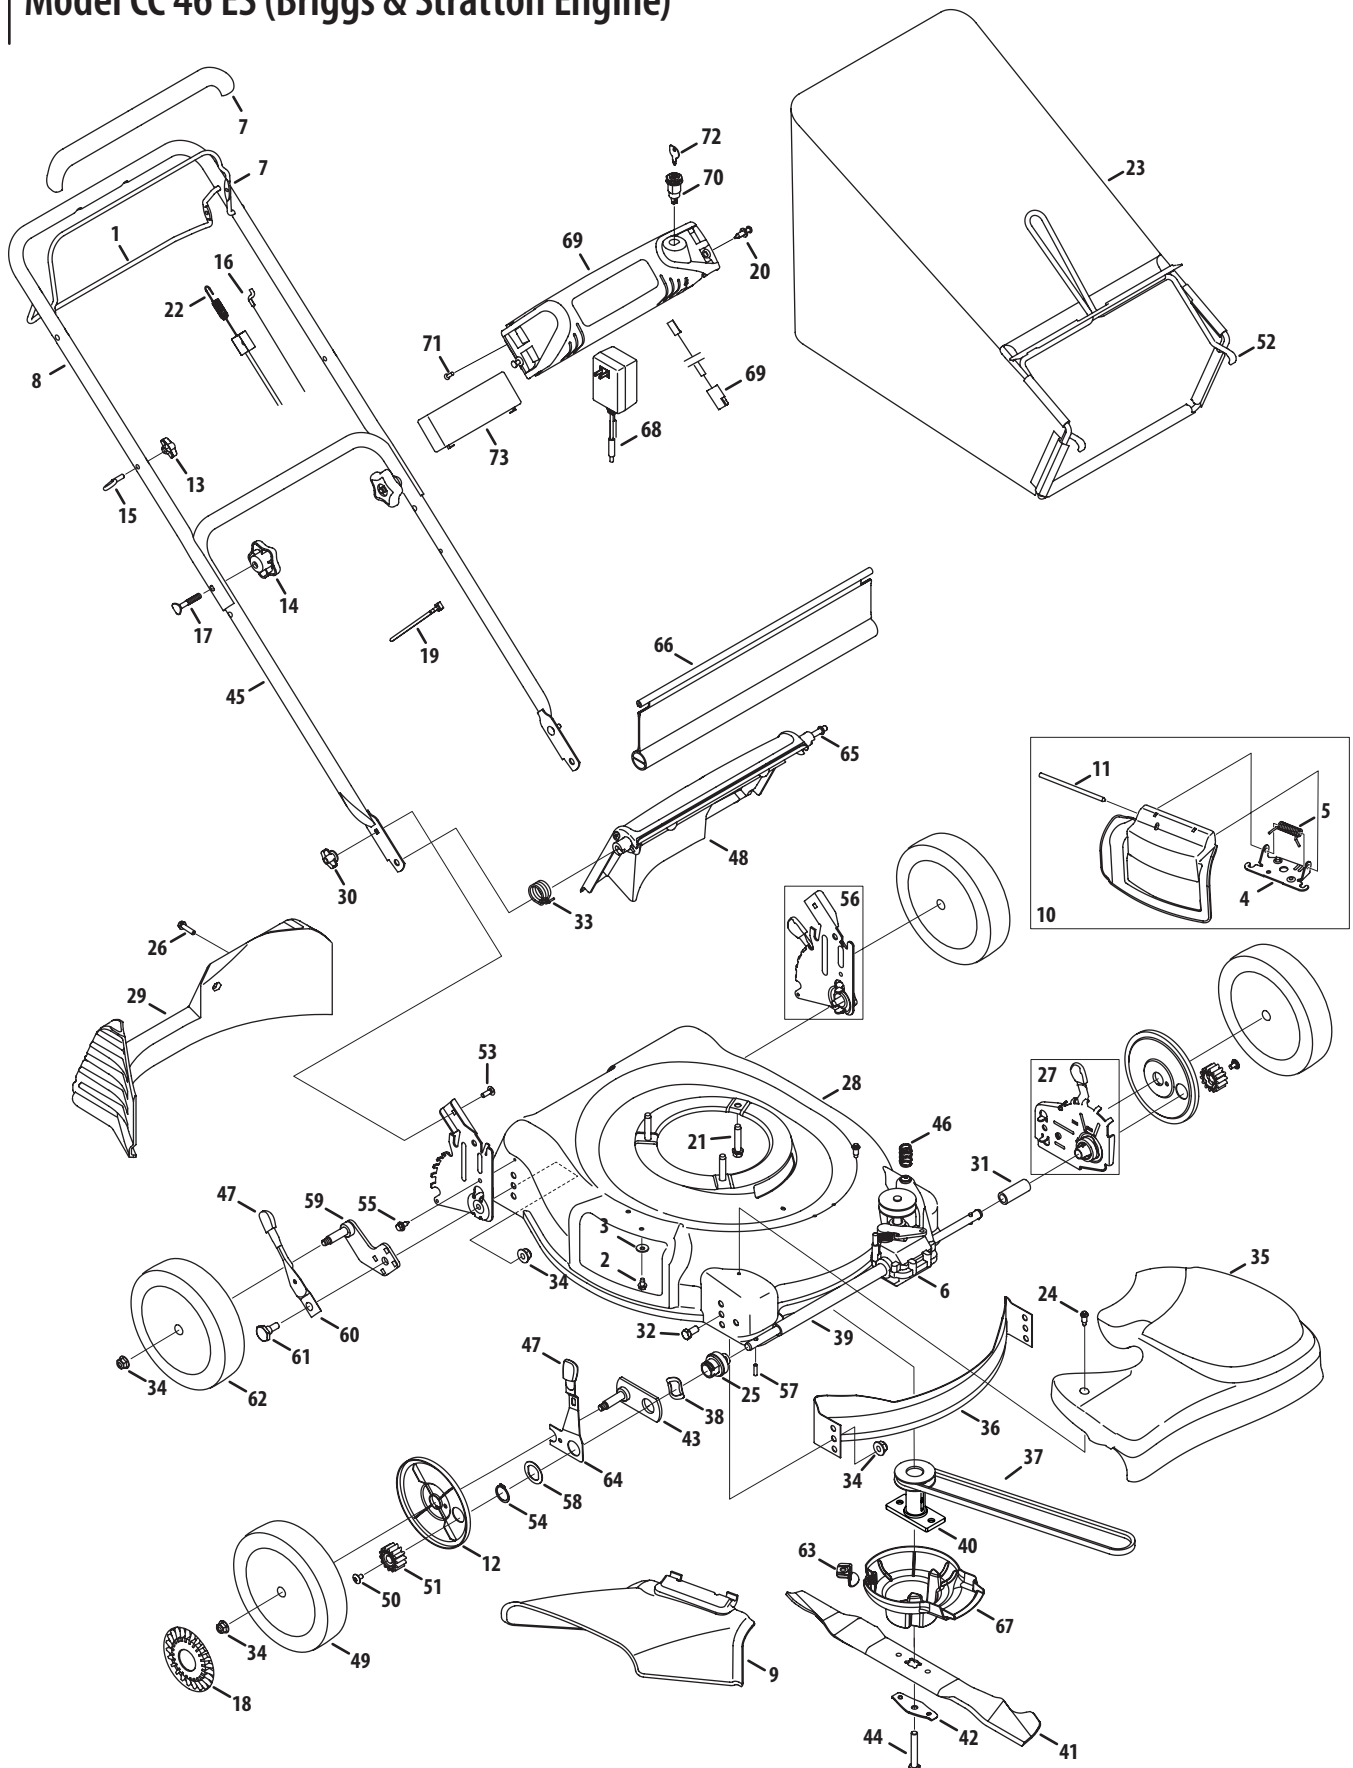


Model CC 46 ES (Briggs & Stratton Engine)

Ref No.	Part Number	Description
1	747-1214	Drive Control
2	710-0599	TT Screw 1/4-20 x 0.5
3	736-0270	Bell Washer.265 x 0.75
4	17032A	Deflector Chute Adapter
5	732-1014	Torsion Spring
6	918-04376B	Transmission Assembly
7	647-04008	Blade Control Assembly
8	749-04726-0637	Upper Handle
9	731-04177	Chute Deflector
10	987-02055	Mulch Plug Complete
11	747-0710	Hinge Pin
12	782-7551A	Wheel Dust Cap
13	720-0279	Handle Knob
14	720-04072A	Star Knob
15	710-1205	Eye Bolt
16	746-1132	Control Cable
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	731-07048	Hub Cap
19	926-0240	Cable Tie
20	728-0199	Rivet
21	710-0654A	Self-Tapping Sems Screw
22	946-04303	Drive Cable (190 CC)
	946-04203	Drive Cable (175 CC)
23	964-04054	Grass Bag
24	710-1650	Shoulder Screw # 12 -24
25	987-02347	Front Bearing Assembly
26	710-1241	Screw, 1/4-15 x 1.000
27	987-02194A	Height Adjustment Ass'y - RH
	987-02193A	Height Adjustment Ass'y - LH
28	787-01278-4021	21" Deck
29	731-04150C	Rear Baffle
30	912-0397	Wing Nut
31	750-04595	Slev. Spacer 1.4" Lg.
32	710-0216	Hex Screw, 3/8-16 x.75
33	732-04090A	Torsion Spring - RH
34	712-04065	Flange Lock Nut, 3/8-16
35	931-05013A	Transmission Cover
36	782-5002B	Front Baffle
37	954-0637A	V-Belt
38	936-0447	Wave Washer

Ref No.	Part Number	Description
39	750-04594	Sleeve Spacer 8.985" Lg.
40	687-02195A	Blade Adapter (190 CC)
	687-02221	Blade Adapter (175 CC)
41	942-0741A	21" Mulching Blade
42	736-0524B	Blade Bell Support
43	987-02334	Pivot Plate Assembly
44	710-1257	Hex Screw 3/8-24 x 2.50
45	749-0928A-0637	Lower Handle
46	732-1043	Belt Tension Spring
47	720-0426	Adjustment Knob
48	731-06847	Rear Discharge Door
49	734-04223A	Front Wheel
50	710-04531	Screw, 1/4-20 x .390
51	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
52	747-04080A-0637	Grass Bag Frame
53	710-0703	Carriage Bolt 1/4-20
54	916-0102	Snap Ring
55	710-1652	TT Scr. w/Washer 1/4-20 x.625
56	987-02271A	Handle Bracket Assembly - RH
	987-02270A	Handle Bracket Assembly - LH
57	915-0221	Dowel Pin
58	736-0474	Washer
59	987-02333	Pivot Arm Assembly - RH
	987-02332	Pivot Arm Assembly - LH
60	732-04175	Rear Spring Lever
61	738-04266	Shoulder Scr.500 Dia. x.434
62	734-04226A	Rear Wheel
63	787-01593	Engine Baffle Bracket
64	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
65	747-04587	Pivot Rod
66	731-05642A	Rear Trailing Shield
67	753-06116	Engine Baffle
68	725-04329	Battery Charger
69	925-04072	Electric Start Harness Ass'y.
70	925-04347	Key Switch
71	710-1667A	Screw, #10-16 x .750
72	925-0201	Key
73	925-04323	Battery

Model CC 46 ES (MTD Engine)

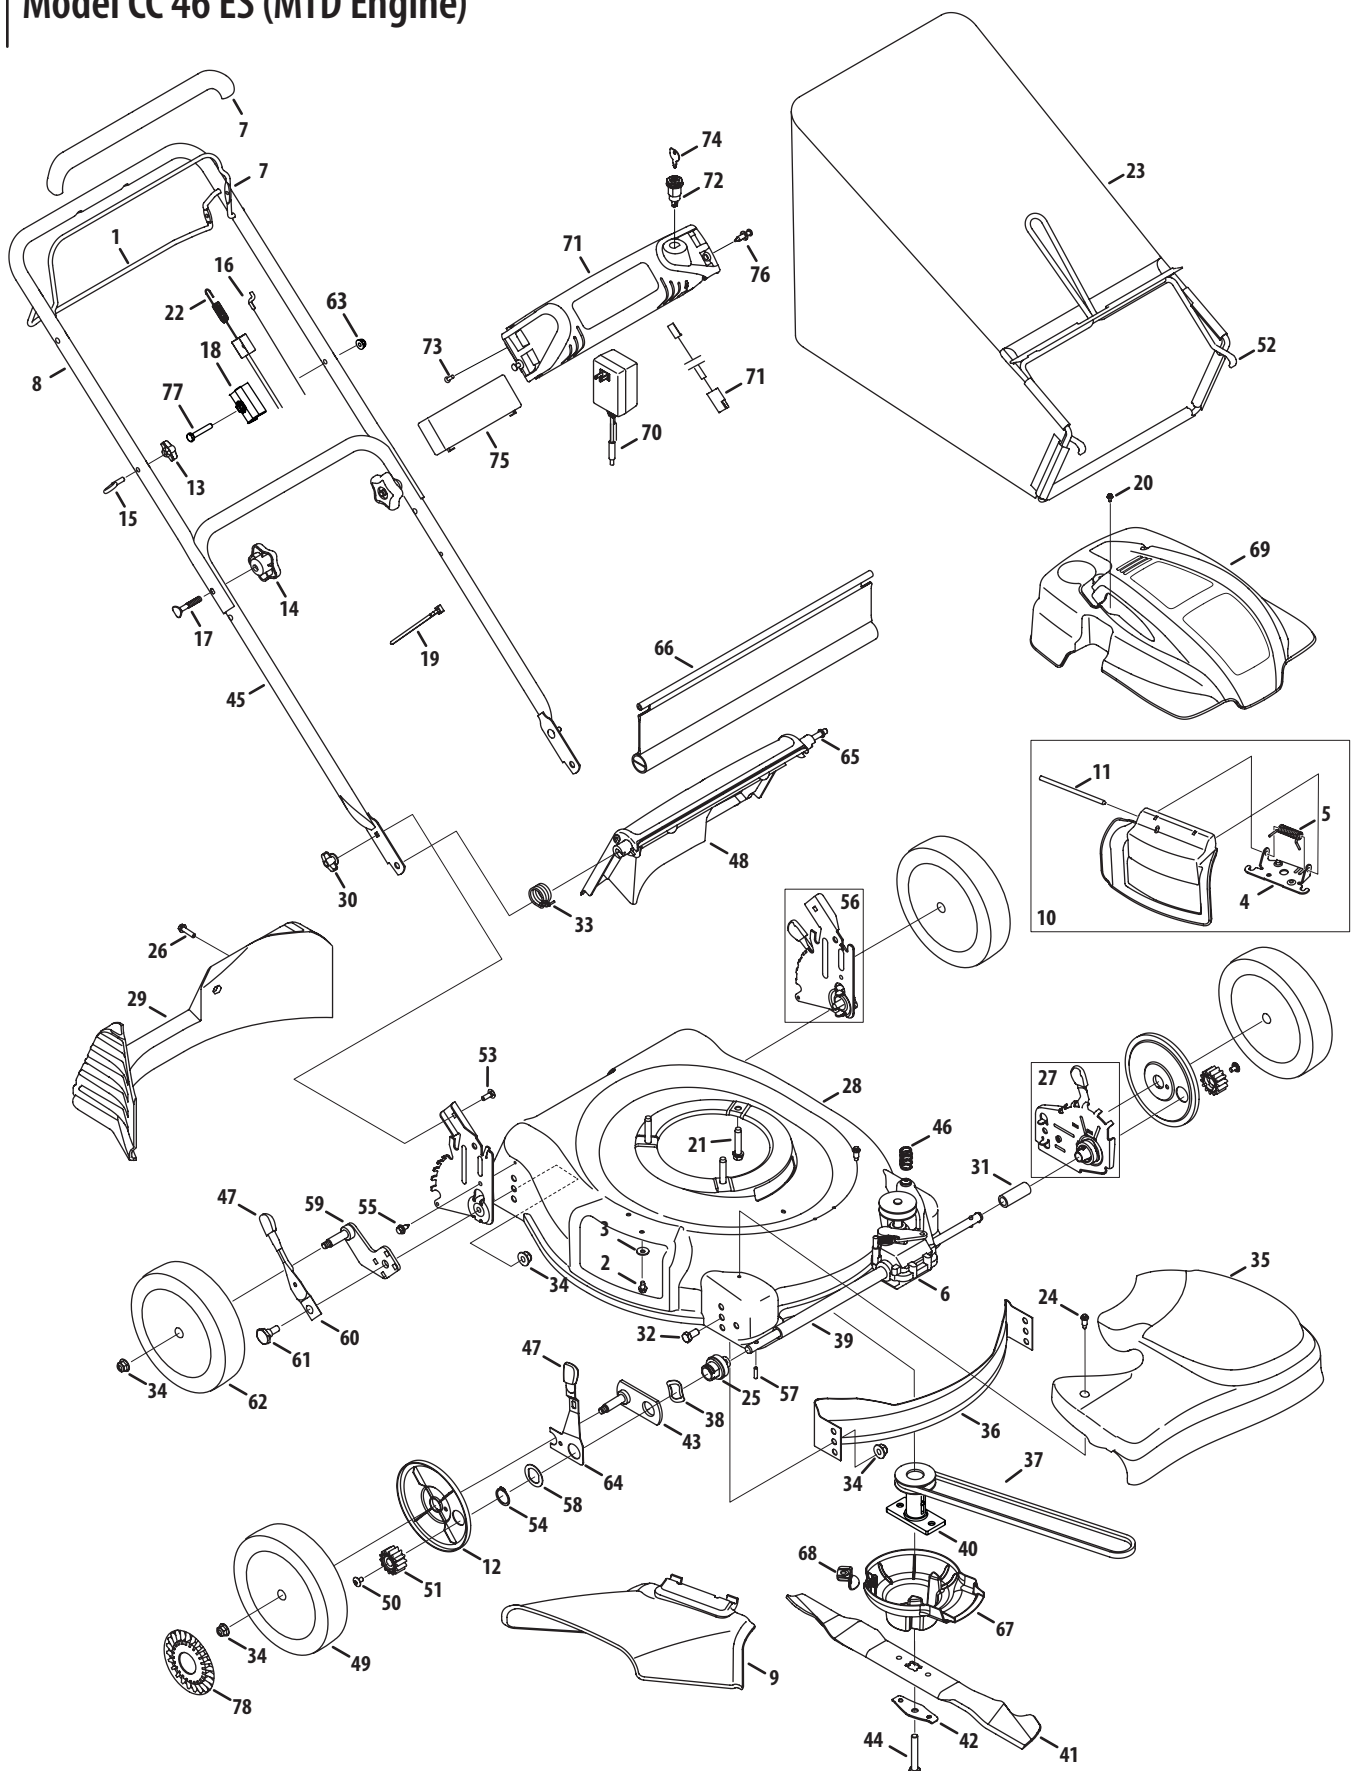


Model CC 46 ES (MTD Engine)

Ref No.	Part Number	Description
1	747-1214	Drive Control
2	710-0599	TT Screw 1/4-20 x 0.5
3	736-0270	Bell Washer.265 x 0.75
4	17032A	Deflector Chute Adapter
5	732-1014	Torsion Spring
6	918-04376B	Transmission Assembly
7	647-04008	Blade Control Assembly
8	749-1233D-0637	Upper Handle
9	731-04177	Chute Deflector
10	987-02055	Mulch Plug Complete
11	747-0710	Hinge Pin
12	782-7551A	Wheel Dust Cap
13	720-0279	Handle Knob
14	720-04072A	Star Knob
15	710-1205	Eye Bolt
16	946-04589	Control Cable
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	731-06749	Control Cable Mount
19	926-0240	Cable Tie
20	710-04744	Screw, HL, #12-16 x 1.00
21	710-0654A	Self-Tapping Sems Screw
22	946-04303	Drive Cable
23	964-04054	Grass Bag
24	710-1650	Shoulder Screw # 12 -24
25	987-02347	Front Bearing Assembly
26	710-1241	Screw, 1/4-15 x 1.000
27	987-02194A	Height Adjustment Ass'y - RH
	987-02193A	Height Adjustment Ass'y - LH
28	787-01278-4021	21" Deck
29	731-04150C	Rear Baffle
30	912-0397	Wing Nut
31	750-04595	Slev. Spacer 1.4" Lg.
32	710-0216	Hex Screw, 3/8-16 x.75
33	732-04090A	Torsion Spring - RH
34	712-04065	Flange Lock Nut, 3/8-16
35	931-05013A	Transmission Cover
36	782-5002B	Front Baffle
37	954-0637A	V-Belt
38	936-0447	Wave Washer
39	750-04594	Sleeve Spacer 8.985" Lg.
40	687-02195A	One Piece Blade Adapter
41	942-0741A	21" Mulching Blade

Ref No.	Part Number	Description
42	736-0524B	Blade Bell Support
43	987-02334	Pivot Plate Assembly
44	710-1257	Hex Screw 3/8-24 x 2.50
45	749-0928A-0637	Lower Handle
46	732-1043	Belt Tension Spring
47	720-0426	Adjustment Knob
48	731-06847	Rear Discharge Door
49	734-04223A	Front Wheel
50	710-04531	Screw, 1/4-20 x .390
51	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
52	747-04080A-0637	Grass Bag Frame
53	710-0703	Carriage Bolt 1/4-20
54	916-0102	Snap Ring
55	710-1652	TT Scr. w/Washer 1/4-20 x.625
56	987-02271A	Handle Bracket Assembly - RH
	987-02270A	Handle Bracket Assembly - LH
57	915-0221	Dowel Pin
58	736-0474	Washer
59	987-02333	Pivot Arm Assembly - RH
	987-02332	Pivot Arm Assembly - LH
60	732-04175	Rear Spring Lever
61	738-04266	Shoulder Scr.500 Dia. x.434
62	734-04226A	Rear Wheel
63	712-04064	Nut, FlgIk, 1/4-20
64	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
65	747-04587	Pivot Rod
66	731-05642A	Rear Trailing Shield
67	931-04232B	Engine Baffle
68	787-01593	Engine Baffle Bracket
69	731-05401	Engine Shroud
70	725-04329	Battery Charger
	791-182534†	Battery Charger (w/LED Light)
71	925-04072	Electric Start Harness Assembly
72	925-04347	Key Switch
73	710-1667A	Screw, #10-16 x .750
74	925-0201	Key
75	925-04323	Battery
76	728-0199	Rivet
77	710-0606	Screw, 1/4-20 x 1.50
78	731-07048	Hub Cap

† If Equipped


Model CC 94M

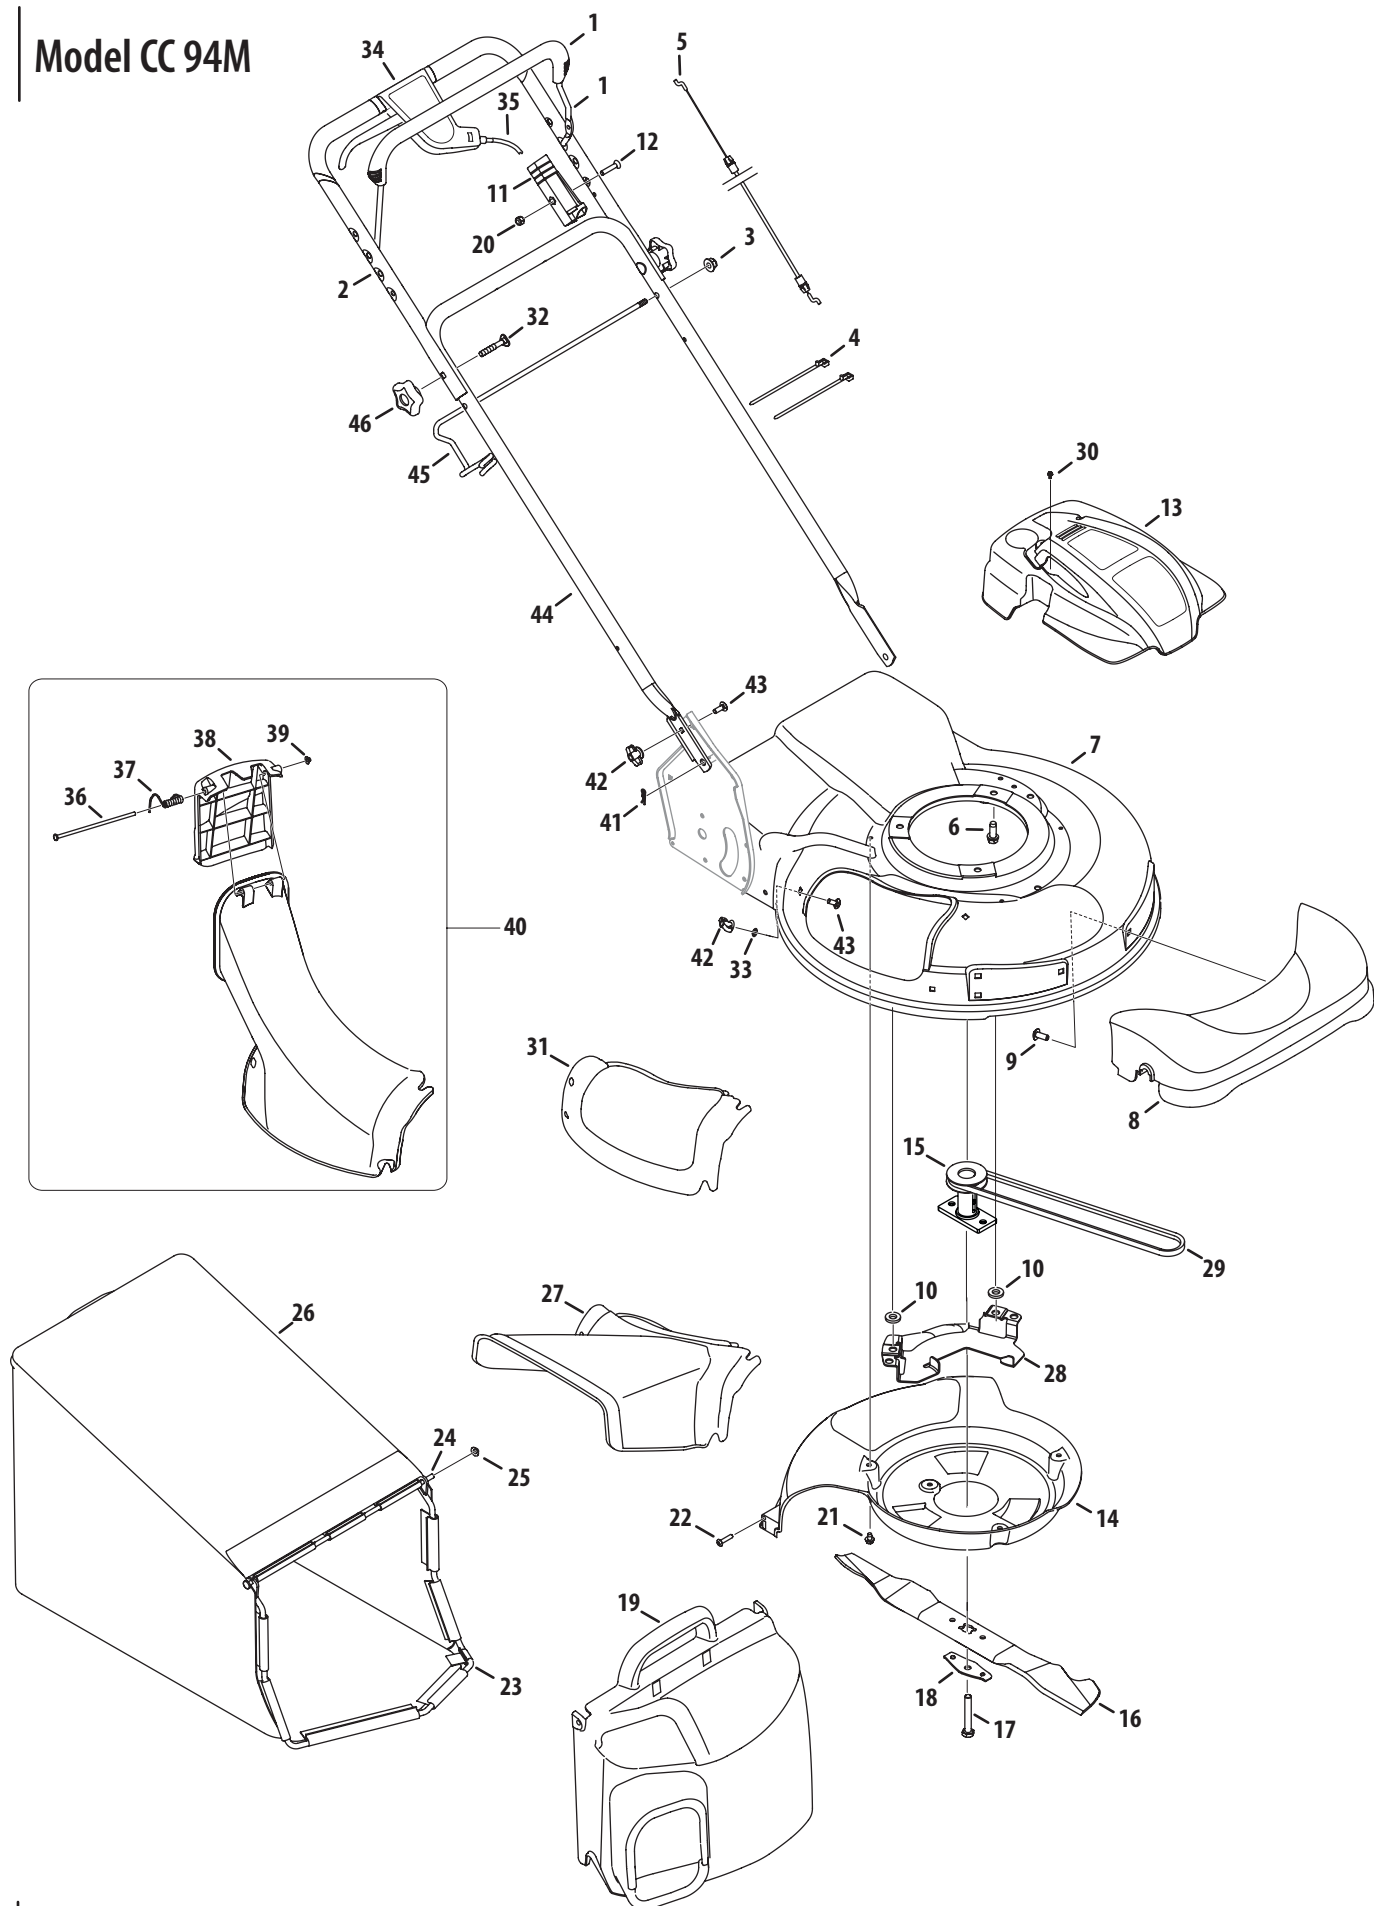

Ref No.	Part Number	Description
1	647-04008	Blade Control Assembly
2	749-0439E-0637	Upper Handle
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	746-04532	Control Cable
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	782-0078B-4021	21-inch Deck
8	731-1836	Front Axle Cover
9	710-1242	HL Screw, 5/16-14 x .750
10	736-3010	Washer, Flat, .407 x .812 x .135
11	731-06749	Control Cable Mount
12	710-0606	Screw, 1/4-20 x 1.50
13	931-04232B	Engine Shroud
14	731-1828	Rear Baffle
15	687-02195A	Blade Adapter
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-04064	Flange Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375
22	710-0895	HL Screw 1/4-15 x .75
23	747-0937-0637	Grass Bag Frame

Ref No.	Part Number	Description
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	964-04112	Grass Bag
27	731-1832	Side Discharge Chute
28	782-9063A-0637	Belt Keeper
29	954-0460	V-Belt
30	710-04744	Screw, #12-16 x 1.00
31	931-1833A	Mulch Cover
32	710-1174	Carriage Bolt 5/16-18 x 2
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	946-0711B	Drive Cable
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut
43	710-0703	Carriage Screw 1/4-20 x .75
44	749-0907B	Lower Handle
45	747-0940A-0637	Grass Bag Support Rod
46	720-04072A	Star Knob


Model CC 94M

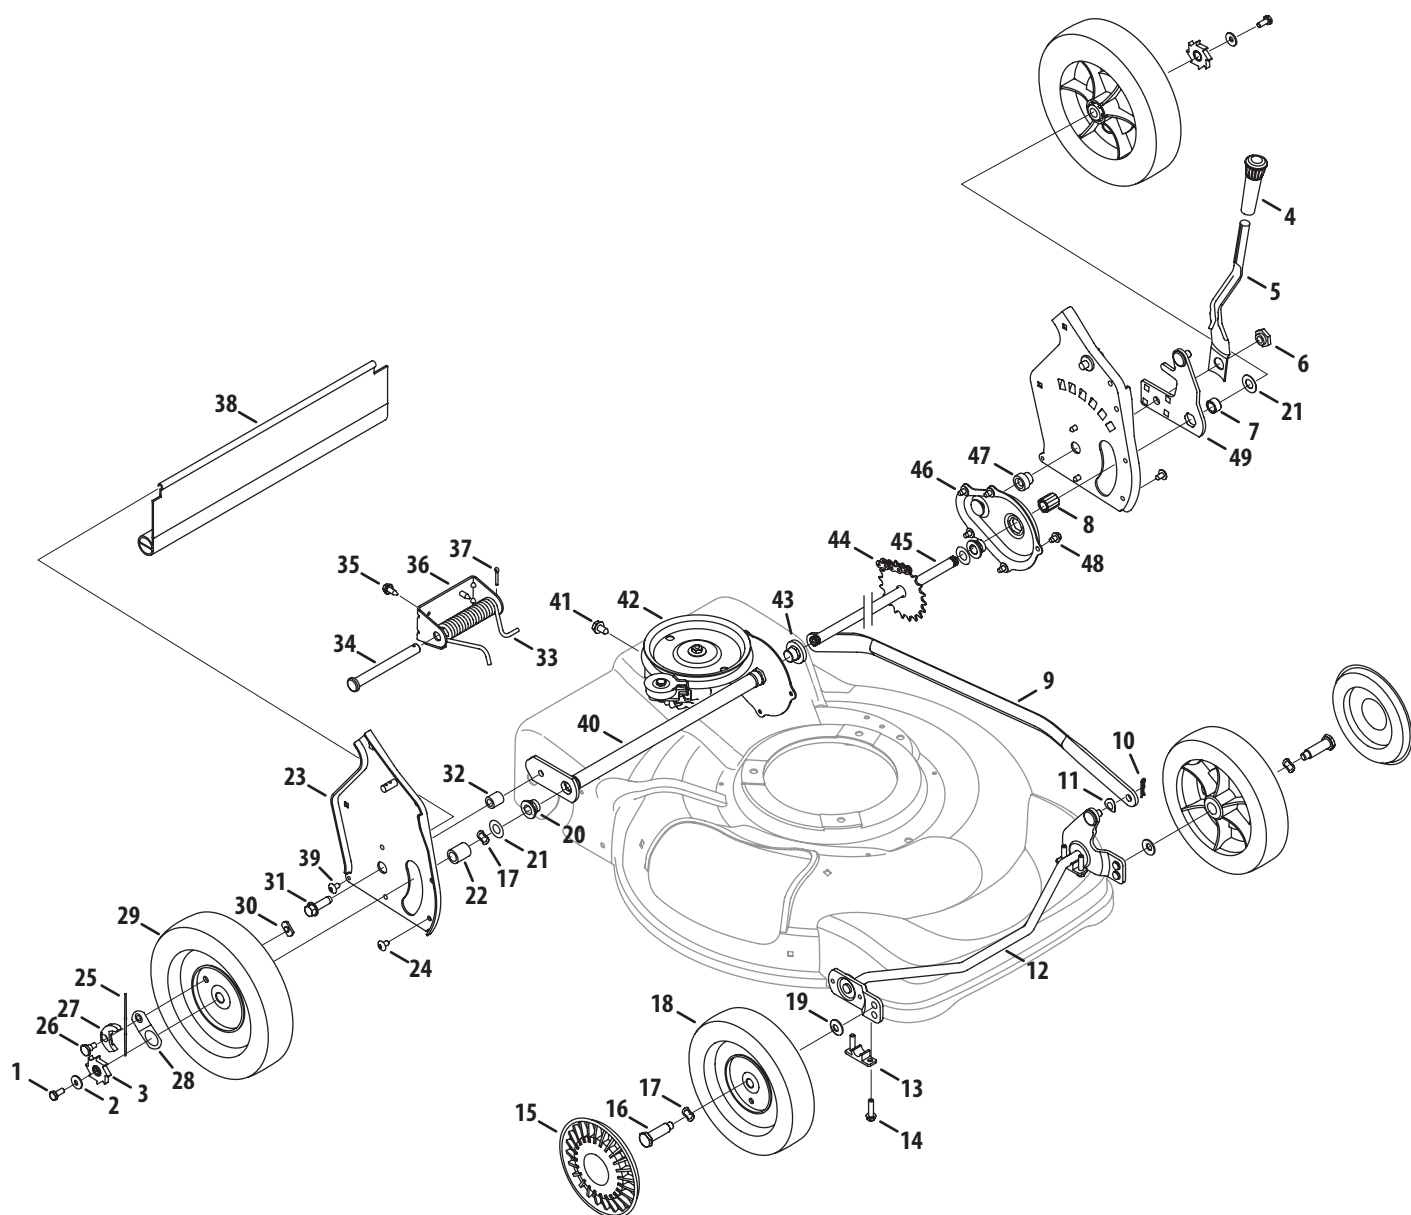

Ref No.	Part Number	Description
1	710-0751	HH Cap Screw 1/4-20 x .620
2	736-0270	Bell Washer .265 x .75 x .062
3	948-0318	Wheel Ratchet
4	720-0223	Grip
5	732-0803A	Spring Lever
6	938-0529	Shoulder Nut
7	750-0515	Spacer .51 x .70 x .38
8	741-0978	Hex Sleeve Bearing
9	782-0565-0637	Single Lever Control Arm
10	914-0104	Hairpin Clip
11	936-0286	Bowed Washer
12	611-0064-0637	Front Axle Assembly
13	741-0492A	Block Bushing
14	710-1241	Hex Screw 1/4-15 x 1
15	731-07048	Hubcap
16	938-0102	Shoulder Scr., .498x1.445x3/8-16
17	936-0504	Wave Washer .510 x .750 x .017
18	734-04226A	Front Wheel 8 x 2.125 COG
19	736-0105	Bell Washer .375 x .870 x .063
20	741-0324A	Hex Flange Bearing
21	936-0369	Flat Washer .508 x 1 x .020
22	950-0151	Spacer .550 x .755 x 1.1
23	687-02494-0637	Handle Bracket Assy RH
	687-02495-0637	Handle Bracket Assy LH
24	710-1348	AB Screw 1/4-14 x .50
25	10622BP	Plastic Ratchet Spring


Ref No.	Part Number	Description
26	938-0137A	Shoulder Scr., .340x.285x1/4-20
27	748-0381	Pawl - RH
	948-0188B	Pawl - LH
28	16855	Ratchet Pawl Plate
29	734-2010A	Rear Wheel 9 x 2.125 Rwd PM
30	912-0414	Weld Nut
31	710-1315	TT Screw 3/8-16 x 1.25
32	750-0807	Spacer .385 x .625 x .700
33	732-0832	Torsion Spring RH
34	911-0835	Clevis Pin .500 x 4.62
35	710-1652	TT Screw 1/4-20 x .625
36	782-0568-0637	Lift Assist Spring Bracket
37	914-0474	Cotter Pin
38	731-06874	Trail shield
39	710-0779A	AB Screw, #10-16 x .500
40	682-7526-0637	Transmission Axle Assembly
41	710-0604A	TT Screw 5/16-18 x .625
42	918-0263A	Transmission
43	941-0522	Hex Flange Bearing
44	913-0453	Chain
45	938-0012	Axle Assembly RR
46	682-7528-0637	Chain Cover Assembly
47	950-1056	Shoulder Spacer .385 x .715
48	710-0653	TT Screw, 1/4-20 x .375
49	682-0531-0637	RR Pivot Arm Assembly

Model CC 98H

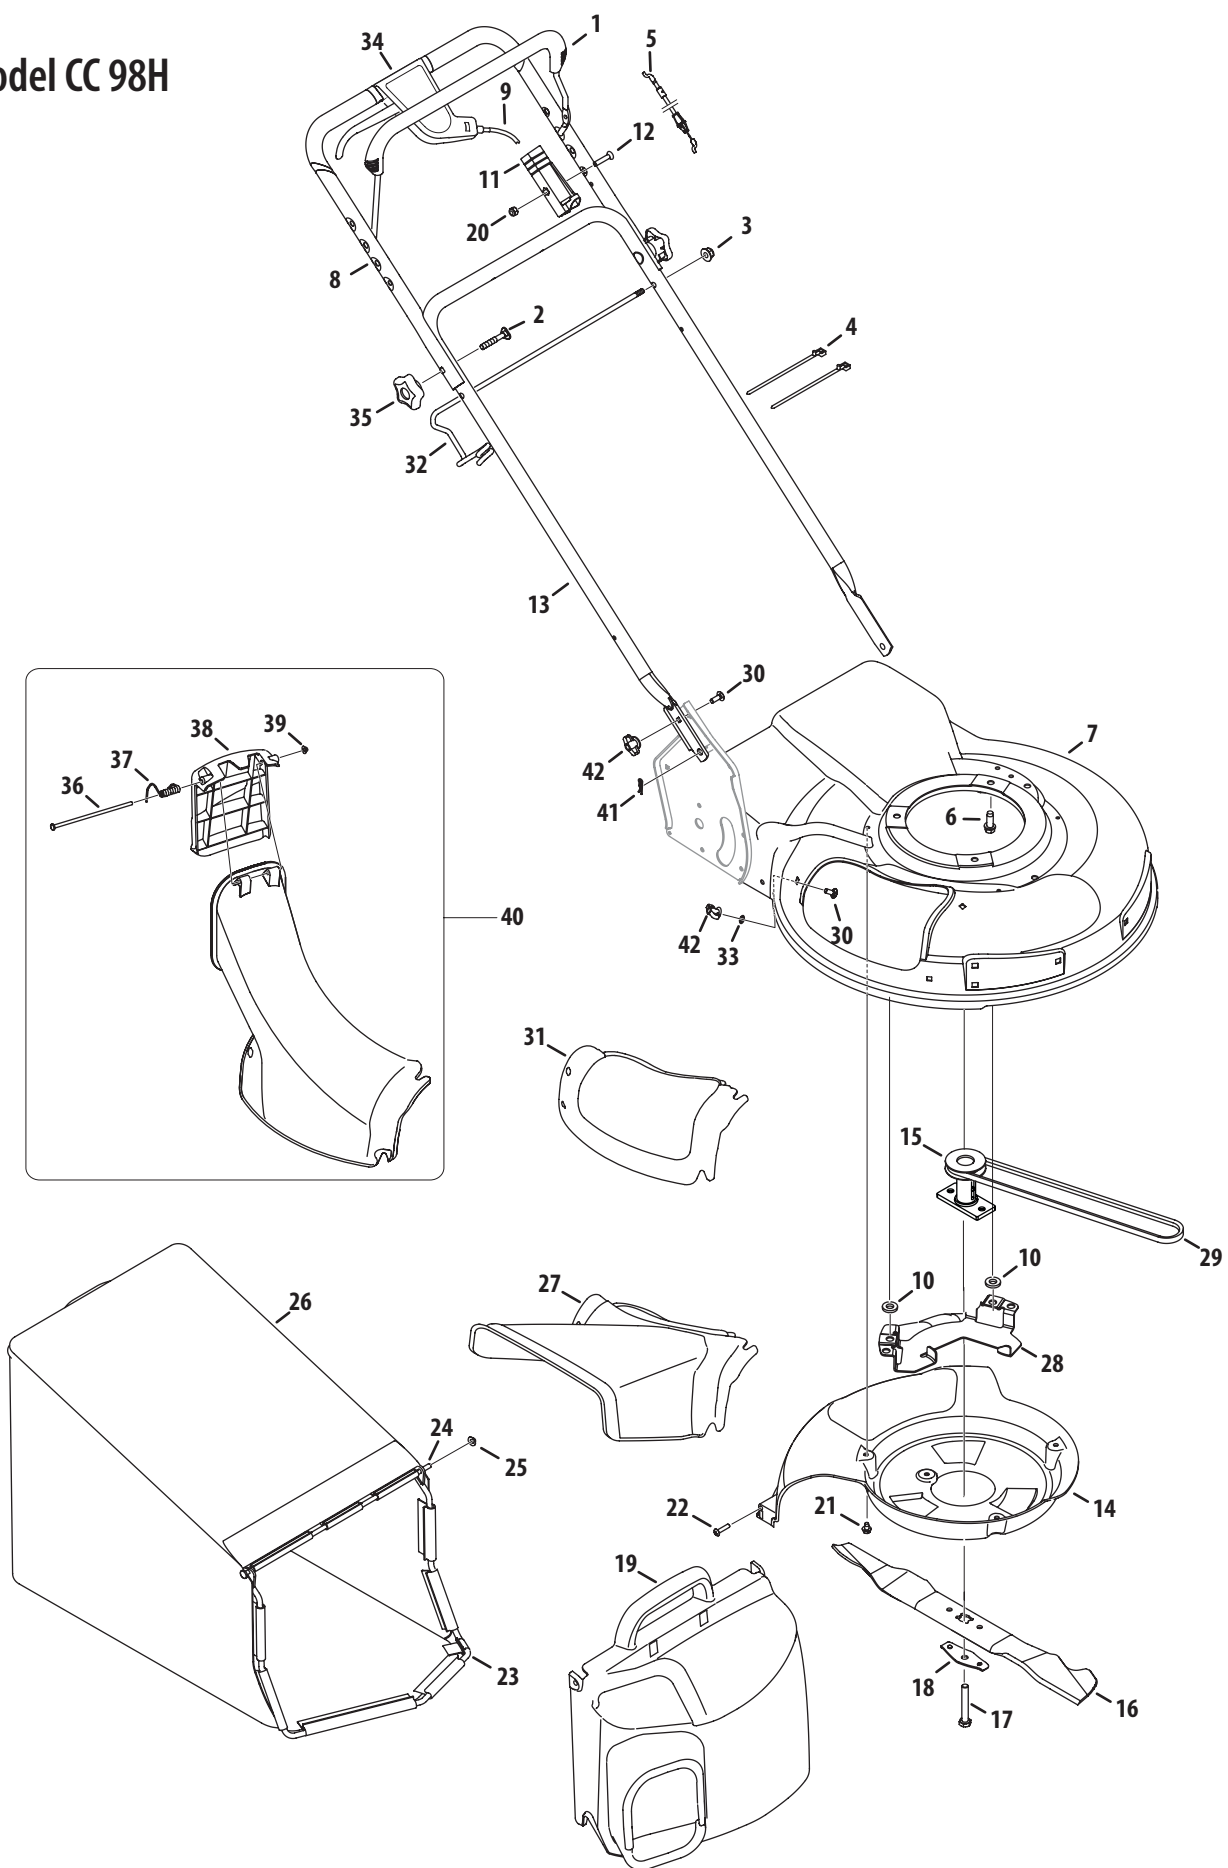

Ref No.	Part Number	Description
1	647-04008	Blade Control
2	710-1174	Carriage Bolt 5/16-18 x 2
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	746-0557	Control Cable
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	782-0078B-4021	21-inch Deck
8	749-0439E-0637	Upper Handle
9	946-0711B	Drive Cable
10	736-3010	Washer, Flat, .407 x .812 x .135
11	746-0883	Control Cable Mount
12	710-1270	Screw, 1/4-20 x 1.310
13	749-0907B	Lower Handle
14	731-1828	Rear Baffle
15	987-02221	Blade Adapter
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-0324	Hex Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375


Ref No.	Part Number	Description
22	710-0895	HL Screw 1/4-15 x .75
23	747-0937-0637	Grass Bag Frame
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	964-04112	Grass Bag
27	731-1832	Side Discharge Chute
28	782-9063A-0637	Belt Keeper
29	954-0460	V-Belt
30	710-0703	Carriage Screw 1/4-20 x .75
31	931-1833A	Mulch Cover
32	747-0940A-0637	Grass Bag Support Rod
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	720-04072A	Star Knob
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut

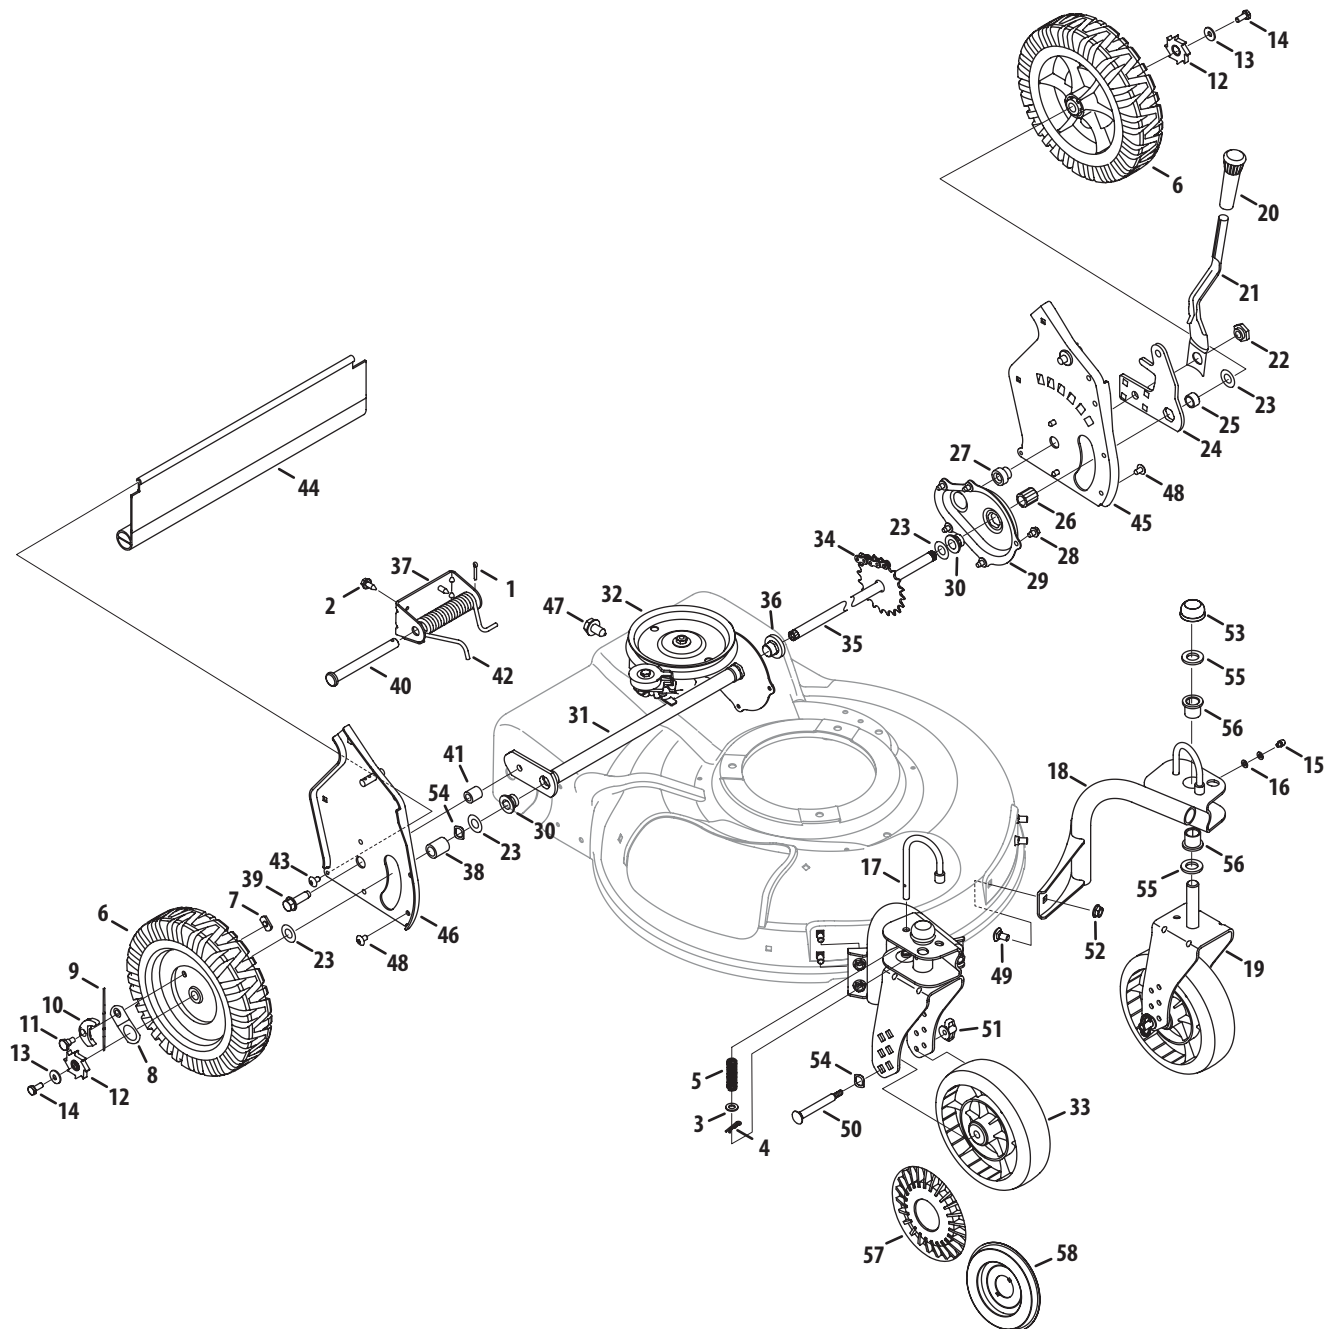

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2010A	Wheel, 9 x 2.125 Bar
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	937-3000	Grease Fitting
16	736-0931	Flat Washer.203 ID x.403 OD
17	747-0924	Wheel Pin Lock
18	682-9020A-4021	Caster Assembly RH
	682-9021A-4021	Caster Assembly LH
19	682-9024-4021	Caster Bracket Assembly RH
	682-9026-4021	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B-0637	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg
28	710-0653	Tap Screw 1/4-20 x .375

Ref No.	Part Number	Description
29	682-7528-0637	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526-0637	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568-0637	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495-4021	Handle Bracket Assembly - LH
46	687-02494-4021	Handle Bracket Assembly - RH
47	710-0604A	Screw, 5/16-18 x .625
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0232	Wave Washer.531 ID x.781 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1888	Hubcap - Spoke w/ Hole
58	731-07048	Hubcap - Radial Spoke

Model CC 98M

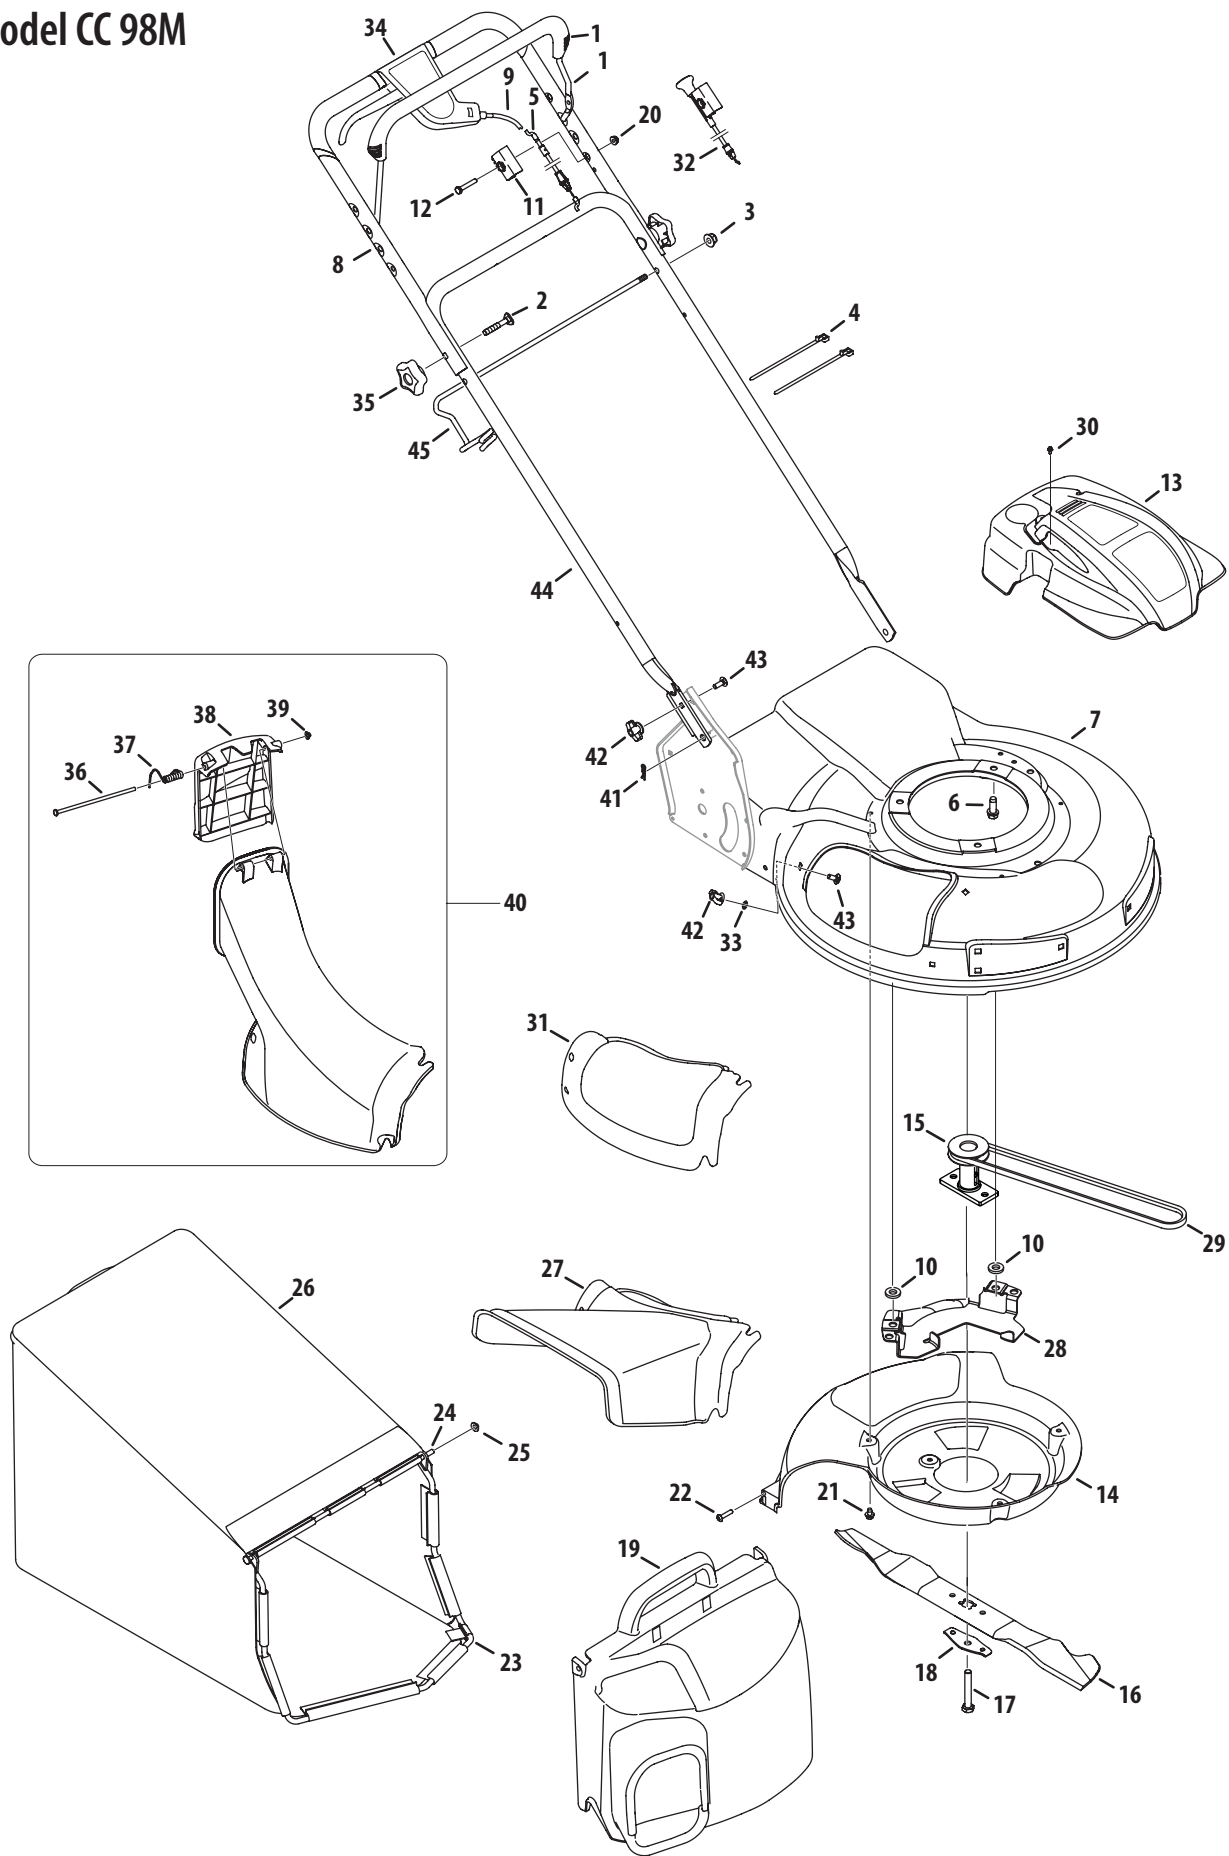

Ref No.	Part Number	Description
1	647-04008	Blade Control Assembly
2	710-1174	Carriage Bolt 5/16-18 x 2
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	746-04532	Control Cable
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	782-0078B-4021	21-inch Deck
8	749-0439E-0637	Upper Handle
9	946-0711B	Drive Cable
10	736-3010	Washer, Flat, .407 x .812 x .135
11	731-06749†	Control Cable Mount
12	710-0606	Screw, 1/4-20 x 1.50
13	931-04232B†	Engine Shroud
14	731-1828	Rear Baffle
15	687-02195A	Blade Adapter
	687-02221	Blade Adapter - Kohler
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-04064	Flange Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375
22	710-0895	HL Screw 1/4-15 x .75

Ref No.	Part Number	Description
23	747-0937-0637	Grass Bag Frame
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	964-04112	Grass Bag Assembly
27	731-1832	Side Discharge Chute
28	782-9063A-0637	Belt Keeper
29	954-0460	V-Belt
30	710-04744†	Screw, #12-16 x 1.00
31	931-1833A	Mulch Cover
32	946-04430A†	Choke Cable
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	720-04072A	Star Knob
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut
43	710-0703	Carriage Screw 1/4-20 x .75
44	749-0907B	Lower Handle
45	747-0940A-0637	Grass Bag Support Rod


† If Equipped

This diagram illustrates the exploded view of a mechanical assembly, likely a small engine or pump. The central component is a large, circular housing (31) with a central shaft (32) and a pulley (33). Various sub-assemblies are shown around it, including a front wheel (6) with a tire, a rear wheel (19) with a tire, and a handle (44). The diagram includes numerous numbered callouts (1-58) identifying individual parts such as bolts, nuts, washers, gears, and structural components. The assembly is shown in a disassembled state to highlight the relationship between the various parts.

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2010A	Wheel, 9 x 2.125 Bar
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	937-3000	Grease Fitting
16	736-0931	Flat Washer.203 ID x.403 OD
17	747-0924	Wheel Pin Lock
18	682-9020A-4021	Caster Assembly RH
	682-9021A-4021	Caster Assembly LH
19	682-9024-4021	Caster Bracket Assembly RH
	682-9026-4021	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B-0637	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg
28	710-0653	Tap Screw 1/4-20 x .375

Ref No.	Part Number	Description
29	682-7528-0637	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526-0637	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568-0637	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495-4021	Handle Bracket Assembly - LH
46	687-02494-4021	Handle Bracket Assembly - RH
47	710-0604A	Screw, 5/16-18 x .625
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0232	Wave Washer.531 ID x.781 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1888	Hubcap - Spoke w/ Hole
58	731-07048	Hubcap - Radial Spoke

Model CC 999 ES

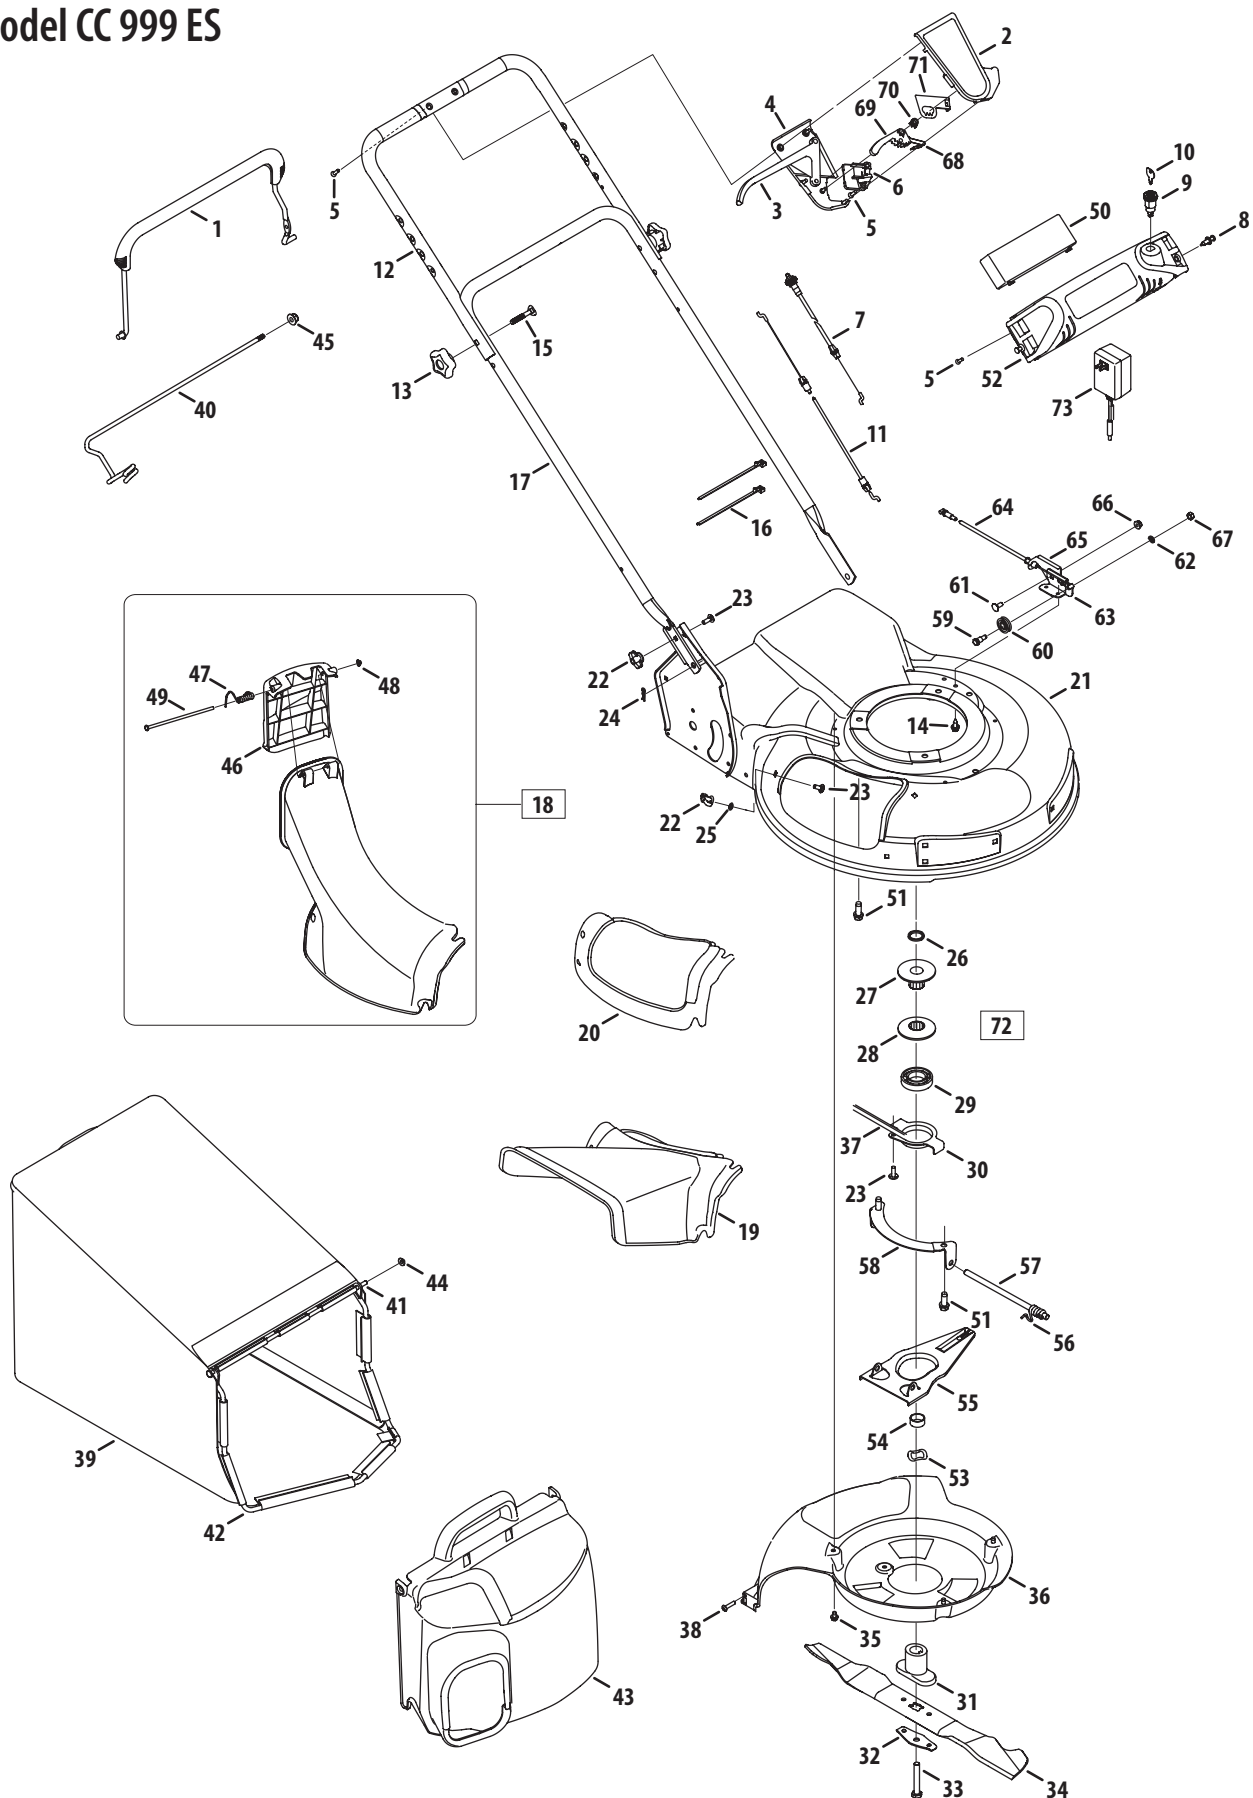


Ref No.	Part Number	Description
1	647-04008	Blade Control
2	753-0717	Upper Control Housing†
3	731-0620A	Drive Control
4	753-0717	Lower Control Housing†
5	710-1667A	C Sunk Tap Screw, #10 x.75 Lg
6	753-0717	Cable Mounting Cap†
7	946-0711B	Drive Cable
8	728-0199	Rivet
9	925-04347	Key Switch
10	925-0201	Key
11	946-04639	Control Cable
12	749-04354A-0637	Upper Handle
13	720-04072A	Star Knob
14	710-1652	Screw, 1/4-20 x .625
15	710-1174	Carriage Bolt, 5/16-18 x 2.0
16	926-0240	Cable Tie
17	749-0907B	Lower Handle
18	931-0066	Adapter Assembly
19	731-1832	Side Discharge Chute
20	931-1833A	Mulch Cover
21	782-0078B-4021	Deck 21"
22	912-0397	Wing Nut
23	710-0703	Carriage Bolt, 1/4-20 x .75"
24	914-0104	Cotter Pin
25	726-0233	Push Nut, .25 x ID x .50 OD
26	950-1071	Sleeve Spacer, .88ID x 1.13OD
27	756-0612A	Half Pulley: 2.62 OD
28	756-0613	Half Pulley: 2.62 OD x 1.61
29	741-0545	Ball Bearing
30	682-7527	Cup
31	748-0377E	Blade Adapter
32	736-0524B	Blade Bell Support
33	710-1257	Hex Bolt, 3/8-24 x 2.5
34	942-0741A	21" Mulching Blade
35	710-0653	Screw, 1/4-20 x 3.75
36	731-1828	Baffle
37	954-0460	Belt, 3/8 x 39.24

Ref No.	Part Number	Description
38	710-0895	Screw, 1/4-15 x .750
39	964-04112	Grass Catcher
40	747-0940A-0637	Support Rod w/ Rope Guide
41	747-0939	Pivot Rod
42	747-0937-0637	Grass Catcher Frame
43	631-0071	Grass Catcher Cover
44	926-0106	Cap Nut
45	712-04063	Flange Lock Nut, 5/16-18
46	731-1874A	Chute Door
47	732-0819	Torsion Spring
48	726-0111	Push Cap
49	747-0965	Pivot Rod
50	925-04323	12V Battery
51	710-0654A	Sems Screw, 3/8-16 x 1.00
52	925-04072	Harness Assembly
53	936-0526	Wave Washer, 1.38 ID x.88 OD
54	950-1070	Slve Spacer, .88 ID x 1.00 OD
55	782-7596A	Control Arm
56	932-0807	Torsion Spring
57	711-1114	Pivot Shaft
58	782-7597	Pivot Bracket
59	738-0924A	Shlder Screw, .375 ID x 1/4-14
60	756-0625	Cable Roller
61	710-0134	Carriage Screw, 1/4-20 x .62
62	936-0329	Lock Washer, 1/4
63	782-7575B-0637	Cable Mounting Bracket
64	946-0939A	6 Speed Cable
65	782-7574A-0637	Cable Adjustment Bracket
66	712-04064	Hex Nut 1/4-20
67	912-0138	Hex Nut 1/4-28
68	732-0627A	Shift Lever Spring
69	731-0924	6 Speed Shift Lever
70	913-0397	Gear Insert
71	16864	6 Spd. Rack Cable Bracket
72	956-0613A	Pulley Assembly
73	725-04329	12V Battery Charger

† Only available as part of this kit


Model CC 999 ES

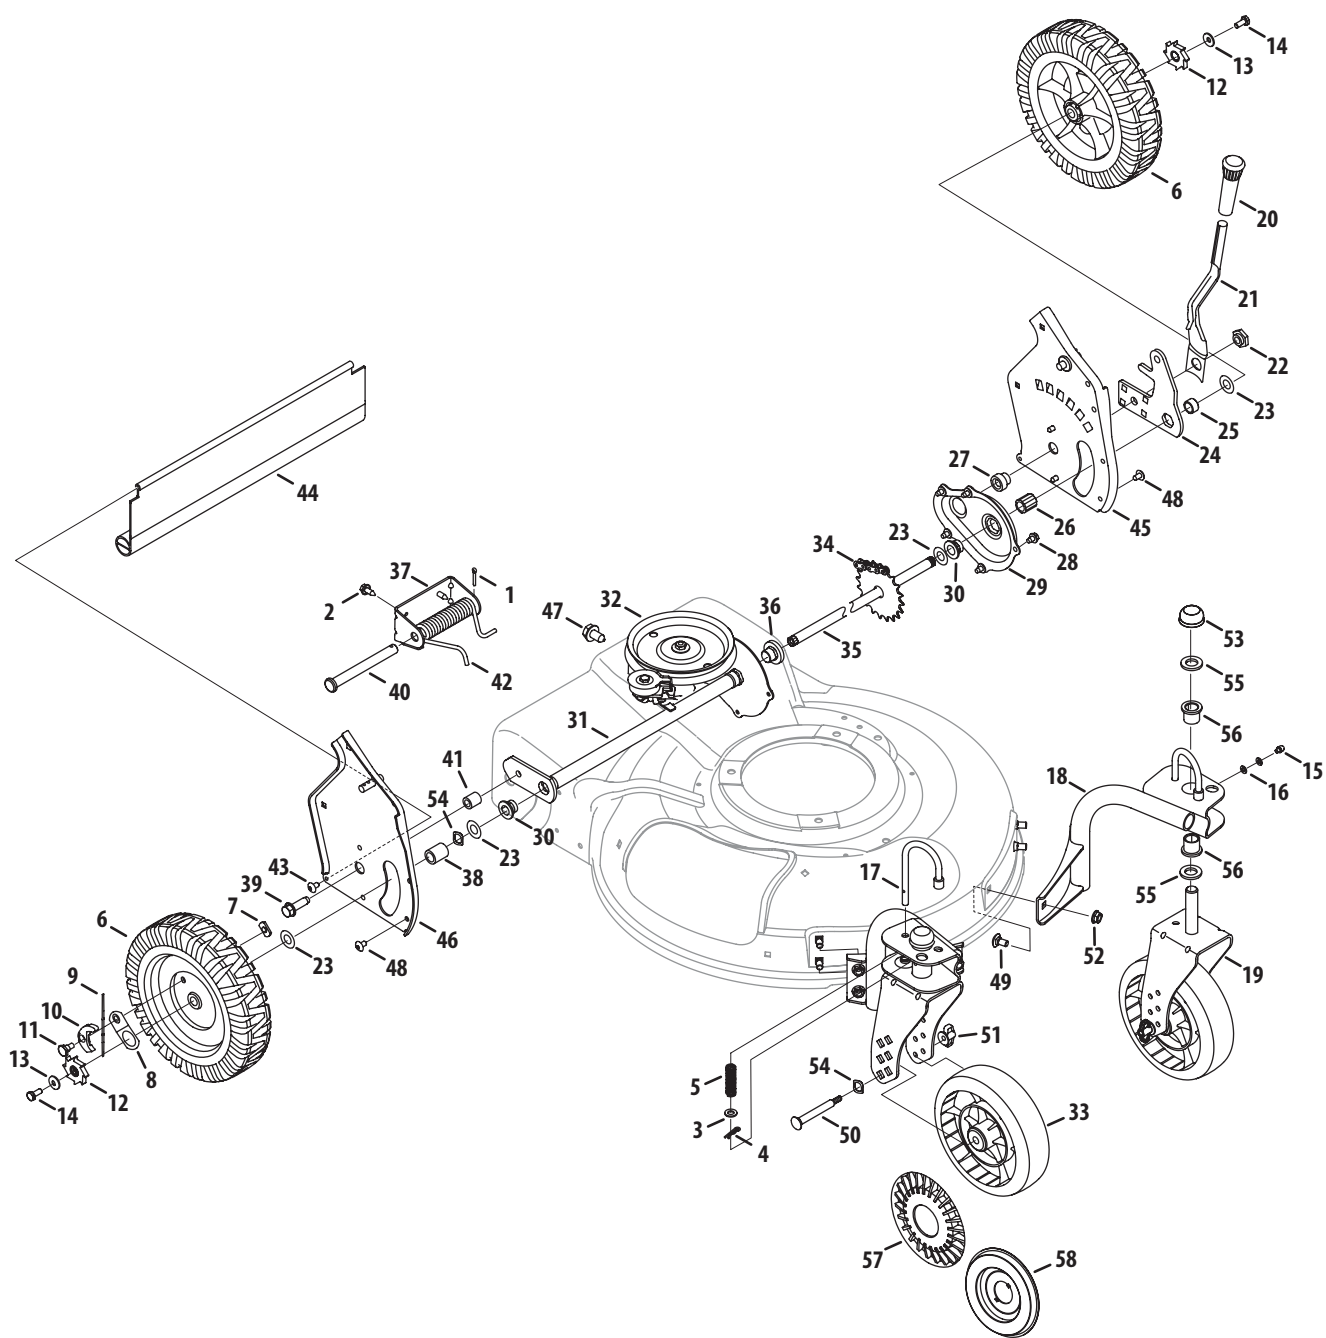

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2010A	Wheel, 9 x 2.125 Bar
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	937-3000	Grease Fitting
16	736-0931	Flat Washer.203 ID x.403 OD
17	747-0924	Wheel Pin Lock
18	682-9020A-4021	Caster Assembly RH
	682-9021A-4021	Caster Assembly LH
19	682-9024-4021	Caster Bracket Assembly RH
	682-9026-4021	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B-0637	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg
28	710-0653	Tap Screw 1/4-20 x .375

Ref No.	Part Number	Description
29	682-7528-0637	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526-0637	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568-0637	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495-4021	Handle Bracket Assembly - LH
46	687-02494-4021	Handle Bracket Assembly - RH
47	710-0604A	Screw, 5/16-18 x .625
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0232	Wave Washer.531 ID x.781 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1888	Hubcap - Spoke w/ Hole
58	731-07048	Hubcap - Radial Spoke

Model CC 99M

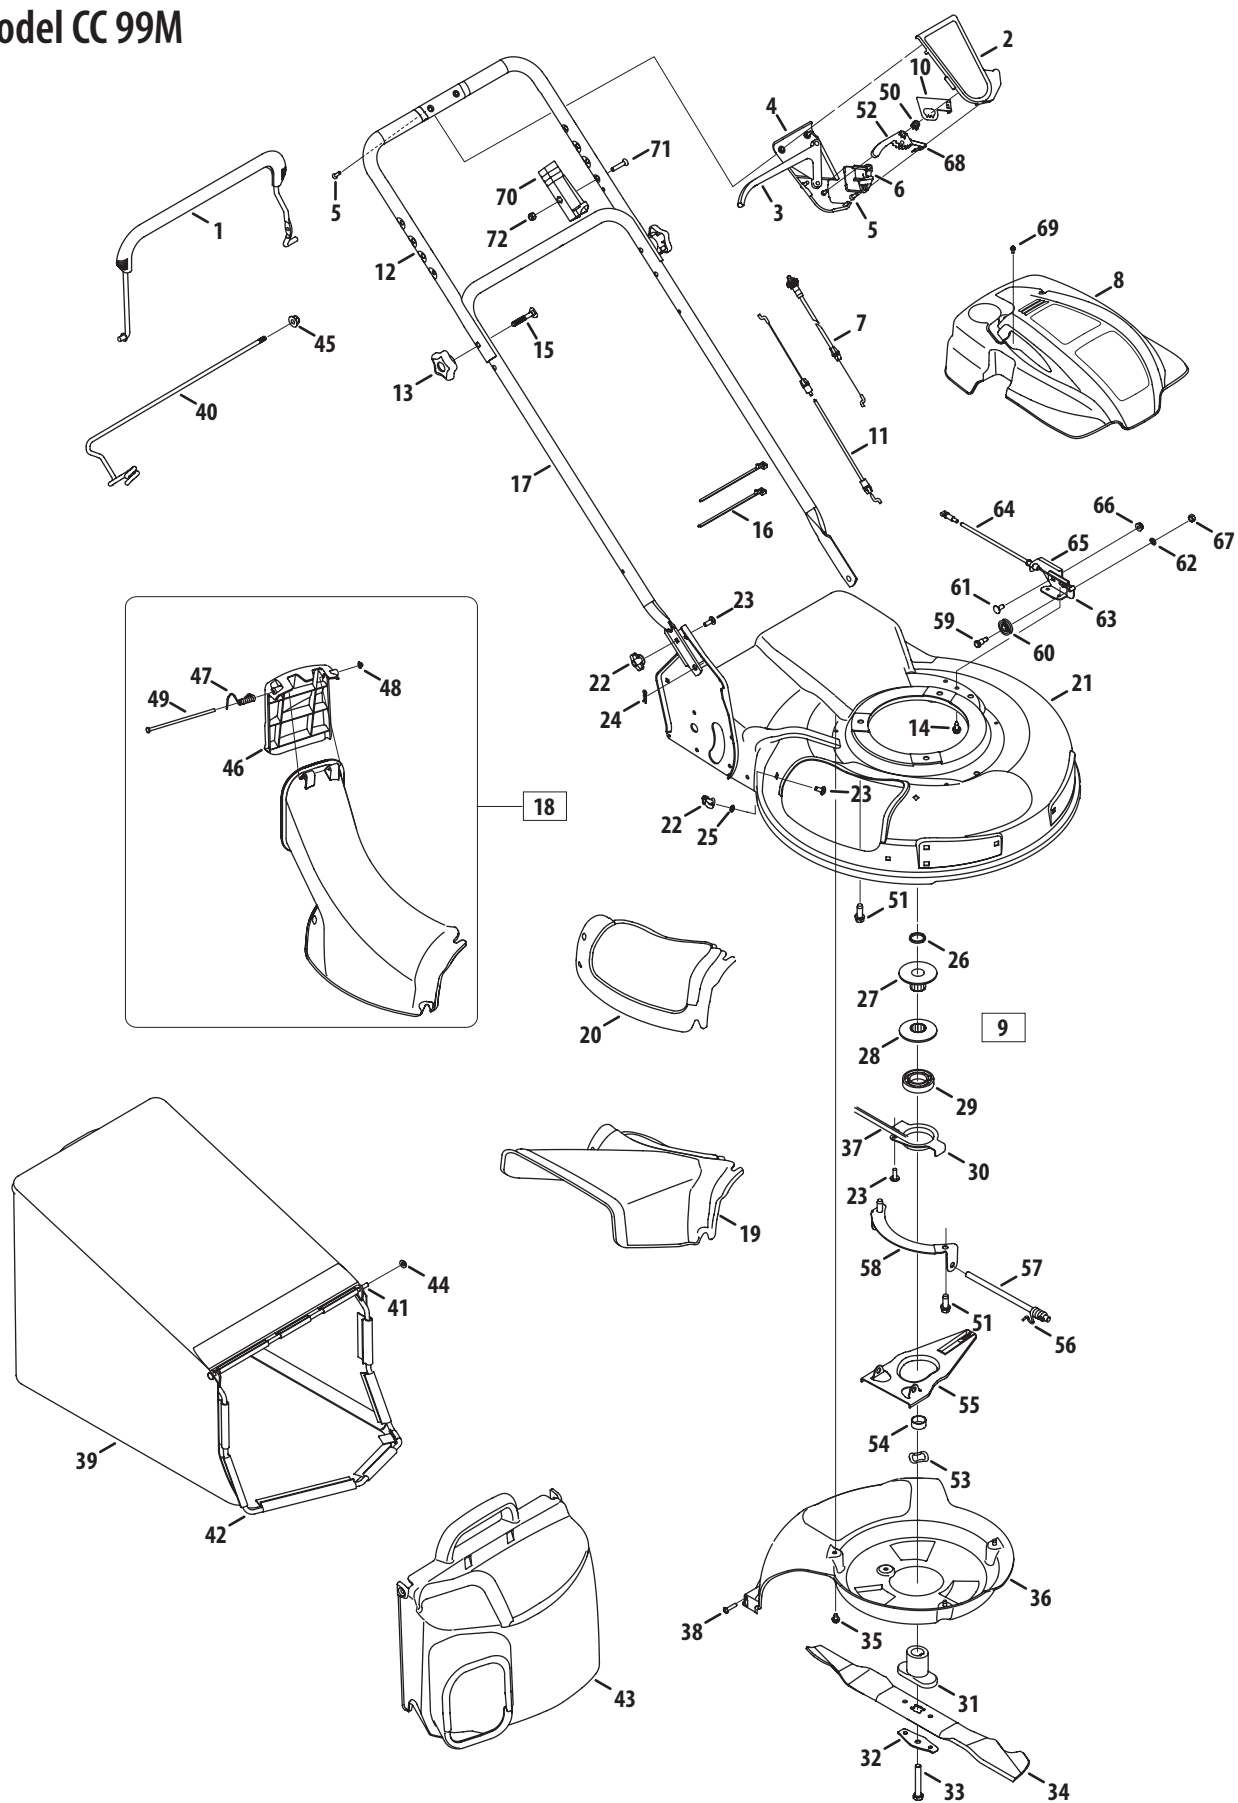


Ref No.	Part Number	Description
1	647-04008	Blade Control
2	753-0717†	Upper Control Housing
3	731-0620A	Drive Control
4	753-0717†	Lower Control Housing
5	710-1667A	C Sunk Tap Screw, #10 x .75 Lg
6	753-0717	Cable Mounting Cap†
7	946-0711B	Drive Cable
8	931-04232B	Engine Shroud
9	956-0613A	Pulley Assembly
10	16864	6 Spd. Rack Cable Bracket
11	746-0555	Control Cable
12	749-0439E-0637	Upper Handle
13	720-04072A	Star Knob
14	710-1652	Screw, 1/4-20 x .625
15	710-1174	Carriage Bolt, 5/16-18 x 2.0
16	926-0240	Cable Tie
17	749-0907B	Lower Handle
18	931-0066	Adapter Assembly
19	731-1832	Side Discharge Chute
20	931-1833A	Mulch Cover
21	782-0078B-4021	Deck 21"
22	912-0397	Wing Nut
23	710-0703	Carriage Bolt, 1/4-20 x .75"
24	914-0104	Cotter Pin
25	726-0233	Push Nut, .25 x ID x .50 OD
26	950-1071	Sleeve Spacer, .88ID x 1.13OD
27	756-0612A	Half Pulley: 2.62 OD
28	756-0613	Half Pulley: 2.62 OD x 1.61
29	741-0545	Ball Bearing
30	682-7527	Cup
31	748-0377E	Blade Adapter
32	736-0524B	Blade Bell Support
33	710-1257	Hex Bolt, 3/8-24 x 2.5
34	942-0741A	21" Mulching Blade
35	710-0653	Screw, 1/4-20 x 3.75
36	731-1828	Baffle

Ref No.	Part Number	Description
37	954-0460	Belt, 3/8 x 39.24
38	710-0895	Screw, 1/4-15 x .750
39	964-04112	Grass Catcher
40	747-0940A-0637	Support Rod w/ Rope Guide
41	747-0939	Pivot Rod
42	747-0937-0637	Grass Catcher Frame
43	631-0071	Grass Catcher Cover
44	926-0106	Cap Nut
45	712-04063	Flange Lock Nut, 5/16-18
46	731-1874A	Chute Door
47	732-0819	Torsion Spring
48	726-0111	Push Cap
49	747-0965	Pivot Rod
50	913-0397	Gear Insert
51	710-0654A	Sems Screw, 3/8-16 x 1.00
52	731-0924	6 Speed Shift Lever
53	936-0526	Wave Washer, 1.38 ID x .88 OD
54	950-1070	Slve Spacer, .88 ID x 1.00 OD
55	782-7596A	Control Arm
56	932-0807	Torsion Spring
57	711-1114	Pivot Shaft
58	782-7597	Pivot Bracket
59	738-0924A	Shlder Screw, .375 ID x 1/4-14
60	756-0625	Cable Roller
61	710-0134	Carriage Screw, 1/4-20 x .62
62	936-0329	Lock Washer, 1/4
63	782-7575B-0637	Cable Mounting Bracket
64	946-0939A	6 Speed Cable
65	782-7574A-0637	Cable Adjustment Bracket
66	712-04064	Hex Nut 1/4-20
67	912-0138	Hex Nut 1/4-28
68	732-0627A	Shift Lever Spring
69	710-04744	Screw, #12-16 x 1.00
70	746-0883	Control Housing
71	710-1270	Screw, 1/4-20 x 1.310
72	712-0324	Nut, Hexlk, 1/4-20

† Only available as part of this kit


Model CC 99M

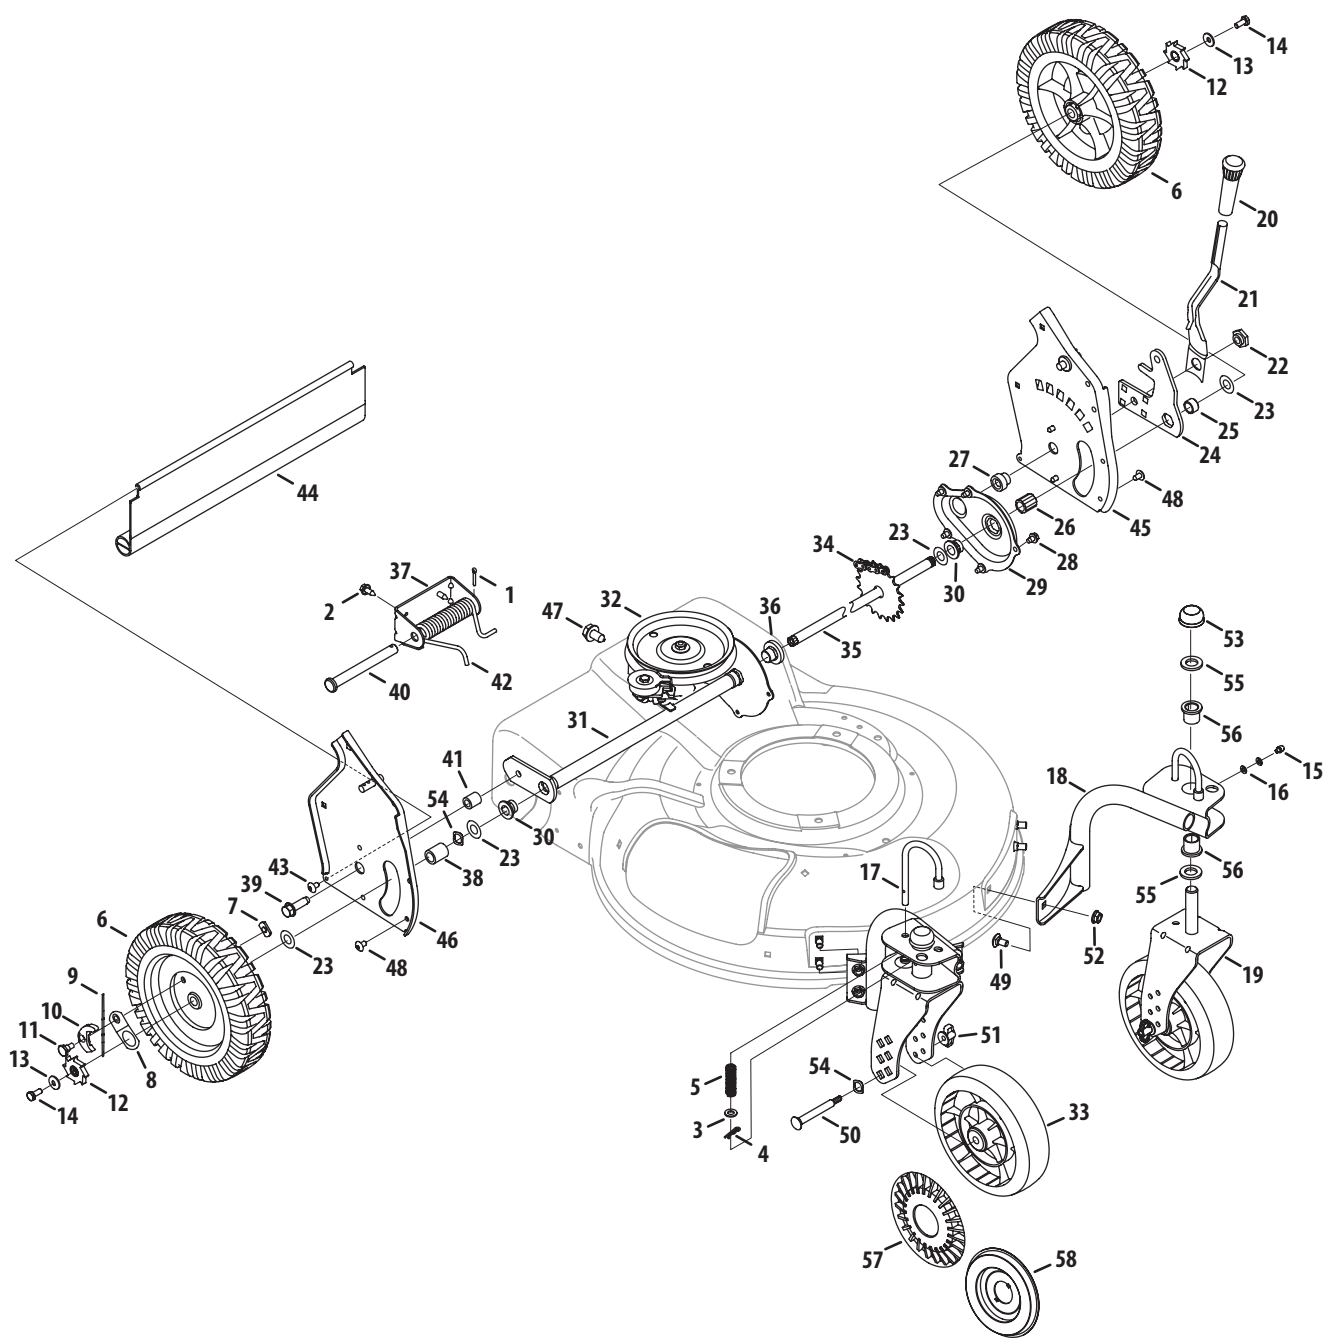

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2010A	Wheel, 9 x 2.125 Bar
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	937-3000	Grease Fitting
16	736-0931	Flat Washer.203 ID x.403 OD
17	747-0924	Wheel Pin Lock
18	682-9020A-4021	Caster Assembly RH
	682-9021A-4021	Caster Assembly LH
19	682-9024-4021	Caster Bracket Assembly RH
	682-9026-4021	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B-0637	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg
28	710-0653	Tap Screw 1/4-20 x .375

Ref No.	Part Number	Description
29	682-7528-0637	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526-0637	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568-0637	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495-4021	Handle Bracket Assembly - LH
46	687-02494-4021	Handle Bracket Assembly - RH
47	710-0604A	Screw, 5/16-18 x .625
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0232	Wave Washer.531 ID x.781 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1888	Hubcap - Spoke w/ Hole
58	731-07048	Hubcap - Radial Spoke


Engine Model 1P70MC

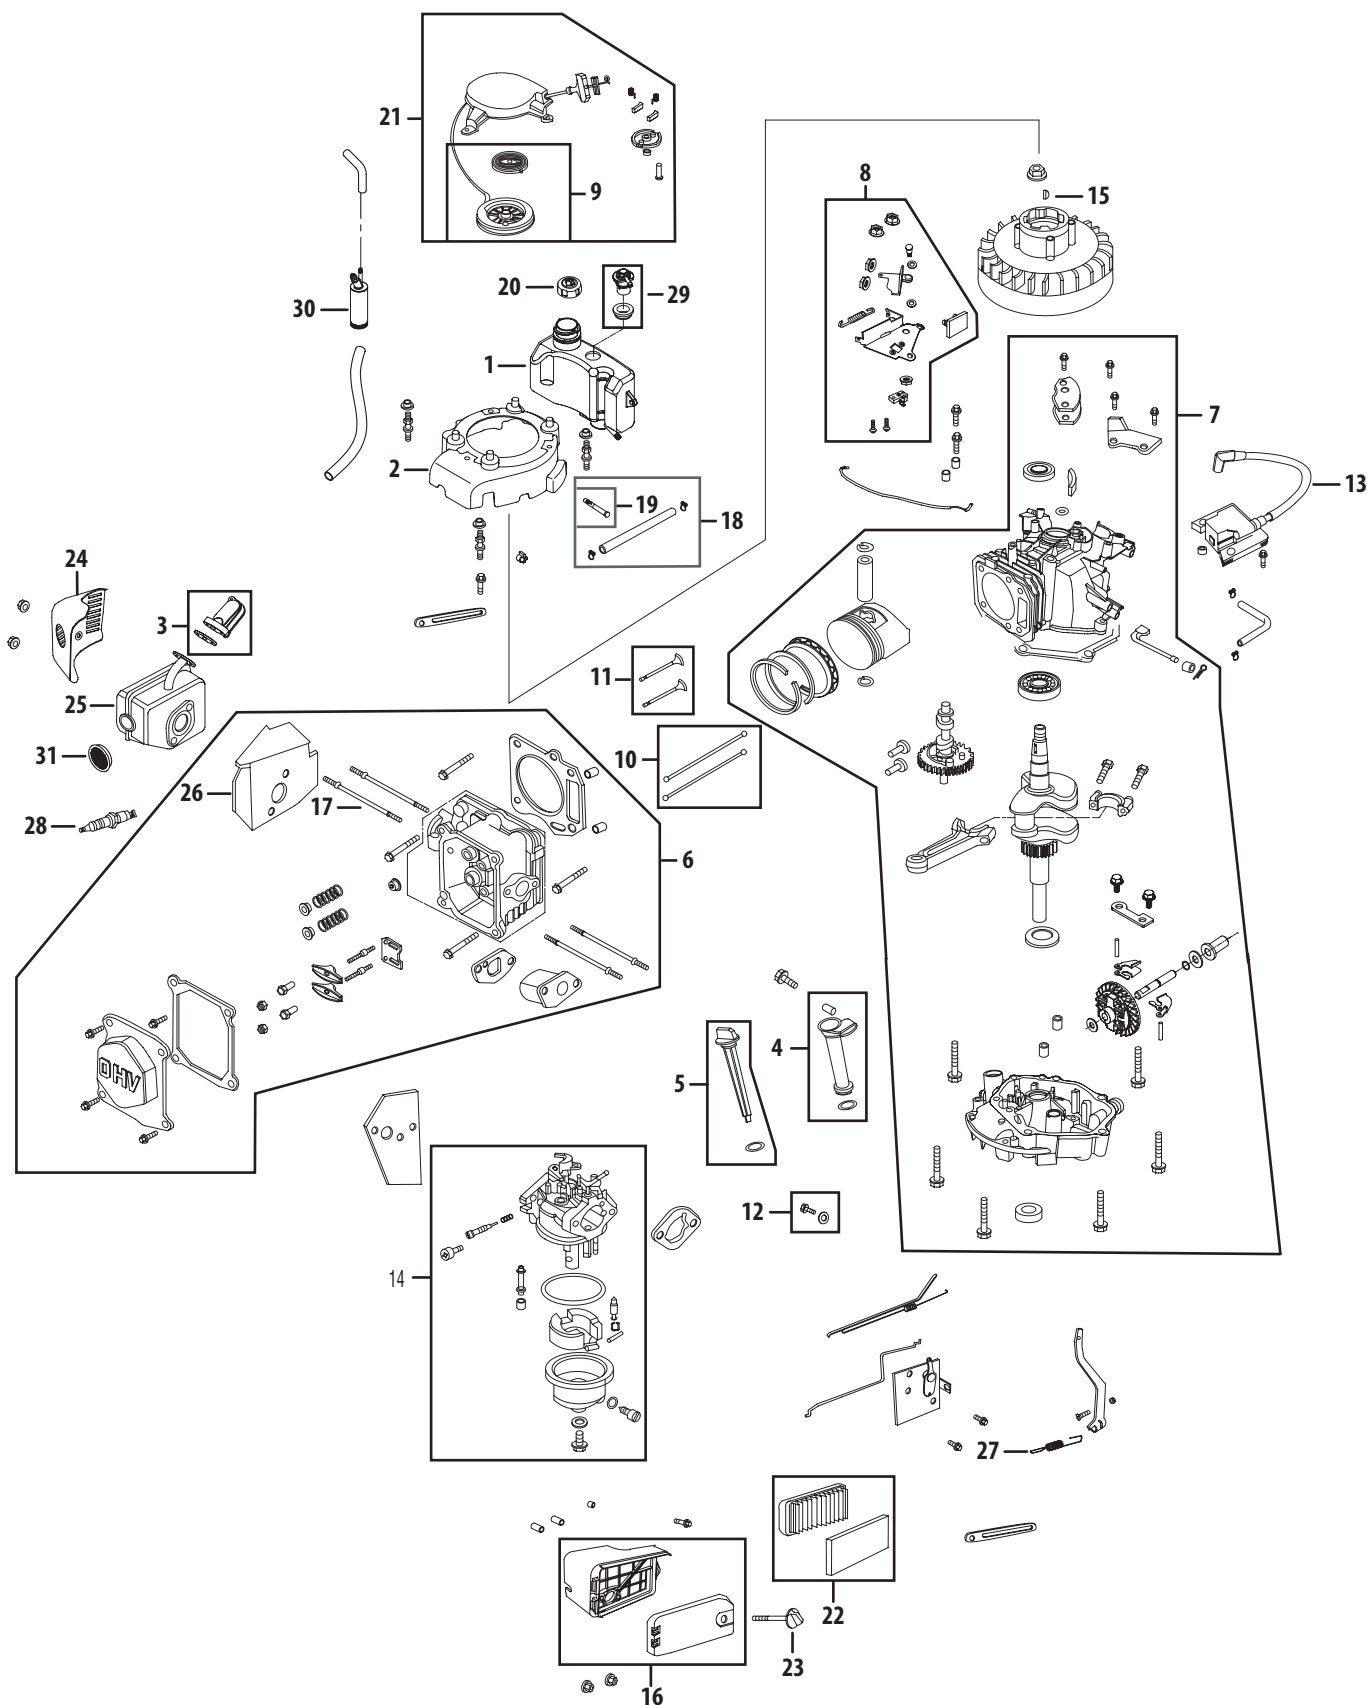

Ref No.	Part Number	Description
1.	951-10438	Fuel Tank
2.	951-10369	Flywheel Shroud
3.	951-10840	Reed Valve Assembly
4.	951-10334	Oil Filler Tube Assembly
5.	951-10863	Dipstick Assembly
6.	951-10413	Cylinder Head Complete
7.	951-10867	Short Block Assembly
8.	951-10321	Stop Switch and Brake Assembly
9.	951-10319	Recoil Spring and Pulley Assembly
10.	951-10344	Push Rod Kit
11.	951-10345	Valve Kit
12.	951-10370	Oil Drain Plug and Washer Assembly
13.	951-10366	Ignition Coil
14.	951-10862	Carburetor Assembly
15.	951-10307	Flywheel Key
16.	951-10865	Air Cleaner Housing Assembly Complete
17.	951-10342	Muffler Stud Assembly
18.	951-10364	Fuel Line Kit – Inc. hoses, clamps & filter
19.	951-10358	Fuel Filter
20.	951-10440	Fuel Cap
21.	951-10299	Recoil Starter Assembly
22.	951-10298	Air Cleaner Kit
23.	951-10297	Air Cleaner Thumb Screw
24.	951-10411	Muffler Guard
25.	951-10775	Muffler
26.	951-10402	Muffler Gasket /Heat Shield
27.	951-10387	Governor Return Spring
28.	951-10292	Spark Plug
29.	951-10869	Roll Over Valve Assembly
30.	951-10443	Carbon Canister
31.	951-10773	Spark Arrestor
–	952Z1P70MC	Engine – Complete
–	951-10868	Carburetor Kit – Major
–	951-10870	Cylinder Head Service Kit
–	951-10416	Gasket Kit – Complete
–	951-10417	Gasket Kit – External

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Engine Model - 2P70MOB

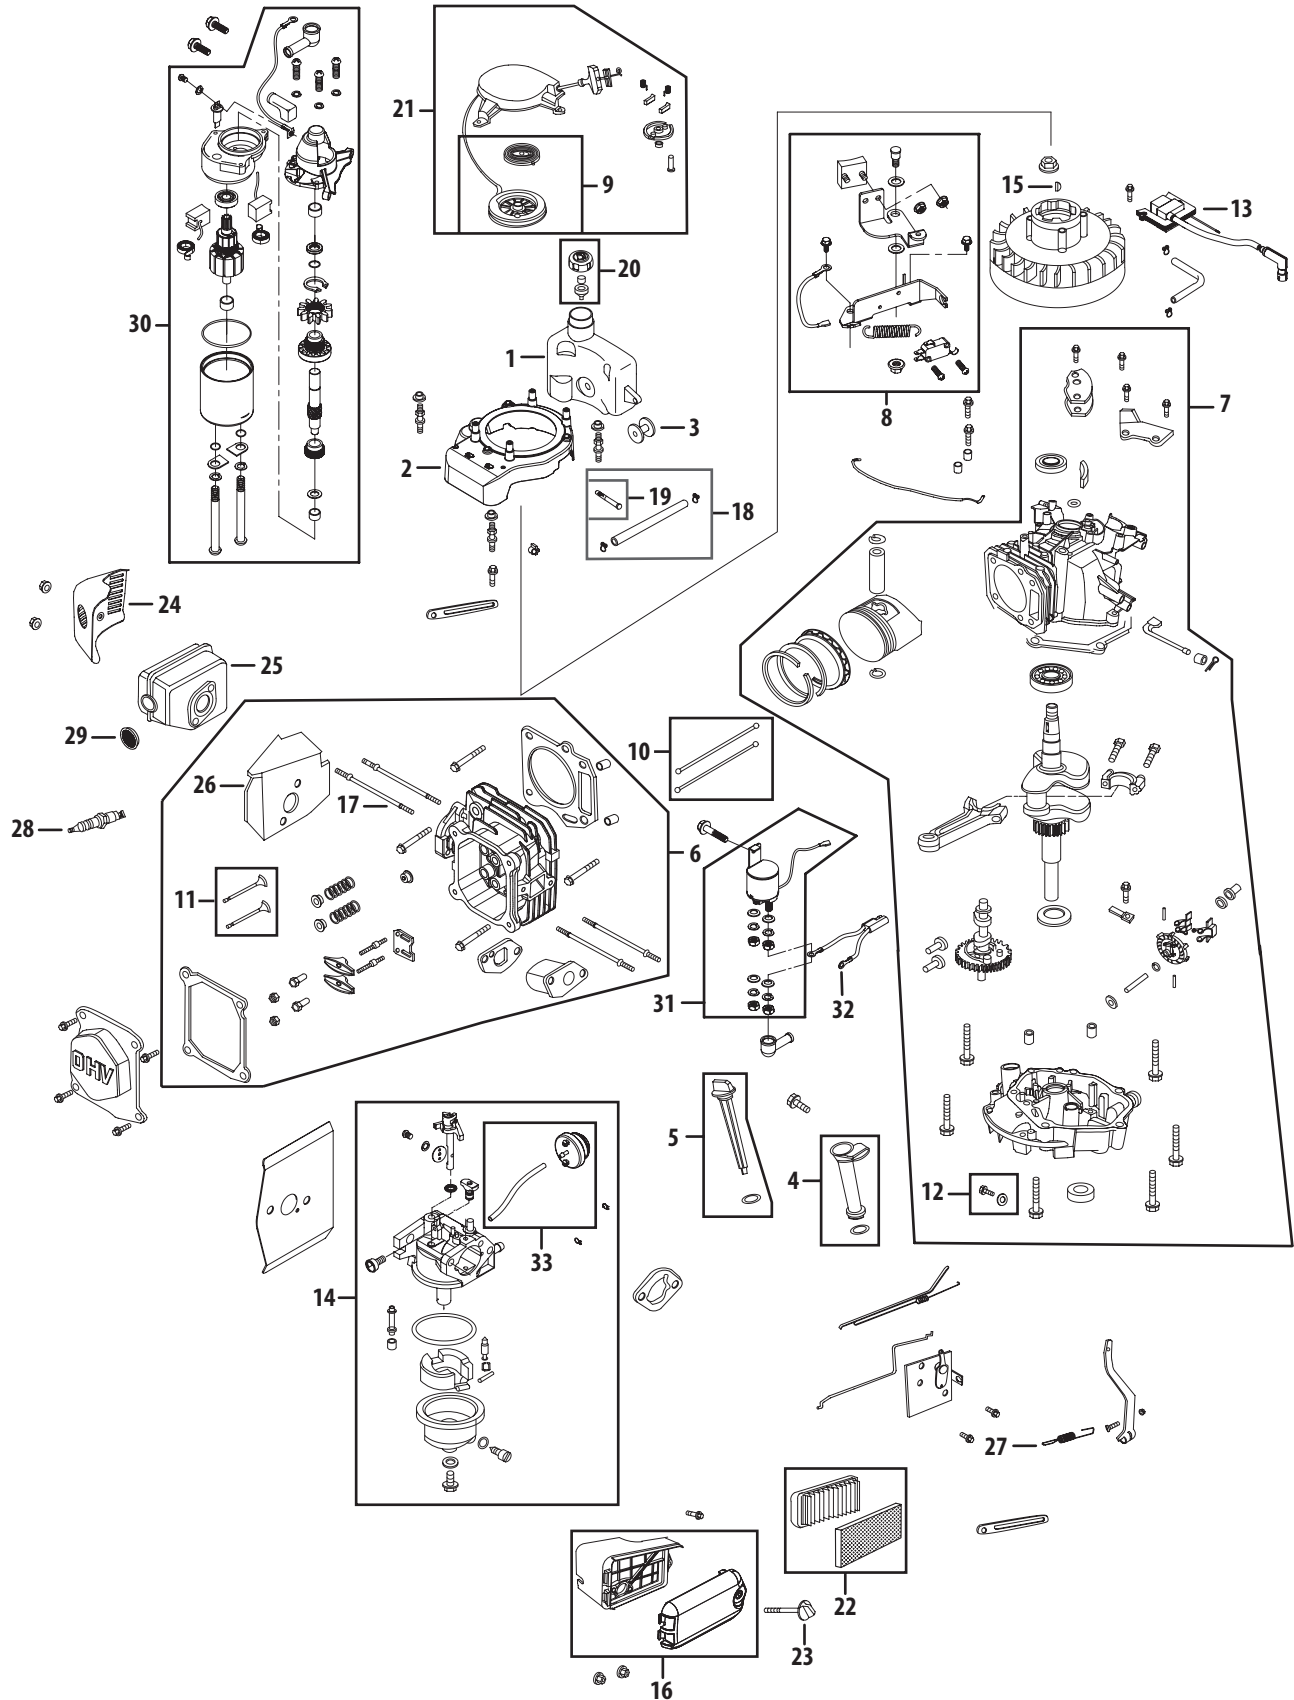


Ref No.	Part Number	Description
1.	951-10368	Fuel Tank
2.	951-10855	Flywheel Shroud
3.	951-10335	Rubber Fuel Tank Mntg. Washer
4.	951-10334	Oil Filler Tube Assembly
5.	951-10852	Dipstick Assembly
6.	951-10413A	Cylinder Head Complete
7.	951-10857A	Short Block Assembly
8.	951-10858	Stop Switch and Brake Assembly
9.	951-10319	Recoil Spring and Pulley Ass'y.
10.	951-10344	Push Rod Kit
11.	951-10345	Valve Kit
12.	951-10370	Oil Drain Plug and Washer Ass'y.
13.	951-10854	Ignition Coil
14.	951-10881	Carburetor Assembly
15.	951-10307	Flywheel Key
16.	951-10412A	Air Cleaner Housing Complete
17.	951-10342	Muffler Stud Assembly
18.	951-10364	Fuel Line Kit – Inc. hoses, clamps & filter
19.	951-10358	Fuel Filter
20.	951-10300	Fuel Cap Assembly

Ref No.	Part Number	Description
21.	951-10299A	Recoil Starter Assembly
22.	951-10298	Air Cleaner Kit
23.	951-10297	Air Cleaner Thumb Screw
24.	951-10411	Muffler Guard
25.	951-10403	Muffler
26.	951-11179	Muffler Gasket /Heat Shield
27.	951-11178	Governor Return Spring
28.	951-10292	Spark Plug
29.	951-10351	Spark Arrestor
30.	951-10880A	Electric Starter
31.	951-10823	Relay Assembly
32.	951-10824	Relay Harness Connector
33.	951-10888	Primer Assembly
–	952Z2P70MOB	Engine – Complete
–	712-04221	Flywheel Nut
–	951-11045	Flywheel
–	951-11238	Governor Arm Bracket
–	951-10890	Carburetor Kit – Major
–	951-10859	Cylinder Head Service Kit
–	951-10416	Gasket Kit – Complete
–	951-10417	Gasket Kit – External

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Engine Model 5P65MOB

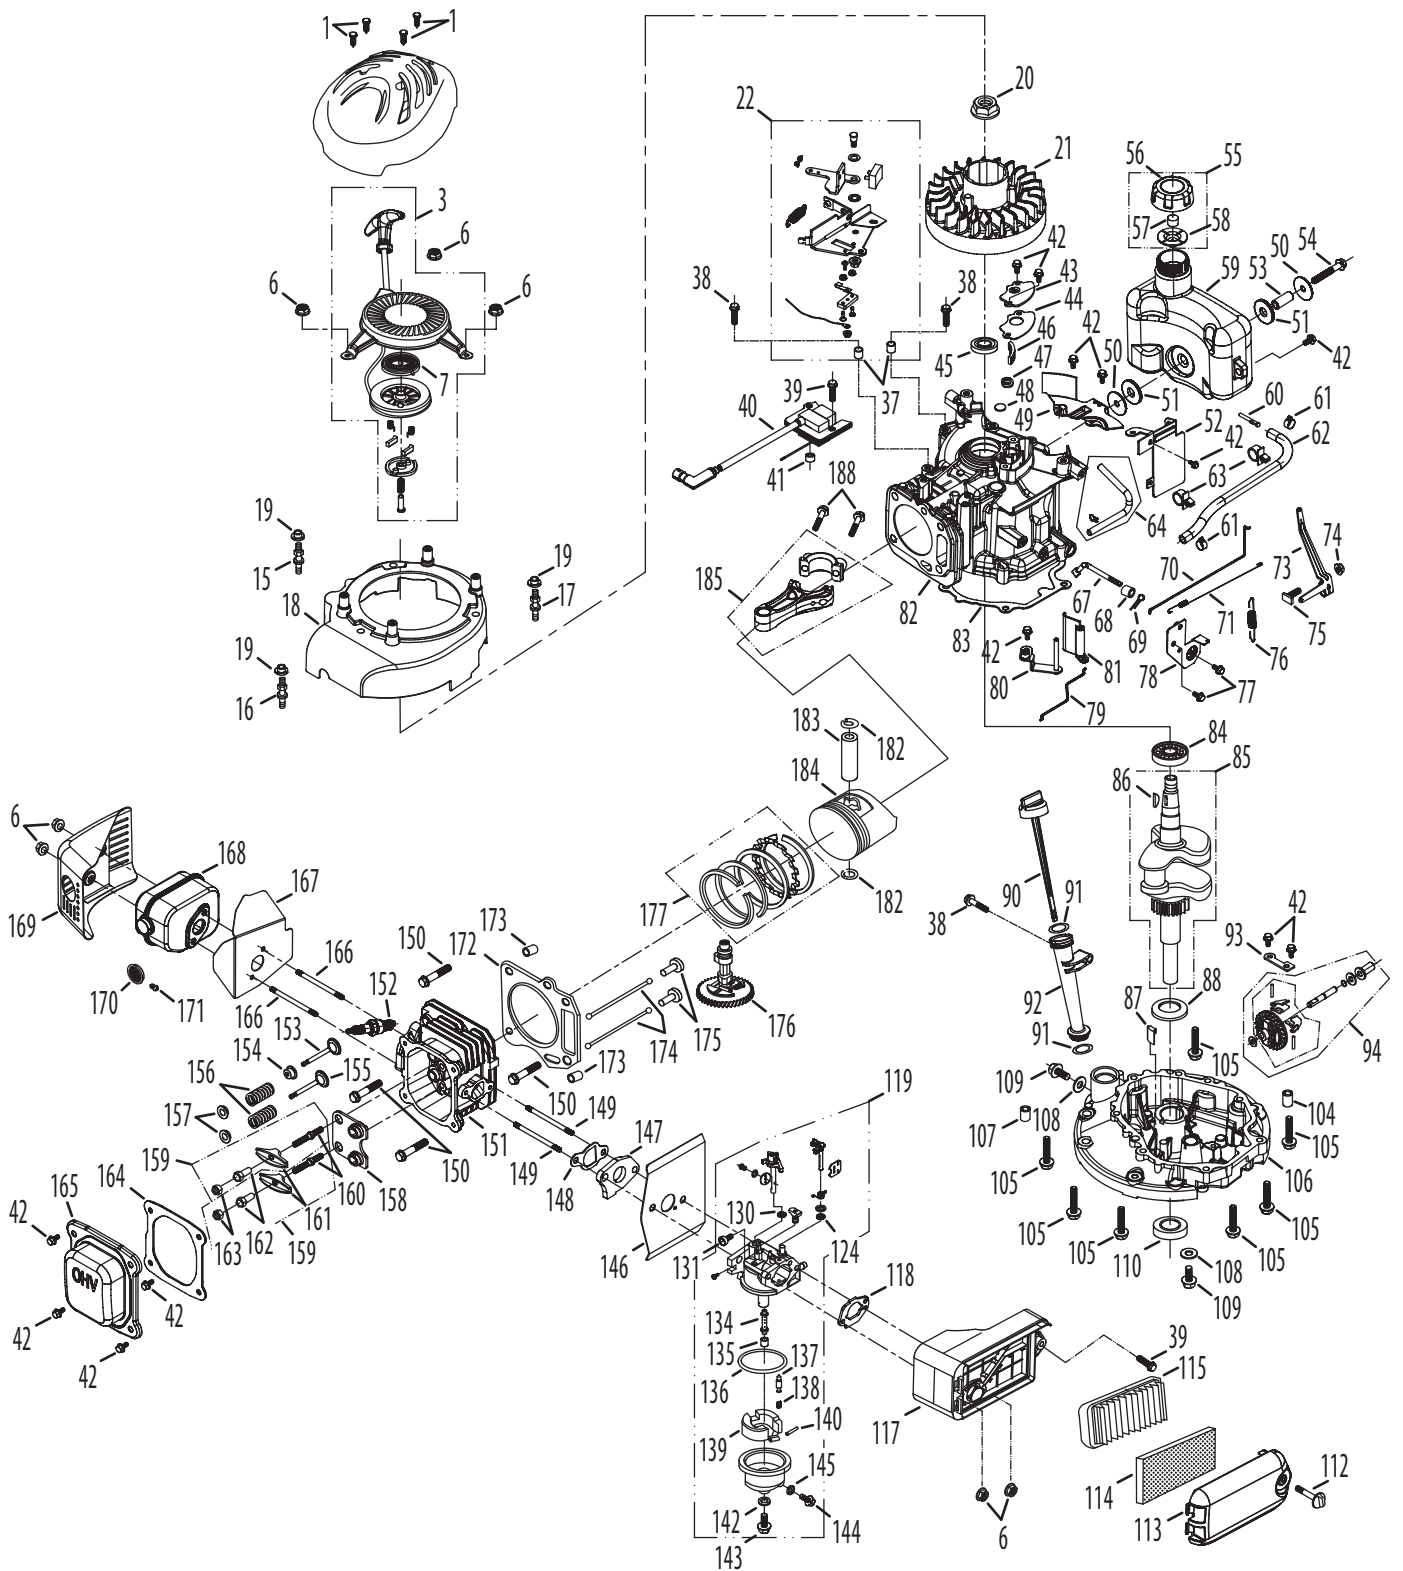

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Ref No.	Part Number	Description
1	710-04744	Self-Tap Bolt, Hilo #12-16 x 1.00"
3	951-11720	Recoil Starter Assembly
6	712-04212	Nut M6 X 10 Mm
7	951-11721	Recoil Spring and Pulley Assembly
15	751-11722	Starter/Shroud Stud Black/Ye Zinc
16	951-11723	Starter/Shroud Stud Front/Ye Zinc
17	951-11724	Starter/Shroud Stud White/Ye Zinc
18	951-10875	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	712-04221	Flywheel Nut M14
21	951-11043	Flywheel
22	951-10320A	Brake Assembly
37	750-05384	Brake Spacer
38	710-04980	Bolt M6x35
39	710-04969	Bolt M6x30
40	951-10367	Ignition Coil Assembly
41	750-05383	Ignition Coil Spacer
42	710-04916	Bolt M6x14
43	951-11612	Breather Cover Plate
44	951-11613	Breather Gasket
45	951-11596	Upper Crankshaft Seal
46	951-11730	Mesh Screen
47	732-04718	Breather Valve Spring
48	951-11614	Breather Valve
49	951-11542	Fuel Tank Bottom Bracket
50	736-04456	Fuel Tank Washer
51	951-10335	Rubber Bushing
52	951-11748	Tank/Label Bracket
53	750-05322	Fuel Tank Bushing
54	710-04922	Tank Bolt M8x50
55	951-10300	Fuel Cap Assembly
59	951-10337	Fuel Tank Assembly
60	951-10358	Fuel Filter
61	951-11731	Fuel Hose Clamp
63	723-04071	Plastic Support Clamp
64	951-11520	Breather Hose Assembly
67	951-11608	Governor Arm Shaft
68	951-11574	Governor Seal
69	714-04074	Governor Cotter Pin
70	951-11521	Throttle Linkage Rod

Ref No.	Part Number	Description
71	951-11522	Throttle Linkage Spring
73	951-11523	Governor Arm
74	712-04212	Governor Arm Nut M6
75	710-04908	Governor Arm Bolt
76	951-10293	Governor Spring
77	710-04915	Bolt M6x12
78	951-11544	Throttle / Governor Bracket
79	951-11524	Choke Linkage Rod
80	951-11792	Air Vane Bracket
81	951-11529	Air Vane
83	951-11732	Crankcase Cover Gasket
84	951-11369	Main Bearing
85	951-11591	Crankshaft Assembly
86	951-10307	Woodruff Key
87	951-11733	Oil Return Seal
88	736-04491	Crankshaft Thrust Washer
91	951-11547	Dipstick and Oil Fill Tube O-Ring
93	951-11609	Governor Gear Mounting Plate
94	951-11549	Governor Gear/Shaft Assembly
104	715-04092	Crankcase Cover Dowel 7x14
105	710-04920	Coil/Sump Bolt M6x28
106	951-11793	Crankcase Cover
107	715-04096	Dowel Pin 9x14
108	736-04440	Oil Drain Plug Washer
109	710-04906	Oil Drain Plug
110	951-11545	Lower Crankshaft Seal
112	951-10297	Air Filter Cover Thumb Screw
118	951-11257	Carburetor Gasket Plate
119	951-10873	Carburetor Assembly
136	951-11589	Fuel Bowl O-Ring
142	951-11348	Fuel Bowl Gasket
143	710-04945	Fuel Bowl Mounting Bolt
144	710-04903	Fuel Drain Plug
145	951-11349	Fuel Drain Plug Gasket
146	951-11737	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
149	710-05093	Carb Stud M6x92
150	710-04982	Head Bolt M8x54
152	951-10292	Spark Plug/F6rtc

Engine Model 5P65MOB


Ref No.	Part Number	Description
154	951-11818	Intake Valve Seal
158	951-11687	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
162	751-11123	Valve Adjustment Nut
163	751-11124	Pivot Locking Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
167	951-11739	Muffler Gasket
168	951-10295	Muffler Assembly
169	951-11791	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11555	Cylinder Head Gasket
173	715-04090	Cylinder Head Dowel 10x16
175	951-11607	Tappet
176	951-11741	Camshaft Assembly
177	951-11688	Piston Ring Set
182	951-11603	Piston Pin Snap Ring
183	951-11604	Piston Pin
184	951-11605	Piston
185	951-11744	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
—	951-11765	Oil Filler Tube Assembly
91	951-11547	Dipstick and Oil Fill Tube O-Ring
92	—	Tube
—	951-11795	Dipstick Assembly
90	—	Dipstick
91	951-11547	Dipstick and Oil Fill Tube O-Ring
—	951-10298	Air Cleaner Kit
114	—	Foam Filter Element
115	—	Paper Filter Element
—	951-10300	Fuel Cap Assembly
56	—	Fuel Cap
57	—	Foam Insert
58	—	Vent Gasket
—	951-10876	Air Cleaner Housing Ass'y Comp
113	—	Outer Air Cleaner Cover
117	—	Inner Air Cleaner Housing

Ref No.	Part Number	Description
—	951-10874	Carburetor Kit - Major
124	—	Fiber O-Ring
130	—	Fiber O-Ring
131	—	Idle Speed Adjusting Screw
134	—	Main Nozzle / Emulsion Tube
135	—	Main Jet
136	—	Fuel Bowl O-Ring
137	—	Needle Valve
138	—	Needle Valve Spring
139	—	Float
140	—	Float Pin
142	951-11348	Fuel Bowl Gasket
145	951-11349	Fuel Drain Plug Gasket
—	951-10342	Muffler Stud Assembly
166	710-05094	Muffler Stud
—	951-11721	Recoil Spring and Pulley Assembly
7	951-11721	Recoil Spring and Pulley Assembly
8	—	Starter Pulley
—	951-10363	Fuel Line Kit
60	951-10358	Fuel Filter
61	951-11731	Fuel Hose Clamp
62	—	Fuel Hose
—	951-10370	Oil Drain Plug and Washer Ass'y
108	736-04440	Oil Drain Plug Washer
109	710-04906	Oil Drain Plug
—	951-11787	Gasket Kit - Complete
44	951-11613	Breather Gasket
45	951-11596	Upper Crankshaft Seal
68	951-11574	Governor Seal
83	951-11732	Crankcase Cover Gasket
91	951-11547	Dipstick and Oil Fill Tube O-Ring
108	736-04440	Oil Drain Plug Washer
110	951-11545	Lower Crankshaft Seal
146	951-11737	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11555	Cylinder Head Gasket

Ref No.	Part Number	Description
—	951-11789	Short Block
42	710-04916	Bolt M6×14
43	951-11612	Breather Cover Plate
44	951-11613	Breather Gasket
45	951-11596	Upper Crankshaft Seal
46	951-11730	Mesh Screen
47	732-04718	Breather Valve Spring
48	951-11614	Breather Valve
67	951-11608	Governor Arm Shaft
68	951-11574	Governor Seal
69	714-04074	Governor Cotter Pin
82	—	Crankcase
83	951-11732	Crankcase Cover Gasket
84	951-11369	Main Bearing
85	951-11591	Crankshaft Assembly
86	951-10307	Woodruff Key
87	951-11733	Oil Return Seal
88	736-04491	Crankshaft Thrust Washer
91	951-11547	Dipstick and Oil Fill Tube O-Ring
93	951-11609	Governor Gear Mounting Plate
94	951-11549	Governor Gear/Shaft Assembly
104	715-04092	Dowel Pin 7×14
105	710-04920	Coil/Sump Bolt M6x28
106	951-11793	Crankcase Cover
107	715-04096	Dowel Pin 9×14
108	736-04440	Oil Drain Plug Washer
109	710-04906	Oil Drain Plug
110	951-11545	Lower Crankshaft Seal
118	951-11257	Carburetor Gasket Plate
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11555	Cylinder Head Gasket
173	715-04090	Cylinder Head Dowel 10×16
175	951-11607	Tappet
176	951-11741	Camshaft Assembly
177	951-11688	Piston Ring Set
182	951-11603	Piston Pin Snap Ring
183	951-11604	Piston Pin

Ref No.	Part Number	Description
184	951-11605	Piston
185	951-11744	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
—	951-11746	Cylinder Head Assembly
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
151	—	Cylinder Head
153	—	Intake Valve
154	—	Intake Valve Seal
155	—	Exhaust Valve
156	—	Valve Spring
157	—	Valve Spring Retainer
158	951-11687	Push Rod Guide
160	710-04902	Rocker Arm Stud
161	—	Rocker Arm
162	751-11123	Valve Adjustment Nut
163	751-11124	Pivot Locking Nut
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11555	Cylinder Head Gasket
—	951-11788	Gasket Kit - External
44	951-11613	Breather Gasket
91	951-11547	Dipstick and Oil Fill Tube O-Ring
108	736-04440	Oil Drain Plug Washer
146	951-11737	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Heat Shield Gasket
—	951-10314	Push Rod Kit
174	—	Push Rod
—	951-10313	Valve Kit
153	—	Intake Valve
155	—	Exhaust Valve
—	951-10846A	Cylinder Head Kit
150	710-04982	Head Bolt M8×54
154	—	Intake Valve Seal
164	951-11551	Valve Cover Gasket
172	951-11555	Cylinder Head Gasket

Engine Model 5P70MOB

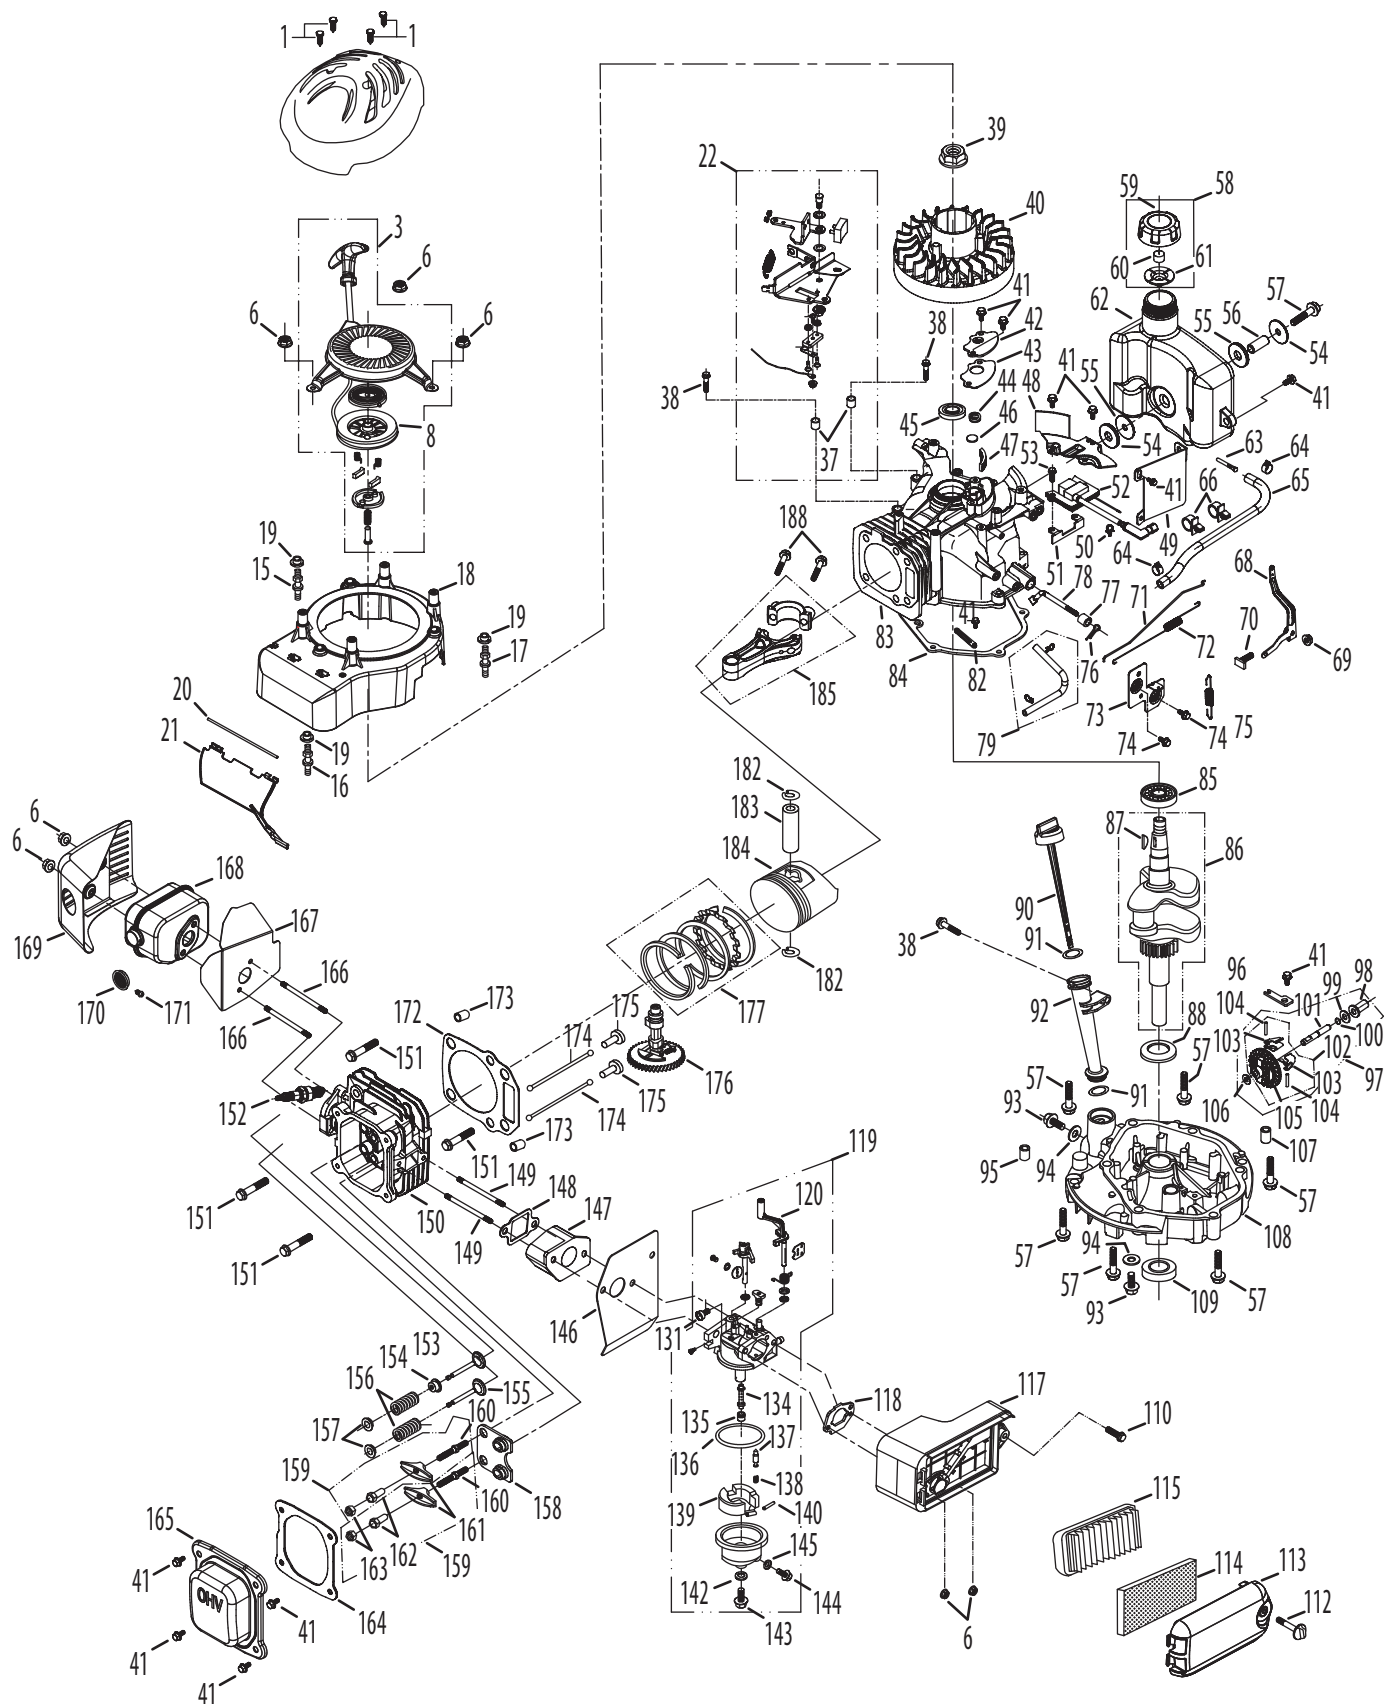

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Ref No.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 x 1.0"
3	951-11720	Recoil Starter Assembly
6	712-04212	Nut M6 X 10 Mm
8	951-11721	Starter Pulley
15	710-04976	Starter/Shroud Stud M6x85-48
16	710-04977	Starter/Shroud Stud M6x87-51.5
17	710-04978	Starter/Shroud Stud M6x79
18	951-10764	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	951-11610	Air Vane Shaft
21	951-11611	Air Vane
22	951-10321A	Brake Assembly
37	750-05384	Brake Spacer
38	710-04980	Bolt M6x35
39	712-04221	Flywheel Nut M14
40	951-11046	Flywheel
41	710-04916	Bolt M6x14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Upper Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
48	951-11616	Fuel Tank Bottom Bracket
49	951-11617	Tank/Label Bracket
50	951-11618	Plastic Clamp 6.3x8
51	951-11619	Ignition Coil Bracket
52	951-10366	Ignition Coil Assembly
53	710-04979	Bolt M6x18
54	736-04456	Fuel Tank Washer
55	951-10335	Rubber Bushing
56	750-05322	Fuel Tank Bushing
57	710-04922	Tank/Sump Bolt M8x50
58	951-10300	Fuel Cap Assembly
62	951-10368	Fuel Tank Assembly
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
66	723-04071	Plastic Support Clamp
68	951-11238	Governor Arm Bracket
69	712-04212	Governor Arm Nut M6
70	710-04908	Governor Arm Bolt
71	951-11259	Throttle Linkage

Ref No.	Part Number	Description
72	951-11258	Throttle Linkage Spring
73	951-11620	Component Bracket
74	710-04915	Bolt M6x12
75	951-10293	Governor Spring
76	714-04074	Governor Cotter Pin
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
79	951-11260	Breather Hose Assembly
82	951-11622	Flexible Clamp
84	951-11763	Crankcase Cover Gasket
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
87	951-10307	Woodruff Key
88	736-04491	Crankshaft Thrust Washer
90	951-11764	Dipstick
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Fill Tube
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9x14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7x14
109	951-11627	Lower Crankshaft Seal
110	710-04969	A/F Base Bolt M6x30
112	951-10297	Air Filter Cover Thumb Screw
113	951-10412A	Air Filter Cover
114	951-10298	Air Filter, Sponge Pre-Filter
118	951-11257	Carburetor Gasket Plate
119	951-10765	Carburetor Assembly
136	951-11589	Fuel Bowl O-Ring
142	951-11348	Fuel Bowl Gasket
143	710-04945	Fuel Bowl Mounting Bolt
144	710-04903	Fuel Drain Plug
145	951-11349	Fuel Drain Plug Gasket
146	951-11766	Carburetor Gasket
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
149	710-04981	Carb Stud M6x113
151	710-04982	Head Bolt M8x54
152	951-10292	Spark Plug/F6rtc
153	951-10345	Intake Valve

Engine Model 5P70MOB

Ref No.	Part Number	Description
158	951-11629	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
167	951-11739	Muffler Gasket
168	951-10403	Muffler Assembly
169	951-10411	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
174	751-10344	Push Rod
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
—	951-10413A	Cylinder Head Assembly
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
150	—	Cylinder Head
153	951-10345	Intake Valve
154	—	Valve Seal
155	—	Exhaust Valve
156	—	Valve Spring
157	—	Valve Spring Retainers
158	951-11629	Push Rod Guide
160	710-04902	Rocker Arm Stud
161	—	Rocker Arm
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket

Ref No.	Part Number	Description
—	951-10414B	Short Block Assembly
41	710-04916	Bolt M6x14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Upper Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
57	710-04922	Tank/Sump Bolt M8x50
76	714-04074	Governor Cotter Pin
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
83	—	Crankcase Complete
84	951-11763	Crankcase Cover Gasket
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
88	736-04491	Crankshaft Thrust Washer
91	951-11547	Dipstick / Oil Fill Tube O-Ring
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9x14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7x14
108	—	Crankcase Cover - dual drain
109	951-11627	Lower Crankshaft Seal
118	951-11257	Carburetor Gasket Plate
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt

Ref No.	Part Number	Description
—	951-11765	Oil Filler Tube Assemblby
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Fill Tube
—	951-11764	Dipstick Assembly
90	951-11764	Dipstick
91	951-11547	Dipstick / Oil Fill Tube O-Ring
—	951-10300	Fuel Cap Assembly
59	—	Fuel Cap
60	—	Foam Insert
61	—	Vent Gasket
—	951-10412A	Air Cleaner Housing Ass'y Comp
113	951-10412A	Air Filter Cover
117	—	Inner Air Cleaner Housing
—	951-10342	Muffler Stud Assemblby
166	710-05094	Muffler Stud M6x95
—	951-11721	Recoil Spring and Pulley Ass'y
7	—	Rope Return Spring
8	951-11721	Starter Pulley
—	951-10364	Fuel Line Kit
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
65	—	Fuel Hose
—	951-10370	Oil Drain Plug and Washer Ass'y
93	710-04906	Oil Plug
94	736-04454	Oil Plug Washer
—	951-11770	Gasket Kit - Complete
43	951-11729	Breather Gasket
45	951-11545	Upper Crankshaft Seal
77	951-11574	Governor Seal
84	951-11763	Crankcase Cover Gasket
91	951-11547	Dipstick / Oil Fill Tube O-Ring
94	736-04454	Oil Drain Plug Washer
109	951-11627	Lower Crankshaft Seal
146	951-11766	Carburetor Gasket
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket
—	951-10345	Valve Kit
153	951-10345	Intake Valve
155	—	Exhaust Valve

Ref No.	Part Number	Description
—	951-11772	Gasket Kit - External
43	951-11729	Breather Gasket
91	951-11547	Dipstick / Oil Fill Tube O-Ring
94	736-04440	Oil Drain Plug Washer
146	951-11766	Carburetor Gasket
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
—	951-10344	Push Rod Kit
174	951-10344	Push Rod
—	951-11773	Carburetor Kit - Major
120	—	Choke & Throttle Shaft Dust Seals
131	—	Idle Speed Adjusting Screw
134	—	Main Nozzle / Emulsion Tube
135	—	Main Jet
136	951-11589	Fuel Bowl O-Ring
137	—	Needle Valve (Float)
138	—	Needle Valve Spring
139	—	Float
140	—	Float Pin
142	951-11348	Fuel Bowl Gasket
145	951-11349	Fuel Drain Plug Gasket


Briggs & Stratton Model - 122L05-0768-F1


48 SHORT BLOCK

1058 OPERATOR'S MANUAL


1329 REPLACEMENT ENGINE




1330 REPAIR MANUAL

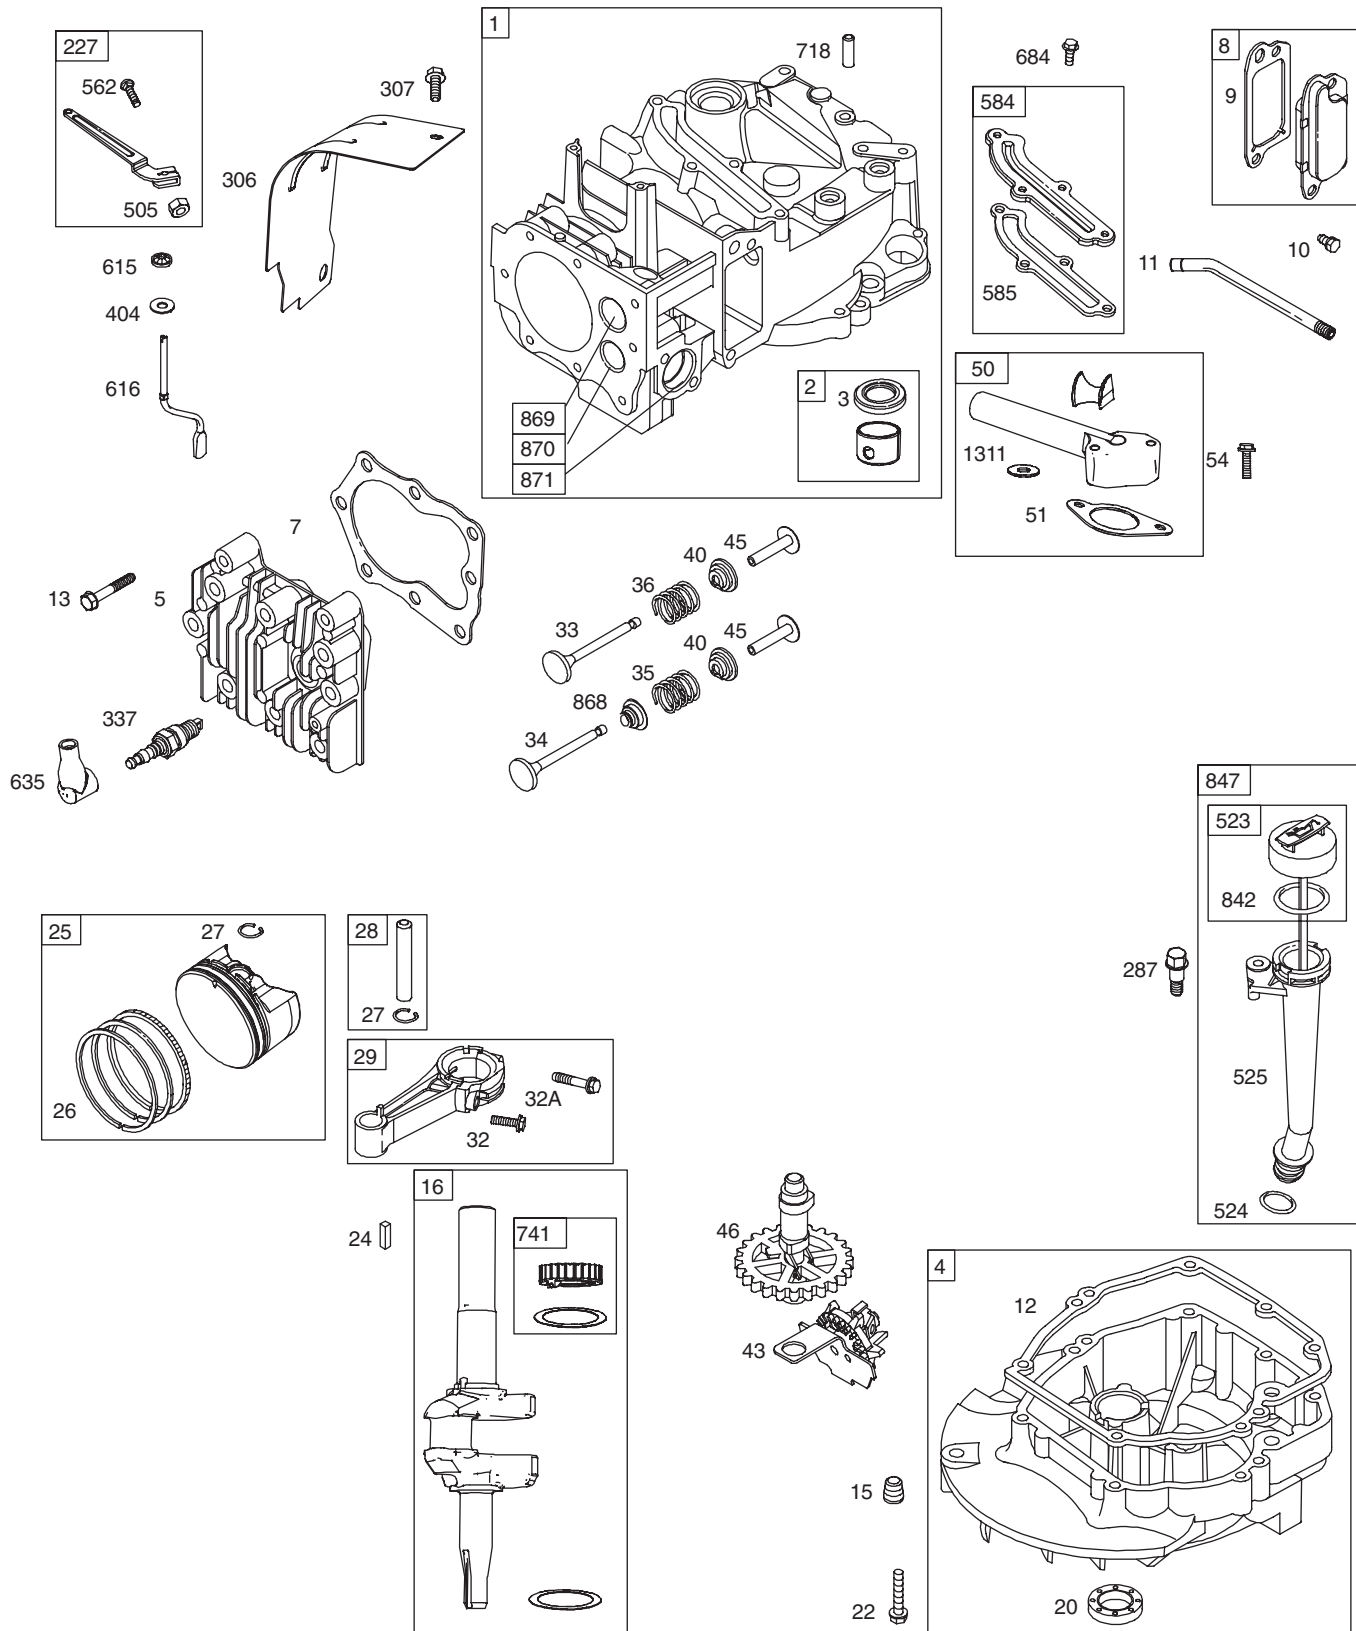

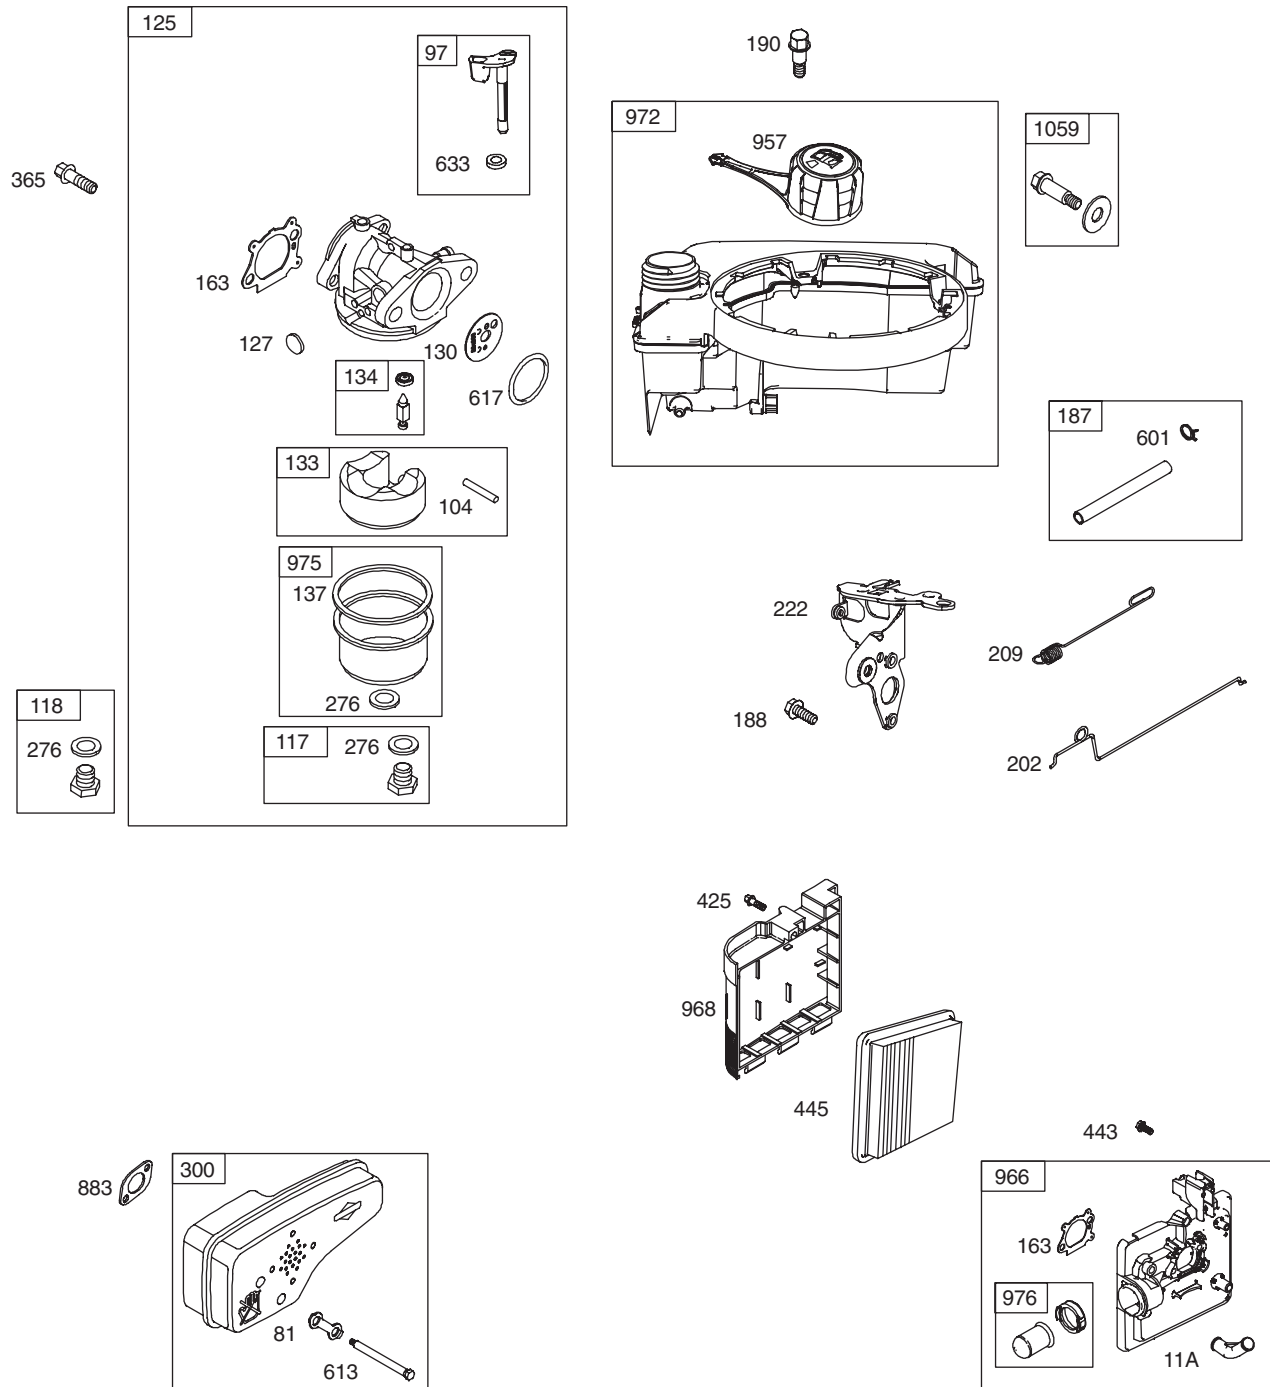

Briggs & Stratton Model - 122L05-0768-F1

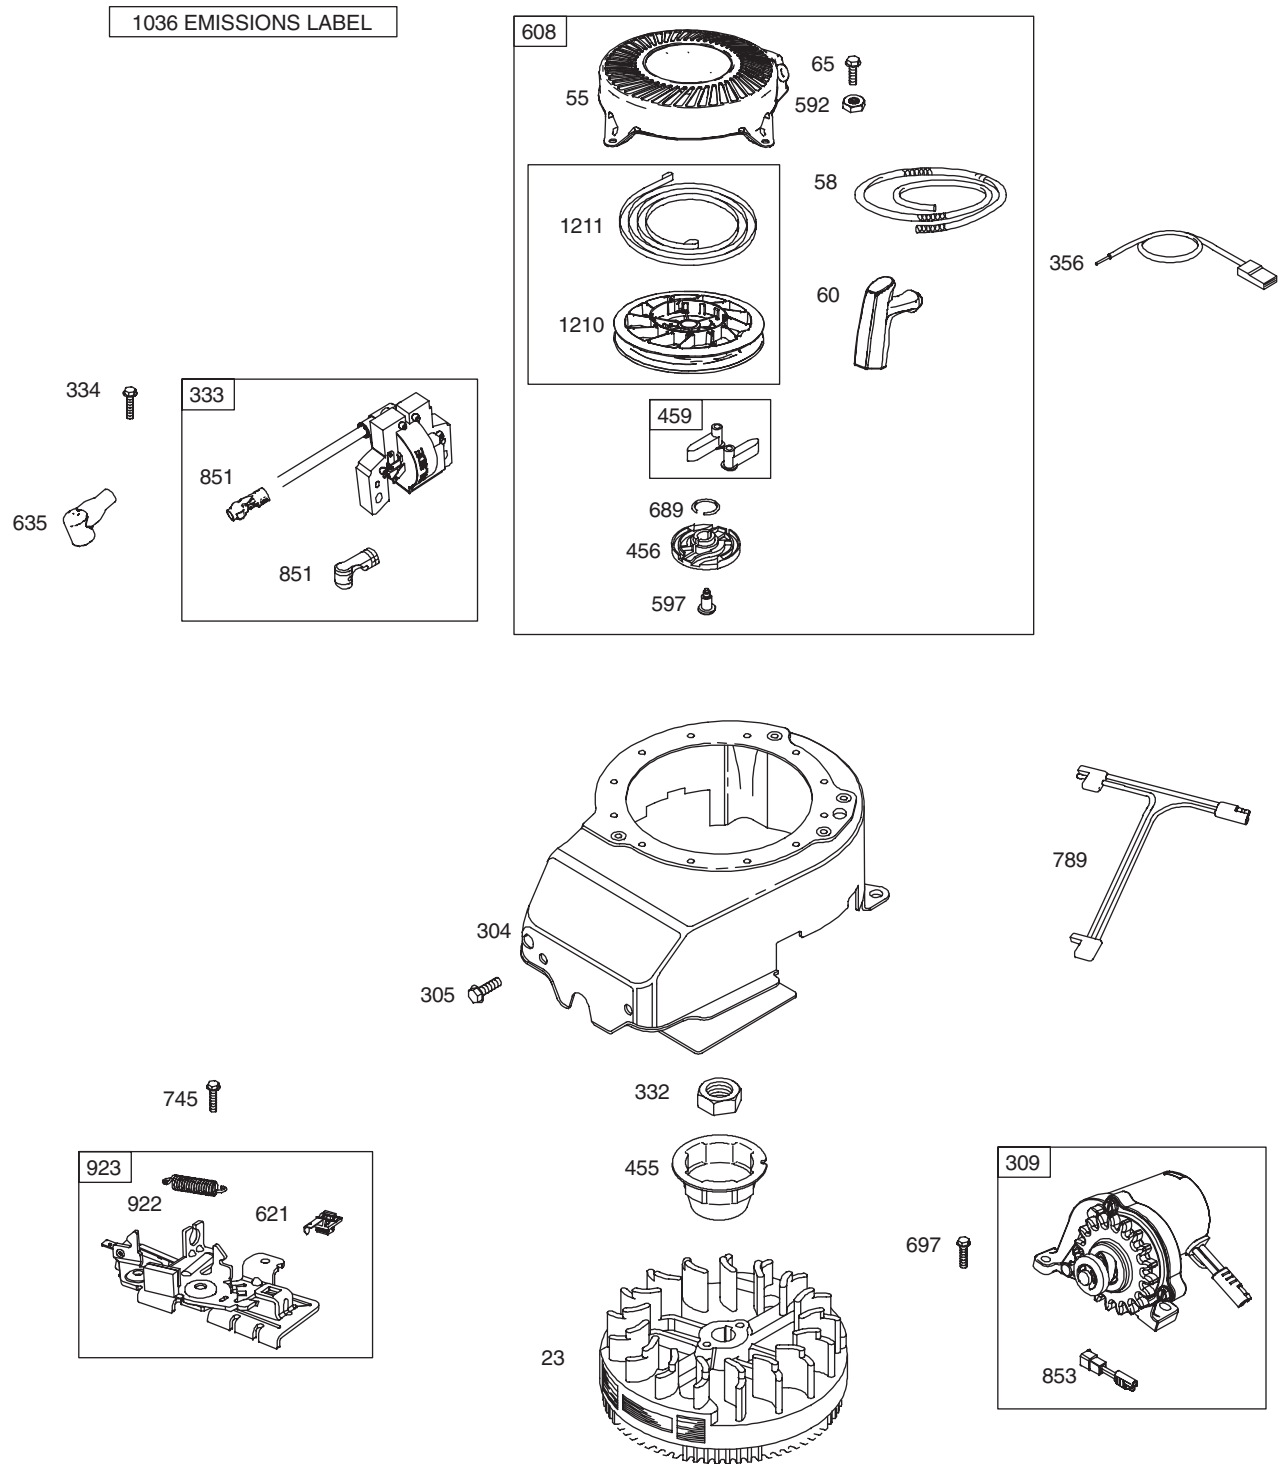

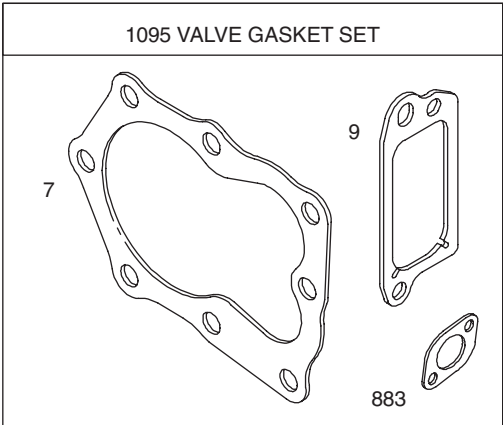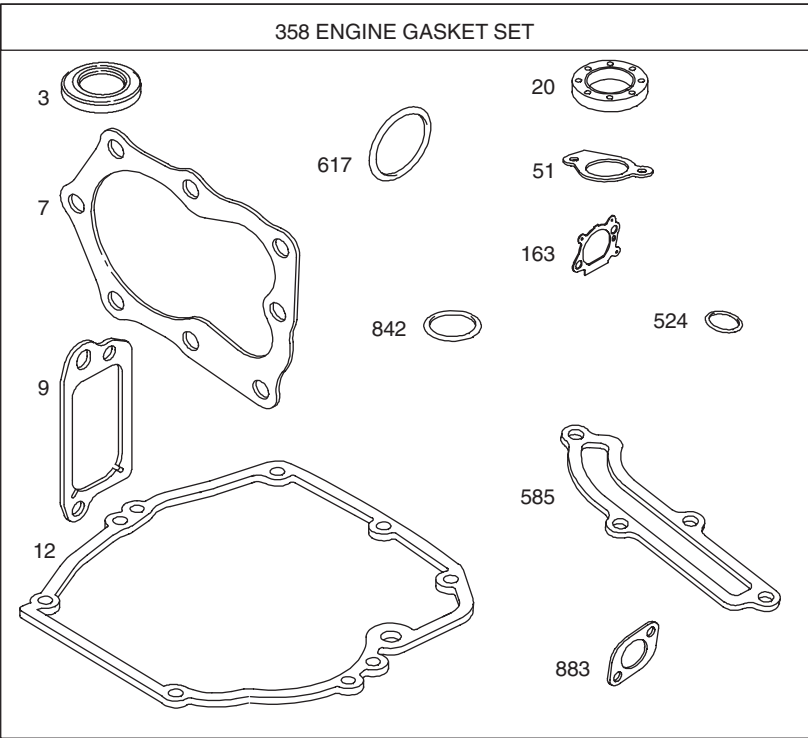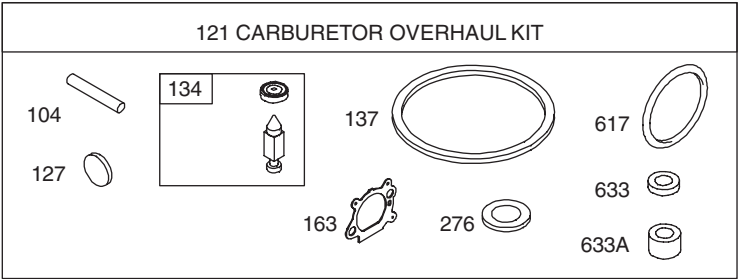


Briggs & Stratton Model - 122L05-0768-F1


Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	697322	Cylinder Assembly	48	792741	Short Block
2	399269	Kit-Bushing/Seal (Magneto Side)	50	794305	Manifold-Intake
3	299819s	Seal-Oil (Magneto Side)	51	272199s	Gasket-Intake
4	493279	Sump-Engine	54	691650	Screw (Intake Manifold)
5	691160	Head-Cylinder	55	691421	Housing-Rewind Starter
7	692249	Gasket-Cylinder Head	58	697316	Rope-Starter
8	695250	Breather Assembly	60	281434s	Grip-Starter Rope
9	699472	Gasket-Breather	65	690837	Screw (Rewind Starter)
10	691125	Screw (Breather Assembly)	81	691740	Lock-Muffler Screw
11	691781	Tube-Breather	97	696565	Shaft-Throttle
11A	691923	Tube-Breather	104	691242	Pin-Float Hinge
12	692232	Gasket-Crankcase	117	494870	Jet-Main (Standard)
13	690912	Screw (Cylinder Head)	118	498667	Jet-Main (High Altitude)
15	691680	Plug-Oil Drain	121	498260	Kit-Carburetor Overhaul
16	797017	Crankshaft	125	790821	Carburetor
20	399781s	Seal-Oil (PTO Side)	127	694468	Plug-Welch
22	691092	Screw (Crankcase Cover/Sump)	130	696564	Valve-Throttle
23	691987	Flywheel	133	398187	Float-Carburetor
24	222698s	Key-Flywheel	134	398188	Kit-Needle/Seat
25	797302	Piston Assembly (Standard)	137	693981	Gasket-Float Bowl
	797303	Piston Assembly (.020" Oversize)	163	795269	Gasket-Air Cleaner
26	797304	Ring Set (Standard)	187	791766	Line-Fuel (Cut To Req'd. Length)
	797305	Ring Set (.020" Oversize)	188	693399	Screw (Control Bracket)
27	691588	Lock-Piston Pin	190	690940	Screw (Fuel Tank)
28	298909	Pin-Piston	202	691829	Link-Mechanical Governor
29	797306	Rod-Connecting	209	699056	Spring-Governor (No Color)
32	691664	Screw (Connecting Rod) (Short)	222	795937	Bracket-Control
32A	695759	Screw (Connecting Rod) (Long)	227	690783	Lever-Governor Control
33	262651s	Valve-Exhaust	276	271716	Washer-Sealing
34	262652s	Valve-Intake	287	690940	Screw (Dipstick Tube)
35	691270	Spring-Valve (Intake)	300	692038	Muffler
36	691270	Spring-Valve (Exhaust)	304	695892	Housing-Blower
40	692194	Keeper-Valve	305	691108	Screw (Blower Housing)
43	691997	Slinger-Governor/Oil	306	690450	Shield-Cylinder
45	690548	Tappet-Valve	307	690345	Screw (Cylinder Shield)
46	691449	Camshaft	309	795092	Motor-Starter

Briggs & Stratton Model - 122L05-0768-F1


Ref No.	Part Number	Description	Ref No.	Part Number	Description
332	690662	Nut (Flywheel)	697	691127	Screw (Drive Cap)
333	802574	Armature-Magneto	718	690959	Pin-Locating
334	691061	Screw (Magneto Armature)	741	795755	Gear-Timing
337	796112s	Plug-Spark	745	691648	Screw (Brake)
356	692390	Wire-Stop	789	796574	Harness-Wiring
358	794307	Gasket Set-Engine	842	691031	Seal-O Ring (Dipstick Tube)
365	691688	Screw (Carburetor)	847	692047	Dipstick/Tube Assembly
404	690272	Washer (Governor Crank)	851	493880s	Terminal-Spark Plug
425	690670	Screw (Air Cleaner Cover)	853	695268	Adapter-Wire
443	692523	Screw (Air Cleaner Primer Base)	868	697338	Seal-Valve
445	491588s	Filter-Air Cleaner Cartridge	869	691155	Seat-Valve (Intake)
455	791960	Cup-Flywheel	870	690380	Seat-Valve (Exhaust)
456	692299	Plate-Pawl Friction	871	262001	Bushing-Valve Guide (Exhaust)
459	281505s	Pawl-Ratchet		63709	Bushing-Valve Guide (Intake)
505	691251	Nut (Governor Control Lever)	883	691881	Gasket-Exhaust
523	499621	Dipstick	922	692135	Spring-Brake
524	692296	Seal-Dipstick Tube	923	796387	Brake
525	495265	Tube-Dipstick	957	796577	Cap-Fuel Tank
562	691119	Bolt (Governor Control Lever)	966	795259	Base-Air Cleaner Base
584	697734	Cover-Breather Passage	968	692298	Cover-Air Cleaner
585	691879	Gasket-Breather Passage	972	796578	Tank-Fuel
592	690800	Nut (Rewind Starter)	975	796611	Bowl-Float
597	691696	Screw (Pawl Friction Plate)	976	694395	Primer-Carburetor
601	791850	Hose-Clamp (Green)	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
608	497680	Starter-Rewind	1058	277039	Operator's Manual
613	691340	Screw (Muffler)	1059	692311	Kit-Screw/Washer (Fuel Tank)
615	690340	Retainer-Governor Shaft	1095	498528	Gasket Set-Valve
616	698801	Crank-Governor	1210	498144	Pulley/Spring Assembly (Pulley)
617	270344s	Seal-O Ring	1211	498144	Pulley/Spring Assembly (Spring)
621	692310	Switch-Stop	1329	126L07-1062-F1	Replacement Engine
633	691321	Seal-Choke/Throttle Shaft	1311	690390	Washer (Intake Manifold)
635	66538s	Boot-Spark Plug	1330	270962	Repair Manual
684	690345	Screw (Breather Passage Cover)			
689	691855	Spring-Friction			


Briggs & Stratton Model - 12S905-0707-B1

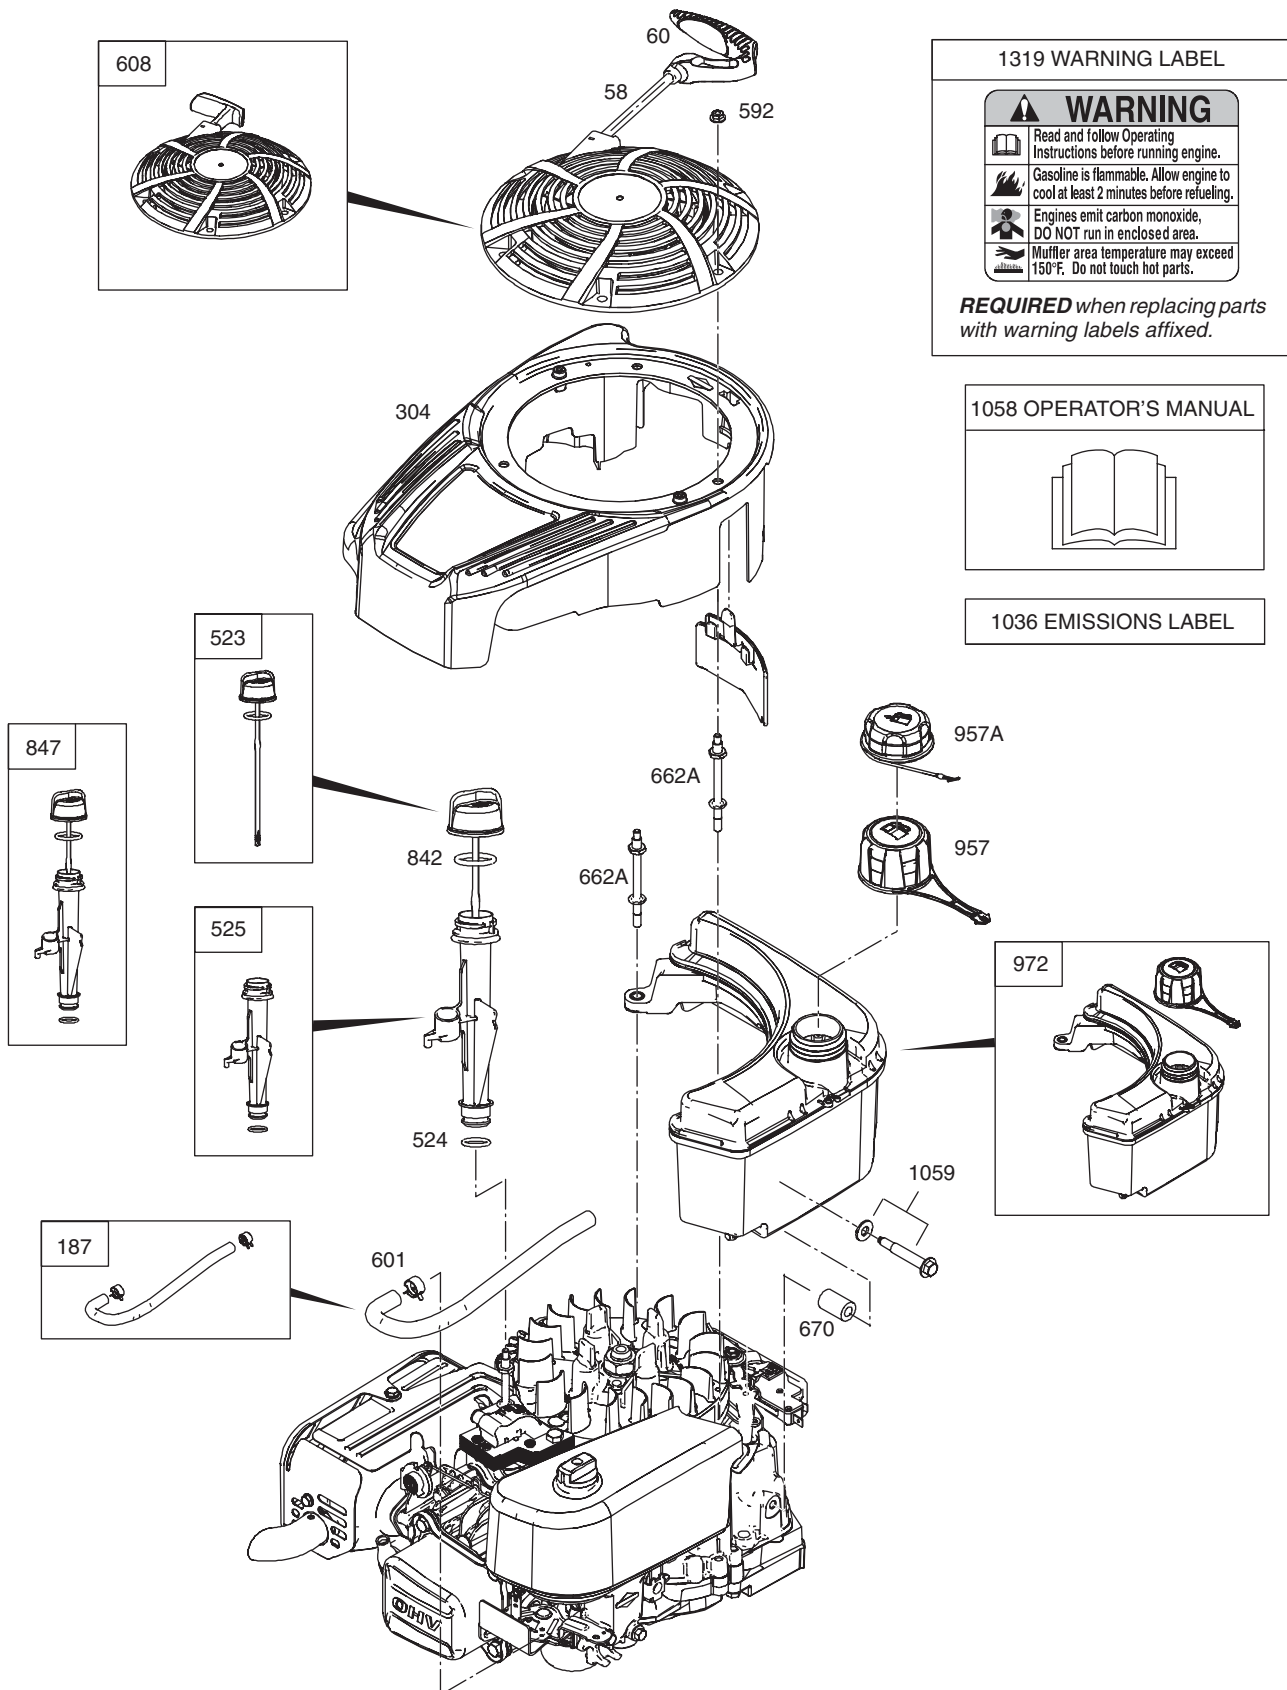

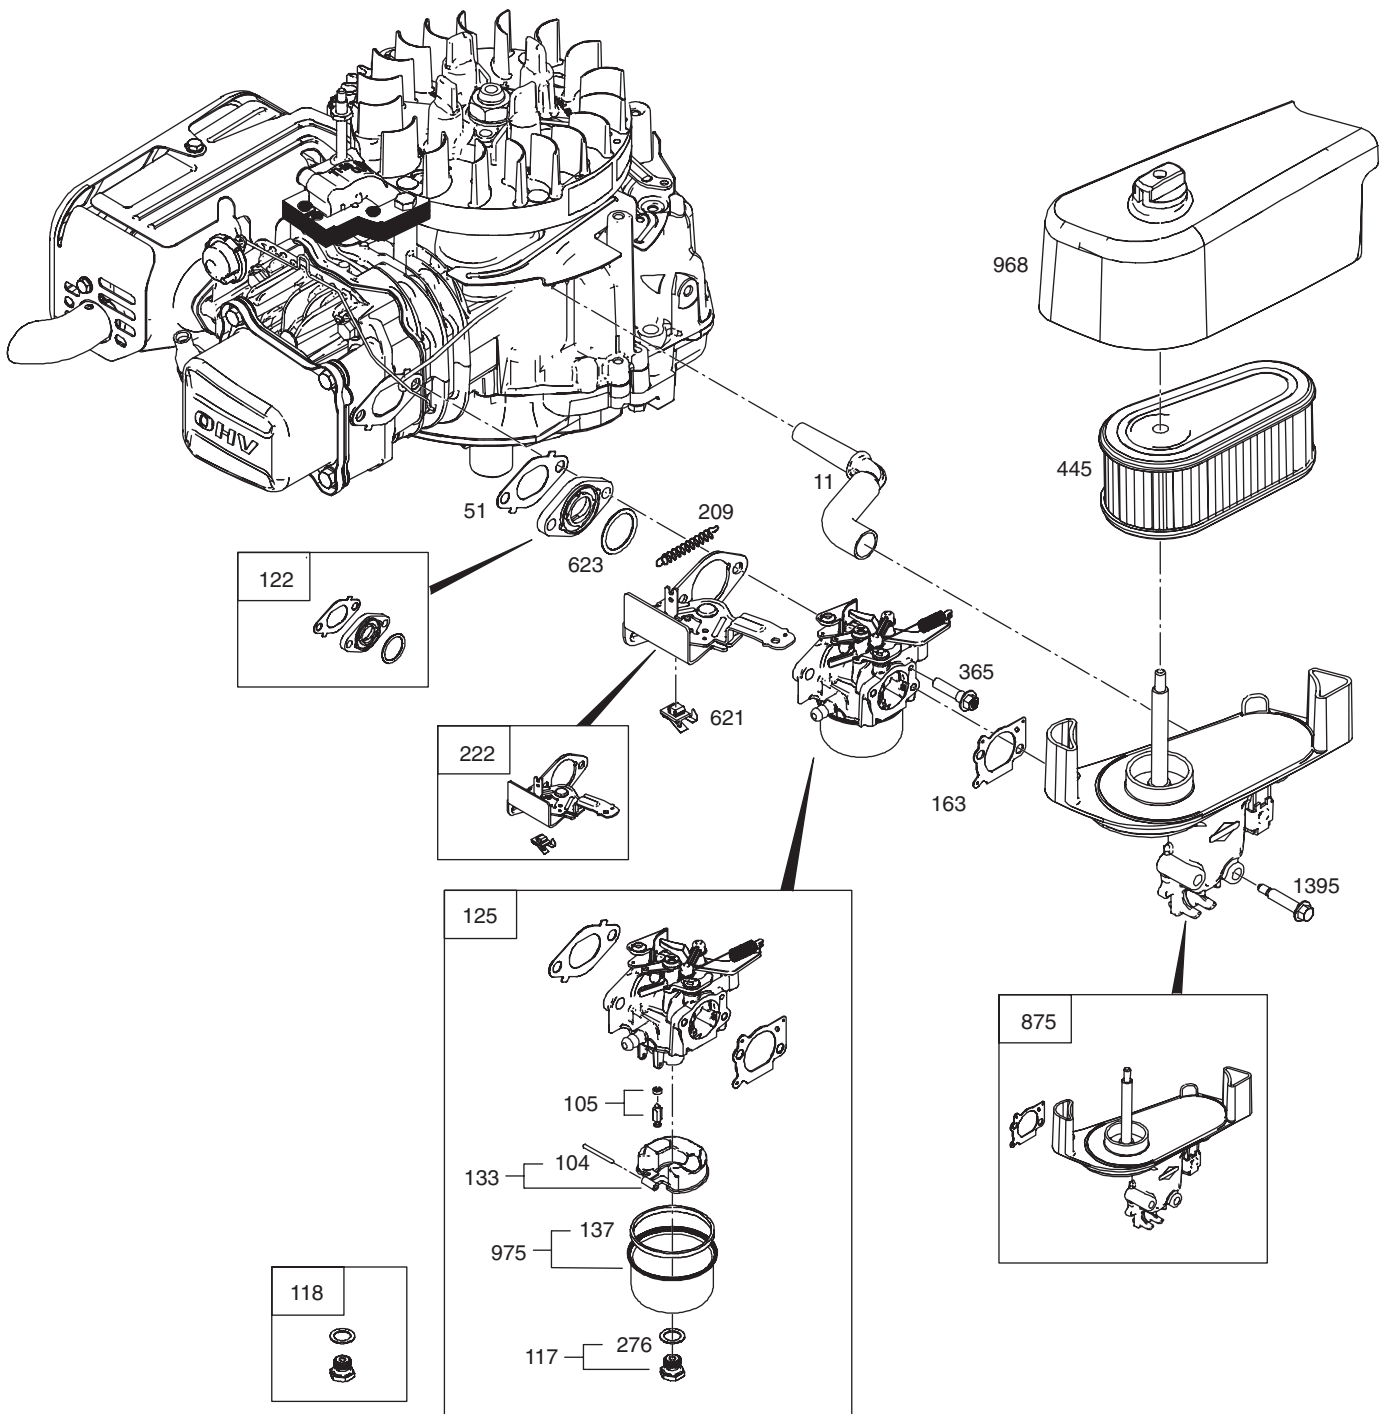



Briggs & Stratton Model - 12S905-0707-B1

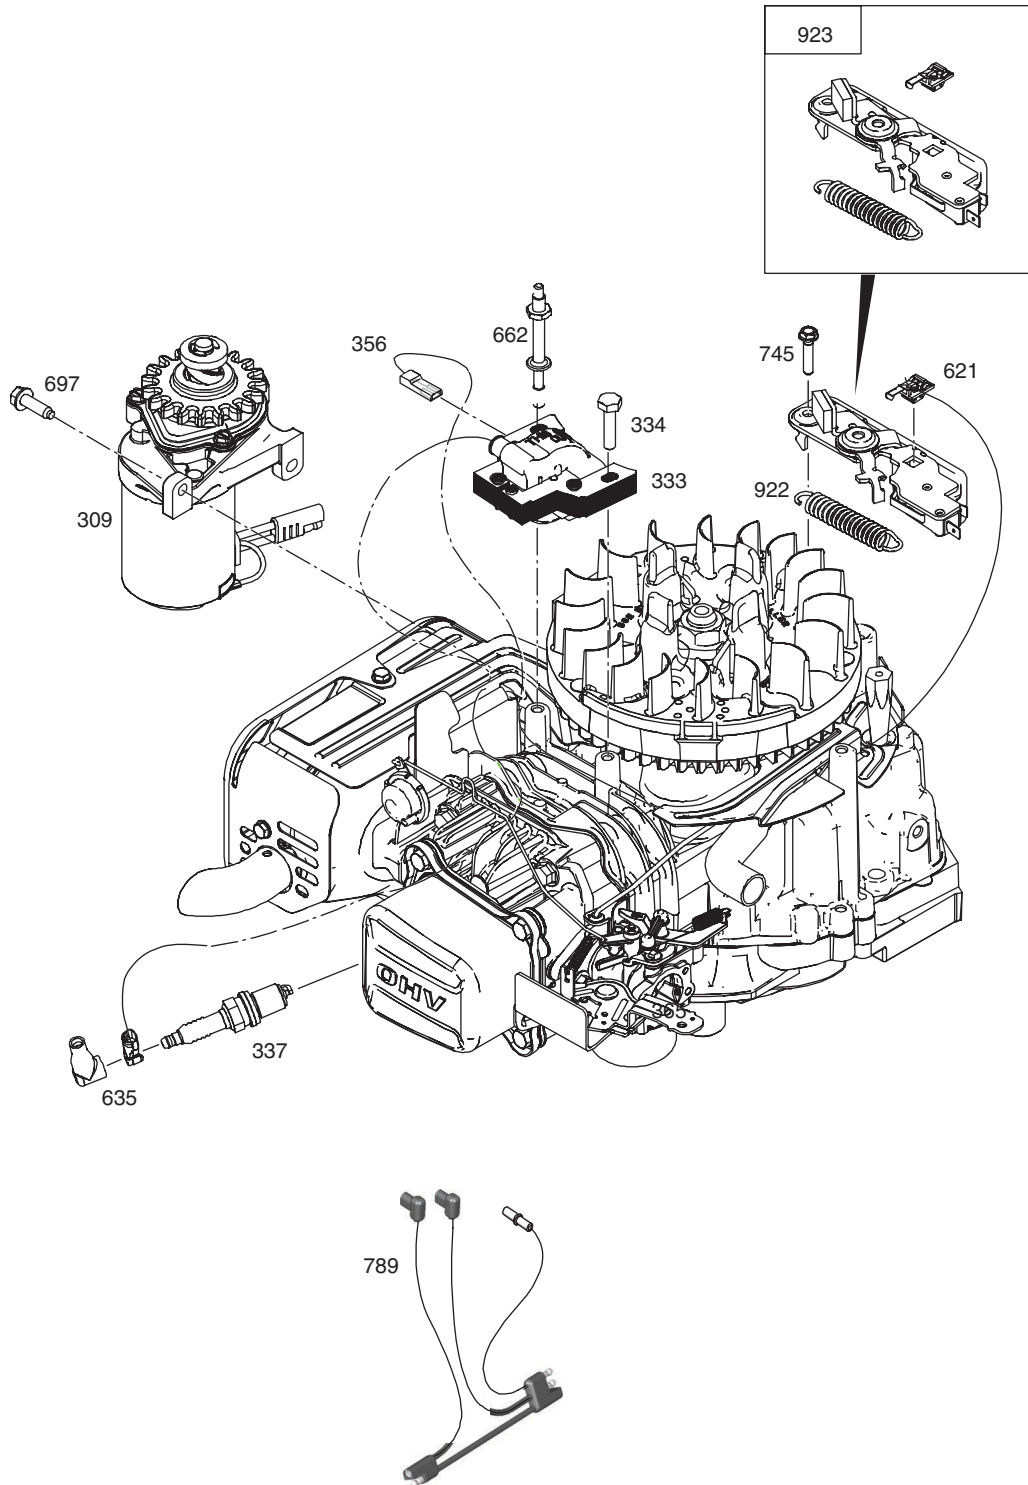



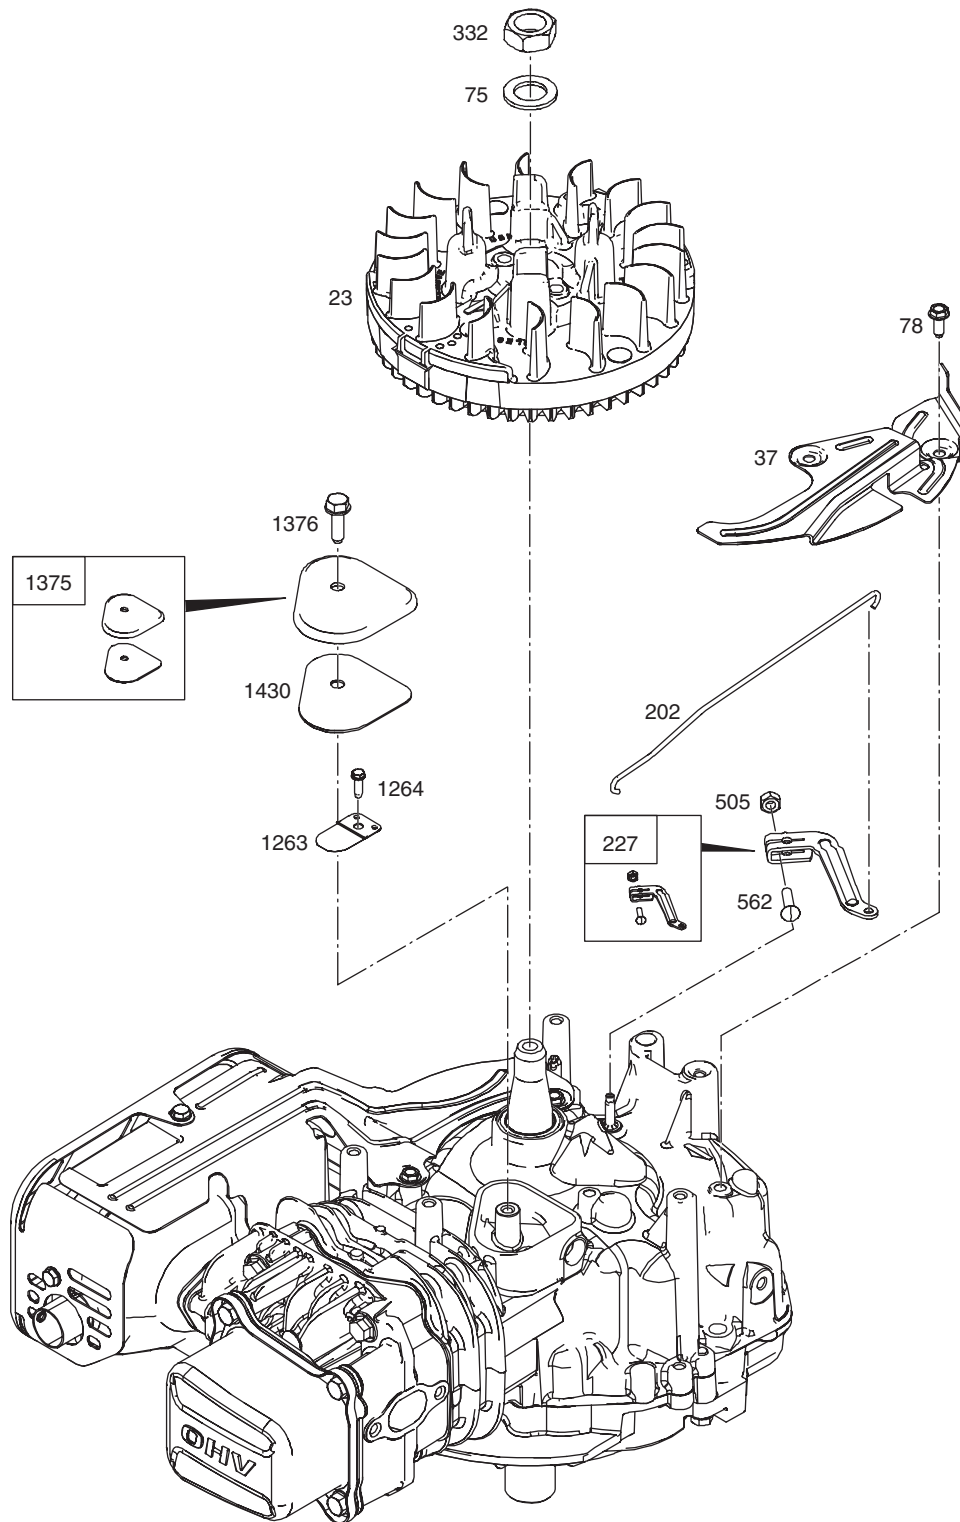



Briggs & Stratton Model - 12S905-0707-B1

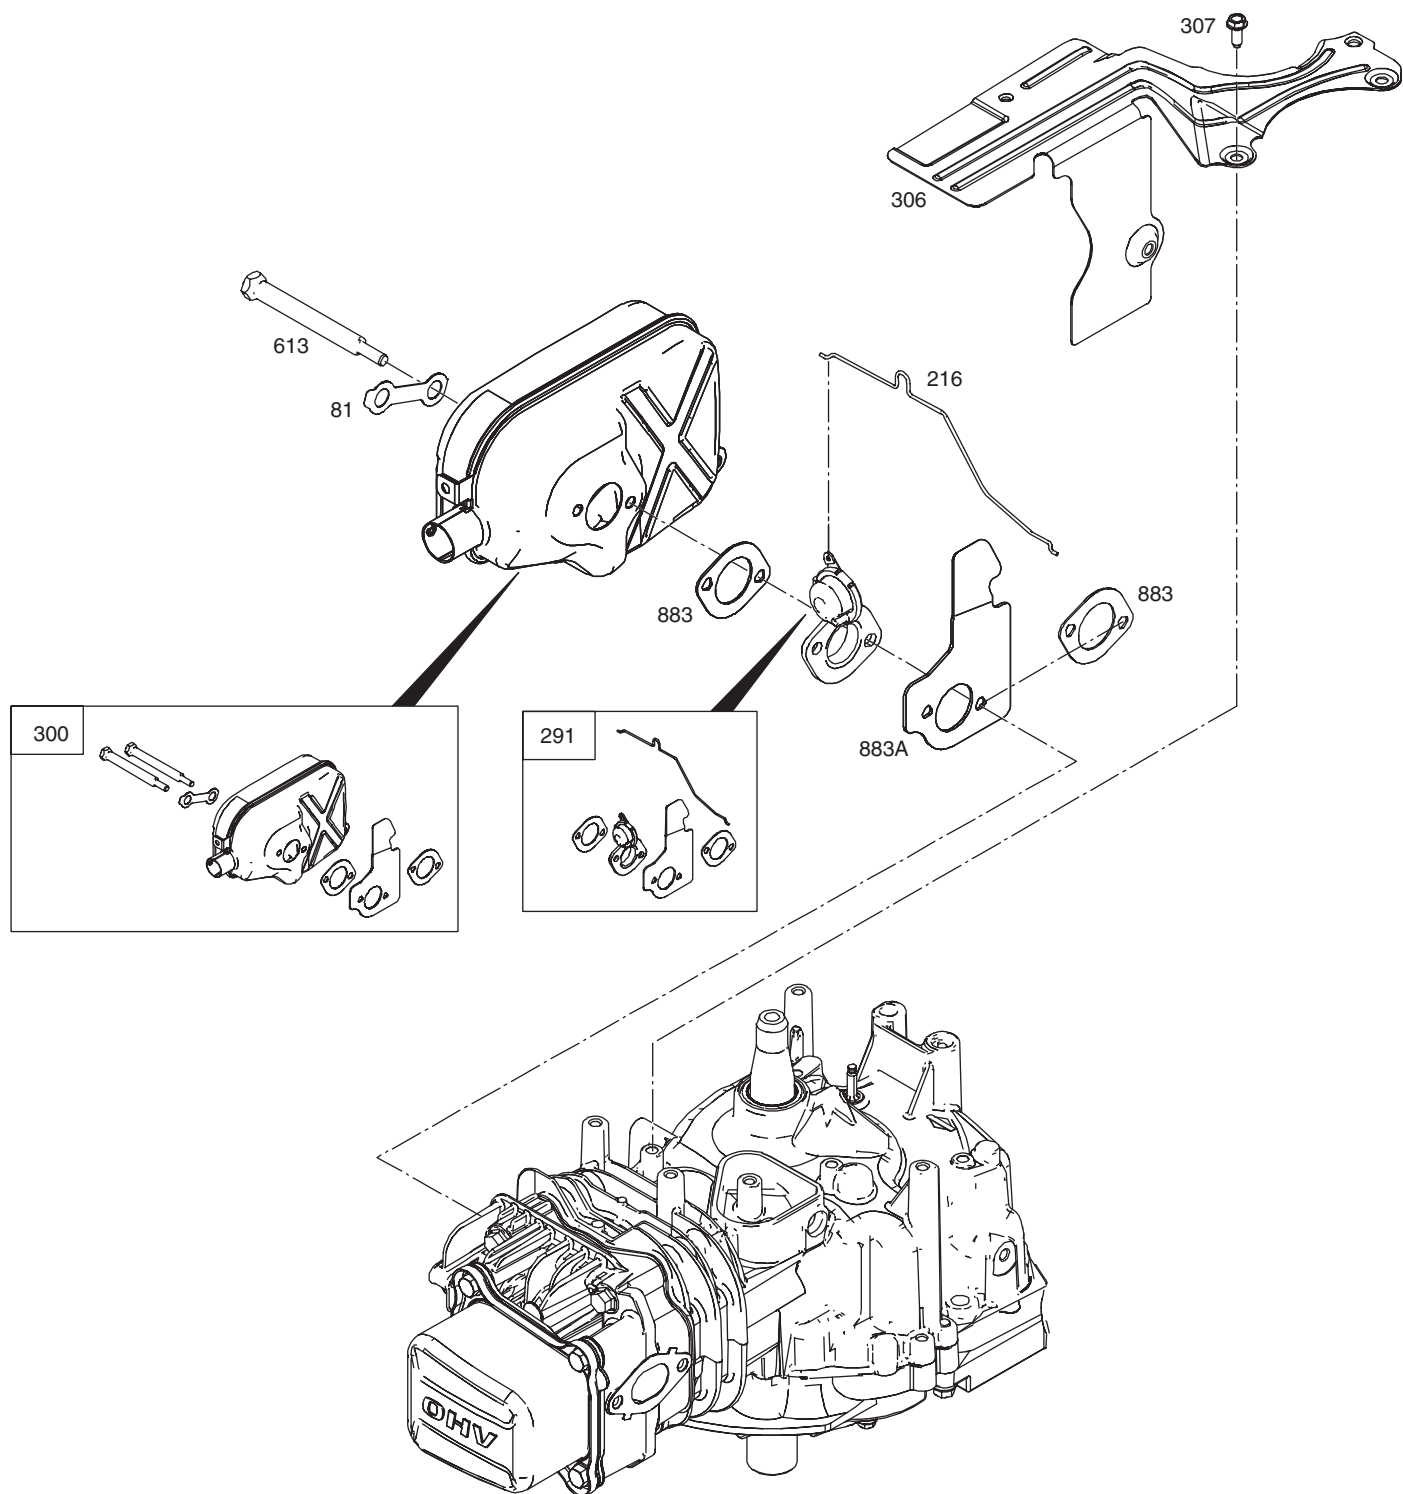

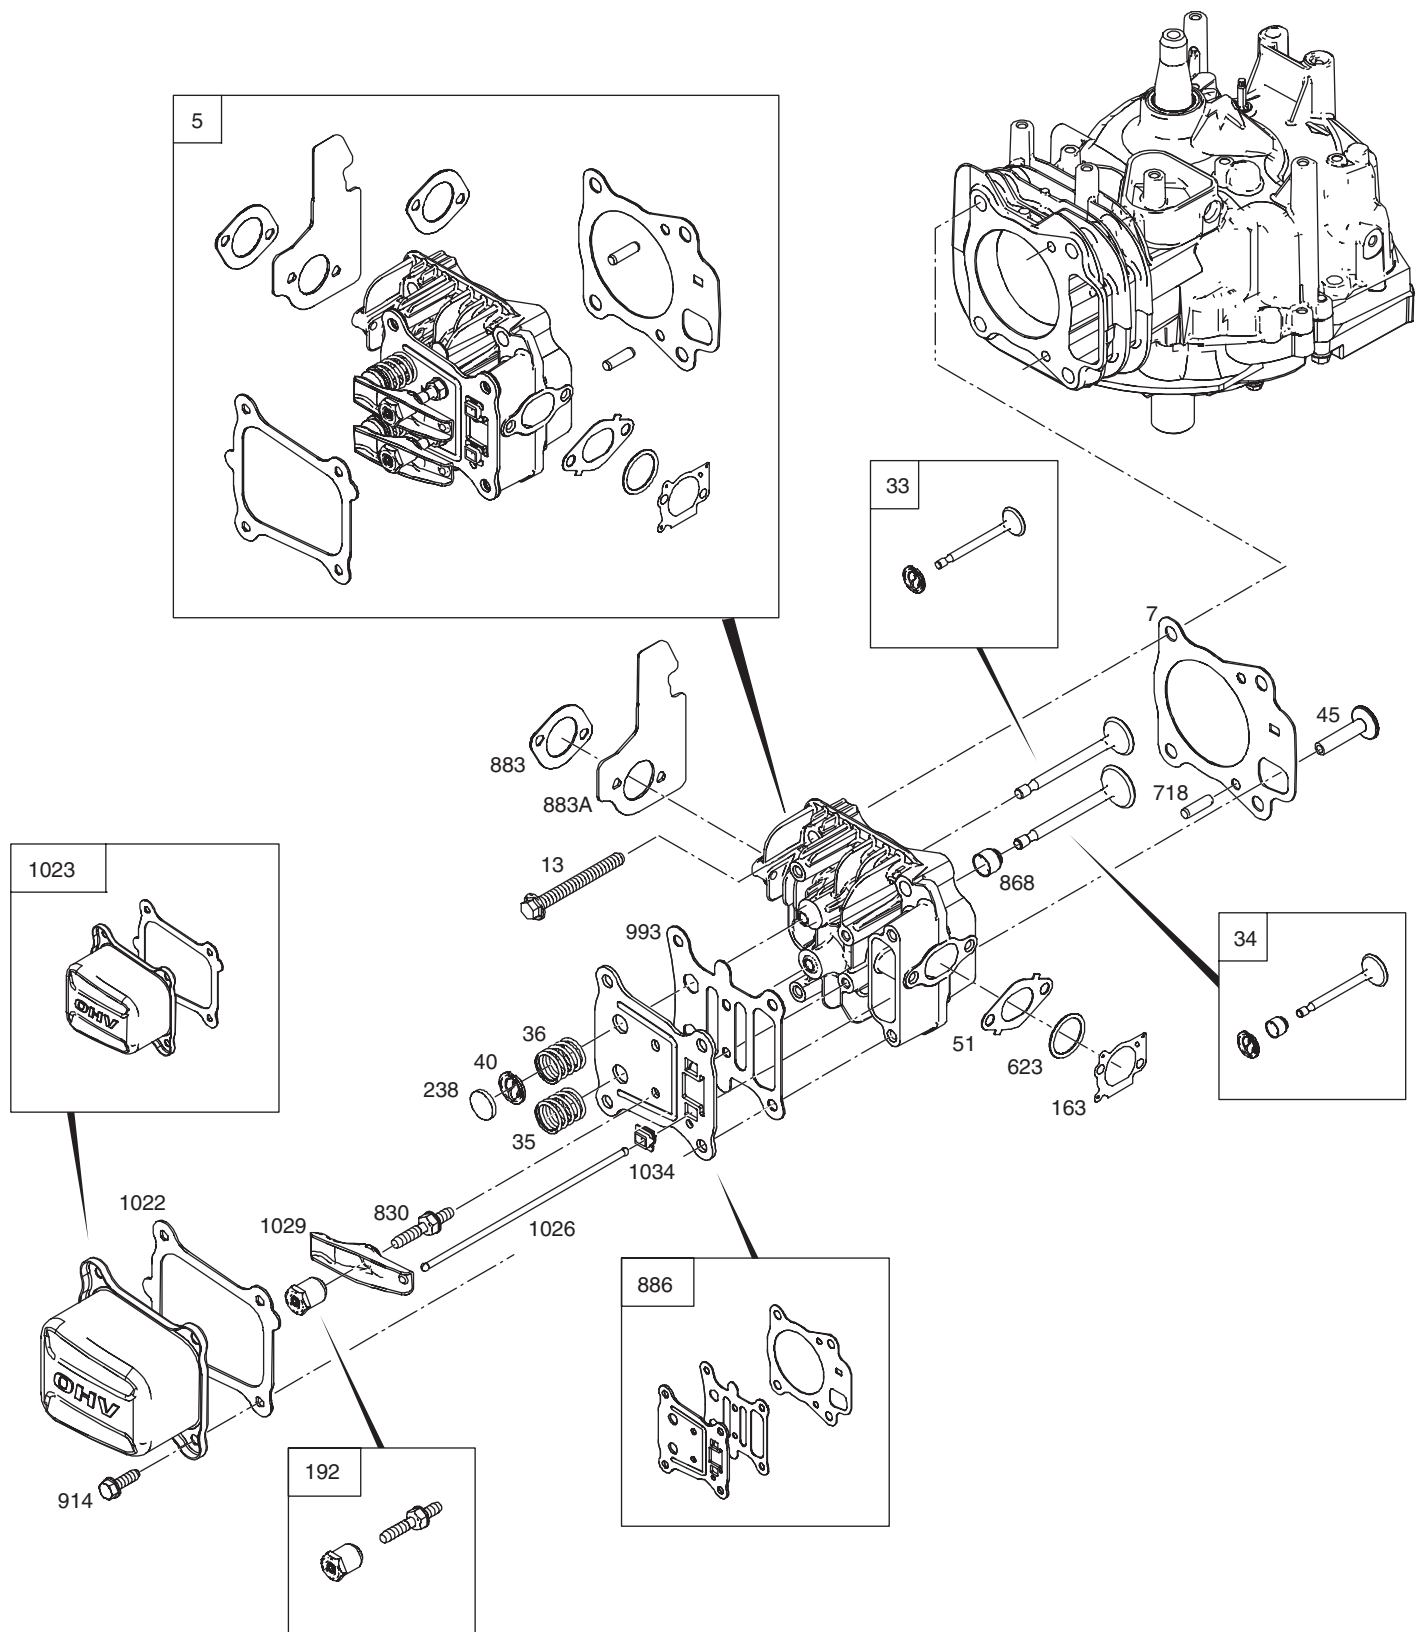


Briggs & Stratton Model - 12S905-0707-B1

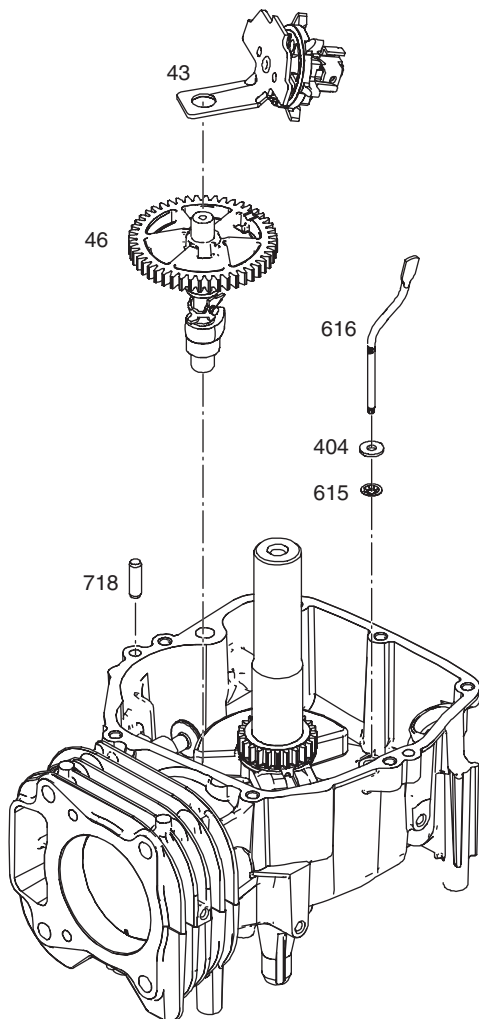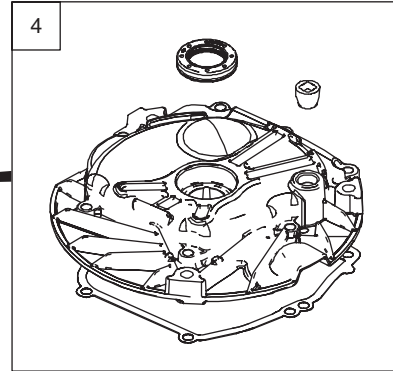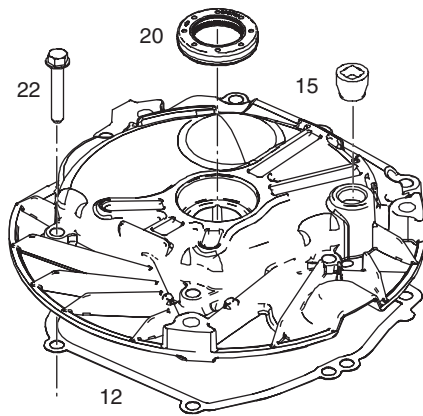

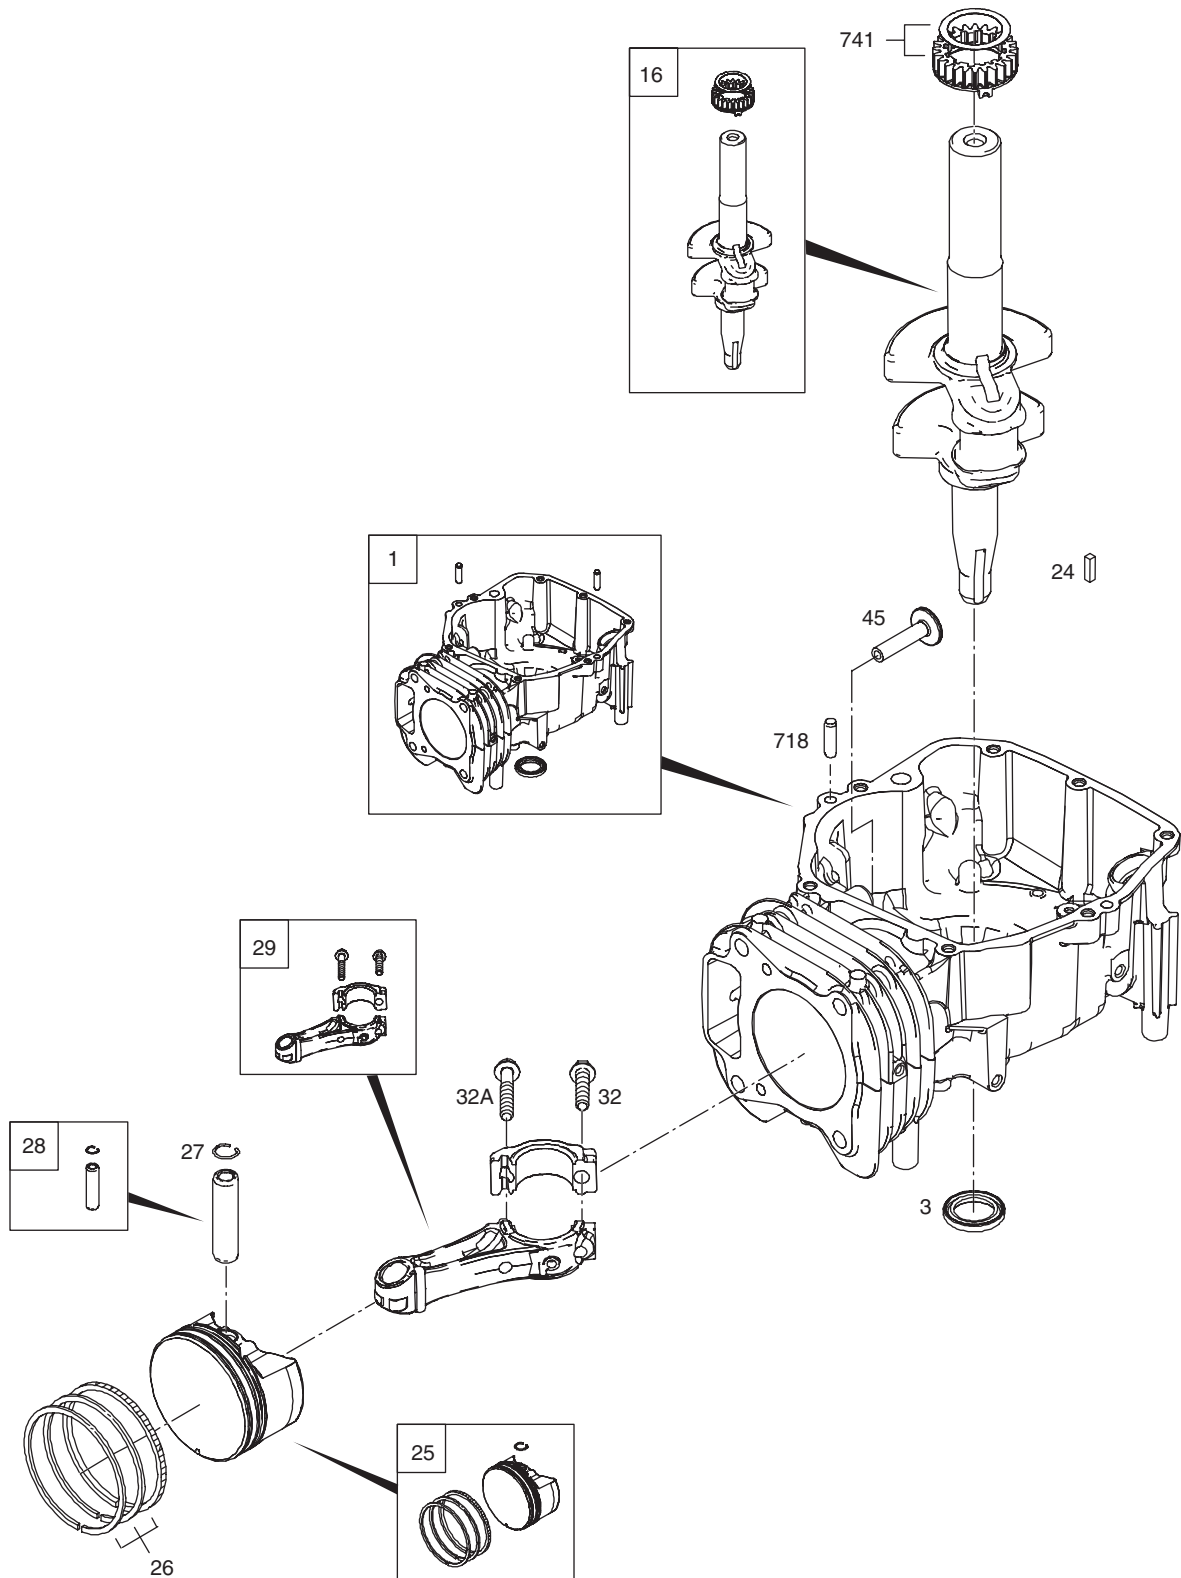


Briggs & Stratton Model - 12S905-0707-B1


358 ENGINE GASKET SET

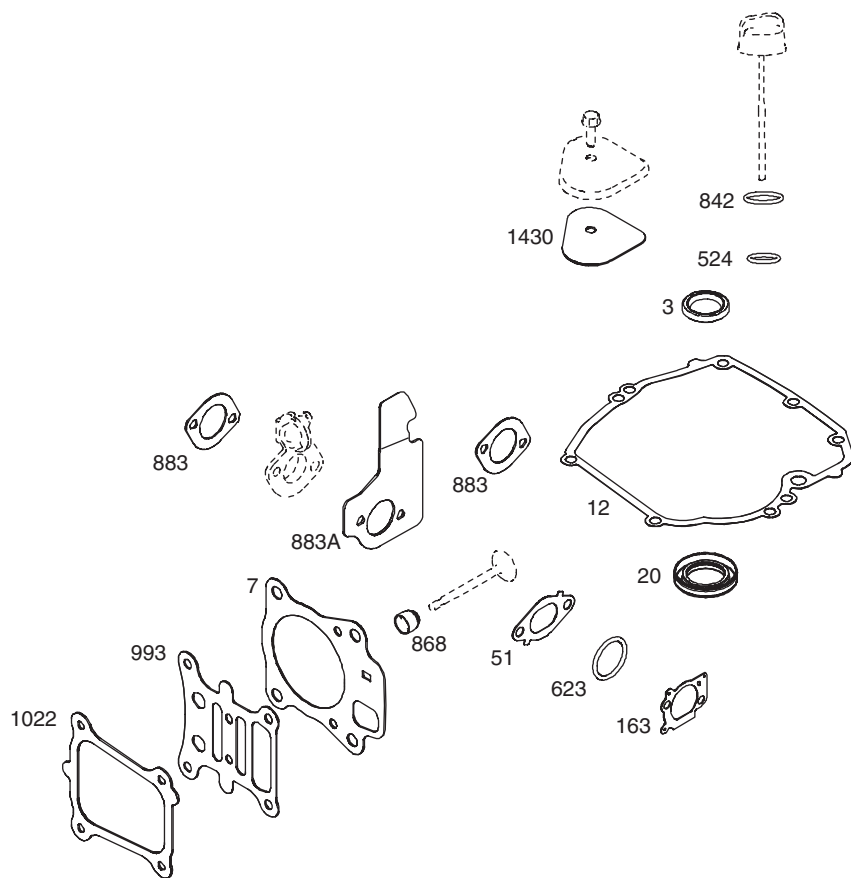

1095 VALVE GASKET SET

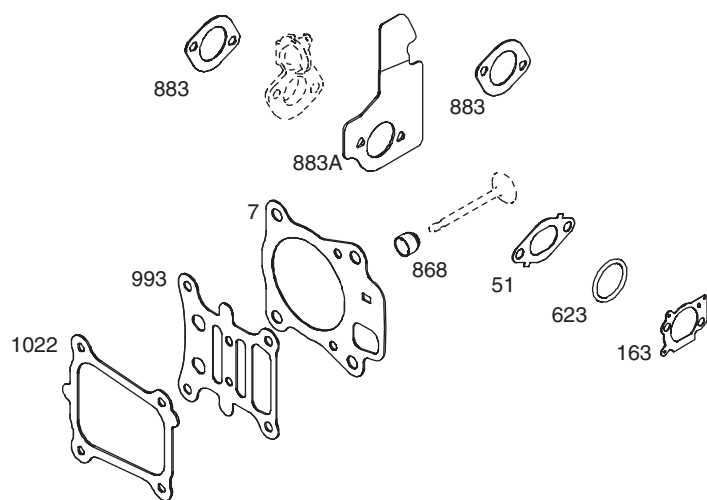

121 CARBURETOR OVERHAUL KIT

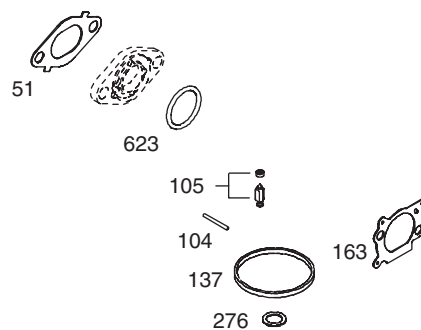

Briggs & Stratton Model - 12S905-0707-B1

Ref No.	Part Number	Description
1	796509	Cylinder Assembly
3	299819S	Seal-Oil
4	493279	Sump-Engine
5	796471	Head-Cylinder
7	796475	Gasket-Cylinder Head
11	796478	Tube-Breather
12	692232	Gasket-Crankcase
13	793451	Screw
15	691680	Plug-Oil Drain
16	796469	Crankshaft
20	399781S	Seal-Oil
22	691092	Screw
23	796619	Flywheel
24	222698S	Key-Flywheel
25	796639	Piston Assembly (Standard)
25	796640	Piston Ass'y. (.020" Oversize)
26	796641	Ring Set (Standard)
26	796642	Ring Set (.020" Oversize)
27	691588	Lock-Piston Pin
28	298909	Pin-Piston
29	796470	Rod-Connecting
32	691664	Screw
32A	695759	Screw
33	499642	Valve-Exhaust
34	795443	Valve-Intake
35	691304	Spring-Valve
36	691304	Spring-Valve
37	796536	Guard-Flywheel
40	692194	Retainer-Valve
43	796650	Slinger-Governor/Oil
45	690977	Tappet-Valve


Ref No.	Part Number	Description
46	694039	Camshaft
51	796596	Gasket-Intake
58	697316	Rope-Starter
60	281434S	Grip-Starter Rope
75	691736	Washer
78	793480	Screw
81	691740	Lock-Muffler Screw
104	691242	Pin-Float Hinge
105	398188	Valve-Float Needle
117	697355	Jet-Main
118	494870	Jet-Main
121	796612	Kit-Carburetor Overhaul
122	796595	Spacer-Carburetor
125	796608	Carburetor
133	398187	Float-Carburetor
137	796610	Gasket-Float Bowl
163	691894	Gasket-Air Cleaner
187	796491	Line-Fuel
192	796631	Adjuster-Rocker Arm
202	796657	Link-Mechanical Governor
209	796484	Spring-Governor
216	796485	Link-Choke
222	796482	Bracket-Control
227	796487	Lever-Governor Control
238	691300	Cap-Valve
276	271716	Washer-Sealing
291	796486	Thermostat
300	796495	Muffler-Exhaust
304	796693	Housing-Blower
306	796535	Shield-Cylinder
307	793480	Screw

Briggs & Stratton Model - 12S905-0707-B1

Ref No.	Part Number	Description
309	795092	Motor-Starter
332	690662	Nut
333	796499	Armature-Magneto
334	793454	Screw
337	692051	Plug-Spark
356	692390	Wire-Stop
358	796661	Gasket Set-Engine
365	793458	Screw
404	690272	Washer
445	795066	Filter-Air Cleaner Cartridge
505	793515	Nut
523	796503	Dipstick
524	692296	Seal-Dipstick Tube
525	796502	Tube-Dipstick
562	793514	Bolt
592	793481	Nut
601	791850	Clamp-Hose
608	796497	Starter-Rewind
613	796496	Screw
615	796674	Retainer-Governor Shaft
616	796488	Crank-Governor
621	692310	Switch-Stop
623	793628	Seal-O Ring
635	665385	Boot-Spark Plug
662	796537	Stud
662A	793479	Stud
670	793485	Spacer-Fuel Tank
697	691127	Screw
718	690959	Pin-Locating
741	795755	Gear-Timing
745	698557	Screw
789	792685	Harness-Wiring
830	796472	Stud-Rocker Arm


Ref No.	Part Number	Description
842	691031	Seal-O Ring
847	796501	Dipstick/Tube Assembly
868	795440	Seal-Valve
875	796492	Base-Air Cleaner
883	793497	Gasket-Exhaust
883A	796677	Gasket-Exhaust
886	796474	Gasket Kit-Cylinder Head Plate
914	794451	Screw
922	692135	Spring-Brake
923	796635	Brake
957	796577	Cap-Fuel Tank
957A	692046	Cap-Fuel Tank
968	796493	Cover-Air Cleaner
972	796489	Tank-Fuel
975	796611	Bowl-Float
993	796473	Gasket-Cylinder Head Plate
1022	796480	Gasket-Rocker Cover
1023	796479	Cover-Rocker Arm
1026	796481	Rod-Push
1029	691230	Arm-Rocker
1034	691343	Guide-Push Rod
1036		Label-Emissions
1058	278415	Manual-Operator's
1059	793471	Kit-Screw/Washer
1095	796662	Gasket Set-Valve
1263	697124	Reed-Breather
1264	793453	Screw
1319	794467	Label-Warning
1375	796476	Cover-Breather/Reed
1376	794451	Screw
1395	690349	Screw
1430	796477	Gasket-Breather/Reed

Honda Model - GCV190LAS3A Cylinder Barrel

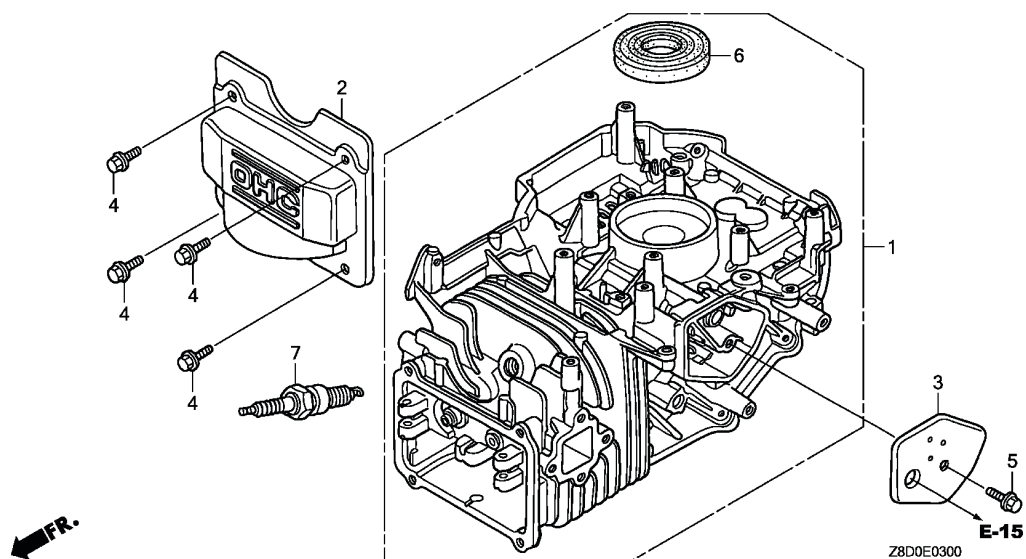


Ref No.	Part Number	Description
1.	12000-Z0Y-415	Cylinder Barrel Assembly
2.	12311-ZL8-000	Head Cover
3.	12355-ZL8-000	Breather Cover Complete
4.	90013-883-000	Flange Bolt, 6 X 12
5.	90014-952-000	Flange Bolt, 6 X 14
6.	91201-Z0Y-003	Oil Seal, 25.4 X 62 X 6
7.	98079-56846	Spark Plug (BPR6ES NGK)

Honda Model - GCV190LAS3A Oil Pan

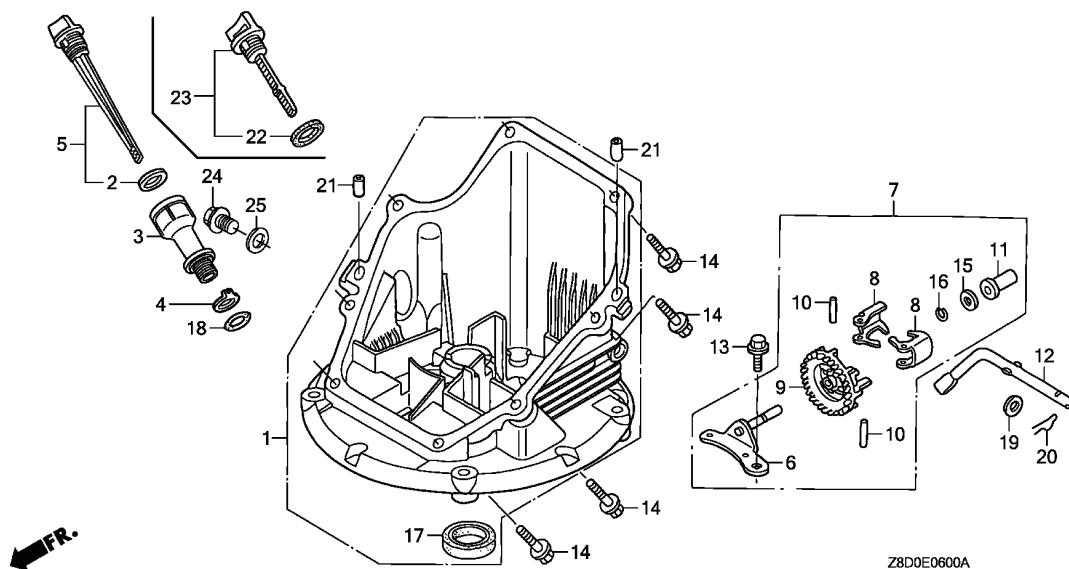


Ref No.	Part Number	Description
1.	11300-Z0Y-406	Cylinder Barrel Assembly
2.	15625-ZE6-000	Oil Filler Cap Packing
3.	15631-ZM0-000	Oil Fill Extension
4.	15639-ZM0-000	Extension Lock Washer
5.	15650-ZM0-801	Oil Level Gauge Assembly
6.	16508-ZM0-010	Governor Holder Shaft Comp.
7.	16510-ZM0-010	Governor Assembly
8.	16511-ZL8-000	Governor Weight
9.	16512-ZM0-000	Governor Weight Holder
10.	16513-ZE1-000	Governor Weight Pin
11.	16531-ZE1-000	Governor Slider
12.	16541-ZM0-000	Governor Arm Shaft
13.	90014-952-000	Flange Bolt, 6 x 14

Ref No.	Part Number	Description
14.	90121-952-000	Flange Bolt, 6 x 25
15.	90451-ZE1-000	Thrust Washer, 6mm
16.	90602-ZE1-000	Governor Holder Clip
17.	91202-ZL8-003	Oil Seal, 28 x 41.25 x 6
18.	91303-KF0-003	O-Ring, 14.8 x 2.4
19.	94101-06800	Plain Washer, 6mm
20.	94251-08000	Lock Pin, 8mm
21.	94301-08200	Dowel Pin, 8 x 20
22.	15625-Z2L-801	Oil Filler Cap Packing
23.	15650-Z0L-000	Oil Level Gauge Assembly
24.	90131-883-000	Drain Plug Bolt, 12 x 15
25.	94109-12000	Drain Plug Washer, 12mm

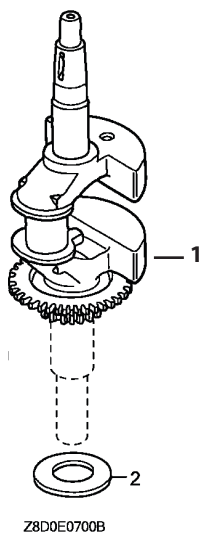


Ref No.	Part Number	Description
1.	13310-Z0Y-610	Crankshaft
2.	90402-ZL8-000	Thrust Washer

Honda Model - GCV190LAS3A Piston/Connecting Rod

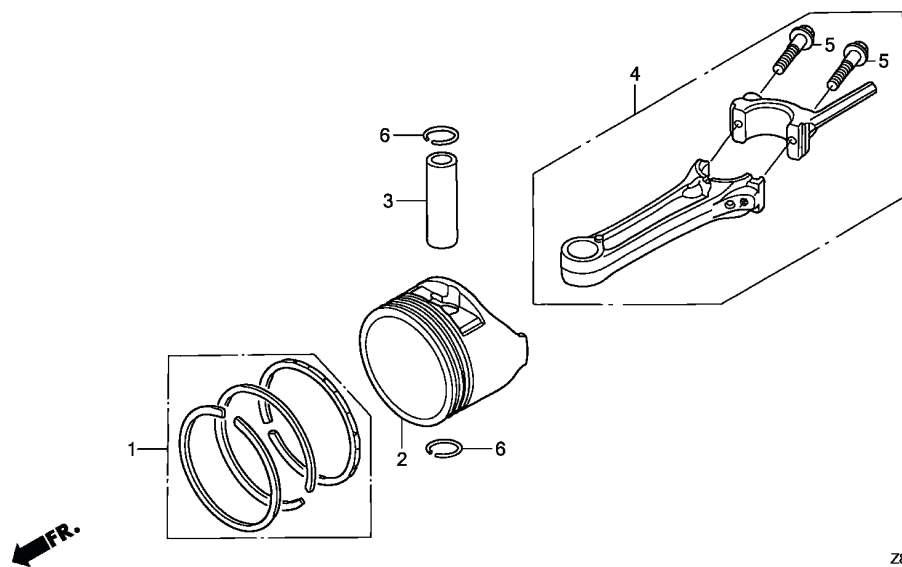


Ref No.	Part Number	Description
1.	13010-Z0Y-014	Piston Ring Set (Teikoku)
2.	13101-Z0Y-010	Piston
3.	13111-Z0Y-000	Piston Pin
4.	13200-Z0Y-000	Connecting Rod Assembly
5.	90001-ZE1-000	Connecting Rod Bolt
6.	90551-ZE0-000	Piston Pin Clip, 13mm

Honda Model - GCV190LAS3A Camshaft Pulley

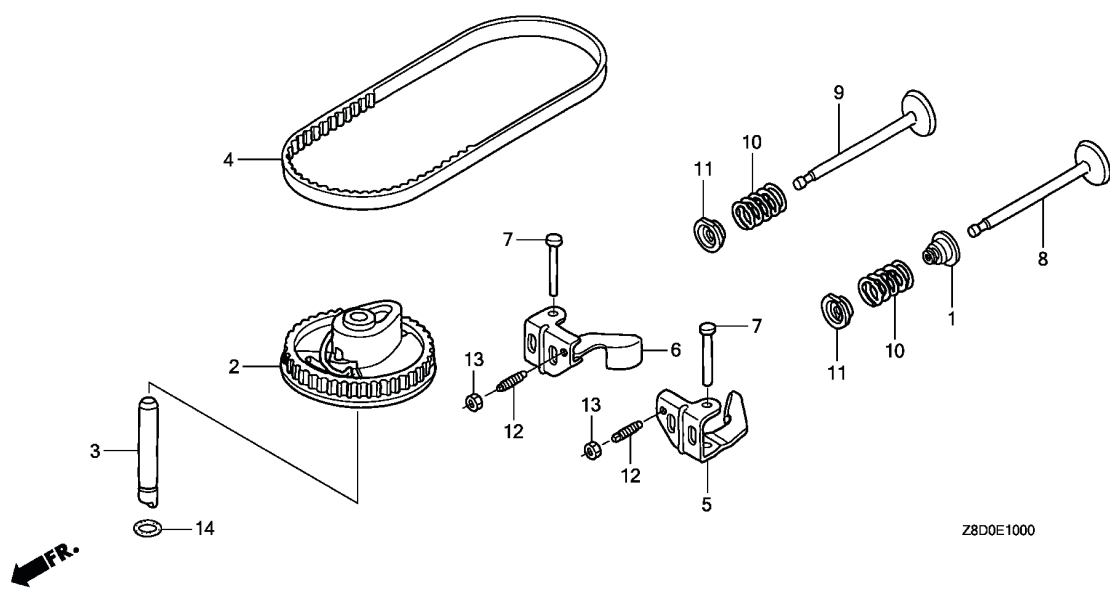


Ref No.	Part Number	Description
1.	12209-ZM0-003	Valve Stem Seal
2.	14320-Z0Y-000	Camshaft Pulley
3.	14324-ZL8-000	Cam Pulley Shaft
4.	14400-Z0J-014	Timing Belt, 84HU& G-200
5.	14431-Z0J-000	Internal Valve Rocker Arm
6.	14441-Z0J-000	External Valve Rocker Arm
7.	14461-ZL8-000	Rocker Arm Shaft
8.	14711-ZL8-000	Internal Valve
9.	14721-ZL8-000	External Valve
10.	14751-ZL8-000	Valve Spring
11.	14771-Z0J-000	Valve Spring Retainer
12.	90012-333-000	Tappet Adjusting Screw
13.	90206-001-000	Tappett Adjusting Nut
14.	91301-ZM0-V31	O-Ring, 6.8 x 1.9

Honda Model - GCV190LAS3A Recoil Starter

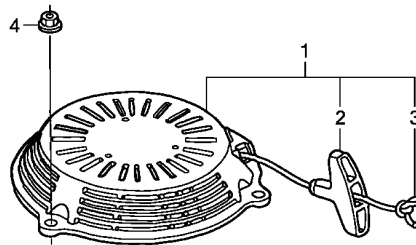

Z8D0E1100A


Ref No.	Part Number	Description
1.	28400-Z0Y-V20ZC	Recoil Starter Assembly
2.	28461-ZL8-003	Starter Grip
3.	28462-Z0L-V20	Recoil Starter Rope
4.	90201-ZM0-000	Flange Nut, 6mm

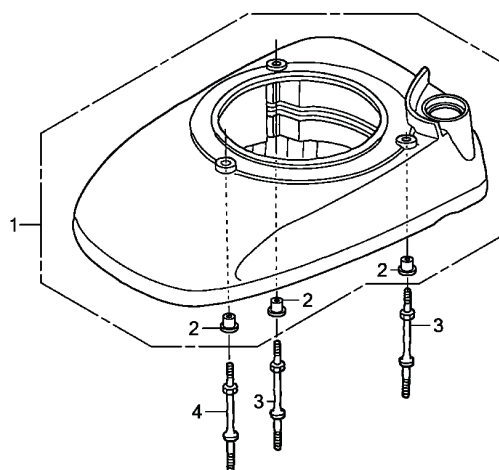

Z8D0E1200A


Ref No.	Part Number	Description
1.	19610-Z0L-860ZE	Fan Cover
2.	19619-ZL8-300	Fan Cover Collar
3.	90043-ZL8-000	Stud Bolt
4.	90043-ZL8-000	Stud Bolt

Honda Model - GCV190LAS3A Carburetor

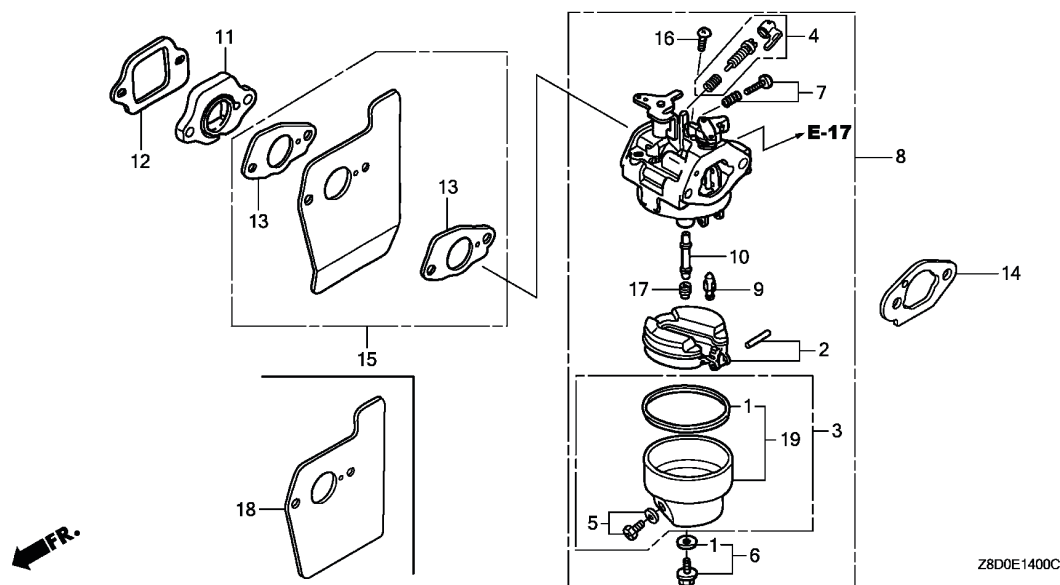


Ref No.	Part Number	Description
1.	16010-883-015	Packing Set
2.	16013-ZL1-003	Float Set
3.	16015-887-782	Float Chamber Set
4.	16016-ZG0-W00	Screw Set
5.	16024-ZE1-811	Drain Screw Set
6.	16028-ZE0-005	Screw Set B
7.	16029-ZG0-901	Screw Set (Throttle Stop)
8.	16100-Z0Y-821	Carburetor Assembly (BB65C A)
9.	16155-ZM0-013	Float Valve
10.	16166-Z0Y-003	Main Nozzle
11.	16211-ZL8-000	Carburetor Insulator

Ref No.	Part Number	Description
12.	16212-ZL8-000	Insulator Packing
13.	16221-883-800	Carburetor Packing
14.	16228-ZL8-000	Carburetor Packing
15.	19650-ZM0-000	Air Guide
16.	93500-05006-1H	Pan Screw, 5 x 6
17.	99101-124-0650	Main Jet, #65
—	99101-124-0680	Main Jet, #68
—	99101-124-0700	Main Jet, #70
18.	19651-Z0L-000	Air Guide
19.	16015-Z0L-881	Float Chamber Set

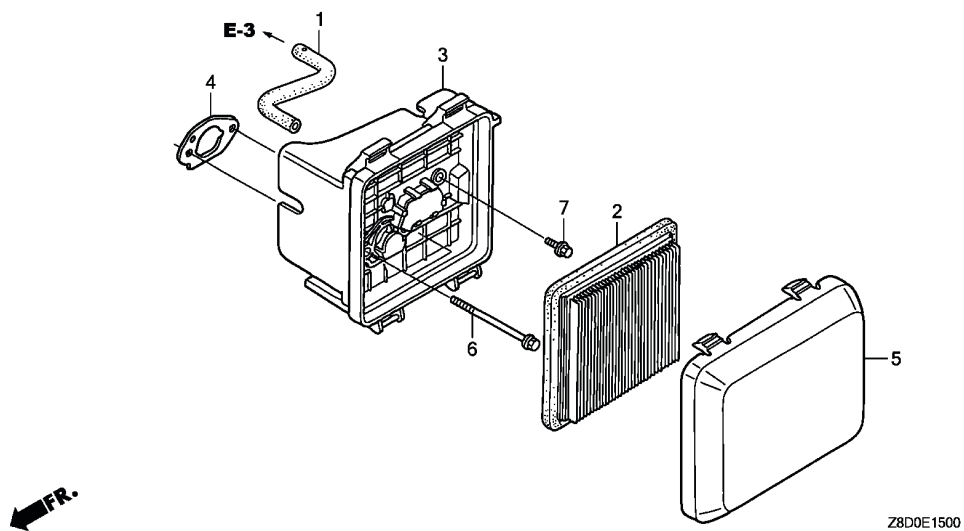


Ref No.	Part Number	Description
1.	15721-ZM0-000	Breather Tube
2.	17211-ZL8-023	Air Cleaner Element
3.	17220-ZM0-000	Air Cleaner Case Assembly
4.	17228-ZM0-000	Air Cleaner Packing
5.	17231-Z0L-030	Air Cleaner Cover
6.	90003-ZM0-000	Flange Bolt, 6 x 86
7.	95701-06014-08	Flange Bolt, 6 x 14

Honda Model - GCV190LAS3A Muffler

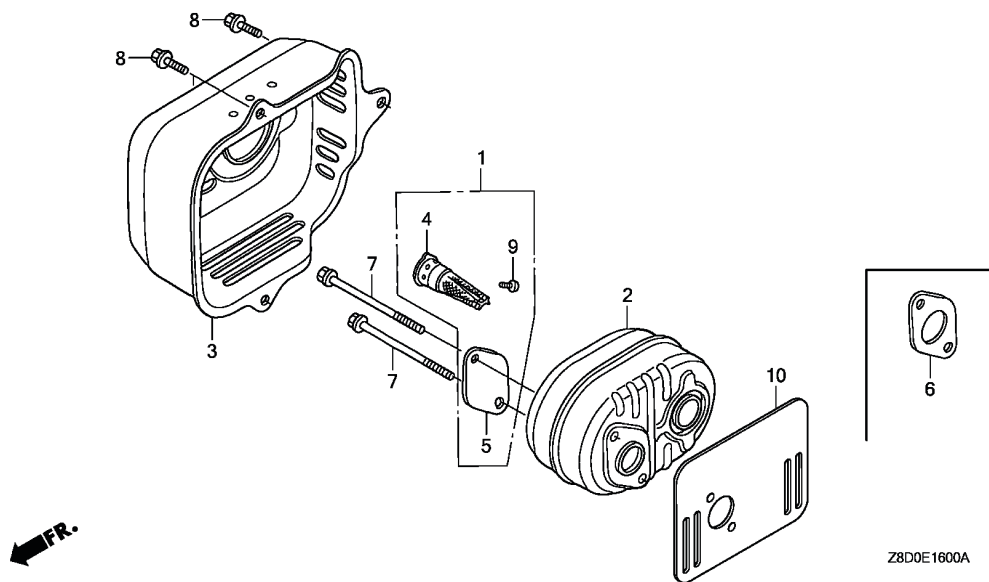

Ref No.	Part Number	Description
1.	06180-Z0J-000	Spark Arrester Kit
2.	18310-Z0Y-000	Muffler Complete
3.	18321-Z0L-J00	Muffler Protector
4.	18350-ZL8-000	Spark Arrester Complete
5.	18356-ZL8-000	Arrester Number Plate
6.	18381-ZL8-305	Muffler Gasket
7.	90004-ZL8-000	Flange Bolt, 6 x 79
8.	90013-883-000	Flange Bolt, 6 x 12
9.	90055-ZE1-000	Tapping Screw, 4 x 6
10.	18381-Z8D-800	Muffler Gasket

Honda Model - GCV190LAS3A Fuel Tank

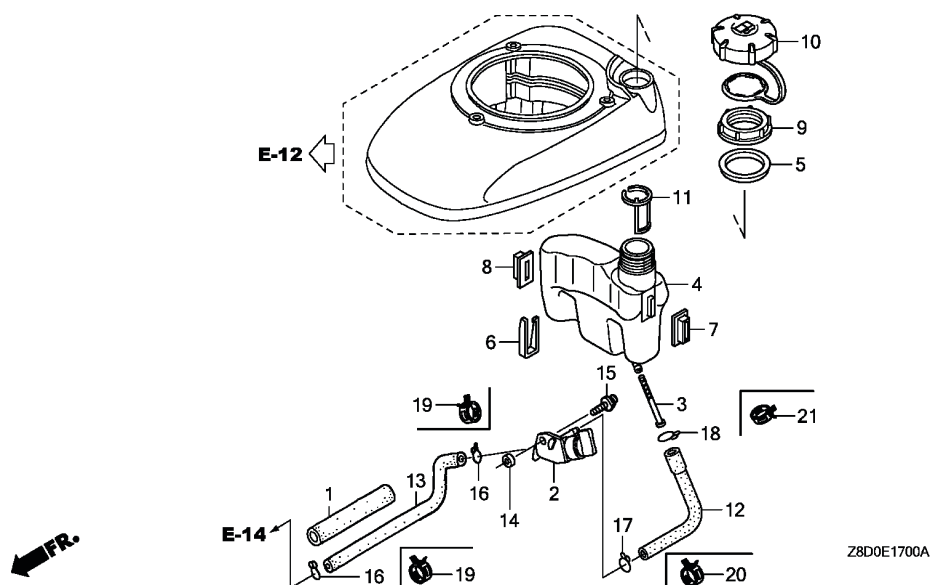


Ref No.	Part Number	Description
1.	16854-ZH8-000	Supporter Rubber, 107mm
2.	16950-ZM0-003	Fuel Cock Assembly
3.	16952-ZA8-800	Fuel Strainer
4.	17511-Z0L-010	Fuel Tank
5.	17514-Z0L-000	Fuel Filler Neck Seal
6.	17516-Z0L-000	Tank Mounting Clip
7.	17532-Z0L-000	Tank Mounting Rubber A
8.	17533-Z0L-000	Tank Mounting Rubber B
9.	17534-Z0L-000	Tank Mounting Nut
10.	17620-Z0J-800	Fuel Tank Cap Assembly
11.	17636-Z0L-000	Fuel Level Gauge

Ref No.	Part Number	Description
12.	17701-Z0L-810	Fuel Tank Tube
13.	17702-ZM0-800	Fuel Tube
14.	91501-Z0L-800	Fuel Cock Collar
15.	93891-05010-08	Screw-Washer, 5 x 10
16.	95002-02080	Tube Clip, B8
17.	95002-02100	Tube Clip, B10
18.	95002-70000	Tube Clip, C11
19.	95002-40800-08†	Tube Clamp, D8
20.	95002-41000-08†	Tube Clamp, D10
21.	95002-41200-08†	Tube Clamp, D12

† If Equipped


Honda Model - GCV190LAS3A Flywheel

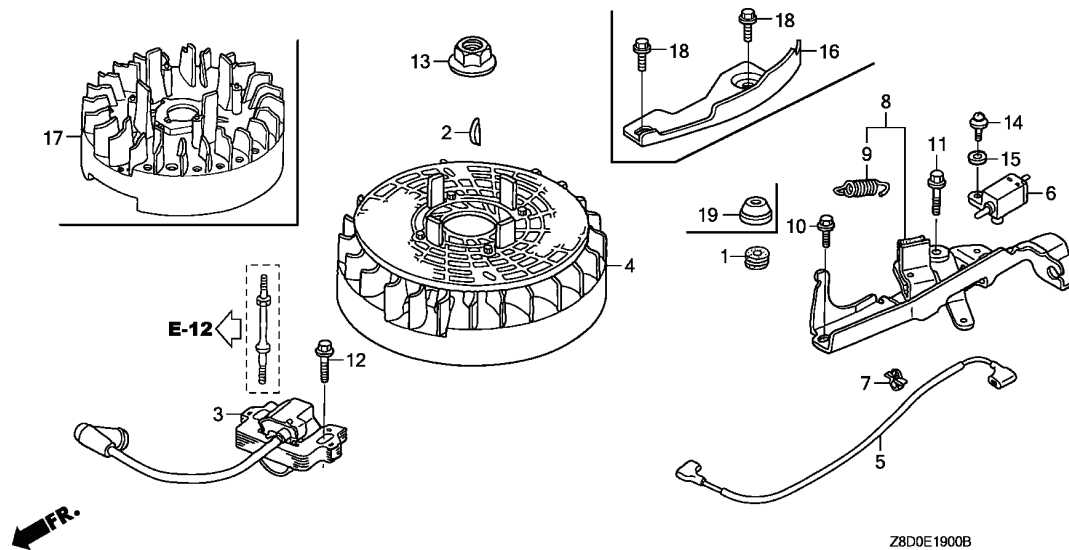

Ref No.	Part Number	Description
1.	11344-MB0-000	Rear Cover Grommet A
2.	13331-357-000	Special Woodruff Key
3.	30500-Z0J-003	Ignition Coil Assembly
4.	31105-Z0Y-010	Flywheel Assembly
5.	32195-ZM0-800	Stop Switch Cord
6.	35120-ZM0-003	Engine Stop Switch Assembly
7.	51125-Z0L-003	Wire Holder (Fastex)
	90681-959-003	Cable Clip A, 3.8mm Black (Nifco)
8.	75110-Z0L-800	Brake Sub Ass'y (Honda Code 7301591)
	75110-Z0Y-000	Brake Sub Ass'y (Honda Code

Ref No.	Part Number	Description
9.	75113-ZM0-000	8866204)
10.	90014-952-000	Brake Lever Spring
11.	90018-ZE1-000	Flange Bolt, 6 x 14 (CT200)
12.	90022-888-010	Flange Bolt, 6 x 23 (CT200)
	90018-ZE1-000	Flange Bolt, 6 x 23 (CT200)
13.	90213-S3Y-000	Flange Nut, 14mm
14.	93892-04012-00	Screw-Washer, 4 x 12
15.	94103-04000	Plain Washer, 4mm
19.	91601-Z0L-300	Brake Plate Grommet


NOTE: Engine features vary by model. NOT all parts pictured above are included with your engine.

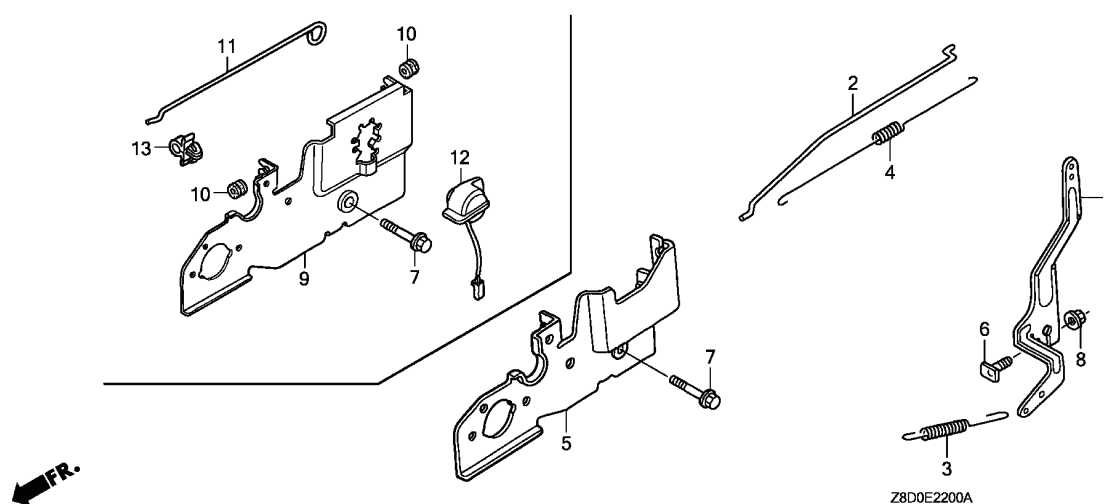

Ref No.	Part Number	Description
1.	16551-ZM0-010	Governor Arm
2.	16555-Z0L-800	Governor Rod
3.	16561-Z0L-000	Governor Spring
4.	16562-ZM0-000	Throttle Return Spring
5.	16580-Z0L-810	Control Base Complete
6.	90015-ZE5-010	Governor Arm Bolt
7.	90016-ZE8-000	Flange Bolt, 6 x 45 (CT200)
8.	94050-06000	Flange Nut, 6mm

NOTE: Engine features vary by model. NOT all parts pictured above are included with your engine.


Honda Model - GCV190LAS3A Choke Lever Assy.

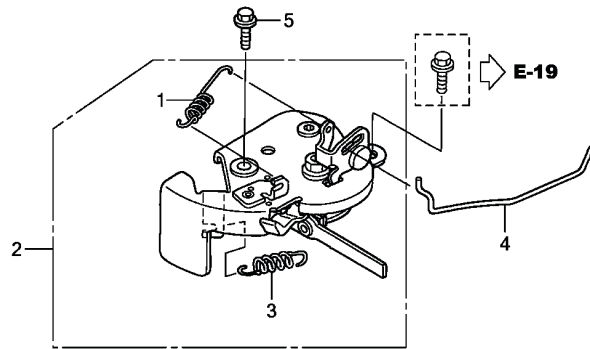

FR.

Z8D0E2210

Ref No.	Part Number	Description
1.	16592-Z2D-800	Return Spring
2.	16610-Z2D-801	Choke Lever Assembly
3.	16614-Z2D-800	Choke Lever Spring
4.	16632-Z0L-800	Stop Rod
5.	90022-888-010	Flange Bolt, 6 x 20 (CT200)

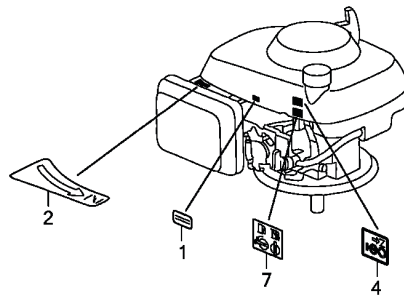


Z8D0E2800B


Ref No.	Part Number	Description
1.	87114-ZH7-821	Warning Label
2.	87528-Z0L-V20	Choke Indication Mark

NOTE: Engine features vary by model. NOT all parts pictured above are included with your engine.

Kohler XT173-0084 Crankshaft

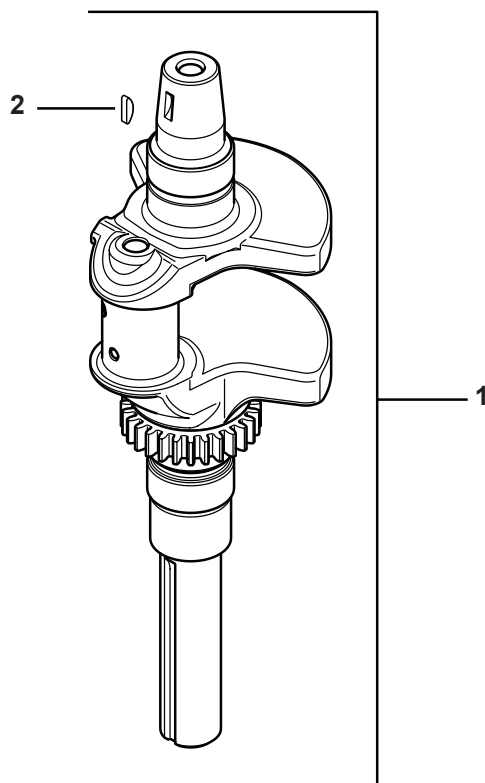


Ref.	Part Number	Description
1	KH-14-014-14-S	Crankshaft
2	KH-14-340-01-S	Key, Flywheel

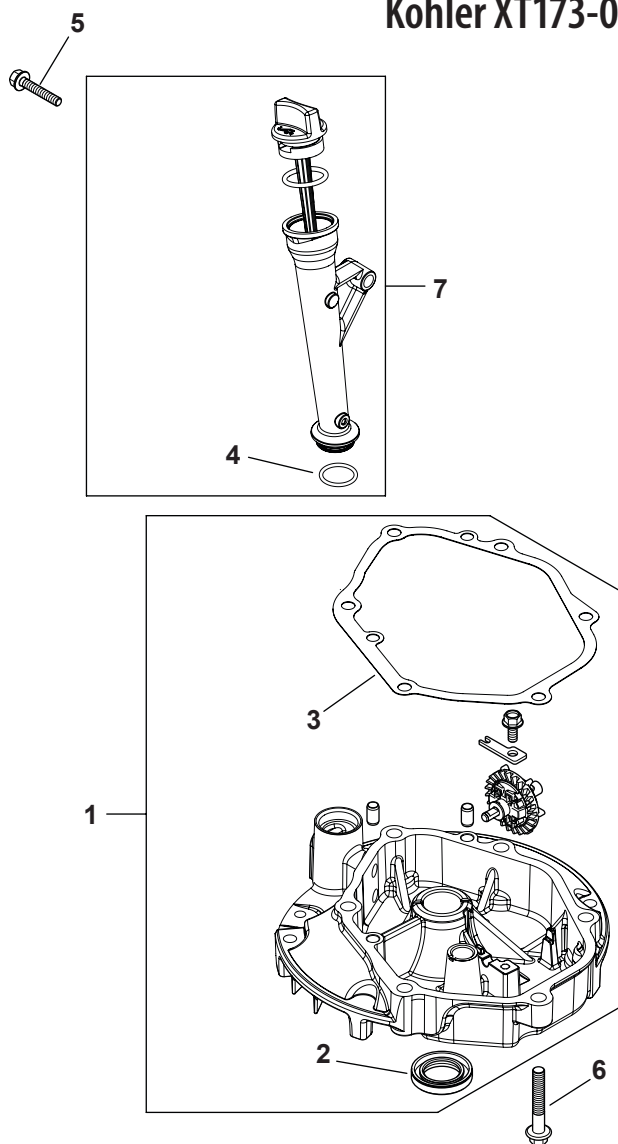


Ref.	Part Number	Description
1	KH-14-199-01-S	Kit, Oil Pan (Includes 2, 3, Governor Gear Assembly, Dowel Pins)
2	KH-14-032-05-S	Seal, Oil (PTO)
3	KH-14-041-06-S	Gasket, Oil Pan
4	KH-14-153-03-S	O-Ring, Oil Fill Tube
5	KH-25-086-145-S	Screw, Hex Flange (M6)
6	KH-25-086-161-S	Screw, Hex Flange (M8)
7	KH-14-123-13-S	Tube Assembly, Oil Fill (Includes 4)

Kohler XT173-0084 Crankcase

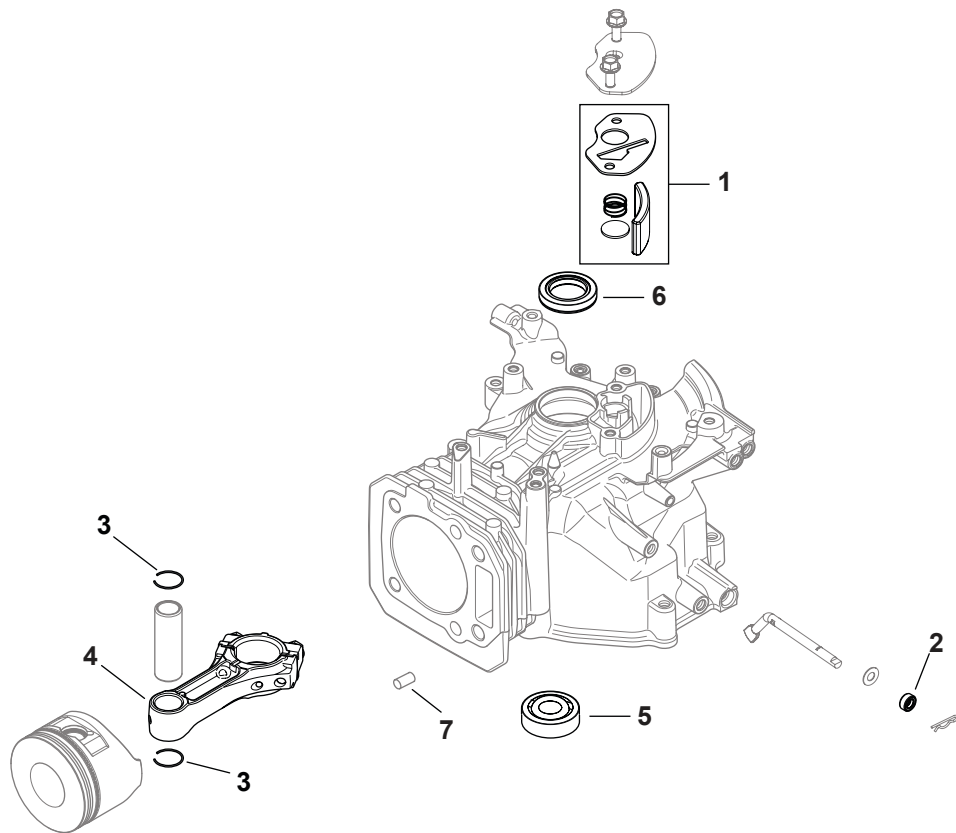


Ref.	Part Number	Description
1	KH-14-050-01-S	Kit, Breather Filter (Includes Breather Cover Gasket, Breather Cover Spring, Breather Filter, Breather Reed)
2	KH-14-032-04-S	Seal, Oil
3	KH-14-018-03-S	Retainer, Piston Pin
4	KH-14-067-01-S	Connecting Rod
5	KH-17-030-12-S	Bearing, Ball
6	KH-14-032-02-S	Seal, Oil
7	KH-14-380-06-S	Dowel, Cylinder Head

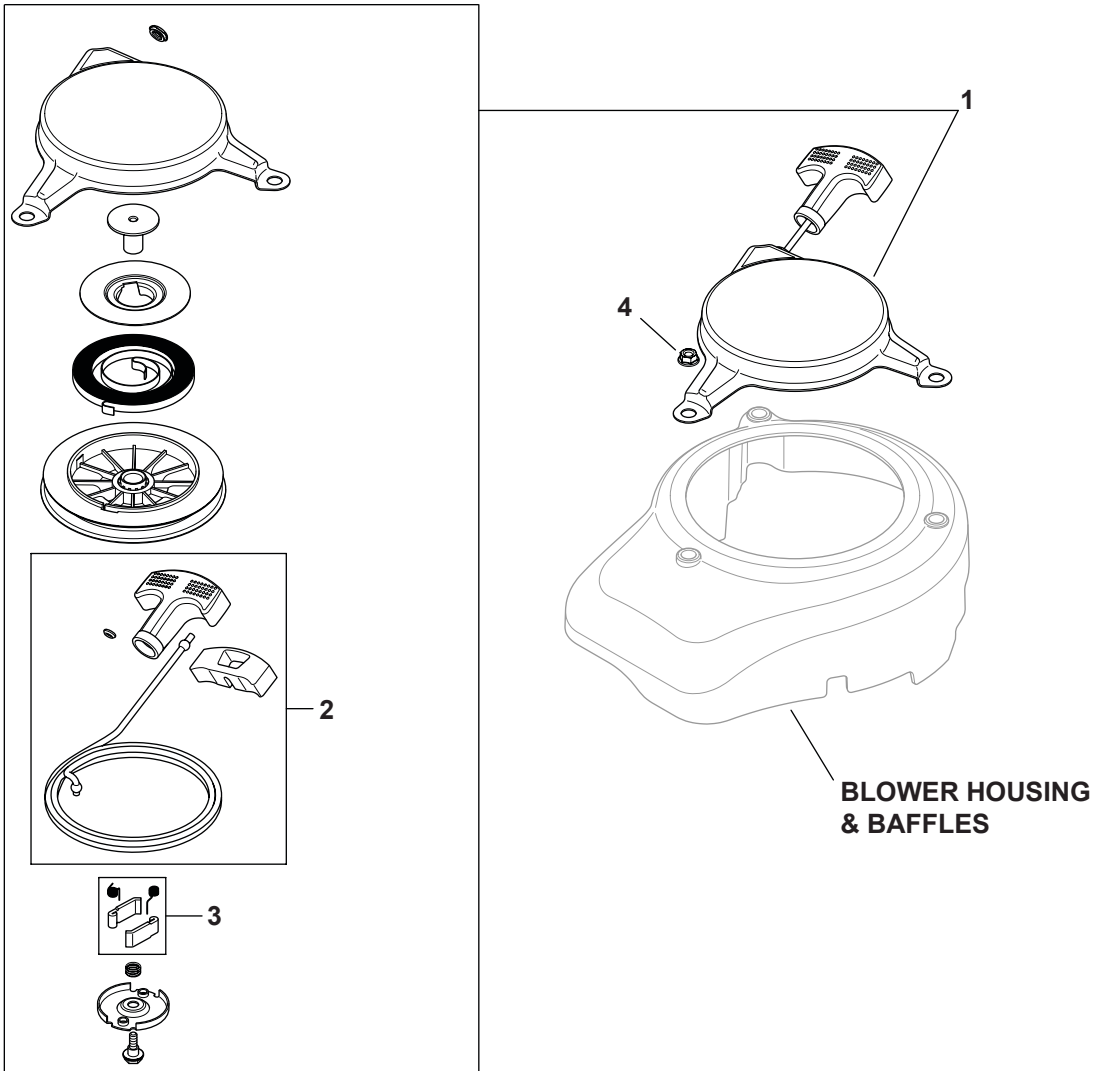


Ref.	Part Number	Description
1	KH-14-165-01-S	Starter, Recoil (Includes 2,3 Recoil Housing, Recoil Bushing, Recoil Guide Plate, Recoil Springs, Recoil Pulley, Recoil Retainer Plate, Recoil Shoulder Screw)
2	KH-14-160-01-S	Kit, Starter Rope W/Handle (Includes Coil Starter Rope, Recoil Starter Handle, Recoil Starter Handle Retainer, Recoil Rope Retainer)
3	KH-14-379-01-S	Kit Pawl Repair (Includes Recoil Springs, Recoil Starter Pawls)
4	KH-M-641060-S	Nut, Flange M6x1.0

Kohler XT173-0084 Head/Valve/Breather

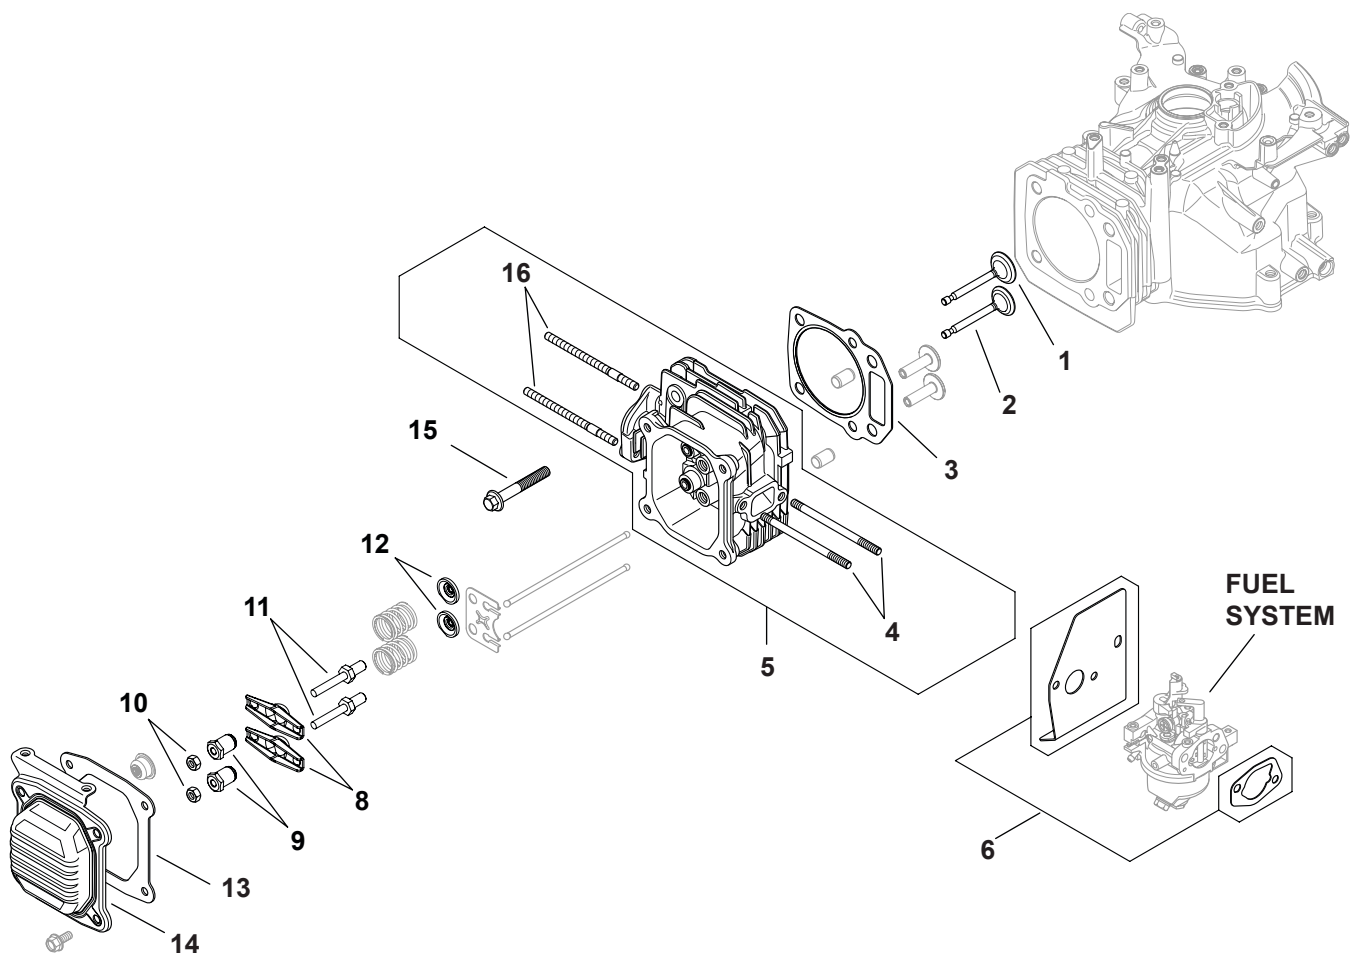


Valve Seal also included
in Gasket Set.

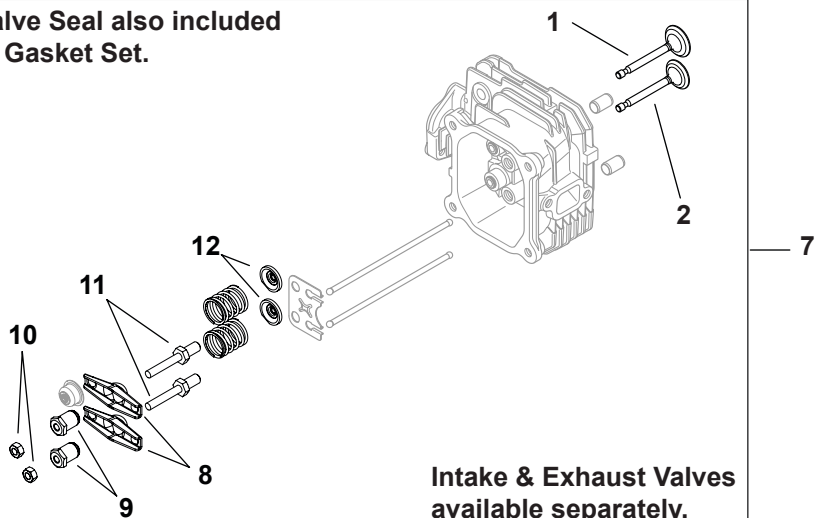

Intake & Exhaust Valves
available separately.


Ref.	Part-Number	Description
1	KH-14-017-01-S	VALVE, INTAKE
2	KH-14-016-01-S	VALVE, EXHAUST
3	KH-14-841-04-S	KIT, HEAD GASKET (INCLUDES 6, MUFFLER GASKET)
4	KH-24-072-06-S	STUD, M6X1.0X93
5	KH-14-318-01-S	KIT, CYLINDER HEAD (INCLUDES 4, 16)
6	KH-14-041-05-S	KIT, CARBURETOR GASKET
7	KH-14-755-02-S	KIT, VALVE TRAIN (INCLUDES 1, 2, 8-12, VALVE STEM SEAL, VALVE SPRINGS, PUSH ROD GUIDE PLATE, CYLINDER HEAD DOWELS, PUSH RODS)
8	KH-14-186-02-S	ARM, ROCKER
9	KH-14-599-01-S	PIVOT, ROCKER ARM
10	KH-14-100-01-S	NUT, HEX JAM
11	KH-14-072-02-S	STUD, ROCKER ARM
12	KH-14-018-02-S	RETAINER, VALVE SPRING
13	KH-14-041-01-S	GASKET, VALVE COVER
14	KH-14-096-05-S	KIT, VALVE COVER (INCLUDES 13)
15	KH-25-086-140-S	SCREW, FLG M8X1.25X55
16	KH-14-072-06-S	KIT, EXHAUST HARDWARE (INCLUDES MUFFLER GASKET, EXHAUST STUDS & FLANGE LOCK NUTS)

Kohler XT173-0084 Ignition/Electrical

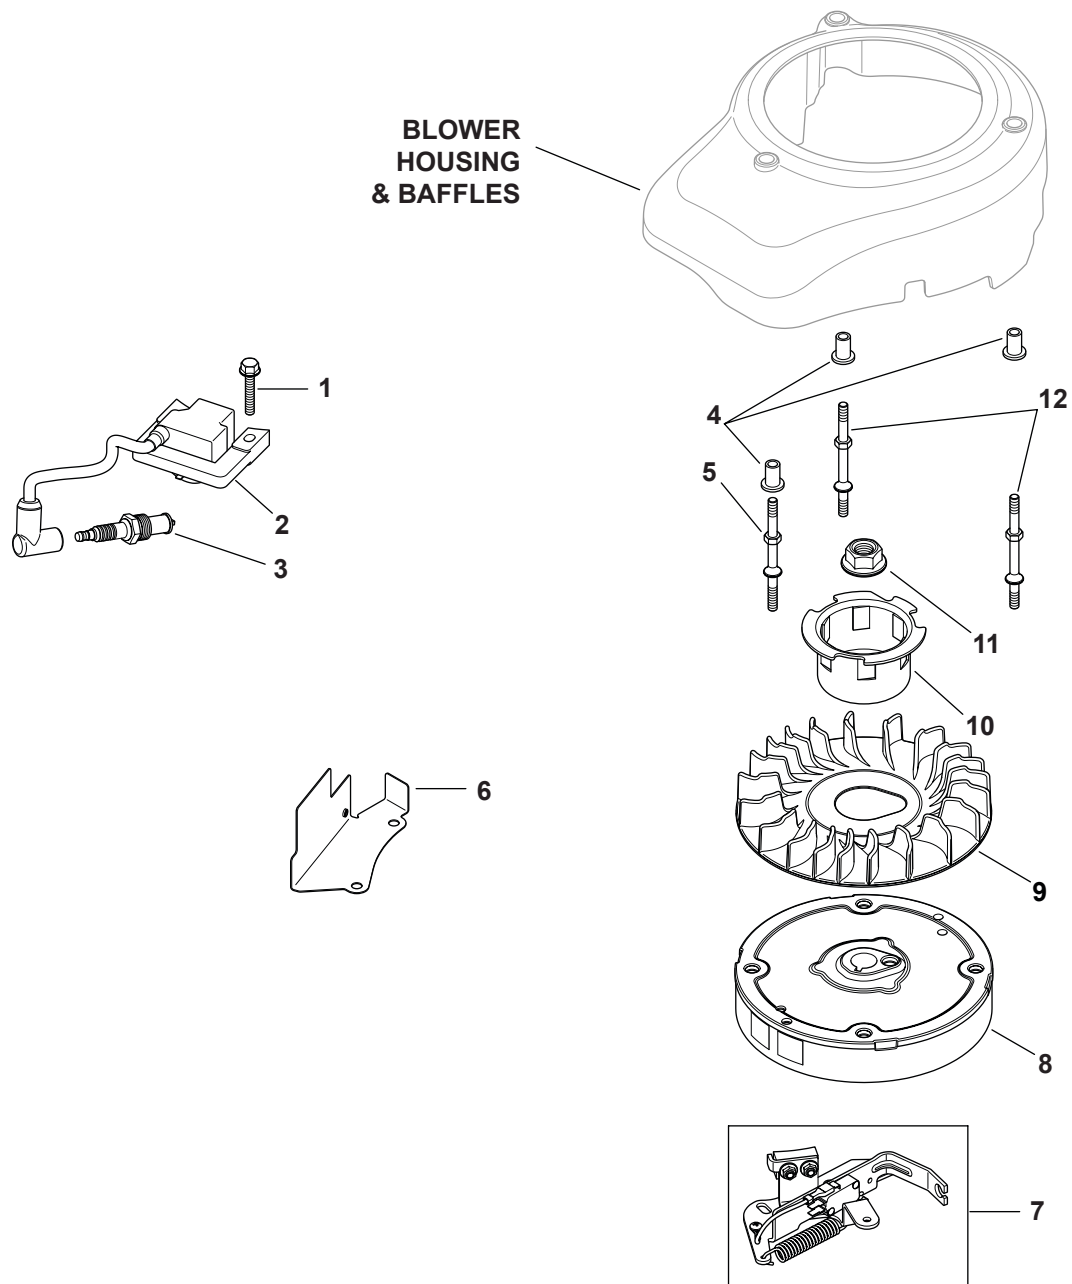


Ref.	Part Number	Description
1	KH-25-086-145-S	SCREW, HEX FLANGE (M6)
2	KH-14-584-05-S	MODULE, IGN (ALUM STD IGN)
3	759-3336	PLUG, SPARK (STD)
4	KH-14-112-07-S	SPACER
5	KH-14-072-13-S	STUD
6	KH-14-314-01-S	GUARD
7	KH-14-219-07-S	BRAKE ASSEMBLY, CARB SIDE (INCLUDES BRAKE LEVER, BRAKE SPRING, FLANGE NUTS, BRAKE PAD, GROUND TO KILL LEAD, SCREW, KILL SWITCH, BRAKE BRACKET, BRAKE LEVER WASHER, BRAKE LEVER RIVET)
8	KH-14-025-02-S	FLYWHEEL (ALUMINUM)
9	KH-14-157-01-S	FAN, FLYWHEEL
10	KH-14-109-02-S	CUP, DRIVE
11	KH-14-100-10-S	NUT, FLYWHEEL (W/SERRATIONS)
12	KH-14-072-12-S	STUD

Kohler XT173-0084 Blower Housing & Baffles

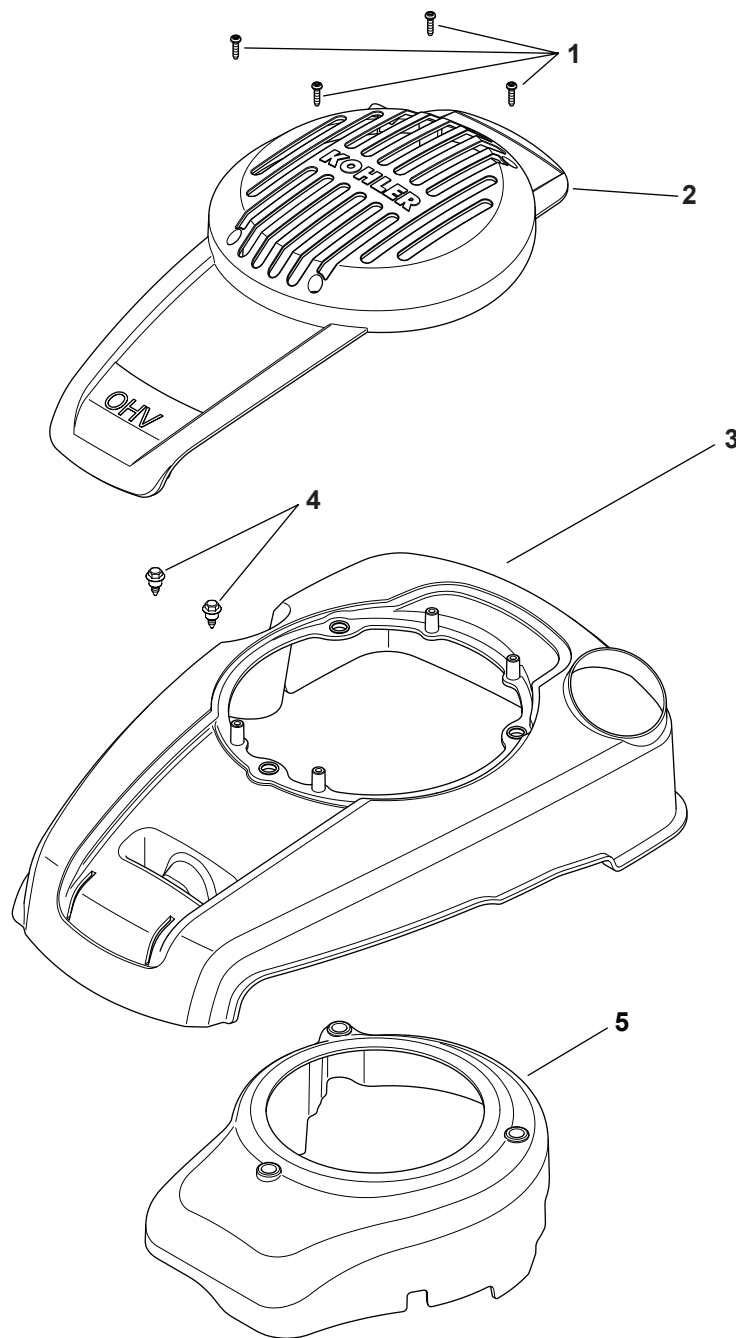


Ref.	Part Number	Description
1	KH-25-086-167-S	SCREW,#15 6-LOBE PAN HD(HI-LO)
2	KH-14-332-04-S	INSERT, ENGINE COVER (BLACK)
3	KH-14-096-27-S	COVER, ENGINE (BLACK)
4	KH-25-086-288-S	SCREW, SHOULDER (M5)
5	KH-14-027-03-S	HOUSING, BLOWER W/ELEC START

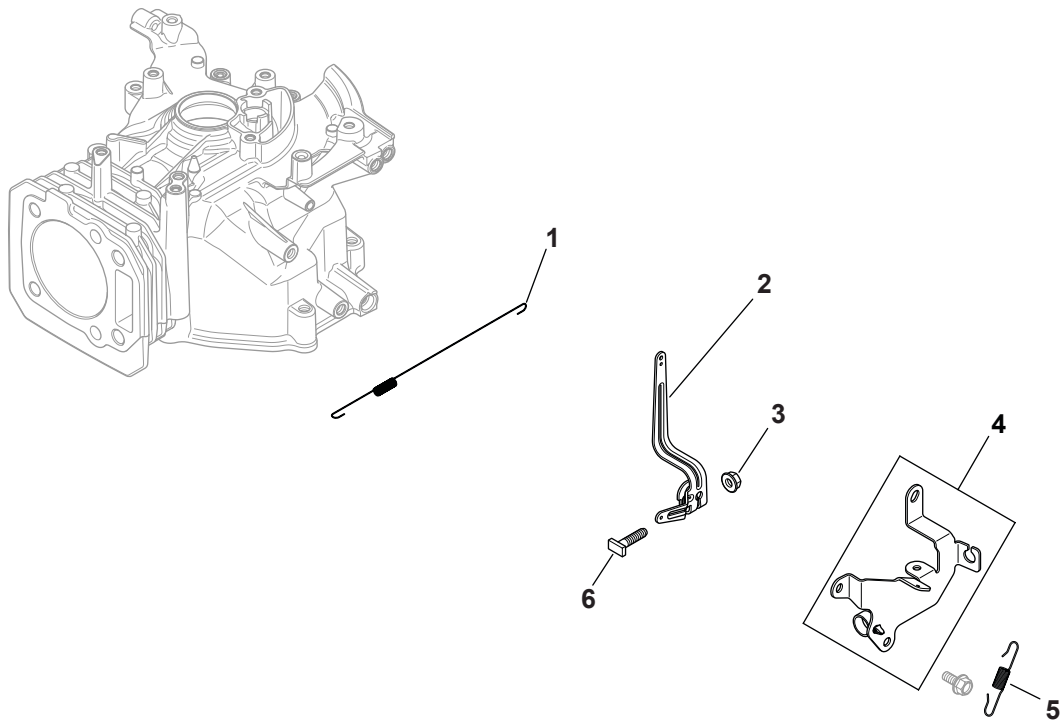


Ref.	Part Number	Description
1	KH-14-089-07-S	SPRING, LINKAGE
2	KH-14-090-12-S	LEVER, GOVERNOR
3	KH-M-641060-S	NUT, FLG M6X1.0
4	KH-14-126-22-S	CONTROL ASSEMBLY, FIXED SPEED
5	KH-14-089-14-S	SPRING, GOV (2800-3300 RPM)
6	KH-25-086-166-S	SCREW, RETANGLE HEAD (M6)

Kohler XT173-0084 Fuel System

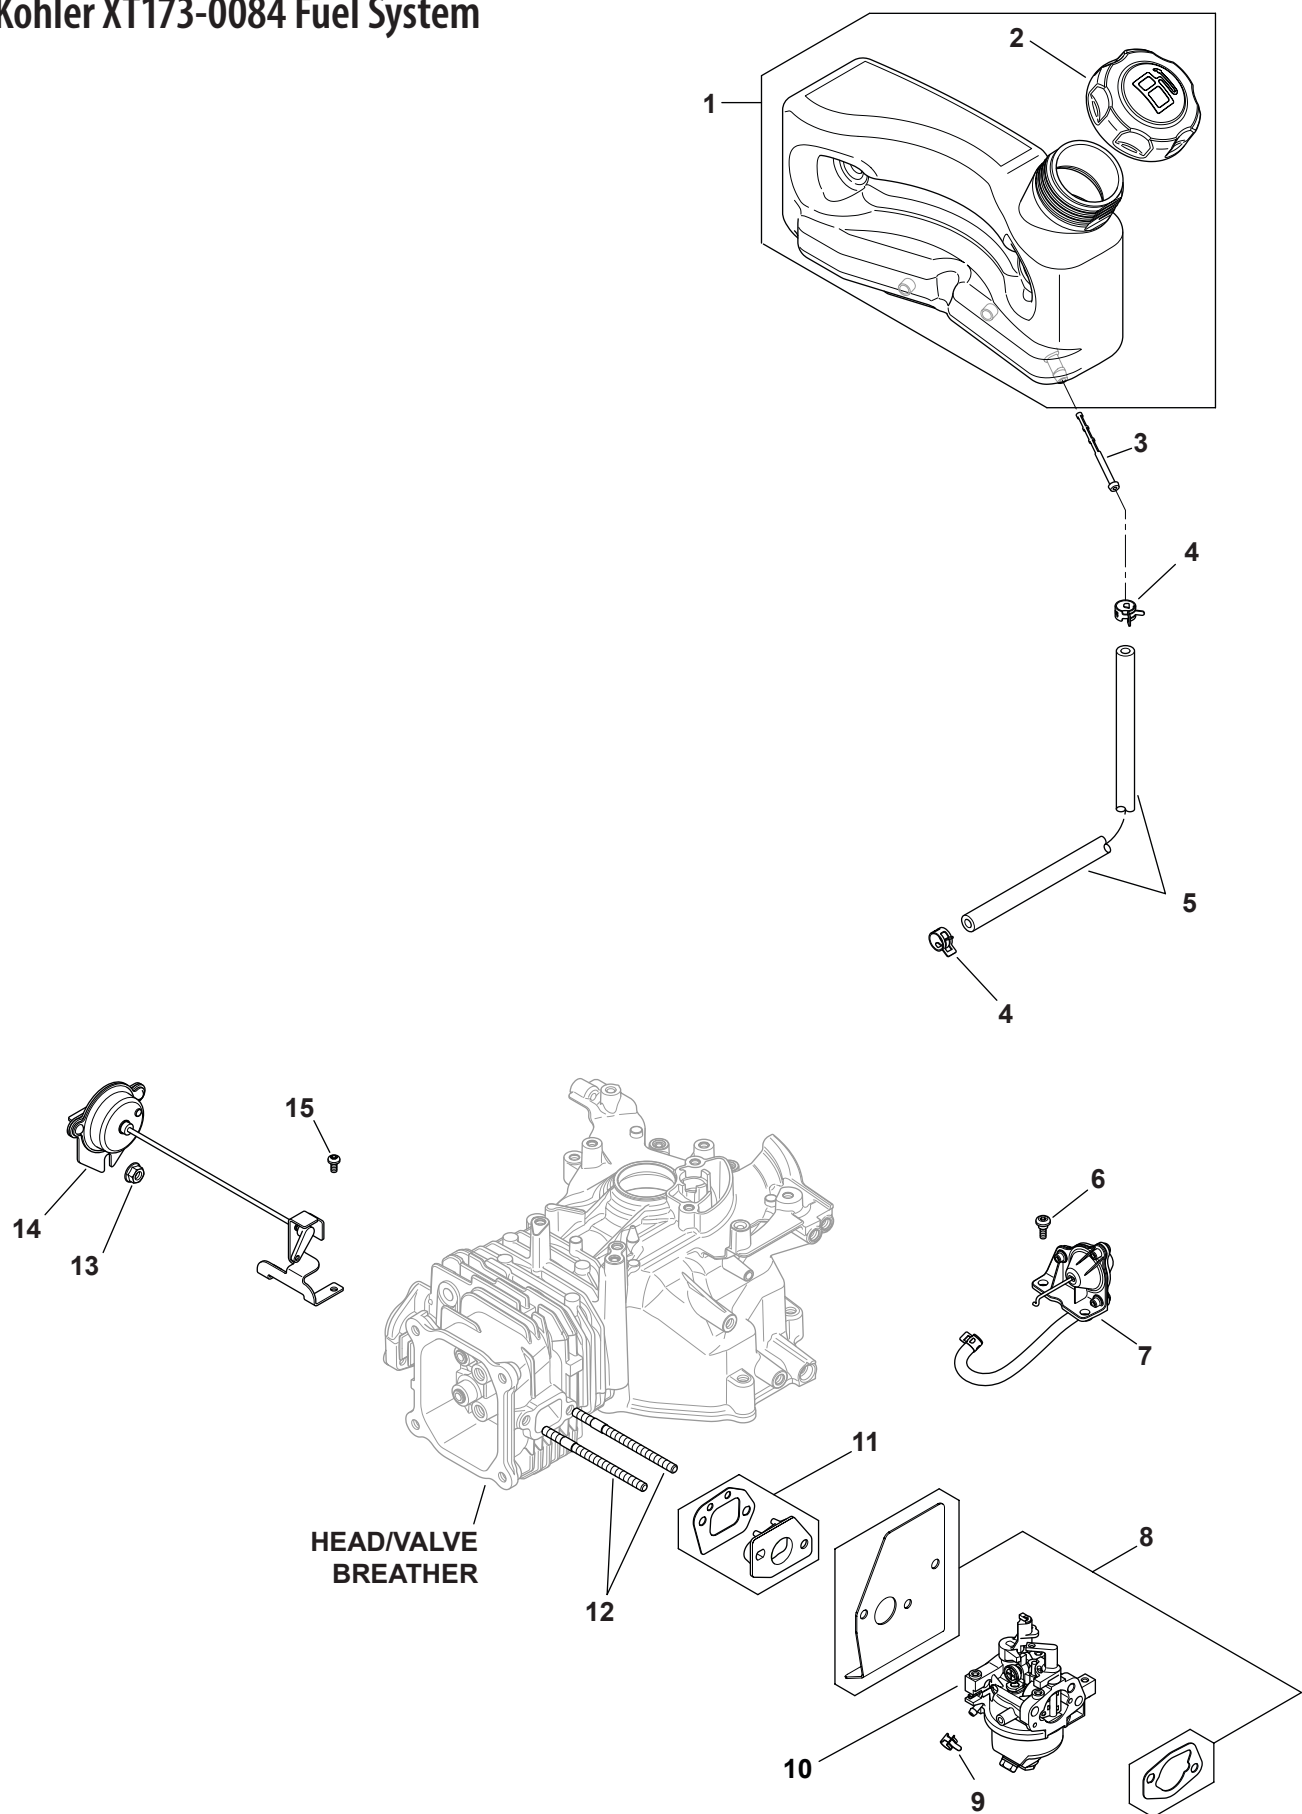


Ref.	Part-Number	Description
1	KH-14-065-12-S	KIT, FUEL TANK (INCLUDES 2)
2	KH-14-227-04-S	CAP, FUEL ASSY.
3	KH-14-050-14-S	FILTER, FUEL IN-NIPPLE
4	KH-14-237-04-S	CLAMP, HOSE
5	KH-25-111-34-S	LINE, FUEL (24"-CUT TO LENGTH)
6	KH-25-086-275-S	SCREW, SHOULDER
7	KH-14-268-04-S	DIAPHRAGM, ASSEMBLY
8	KH-14-041-05-S	KIT, CARB GASKET (INCLUDES CARBURETOR HEAT SHIELD GASKET, AIR CLEANER BASE GASKET)
9	KH-14-237-05-S	CLAMP, HOSE
10	KH-14-853-27-S	KIT, CARBURETOR W/GASKETS (INCLUDES 8)
11	KH-14-112-02-S	SPACER, CARBURETOR
12	KH-24-072-06-S	STUD, M6X1.0X93
13	KH-M-641060-S	NUT, FLG M6X1.0
14	KH-14-187-01-S	ARM, ASSEMBLY
15	KH-25-086-277-S	SCREW, M4 THREAD FORMING

Kohler XT173-0084 Air Intake/Filtration

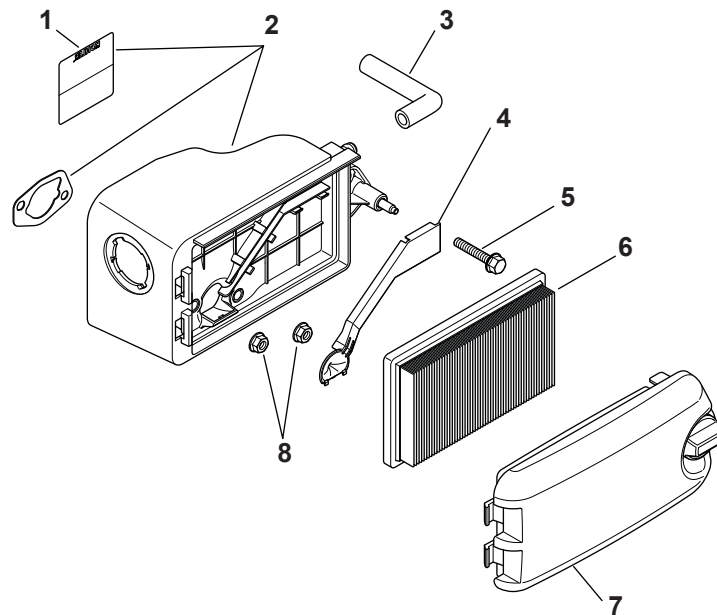


Ref.	Part Number	Description
1	KH-41-037-10-S	NAMEPLATE, SERVICE
2	KH-14-094-13-S	KIT, AIR CLEANER BASE (PRIMER) (INCLUDES 1, AIR CLEANER BASE GASKET)
3	KH-14-123-05-S	HOSE, BREATHER
4	KH-14-096-51-S	COVER, A/C BASE (BREATHING GAS)
5	KH-25-086-145-S	SCREW, HEX FLANGE (M6)
6	KH-14-083-01-S	ELEMENT, AIR CLEANER
7	KH-14-096-09-S	KIT, AIR CLEANER COVER
8	KH-M-641060-S	NUT, FLG M6X1.0

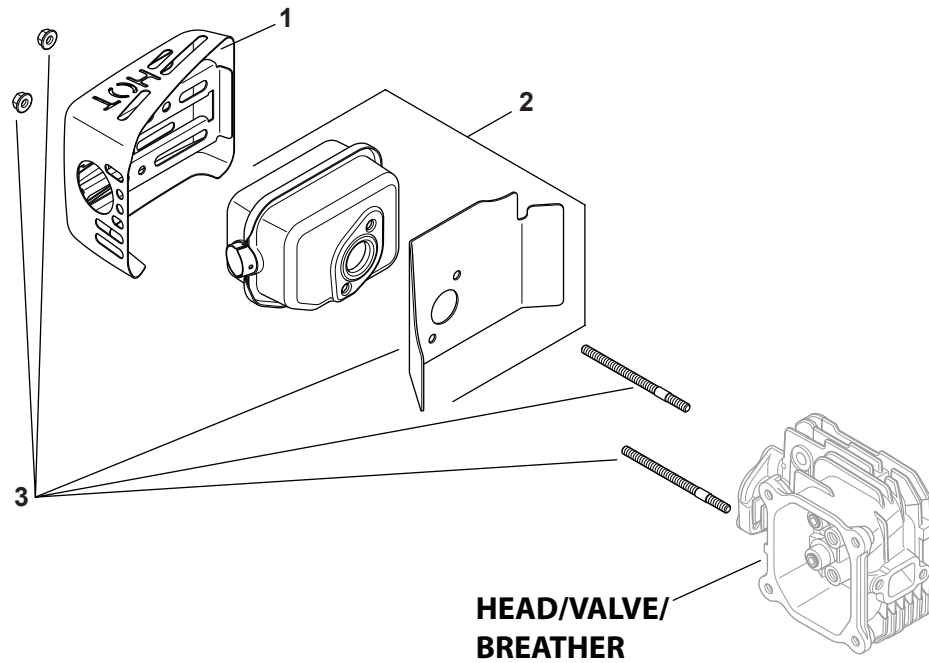


Ref.	Part Number	Description
1	KH-14-314-04-S	SHIELD, MUFFLER
2	KH-14-068-05-S	KIT, MUFFLER (INCLUDES MUFFLER GASKET)
3	KH-14-072-06-S	KIT, EXHAUST HARDWARE (INCLUDES MUFFLER GASKET, EXHAUST STUDS & FLANGE LOCK NUTS)

Kohler XT173-0084 Gasket Set

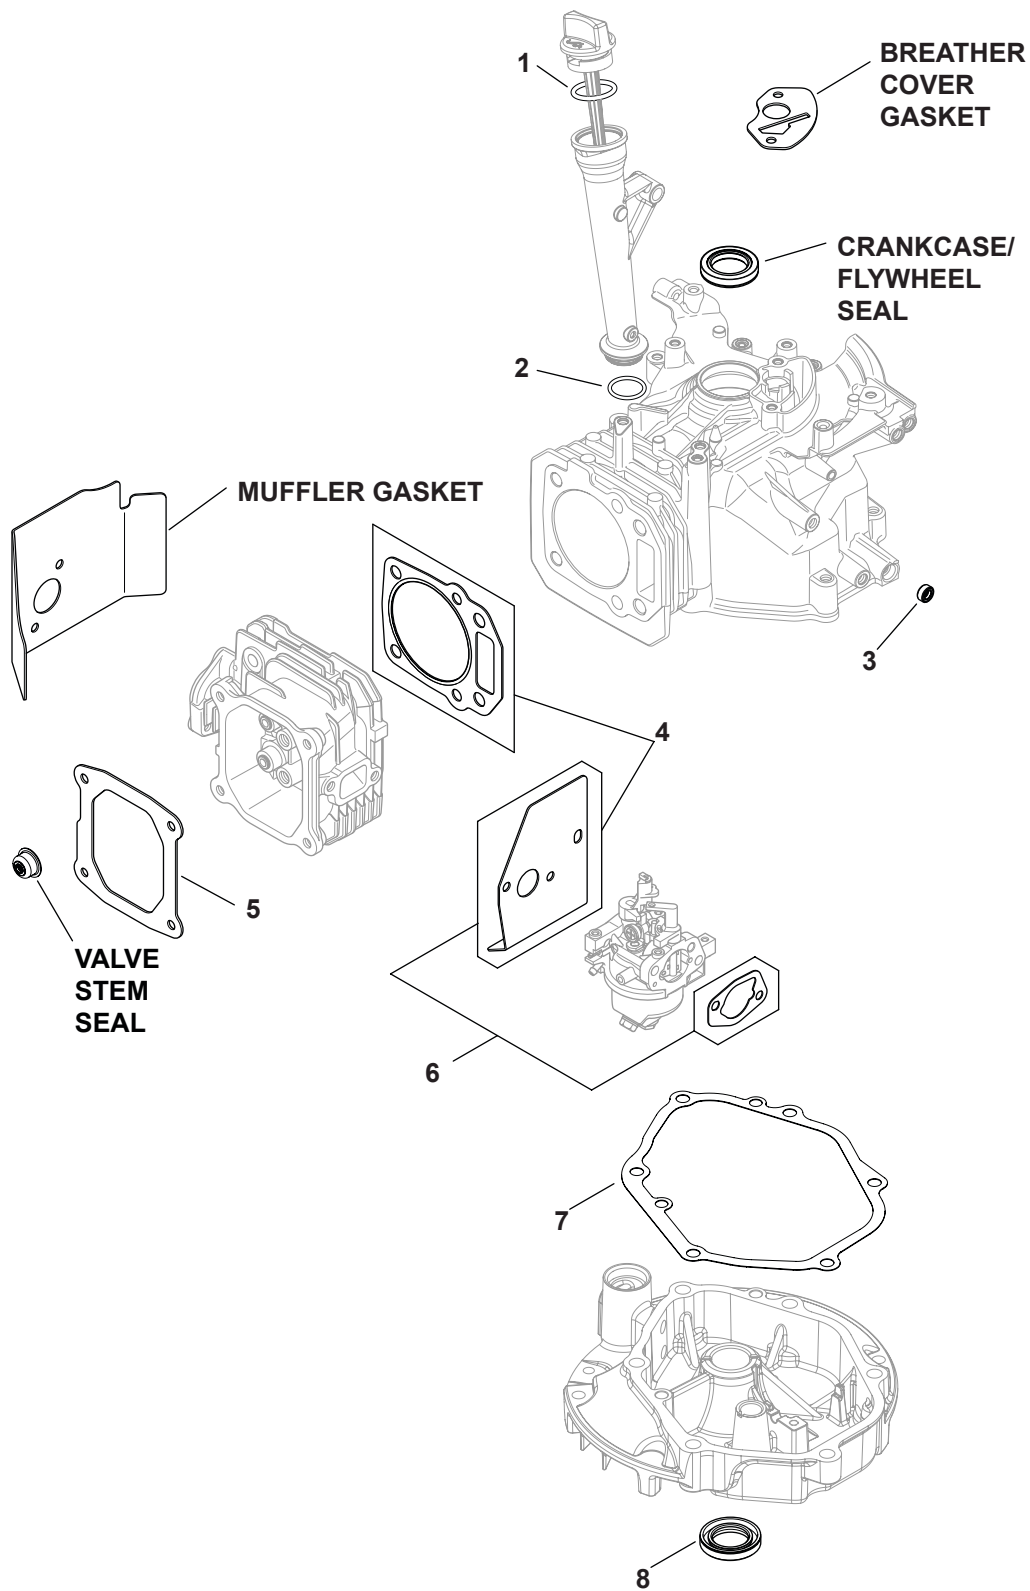

Ref.	Part Number	Description
1	KH-14-153-01-S	O-RING, DIPSTICK
2	KH-14-153-03-S	O-RING, OIL FILL TUBE
3	KH-14-032-04-S	SEAL, OIL
4	KH-14-841-04-S	KIT, HEAD GASKET (INCLUDES 6, MUFFLER GASKET)
5	KH-14-041-01-S	GASKET, VALVE COVER
6	KH-14-041-05-S	KIT, CARB GASKET (INCLUDES CARBURETOR HEAT SHIELD GASKET, AIR CLEANER BASE GASKET)
7	KH-14-041-06-S	GASKET, OIL PAN
8	KH-14-032-05-S	SEAL, OIL (PTO)
	KH-14-755-01-S	GASKET SET (INCLUDES 1-8, MUFFLER GASKET, BREATHER COVER GASKET, VALVE STEM SEAL, CRANKCASE/FLYWHEEL SEAL)

Kohler XT173-0084 Decals

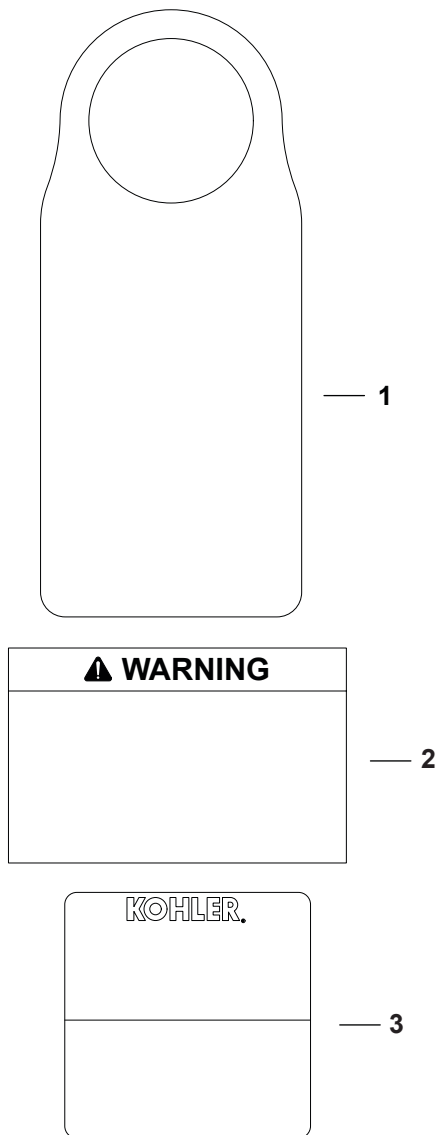

Artwork is representative.
Actual labels may differ depending on model and specification number.


Ref.	Part Number	Description
1	KH-14-450-02-S	TAG, MAINTENANCE HANG
2	KH-14-113-03-S	DECAL, WARNING
3	KH-41-037-10-S	NAMEPLATE, SERVICE

48 SHORT BLOCK


1058 OPERATOR'S MANUAL


1329 REPLACEMENT ENGINE

1330 REPAIR MANUAL

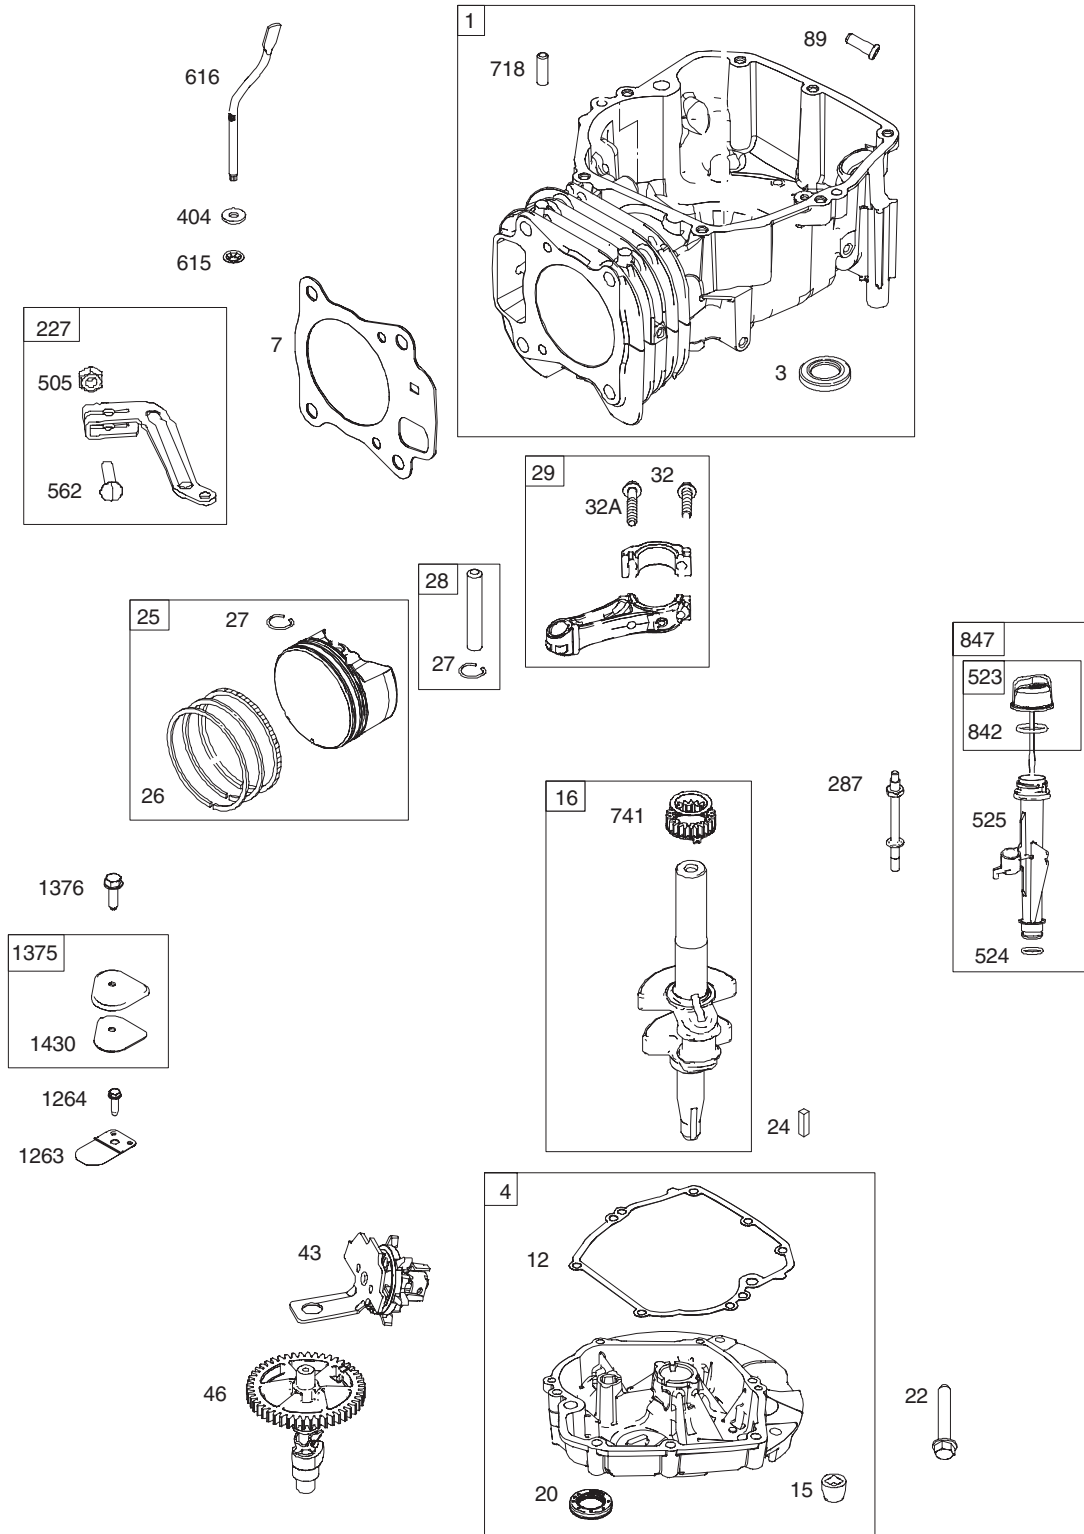


Briggs & Stratton Model - 11P905-0826-B1










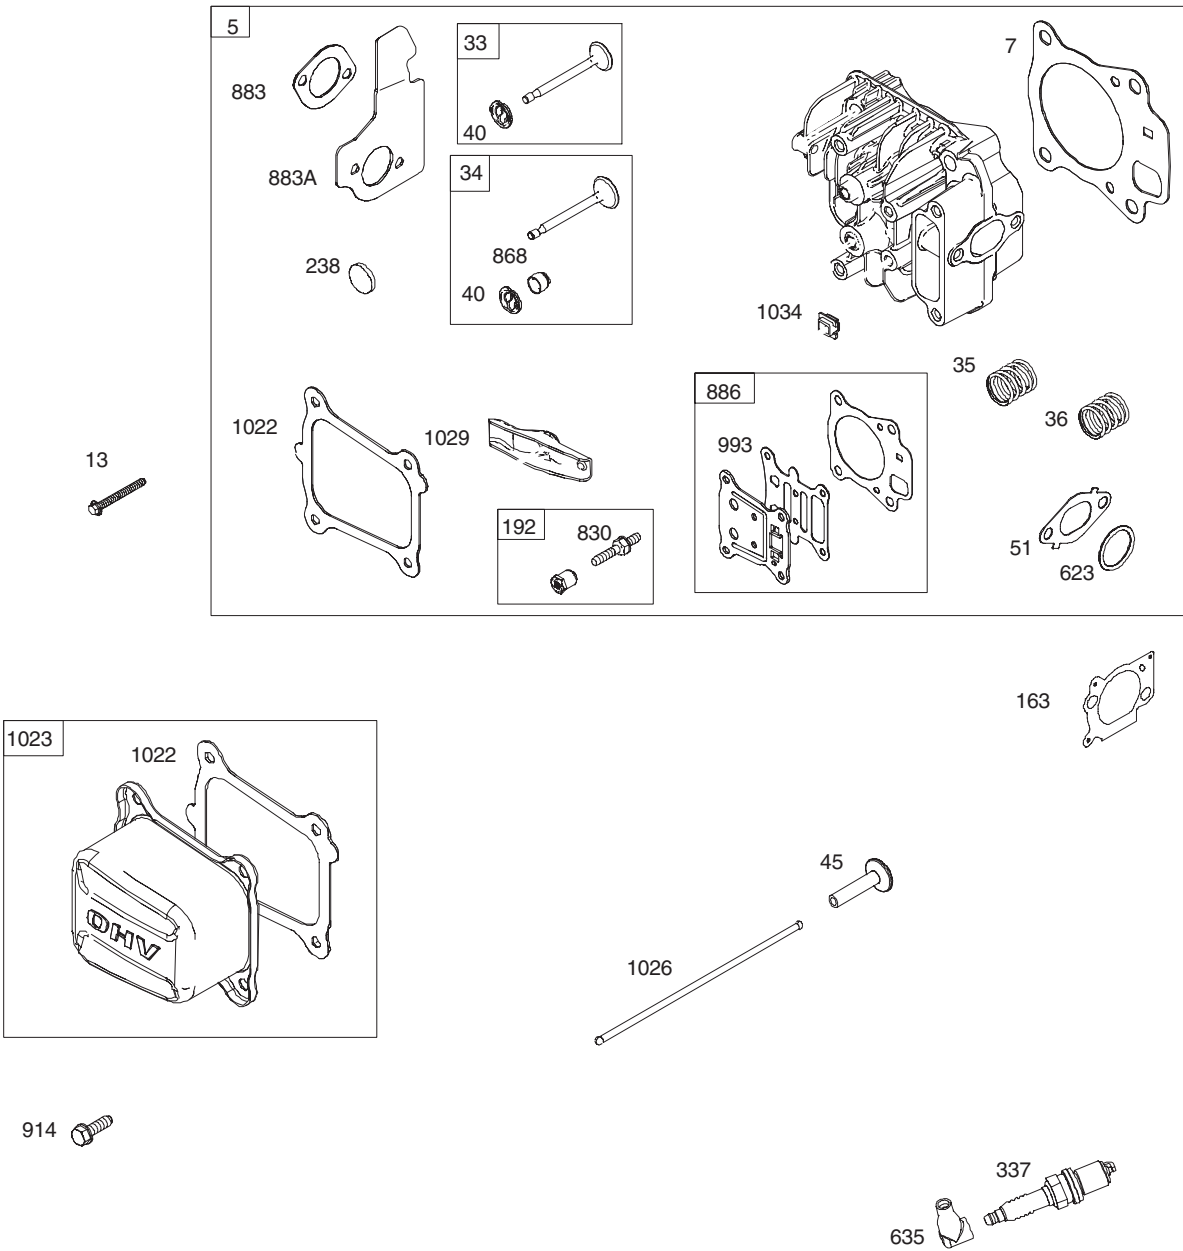




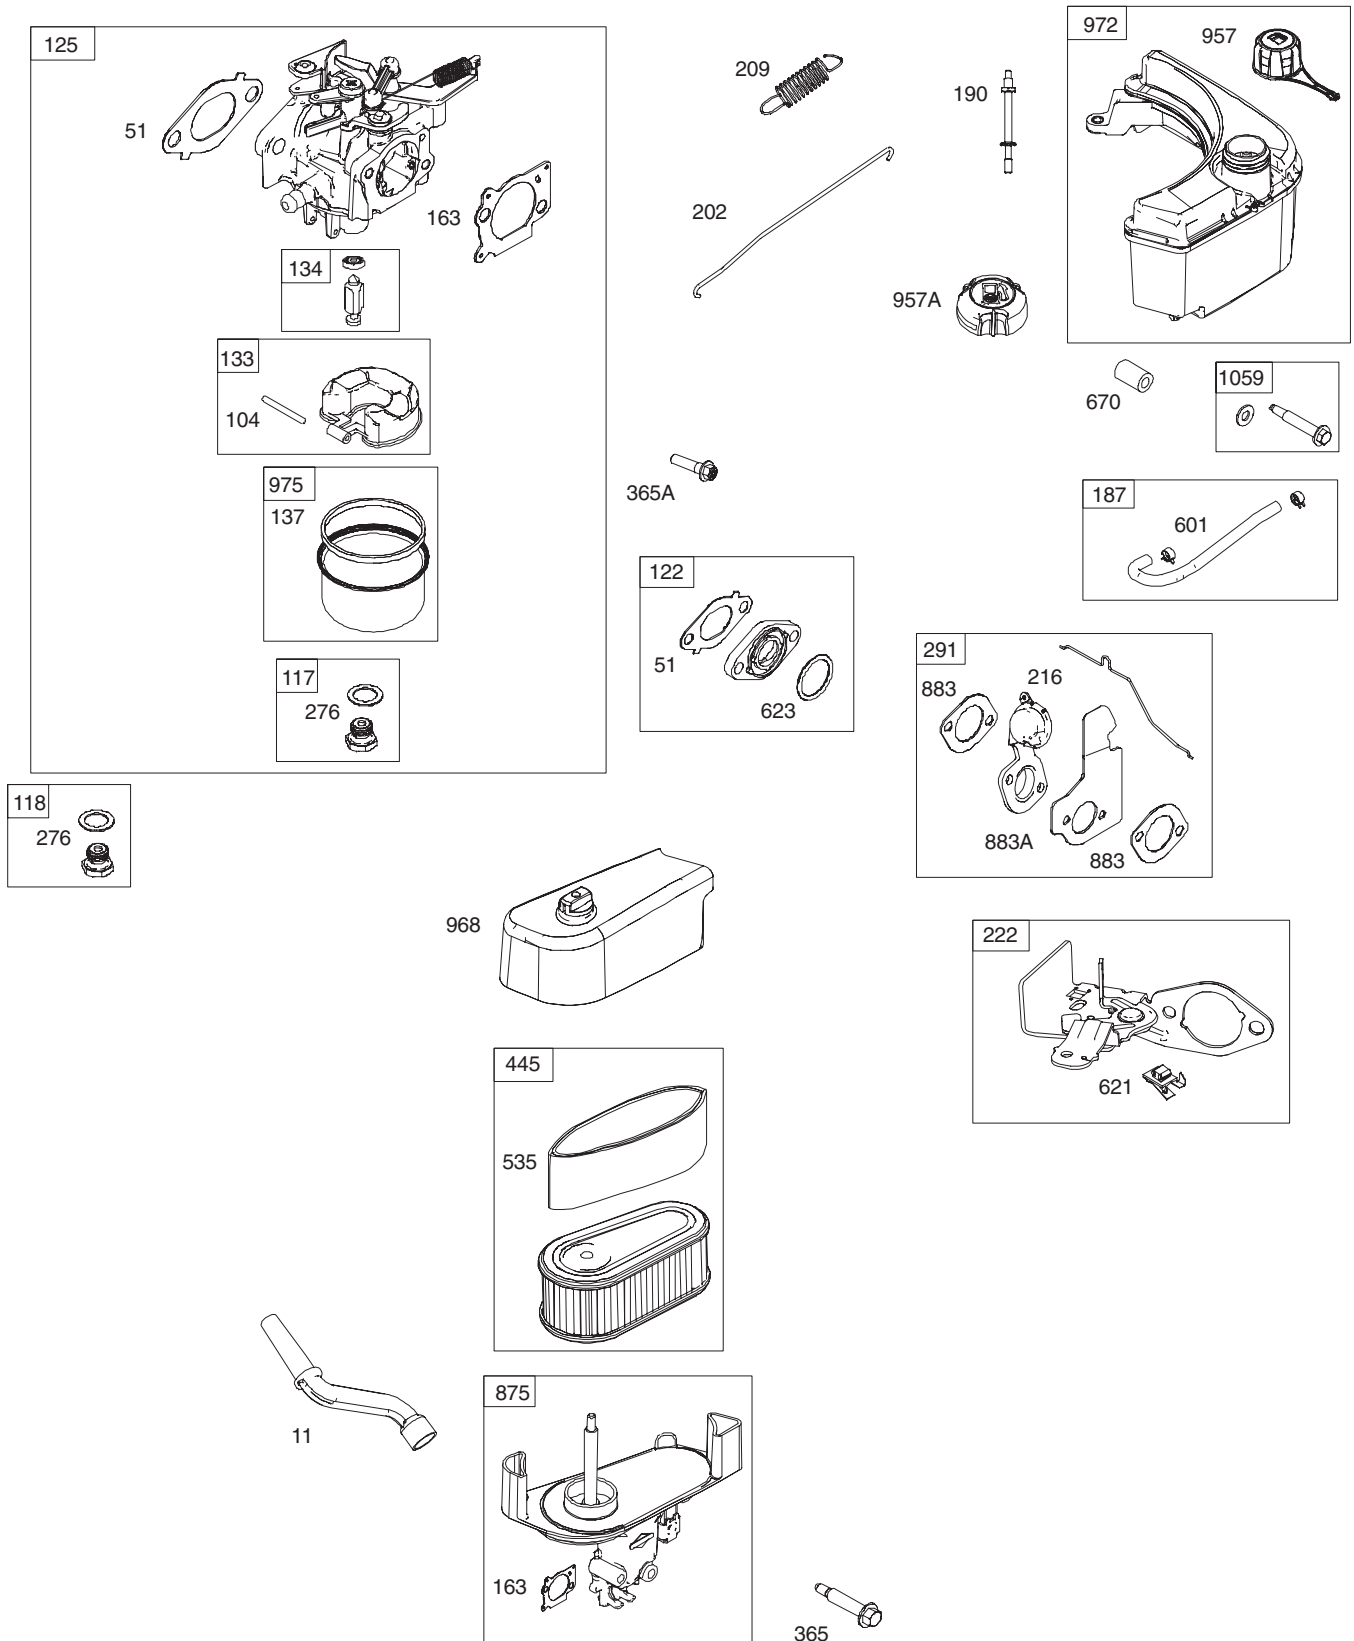


Briggs & Stratton Model - 11P905-0826-B1

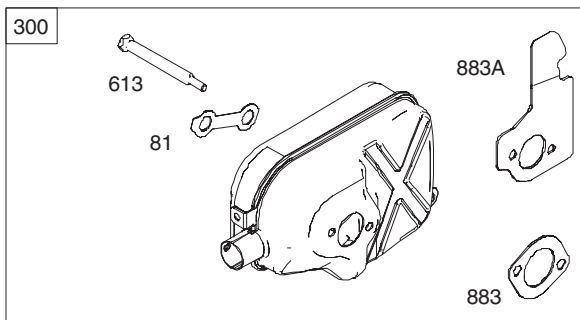

1036 EMISSIONS LABEL

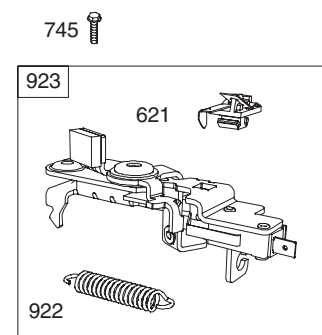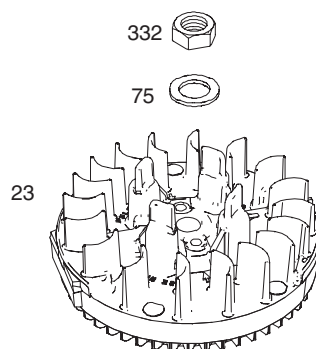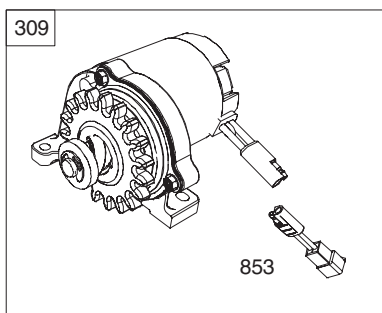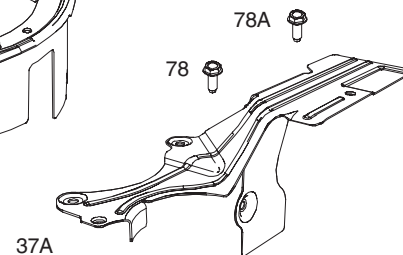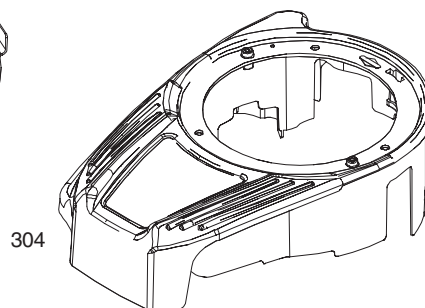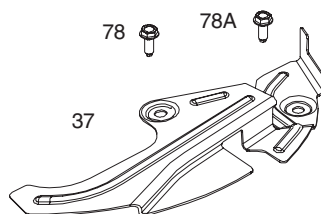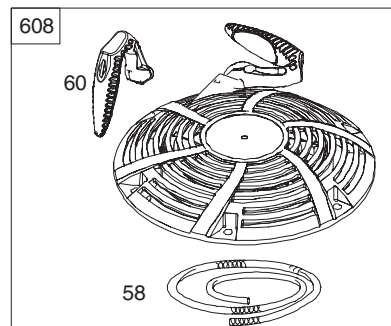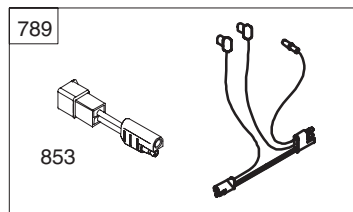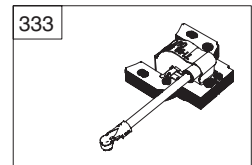 

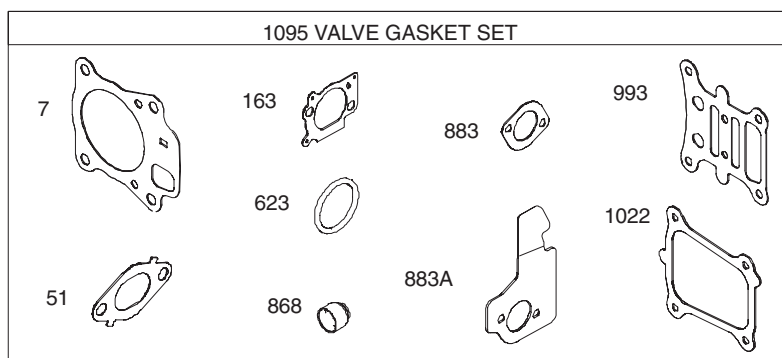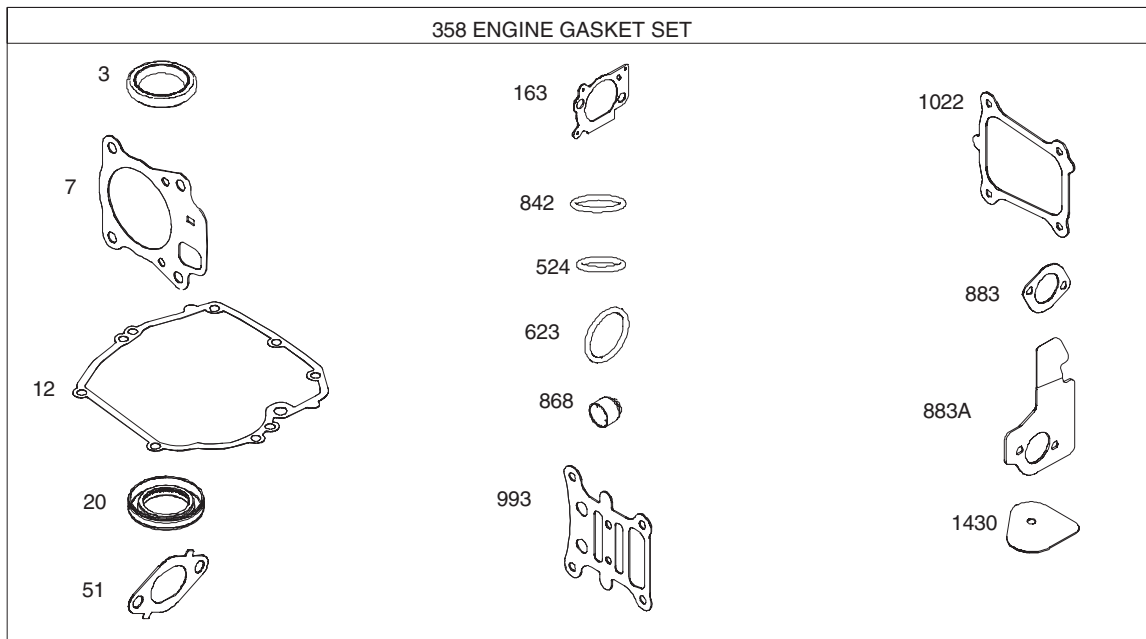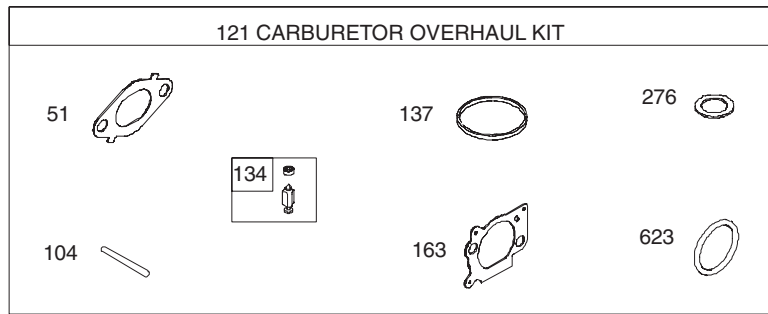

Briggs & Stratton Model - 11P905-0826-B1

Ref No.	Part Number	Description
1	796510	Cylinder Assembly
3	299819s	Seal-Oil (Magneto Side)
4	493279	Sump-Engine
5	796471	Head-Cylinder
7	796475	Gasket-Cylinder Head
11	796478	Tube-Breather
12	692232	Gasket-Crankcase
13	793451	Screw (Cylinder Head)
15	691680	Plug-Oil Drain
16	796468	Crankshaft
20	399781s	Seal-Oil (PTO Side)
22	691092	Screw (Crankcase Cover/Sump)
23	793619	Flywheel
24	222698s	Key-Flywheel
25	796643	Piston Assembly (Standard)
	796644	Piston Ass'y (.020" Oversize)
26	796645	Ring Set (Standard)
	796646	Ring Set (.020" Oversize)
27	691588	Lock-Piston Pin
28	298909	Pin-Piston
29	796470	Rod-Connecting
32	691664	Screw
32A	695759	Screw
33	499642	Valve-Exhaust
34	795443	Valve-Intake
35	691304	Spring-Valve (Intake)
36	691304	Spring-Valve (Exhaust)
37	796536	Guard-Flywheel
37A	796535	Guard-Flywheel
40	692194	Retainer-Valve
43	796650	Slinger-Governor/Oil
45	690977	Tappet-Valve
46	694039	Camshaft

Ref No.	Part Number	Description
48	797364	Short Block
51	796596	Gasket-Intake
58	697316	Rope-Starter
60	795426	Grip-Starter Rope
75	691736	Washer
78	691127	Screw
78A	793480	Screw
81	691740	Lock-Muffler Screw
89	692348	Plug (Cylinder)
104	691242	Pin-Float Hinge
117	697355	Jet-Main
118	494870	Jet-Main
121	796612	Kit-Carburetor Overhaul
122	796595	Spacer-Carburetor
125	796608	Carburetor
133	398187	Float-Carburetor
134	398188	Kit-Needle/Seat
137	796610	Gasket-Float Bowl
163	691894	Gasket-Air Cleaner
187	796491	Line-Fuel
190	793479	Stud
192	796631	Adjuster-Rocker Arm
202	796657	Link-Mechanical Governor
209	796484	Spring-Governor
216	796485	Link-Choke
222	796482	Bracket-Control
227	796487	Lever-Governor Control
238	691300	Cap-Valve
276	271716	Washer-Sealing
287	793479	Stud
291	796486	Thermostat
300	796495	Muffler
304	796693	Housing-Blower

Briggs & Stratton Model - 11P905-0826-B1

Ref No.	Part Number	Description
309	796842	Motor-Starter
332	712-0318	Nut
333	796499	Armature-Magneto
334	793454	Screw
334A	796537	Screw
337	759-3336	Plug-Spark
356	692390	Wire-Stop
358	796661	Gasket Set-Engine
365	793458	Screw
365A	690349	Screw
404	690272	Washer
445	795066	Filter-Air Cleaner Cartridge
505	793515	Nut
523	796503	Dipstick
524	692296	Seal- Dipstick Tube
525	796502	Tube-Dipstick
535	796254	Filter-Air Cleaner Foam
562	793514	Bolt
592	793481	Nut
601	791850	Clamp-Hose
608	796497	Starter-Rewind
613	796496	Screw
615	690340	Retainer-Governor Shaft
616	796488	Crank-Governor
621	692310	Switch-Stop
623	793628	Seal-O Ring
635	66538s	Boot-Spark Plug
670	793485	Spacer-Fuel Tank
718	690959	Pin-Locating
741	795755	Gear-Timing
745	793491	Screw
789	792685	Harness-Wiring
830	796472	Stud-Rocker Arm

Ref No.	Part Number	Description
842	691031	Seal-O Ring
847	N/A	Dipstick/Tube Assembly
853	695268	Adapter-Wire
868	795440	Seal-Valve
875	796492	Base-Air Cleaner
883	793497	Gasket-Exhaust
883A	796677	Gasket-Exhaust
886	796474	Gasket Kit-Cylinder/Plate
914	794451	Screw
922	692135	Spring-Brake
923	796635	Brake
957	796577	Cap-Fuel Tank
957A	692046	Cap-Fuel Tank
968	796493	Cover-Air Cleaner
972	796489	Tank-Fuel
975	796611	Bowl-Fuel
993	796473	Gasket-Cylinder Head Plate
1022	796480	Gasket-Rocker Cover
1023	796479	Cover-Rocker
1026	796481	Rod-Push
1029	691230	Arm-Rocker
1034	691343	Guide-Push Rod
1036	N/A	Label-Emissions
1058	278415	Operator's Manual
1059	793471	Kit-Screw/Washer
1095	796662	Gasket Set-Valve
1263	697124	Reed -Breather
1264	793453	Screw
1329	121S07-0062	Replacement Engine
1330	N/A	Repair Manual
1375	796476	Cover-Breather/Reed
1376	794451	Screw
1430	796477	Gasket-Breather/Reed

[illegible]

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
