 

Cub Cadet®

ILLUSTRATED PARTS MANUAL

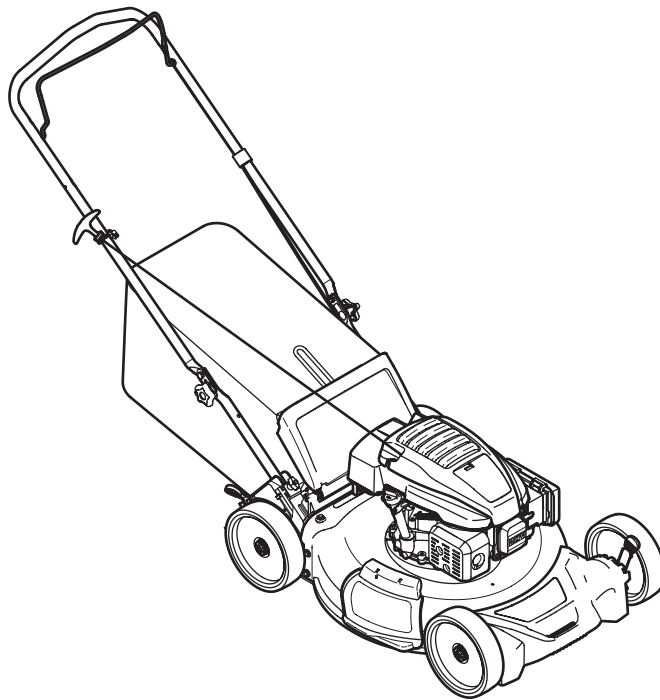

Push and Self-Propelled Mowers

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Lawn Mower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Model SC 100 (11A-A92)	4	Model SC 500 Z (12ABC62)	18
Model SC 100 HW (11A-B92)	6	Model SC 500 e+ (12ATD2A)	20
Model SC 300 HW (12ABB22)	8	Labels	22
Model SC 500 HW (12ABD22)	10	Engine Model 5X65RU	24
Model SC 500 EZ (12ACC6S)	12	Engine Model 6X65RU	34
Model SC 500 EZ+ (12ATC6A)	16	Briggs & Stratton 121S05-0034-F1	44

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--


Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXXX-0637). Please refer to the table below for current color codes:

0637	Black	0685	Blue (Cub Cadet)
4021	Yellow (Cub Cadet)	0691	Black Jack (Cub Cadet Commercial)
0499	Beige (Cub Cadet)		

This page left intentionally blank.

 
Model SC 100 (11A-A92)

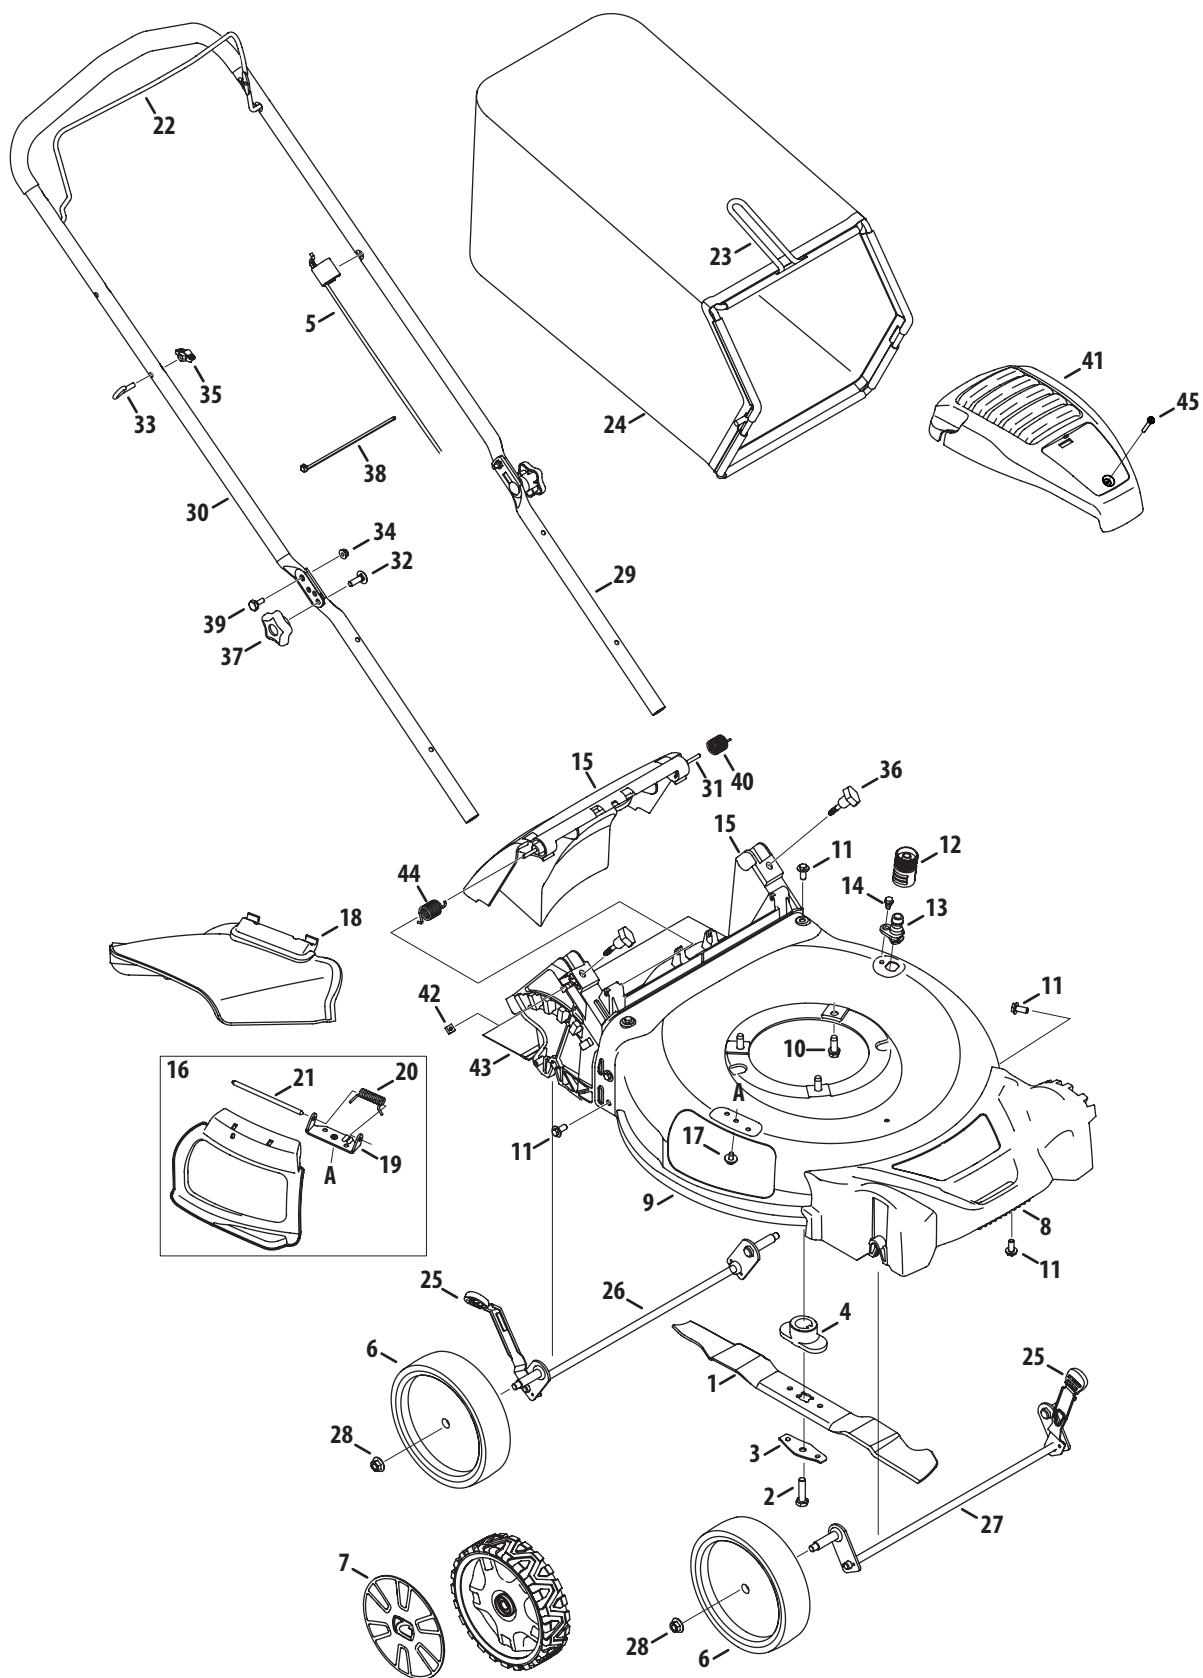

Ref No.	Part Number	Description
1	942-0741A	Mulching Blade
2	710-1044	Screw, 3/8-24 x 1.50
3	736-0524B	Blade Bell Support
4	748-04096	Blade Adapter
5	946-04703A	Control Cable
6	634-04659	Wheel, 8 x2
7	731-08570	Hubcap
8	731-09258A	Front Cover
9	787-01874C	21" Deck
10	710-04683B	Screw, tt, 3/8-16 x 1.00
11	710-04995A	Screw, 5/16-14 x .750
12	921-04041	Water Nozzle Adapter
13	731-07487	Water Nozzle
14	738-04502	Shoulder Screw, 1/4-20 x 0.50
15	631-04369A	Rear Discharge Door Assembly
16	987-02516A	Mulch Plug (Incl. 19-21)
17	710-05073	Screw
18	731-07131	Side Discharge Chute
19	787-01779	Chute Deflector Bracket
20	732-1014C	Torsion Spring
21	747-0710A	Hinge Pin
22	931-05119A	Blade Control
23	647-04271	Grass Catcher Frame

Ref No.	Part Number	Description
24	764-04082B	Grass Bag
25	720-05014	Adjustment Knob
26	911-04142A	Rear Axle Assembly
27	911-05022	Front Axle Assembly
28	712-04217	Flange Lock Nut, 3/8-16
29	749-04608A	Lower Handle
30	749-04682A	Upper Handle
31	747-05183	Pivot Rod
32	710-04998	Carriage Screw ,5/16-18
33	710-1205	Rope Guide
34	712-04064	Nut, Flange Lock, 1/4-20
35	720-0279	Knob
36	720-05066A	Wing Nut
37	720-05009	Star Knob
38	725-0157	Cable Tie
39	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20
40	732-05062A	Torsion Spring - LH
41	731-09094A	Engine Shroud
42	712-04222	Nut, Sq., 1/4-20
43	731-07203	Trail Shield
44	732-05061A	Torsion Spring - RH
45	710-04509	Screw, #10-16 x 1.25

 Model SC 100 HW (11A-B92)

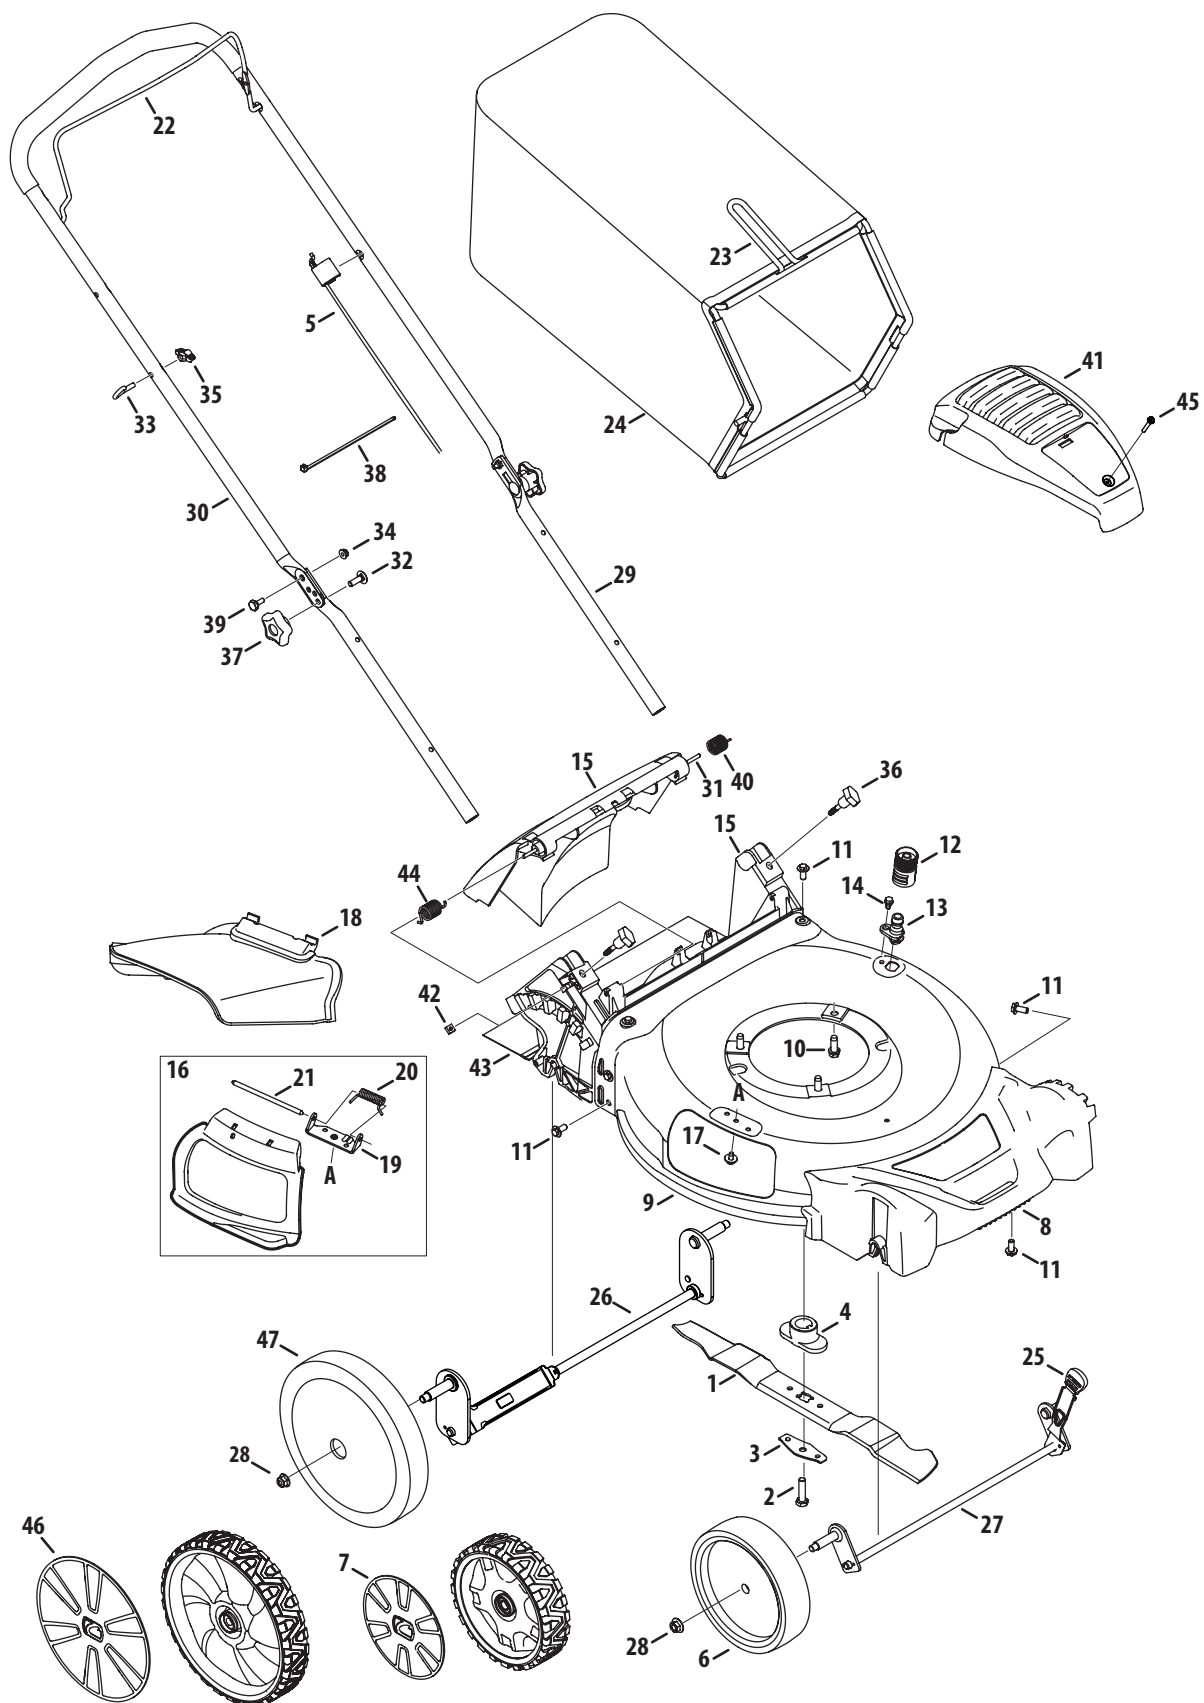


Model SC 100 HW (11A-B92)

Ref No.	Part Number	Description
1	942-0741A	Mulching Blade
2	710-1044	Screw, 3/8-24 x 1.50
3	736-0524B	Blade Bell Support
4	748-04096	Blade Adapter
5	946-04703A	Control Cable
6	634-04659	Wheel, 8 x2
7	731-08570	Hubcap
8	731-09258A	Front Cover
9	787-01874C	21" Deck
10	710-04683B	Screw, tt, 3/8-16 x 1.00
11	710-04995A	Screw, 5/16-14 x .750
12	921-04041	Water Nozzle Adapter
13	731-07487	Water Nozzle
14	738-04502	Shoulder Screw, 1/4-20 x 0.50
15	631-04369A	Rear Discharge Door Assembly
—	631-04567A	Door Assembly, International
16	987-02516A	Mulch Plug (Incl. 19-21)
—	687-02531A	Mulch Plug Ass'y, International
17	710-05073	Screw
18	731-07131	Side Discharge Chute
19	787-01779	Chute Deflector Bracket
20	732-1014C	Torsion Spring
21	747-0710A	Hinge Pin
22	931-05119A	Blade Control
23	647-04271	Grass Catcher Frame

Ref No.	Part Number	Description
24	764-04082B	Grass Bag
25	720-05014	Adjustment Knob
26	911-04144B	Rear Axle Assembly
27	911-05022	Front Axle Assembly
28	712-04217	Flange Lock Nut, 3/8-16
29	749-04608A	Lower Handle
30	749-04682A	Upper Handle
31	747-05183	Pivot Rod
32	710-04998	Carriage Screw ,5/16-18
33	710-1205	Rope Guide
34	712-04064	Nut, Flange Lock, 1/4-20
35	720-0279	Knob
36	720-05066A	Wing Nut
37	720-05009	Star Knob
38	725-0157	Cable Tie
39	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20
40	732-05062A	Torsion Spring - LH
41	731-09094A	Engine Shroud
42	712-04222	Nut, Sq., 1/4-20
43	731-07203	Trail Shield
44	732-05061A	Torsion Spring - RH
45	710-04509	Screw, #10-16 x 1.25
46	731-08571	Hubcap, 11"
47	634-05062	Rear Wheel, 11 x 2.0, Zag, Black

 
Model SC 300 HW (12ABB22)

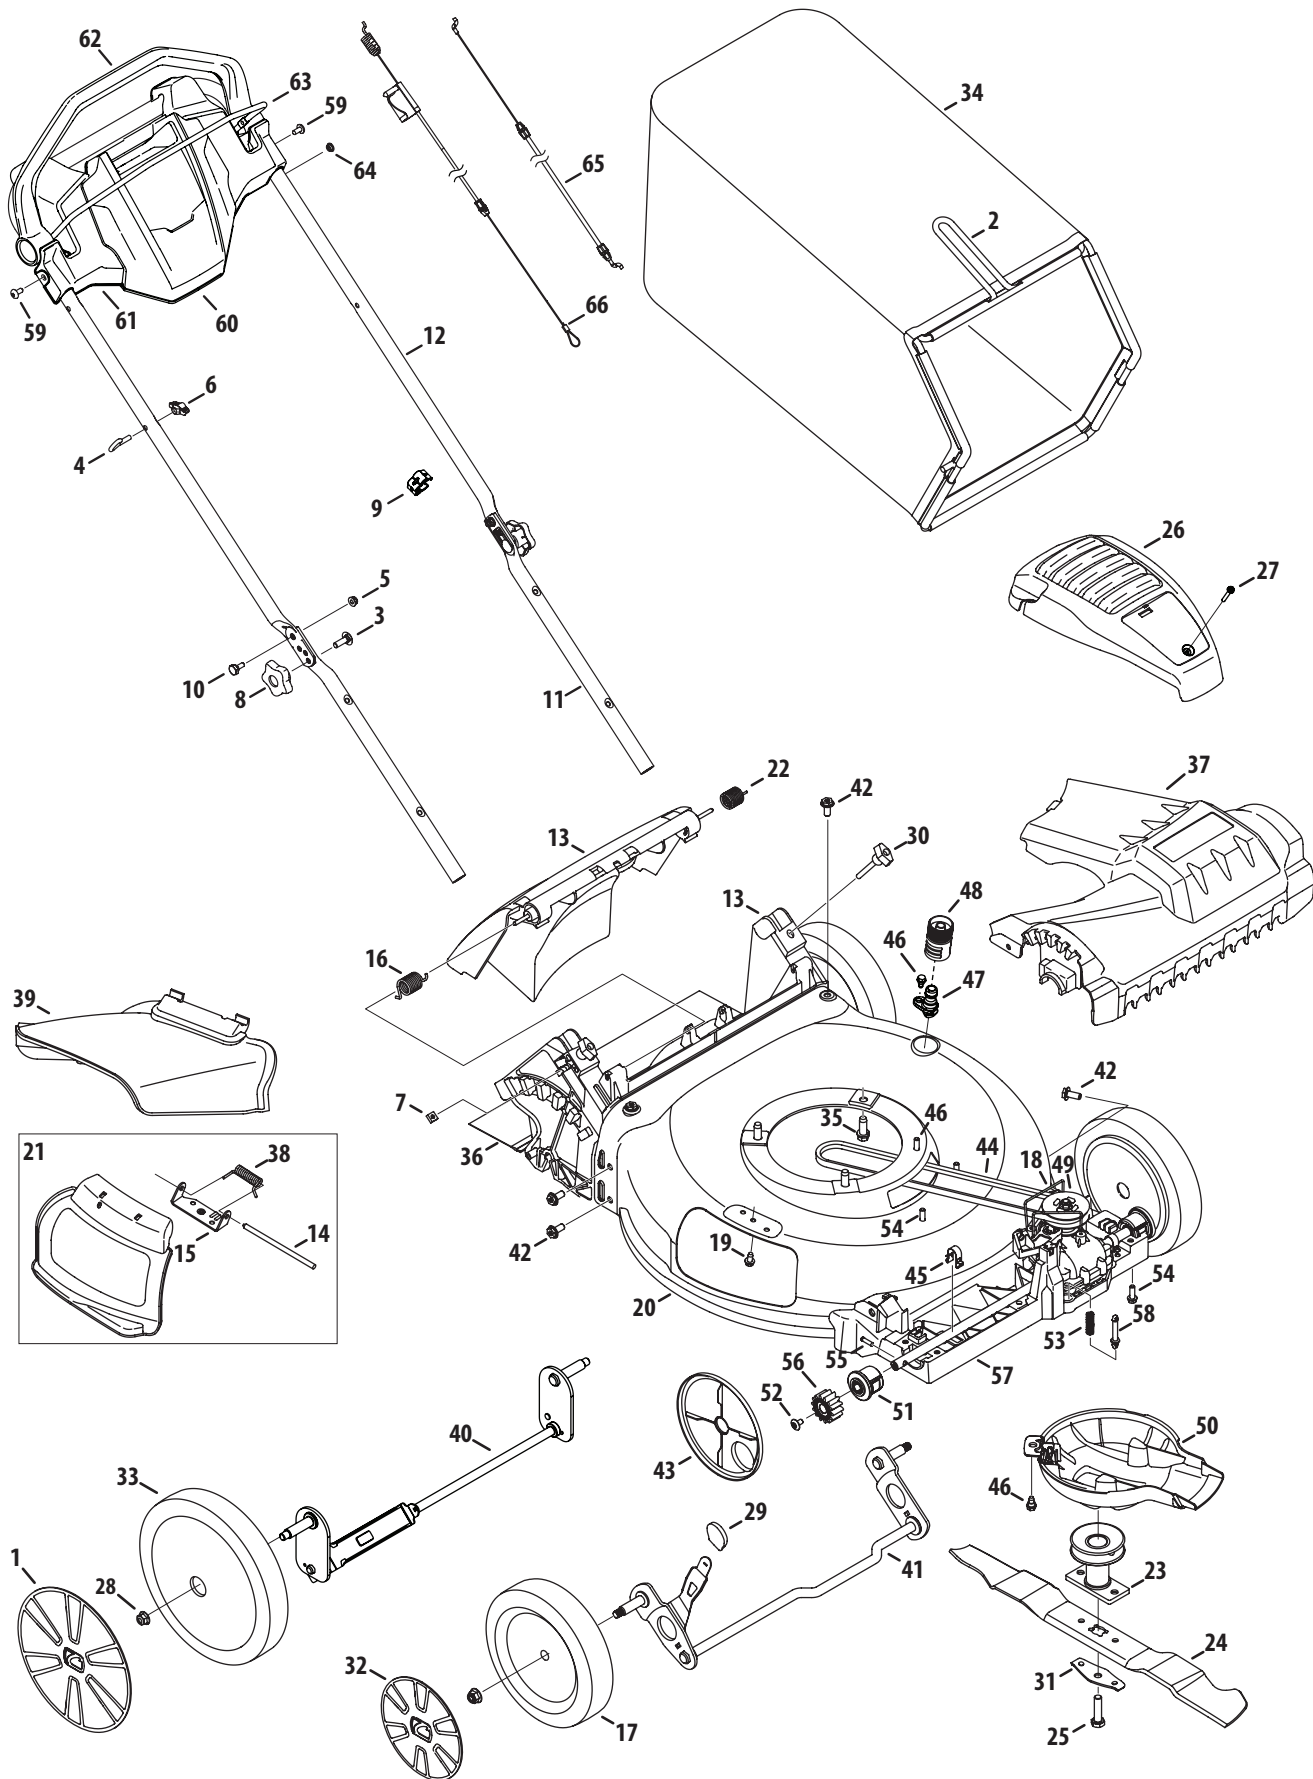

Model SC 300 HW (12ABB22)

Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	731-08571	Hubcap, 11"	35	710-04683B	TT Sems Screw, 3/8-16 x 1.0
2	647-04271	Grass Catcher Frame	36	731-07203	Trail Shield
3	710-04998	Carriage Screw ,5/16-18	37	731-09435	Front Cover
4	710-1205	Rope Guide	38	732-1014C	Torsion Spring
5	712-04064	Nut, Flange Lock, 1/4-20	39	731-07131	Side Chute
6	720-0279	Knob	40	911-04144B	Rear Axle Assembly
7	712-04222	Nut, Sq., 1/4-20	41	911-04150	Front Axle Assembly
8	720-05009	Star Knob	42	710-04995A	Screw, 5/16-14 x .750
9	731-08454	Conduit Clip	43	731-07240A	Wheel Dust Cover
10	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20	44	954-04260	V-Belt
11	749-04608A	Lower Handle	45	787-01793	Front Axle Clip
12	749-05084	Upper Handle	46	738-04502	Shoulder Screw, 1/4-20 x 0.50
13	631-04369A	Rear Discharge Door Assembly	47	731-07487	Water Nozzle
14	747-0710A	Hinge Pin	48	921-04041	Water Nozzle Adapter
15	787-01779	Chute Deflector Bracket	49	918-04881A	Transmission Assembly
16	732-05061A	Torsion Spring - RH	50	931-04535B	Engine Baffle
17	634-05040	Front Wheel	51	941-00019	Bearing Assembly
18	732-04675A	Transmission Wire	52	710-04531	Screw, 1/4-20 x .390
19	710-05073	Screw, 1/4-20 x .500	53	732-04704	Compression Spring
20	787-01872C	Deck, 21"	54	710-0895	Screw, 1/4-15 x .750
21	987-02516A	Hinged Mulch Plug Assembly	55	715-04099	Dowel Pin
22	732-05062A	Torsion Spring - LH	56	917-04801	Spur Gear, 14T - RH
23	687-02528	Blade Adapter Assembly		917-04802	Spur Gear, 14T - LH
24	942-0741A	Mulching Blade	57	731-07789	Lower Tray
25	710-1044	Screw , 3/8-24 x 1.50	58	731-07355	Spring Body
26	731-09094A	Engine Shroud	59	710-1017	Screw, 1/4-14 x .625
27	710-04509	Screw, #10-16 x 1.25	60	931-09863	Trim Console
28	712-04217	Flange Lock Nut, 3/8-16	61	931-09891	handle Console
29	720-05014	Adjustment Knob	62	631-05136	Drive Handle
30	720-05066A	Wing Nut	63	747-06381	Blade Control
31	736-0524B	Blade Bell Support	64	748-05047	Shoulder Spacer, .18 x .315 x .09
32	731-08570	Hubcap	65	946-05105A	Control Cable
33	634-04601	Rear Wheel	66	746-05209	Drive Cable
34	764-04082B	Grass Bag			

 Model SC 500 HW (12ABD22)

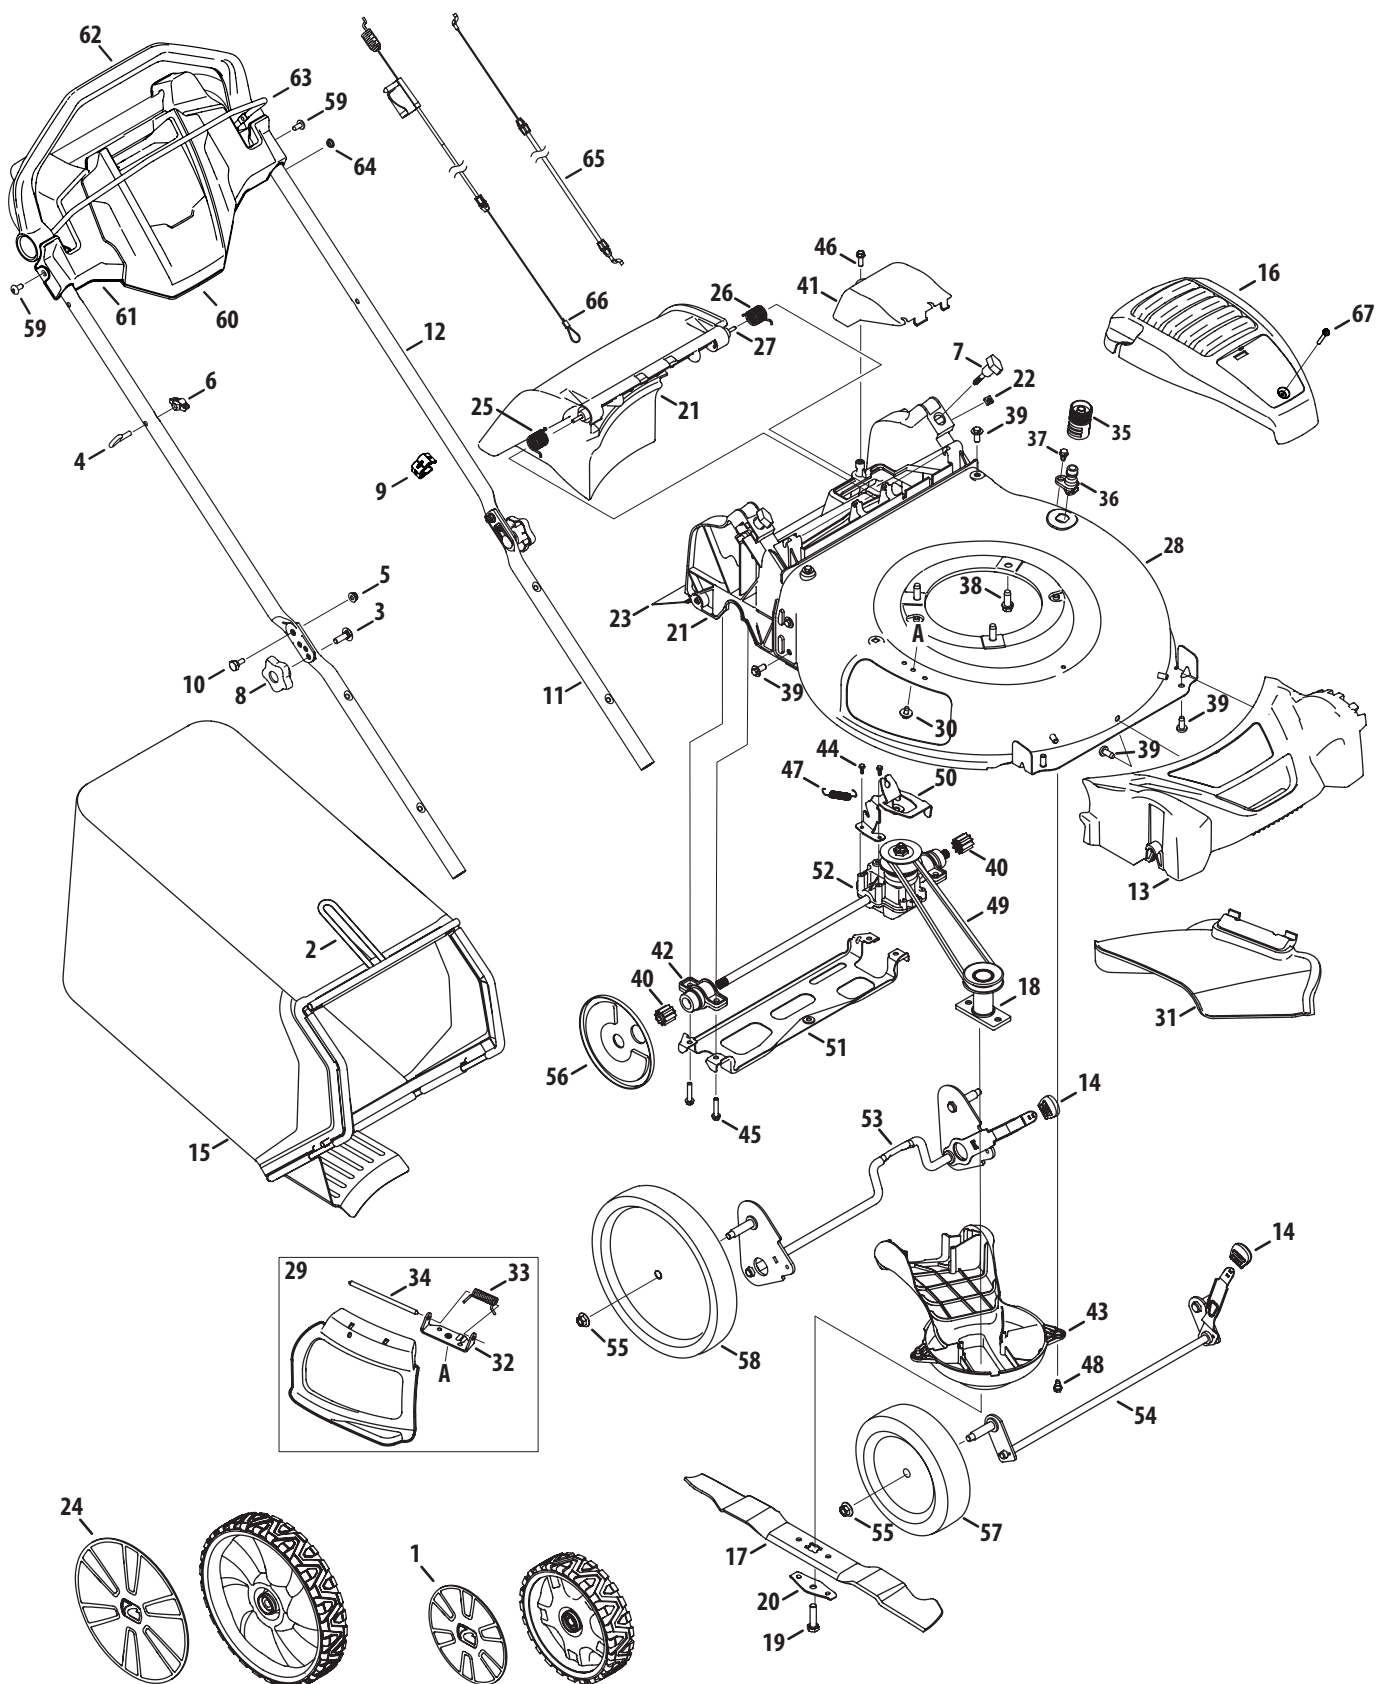


Model SC 500 HW (12ABD22)

Ref No.	Part Number	Description
1	731-08570	Hubcap, 8"
2	747-05362A	Grass Catcher Frame
3	710-04998	Carriage Screw ,5/16-18
4	710-1205	Rope Guide
5	712-04064	Nut, Flange Lock, 1/4-20
6	720-0279	Knob
7	720-05066A	Wing Nut
8	720-05009	Star Knob
9	731-08454	Conduit Clip
10	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20
11	749-04608A	Lower Handle
12	749-05084	Upper Handle
13	731-09258A	Front Cover
14	720-05014	Adjustment Knob
15	964-05005	Grass Bag
16	731-09094A	Engine Shroud
17	942-0741A	Mulching Blade
18	687-02220	Blade Adapter
19	710-1044	Screw, 3/8-24 x 1.50
20	736-0524B	Blade Bell Support
21	631-04553A	Rear Discharge Door Assembly
22	712-04222	Nut, Sq., 1/4-20
23	731-07203	Trail Shield
24	731-08571	Hubcap, 11"
25	732-05061A	Torsion Spring - RH
26	732-05062A	Torsion Spring - LH
27	747-05183	Pivot Rod
28	787-02002B	21" Deck
29	987-02516A	Mulch Plug (Incl. 32-34)
30	710-05073	Screw
31	731-07131	Side Discharge Chute
32	787-01779	Chute Deflector Bracket
33	732-1014C	Torsion Spring
34	747-0710A	Hinge Pin

Ref No.	Part Number	Description
35	921-04041	Water Nozzle Adapter
36	731-07487	Water Nozzle
37	738-04502	Shoulder Screw, 1/4-20 x 0.50
38	710-04683B	Screw, tt, 3/8-16 x 1.00
39	710-04995A	Screw, 5/16-14 x .750
40	917-04849	Spur Gear, 9T
41	731-08175	Transmission Cover
42	631-04501A	Bearing Assembly
43	631-04512C	Engine Baffle
44	710-04374	Screw, Hex Washer, .159 x .43
45	710-04774	Screw, 1/4-15 x 1.25
46	710-0895	Screw, 1/4-15 x .750
47	732-05150A	Exten. Spring, 2.405
48	738-04502	Shoulder Screw, 1/4-20 x 0.50
49	954-04282	V-Belt
50	787-01868A	Transmission Bracket
51	787-01915A	Rear Support Bracket
52	918-07000	Transmission Assembly
53	911-05029	Rear Axle Assembly
54	911-05022	Front Axle Assembly
55	712-04217	Flange Lock Nut, 3/8-16
56	731-07731C	Wheel Dust Cover
57	634-04665	Front Wheel, 8 x 2
58	934-04699	Rear Wheel, 11 x 2
59	710-1017	Screw, 1/4-14 x .625
60	931-09863	Trim Console
61	931-09891	handle Console
62	631-05136	Drive Handle
63	747-06381	Blade Control
64	748-05047	Shoulder Spacer, .18 x .315 x .09
65	946-05105A	Control Cable
66	946-05121A	Drive Cable
67	710-04509	Screw, #10-16 x 1.25

 Model SC 500 EZ (12ACC6S)

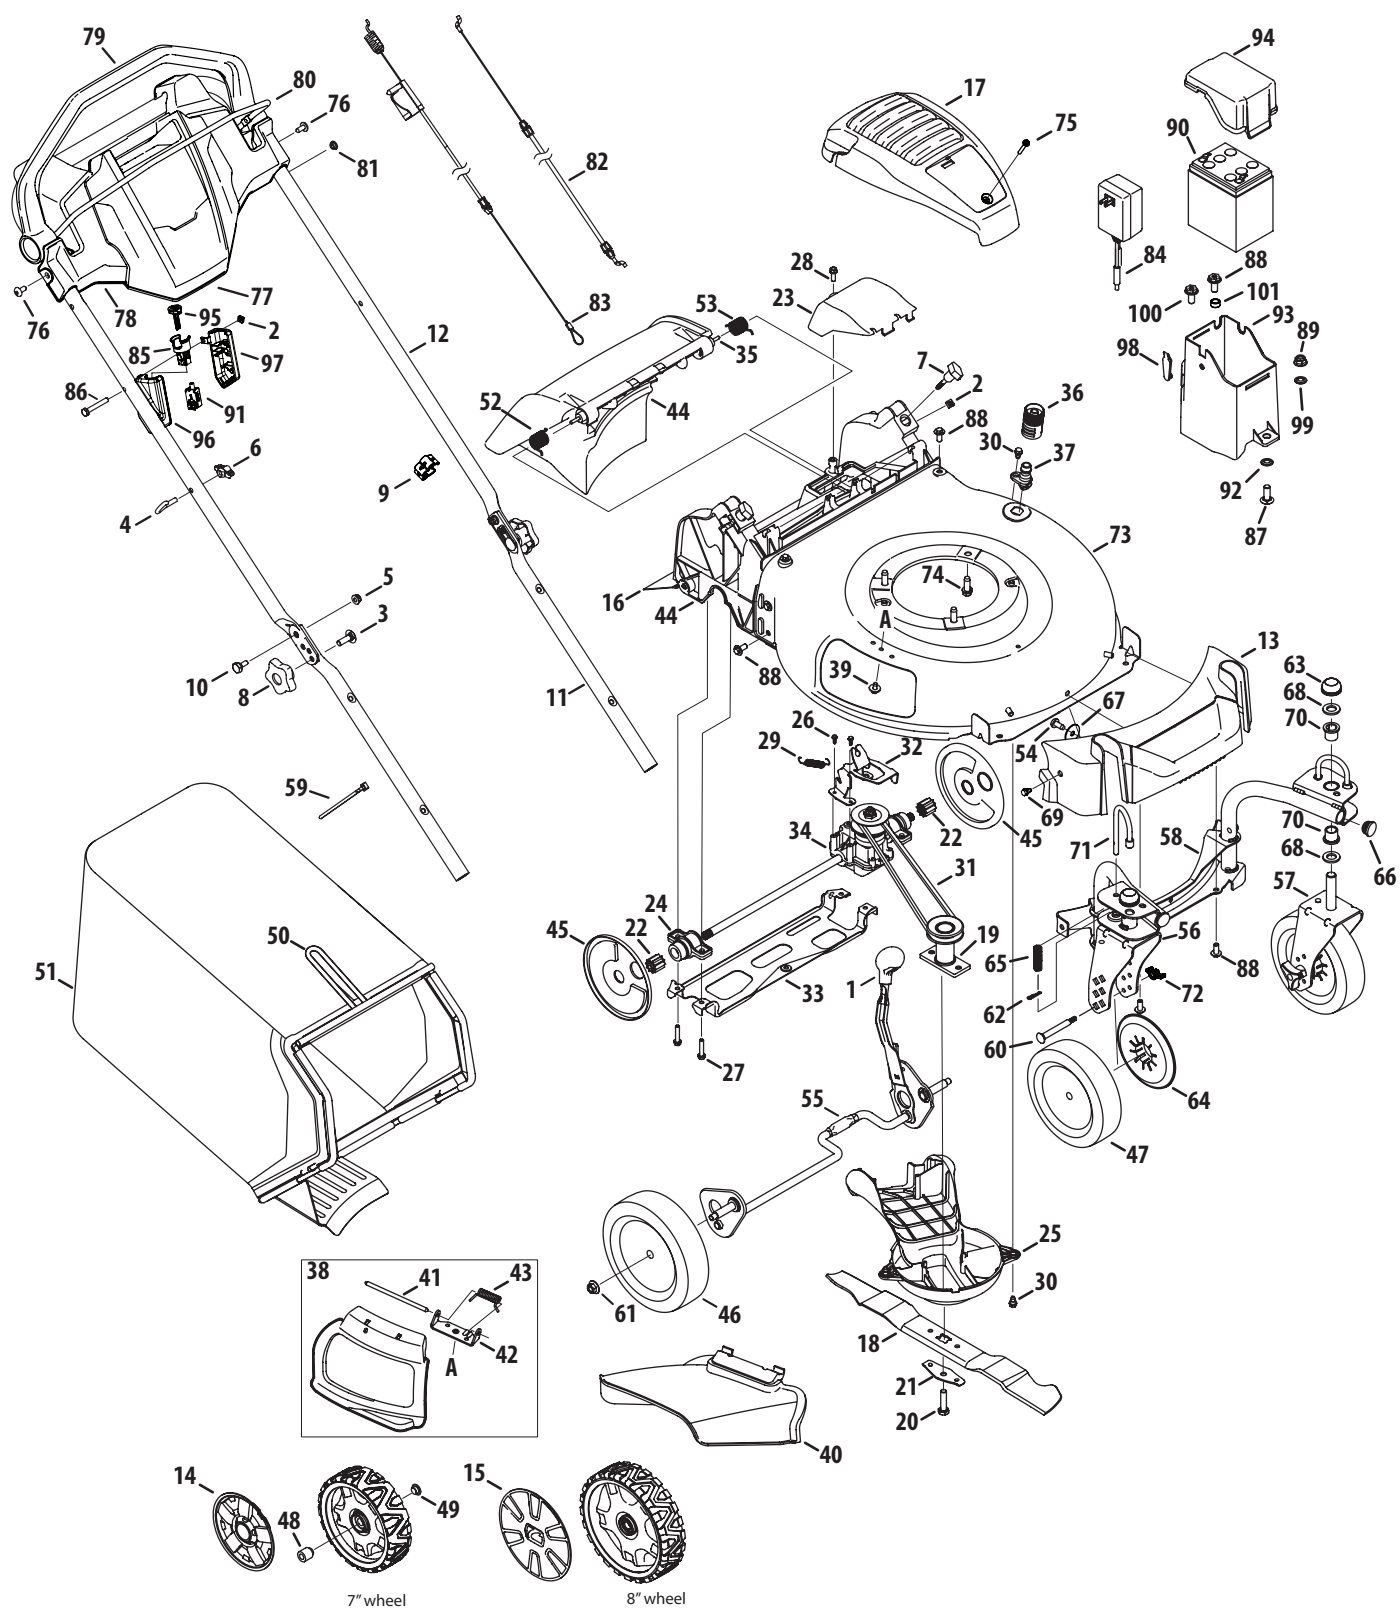

Model SC 500 EZ (12ACC6S)

Ref No.	Part Number	Description
1	720-05025	Adjustment Knob
2	712-04222	Nut, Sq., 1/4-20
3	710-04998	Carriage Screw ,5/16-18
4	710-1205	Rope Guide
5	712-04064	Nut, Flange Lock, 1/4-20
6	720-0279	Knob
7	720-05066A	Wing Nut
8	720-05009	Star Knob
9	731-08454	Conduit Clip
10	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20
11	749-04608A	Lower Handle
12	749-05084	Upper Handle
13	731-09621	Front Cover
14	731-09360	Hubcap, 7"
15	731-08570	Hubcap, 8"
16	731-07203	Trail Shield
17	731-09094A	Engine Shroud
18	942-0741A	Mulching Blade
19	687-02220	Blade Adapter
20	710-1044	Screw, 3/8-24 x 1.50
21	736-0524B	Blade Bell Support
22	917-04852	Spur Gear, 10T
23	731-08175	Transmission Cover
24	631-04501A	Bearing Assembly
25	631-04512C	Engine Baffle
26	710-04374	Screw, Hex Washer, .159 x .43
27	710-04774	Screw, 1/4-15 x 1.25
28	710-0895	Screw, 1/4-15 x .750
29	732-05150A	Exten. Spring, 2.405
30	738-04502	Shoulder Screw, 1/4-20 x 0.50
31	954-04282	V-Belt
32	787-01868A	Transmission Bracket
33	787-01915A	Rear Support Bracket
34	918-07000	Transmission Assembly
35	747-05183	Pivot Rod
36	921-04041	Water Nozzle Adapter
37	731-07487	Water Nozzle
38	987-02516A	Mulch Plug (Incl. 41-43)
39	710-05073	Screw
40	731-07131	Side Discharge Chute

Ref No.	Part Number	Description
41	747-0710A	Hinge Pin
42	787-01779	Chute Deflector Bracket
43	732-1014C	Torsion Spring
44	631-04553A	Rear Discharge Door Assembly
45	731-07795	Wheel Dust Cover
46	934-04714	Rear Wheel, 8 x 2
47	634-04733	Front Wheel, 7 x 2
48	750-06036	Caster Hub, Long
49	750-06065	Caster Hub, Short
50	747-05362A	Grass Catcher Frame
51	964-05005	Grass Bag
52	732-05061A	Torsion Spring - RH
53	732-05062A	Torsion Spring - LH
54	710-04484	Self Tapping Screw, 5/16-18 x .750
55	911-04189	Rear Axle Assembly
56	682-9024	Caster Bracket Assembly, RH
57	682-9026	Caster Bracket Assembly, LH
58	687-05033	Caster Bracket Assembly
59	725-0157	Cable Tie
60	911-1146	Caster Axle, .374 Dia. x 2.59
61	712-04217	Flange Lock Nut, 3/8-16
62	914-0104	Cotter Pin, .072 Dia. x 1.13 Lg.
63	726-0214	Push Cap, 5/8
64	731-09480	Dust Cover, 7"
65	932-0306A	Compr. Sprng., .531 OD x 1.75 Lg
66	735-0246A	Plug
67	736-0362	Washer, Flat, .330 x 1.25 x .06
68	736-0366	Flat Washer, .640 x 1.12 x .125
69	738-04502	Shdr. Screw, .50 x 1/4-20
70	741-0685	Flange Bearing, .631 ID
71	747-0924	Lock Pin: Front Wheel
72	712-0397A	Wing Nut, 1/4-20 w/Bell Washer
73	687-05086A	21" Deck
74	710-04683B	Screw, tt, 3/8-16 x 1.00
75	710-04509	Screw, #10-16 x 1.25
76	710-1017	Screw, 1/4-14 x .625
77	931-09863	Trim Console
78	931-09891	Handle Console
79	631-05136	Drive Handle
80	747-06381	Blade Control


Continued on next page

Model SC 500 EZ (12ACC6S)

Ref No.	Part Number	Description
81	748-05047	Shoulder Spacer, .18 x .315 x .09
82	946-05106A	Control Cable
83	946-05121A	Drive Cable
84	725-06121A	Battery Charger
85	931-05131A	Key Switch
86	710-0136	Screw, 1/4-20 x 1.75
87	710-0276	Bolt, Carr., 5/16-18 x 1.00
88	710-04995A	Screw, 5/16-14 x .750
89	912-0429	Nut, Flgk., 5/16-18
90	725-04903	Battery
91	725-06114	Plunger Switch
92	726-0201	Speed Nut
93	731-07135	Battery Housing
94	731-07154A	Battery Housing Top
95	731-09728	Key
96	731-09753A	Electric Start Housing, RH
97	731-09755	Electric Start Housing, LH
98	735-04213B	Lid Seal
99	736-0242	Washer, Bell, .340 x .872 x .080
100	738-04431A	Scr., Sldr., 5/16-14 x .972
101	750-05377	Spacer, .340 x .460 x .246
—	925-06140B	Wire Harness (Not Shown)
—	725-05106	Fuse (Not Shown)

This page left intentionally blank.

 Model SC 500 EZ+ (12ATC6A)

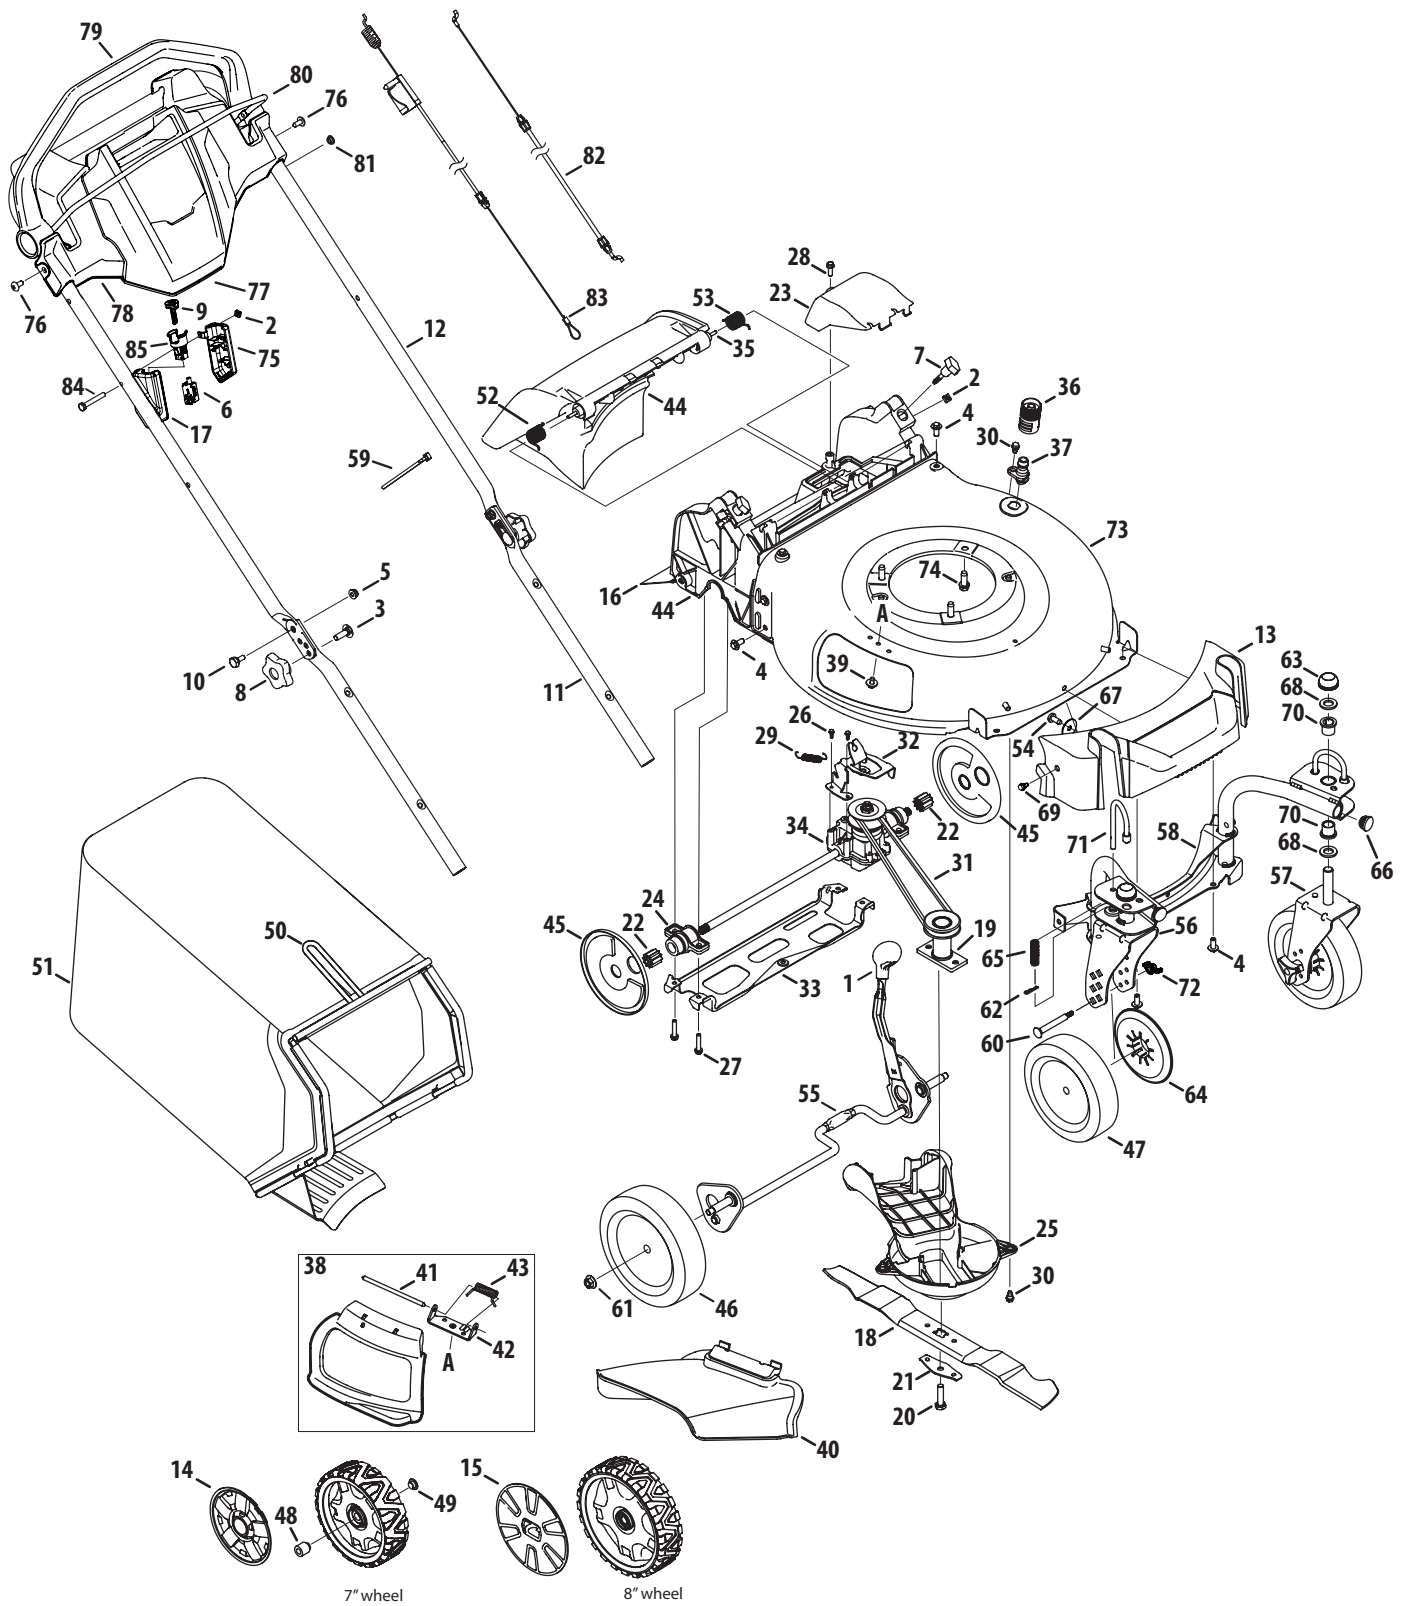


Model SC 500 EZ+ (12ATC6A)

Ref No.	Part Number	Description
1	720-05025	Adjustment Knob
2	712-04222	Nut, Sq., 1/4-20
3	710-04998	Carriage Screw ,5/16-18
4	710-04995A	Screw, 5/16-14 x .750
5	712-04064	Nut, Flange Lock, 1/4-20
6	725-06114	Plunger Switch
7	720-05066A	Wing Nut
8	720-05009	Star Knob
9	731-09728	Key
10	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20
11	749-04608A	Lower Handle
12	749-05084	Upper Handle
13	731-09621	Front Cover
14	731-09360	Hubcap, 7"
15	731-08570	Hubcap, 8"
16	731-07203	Trail Shield
17	731-09753A	Electric Start Housing, RH
18	942-0741A	Mulching Blade
19	687-02220	Blade Adapter
20	710-1044	Screw, 3/8-24 x 1.50
21	736-0524B	Blade Bell Support
22	917-04852	Spur Gear, 10T
23	731-08175	Transmission Cover
24	631-04501A	Bearing Assembly
25	631-04512C	Engine Baffle
26	710-04374	Screw, Hex Washer, .159 x .43
27	710-04774	Screw, 1/4-15 x 1.25
28	710-0895	Screw, 1/4-15 x .750
29	732-05150A	Exten. Spring, 2.405
30	738-04502	Shoulder Screw, 1/4-20 x 0.50
31	954-04282	V-Belt
32	787-01868A	Transmission Bracket
33	787-01915A	Rear Support Bracket
34	918-07000	Transmission Assembly
35	747-05183	Pivot Rod
36	921-04041	Water Nozzle Adapter
37	731-07487	Water Nozzle
38	987-02516A	Mulch Plug (Incl. 41-43)
39	710-05073	Screw
40	731-07131	Side Discharge Chute
41	747-0710A	Hinge Pin
42	787-01779	Chute Deflector Bracket
43	732-1014C	Torsion Spring
44	631-04553A	Rear Discharge Door Assembly

Ref No.	Part Number	Description
45	731-07795	Wheel Dust Cover
46	934-04714	Rear Wheel, 8 x 2
47	634-04733	Front Wheel, 7 x 2
48	750-06036	Caster Hub, Long
49	750-06065	Caster Hub, Short
50	747-05362A	Grass Catcher Frame
51	964-05005	Grass Bag
52	732-05061A	Torsion Spring - RH
53	732-05062A	Torsion Spring - LH
54	710-04484	Self Tapping Screw, 5/16-18 x .750
55	911-04189	Rear Axle Assembly
56	682-9024	Caster Bracket Assembly, RH
57	682-9026	Caster Bracket Assembly, LH
58	687-05033	Caster Bracket Assembly
59	725-0157	Cable Tie
60	911-1146	Caster Axle, .374 Dia. x 2.59
61	712-04217	Flange Lock Nut, 3/8-16
62	914-0104	Cotter Pin, .072 Dia. x 1.13 Lg.
63	726-0214	Push Cap, 5/8
64	731-09480	Dust Cover, 7"
65	932-0306A	Compr. Sprng., .531 OD x 1.75 Lg
66	735-0246A	Plug
67	736-0362	Washer, Flat, .330 x 1.25 x .06
68	736-0366	Flat Washer, .640 x 1.12 x .125
69	738-04502	Shdr. Screw, .50 x 1/4-20
70	741-0685	Flange Bearing, .631 ID
71	747-0924	Lock Pin: Front Wheel
72	712-0397A	Wing Nut, 1/4-20 w/Bell Washer
73	687-05086A	21" Deck
—	687-05069B	21" Deck (TSC)
74	710-04683B	Screw, tt, 3/8-16 x 1.00
75	731-09755	Electric Start Housing, LH
76	710-1017	Screw, 1/4-14 x .625
77	931-09863	Trim Console
78	931-09891	Handle Console
79	631-05136	Drive Handle
80	747-06381	Blade Control
81	748-05047	Shoulder Spacer, .18 x .315 x .09
82	946-05107A	Control Cable
83	946-05121A	Drive Cable
84	710-0136	Screw, 1/4-20 x 1.75
85	931-05131A	Key Switch
—	725-06257	Wire Harness (Not Shown)

 Model SC 500 Z (12ABC62)

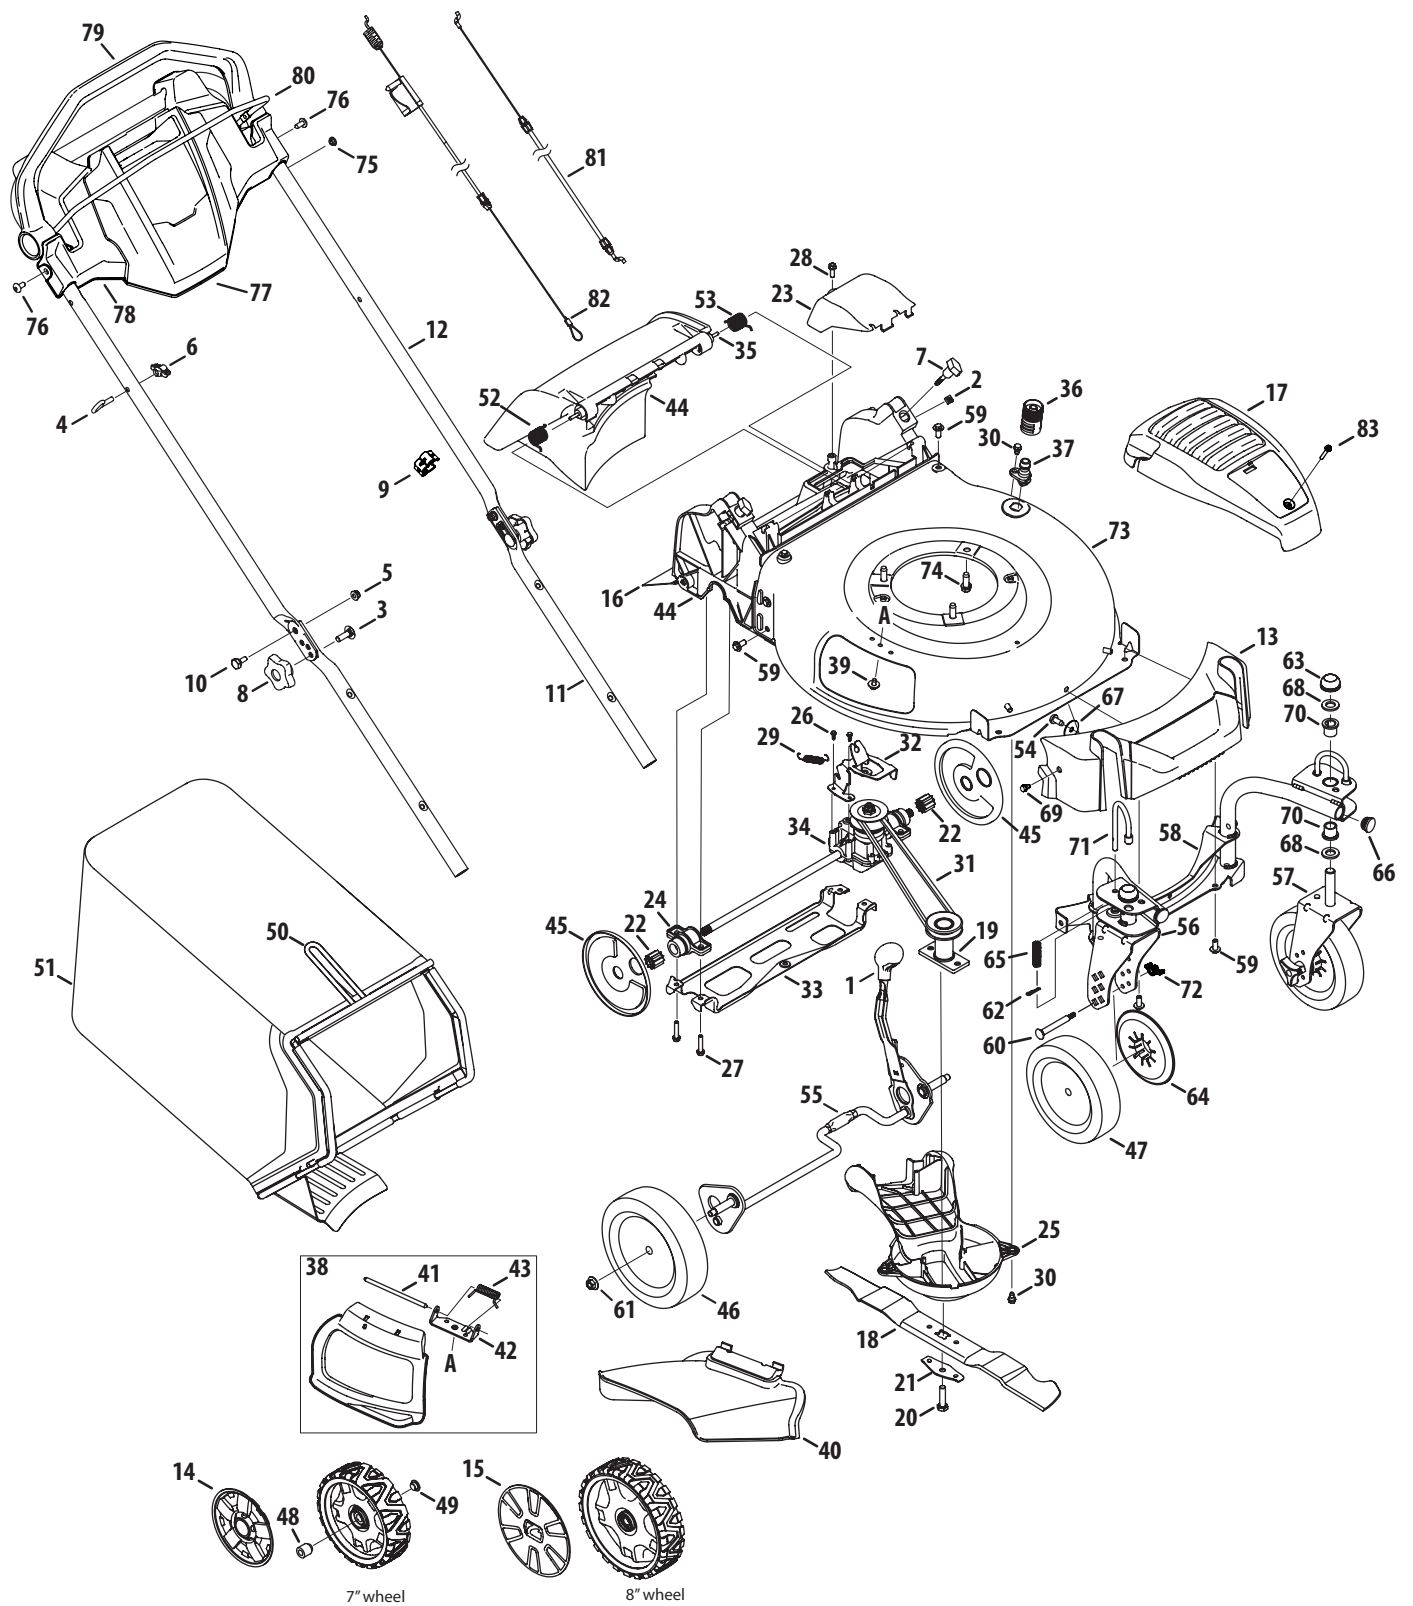


Model SC 500 Z (12ABC62)

Ref No.	Part Number	Description
1	720-05025	Adjustment Knob
2	712-04222	Nut, Sq., 1/4-20
3	710-04998	Carriage Screw ,5/16-18
4	710-1205	Rope Guide
5	712-04064	Nut, Flange Lock, 1/4-20
6	720-0279	Knob
7	720-05066A	Wing Nut
8	720-05009	Star Knob
9	731-08454	Conduit Clip
10	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20
11	749-04608A	Lower Handle
12	749-05084	Upper Handle
13	731-09621	Front Cover
14	731-09360	Hubcap, 7"
15	731-08570	Hubcap, 8"
16	731-07203	Trail Shield
17	731-09094A	Engine Shroud
18	942-0741A	Mulching Blade
19	687-02220	Blade Adapter
20	710-1044	Screw, 3/8-24 x 1.50
21	736-0524B	Blade Bell Support
22	917-04852	Spur Gear, 10T
23	731-08175	Transmission Cover
24	631-04501A	Bearing Assembly
25	631-04512C	Engine Baffle
26	710-04374	Screw, Hex Washer, .159 x .43
27	710-04774	Screw, 1/4-15 x 1.25
28	710-0895	Screw, 1/4-15 x .750
29	732-05150A	Exten. Spring, 2.405
30	738-04502	Shoulder Screw, 1/4-20 x 0.50
31	954-04282	V-Belt
32	787-01868A	Transmission Bracket
33	787-01915A	Rear Support Bracket
34	918-07000	Transmission Assembly
35	747-05183	Pivot Rod
36	921-04041	Water Nozzle Adapter
37	731-07487	Water Nozzle
38	987-02516A	Mulch Plug (Incl. 41-43)
39	710-05073	Screw
40	731-07131	Side Discharge Chute
41	747-0710A	Hinge Pin
42	787-01779	Chute Deflector Bracket

Ref No.	Part Number	Description
43	732-1014C	Torsion Spring
44	631-04553A	Rear Discharge Door Assembly
45	731-07795	Wheel Dust Cover
46	934-04714	Rear Wheel, 8 x 2
47	634-04733	Front Wheel, 7 x 2
48	750-06036	Caster Hub, Long
49	750-06065	Caster Hub, Short
50	747-05362A	Grass Catcher Frame
51	964-05005	Grass Bag
52	732-05061A	Torsion Spring - RH
53	732-05062A	Torsion Spring - LH
54	710-04484	Self Tapping Screw, 5/16-18 x .750
55	911-04189	Rear Axle Assembly
56	682-9024	Caster Bracket Assembly, RH
57	682-9026	Caster Bracket Assembly, LH
58	687-05033	Caster Bracket Assembly
59	710-04995A	Screw, 5/16-14 x .750
60	911-1146	Caster Axle, .374 Dia. x 2.59
61	712-04217	Flange Lock Nut, 3/8-16
62	914-0104	Cotter Pin, .072 Dia. x 1.13 Lg.
63	726-0214	Push Cap, 5/8
64	731-09480	Dust Cover, 7"
65	932-0306A	Compr. Sprng., .531 OD x 1.75 Lg
66	735-0246A	Plug
67	736-0362	Washer, Flat, .330 x 1.25 x .06
68	736-0366	Flat Washer, .640 x 1.12 x .125
69	738-04502	Shdr. Screw, .50 x 1/4-20
70	741-0685	Flange Bearing, .631 ID
71	747-0924	Lock Pin: Front Wheel
72	712-0397A	Wing Nut, 1/4-20 w/Bell Washer
73	687-05069B	21" Deck
74	710-04683B	Screw, tt, 3/8-16 x 1.00
75	748-05047	Shoulder Spacer, .18 x .315 x .09
76	710-1017	Screw, 1/4-14 x .625
77	931-09863	Trim Console
78	931-09891	handle Console
79	631-05136	Drive Handle
80	747-06381	Blade Control
81	946-05105A	Control Cable
82	946-05121A	Drive Cable
83	710-04509	Screw, #10-16 x 1.25

 Model SC 500 e+ (12ATD2A)

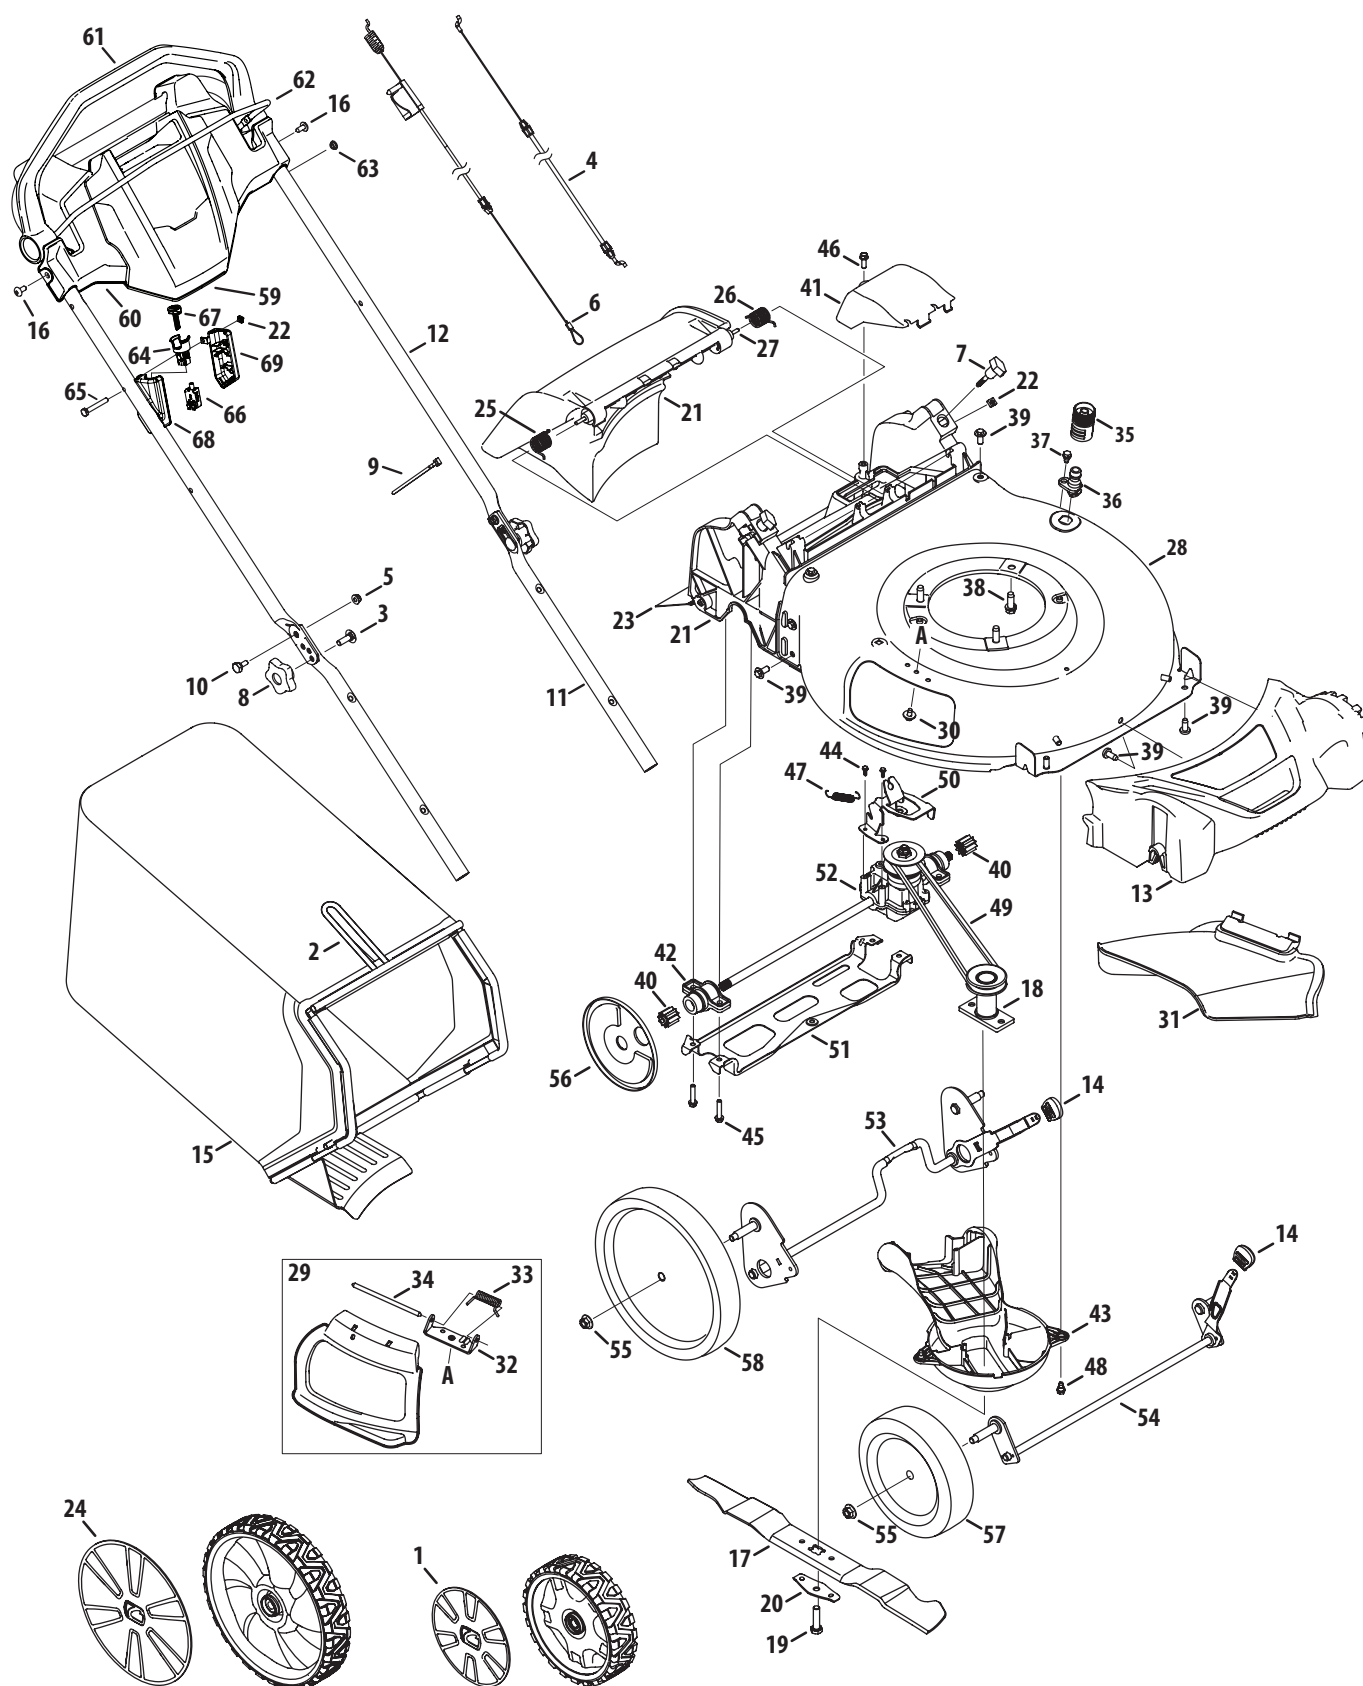


Model SC 500 e+ (12ATD2A)

Ref No.	Part Number	Description
1	731-08570	Hubcap, 8"
2	747-05362A	Grass Catcher Frame
3	710-04998	Carriage Screw ,5/16-18
4	946-05107A	Control Cable
5	712-04064	Nut, Flange Lock, 1/4-20
6	946-05121A	Drive Cable
7	720-05066A	Wing Nut
8	720-05009	Star Knob
9	725-0157	Cable Tie
10	738-04419A	Shdr. Screw, .375 x .126 x 1/4-20
11	749-04608A	Lower Handle
12	749-05084	Upper Handle
13	731-09258A	Front Cover
14	720-05014	Adjustment Knob
15	964-05005	Grass Bag
16	710-1017	Screw, 1/4-14 x .625
17	942-0741A	Mulching Blade
18	687-02220	Blade Adapter
19	710-1044	Screw, 3/8-24 x 1.50
20	736-0524B	Blade Bell Support
21	631-04553A	Rear Discharge Door Assembly
22	712-04222	Nut, Sq., 1/4-20
23	731-07203	Trail Shield
24	731-08571	Hubcap, 11"
25	732-05061A	Torsion Spring - RH
26	732-05062A	Torsion Spring - LH
27	747-05183	Pivot Rod
28	787-02002B	21" Deck
29	987-02516A	Mulch Plug (Incl. 32-34)
30	710-05073	Screw
31	731-07131	Side Discharge Chute
32	787-01779	Chute Deflector Bracket
33	732-1014C	Torsion Spring
34	747-0710A	Hinge Pin
35	921-04041	Water Nozzle Adapter

Ref No.	Part Number	Description
36	731-07487	Water Nozzle
37	738-04502	Shoulder Screw, 1/4-20 x 0.50
38	710-04683C	Screw, tt, 3/8-16 x 1.00
39	710-04995A	Screw, 5/16-14 x .750
40	917-04849	Spur Gear, 9T
41	731-08175	Transmission Cover
42	631-04501A	Bearing Assembly
43	631-04512C	Engine Baffle
44	710-04374	Screw, Hex Washer, .159 x .43
45	710-04774	Screw, 1/4-15 x 1.25
46	710-0895	Screw, 1/4-15 x .750
47	732-05150A	Exten. Spring, 2.405
48	738-04502	Shoulder Screw, 1/4-20 x 0.50
49	954-04282	V-Belt
50	787-01868A	Transmission Bracket
51	787-01915A	Rear Support Bracket
52	918-07000	Transmission Assembly
53	911-05029	Rear Axle Assembly
54	911-05022	Front Axle Assembly
55	712-04217	Flange Lock Nut, 3/8-16
56	731-07731C	Wheel Dust Cover
57	634-04665	Front Wheel, 8 x 2
58	934-04699	Rear Wheel, 11 x 2
59	931-10686	Trim Console
60	931-10685	Handle Console
61	631-05136A	Drive Handle
62	747-06338	Blade Control
63	748-05047	Shoulder Spacer, .18 x .315 x .09
64	931-05131A	Key Switch
65	710-0136	Screw, 1/4-20 x 1.75
66	725-06114	Plunger Switch
67	731-09728	Key
68	731-09753A	Electric Start Housing, RH
69	731-09755	Electric Start Housing, LH
—	925-06257	Wire Harness (Not Shown)

Labels

 777S32652

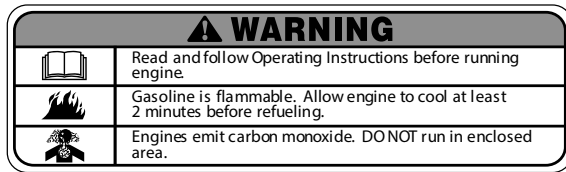

777D18543



 
777I23349




777D18546



777I20292

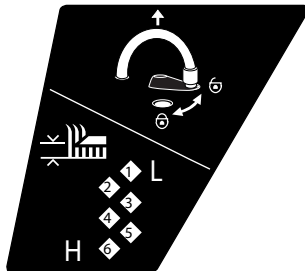

777I20745

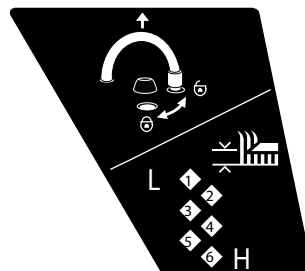 

777I25151



777D18407



777D18409



777D18410



777D19380

 


777D19364




[illegible]

Engine Model 5X65RU Air Cleaner

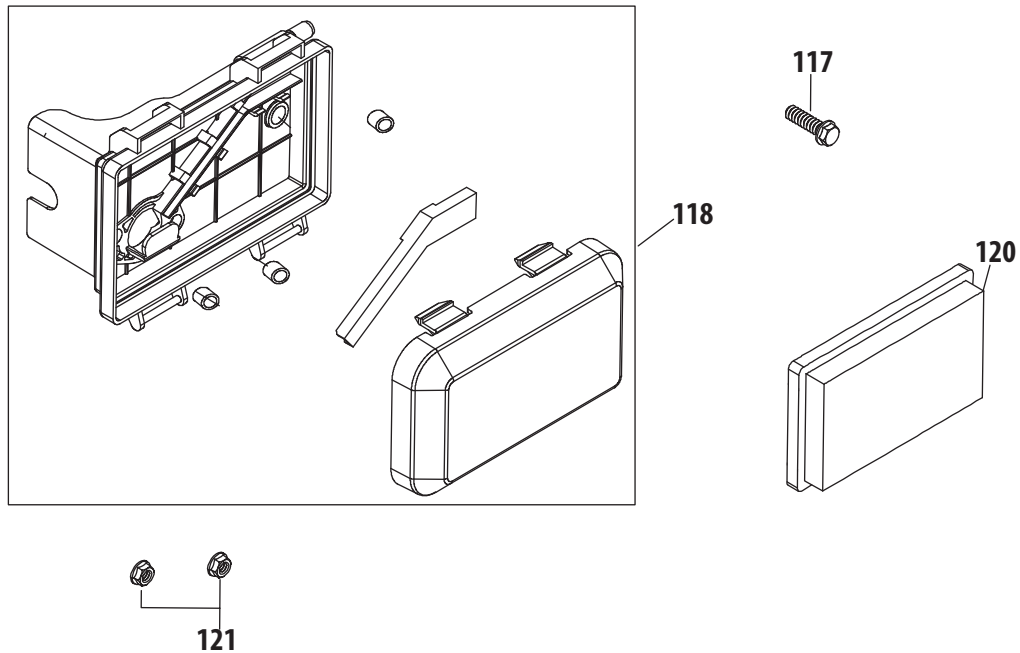

Ref.	Part Number	Description
117	710-04969	Bolt M6X30 Af Base/Coil/E-Starter
118	951-14439	Air Cleaner Housing Assembly
120	951-10298	Air Cleaner Kit
121	712-05015	Nut M6X10Mm Starter/Carb/Muff

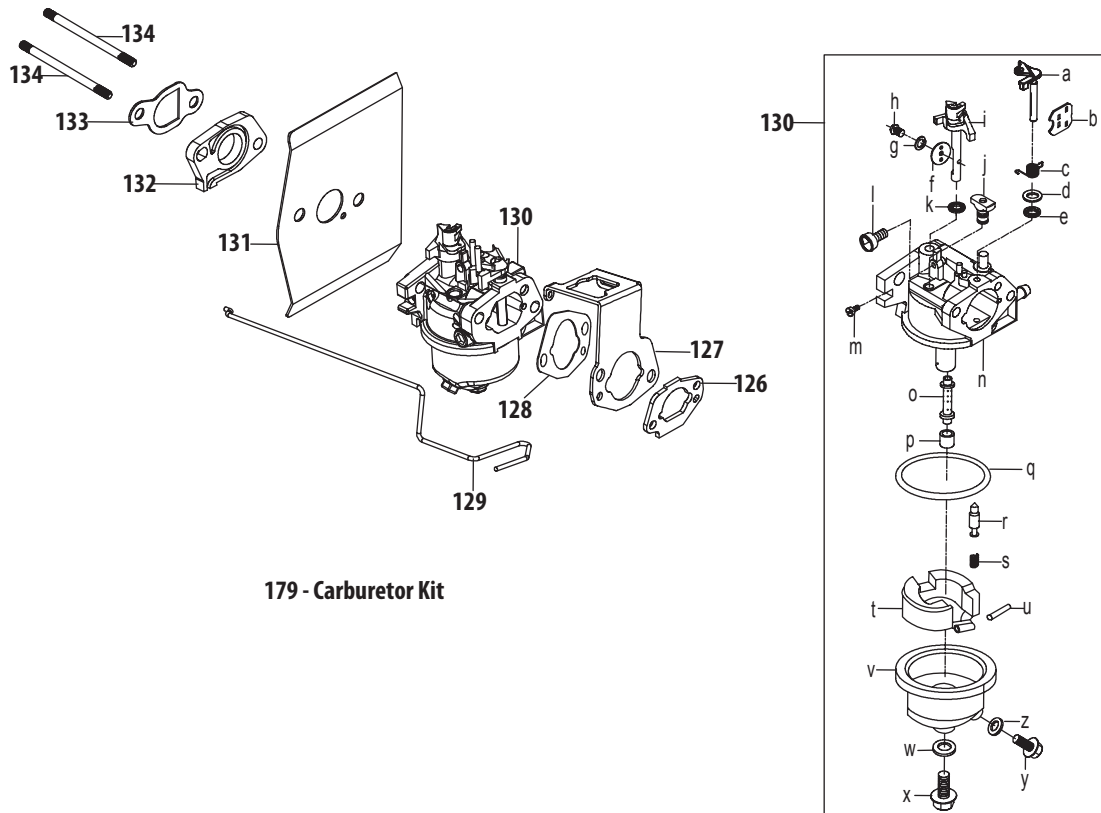 

179 - Carburetor Kit

Ref.	Part Number	Description
126	951-14419	Air Filter Base Gasket
127	951-14420	Choke Temp Control Bracket
128	951-14422	Choke Temp Control Bracket Gasket
129	951-14421	Choke Temp Control Linkage
130	951-14423	Carburetor Assembly
131	951-14424	Carburetor Gasket
132	951-11738	Carburetor Insulator
133	951-11528	Carburetor Insulator Gasket
134	951-14425	Carb Stud M6x87
179	951-14446	Carburetor Kit (Incl.e,j,k,l,o,p,q,r,s,t,u,w,z)
a	n/a	Choke Shaft
b	n/a	Choke Plate
c	n/a	Choke Return Spring
d	n/a	Choke Shaft Washer
e	n/a	Choke Shaft Fiber O-Ring
f	n/a	Throttle Plate
g	n/a	Throttle Plate Lock Washer
h	n/a	Screw M3X6 Throttle Plate


Ref.	Part Number	Description
i	n/a	Throttle Shaft
j	n/a	Idle Jet Assembly
k	n/a	Throttle Shaft Fiber O-Ring
l	n/a	Idle Speed Adjusting Screw
m	n/a	Idle Mixture Screw
n	n/a	Carburetor Body
o	n/a	Emulsion Tube
p	n/a	Main Jet
q	n/a	Fuel Bowl O-Ring
r	n/a	Needle Valve
s	n/a	Needle Valve Spring
t	n/a	Float
u	n/a	Float Pin
v	n/a	Fuel Bowl
w	n/a	Fuel Bowl Gasket
x	n/a	Fuel Bowl Mounting Bolt
y	n/a	Fuel Drain Plug
aa	n/a	Fuel Drain Plug Gasket

5X65RU Crankcase

176 - Gasket Kit - Complete

177 - Gasket Kit - External

 
178 - Complete Engine

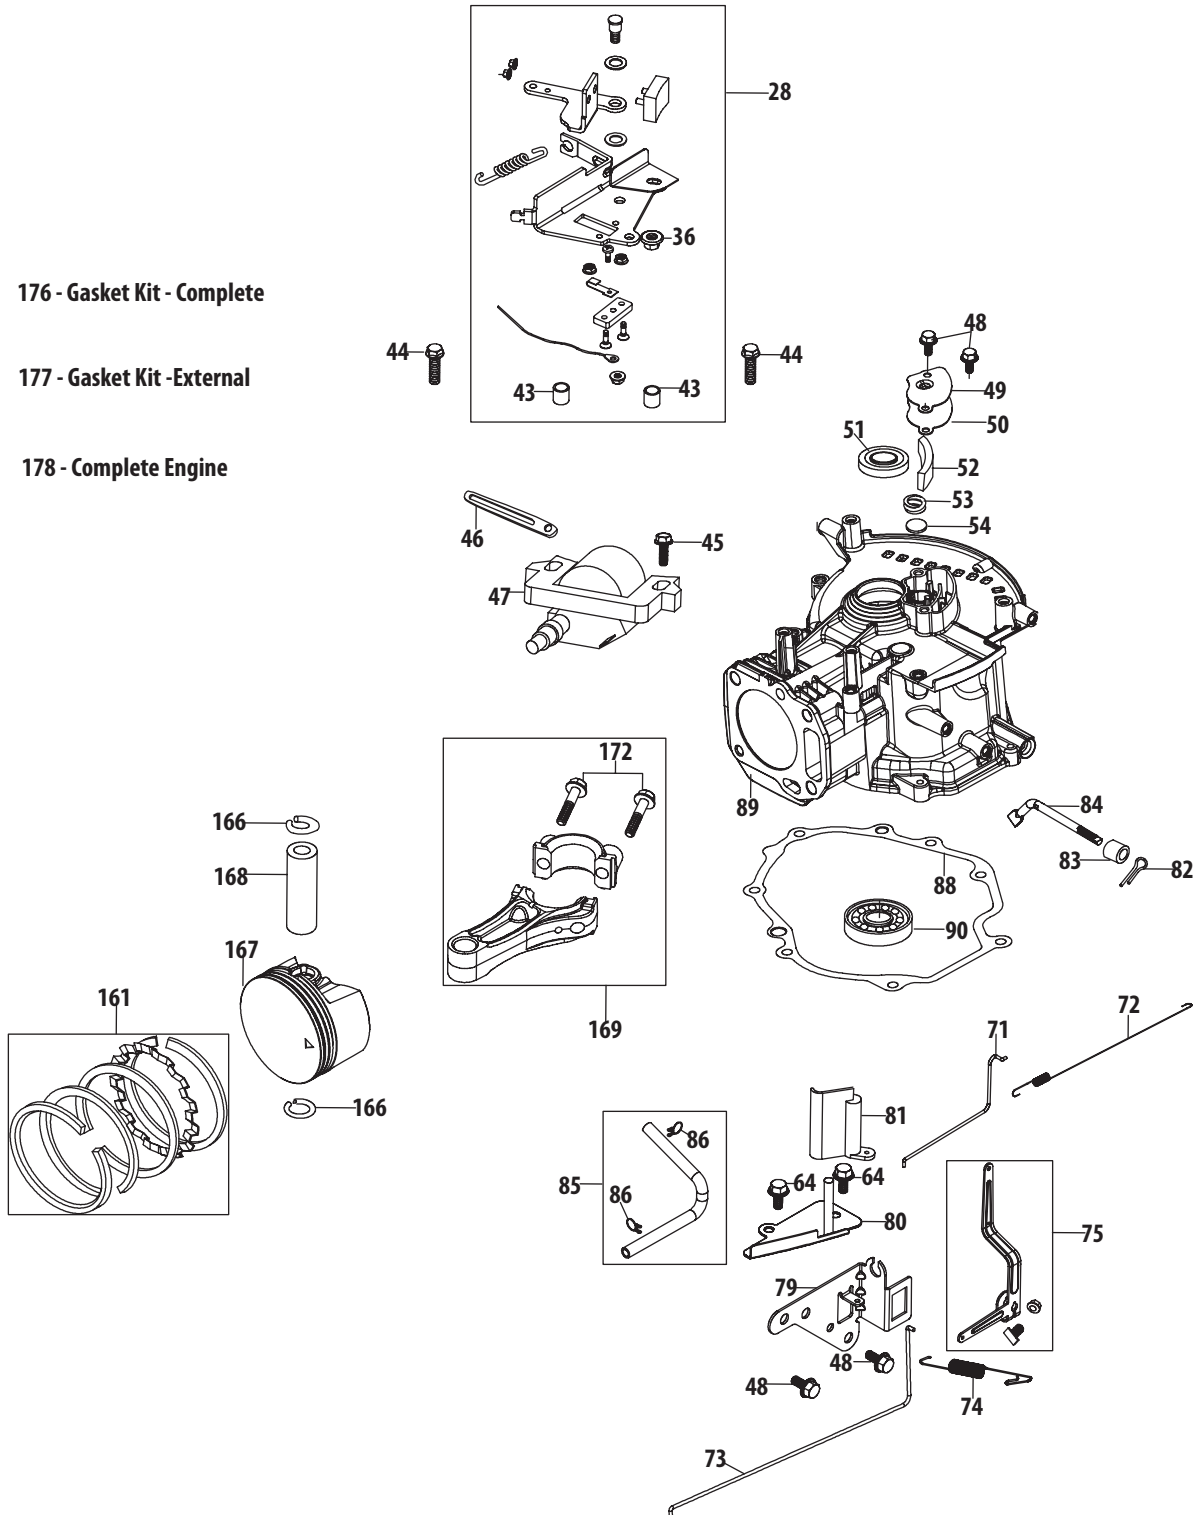

Ref.	Part Number	Description
28	951-14402	Brake Assembly
36	712-04219	Brake Arm Nut
38	712-04209	Ground Switch Nuts M4
43	750-05384	Brake Spacer
44	710-04980	Bolt M6X35 Af Base/Brake/Dipstick
45	710-04918	Bolt M6x20 Ignition Coil
46	951-11622	Flexible Clamp, Ignition Coil
47	951-14403	Ignition Coil Assembly
48	710-04916	Bolt M6X14 Multi-Purpose
49	951-14404	Breather Cover Plate
50	951-14405	Breather Gasket
51	951-11596	Upper Crankshaft Seal
52	951-11730	Breather Screen
53	732-04718	Breather Valve Spring
54	951-11614	Breather Valve
64	710-04915	Bolt M6X12 Multi-Purpose
71	951-14408	Choke Linkage
72	951-14409	Throttle Linkage Spring
73	951-14410	Throttle Linkage
74	951-14411	Governor Spring
75	951-14412	Governor Arm Assembly
79	951-14413	Component Bracket
80	951-14414	Air Vane Bracket
81	951-11529	Air Vane


Ref.	Part Number	Description
82	714-04074	Governor Arm Shaft Cotter Pin
83	951-11574	Governor Seal
84	951-14416	Governor Arm Shaft
85	951-11520	Breather Hose Assembly
86	726-04101	Breather Hose Clamp
88	951-14415	Crankcase Cover Gasket
89	951-14447	Short Block (Incl.48-54,82-84,88-92,95,97-100, 110-116,126,132,133,149,152,156, 157,159-161,166-169,172)
90	951-11369	Main Bearing
161	951-14433	Piston Ring Set
166	951-11603	Piston Pin Snap Ring
167	951-14434	Piston
168	951-14435	Piston Pin
169	951-14436	Connecting Rod Assembly
172	710-05115	Connecting Rod Bolt
176	951-14443	Gasket Kit - Complete (Incl.50,51,83,88,95,113,116,126, 128,131-133,149,152,156)
177	951-14444	Gasket Kit -External (Incl.50,95,113,126,128, 131-133,149,152)
178	952Z5X65RU	Complete Engine

 5X65RU Crankshaft & Crankcase Cover

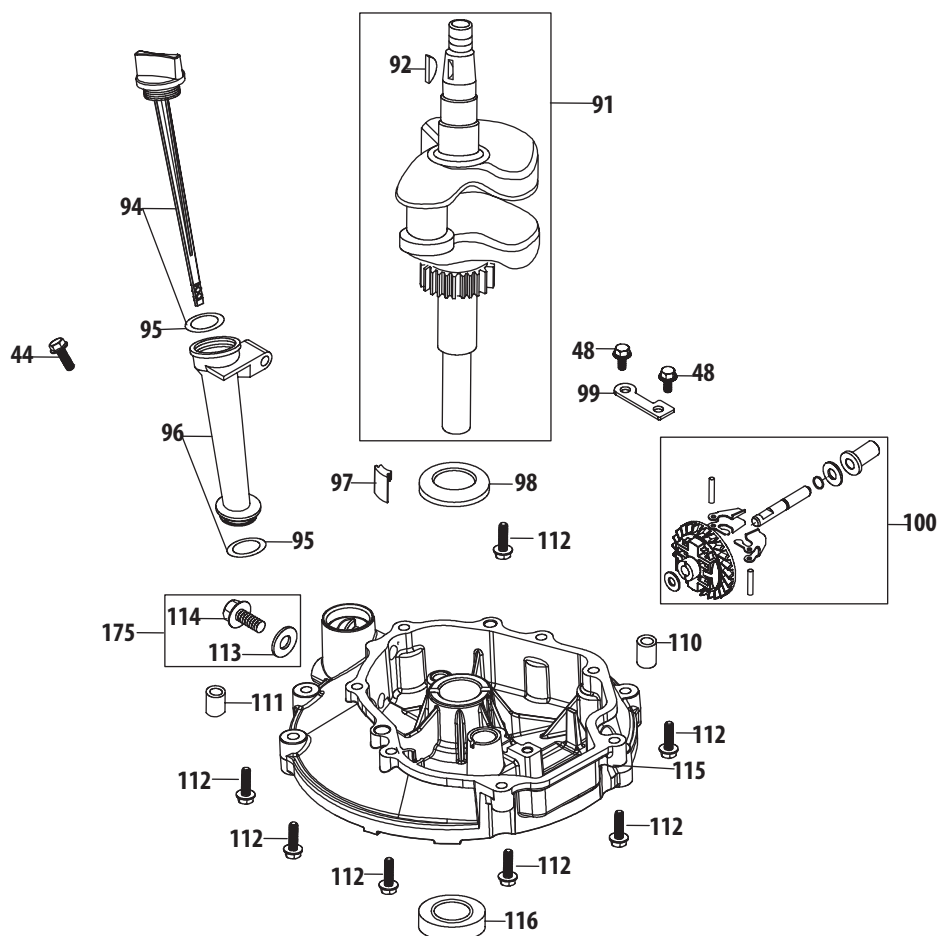

Ref.	Part Number	Description
44	710-04980	Bolt M6X35 Af Base/Brake/Dipstick
48	710-04916	Bolt M6X14 Multi-Purpose
91	951-14417	Crankshaft Assembly
92	951-10307	Flywheel Key
94	951-14440	Oil Dipstick Assembly
95	951-11546	Dipstick / Oil Fill Tube O-Ring
96	951-14441	Oil Fill Tube Assembly
97	951-11733	Oil Return Seal
98	736-04491	Crankshaft Thrust Washer
99	951-11609	Governor Gear Mounting Plate


Ref.	Part Number	Description
100	951-11549	Governor Gear/Shaft Assembly
110	715-04092	Crankcase Cover Dowel Pin 7×14
111	715-04089	Crankcase Cover Dowel Pin 9×14
112	710-04931	Bolt M6X28 X65/P65 Crankcase
113	736-04440	Oil Drain Plug Washer
114	710-04906	Oil Drain Plug
115	951-14418	Crankcase Cover
116	951-11545	Lower Crankshaft Seal
175	951-10370	Oil Drain Plug & Washer Assembly

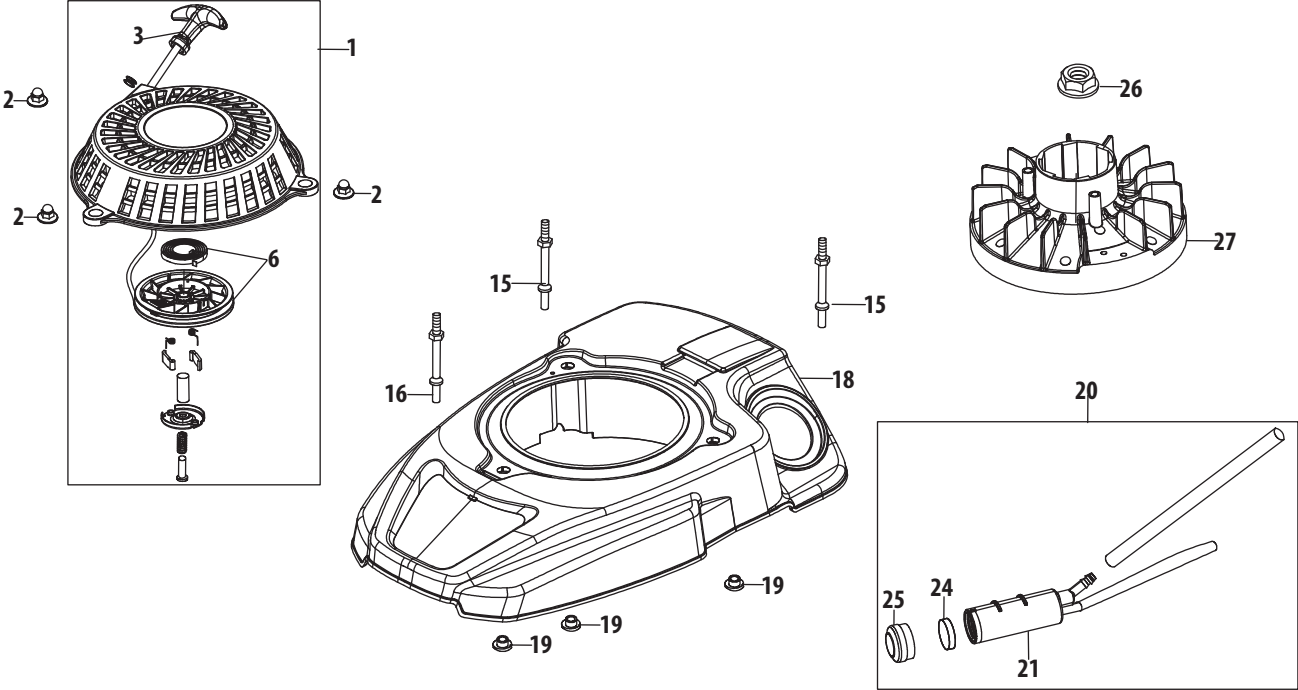 

Ref.	Part Number	Description
1	951-14396	Starter Recoil Assembly
2	712-04290	Starter Acorn Nut
3	731-07925	Starter Handle
6	951-11721	Recoil Pulley & Spring Assembly
15	951-14397	Starter/Shroud Rear Stud M6×78.5
16	951-14398	Starter/Shroud Front Stud M6×74
18	951-14399	Engine Shroud Assembly

Ref.	Part Number	Description
19	750-05320	Engine Shroud Spacer
20	951-14442	Carbon Canister Assembly
21	951-14126	Carbon Canister
24	951-14400	Carbon Canister Filter
25	951-14127	Carbon Canister Filter Cap
26	712-04287	Flywheel Nut M14
27	951-14401	Flywheel

 5X65RU Cylinder Head

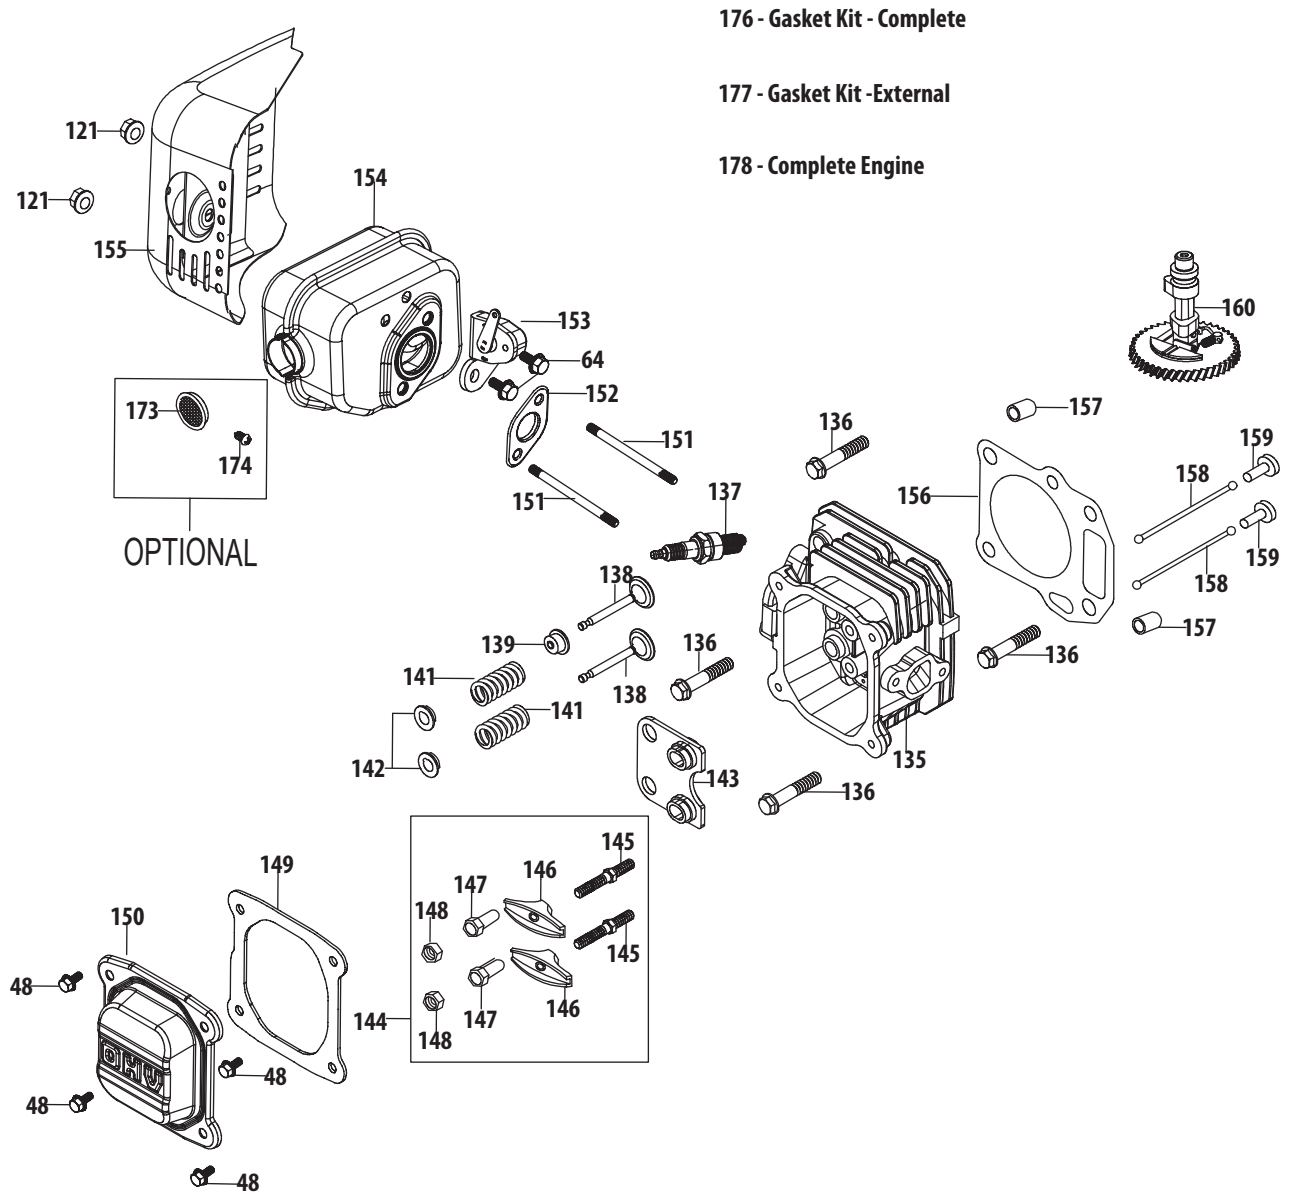


5X65RU Cylinder Head

Ref.	Part Number	Description
48	710-04916	Bolt M6X14 Multi-Purpose
135	951-14448	Cylinder Head Asm (Incl.132,133,135,138-143, 145-149,152,156)
	951-14445	Cylinder Head Service Kit (Incl.136,139,149,156)
136	710-04982	Bolt M8X54 Cylinder Head
137	951-14437	Spark Plug, F5Rtc
138	951-10313	Valve Kit
139	951-11818	Intake Valve Seal
140	951-10313	Valve Kit
141	951-12004	Valve Spring
142	951-11977	Valve Spring Retainer
143	951-11687	Push Rod Guide
144	951-11606	Rocker Arm Assembly
145	710-04902	Rocker Arm Stud
146	951-12001	Rocker Arm
147	751-11123	Fulcrum Nut
148	751-11124	Jam Nut
149	951-11551	Valve Cover Gasket
150	951-14426	Valve Cover

Ref.	Part Number	Description
151	710-05094	Muffler Stud M6X95
151	951-10342	Muffler Stud Assembly
152	951-14427	Muffler Gasket
153	951-14428	Choke Temp Control Thermostat
154	951-14429	Muffler Assembly
155	951-14430	Muffler Shield
156	951-14431	Cylinder Head Gasket
157	715-04108	Cylinder Head Dowel Pin 10x16
158	951-10314	Push Rod Kit
159	951-14432	Tappet
160	951-11741	Camshaft Assembly
173	951-10351	Spark Arrestor
174	710-04983	Spark Arrestor Screw
176	951-14443	Gasket Kit - Complete (Incl.50,51,83,88,95,113,116,126, 128,131-133,149,152,156)
177	951-14444	Gasket Kit -External (Incl.50,95,113,126,128, 131-133,149,152)
178	952Z5X65RU	Complete Engine

 
5X65RU Fuel Tank

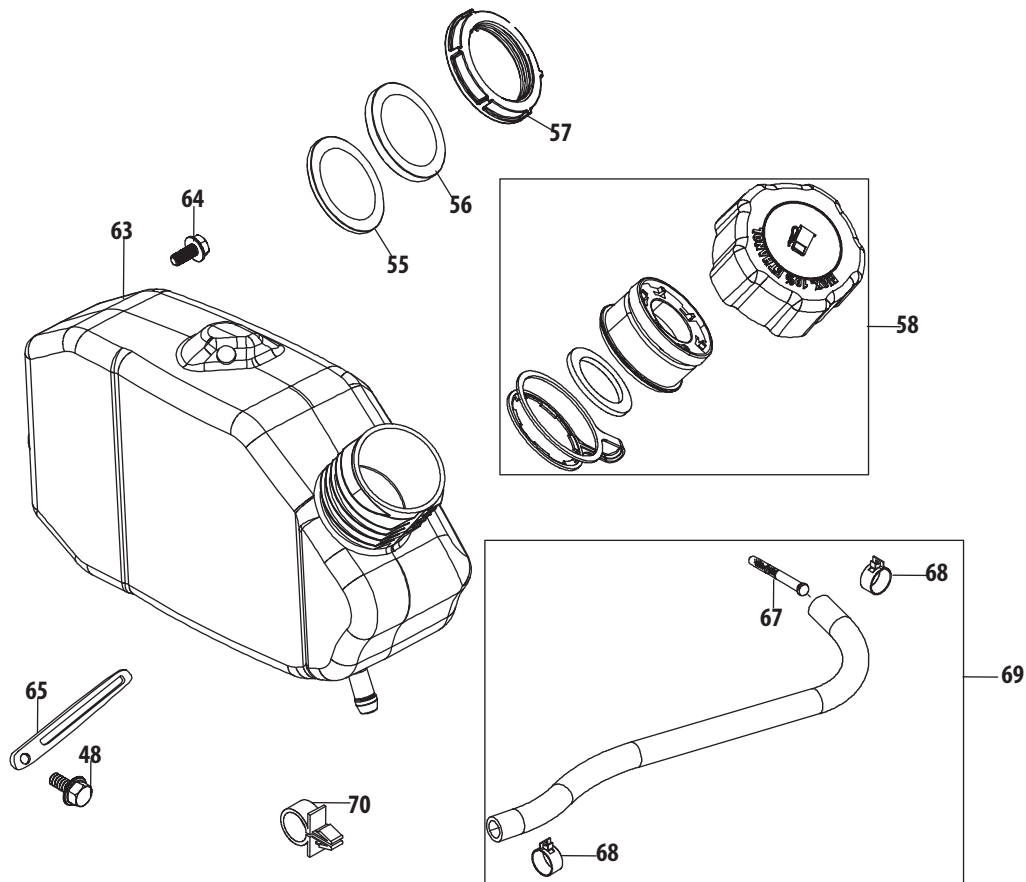



Ref.	Part Number	Description
48	710-04916	Bolt M6X14 Multi-Purpose
55	731-08133	Fuel Tank Lower Grommet
56	951-14406	Fuel Tank Upper Grommet
57	731-08104	Fuel Tank Nut
58	951-14407	Fuel Cap Assembly
63	931-04629	Fuel Tank
64	710-04915	Bolt M6X12 Multi-Purpose
65	951-11680	Flexible Clamp, Vent Hose
67	951-10358A	Fuel Filter
68	951-11700	Fuel Hose Clamp
69	951-14438	Fuel Line Kit
70	723-04071	Plastic Support Clamp

[illegible]

 Engine Model 6X65RU Air Cleaner

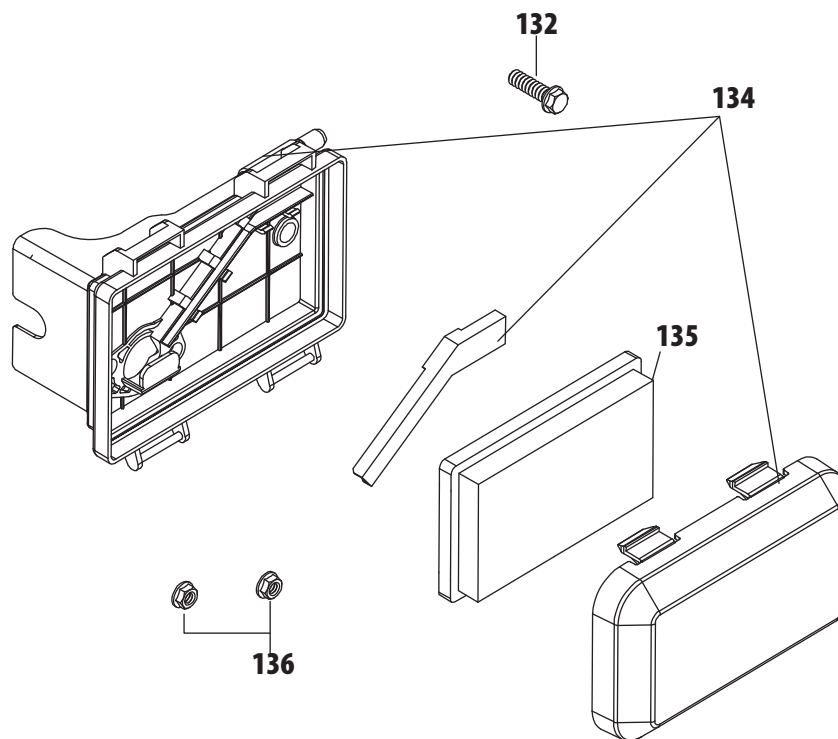


Ref.	Part Number	Description
132	710-04969	Bolt M6X30 Af Base/Coil/E-Starter
134	751-14439	Air Filter Cover Kit
135	951-14632	Air Filter Element, Paper
136	712-05015	Nut M6X10Mm Starter/Carb/Muff

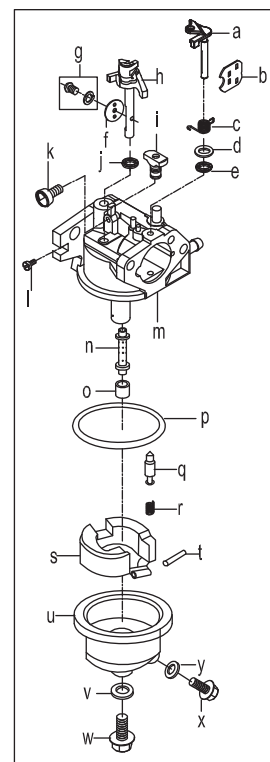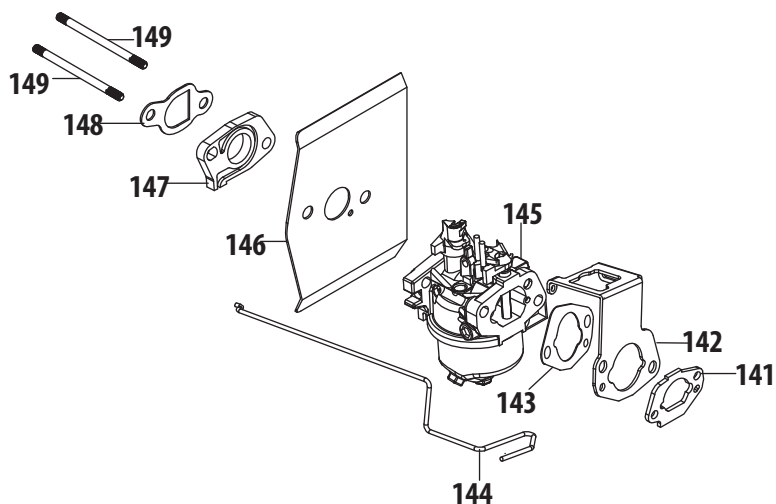  

Ref.	Part Number	Description
141	951-14419	Air Filter Base Gasket
142	951-14420	Temp Control Guide Bracket
143	951-14422	Temp Control Guide Bracket Gasket
144	951-14421	Temp Control Linkage
145	951-14423	Carburetor Assembly
146	751-14758	Carburetor Rebuild Kit
146	951-14424	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
149	951-14425	Carb Stud M6x87
a	n/a	Choke Shaft
b	n/a	Choke Plate
c	n/a	Choke Return Spring
d	n/a	Choke Shaft Washer
e	n/a	Choke Shaft Fiber O-Ring
f	n/a	Throttle Plate
g	n/a	Screw M3X6 Throttle Plate
h	n/a	Throttle Shaft


Ref.	Part Number	Description
i	n/a	Idle Jet Assembly
j	n/a	Throttle Shaft Fiber O-Ring
k	n/a	Idle Speed Adjusting Screw
l	n/a	Idle Mixture Screw
m	n/a	Carburetor Body
n	n/a	Emulsion Tube
o	n/a	Main Jet
p	n/a	Fuel Bowl O-Ring
q	n/a	Needle Valve
r	n/a	Needle Valve Spring
s	n/a	Float
t	n/a	Float Pin
u	n/a	Fuel Bowl
v	n/a	Fuel Bowl Mounting Bolt Gasket
w	n/a	Fuel Bowl Mounting Bolt
x	n/a	Fuel Drain Plug
y	n/a	Fuel Drain Plug Gasket

 6X65RU Crankcase

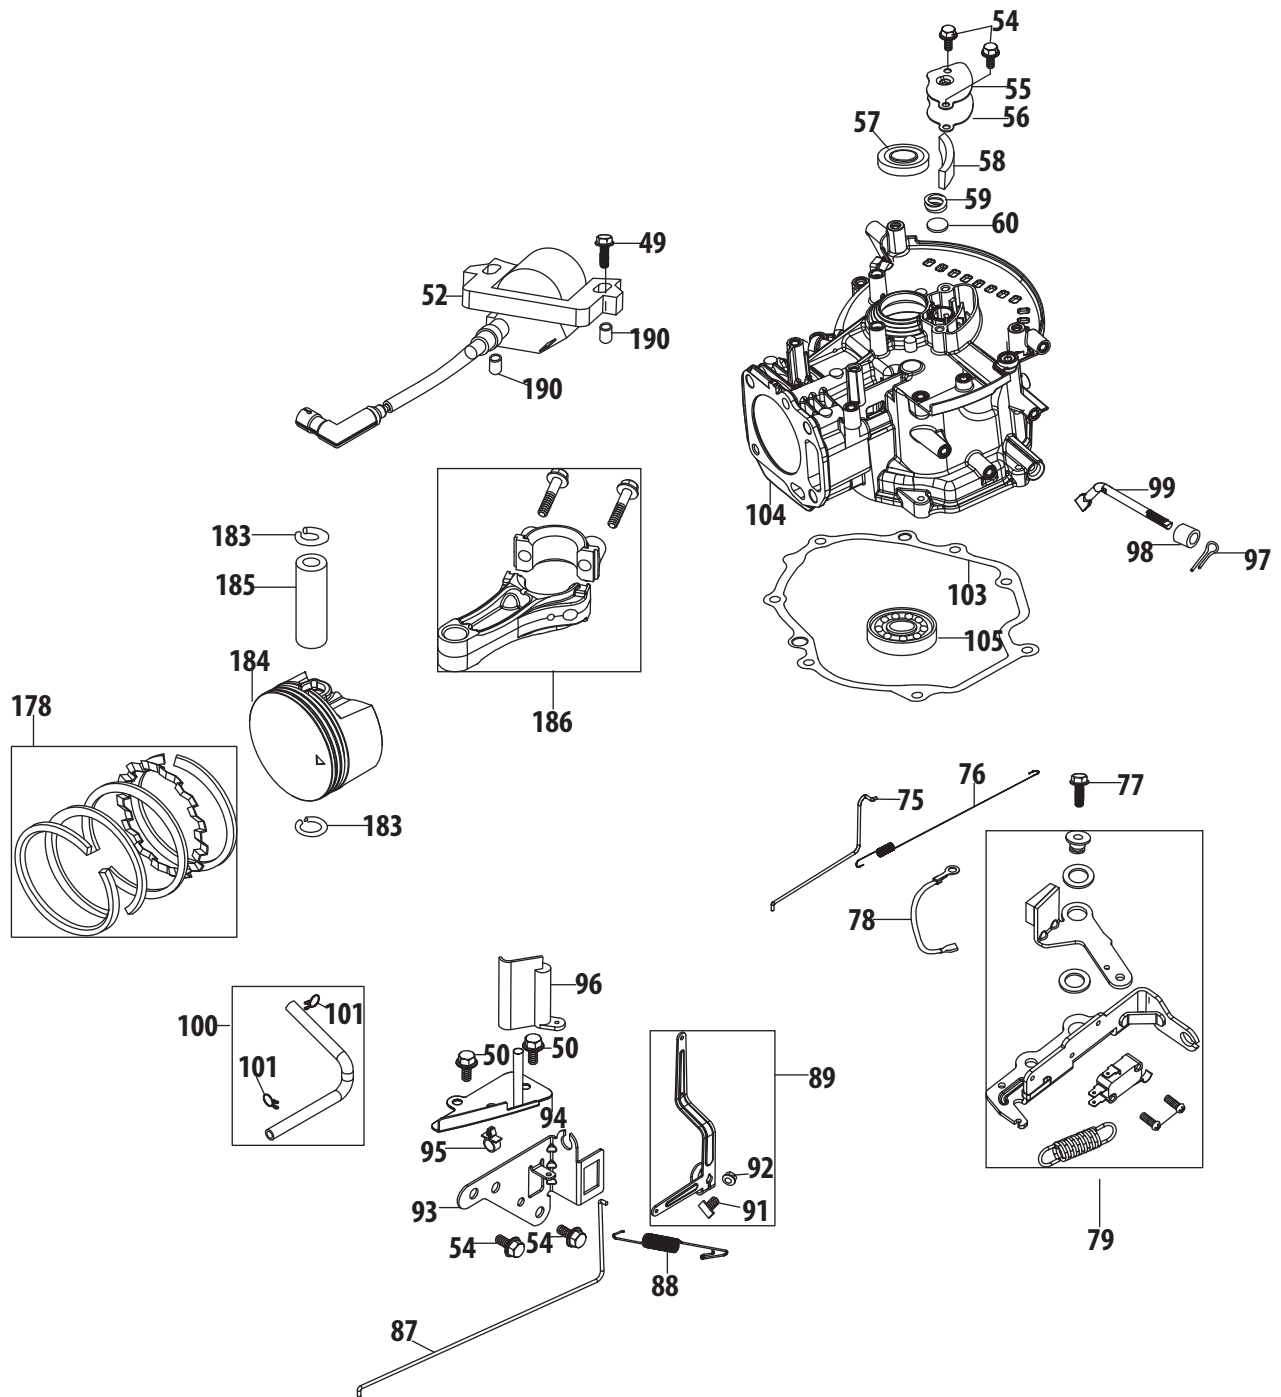


Ref.	Part Number	Description	Ref.	Part Number	Description
49	710-04943	Bolt M6X28 T/X/P Crankcase/Dp Stick	93	951-14413	Component Bracket
50	710-04915	Bolt M6X12 Multi-Purpose	94	751-14719	Air Vane Bracket
52	725-06178	Ignition Coil Assembly	95	731-10630	Plastic Support Clamp
54	710-04916	Bolt M6X14 Multi-Purpose	96	951-11529	Air Vane
55	951-14404	Breather Cover Plate	97	714-04078	Governor Arm Shaft Cotter Pin
56	951-14405	Breather Gasket	98	951-11574	Governor Seal
57	951-11596	Upper Crankshaft Seal	99	951-14416	Governor Arm Shaft
58	951-11730	Breather Screen	100	951-11520	Breather Hose Assembly
59	732-04718	Breather Valve Spring	101	726-04101	Breather Hose Clamp
60	951-11614	Breather Valve	103	951-14415	Crankcase Cover Gasket
75	951-14408	Choke Linkage	104	751-14720	Crankcase
76	951-14409	Throttle Linkage Spring	104	651-05227	(Mtd Srvc Kit) Short Block
77	710-04919	Bolt M6x25 Ign/Brake/Cvr Plt	105	951-11369	Main Bearing
78	725-06179	Grounding Wire	178	951-14433	Piston Ring Set
79	651-05222	Brake Assembly	183	951-11603	Piston Pin Snap Ring
87	751-14721	Throttle Linkage	184	951-14434	Piston
88	751-14718	Governor Spring	185	951-14435	Piston Pin
89	951-05160	Governor Arm Assembly	186	951-14436	Connecting Rod Assembly
91	710-04908	Governor Arm Bolt	190	750-06314	Ignition Coil Spacer
92	712-05015	Governor Arm Nut M6		952Z6X65RU	Complete Engine

 6X65RU Crankshaft & Cover

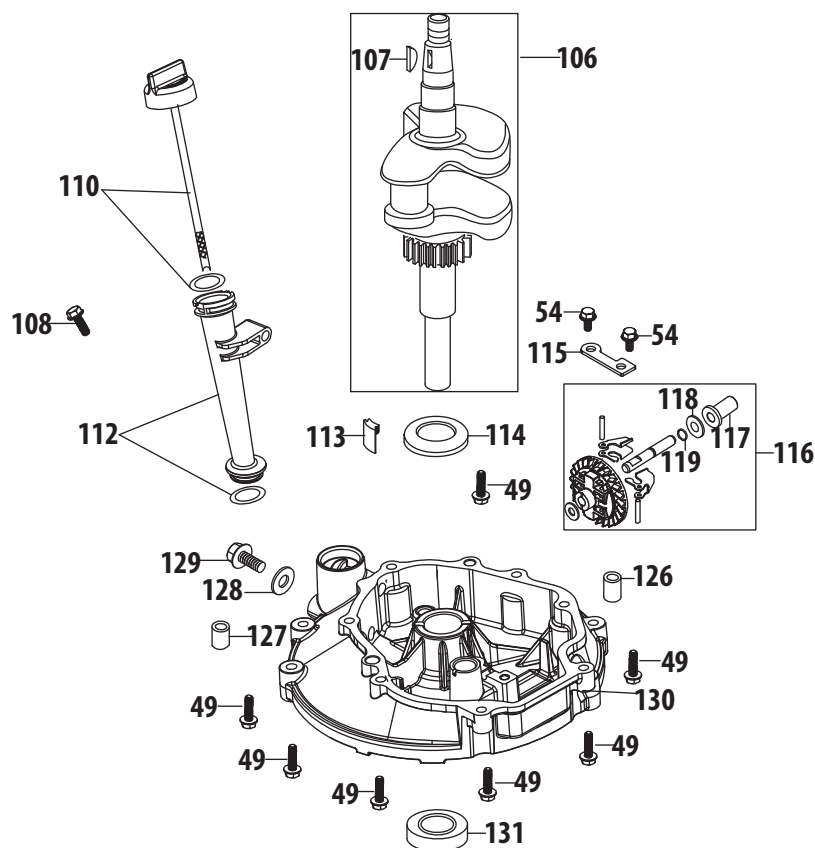


Ref.	Part Number	Description
49	710-04943	Bolt M6X28
54	710-04916	Bolt M6X14 Multi-Purpose
106	951-14417	Crankshaft Assembly
107	951-10307	Flywheel Key
108	710-04980	Bolt M6X35
110	751-14440	Dipstick
112	751-14441	Oil Fill Tube
113	951-11733	Oil Return Seal
114	736-04491	Crankshaft Thrust Washer
115	951-11609	Governor Gear Mounting Plate

Ref.	Part Number	Description
116	951-11549	Governor Gear/Shaft Assembly
117	931-09595	Governor Slide Cap
118	936-05038	Governor Slide Cap Washer
119	916-05003	Governor Shaft Stop Ring
126	715-04092	Crankcase Cover Dowel Pin
127	715-04096	Crankcase Cover Dowel Pin $\Phi 9 \times 14$
128	736-04440	Oil Drain Plug Washer
129	710-04906	Oil Drain Plug
130	951-14418	Crankcase Cover
131	951-11545	Lower Crankshaft Seal

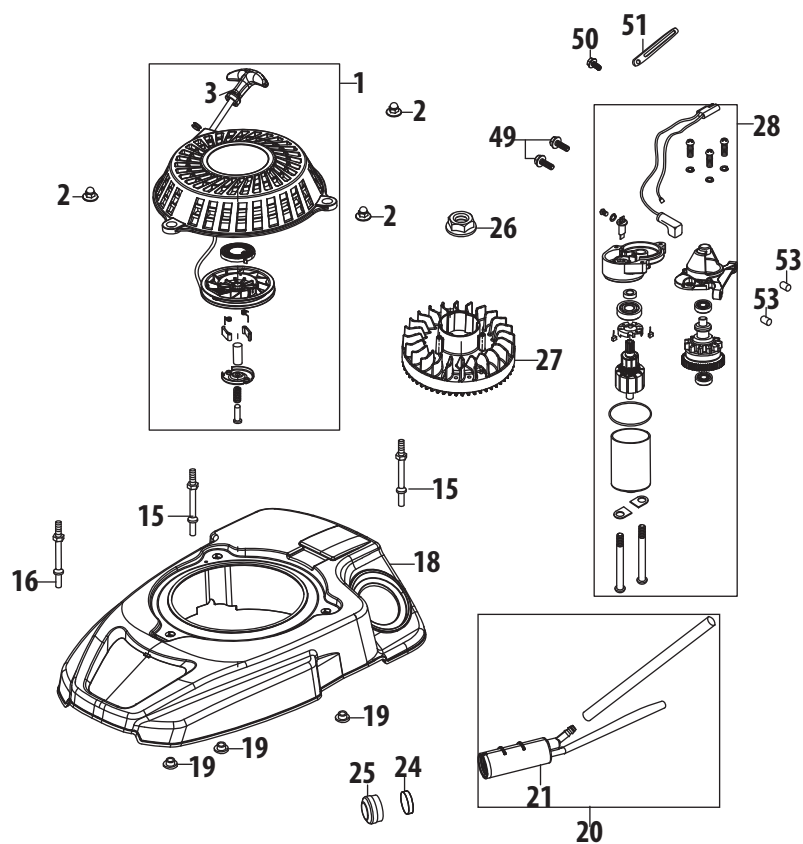 

Ref.	Part Number	Description	Ref.	Part Number	Description
1	951-14396	Recoil Starter Assembly	25	951-14127	Carbon Canister Filter Cap
2	712-04276	Starter Acorn Nut	26	712-04287	Flywheel Nut M14
3	731-07925	Starter Handle	27	751-14722	Flywheel
15	951-14397	Starter/Shroud Rear Stud M6×78.5	28	951-05207	Electric Starter Assembly (53:9)
16	751-14819	Starter/Shroud Front Stud M6×74	49	710-04943	Bolt M6X28 T/X/P Crankcase/Dp Stick
18	731-10631	Engine Shroud	50	710-04915	Bolt M6X12 Multi-Purpose
19	750-05320	Engine Shroud Spacer	51	951-11680	Flexible Clamp, Vent Hose
20	751-14442	Carbon Canister Assembly	53	715-05016	Starter Housing Dowel Pin Ø8×8
21	951-14126	Carbon Canister			
24	951-14400	Carbon Canister Filter			

 6X65RU Cylinder Head

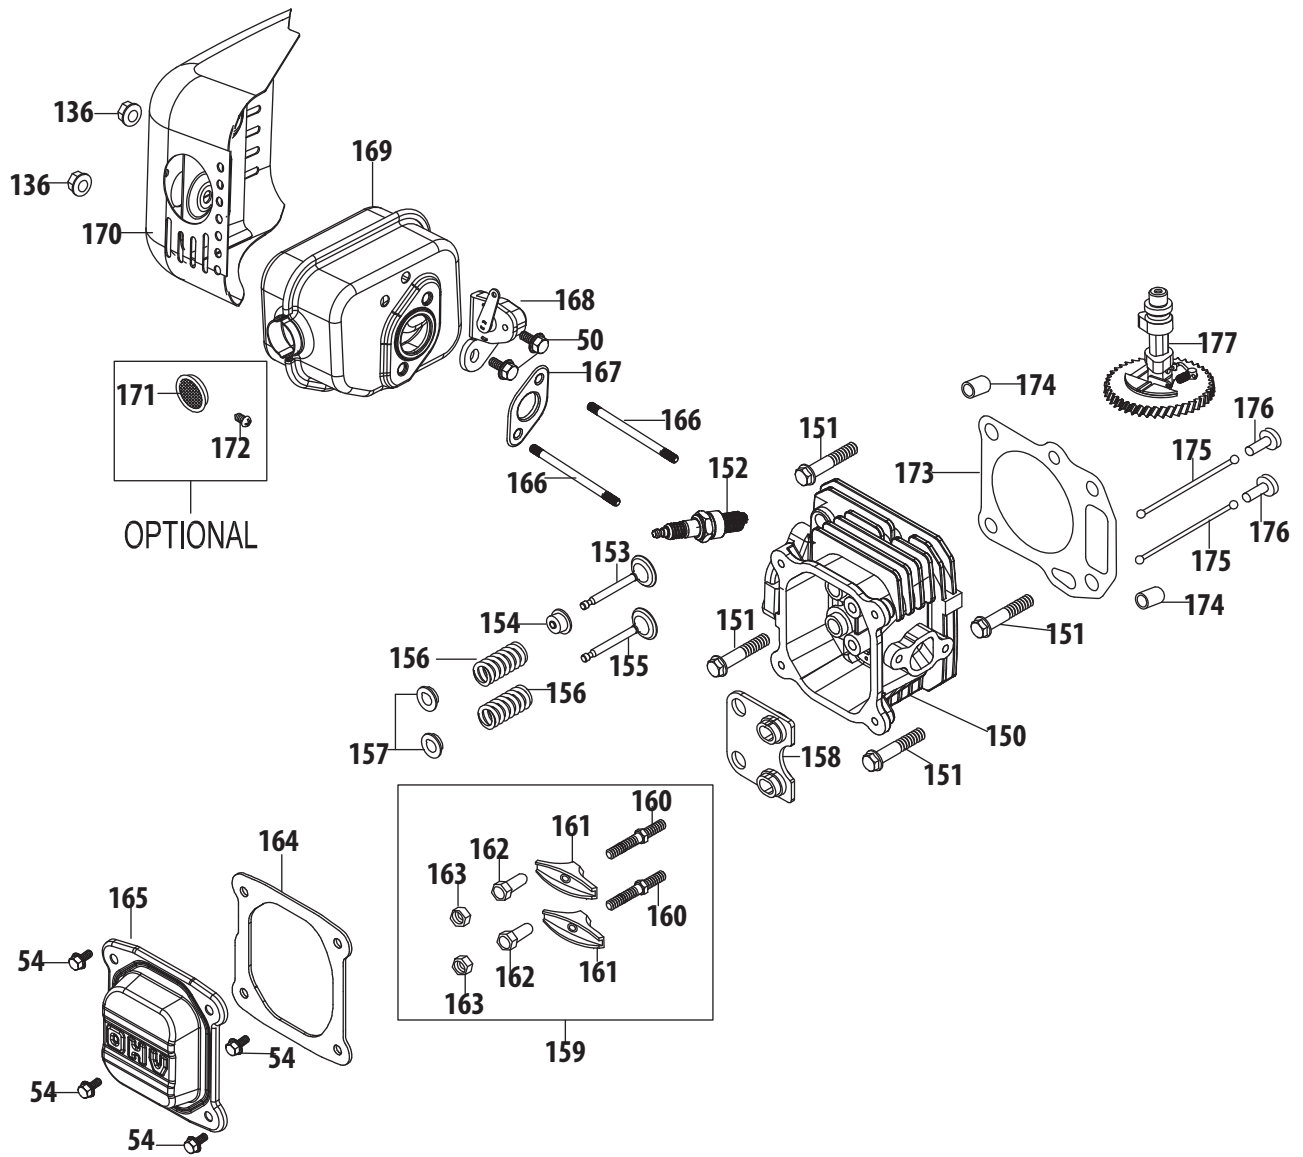


6X65RU Cylinder Head

Ref.	Part Number	Description
50	710-04915	Bolt M6X12 Multi-Purpose
54	710-04916	Bolt M6X14 Multi-Purpose
136	712-05015	Nut M6X10Mm Starter/Carb/Muff
150	951-05151	(Mtd Srvc Kit) Cylinder Head Assy
150	751-14639	Cylinder Head
151	710-06185	Bolt M8X54 Cylinder Head
152	951-14437	Spark Plug/F5Rtc
153	951-14640	Intake Valve
154	721-04237	Intake Valve Seal
155	951-14641	Exhaust Valve
156	951-12004	Valve Spring
157	951-11977	Valve Spring Retainer
158	951-11687	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
161	951-12001	Rocker Arm
162	751-11123	Fulcrum Nut

Ref.	Part Number	Description
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
165	951-14609	Valve Cover
166	710-05094	Muffler Stud M6X95
167	951-14427	Muffler Gasket
168	951-14428	Choke Temp Control Thermostat
169	951-14429	Muffler Assembly
170	951-14430	Muffler Shield
171	951-10351	Spark Arrestor
172	710-04983	Spark Arrestor Screw
173	951-14431	Cylinder Head Gasket
174	715-04108	Cylinder Head Dowel Pin $\Phi 10 \times 16$
175	747-04862	Push Rod
176	951-14432	Tappet
177	951-11741	Camshaft Assembly
	952Z6X65RU	Complete Engine

 
6X65RU Fuel Tank

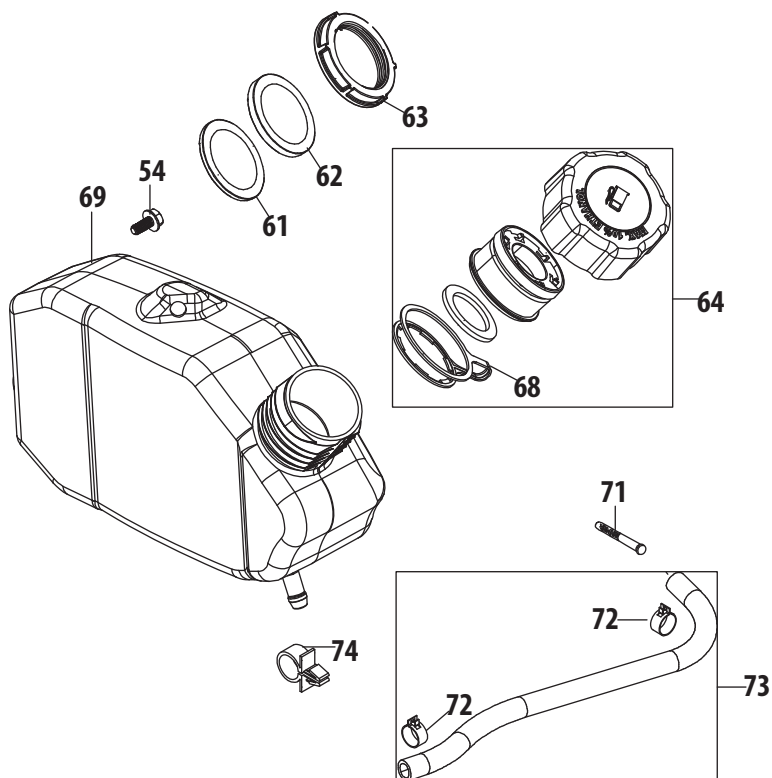


Ref.	Part Number	Description
54	710-04916	Bolt M6X14 Multi-Purpose
61	731-08133	Fuel Tank Lower Grommet
62	951-14406	Fuel Tank Upper Grommet
63	731-08104	Fuel Tank Nut
64	951-14407	Fuel Cap Assembly
68	951-14695	Fuel Cap Tether
69	931-04629	Fuel Tank
71	951-10358A	Fuel Filter
72	951-11700	Fuel Hose Clamp
73	751-14438	Fuel Hose
74	723-04071	Plastic Support Clamp












[illegible]

  Briggs & Stratton 121S05-0034-F1










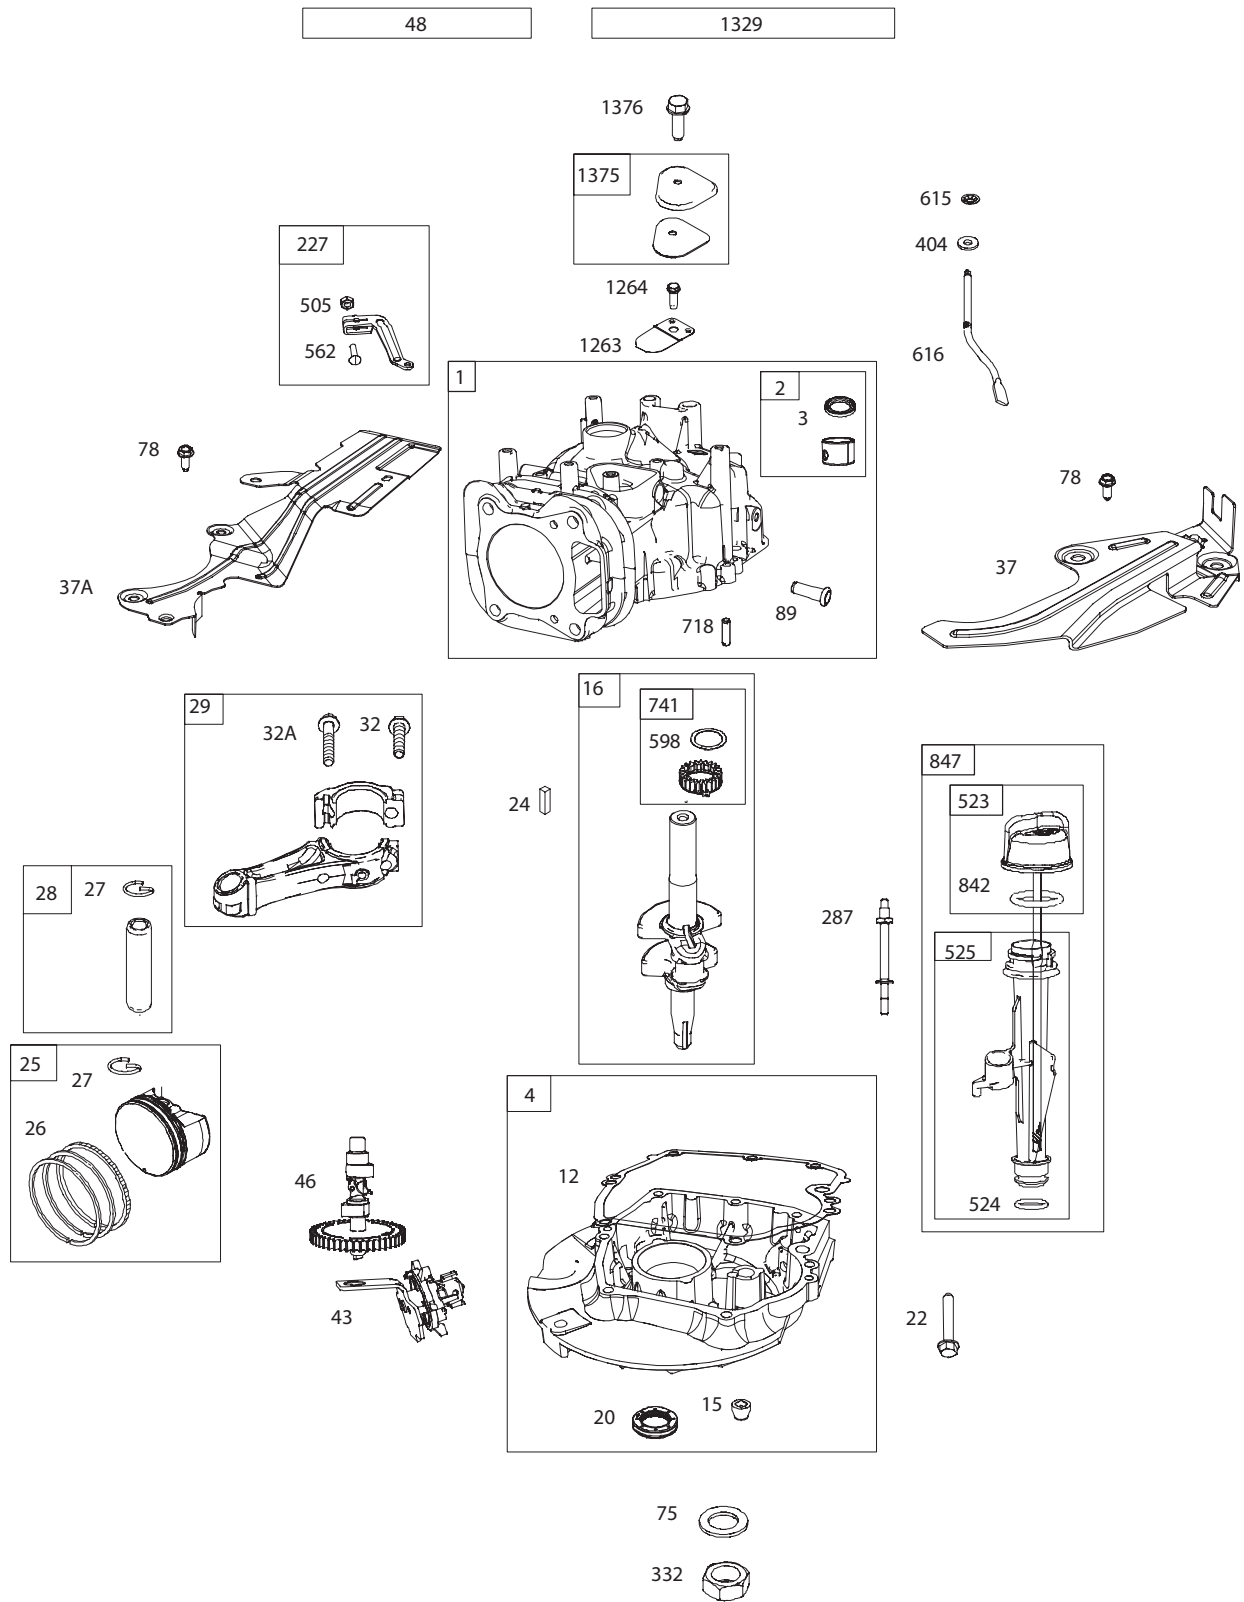


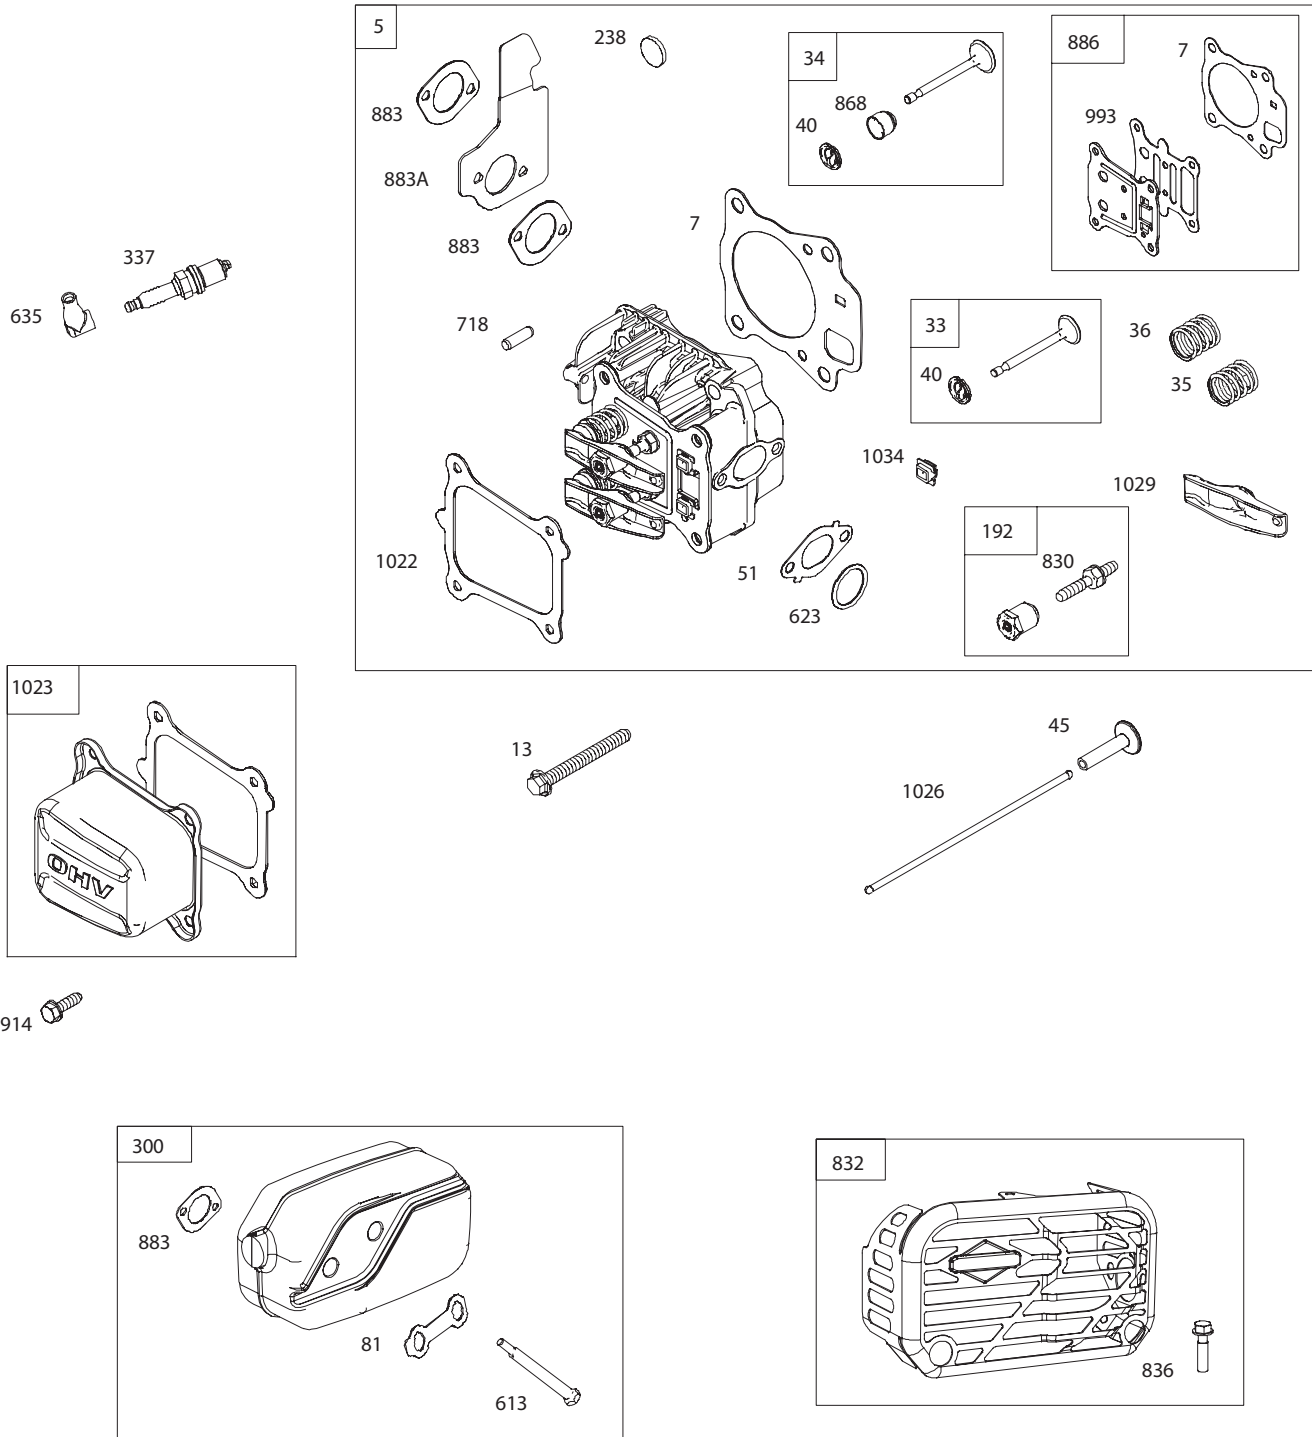




Briggs & Stratton 121S05-0034-F1

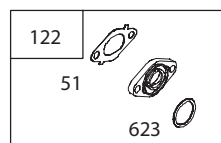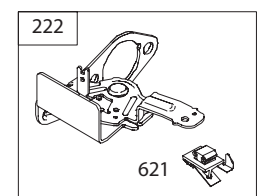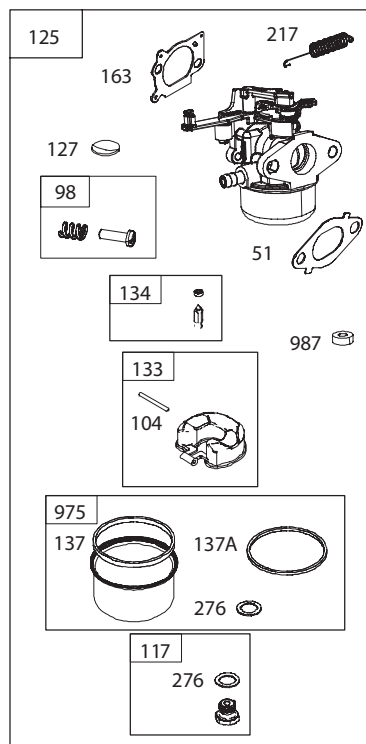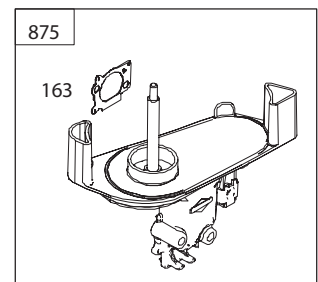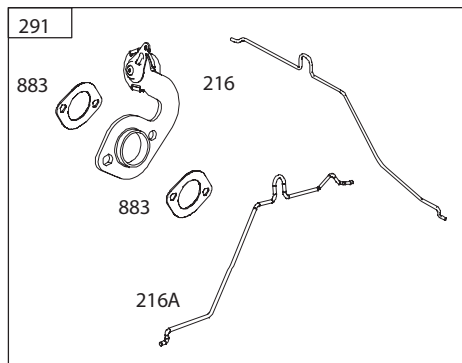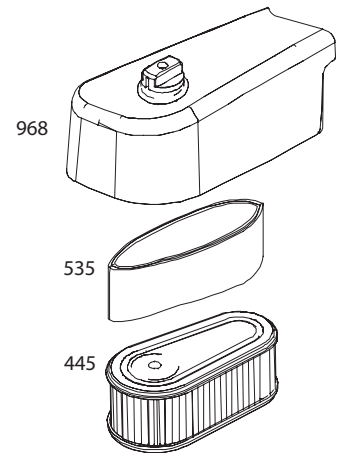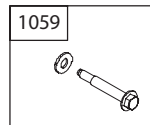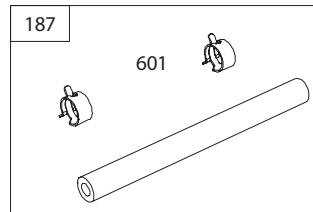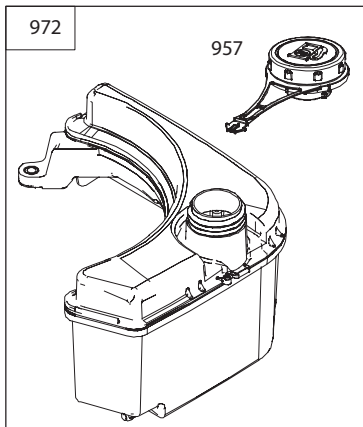           

592 

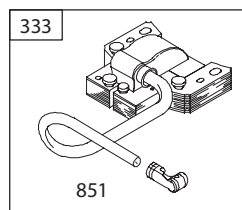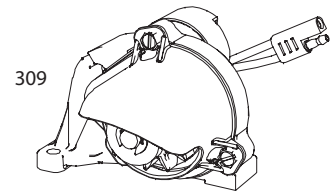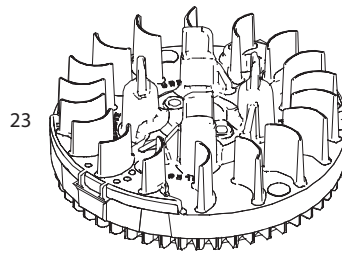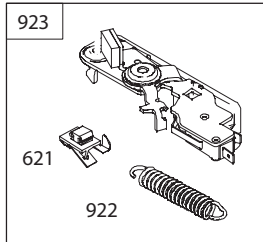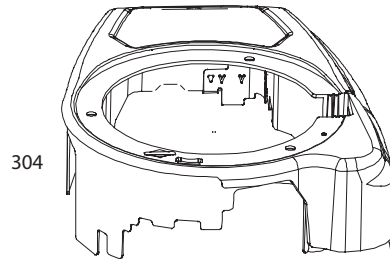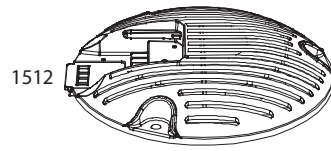          

Briggs & Stratton 121S05-0034-F1

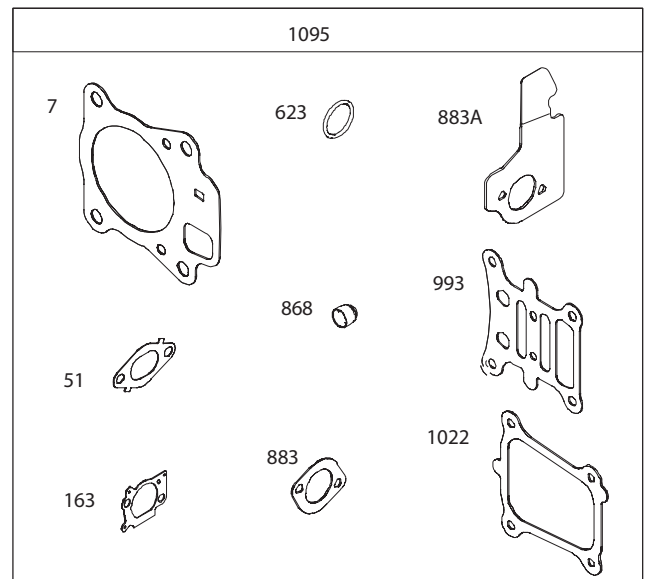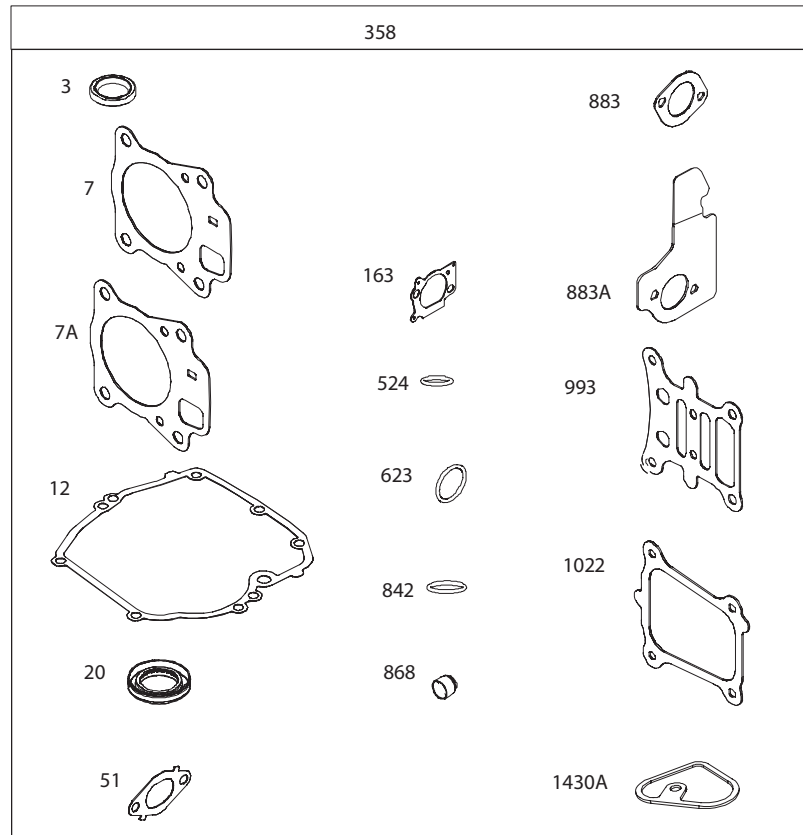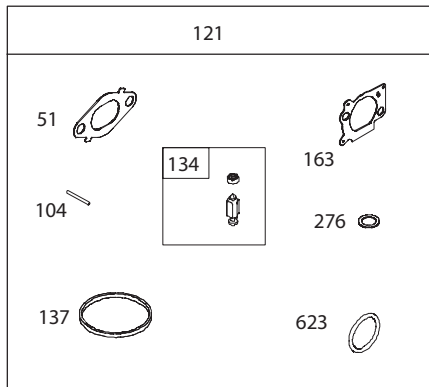   

Ref.	Part No.	Description
1	BS-798947	Cylinder Assembly
2	BS-796961	Kit-Bushing/Seal (Magnetos Side)
3	BS-299819s	Seal-Oil (Magnetos Side)
4	BS-493279	Sump-Engine
5	BS-796471	Head-Cylinder
7	BS-796475	Gasket-Cylinder Head
7A	BS-799275	Gasket-Cylinder Head (Fire Ring)
11	BS-796478	Tube-Breather
12	BS-692232	Gasket-Crankcase
13	BS-793451	Screw (Cylinder Head)
15	BS-691680	Plug-Oil Drain
16	BS-796468	Crankshaft
20	BS-399781s	Seal-Oil (PTO Side)
22	BS-691092	Screw (Crankcase Cover/Sump)
23	BS-590421	Flywheel
24	BS-222698s	Key-Flywheel
25	BS-590404	Piston Assembly (Standard)
	BS-590405	Piston Assembly (.020" Oversize)
26	BS-590402	Ring Set (Standard)
	BS-590403	Ring Set (.020" Oversize)
27	BS-691588	Lock-Piston Pin
28	BS-298909	Pin-Piston
29	BS-796470	Rod-Connecting
32	BS-691664	Screw (Connecting Rod) (1/4-20x1.09)
32A	BS-695759	Screw (Connecting Rod) (1/4-20x1.5)
33	BS-499642	Valve-Exhaust
34	BS-795443	Valve-Intake
35	BS-691304	Spring-Valve (Intake)
36	BS-691304	Spring-Valve (Exhaust)
37	BS-590921	Guard-Flywheel (Carburetor Side)
37A	BS-799242	Guard-Flywheel (Muffler Side)
40	BS-692194	Retainer-Valve
43	BS-796650	Slinger-Governor/Oil
45	BS-690977	Tappet-Valve
46	BS-694039	Camshaft
48	N/A	Short Block
51	BS-796596	Gasket-Intake
75	BS-691736	Washer (Flywheel)
78	BS-793480	Screw (Flywheel Guard) (M6x14mm)
81	BS-691740	Lock-Muffler Screw
89	BS-692348	Plug-Oil (Cylinder Assembly)

Ref.	Part No.	Description
98	BS-797156	Kit-Idle Speed
104	BS-797622	Pin-Float Hinge
117	BS-798661	Jet-Main (Standard)
121	BS-592172	Kit-Carburetor Overhaul
122	BS-796595	Spacer-Carburetor
125	BS-591137	Carburetor
127	BS-694468	Plug-Welch
133	BS-797626	Float-Carburetor
134	BS-799177	Kit-Needle/Seat
137	BS-797625	Gasket-Float Bowl
163	BS-691894	Gasket-Air Cleaner
187	751-10349-16	Line-Fuel (Formed)
190	BS-793479	Screw (Fuel Tank)
192	BS-796631	Adjuster-Rocker Arm
202	BS-796657	Link-Mechanical Governor
209	BS-796484	Spring-Governor (Metallic Gold)
216	BS-796485	Link-Choke
216A	BS-798944	Link-Choke
217	BS-799179	Spring-Choke Return
222	BS-796482	Bracket-Control
227	BS-796487	Lever-Governor Control
238	BS-691300	Cap-Valve
276	BS-797632	Washer-Sealing
287	BS-793479	Screw (Dipstick Tube)
291	BS-798938	Thermostat
300	BS-798940	Muffler
304	BS-594362	Housing-Blower
309	BS-592851	Motor-Starter
332	712-0318	Nut (Flywheel)
333	BS-796499	Armature-Magnetos
334	BS-793454	Screw (Magnetos Armature)
334A	BS-796537	Stud (Magnetos Armature)
337	759-3336	Plug-Spark
356	BS-692390	Wire-Stop
358	BS-592173	Gasket Set-Engine
365	BS-793458	Screw (Carburetor) (M6x27mm)
404	BS-690272	Washer (Governor Crank)
445	BS-795066	Filter-Air Cleaner Cartridge
505	BS-793515	Nut (Governor Control Lever)
523	BS-796503	Dipstick
524	BS-692296	Seal-Dipstick Tube

Briggs & Stratton 121S05-0034-F1

Ref.	Part No.	Description
525	BS-796502	Tube-Dipstick
535	BS-796254	Filter-Air Cleaner Foam
562	BS-793514	Bolt (Governor Control Lever)
578	BS-594367	Wire Assembly
578A	BS-594368	Wire Assembly
592	BS-793481	Nut (Rewind Starter)
598	BS-592587	Shim-End Play (Crankshaft)
601	BS-791850	Hose-Clamp (Green)
613	BS-796496	Screw (Muffler)
615	BS-690340	Retainer-Governor Shaft
616	BS-798327	Crank-Governor
621	BS-692310	Switch-Stop
623	BS-793628	Seal-O Ring (Carburetor Spacer)
633	BS-797629	Seal-Choke/Throttle Shaft
635	BS-66538s	Boot-Spark Plug
670	BS-793485	Spacer-Fuel Tank
697	BS-691127	Screw (Drive Cap)
718	BS-690959	Pin-Locating
741	BS-797521	Gear-Timing
745	BS-793491	Screw (Brake)
830	BS-796472	Stud-Rocker Arm
832	BS-593411	Guard-Muffler
836	BS-793500	Screw (Muffler Guard)
842	BS-691031	Seal-O Ring (Dipstick Tube)
847	BS-796501	Dipstick/Tube Assembly
851	BS-493880s	Terminal-Spark Plug
868	BS-795440	Seal-Valve
875	BS-796492	Base-Air Cleaner
883	BS-793497	Gasket-Exhaust
883A	BS-796677	Gasket-Exhaust
886	BS-796474	Gasket Kit-Cylinder Head Plate
914	BS-794451	Screw (Rocker Cover)
922	BS-692135	Spring-Brake
923	BS-796635	Brake
957	BS-799585	Cap-Fuel Tank
968	BS-796493	Cover-Air Cleaner
971	BS-690349	Screw (Air Cleaner Base to Carburetor)
972	BS-590949	Tank-Fuel
975	BS-797631	Bowl-Float
993	BS-796473	Gasket-Cylinder Head Plate
1022	BS-796480	Gasket-Rocker Cover

Ref.	Part No.	Description
1023	BS-796479	Cover-Rocker
1026	BS-796481	Rod-Push (Intake/Exhaust)
1029	BS-691230	Arm-Rocker
1034	BS-691343	Guide-Push Rod
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1059	BS-793471	Kit-Screw/Washer (Fuel Tank)
1095	BS-592174	Gasket Set-Valve
1263	BS-697124	Reed-Breather
1264	BS-793453	Screw (Breather Reed)
1329	N/A	Replacement Engine
1375	BS-796476	Cover-Breather/Reed
1376	BS-794451	Screw (Breather/Reed Cover)
1430A	BS-799494	Gasket-Breather Reed
1512	BS-594366	Screen

Notes



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
