



## SUPPLEMENT SHEET

DATE: **Feb. 27, 2006**

SUBJECT: **2500 Series Steering  
Housing Lubrication.**

### LUBRICATING THE STEERING HOUSING

The steering housing must be lubricated after every 25 hour of operation with Cub Cadet 251H EP grease, or an equivalent No. 2 multipurpose lithium grease. Use these instructions for completing this maintenance procedure

#### LUBRICATING THE SEGMENT GEAR SHAFT

To access the lube fitting for the segment gear shaft, proceed as follows:

- Raise the hood using the hood latch at the bottom front of the hood.
- Working from the left side of the tractor at the front of the dash panel, remove the wing nut and carriage bolt securing the LH engine shield.
- Note the position of the LH shield, then maneuver the shield out of the tractor.

- Near the front of the steering housing, locate the lube fitting for the segment gear shaft. Apply lubrication through the lube fitting, using a pressure lubricating gun.
- Reposition the LH engine shield inside the tractor as noted earlier, and secure with the wing nut and carriage bolt.
- Close the tractor hood.

#### LUBRICATING THE STEERING SHAFT.

Working beneath left side of the tractor frame, locate the lube fitting near the rear of the steering housing.

Using a pressure lubricating gun, apply grease through the steering shaft lube fitting.