

Fender Assembly Removal and Reinstallation

1. Slide the seat back and remove the front two pan torx head screws using a T30 torx.
2. Slide the seat forward and remove the rear two pan torx head screws using a T30 torx.
3. Pivot the seat assembly to the side and disconnect the seat safety switch. See figure 1.

NOTE: Be careful not to scratch the fender with the seat support brackets. It is advisable to use a towel or cloth under the seat when pivoting the seat.

4. Remove the seat from the tractor. See figure 1.

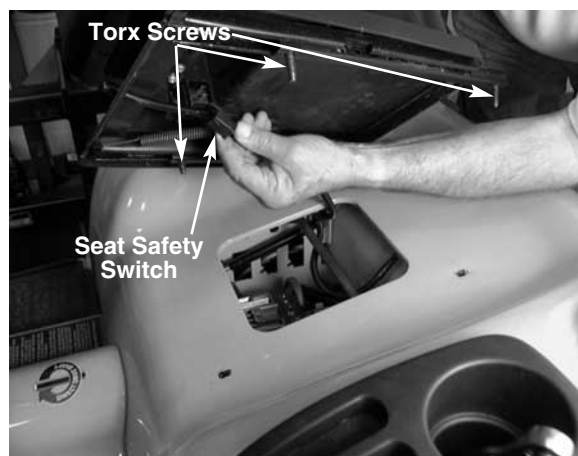


FIGURE 1.

5. Remove all the hex bolts securing the three foot pedals to the right side of the unit using a 9/16 socket. See figure 2.

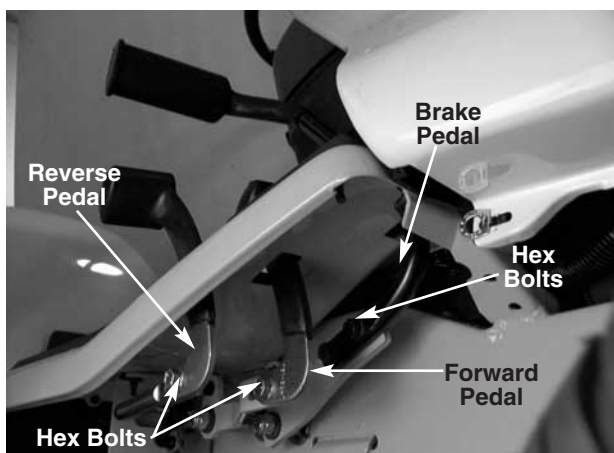


FIGURE 2.

6. Remove the hex bolt securing the differential lock out pedal on the left side of the unit using a 9/16 socket. Remove the "E" clip and the nylon flange bearing from the pivot shaft.

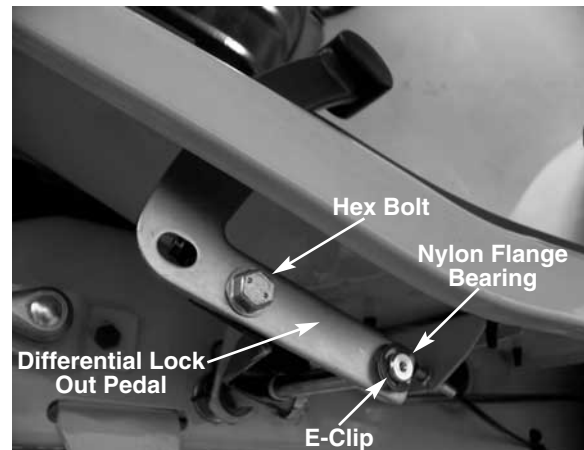


FIGURE 3.

7. Remove both rubber floor pads from the running boards. See figure 4.
8. Lift the hood and remove the battery cover.
9. Remove both side panels from the tractor by raising the latches horizontally and turning the latches 1/4 turn. See figure 4.
10. Loosen all four plastic wing nuts holding the dash panel screen in place. See figure 4.
11. Pull the dash screen towards the rear of the unit and out of the dash panel. See figure 4.

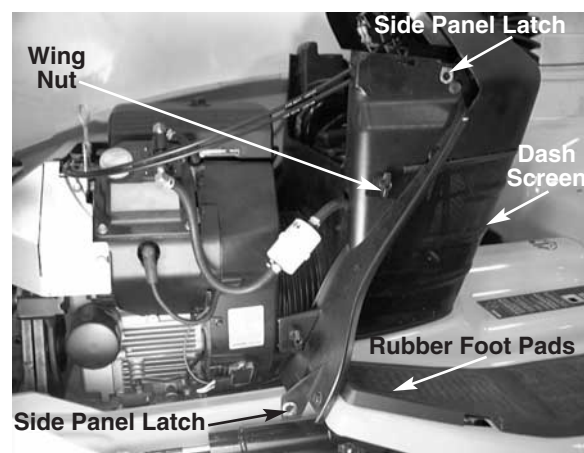


FIGURE 4.

Cub Cadet 3000

12. Remove all four running board hex bolts from the tractor using a 1/2" socket. See figure 5.

NOTE: There are two bolts fastening the running boards to the frame where the foot pads connect and there are two bolts fastening the running boards to the dash panel.

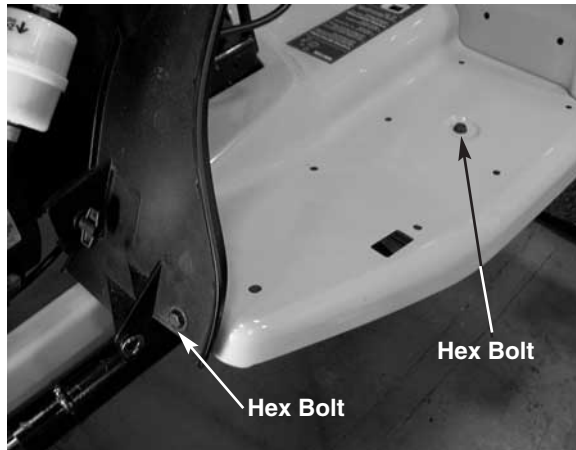


FIGURE 5.

13. Remove the fuel cap.
14. Remove the tail light sockets from the tail light assemblies by pushing in on the sockets gently and twisting a 1/4 turn. See figure 6.

NOTE: When pulling the sockets out of the tail light assemblies, it is very important to make sure the light bulbs come straight out, or the light bulbs will fall into the tail light assemblies. Also, note the color of the wires for reinstallation. The white wires go to the reverse lights. See figure 6.

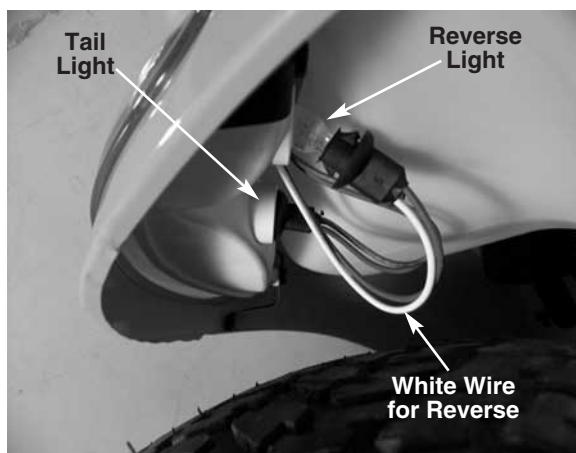


FIGURE 6.

15. Raise the rear fender high enough to access the hydraulic lift handle clamp. See figure 7.
16. Loosen the clamp connecting the hydraulic lift handle to the center lift valve using a 1/2" socket. See figure 7.

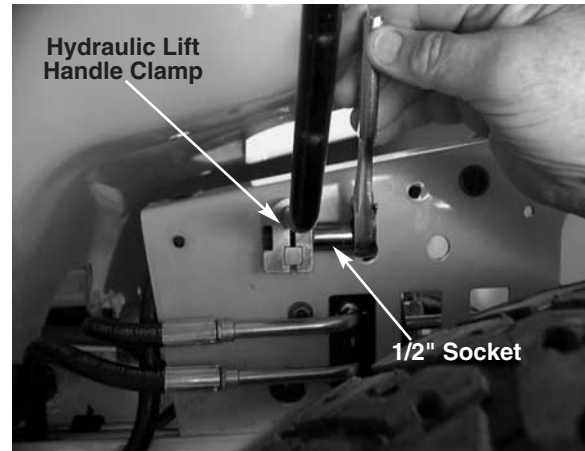


FIGURE 7.

17. Remove the lift handle from the tractor through the slot in the flap. See figure 8.

NOTE: If the lever is not removed at this time, damage may occur to the lift knob.

18. Raise and remove the fender assembly.



FIGURE 8.

19. Reinstall the fuel cap.