

FAST START

GUIDE


FAST START

GUIDE

Read and understand all instruction, warning and danger labels.

1


PTO

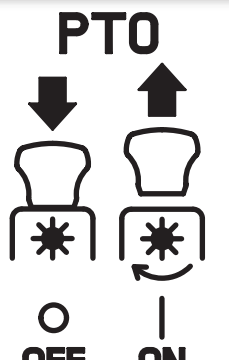

Place **PTO (Blade Engage) Lever** in **Off** position.


OFF ON

2

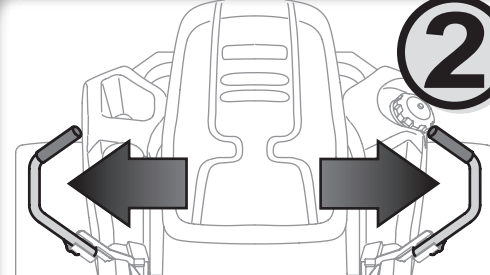


Move **Control Levers** out to neutral position.

3

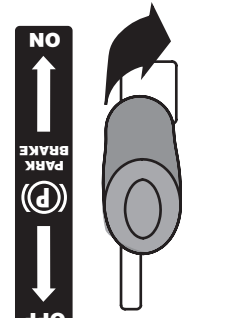

Engage **Parking Brake Lever**.

NO
↑
PARK
BRAKE
(P)
↓
OFF

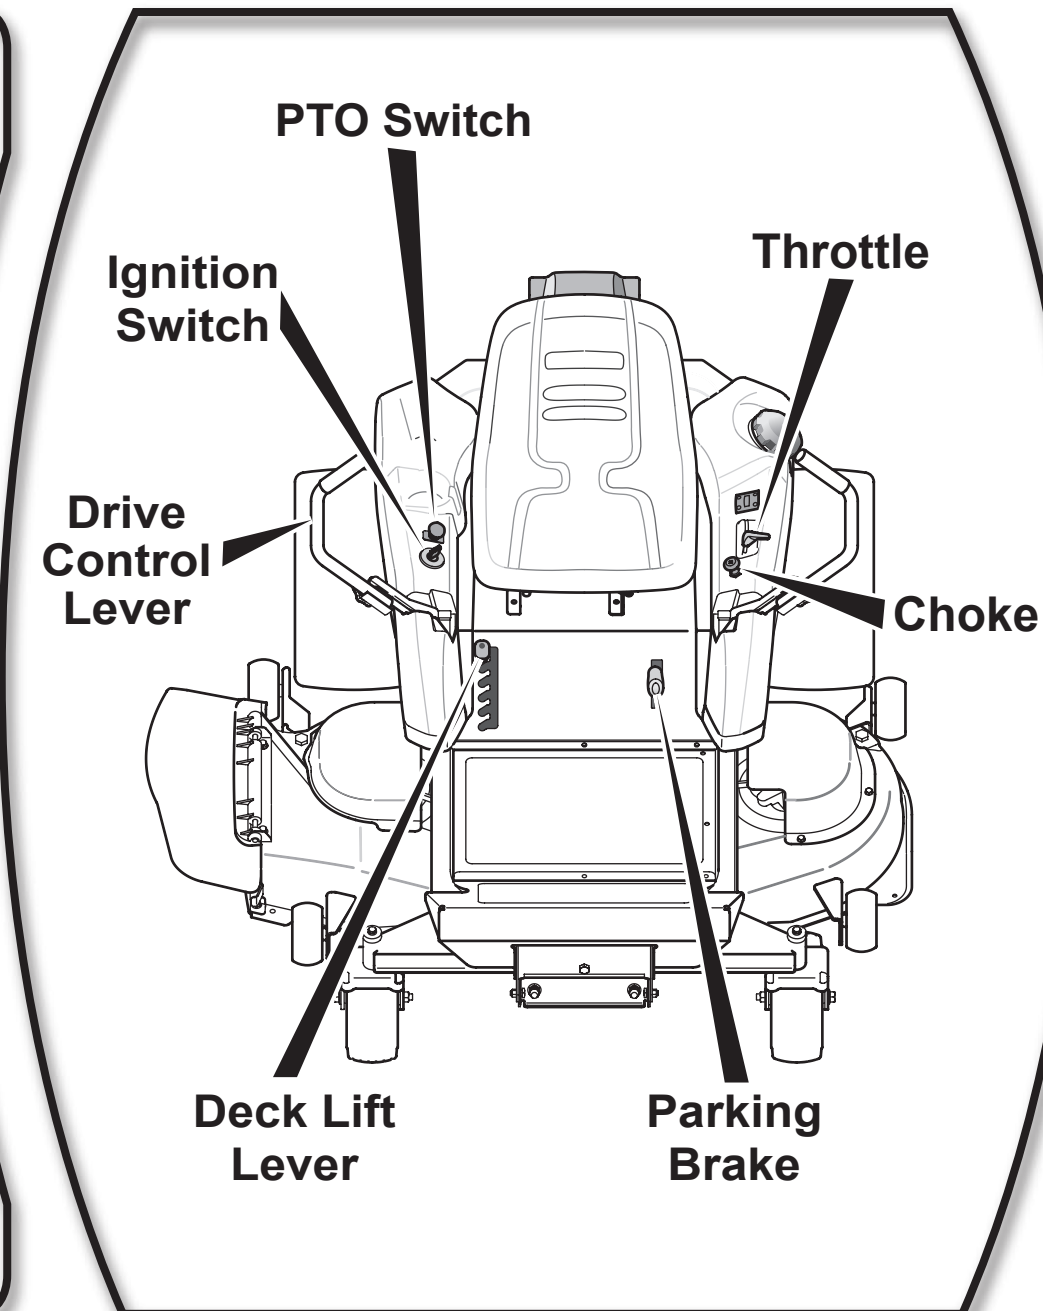


4



Move **Throttle** to **Choke** position.

5

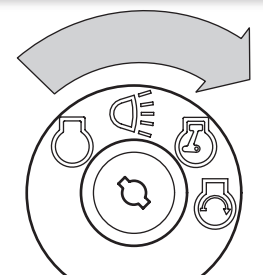

Insert key and turn to **Start** position. Release after engine starts.

6



Move **Throttle** to **Rabbit** (fast) position.

Didn't Start?

Is the battery connected? Fresh gas in the unit?
See Operator's Manual for additional troubleshooting tips.

Stopping the Unit

1 Put **PTO** (blade engage) lever in the **Off** position.

2 Move **Drive Control** levers to neutral position.

3 Engage **Parking Brake**.

4 Move **Throttle Control** Lever to **Turtle** (slow) position.

5 Turn key counterclockwise to Stop position and remove.

