

Cub Cadet.


ILLUSTRATED PARTS MANUAL

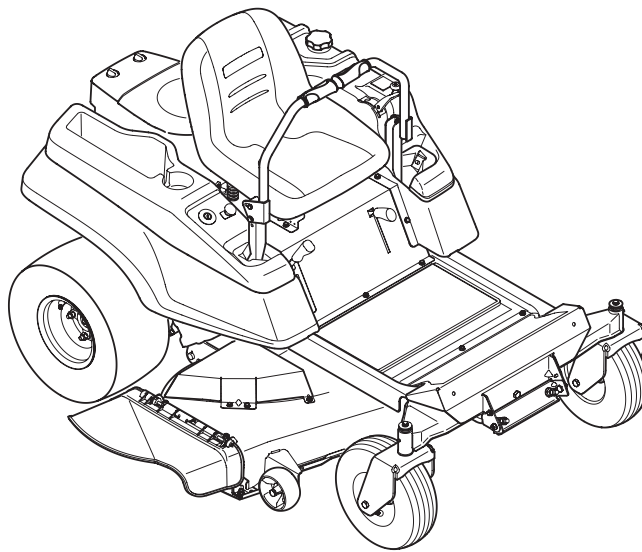


54" RZT Series Tractor

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Frame & Drive Idler Assembly

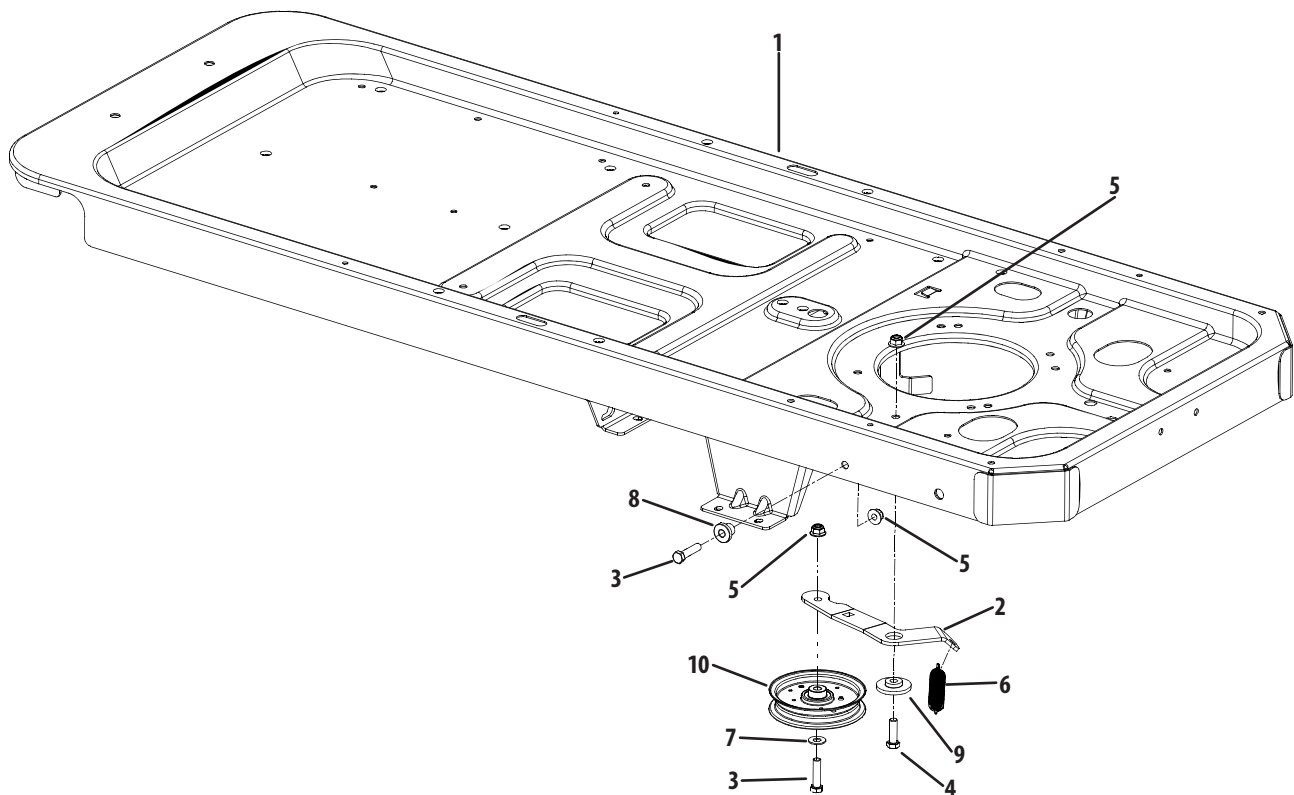


Ref.	Part Number	Description
1.	603-04303C	Frame Assembly
2.	703-05829	Drive Idler Arm
3.	710-0520	Hex Screw, $\frac{3}{8}$ -16 x 1.5
4.	710-3005	Hex Screw, $\frac{3}{8}$ -16 x 1.25
5.	712-04065	Flange Nut, $\frac{3}{8}$ -16
6.	732-0626	Extension Spring, .75 x 5.06
7.	736-0300	Flat Washer, .408 x .875 x .059
8.	738-04058	Shoulder Spacer, .39 x 1.0 x .7
9.	738-04162A	Shoulder Spacer, .884 x .19
10.	756-04129	Idler Pulley, 4.25 Dia.

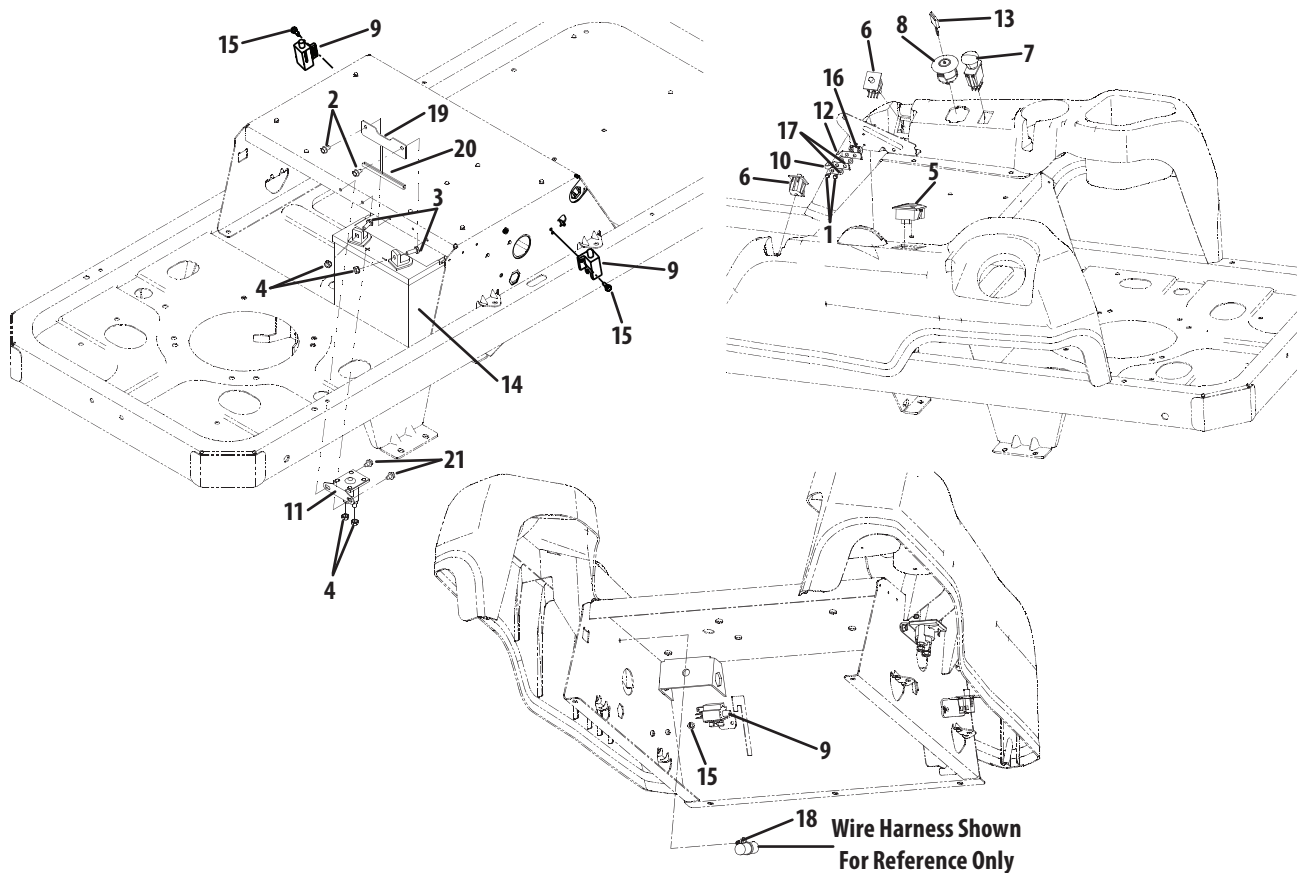

Ref.	Part Number	Description
1.	710-0227	Hex Screw, #8-18 x .5
2.	710-0599	Hex Screw, ¼-20 x .5
3.	710-3015	Hex Screw, ¼-20 x .75
4.	712-0271	Hex Nut, ¼-20
5.	725-04022B	Hour Meter
6.	725-04165	Double Pole — Neutral Switch
7.	725-04174	PTO Switch
8.	725-04228	Ignition Switch
9.	725-04363	Interlock Switch
10.	725-1303	Outer Seat Swing Switch
11.	725-04621	Solenoid


Ref.	Part Number	Description
12.	725-1439	Inner Seat Spring Switch
13.	925-1745	Key
14.	725-1737A	Battery, 235 CCA
15.	725-04237A	Shoulder Screw, #10-32 x .500
16.	726-0278	Insulator Boss Plate
17.	726-0279	Insulator Plate
18.	726-0470	Cable Tie
19.	703-05894	Batter Holdown
20.	731-0511	Trim Strip
21.	710-0653	Hex Screw, ¼-20 x .375

Operator's Platform

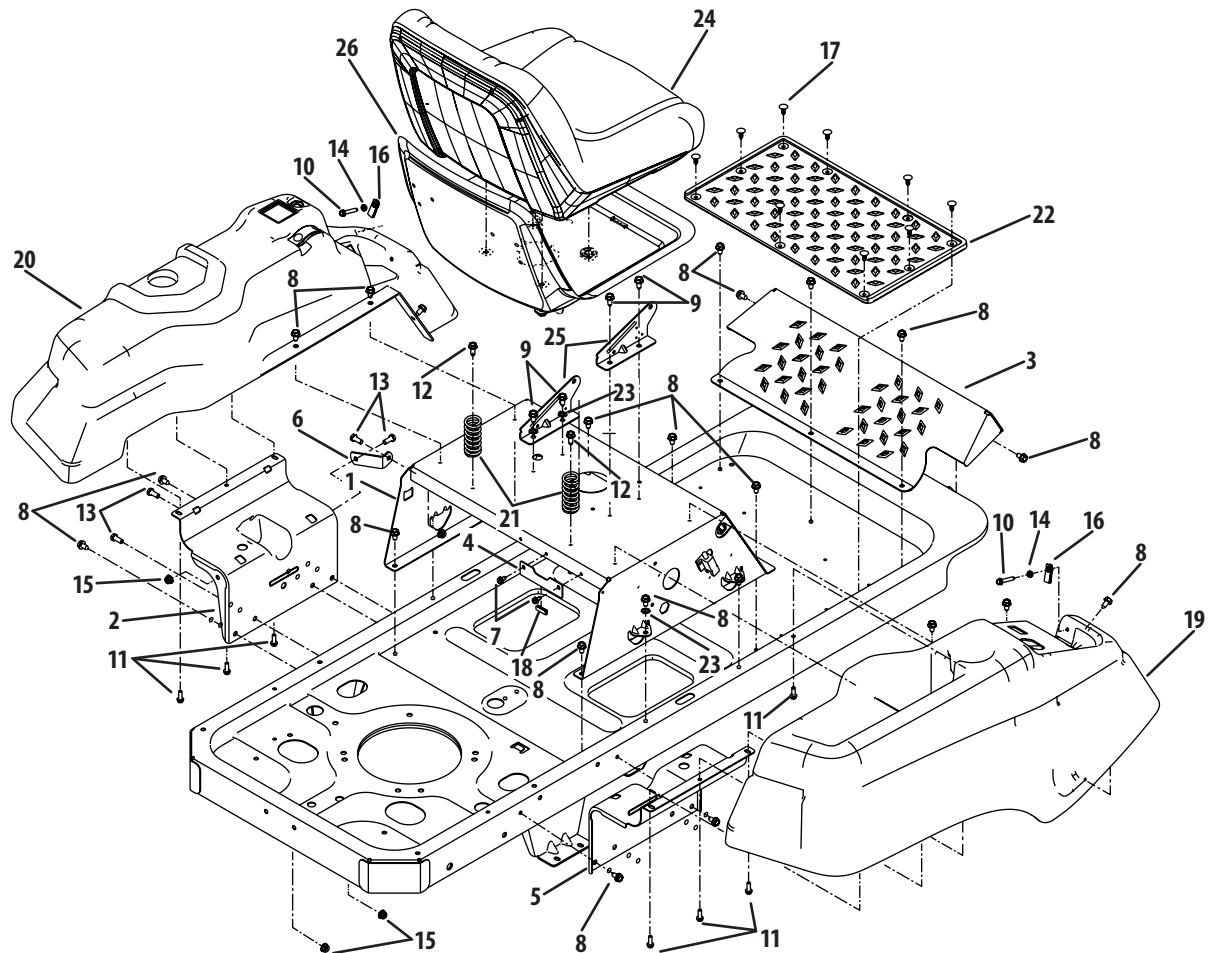

Ref.	Part Number	Description
1.	603-04447A	Seat Frame Assembly
2.	603-04564	Console Bracket Assembly
3.	703-05373B	Foot Rest Bracket
4.	703-05894	Hold Down Bracket
5.	703-06451	Console Mounting Bracket
6.	703-06623	Fuel Tank Support Bracket
7.	710-0599	Hex Washer Screw, 1/4-20 x .500
8.	710-0604A	Hex Washer Screw, 5/16-18 x .625
9.	710-0726	Hex Washer Screw, 5/16-12 x .750
10.	710-0778	Hex Washer Screw, 1/4-20 x 1.500
11.	710-0895	Hex Washer Screw, 1/4-15 x .750
12.	710-1260A	Hex Washer Screw, 5/16-18 x .750
13.	710-3008	Screw, 5/16-18 x .750


Ref.	Part Number	Description
14.	712-0298	Jam Nut, 1/4-20
15.	712-04063	Flange Lock Nut, 5/16-18
16.	712-04092	U-Type Speed Nut, 1/4-20
17.	726-3046	Ratchet Clip, .250
18.	731-0511	Trim Strip
19.	731-06233	Console (RH)
20.	731-06263	Console (LH)
21.	732-04035	Compression Spring, 1.28 x 3.125
22.	735-04082	Foot Pad
23.	736-0148	External Tooth Lock Washer, 3/8
24.	757-04041	High Back Seat
25.	783-1489C	Seat Mounting Bracket
26.	813-01002	Adjustable Seat

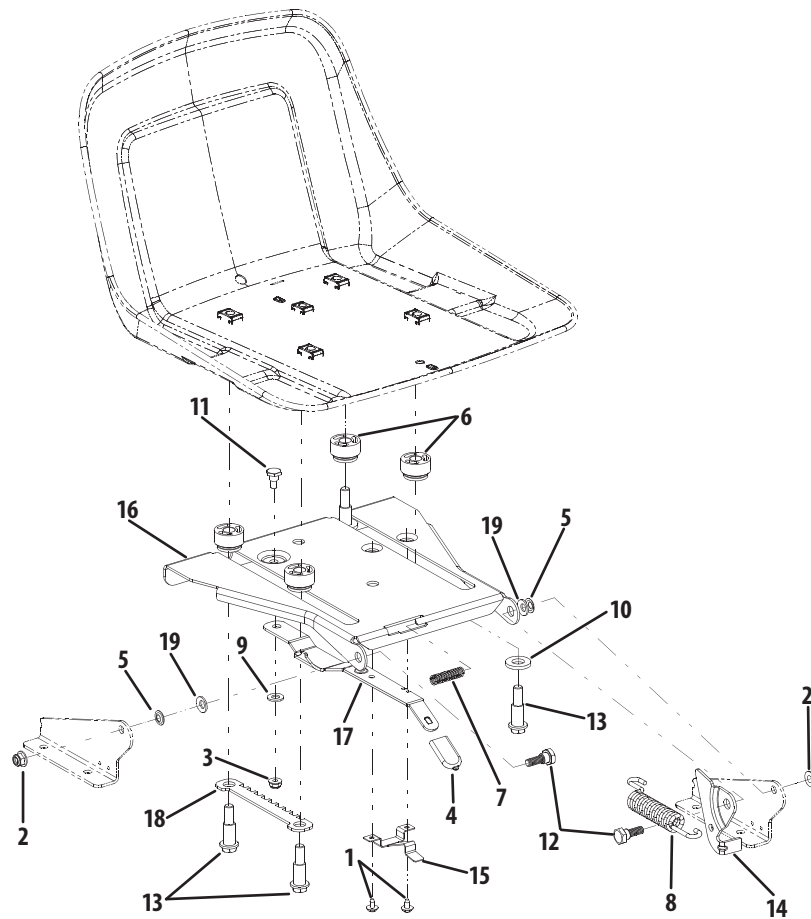

Ref.	Part Number	Description
1.	710-1268	Hex Screw, #10-16 x .375
2.	712-04063	Hex Insert Flange Lock Nut, $\frac{5}{16}$ -18
3.	712-04064	Hex Insert Flange Lock Nut, $\frac{1}{4}$ -20
4.	720-0309A	Seat Adjustment Grip
5.	726-0201	Speed Nut, .3125
6.	731-04074	Seat Adjustment Spacer
7.	732-0499	Compression Spring, .41 x 1.5
8.	732-1184	Extension Spring, .84 Dia. x 4.6
9.	736-0204	Flat Washer, .344 x .62 x .033
10.	736-3019	Flat Washer, .531 x 1.062 x .134

Ref.	Part Number	Description
11.	738-0137A	Shoulder Screw, .34 x .285 x $\frac{1}{4}$ -20
12.	738-0296	Shoulder Screw, .437 x .268 x $\frac{5}{16}$ -18
13.	738-0966A	Shoulder Screw, .5 x .925 x $\frac{3}{8}$ -16
14.	783-0209D	Seat Lift Bracket
15.	783-0611	Seat Adjustment Stop
16.	783-1489C	Seat Pivot Bracket
17.	783-0739A	Seat Adjustment Lever
18.	783-0753	Seat Adjustment Index Bracket
19.	736-0242	Belleville Washer, .34 x .872 x .06


Deck Lift & Controls

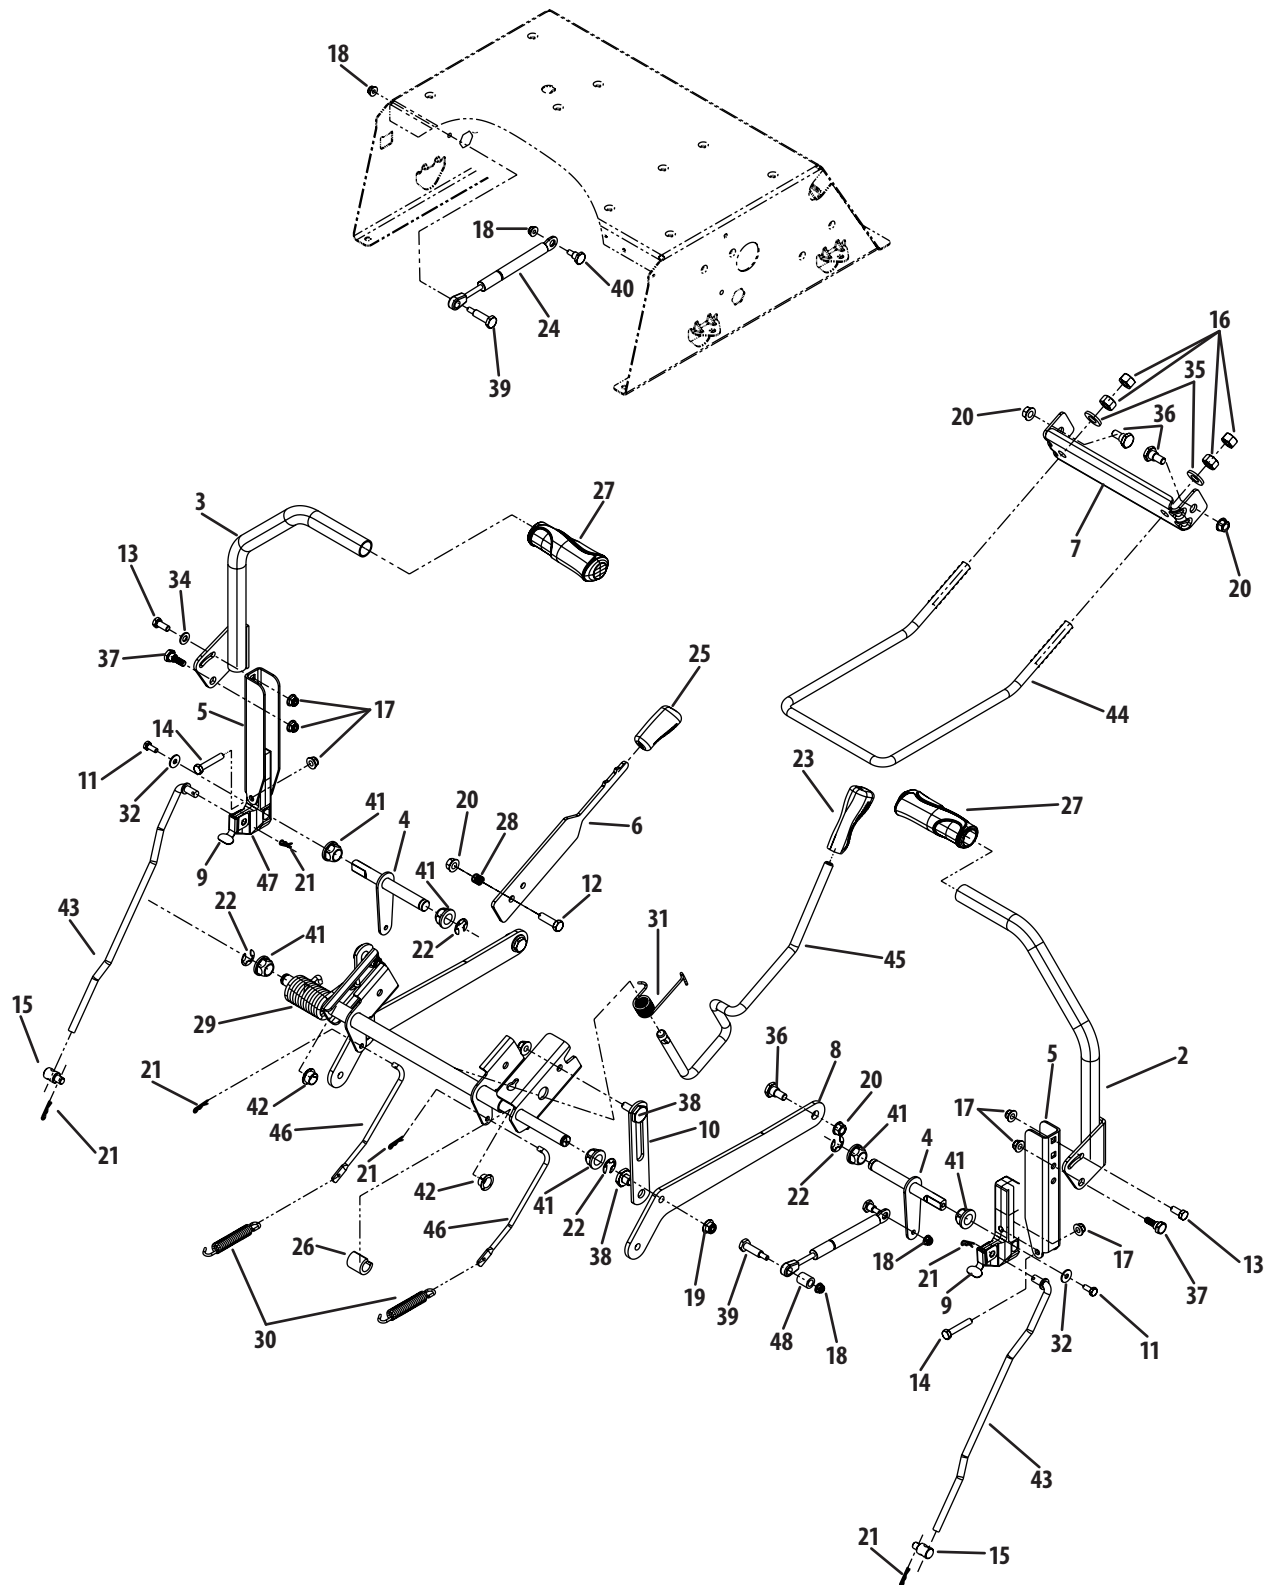

Ref.	Part Number	Description
1.	603-04160B	Deck Lift Shaft Assembly
2.	603-04322	Lapbar Lever RH
3.	603-04324	Lapbar Lever LH
4.	647-04099	Shaft Control
5.	703-05387B	Lapbar Pivot Bracket
6.	703-05396A	Brake Handle
7.	703-05414A	Front Deck Hanger Bracket
8.	703-05793A	Deck Lift Arm
9.	703-06096	Actuator Bracket
10.	703-06169	Lift Link Plate
11.	710-0433	Hex Screw, ¼-20 x .625
12.	710-3005	Hex Screw, ⅜-16 x 1.25
13.	710-3008	Hex Screw, ⅝-18 x .75
14.	710-3180	Hex Screw, ⅝-18 x 1.75
15.	711-0832	Ferrule, ⅜-24 x .375
16.	712-0206	Hex Nut, ½-13
17.	712-04063	Flange Lock Nut, ⅝-18
18.	712-04064	Flange Lock Nut, ¼-20
19.	712-04065	Flange Lock Nut, ⅜-16
20.	712-0431	Flange Lock Nut, ⅜-16
21.	714-0104	Cotter Pin, .072 x 1.13
22.	716-0106	E-Ring, .625
23.	720-0311	Handle Grip, ½
24.	727-04141	Damper Cylinder, .59 x 7.84

Ref.	Part Number	Description
25.	731-04735	Handle Grip
26.	731-05732	Spacer, .621 x 1.00
27.	731-05882	Handle Grip, 1.0
28.	732-0334	Compression Spring, .50 x .50
29.	732-04420	Torsion Spring, .194
30.	732-04432	Extension Spring, .59 x 4.00
31.	732-0874	Torsion Spring
32.	736-0270	Bell Washer, .265 x .75 x .062
33.	736-0272	Flat Washer, .510 x 1.00 x .060
34.	736-0275	Flat Washer, .344 x .688 x .065
35.	736-3019	Flat Washer, .531 x 1.062 x .134
36.	738-0143	Shoulder Bolt, .496 x .336 x ⅜-16
37.	738-0296	Shoulder Screw, .437 x .268 x ⅝-18
38.	738-0507B	Shoulder Screw, .500 x .434
39.	738-0572	Shoulder Screw, .374 x 1.16
40.	7387-0974	Shoulder Screw, .375 x .380 x ¼-20
41.	741-0225	Hex Flange Bearing
42.	741-3074	Flange Bearing, .626 x .938 x .344
43.	747-04225A	Lapbar Control Rod
44.	747-04401A	Deck Front Hanger Rod
45.	747-04637	Deck Lift Handle Rod
46.	747-04651	Brake Rod
47.	748-04169	Control Hub
48.	750-04676	Screw, .385 x .630 x .75


Mower Deck

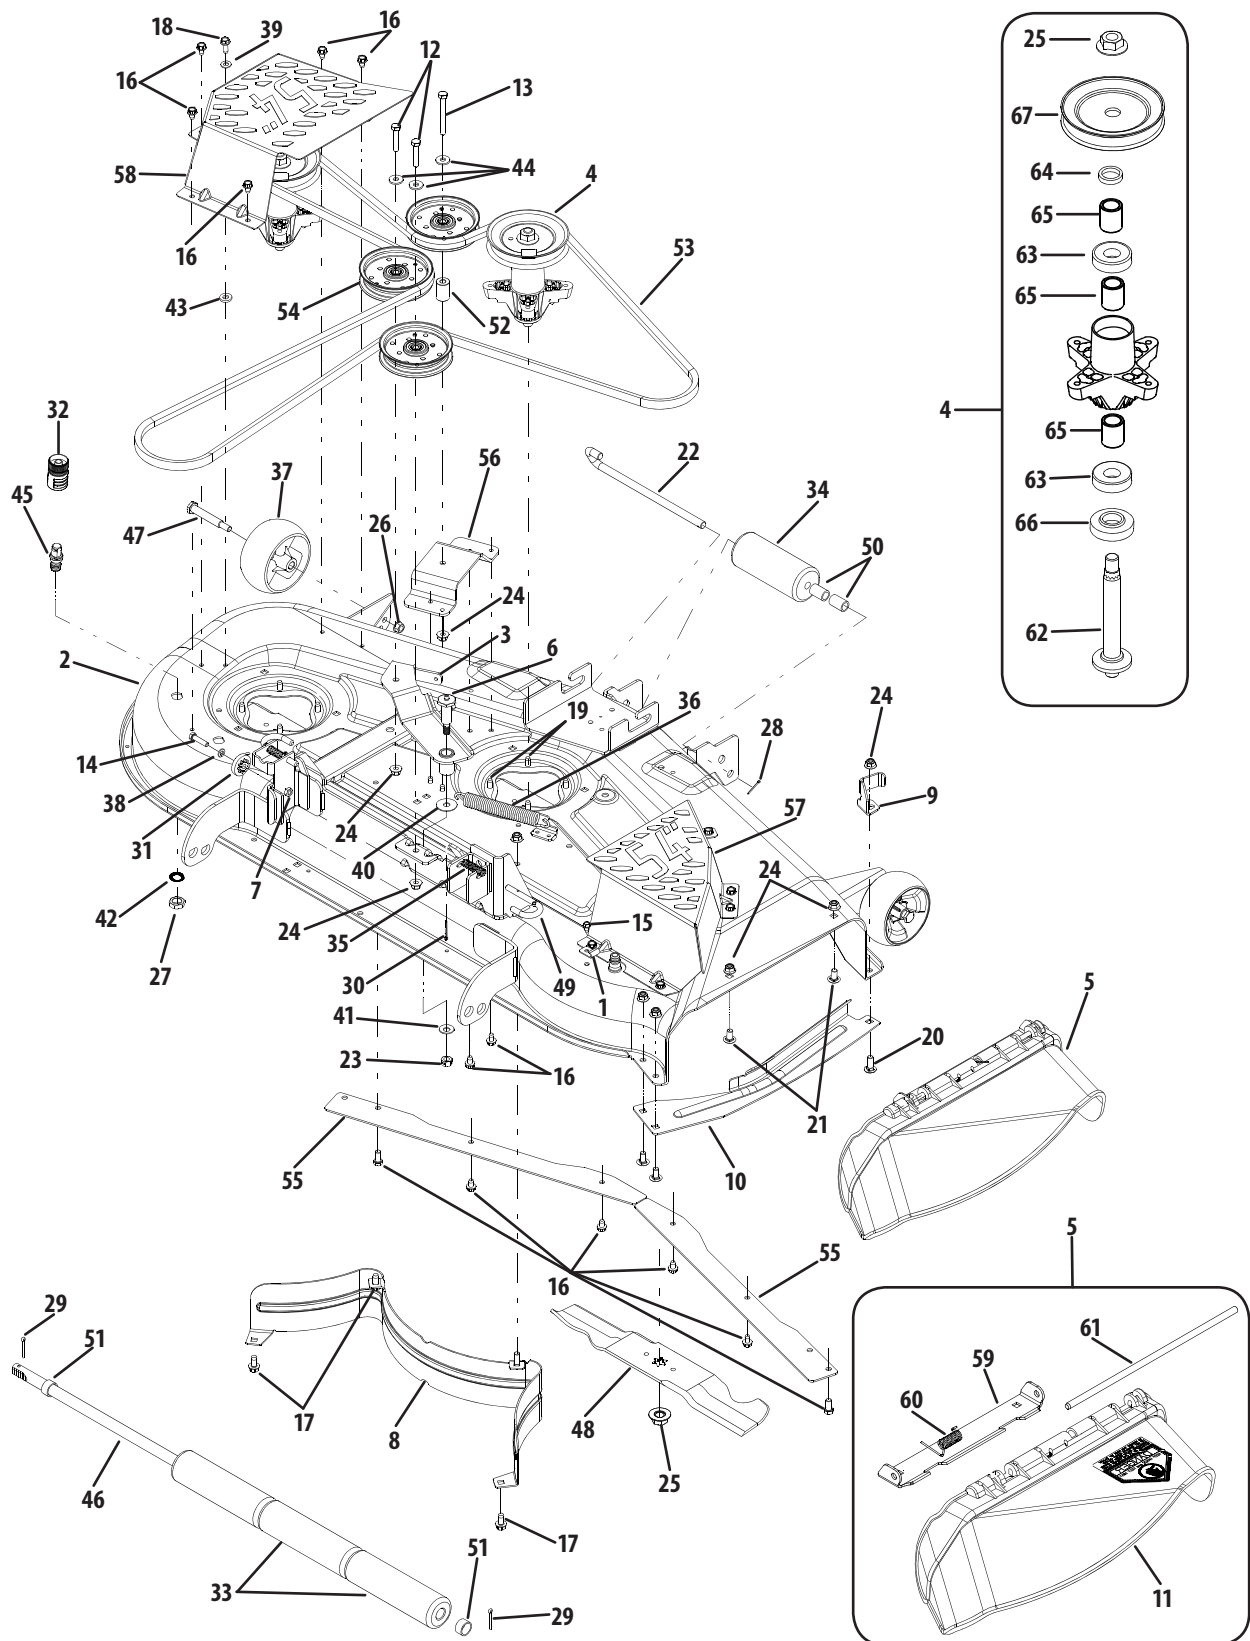

Ref.	Part Number	Description
1.	16606	Retainer Bracket
2.	603-04367A	Deck Housing
3.	603-04386A	Idler Assembly
4.	618-04608	Spindle Assembly
5.	631-04070A	Discharge Chute Assembly
6.	638-04012A	Shoulder Bolt Assembly
7.	683-0254B	Deck Hanger Bracket
8.	703-2093	Rear Inner Baffle
9.	703-3279	Stop Bracket
10.	703-3511	Finger Guard
11.	731-05559B	Chute Deflector
12.	710-0347	Hex Cap Screw, 3/8-16 x 1.75
13.	710-0521	Hex Cap Screw, 3/8-16 x 3.0
14.	710-0528	Hex Cap Screw, 5/16-18 x 1.25
15.	710-0599	Hex Washer Head Screw, 1/4-20 x .5
16.	710-0607	Hex Washer Head Screw, 5/16-18 x .5
17.	710-0623	Hex Washer Head Screw, 3/8-16 x .75
18.	710-0650	Hex Washer Head Screw, 5/16-18 x .875
19.	710-1260A	Hex Washer Head Screw, 5/16-18 x .75
20.	710-3168	Carriage Screw, 3/8-16 x 1.0
21.	710-3178	Carriage Screw, 3/8-16 x .75
22.	711-1737	Roller Pin, .5 x 10.06
23.	712-0290	Hex Lock Nut, 7/16-14
24.	712-04065	Hex Insert Flange Lock Nut, 3/8-16
25.	712-0417A	Hex Flange Nut, 5/8-18
26.	712-0431	Hex Flange Lock Nut, 3/8-16
27.	712-0641	Hex Nut, M16-1.5
28.	714-0111	Cotter Pin, 3/32 x 1.0
29.	714-0162	Cotter Pin, 5/32 x 1.25
30.	714-0470	Cotter Pin, 1/8 x 1.25
31.	717-1553B	Deck Adjustment Gear
32.	721-04041	Water Nozzle Adapter
33.	731-05825	Deck Roller, 7.895
34.	731-05679	Front Roller


Ref.	Part Number	Description
35.	732-0306A	Compression Spring
36.	732-0850	Extension Spring, 1.0 x 6.140
37.	734-04155	Deck Ball Wheel, 5.0
38.	736-0119	Lock Washer, 5/16
39.	736-0275	Flat Washer, .344 x .688 x .065
40.	736-0406	Flat Washer, .442 x 1.39 x .06
41.	736-0407	Bell Washer, .45 x 1.0 x .062
42.	736-0760	Lock Washer
43.	736-3010	Flat Washer, .407 x .812 x .135
44.	736-3072	Flat Washer, .38 x .93 x .110
45.	737-04003C	Deck Wash Nozzle
46.	738-04260	Shaft, .75 x 26.893
47.	738-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
48.	742-0677B	Blade, 18.5
49.	747-1116	Deck Hanger Rod
50.	750-0151	Spacer, .55 x .75 x 1.125
51.	750-0212	Spacer, .82 x 1.0 x .53
52.	750-04597	Spacer, .38 x .9 x 1.313
53.	754-04138A	V-Belt Type B Sec x 143
54.	756-04129	Idler Pulley, 4.25 Dia
55.	783-04690B	Deck Skirt
56.	783-04726	Stationary Idler Bracket
57.	783-1470A	Belt Cover, RH
58.	783-1471	Belt Cover, LH
59.	783-05030	CHute Mounting Bracket
60.	732-04372	Torsion Spring
61.	711-04565	Hinge Pin
62.	738-1197	Spindle Shaft, 6.95
63.	741-0919	Ball Bearing
64.	748-0160A	Spacer, .79 x 1.25 x .175
65.	750-1000	Spacer, .80 x 1.10 x 1.32
66.	750-1349A	Spacer, .79 x 1.82 x .55
67.	756-04216	V-Type Pulley, 5.39

Engine Connection

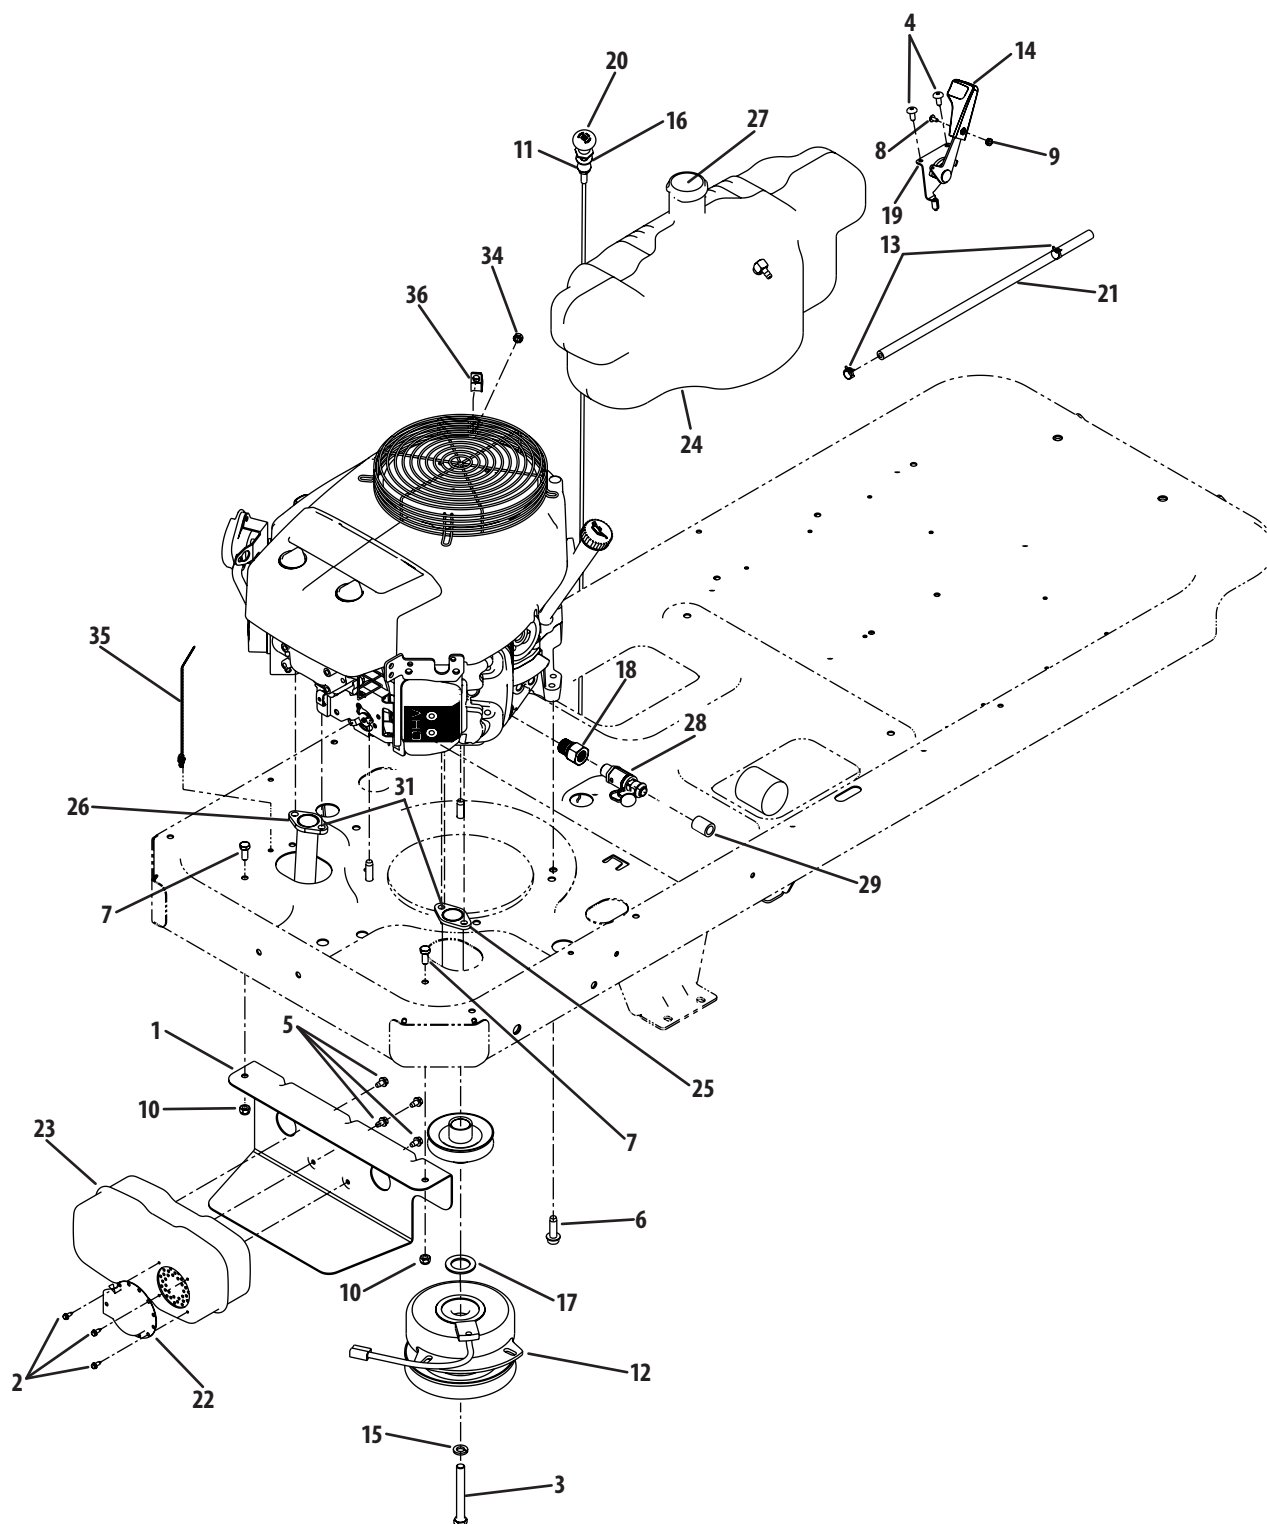


Ref.	Part Number	Description
1.	703-05441A	Muffler Mounting Bracket
2.	710-0227	Hex Washer Head Screw, #8-18 x .5
3.	710-04379A	Hex Cap Lock Screw, 7/16-20 x 3.5
4.	710-04261	Hex Washer Hd. Screw, 1/4-14 x .625
5.	710-0599	Hex Washer Head Screw, 1/4-20 x .5
6.	710-1315	Hex Washer Hd. Screw, 3/8-16 x 1.25
7.	710-3008	Hex Cap Screw, 5/16-18 x .75
8.	710-3217	Truss Hd. Mach. Screw, #8-32 x .375
9.	712-0142	Hex Nut, #8-32
10.	712-0429	Hex Insert Lock Nut, 5/16-18
11.	712-3005	Hex Jam Nut, 3/8-16
12.	717-1774C	Electric PTO Clutch Assembly
13.	726-0205	Hose Clamp
14.	731-04914	Throttle Control Knob
15.	736-0171	Lock Washer, 7/16
16.	736-0300	Flat Washer, .406 x .875 x .059
17.	736-0277	Flat Washer, 1.031 x 1.62 x .095
18.	737-04138	Hex Fitting
19.	746-04066	Throttle Cable, 34.25 LG
20.	746-04214	Choke Cable, 61 LG
21.	751-10349	Fuel Line Hose
22.	751-0564B	Muffler Deflector
23.	751-0616A	Muffler
24.	651-04209	Fuel Tank
25.	751-10355	Exhaust Pipe, RH
26.	751-10356	Exhaust Pipe, LH
27.	751-10703	Fuel Cap
28.	751-10517	Oil Drain
29.	751-3141	Oil Drain Extension Hose
30.	756-0978B	Drive Pulley
31.	KM-11060-7016	Muffler Gasket
32.	KM-317R0800	Hex Nut (NS, used for 25 & 26)
33.	KM-461F0800	Lock Washer (NS, used for 25 & 26)
34.	712-0271	Sems Nut, 1/4-20
35.	726-0154	Push Mount Cable Tie
36.	726-0272	Clamp
37.	726-0197	Clutch Cable Tie — Not Shown

Front Axle

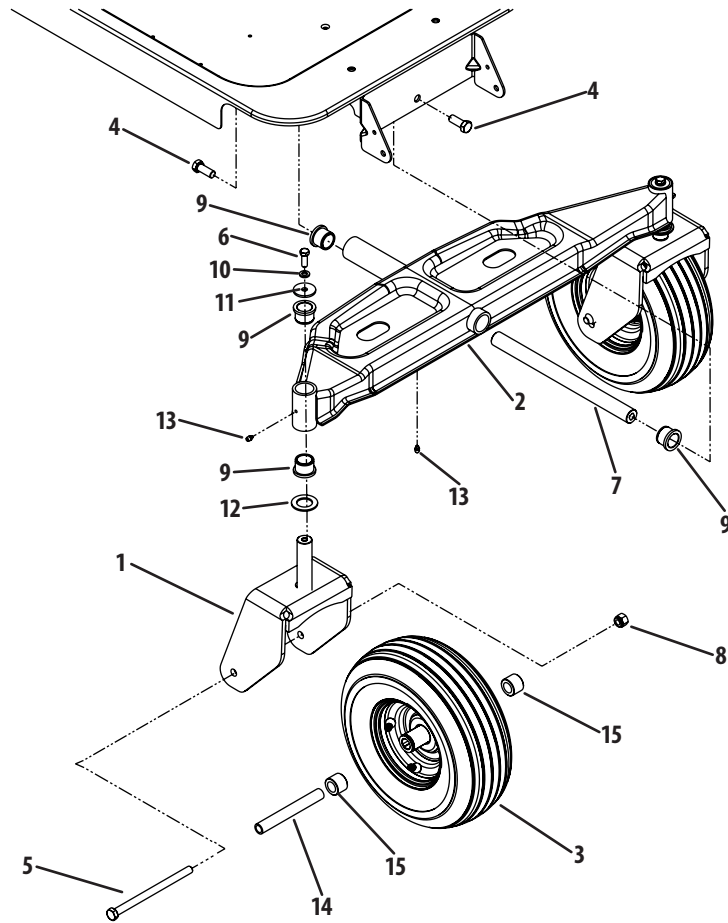


Ref.	Part Number	Description
1.	603-04370	Castor Wheel Bracket
2.	603-04385A	Front Pivot Axle
3.	634-04321A	Wheel Assembly, 13 x 5-6
—	734-04255	Tire, 13 x 5-6
4.	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5.	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6.	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7.	711-04228	Axle Shaft
8.	712-3058	Hex Insert Lock Nut, 1/2-13
9.	731-05500	Flange Bearing, 1.0 x 1.246
10.	736-0169	Lock Washer, 3/8
11.	736-0227	Flat Washer, .39 x 1.5 x .134
12.	736-0250	Flat Washer, 1.0 x 1.75 x .10
13.	737-3000	Lube Fitting, 3/16 Drive
14.	750-04775A	Spacer, .51 x .75 x 5.825
15.	750-04792	Hub, .76 x 1.23 x .92

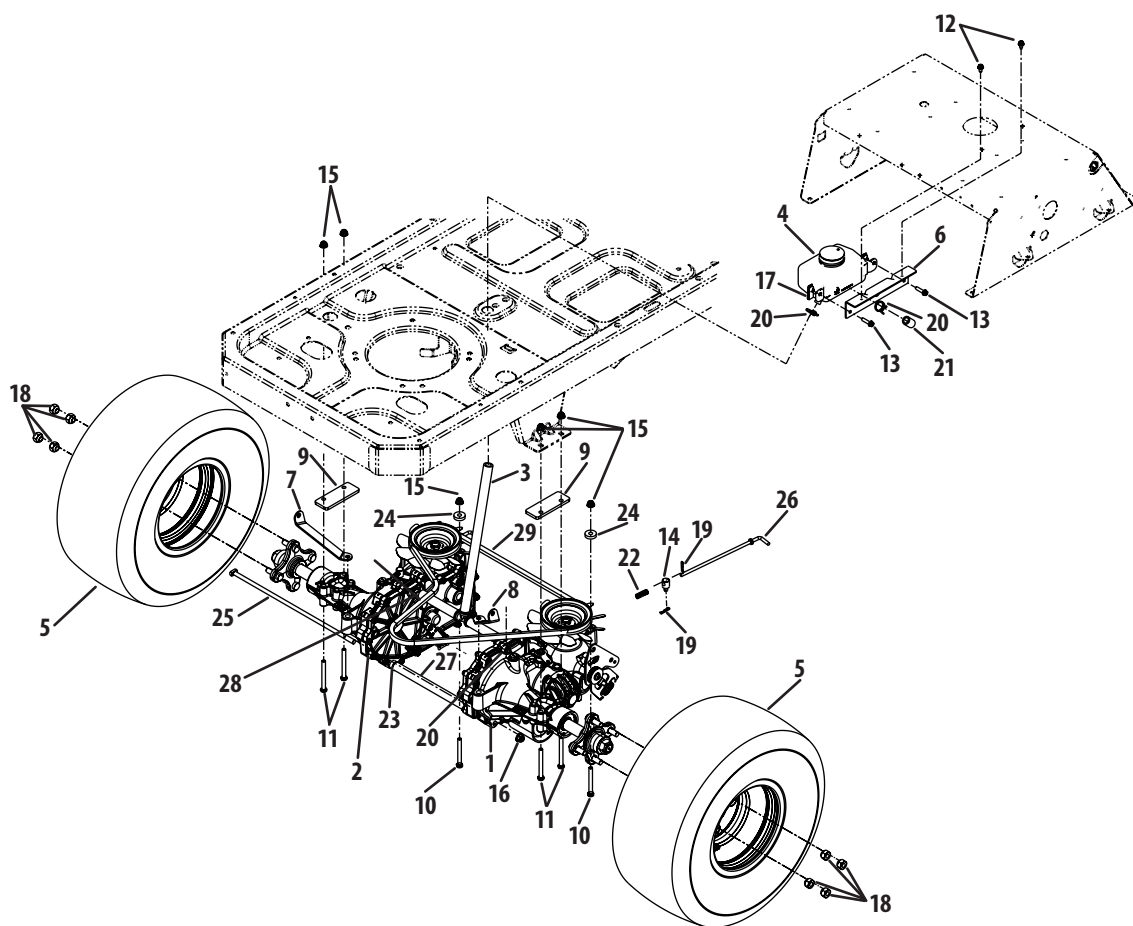

Ref.	Part Number	Description
1.	618-04464	Transmission Assembly (RH)
2.	618-04465	Transmission Assembly (LH)
3.	618-04466	Breather
4.	631-04223	Expansion Tank Assembly
5.	634-04295	Wheel Assembly, 20 x 10 x 8
—	634-0246A	Rim Assembly, 8.0 x 6.19 x 4
—	734-1873	Tire, 20 x 10 x 8
—	734-0255	Air Valve
6.	703-05938	Expansion Tank Bracket
7.	703-05940	Transmission Brace (LH)
8.	703-05941	Transmission Brace (RH)
9.	703-05989	Transmission Spacer
10.	710-0176	Hex Screw, $\frac{5}{16}$ -18 x 2.75
11.	710-0189	Hex Screw, $\frac{5}{16}$ -18 x 3.00
12.	710-0599	Screw, $\frac{1}{4}$ -20 x .500
13.	710-0788	Screw, $\frac{1}{4}$ -20 x 1.000


Ref.	Part Number	Description
14.	711-1530	Ferrule, .325 x .312
15.	712-04063	Flangelock Nut, $\frac{5}{16}$ -18
16.	712-04065	Flangelock Nut, $\frac{3}{8}$ -16
17.	712-04092	Speed Nut, $\frac{1}{4}$ -20
18.	712-3050	Lug Nut, $\frac{7}{16}$ -14
19.	714-0104	Cotter Pin, .072 x 1.13
20.	726-04059	Hose Clamp, .750
21.	731-05785	Cap, $\frac{1}{2}$ x .870
22.	732-0335	Compression Spring, .405 x 1.17
23.	732-04434	Extension Spring, .545 x 4.555
24.	736-04267	Flat Washer, .35 x 1.0 x .2
25.	738-04251	Rod, .337 x 14.75
26.	747-04636	Bypass Rod
27.	750-04759A	Tube, $\frac{7}{16}$ x $\frac{3}{4}$ x 11.3
28.	751-10511	Straight Fitting, $\frac{9}{16}$ x $\frac{1}{2}$
29.	754-04043A	V-Type Belt, 57.7

Cylinder & Crankcase

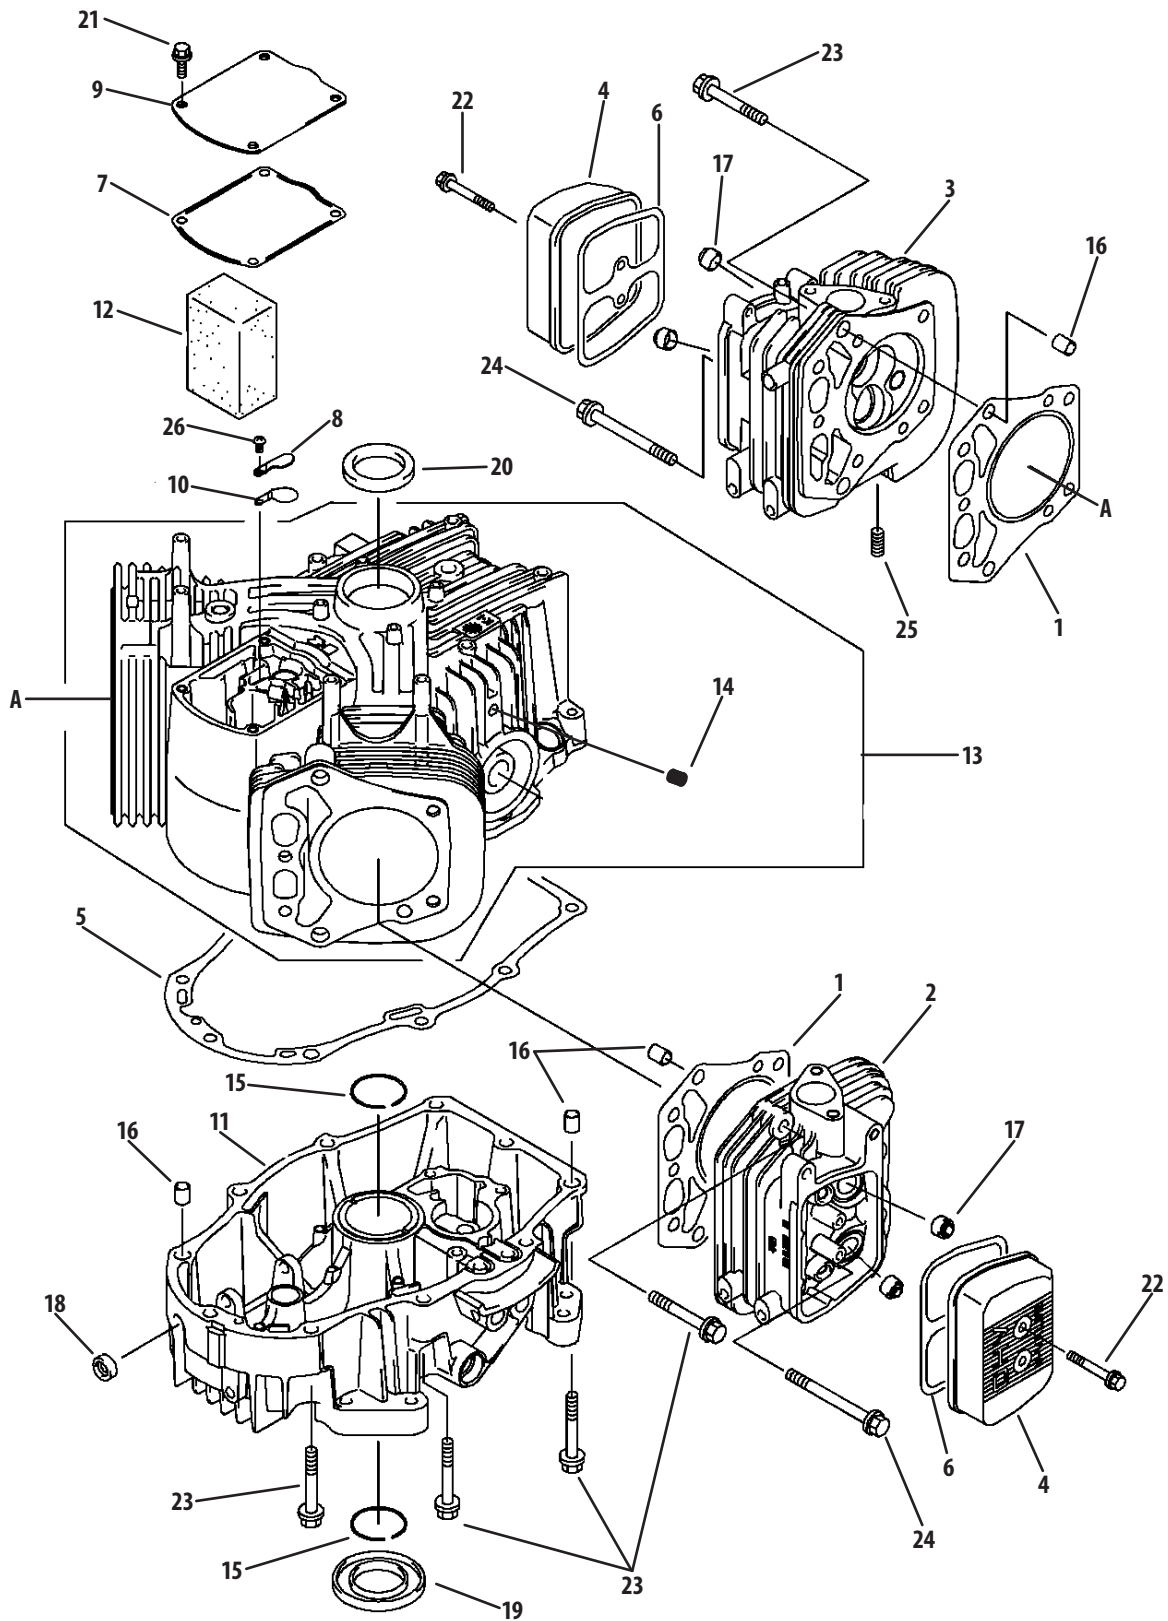


Ref.	Part Number	Description
1.	KM-11004-7006	Head Gasket
2.	KM-11008-7023	Complete Cylinder Head, #2
3.	KM-11008-7024	Complete Cylinder Head, #1
4.	KM-11022-7002	Rocker Case
5.	KM-11060-7012	Crankcase Cover Gasket
6.	KM-11060-7013	Rocker Case Gasket
7.	KM-11060-7014	Breather Gasket
8.	KM-13271-7006	Plate
9.	KM-14091-7004	Cover
10.	KM-16126-7001	Valve
11.	KM-49015-7064	Crankcase Cover
12.	KM-49109-7003	Breather Element
13.	KM-49120-7093	Crankcase Complete
14.	KM-59066-7002	Plug
15.	KM-92033-7004	Snap Ring
16.	KM-92043-7001	Pin
17.	KM-92049-7001	Oil Seal, RVC2 6 x 11 x 10.2
18.	KM-92049-7005	Oil Seal, SO 8 x 14 x 5 HS
19.	KM-92049-7011	Oil Seal, SD 35 x 62 x 8 L HS
20.	KM-92049-7014	Oil Seal, SD 35 x 52 x 7 R HS
21.	KM-92153-7043	Bolt
22.	KM-130AA0640	Flange Bolt
23.	KM-92153-7054	Bolt
24.	KM-172BA0818	Flange Bolt
25.	KM-214AA0408	Stud Bolt
26.	KM-214B0408	Pan Screw

Pistons & Crankshaft

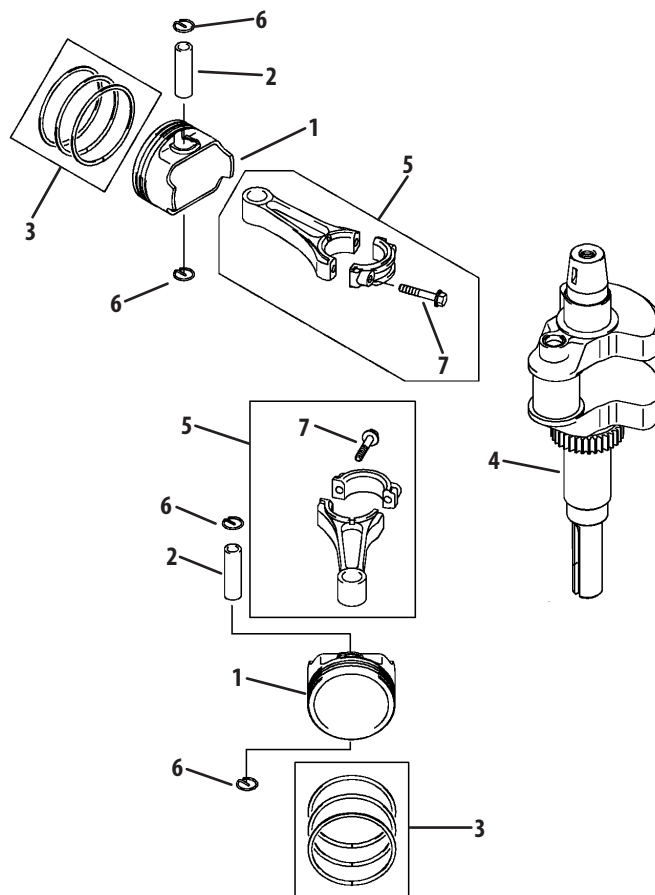


Ref.	Part Number	Description
1.	KM-13001-7007	Engine Piston
—	KM-13029-7003	Engine Piston, L 0.50
2.	KM-13002-7001	Piston Pin
3.	KM-13008-6058	Piston Ring Set
—	KM-13025-7002	Piston Ring Set, L 0.50
4.	KM-13031-7048	Crankshaft
5.	KM-13251-7016	Connecting Rod
6.	KM-92033-7002	Snap Ring
7.	KM-92151-7017	Bolt, 6 x 35

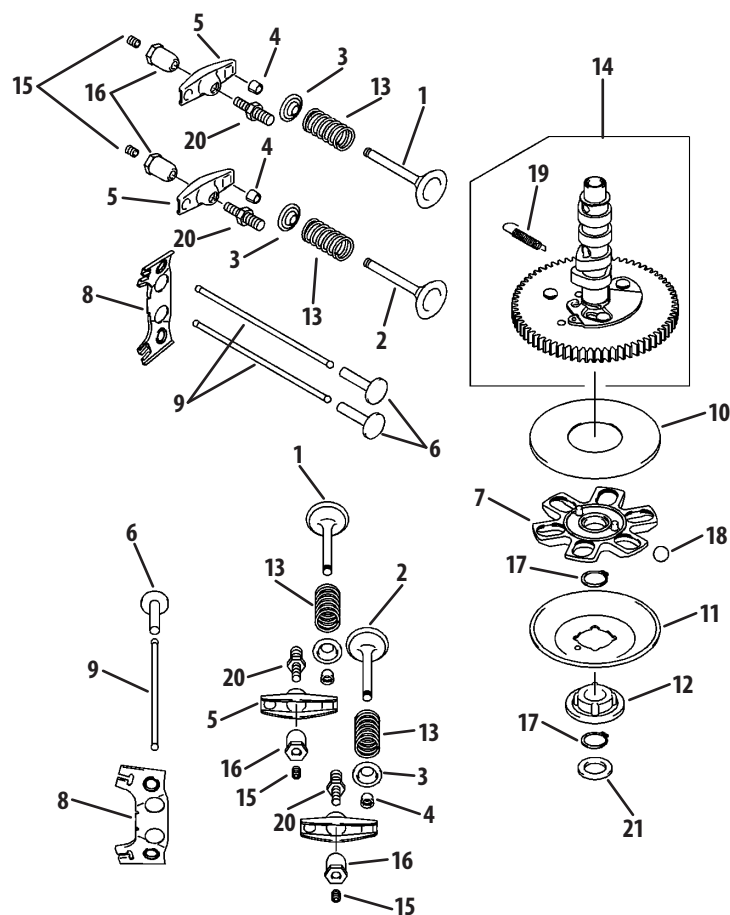


Ref.	Part Number	Description
1.	KM-12004-7002	Intake Valve
2.	KM-12005-7004	Exhaust Valve
3.	KM-12009-7001	Valve Spring Retainer
4.	KM-12011-2056	Collet
5.	KM-12017-7007	Rocket Arm
6.	KM-12032-7001	Tappet
7.	KM-13070-7004	Guide
8.	KM-13070-7007	Guide
9.	KM-13116-7002	Push Rod
10.	KM-13271-7007	Plate
11.	KM-13271-7021	Governor Plate

Ref.	Part Number	Description
12.	KM-42036-7010	Sleeve
13.	KM-49078-7002	Valve Spring
14.	KM-49118-7007	Complete Camshaft
15.	KM-92009-2341	Screw
16.	KM-92015-2253	Nut
17.	KM-92033-7001	Snap Ring
18.	KM-92140-7002	Ball
19.	KM-92145-7001	Spring
20.	KM-92153-7019	Bolt
21.	KM-92200-7001	Washer

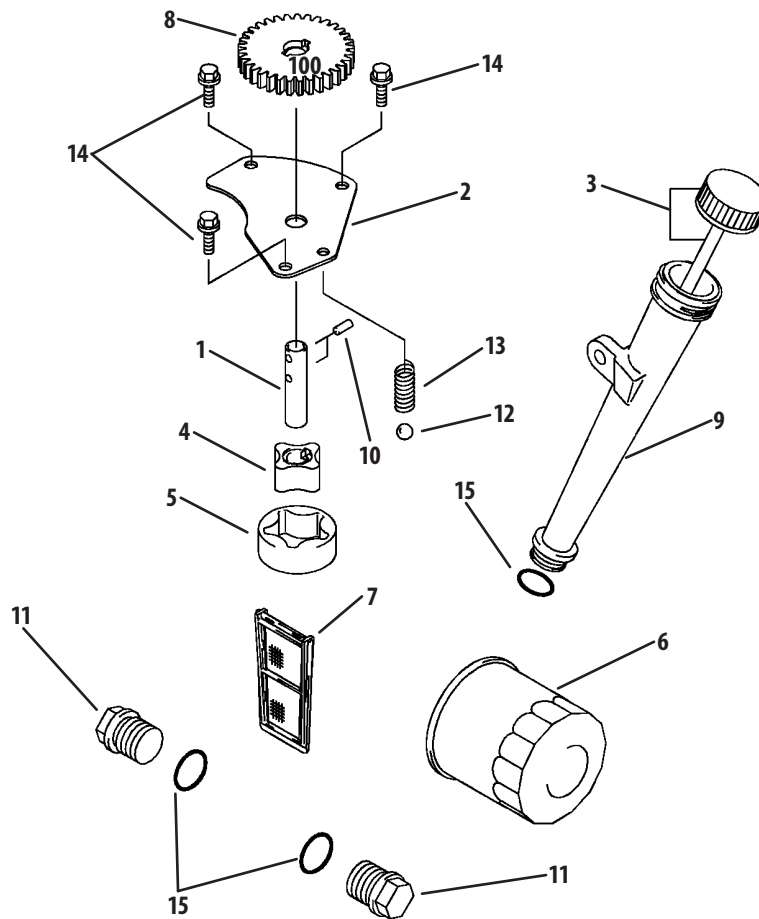


Ref.	Part Number	Description
1.	KM-13107-7009	Shaft
2.	KM-13271-7005	Plate
3.	KM-14075-7008	Dipstick Assembly
4.	KM-16154-7007	Pump Rotor (In)
5.	KM-16154-7008	Pump Rotor (Out)
6.	KM-49065-2078	Oil Filter
7.	KM-49065-7003	Oil Filter
8.	KM-59051-7011	Spur Gear
9.	KM-59231-7006	Dipstick/Oil Fill Tube
10.	KM-92043-7003	Pin
11.	KM-92066-7003	Plug
12.	KM-92140-7003	Ball
13.	KM-92145-7002	Spring
14.	KM-92153-7043	Flange Bolt
15.	KM-670D2016	O-Ring, 16mm

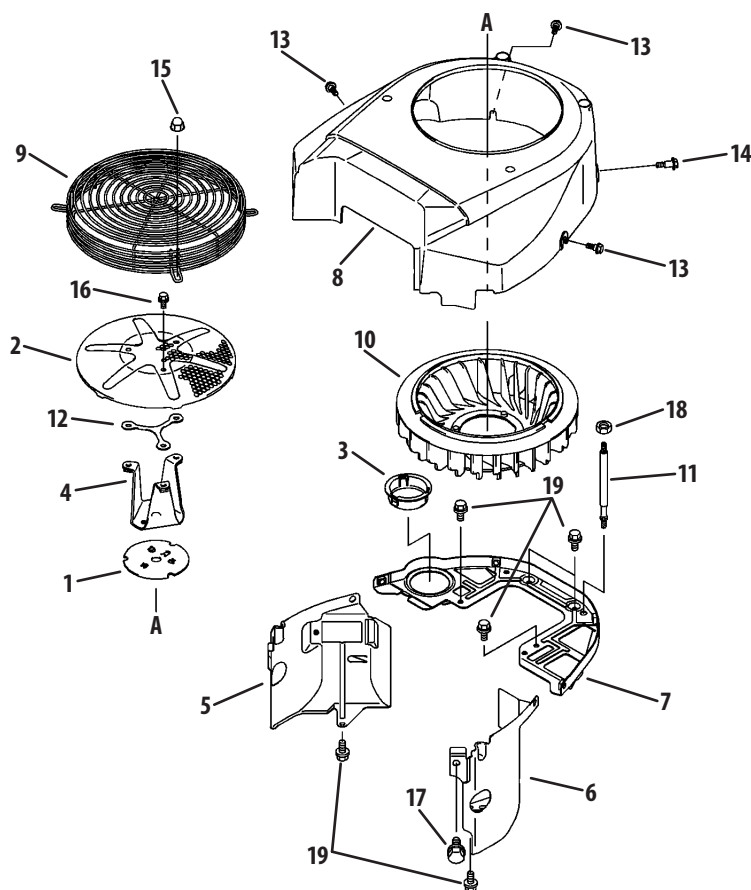


Ref.	Part Number	Description
1.	KM-13270-7007	Plate
2.	KM-14037-70089H	Screen
3.	KM-14091-7002	Cover
4.	KM-23062-7005	Grass Screen Bracket
5.	KM-49089-7004	Engine Shroud
6.	KM-49089-7005	Engine Shroud
7.	KM-49089-7040	Engine Shroud
8.	KM-59066-7004	Housing Fan
9.	KM-55020-7007	Guard
10.	KM-59041-7003	Impeler Fan

Ref.	Part Number	Description
11.	KM-92004-7006	Stud
12.	KM-92026-7007	Shim Spacer
13.	KM-92153-7007	Bolt
14.	KM-92153-7008	Bolt
15.	KM-92210-0003	Nut
16.	KM-92172-7029	Socket Screw
17.	KM-130AA0816	Flange Bolt
18.	KM-311B0600	Hex Nut
19.	KM-92153-7043	Bolt, 6 x 12

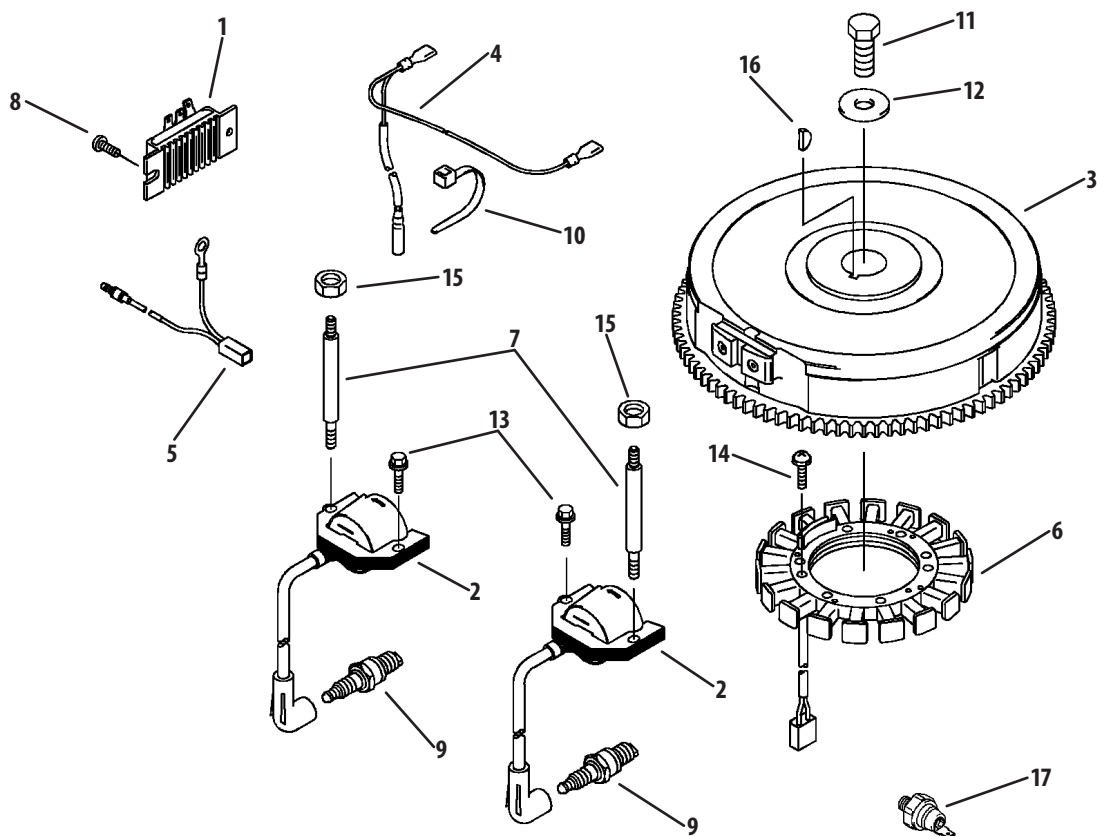


Ref.	Part Number	Description
1.	KM-21066-7011	Voltage Regulator
2.	KM-21171-7013	Ignition Coil
3.	KM-21193-7019	Flywheel
4.	KM-26030-7002	Harness
5.	KM-26031-7003	Harness
6.	KM-59031-7001	Charging Coil
7.	KM-92004-7009	Stud
8.	KM-92009-2308	Screw
9.	KM-BPR4ES	Spark Plug (NGK)
10.	KM-92072-7003	Band
11.	KM-92151-2097	Bolt, 12 x 30
12.	KM-92200-7002	Washer
13.	KM-130AA0620	Flange Bolt, 6 x 20
14.	KM-92172-7018	Screw, 5 x 20
15.	KM-311B0600	Hex Nut
16.	KM-510A5100	Woodruff Key
17.	KM-27010-7002	Oil Pressure Switch

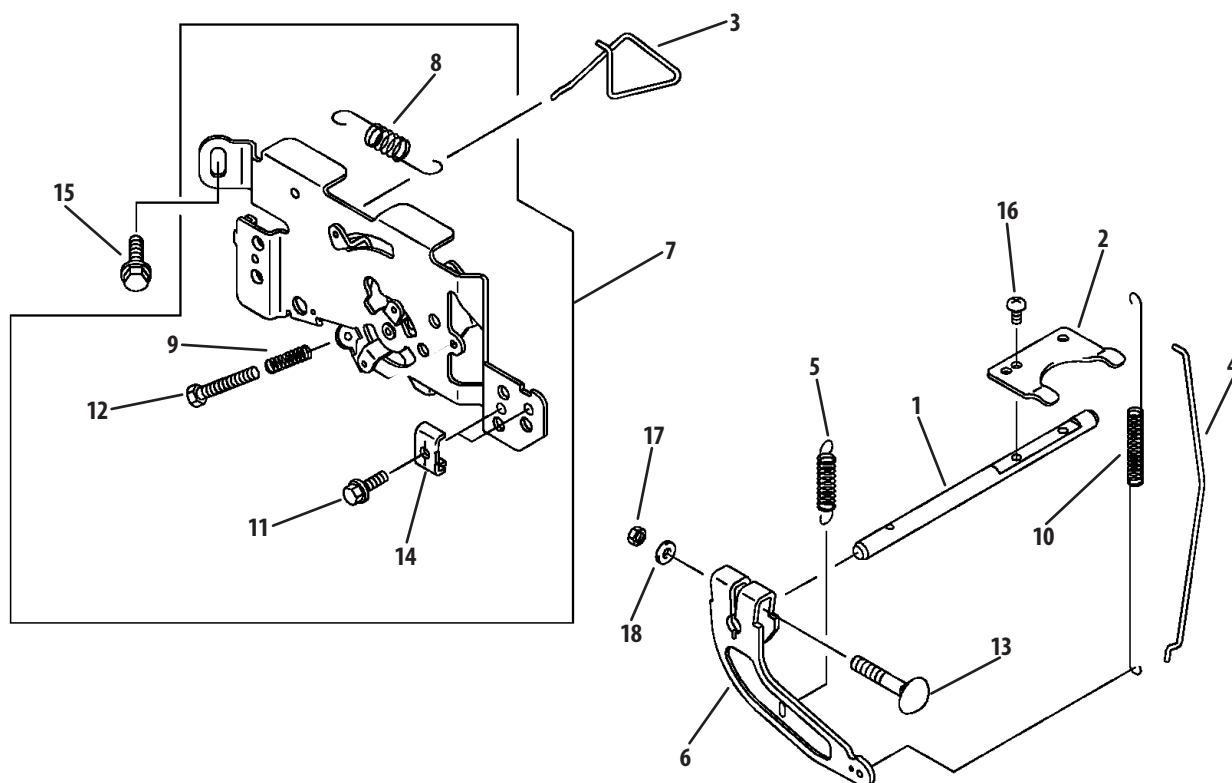

Ref.	Part Number	Description
1.	KM-13107-7013	Shaft
2.	KM-13271-7032	Plate
3.	KM-16169-7006	Choke Link
4.	KM-16171-7004	Link
5.	KM-39129-7004	Governor Spring
6.	KM-49103-7004	Governor Arm
7.	KM-49113-7017	Control Panel
8.	KM-92145-7004	Spring
9.	KM-92145-7005	Spring

Ref.	Part Number	Description
10.	KM-92145-7034	Spring
11.	KM-92150-2182	Bolt, 5 x 18
12.	KM-92151-7014	Bolt, 5 x 30
13.	KM-92153-7033	Bolt, 6 x 35
14.	KM-92170-7001	Clamp
15.	KM-92153-7043	Bolt, 6 x 12
16.	KM-214AA0408	Pan Screw, 4 x 8
17.	KM-311B0600	Hex Nut
18.	KM-411B0600	Plain Washer


Carburetor

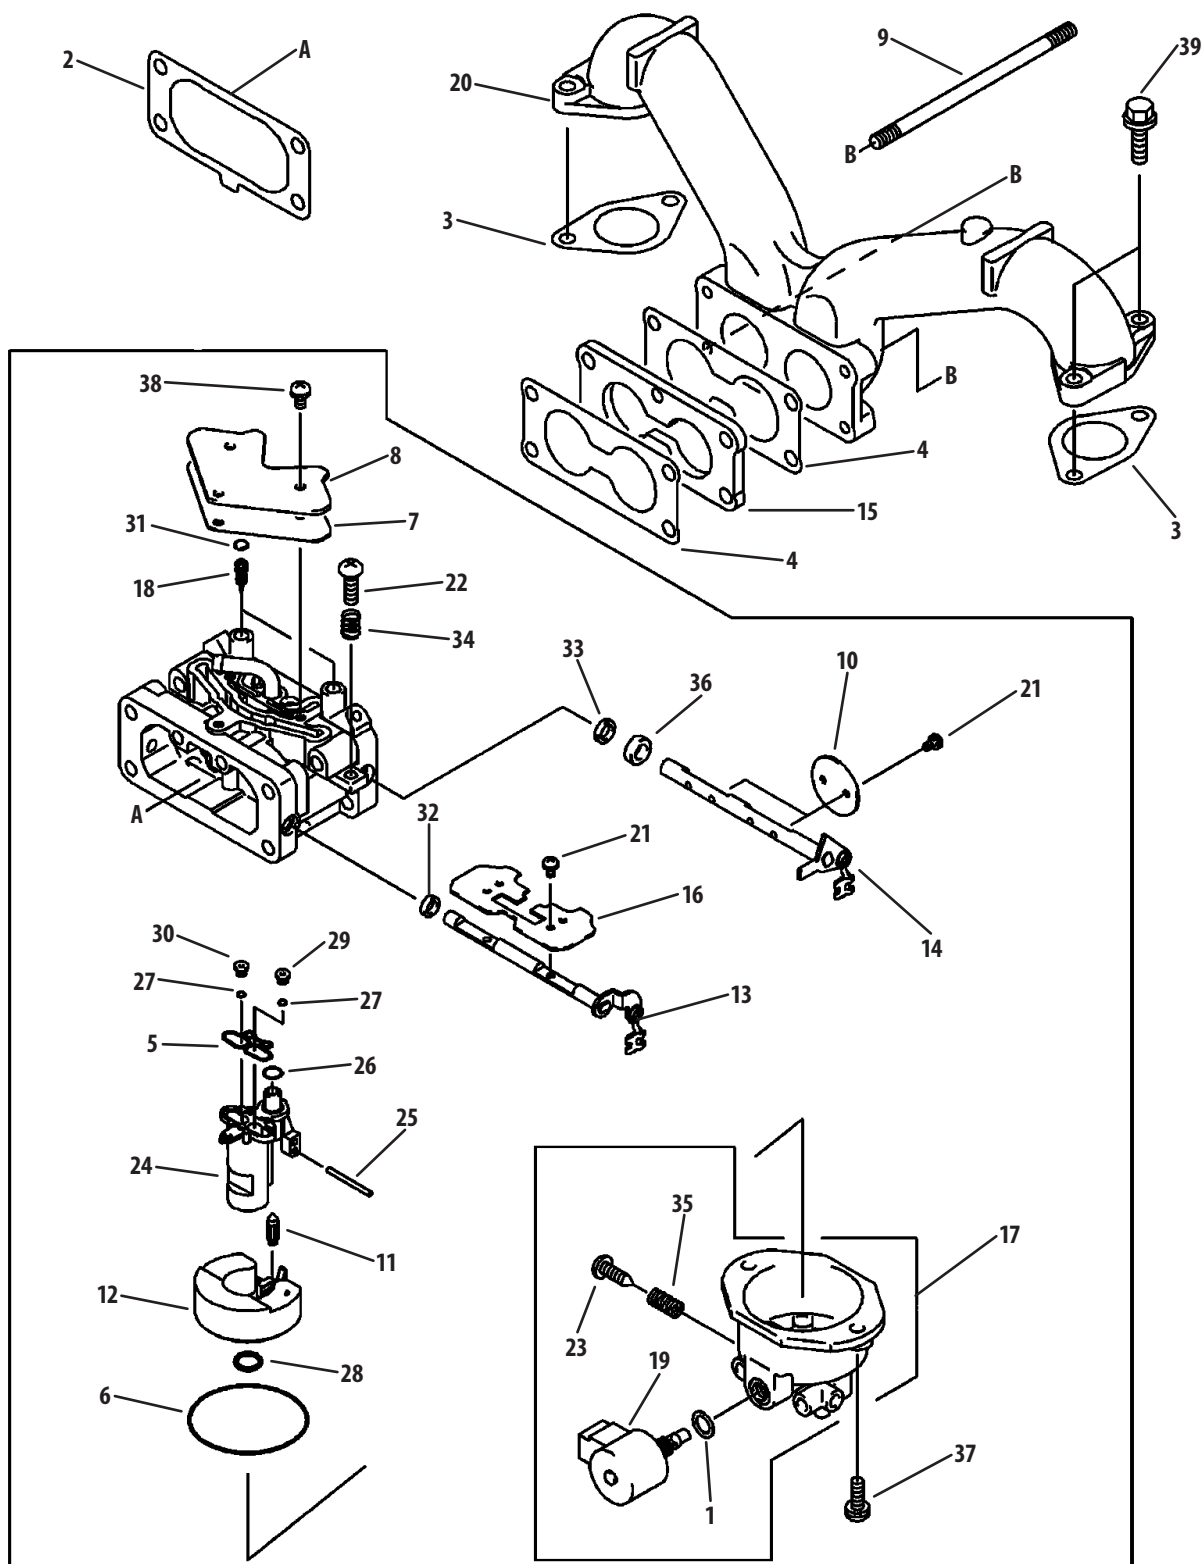


Ref.	Part Number	Description
1.	KM-11009-2056	Gasket
2.	KM-11060-7009	Air Filter Gasket
3.	KM-11060-7011	Manifold Gasket
4.	KM-11060-7024	Carburetor Gasket
5.	KM-11061-7037	Gasket
6.	KM-11061-7038	Gasket
7.	KM-11061-7039	Gasket
8.	KM-14091-7031	Cover
9.	KM-172BA06105	Stud Bolt
10.	KM-16025-7003	Throttle Valve
11.	KM-16030-7004	Float Valve
12.	KM-16031-7003	Float
13.	KM-16041-7021	Carburetor Shaft
14.	KM-16041-7025	Carburetor Shaft
15.	KM-16073-7005	Insulator
16.	KM-16126-7015	Choke Valve
17.	KM-16184-7017	Float Chamber
18.	KM-16187-7002	Jet Needle
19.	KM-21188-7003	Solenoid
20.	KM-59076-7002	Intake Manifold
21.	KM-92009-7003	Screw
22.	KM-92009-7004	Screw

Ref.	Part Number	Description
23.	KM-92009-7006	Drain Screw
24.	KM-92026-7011	Spacer
25.	KM-92043-7014	Pin
26.	KM-92055-7012	O-Ring
27.	KM-92055-7013	O-Ring
28.	KM-92055-7016	O-Ring
29.	KM-92063-7051	Main Jet, #104
—	KM-92063-7075	Main Jet, #101, 3280 FT
—	KM-92063-7076	Main Jet, #098, 6560 FT
30.	KM-92063-7056	Main Jet, #102
—	KM-92063-7079	Main Jet, #099, 3280 FT
—	KM-92063-7080	Main Jet, #096, 6560 FT
31.	KM-92066-7009	Expansion Plug
32.	KM-92093-7001	D Seal Seal, 5.9
33.	KM-92093-7002	D Seal, 6.9
34.	KM-92145-7010	Spring
35.	KM-92145-7011	Spring
36.	KM-92152-7005	Collar
37.	KM-92172-7005	Screw
38.	KM-92172-7006	Screw
39.	KM-130AA0620	Flange Bolt

Fuel Pump & Filter

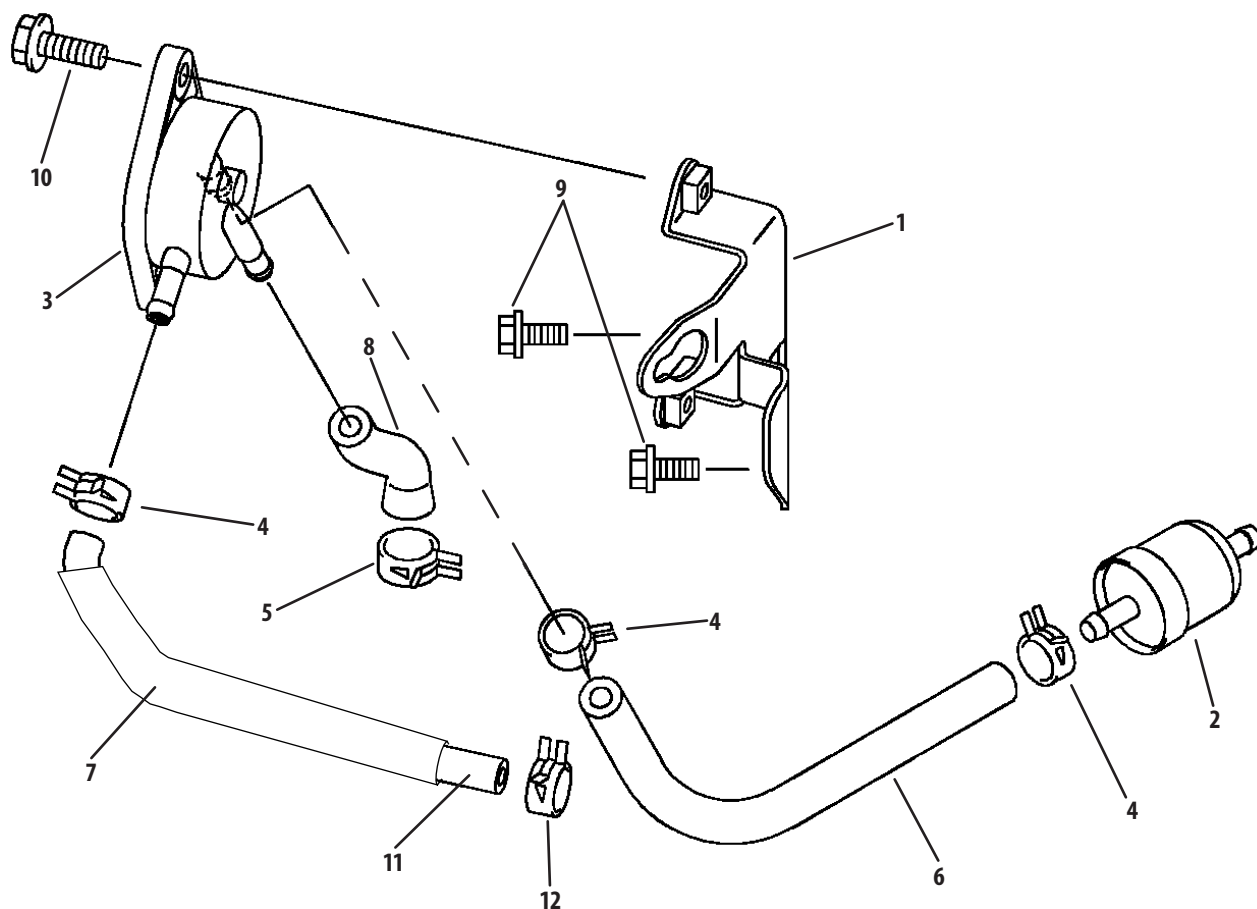


Ref.	Part Number	Description
1.	KM-23062-70049H	Bracket
2.	KM-49019-7001	Fuel Filter
3.	KM-49040-7001	Fuel Pump
4.	KM-92170-2009	Clamp
5.	KM-92170-7003	Clamp
6.	KM-92192-7037	Tube, 6.35 x 12.7 x 160
7.	KM-42036-7008	Sleeve
8.	KM-92191-7027	Tube
9.	KM-130AA0616	Flange Bolt, 6 x 16
10.	KM-130AA0620	Flange Bolt, 6 x 20
11.	KM-92192-7103	Fuel Pump
12.	KM-92170-2088	Clamp

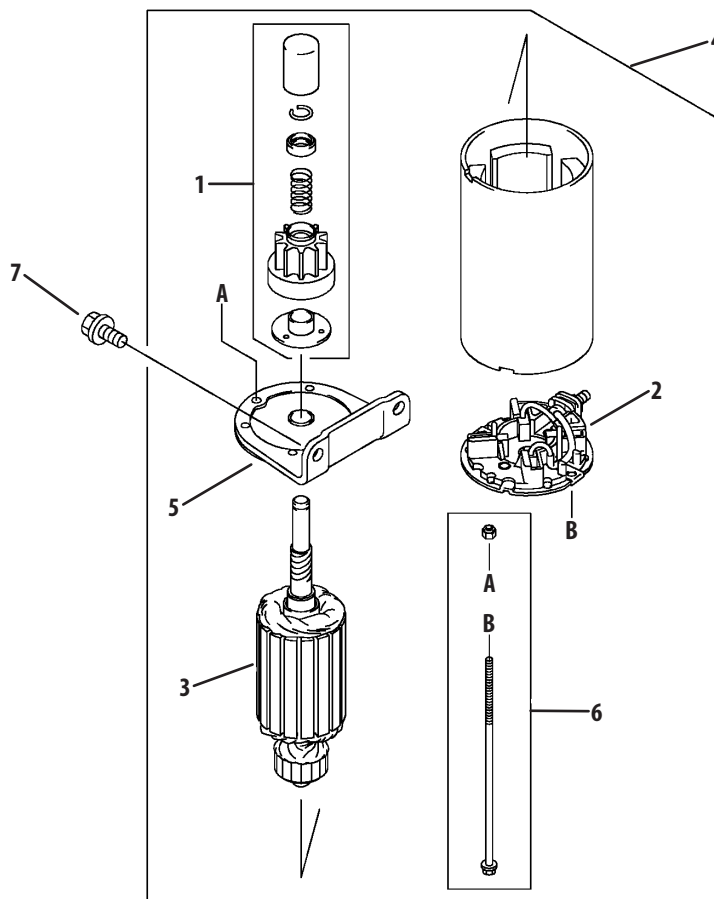


Ref.	Part Number	Description
1.	KM-13101-7003	Gear Assembly
2.	KM-21039-7004	Brush
3.	KM-21080-7001	Armature
4.	KM-21163-7022	Starter Assembly
5.	KM-39184-7004	Bracket
6.	KM-92151-7013	Bolt
7.	KM-130AA0816	Flange Bolt

Air Filter

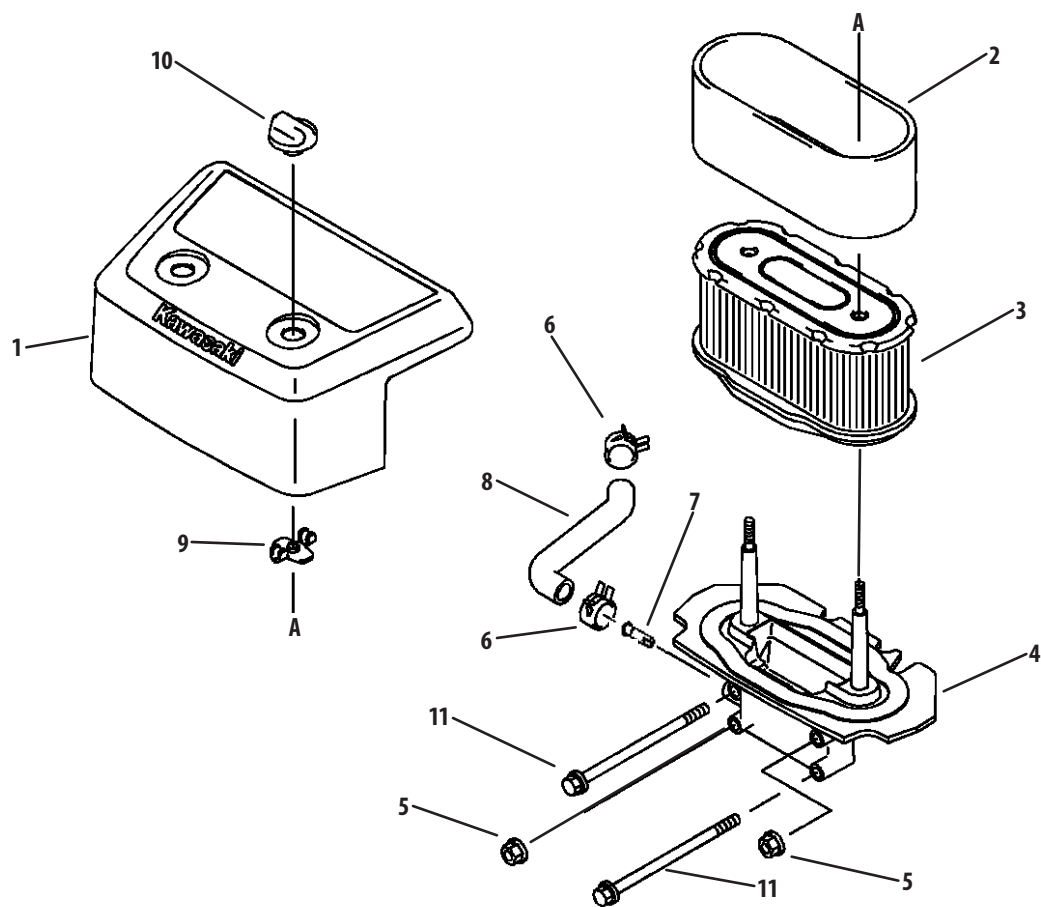

Ref.	Part Number	Description
1.	KM-11011-7042.	Air Filter Case
2.	KM-11013-7009	Air Filter Element
3.	KM-11013-7027	Air Filter Element
4.	KM-16060-7001	Intake Pipe
5.	KM-92015-1193	Nut
6.	KM-92171-7013	Clamp
7.	KM-42036-7002	Sleeve
8.	KM-92191-7006	Tube
9.	KM-92210-7004	Nut
10.	KM-92210-7019	Nut
11.	KM-130B06105	Flange Bolt

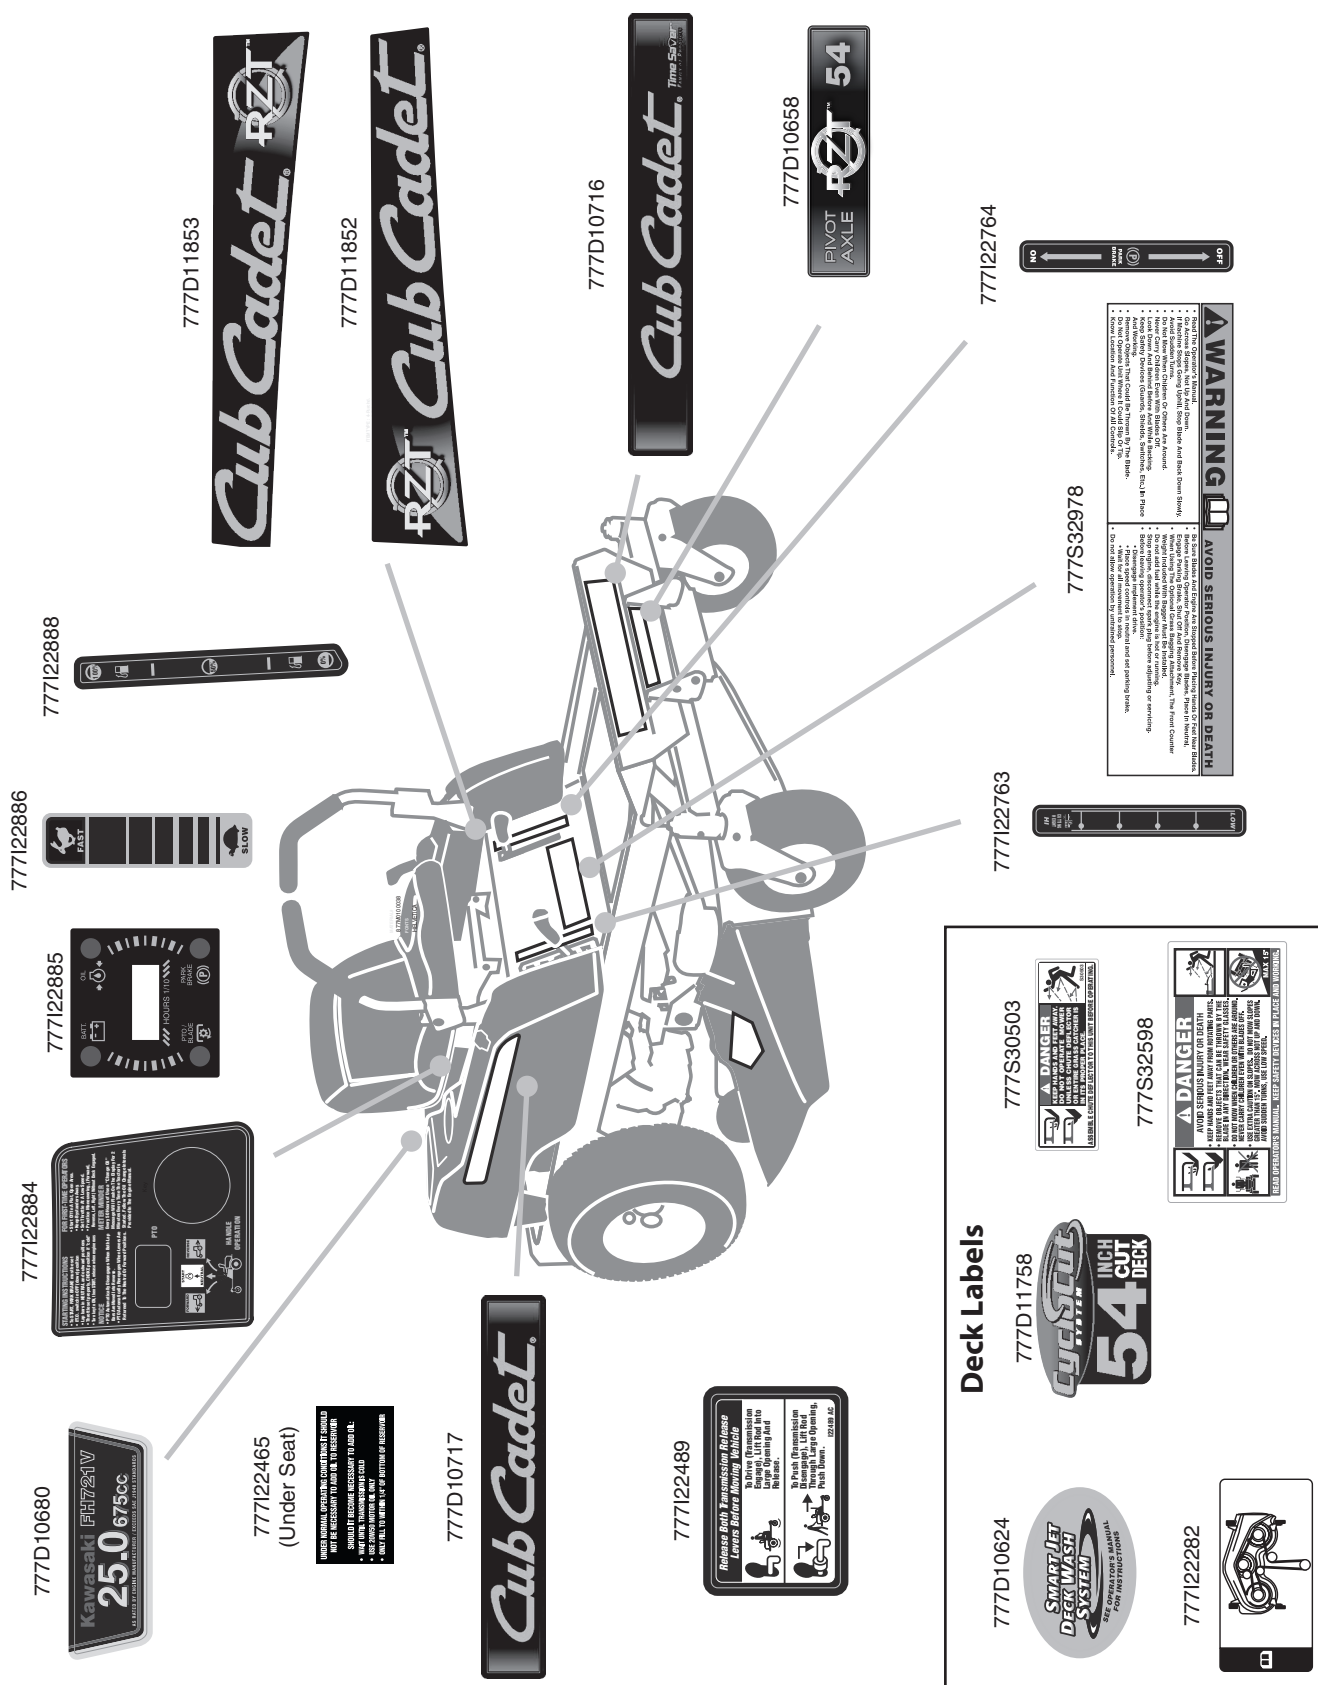



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
