 

Cub Cadet[®]

ILLUSTRATED PARTS MANUAL

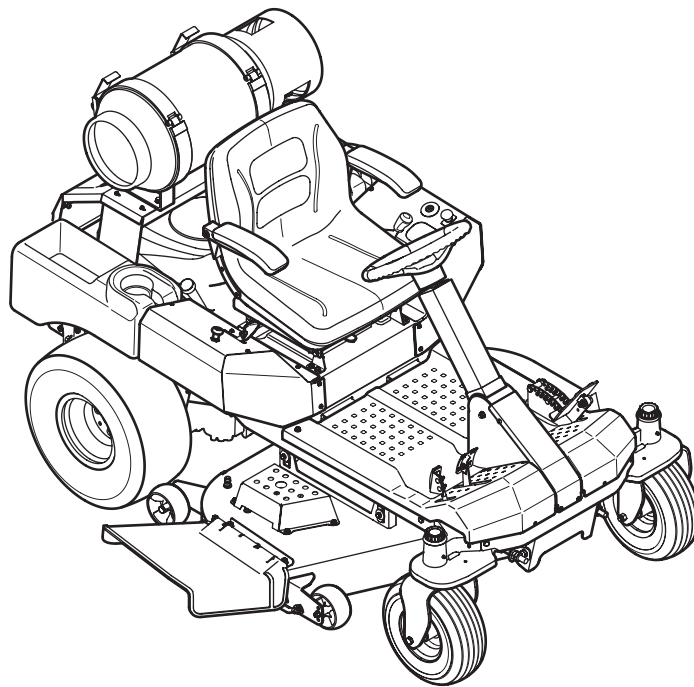

Z-Force S

Liquid Propane Gas

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Zero-Turn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Axles	14	Systems Indicator	8
Battery	8	Muffler	10
Consoles	10	PTO Lever	8
Engine, Kawasaki FR651V	24	Seat	12
Mower Deck, 42-inch	20	Solenoid	8
Mower Deck, 60-inch	22	Steering Assembly	18
Pedal Controls	16	Steering Wheel	14
Drive System (48-inch)	4	Switches, Interlock	8
Drive System (60-inch)	6	Throttle Control	10
Electrical Schematic	37	Transmission (48-inch)	4
Engine Accessories	10	Transmission (60-inch)	6
Frame	12	Wheels, Front & Rear	9
Deck Lift Handle/Linkage	3		
Propane Accessories	24		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER


--	--	--	--	--	--	--	--	--	--	--

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)


0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)

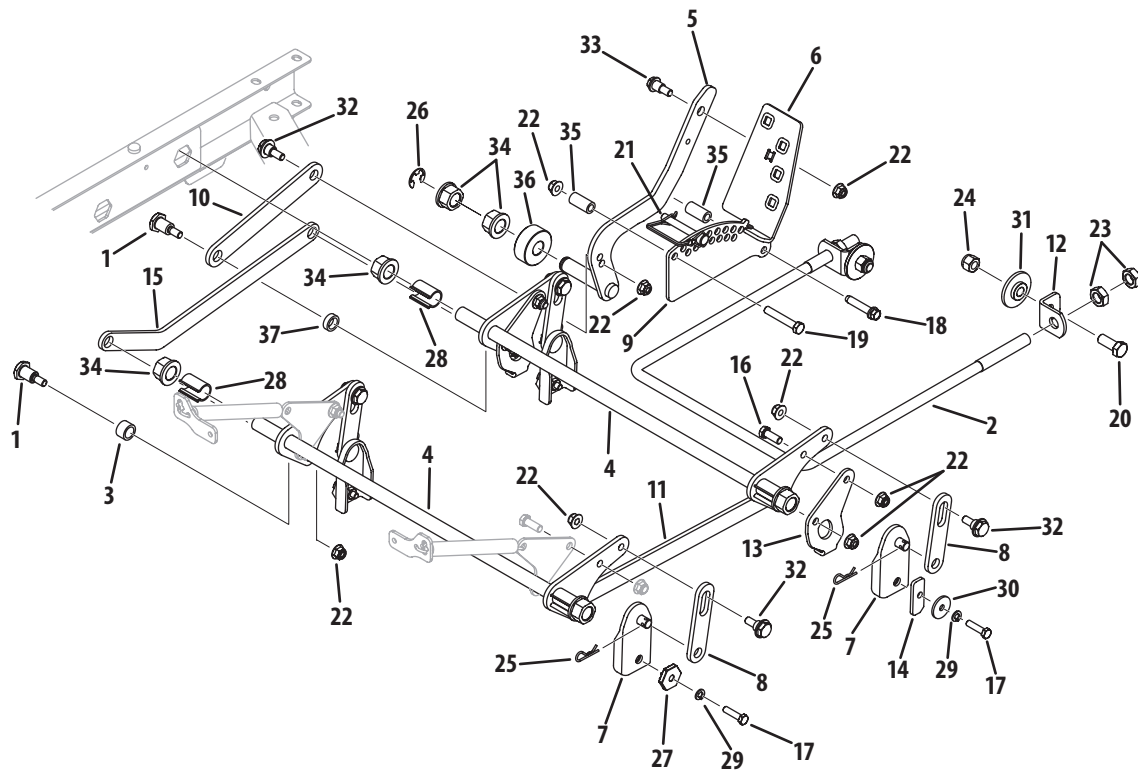 

Ref	Part Number	Description
1	01003536	Shoulder Screw, .625 x .830
2	02002879	Lift Rod
3	02005535	Spacer, .632 x .877 x .548
4	603-04741	Rock Shaft Assembly
5	603-04747	Foot Lift Pivot Assembly
6	603-04748	Lift Pedal Assembly
7	603-04771	Deck Lift Adjustment Bracket
8	703-07489	Lift Link Bracket
9	703-07540	Index Plate
10	703-07552	Pedal Link Plate
11	703-07554	Mid Link Plate
12	703-07639	Front Hanger Rod Bracket Mount
13	703-07663	Deck Up Stop Bracket
14	703-07672	Deck Lift Square Spacer
15	703-07770	Mid-Angled Link Plate
16	710-0514	Hex Screw, 3/8-16 x 1.00
17	710-0528	Hex Screw, 5/16-18 x 1.25
18	710-1008	Hex Washer Screw, 3/8-16 x 1.875
19	710-3011	Hex Screw, 3/8-16 x 2.25


Ref	Part Number	Description
20	710-3032	Hex Screw, 1/2-13 x 1.25
21	911-04160	Lock Pin, .375 x 2.25
22	712-04065	Flange Lock Nut, 3/8-16
23	912-3015	Jam Nut, 5/8-11
24	712-3083	Hex Lock Nut, 1/2-13
25	914-0145	Click Pin, .092 x 1.64
26	916-0231	E-Type Ring, .750
27	917-04074	Adjustable Deck Gear
28	731-06848	Spacer, .791 x .950 x 1.35
29	936-0119	Lock Washer, 5/16
30	736-0343	Flat Washer, .330 x 1.25 x .120
31	738-04337A	Shoulder Spacer, .9790 x .2025
32	738-04428	Shoulder Spacer, 3/8-16 x .562 x .360
33	738-1007	Shoulder Screw, 3/8-16 x .50 x .50
34	941-0598	Hex Flange Bearing, .752
35	750-04215	Spacer, .375 x .625 x 1.290
36	750-05184	Spacer, .760 x 2.000 x .790
37	750-05362	Spacer, .632 x .877 x .281

 Drive System, 48" Deck

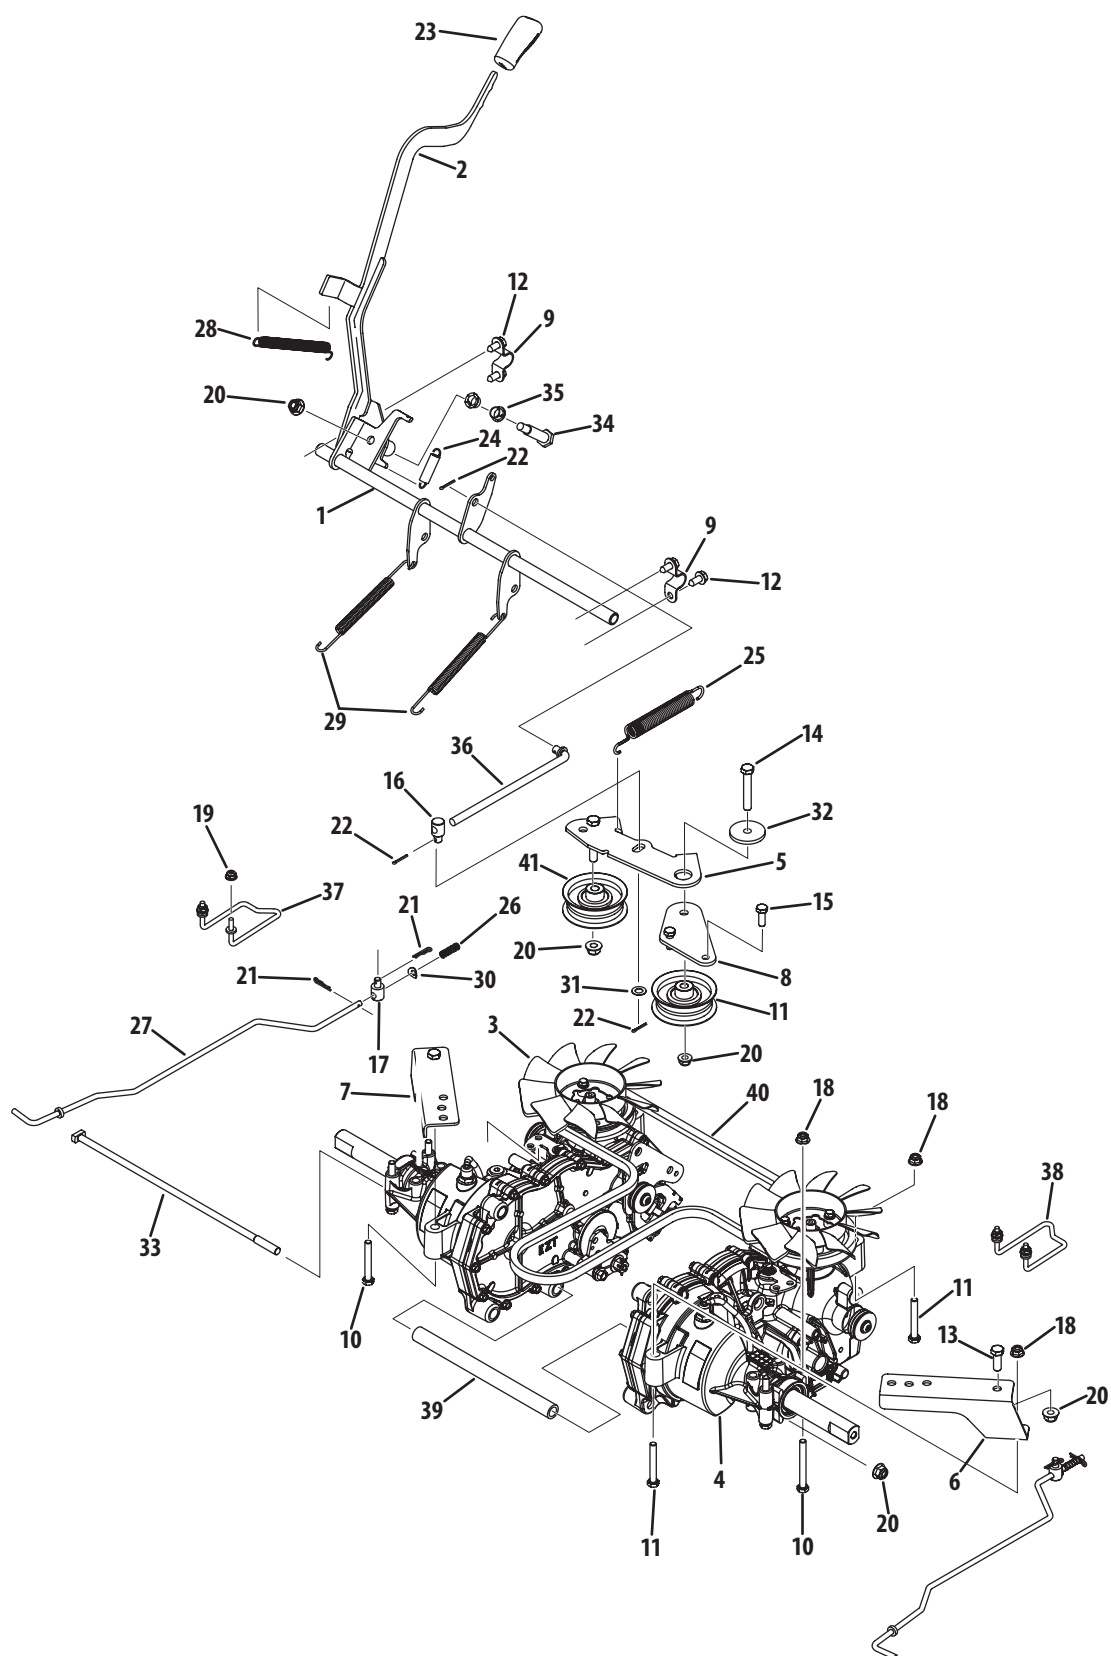

Ref.	Part Number	Description
1	603-04770	Brake Shaft Assembly
2	603-04773	Brake Handle Assembly
3	918-04868	LH Transmission Assembly
4	918-04869	RH Transmission Assembly
5	703-07318A	Idler Bracket
6	703-07367	RH Mount Bracket
7	703-07368	LH Mount Bracket
8	703-07484	Idler Mount Plate
9	703-07593	Shaft Mount Bracket
10	710-0176	Hex Screw, 5/16-18 x 2.75
11	710-0395	Hex Screw, 5/16-18 x 2.25
12	710-04484	Hex Washer Screw, 5/16-18 x .750
13	710-0514	Hex Screw, 3/8-16 x 1.00
14	710-3011	Hex Screw, 3/8-16 x 2.25
15	710-3038	Hex Screw, 5/16-18 x .875
16	711-0832	Ferrule, 3/8-24 x .375
17	711-1530	Ferrule, .325 x .312
18	712-04063	Flange Lock Nut, 5/16-18
19	712-04064	Flange Lock Nut, 1/4-20
20	712-04065	Flange Lock Nut, 3/8-16
21	914-0104	Cotter Pin, .072 x 1.13
22	914-0507	Cotter Pin, 3/32 x .750
23	731-04735	Selector Handle
24	932-0209	Extension Spring, .48 x 2.03
25	732-04229	Extension Spring, .75 x 6.02
26	732-0437	Compression Spring, .34 x 1.0
27	732-04688A	Transmission Bypass Lever Wire
28	732-0963	Extension Spring, .50 x 6.37
29	732-0994	Extension Spring, .500 x 7.0
30	936-0175	Spring Washer, .265 x .562 x .025
31	936-0314	Thrust Washer, .375 x .70 x .030
32	738-04392	Shoulder Spacer, .884 x .190
33	738-04423	Rod, .328 x 14.00
34	938-0533	Shoulder Screw, .498 x 1.635
35	741-0491	Flange Bearing, .500 x .34
36	747-05139A	Disengage Brake Rod
37	747-05277	LH Keeper Rod
38	747-05278	RH Keeper Rod
39	750-05347	Transmission Spacer, 9.40
40	954-04250	Belt
41	756-04224	Flat Idler Pulley, 2.75

 
Drive System, 60" Deck

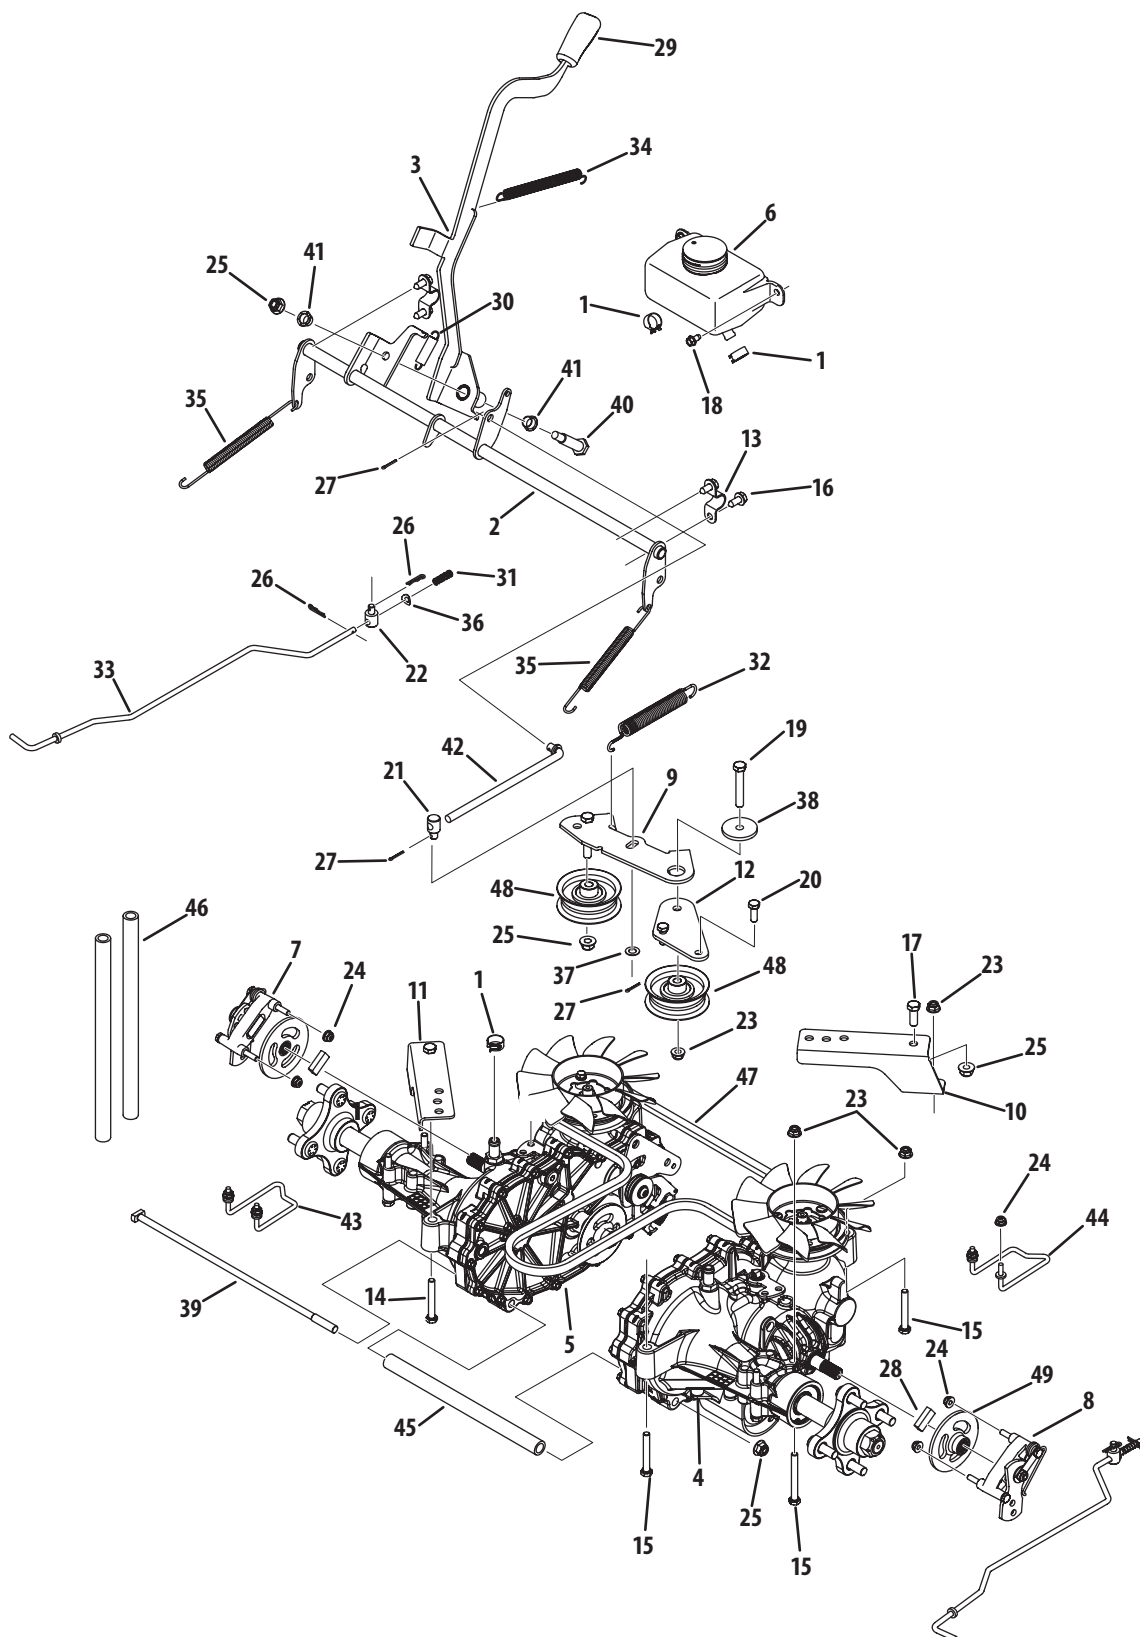

Drive System, 60" Deck


Ref.	Part Number	Description
1	02001111	Hose Clamp, ½"
2	603-04757	Brake Shaft Assembly
3	603-04773	Brake Handle Assembly
4	918-04875	RH Transmission Assembly
5	918-04876	LH Transmission Assembly
6	931-04223	Expansion Tank Assembly
7	961-04053	LH Brake Assembly
8	961-04054	RH Brake Assembly
9	703-07318A	Idler Bracket
10	703-07367	RH Mount Bracket
11	703-07368	LH Mount Bracket
12	703-07484	Idler Mount Plate
13	703-07593	Shaft Mount Bracket
14	710-0176	Hex Screw, ⅝-18 x 2.75
15	710-0395	Hex Screw, ⅝-18 x 2.25
16	710-04484	Hex Washer Screw, ⅝-18 x .750
17	710-0514	Hex Screw, ⅜-16 x 1.00
18	710-0599	Hex Washer Screw, ¼-20 x .500
19	710-3011	Hex Screw, ⅜-16 x 2.25
20	710-3038	Hex Screw, ⅝-18 x .875
21	711-0832	Ferrule, ⅜-24 x .375
22	711-1530	Ferrule, .325 x .312
23	712-04063	Flange Lock Nut, ⅝-18
24	712-04064	Flange Lock Nut, ¼-20
25	712-04065	Flange Lock Nut, ⅜-16

Ref.	Part Number	Description
26	914-0104	Cotter Pin, .072 x 1.13
27	914-0507	Cotter Pin, ⅜ x .750
28	917-0678	Brake Pad
29	731-04735	Selector Handle
30	932-0209	Extension Spring, .48 x 2.03
31	732-0335	Compression Spring, .405 x 1.17
32	732-04229	Extension Spring, .75 x 6.02
33	732-04688A	Transmission Bypass Lever Wire
34	732-0963	Extension Spring, .50 x .637
35	732-0994	Extension Spring, .500 x 7.0
36	936-0175	Spring Washer, .265 x .562 x .025
37	936-0314	Thrust Washer, .375 x .70 x .030
38	738-04392	Shoulder Spacer, .884 x .190
39	738-04423	Rod, .328 x 14.00
40	938-0533	Shoulder Screw, .498 x 1.635
41	741-0491	Flange Bearing, .500 x .34
42	747-05139A	Disenage Brake Rod
43	747-05277	LH Rod Keeper
44	747-05278	RH Rod Keeper
45	750-05346	Transmission Spacer, 10.5
46	751-11531	Fuel Hose, ½ x 12.00
47	954-04250	Belt
48	756-04224	Flat Idler Pulley, 2.75
49	761-04061	Brake Disc

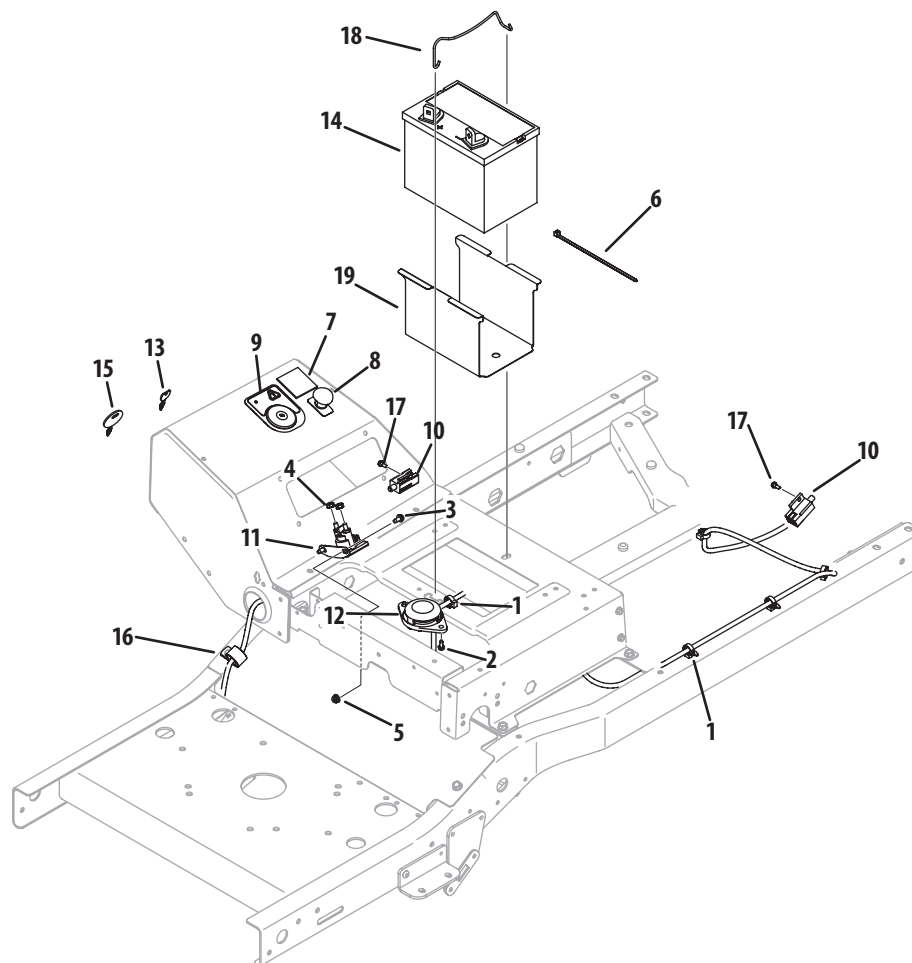 


Ref	Part Number	Description
1	02003037	Electrical Conduit Clip, ½
2	710-04261	Hex Washer Screw, #12-16 x .50
3	710-0599	Hex Washer Screw, ¼-20 x 0.500
4	712-0271	Sems Nut, ¼-20
5	712-04064	Flange Lock Nut, ¼-20
6	725-0157	Cable Tie, ¾ x .05 x 7.4
7	925-04022B	Hour Meter/Service Minder
8	925-04175	Electric PTO Switch
9	925-04227B	Key Switch
10	725-04363	Interlock Switch

Ref	Part Number	Description
11	725-04439	Solenoid
12	725-05058	Seat Switch
13	925-1745A	Universal Key Switch
14	925-1707D	Battery
15	925-2054A	Key
16	726-0475	Clamp, 1.0
17	738-04237A	Shoulder Screw, #10-32 x .500
18	747-04121A	Battery Rod
19	783-0349	Battery Tray
NS	925-04106	Harnesss Assembly

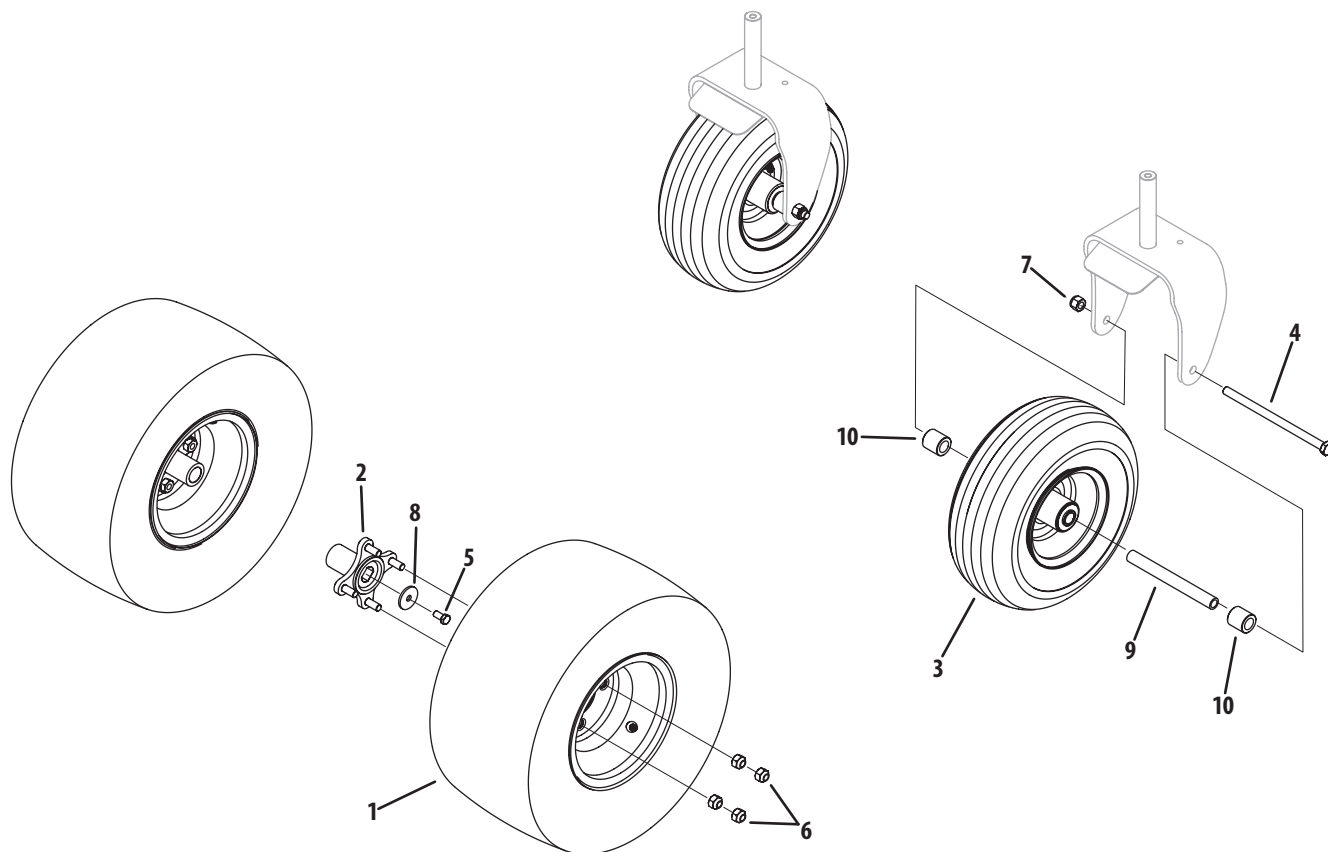 

Ref.	Part Number	Description
1	634-04128	Wheel Assy., 18 x 9.5-8 (48" Deck)
—	02003490	Wheel Assy., 20 x 10.00 x 10 (60")
2	918-04317	Wheel Hub Assembly (60" only)
3	634-04629	Complete Wheel Assy., 13 x 5.0-6
4	710-04999	Hex Screw, 1/2-13 x 8.5
5	710-3119	Hex Screw, 3/8-16 x .750 (60" Only)
6	712-3050	Lug Nut, 7/16-14
7	712-3083	Hex Lock Nut, 1/2-13
8	736-0227	Flat Washer, .390 x 1.500 x .134 (60" Only)
9	750-05351	Spacer, .51 x .75 x 1.25
10	750-05352	Hub, .76 x 1.23 x 1.25

 
Engine Connections

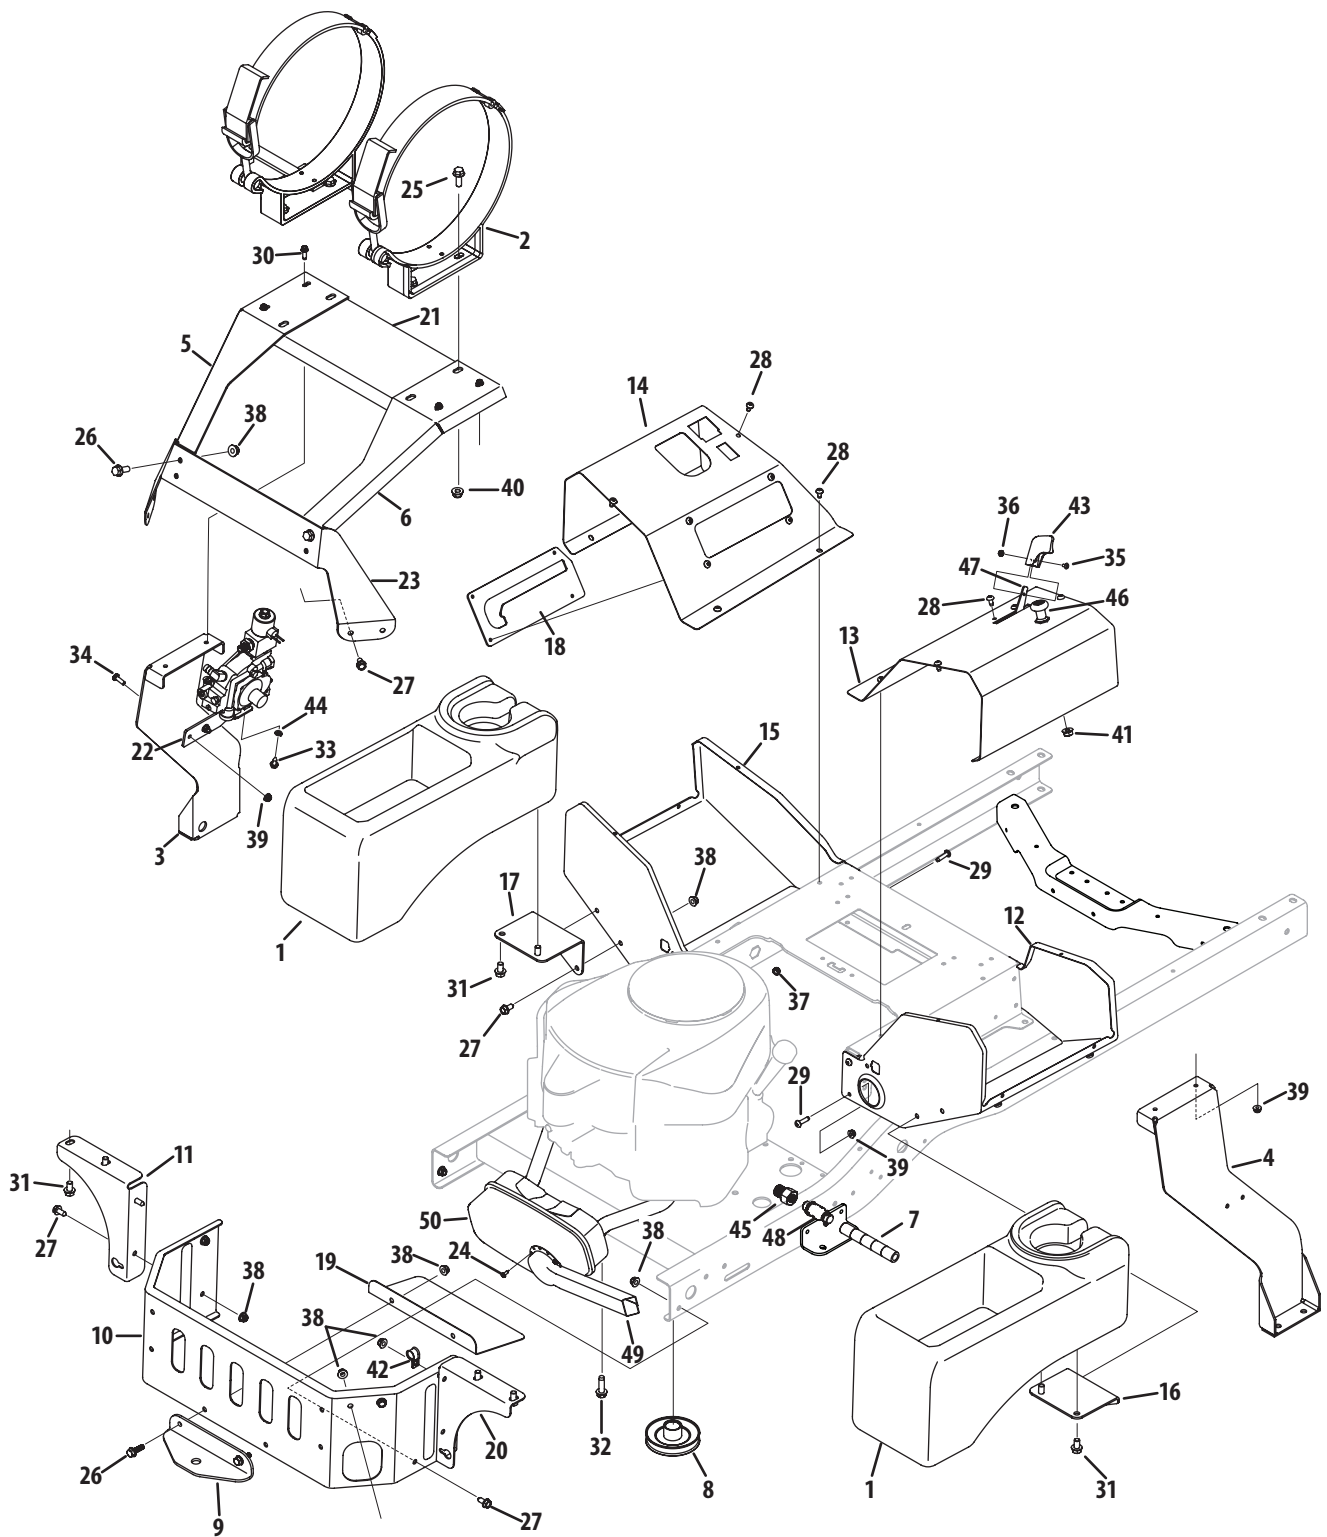

Ref.	Part Number	Description
1	01008138P	Utility Bin
2	680-00113	LP Tank Mount Bracket Assembly
3	680-00128	LH Mount Bracket Assembly
4	680-00129	RH Mount Bracket Assembly
5	680-00130	LH Stiffner Bracket Assembly
6	680-00131	RH Stiffner Bracket Assembly
7	751-3141-14	Oil Drain Extension Hose
8	756-04415	PTO Pulley
9	703-07543	Hitch Bracket
10	703-07570	Bumper Bracket
11	703-07574	LH Fuel Tank Support Bracket
12	703-07583A	RH Lower Console
13	703-07584	RH Upper Console
14	703-07585	LH Upper Console
15	703-07588A	LH Lower Console
16	703-07605A	RH Tank Support Bracket
17	703-07610A	LH Tank Support Bracket
18	703-07627	Parking Brake Lock Bracket
19	703-07658	Muffler Mount Bracket
20	703-07674	RH Fuel Tank Support Bracket
21	703-07736	LPG Tank Mount Plate
22	703-07737A	LPG Regulator Mount Bracket
23	703-07756	LPG Upper Bumper Bracket
24	710-0227	Hex Washer Screw, #8-18 x 0.500
25	710-04042	Hex Flange Screw, 3/8-16
26	710-04048	Hex Flange Screw, 5/16-18 x 1.0


Ref.	Part Number	Description
27	710-04484	Hex Washer Screw, 5/16-18 x .750
28	710-05070	Torx Screw, 1/4-20 x .5
29	710-05074	Torx Screw, 1/4-20 x 1.0
30	710-0642	Hex Washer Screw, 1/4-20 x 0.750
31	710-0870	Hex Washer Screw, 3/8-16 x .625
32	710-1315	Hex Washer Screw, 3/8-16 x 1.250
33	710-1652	Hex Washer Screw, 1/4-20 x .625
34	710-3015	Hex Screw, 1/4-20 x .75
35	710-3217	Machine Screw, #8-2 x 0.375
36	712-0142	Hex Nut, #8-32
37	712-0271	Sems Nut, 1/4-20
38	712-04063	Flange Lock Nut, 5/16-18
39	712-04064	Flange Lock Nut, 1/4-20
40	712-04065	Flange Lock Nut, 3/8-16
41	912-3005	Flange Lock Nut, 3/8-16
42	726-0272	Clamp, 3/16
43	731-06593	Throttle Knob
44	936-0329	Lock Washer, 1/4
45	737-04138	Hex Fitting, 1.0
46	746-04057	Choke Cable, 45.5 x 1.5
47	746-1086	Throttle Cable
48	951-10517A	Oil Drain
49	751-11424	Long Muffler Deflector
50	751-11471	Kawasaki Twin Muffler
NS	725-0157	Cable Tie, 3/16 x .05 x 7.4
NS	725-05107	Wiring Harness

 Seat & Frame

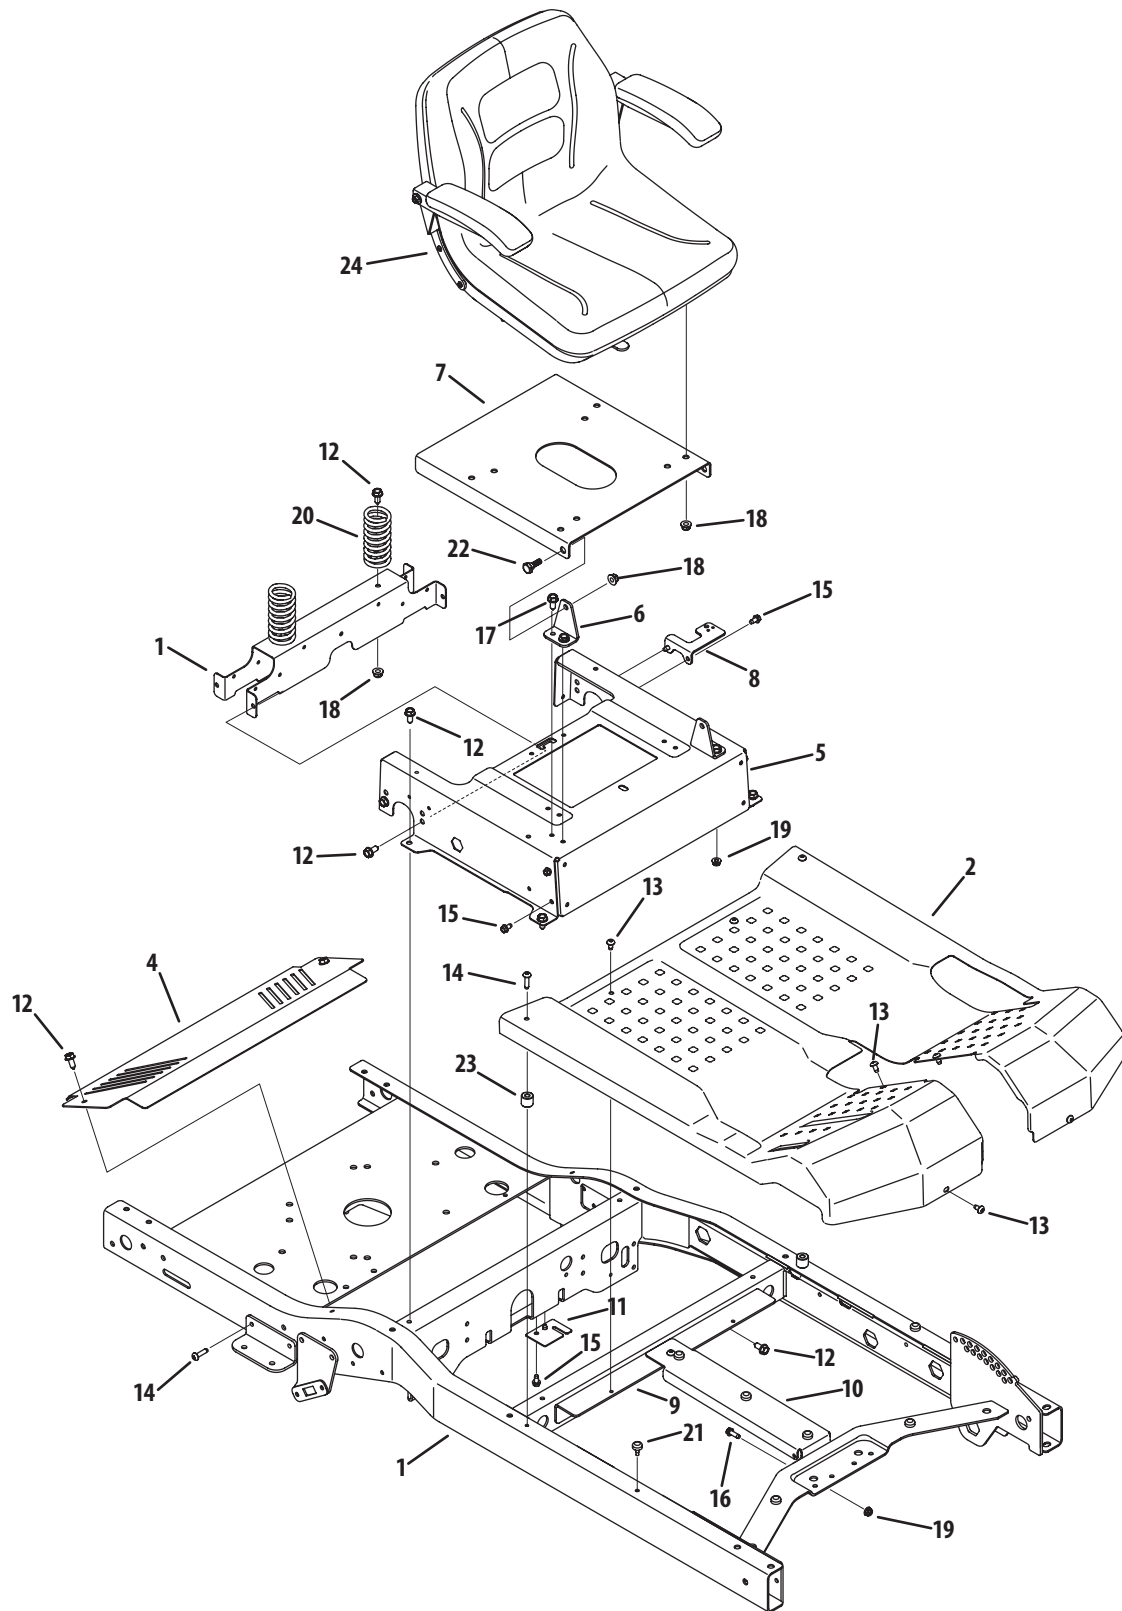

Ref.	Part Number	Description
1	603-04717A	Frame Assembly
2	703-07315	Floor Board
3	703-07391	Seat Bracket
4	703-07473	Transmission Cover
5	703-07483	Seat Mount Frame
6	703-07626A	Pivot Seat Bracket
7	703-07668	Seat Base
8	703-07696	Brake Switch Mount Bracket
9	703-07729	Running Board Mount Bracket
10	703-07730	Floor Pan Frame Support
11	703-07765A	Guide Plate
12	710-04484	Hex Washer Screw, 5/16-18 x .750
13	710-05070	Screw, 1/4-20 x .5
14	710-05074	Screw, 1/4-20 x 1.0
15	710-0599	Screw, 1/4-20 x .500
16	710-0642	Screw, 1/4-20 x .750
17	710-3015	Hex Screw, 1/4-20 x .75
18	712-04063	Flange Lock Nut, 5/16-18
19	712-04064	Flange Lock Nut, 1/4-20
20	732-04561	Comp. Spring, 1.71 x 3.735 x .238
21	735-0271A	Bumper, .62 x .3
22	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
23	750-05373	Spacer, .281 x .750 x .680
24	757-04070	Front Cut Seat w/ Arms

 Steering Column & Axles

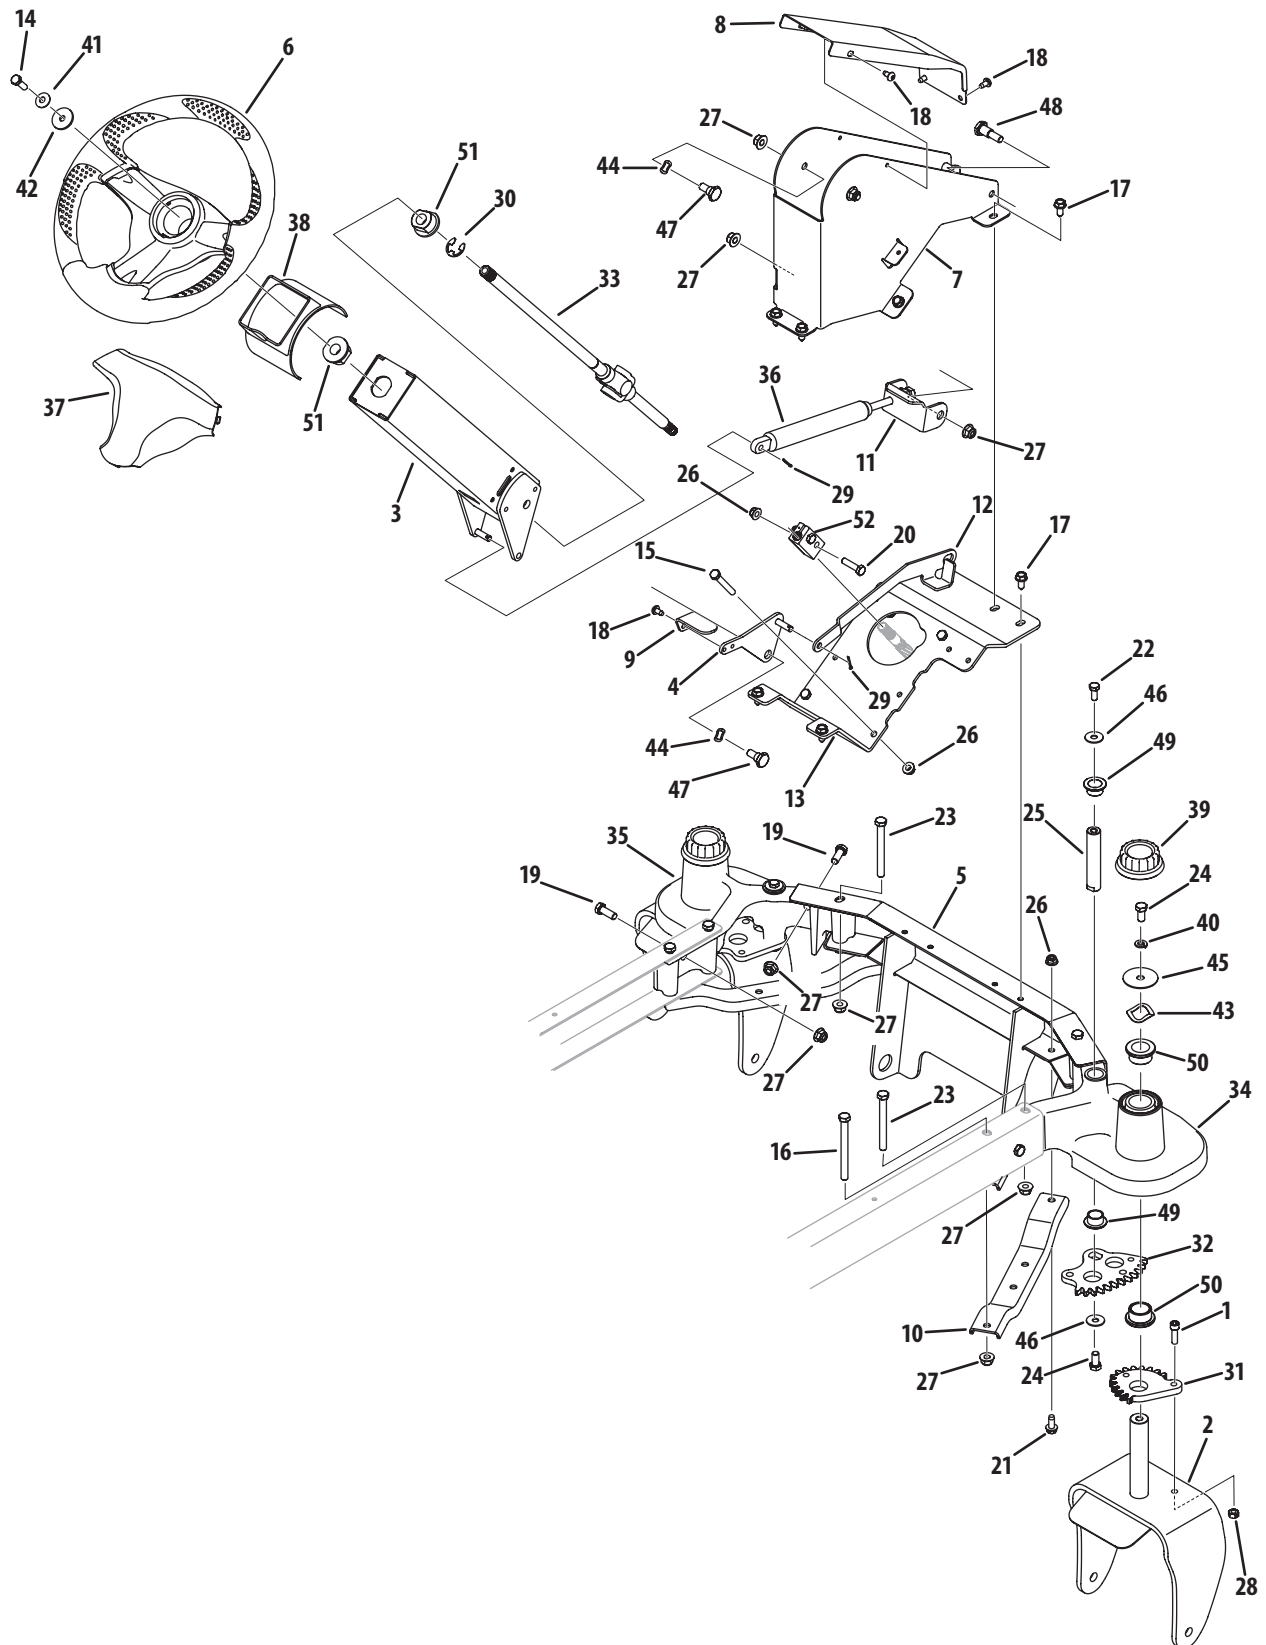


Steering Column & Axles

Ref.	Part Number	Description
1	02004124	Socket Head Screw, $\frac{5}{16}$ -18 x 1.00
2	603-04713	Caster Bracket Assembly
3	603-04755	Upper Steering Column Assembly
4	603-04767	Tilt Release Pedal Assembly
5	603-04772	Front Bumper Frame Assembly
6	631-04008A	Steering Wheel Assembly
7	703-07349	Lower Steering Wheel Column
8	703-07352	Lower Column Cover
9	703-07424	Tilt Steering Pedal
10	703-07486	Front Fram Brace
11	703-07611	Damper Pivot Lower Bracket
12	703-07613	Tilt Action Lever
13	703-07624	Steering Mount Box Plate
14	710-0376	Hex Screw, $\frac{5}{16}$ -18 x 1.00
15	710-0395	Hex Screw, $\frac{5}{16}$ -18 x 2.25
16	710-0411	Hex Screw, $\frac{3}{8}$ -16 x 4.00
17	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
18	710-05070	Screw, $\frac{1}{4}$ -20 x .5
19	710-0514	Hex Screw, $\frac{3}{8}$ -16 x 1.00
20	710-0528	Hex Screw, $\frac{5}{16}$ -18 x 1.25
21	710-1260A	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
22	710-1880	Hex Screw, $\frac{5}{16}$ -18 x .75
23	710-3085	Hex Screw, $\frac{3}{8}$ -16 x 3.50
24	710-3119	Hex Screw, $\frac{3}{8}$ -16 x .750
25	711-05281	Pivot Gear Steering Shaft
26	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18

Ref.	Part Number	Description
27	712-04065	Flange Lock Nut, 3/8-16
28	912-3009	Hex Lock Nut, $\frac{5}{16}$ -18
29	914-0507	Cotter Pin, $\frac{3}{32}$ x .750
30	916-0231	E-Ring, .750
31	717-04692	13-Tooth Variable Spur Gear
32	717-04696	12-Tooth Variable Gear
33	717-04711	Steering Shaft
34	719-04544	RH Flange Bearing Caster Pivot Axle
35	719-04545	LH Flange Bearing Caster Pivot Axle
36	927-04320	Locking Damper Cylinder, 80MM
37	731-04532B	Steering Wheel Cover
38	731-07358A	Column Cover
39	931-3020	Hubcap
40	936-0169	Lock Washer, $\frac{3}{8}$
41	736-0242	Bell Washer, .340 x .872 x .060
42	736-0343	Flat Washer, .330 x 1.25 x .120
43	936-0447	Wave Washer, 1.5 x 1.0 x .029
44	936-0504	Wave Washer, .510 x .750 x .017
45	736-3040	Flat Washer, .406 x 1.92 x .060
46	736-3078	Flat Washer, .344 x 1.00 x .063
47	738-0143	Shoulder Bolt, $\frac{3}{8}$ -16 x .496 x .336
48	938-0148	Shoulder Screw, $\frac{3}{8}$ -16 x .50 x .66
49	741-0338	Flange Bearing, $\frac{3}{4}$ x .52
50	941-0558	Flange Bearing, 1.0 x 1.25 x 1.62
51	948-0209	Flange Bearing, .630 x 1.50
52	748-04139	Steering Shaft Block

 Steering Linkage & Pedal Controls

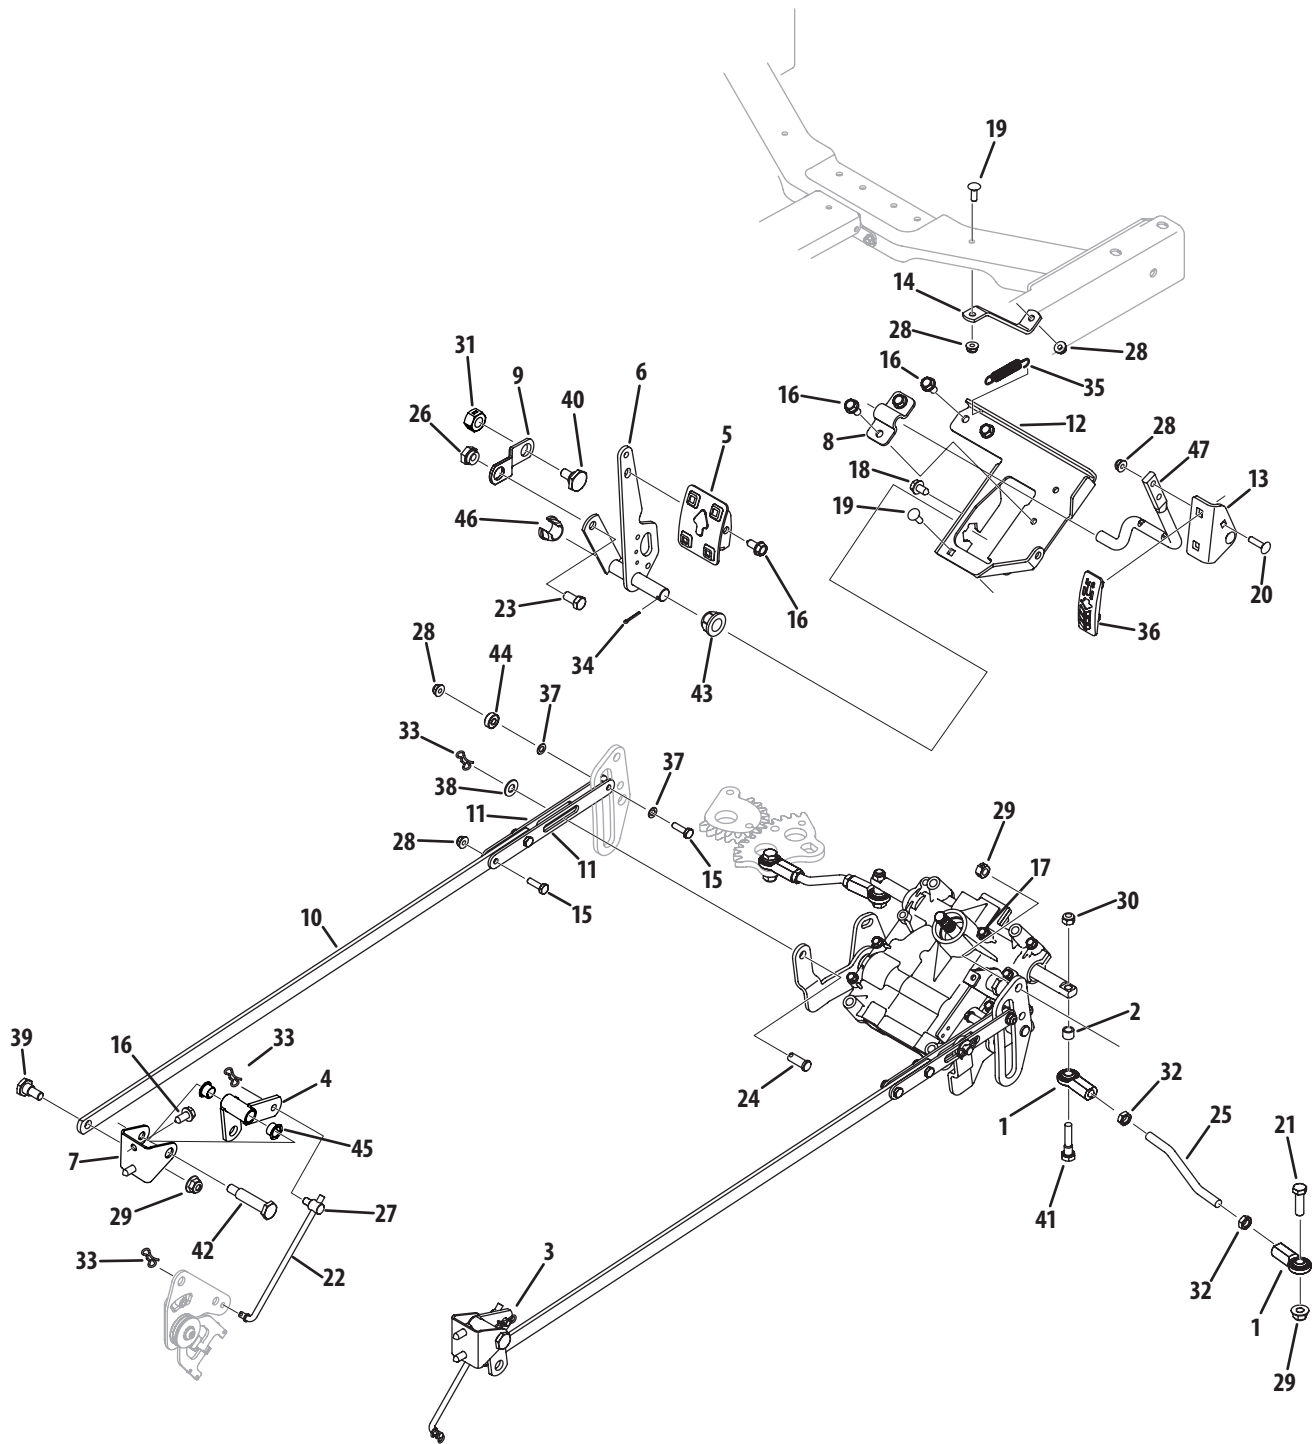


Steering Linkage & Pedal Controls

Ref.	Part Number	Description
1	01000451	Female Ball Joint, 3/8-24
2	02003170	Spacer, 344 x .500 x .375
3	603-04736	Right Pivot Arm Assembly
4	603-04737	Left Pivot Arm Assembly
5	603-04752	Forward Pedal Assembly
6	603-04765	Forward Bracket Assembly
7	703-07455	Pivot Mount Bracket
8	703-07465	Reverse Bearing Bracket
9	703-07466A	Control Bracket
10	703-07566	Hydro Link Plate
11	703-07567	Steering Link Plate
12	703-07642A	Pedal Mount Bracket
13	703-07675	Reverse Pedal Bracket
14	703-07786	Pedal Mount Plate Support Bracket
15	710-0206	Hex Screw, 1/4-20 x .875
16	710-04484	Hex Washer Screw, 5/16-18 x .750
17	710-0599	Hex Washer Screw, 1/4-20 x .500
18	710-0604A	Hex Washer Screw, 5/16-18 x .625
19	710-0703	Carriage Screw, 1/4-20 x .75
20	710-0932	Carriage Screw, 1/4-20 x 1.00
21	710-3005	Hex Screw, 3/8-16 x 1.25
22	747-05311	Hydro Control Rod
23	710-3119	Hex Screw, 3/8-16 x .750
24	711-0173	Clevis Pin, .375 x .969

Ref.	Part Number	Description
25	711-05270	Rod, 3/8 x 5.0
26	711-05274	Neutral Adjustment Hub
27	711-05364	Adjustment Ferrule, 1/4-28 x 1.000
28	712-04064	Flange Lock Nut, 1/4-20
29	712-04065	Flange Lock Nut, 3/8-16
30	912-0411	Hex Lock Nut, 5/16-24
31	912-3000	Hex Lock Nut, 3/8-16
32	912-3001	Jam Nut, 3/8-24
33	714-04040	Bow-Tie Cotter Pin, 72
34	914-0507	Cotter Pin, 3/32 x .750
35	932-04262	Extension Spring, .429 x 2.515
36	735-04113	Reverse Foot Pad
37	736-04299	Flat Washer, .281 x .50 x .04
38	936-0864	Thrust Washer, .375 x .812 x .060
39	738-0143	Shoulder Bolt, 3/8-16 x .496 x .336
40	738-0322A	Shoulder Screw, .625 x .217
41	738-04427	Shoulder Screw, 375 x .48
42	738-0509	Shoulder Screw, .500 x 1.825
43	941-0225	Hex Flange Bearing
44	741-04280	Ball Bearing, .25 x .6875 x .25
45	741-0491	Flange Bearing, .500 x .34
46	741-3065B	Hex Flange Bearing, .628
47	747-05174	Reverse Pedal Rod

 Steering Assembly

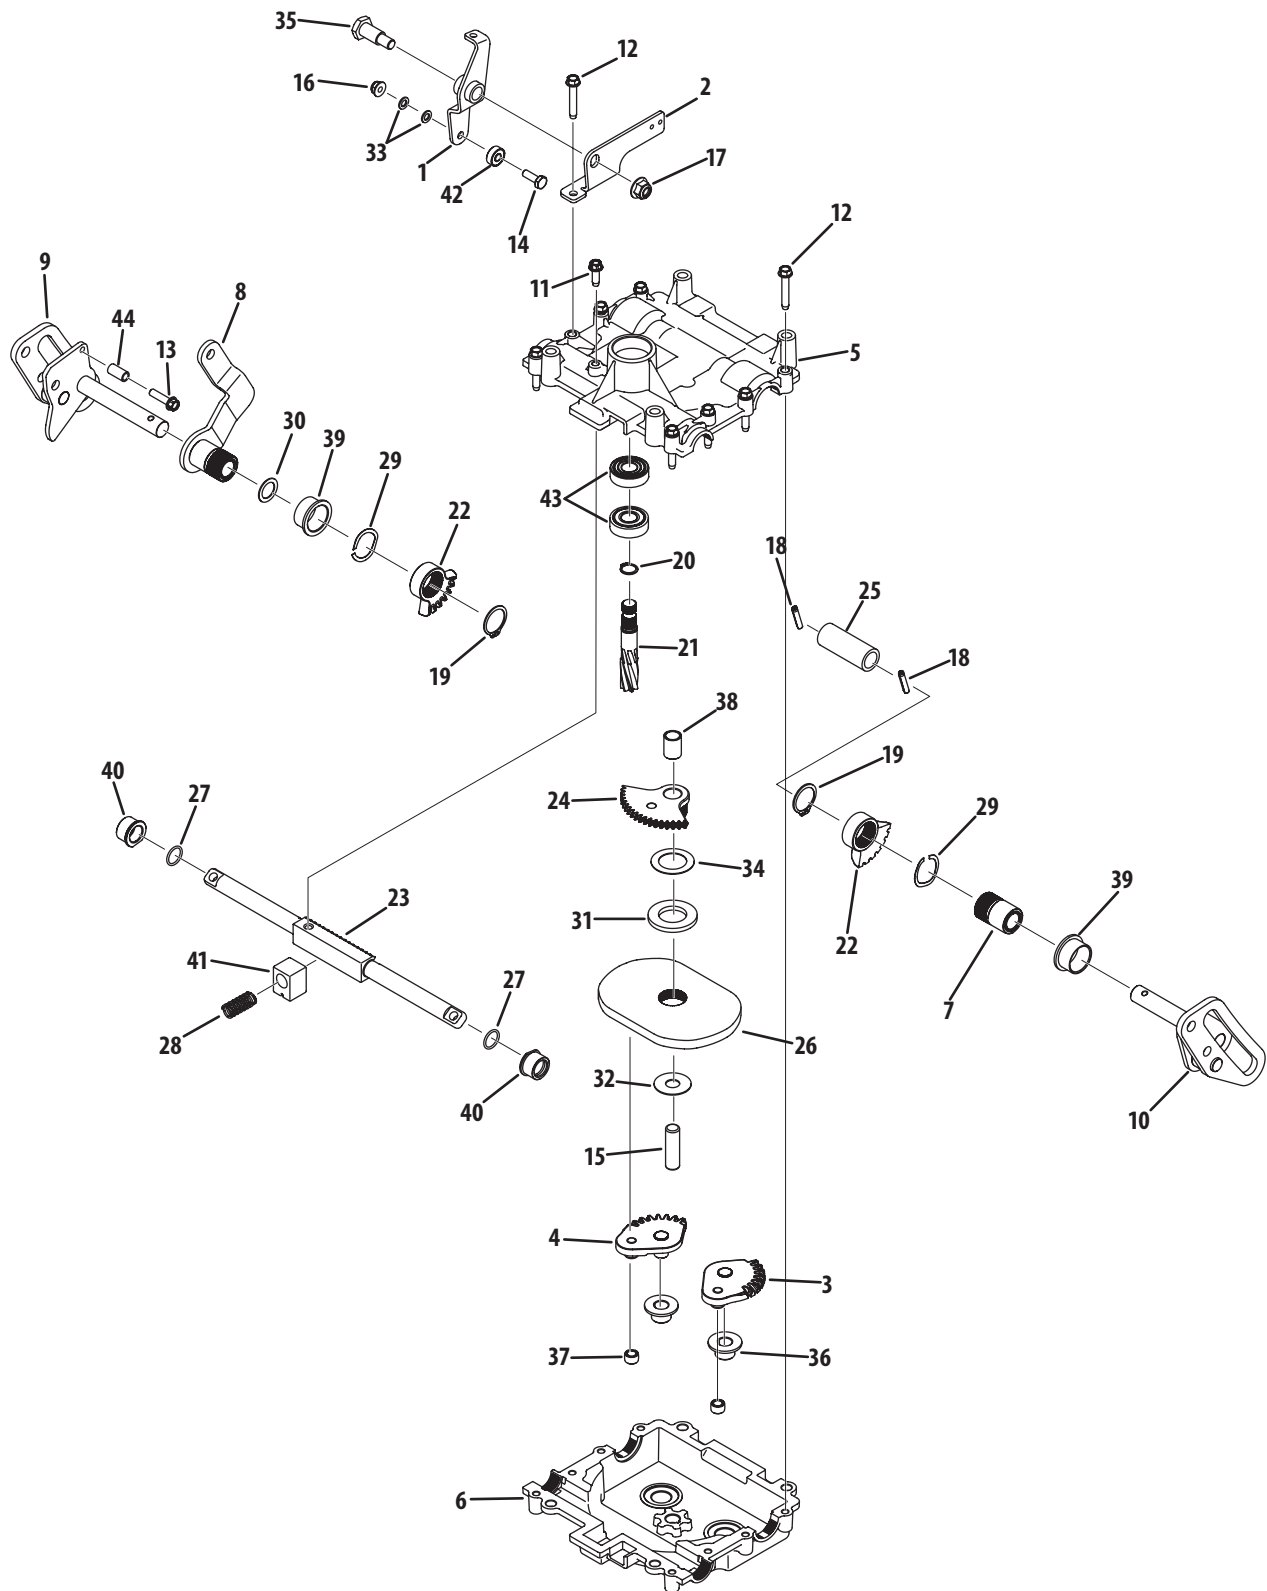


Steering Assembly

Ref.	Part Number	Description
1	603-04776	Cam Plate Assembly
2	603-04777	Neutral Bracket
3	617-04047	LH Steering Gear Assembly
4	617-04048	RH Steering Gear Assembly
5	919-04261	Upper Steering Housing
6	919-04262	Lower Steering Housing
7	647-04191	Vertical Hydro LH Arm Assembly
8	647-04192	Vertical Hydro RH Arm Assembly
9	647-04208	RH Cam Assembly
10	647-04209	LH Cam Assembly
11	710-0642	Hex Washer Screw, ¼-20 x 0.750
12	710-0778	Hex Washer Screw, ¼-20 x 1.500
13	710-0788	Hex Washer Screw, ¼-20 x 1.000
14	710-3015	Hex Screw, ¼-20 x .75
15	911-04587A	Steering Shaft
16	712-04064	Flange Lock Nut, ¼-20
17	712-04065	Flange Lock Nut, ⅜-16
18	915-0120	Spirol Pin, ⅜ x 1.00
19	916-0102	Snap Ring, 1.0
20	916-0114	Retaining Ring, .56
21	717-04318	Pinion Gear, 7-Tooth
22	917-04330	Steering Gear, 26-Tooth

Ref.	Part Number	Description
23	717-04730	Synchro Rack Gear
24	917-04732A	Steering Gear, 53-Tooth
25	718-04388A	Speed Cam Tube
26	718-04644	Hydro Steering Cam
27	721-04186	O-Ring, .625 x .07
28	732-04523	Compression Spring, .531 x 1.25
29	732-04711	Wave Spring, 24.22 x 32 x 1.98
30	736-0256	Flat Washer, .635 x .930 x .033
31	936-0274	Flat Washer, 1.01 x 1.75 x .172
32	736-04237	Flat Washer, .508 x 1.325 x .040
33	736-04498	Flat Washer, .260 x .455 x .048
34	736-0615	Thrust Washer, 1.007 x 1.542 x .03
35	938-0145	Shoulder Screw, ⅜-16 x .500 x .835
36	741-04203	Flange Bearing, .5 x .700
37	741-04204	Sleeve Bearing, .437 x .3425
38	741-04206A	Sleeve Bearing, .623 x .5025 x .800
39	741-04231	Sleeve Bearing, 1.2 x 1.00
40	741-04235	Flange Bearing, .625 x .875
41	741-04257	Rack Caster Bearing
42	741-04280	Ball Bearing, .25 x .6875 x .25
43	741-0747	Ball Bearing, .5625 x 1.375 x .4375
44	750-05369	Spacer, .260 x .375 x .75

 
48" Deck

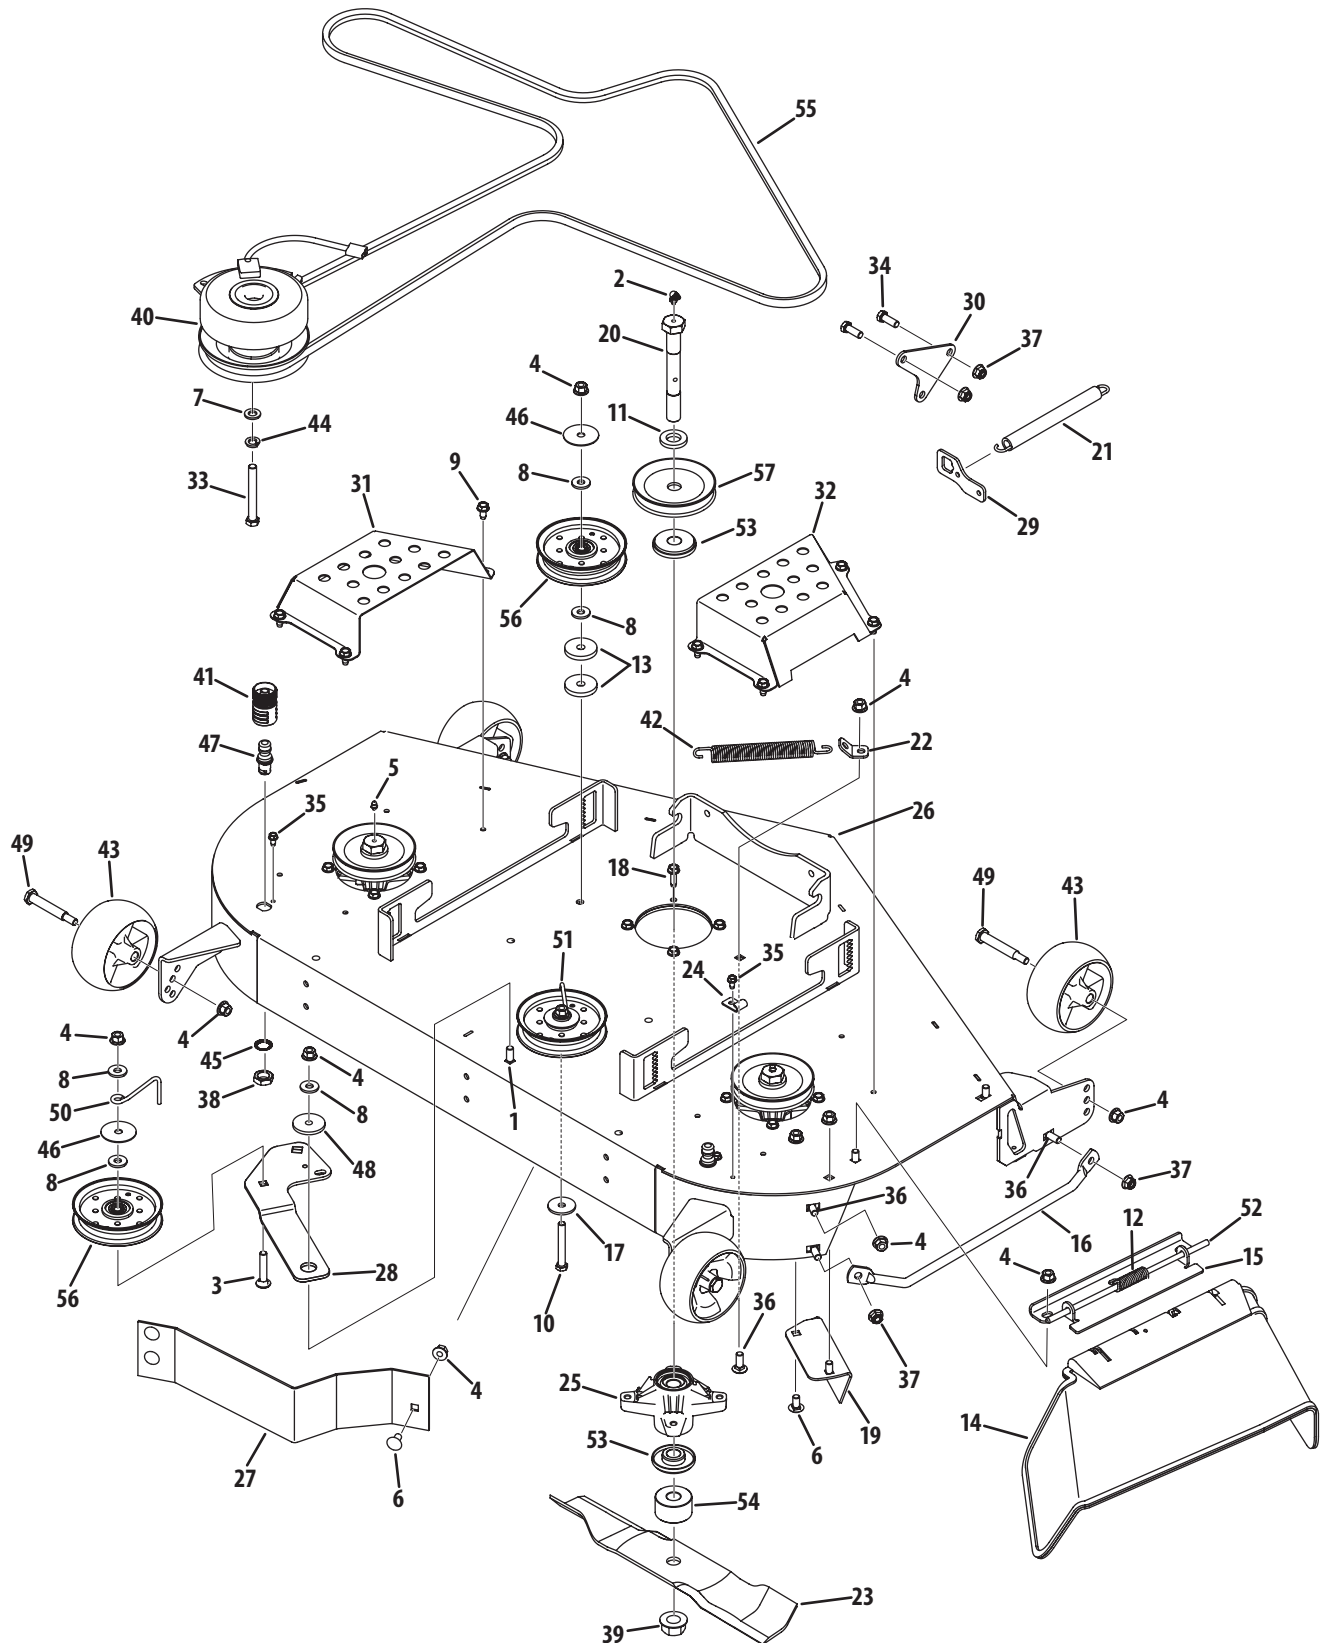

Ref.	Part Number	Description
1	00011861	Hex Screw, 3/8-16 x 2.50
2	737-3004	Grease Fitting, 1/4-28 x .788
3	00014270	Carriage Bolt, 3/8-16 x 2.00
4	00022560	Counterlock Flange Nut, 3/8-16
5	00060078	Straight Grease Fitting, 1/4-28
6	710-3178	Carriage Bolt, 3/8-16 x .75
7	936-3015	Washer, .469 x .875 x .105
8	736-3052	Washer, .406 x 1.00 x .105
9	01001161	TT Screw, 5/16-18 x .625
10	710-3022	Hex Screw, 3/8-16 x 2.75
11	01003123	Spacer, .812 x 1.47 x .218
12	01003253	Torsion Spring
13	01003269	Washer, .438 x 1.75 x .250
14	01006693	Fab Deck Deflector Chute
15	01006748	Deflector Chute Bracket
16	01008644	Fab Deck Chute Finger Guard
17	01009253	Washer, .390 x 1.50 x .122
18	02000762	Flange Hex TT Screw, 5/16-18 x 1.00
19	02001235	Micro Chute Baffle
20	02001987	Hex Screw, 3/4-16 x 6.00
21	02002629	Hook Ext. Spring, .75 x 7.89 x .14
22	02004195	45-Degree Spring Mount Bracket
23	02005017	Hi-Lift Blade, 17.0
24	96606	Retainer Hook Bracket
25	918-04426	Deck Spindle Assembly
26	980-00106	48" Welded Deck
27	703-07346	48" Standard Baffle
28	703-07616	48" Plate Idler
29	703-07632A	Spring Mount Bracket

Ref.	Part Number	Description
30	703-07641	Spring Mount Plate
31	703-07664	48" LH Belt Cover
32	703-07685	48" RH Belt Cover
33	710-04379A	Hex Screw, 7/16-20 x 3.50
34	710-0514	Hex Screw, 3/8-16 x 1.00
35	710-0599	Hex Washer TT Screw, 1/4-20 x .500
36	710-3168	Carriage Bolt, 3/8-16 x 1.00
37	712-04065	Flange Lock Nut, 3/8-16
38	912-0641	Hex Nut, M16-1.5
39	712-3078	Flange Lock Nut, 3/4-16
40	917-04552	Electric PTO Clutch
41	921-04041	Water Nozzle Adapter
42	932-0594A	Extension Spring, .91 x 7.33
43	734-04155	Deck Wheel, 5.0
44	936-0171	Lock Washer, 7/16
45	936-0760	Lock Washer, 17 x 23.8 x 1.95
46	736-3040	Flat Washer, .406 x 1.92 x .060
47	737-04003D	Water Deck Nozzle
48	738-04392	Shoulder Spacer, .884 x .190
49	938-3056	Shoulder Bolt, 3/8-16 x .496 x 2.50
50	747-04530	Belt Keeper Rod
51	747-04938	Belt Keeper Rod
52	747-3384	Chute Deflector Rod
53	748-3065A	Deck Spindle Spacer
54	750-05282	Spindle Spacer, .76 x 2.0 x 1.1
55	954-04044A	Hi-Performance Belt
56	756-04129B	Idler Pulley
57	756-3089	V-Type Pulley

 
60" Deck

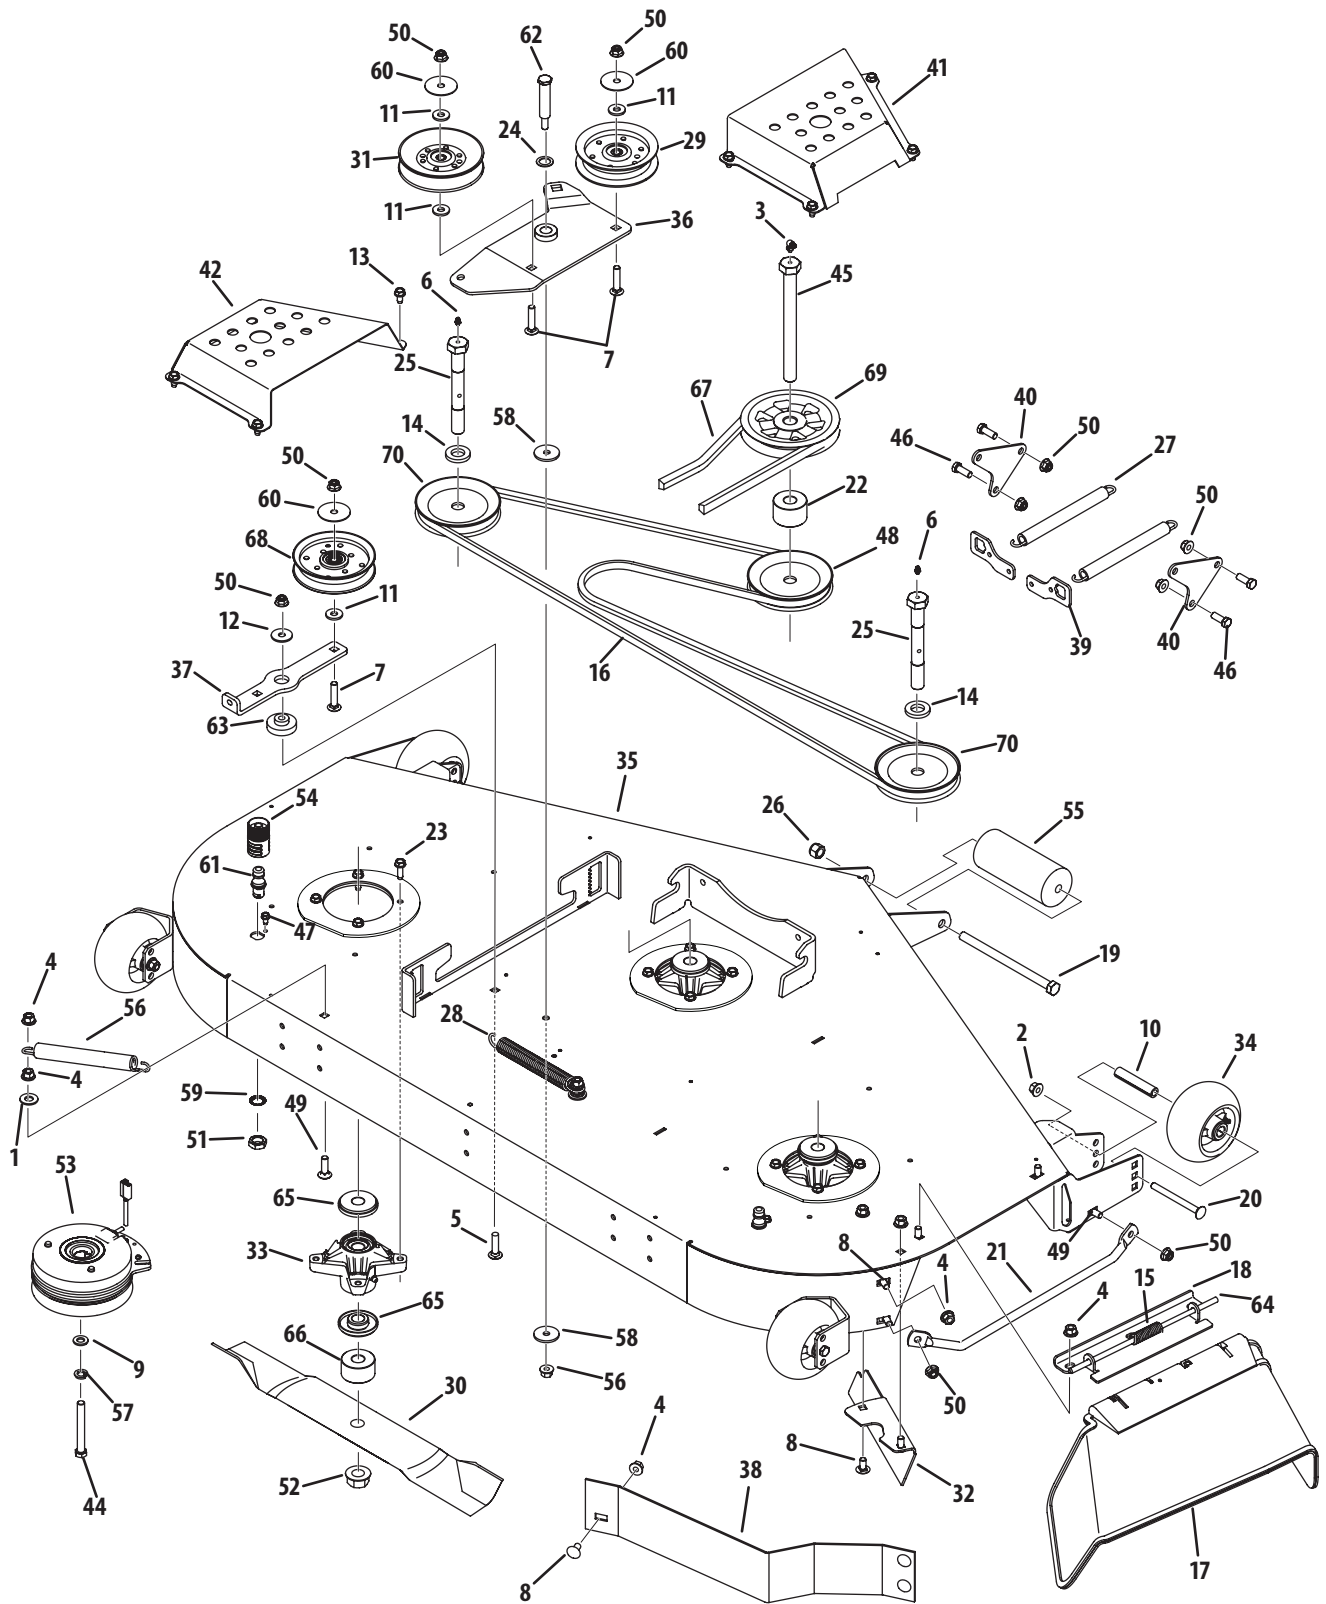

Ref.	Part Number	Description
1	00010958	Washer, .532 x 1.06 x .094
2	00011925	Hex Screw, 3/8-16 x 4.00
3	737-3004	Grease Fitting, 1/4-28 x .788
4	00022560	Counterlock Flange Nut, 3/8-16
5	00030276	Carriage Bolt, 3/8-16 x 1.50
6	00060078	Straight Grease Fitting, 1/4-28
7	710-0560	Carriage Bolt, 3/8-18 x 1.75
8	710-3178	Carriage Bolt, 3/8-16 x .75
9	936-3015	Washer, .469 x .875 x .105
10	750-3193	Spacer, .390 x .620 x 3.04
11	736-3052	Washer, .406 x 1.00 x .105
12	936-0133	Washer, .411 x 1.25 x 1.00
13	01001161	Flange TT Screw, 5/16-18 x .625
14	01003123	Spacer, .812 x 1.47 x .218
15	01003253	Torsion Spring
16	01005376	V- Belt
17	01006693	Fab Deck Deflector Chute
18	01006748	Deflector Chute Bracket
19	01006961	Hex Screw, 1/2-20 x 7.50
20	01008049	Carriage Bolt, 3/8-16 x 4.00
21	01008644	Fab Deck Chute Finger Guard
22	02000454	Spacer, .760 x 2.00 x 1.28
23	02000762	Flange Hex TT Screw, 5/16-18 x 1.00
24	02001891	Washer, .625 x 1.00 x .048
25	02001987	Hex Screw, 3/4-16 x 6.00
26	02002299	Nylock Nut, 1/2-20
27	02002629	Hook Ext. Spring, .75 x 7.89 x .14
28	02003712	Hook Ext. Spring, .94 x 7.57 x .14
29	02004447	Idler Pulley, 4.88
30	02005019	Hi-Lift Blade, 21.0
31	02005079	Idler Pulley, 5.06
32	02005195	Deck Chute Baffle
33	918-04426	Deck Spindle Assembly
34	634-3159	Deck Wheel
35	980-00100	60" Welded Deck

Ref.	Part Number	Description
36	680-00105	60" Idler Assembly
37	703-07010	Deck Idler Arm
38	703-07516	Standard Baffle
39	703-07632A	Spring Mount Bracket
40	703-07641	Spring Mount Plate
41	703-07687	60" RH Belt Cover
42	703-07688	60" LH Belt Cover
43	703-07787	Spindle Reinforcement Plate
44	710-04379A	Hex Screw, 7/16-20 x 3.50
45	710-05110	Hex Screw, 3/4-16 x 8.0
46	710-0514	Hex Screw, 3/8-16 x 1.00
47	710-0599	Hex Washer TT Screw, 1/4-20 x .500
48	956-1209	V-Type Pulley
49	710-3034	Carriage Bolt, 3/8-16 x 1.25
50	712-04065	Flange Lock Nut, 3/8-16
51	912-0641	Hex Nut, M16-1.5
52	712-3078	Flange Lock Nut, 3/4-16
53	917-04754	Electric PTO Clutch
54	921-04041	Water Nozzle Adapter
55	731-3005	Front Roller
56	932-0594A	Extension Spring, .91 x 7.33
57	936-0171	Lock Washer, 7/16
58	936-0227	Flat Washer, .390 x 1.500 x .134
59	936-0760	Lock Washer, 17 x 23.8 x 1.95
60	736-3040	Flat Washer, .406 x 1.92 x .060
61	737-04003D	Water Deck Nozzle
62	738-04216A	Shoulder Bolt, 3/8-16 x .625 x 2.515
63	738-04376	Shoulder Spacer, .854 x .280
64	747-3384	Chute Deflector Rod
65	748-3065A	Deck Spindle Spacer
66	750-05282	Spindle Spacer, .76 x 2.0 x 1.1
67	954-04262	Belt
68	756-04129B	Idler Pulley, 4.25
69	756-04430	V-Type Pulley

 Propane Accessories

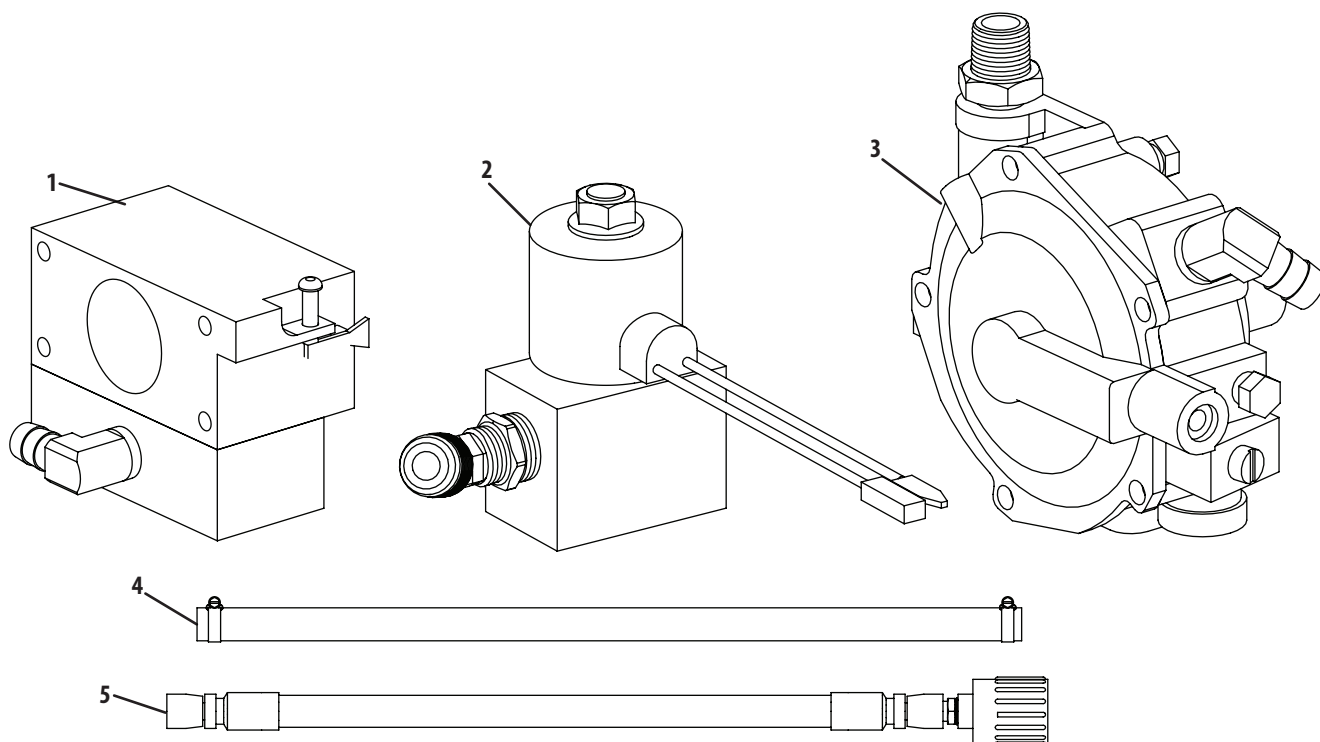


Ref	Part Number	Description
1	751-11834	Carburetor Kit
2	751-11838	Lockoff Engine Kit
3	751-11839	Regulator Engine Kit
4	751-11857	Hose Kit, 1/2 x 21
5	751-11856	Regulator Hose Kit, 17

[illegible]

Kawasaki FR651V-AS05 Cylinder/Crankcase

 E0110-A630A

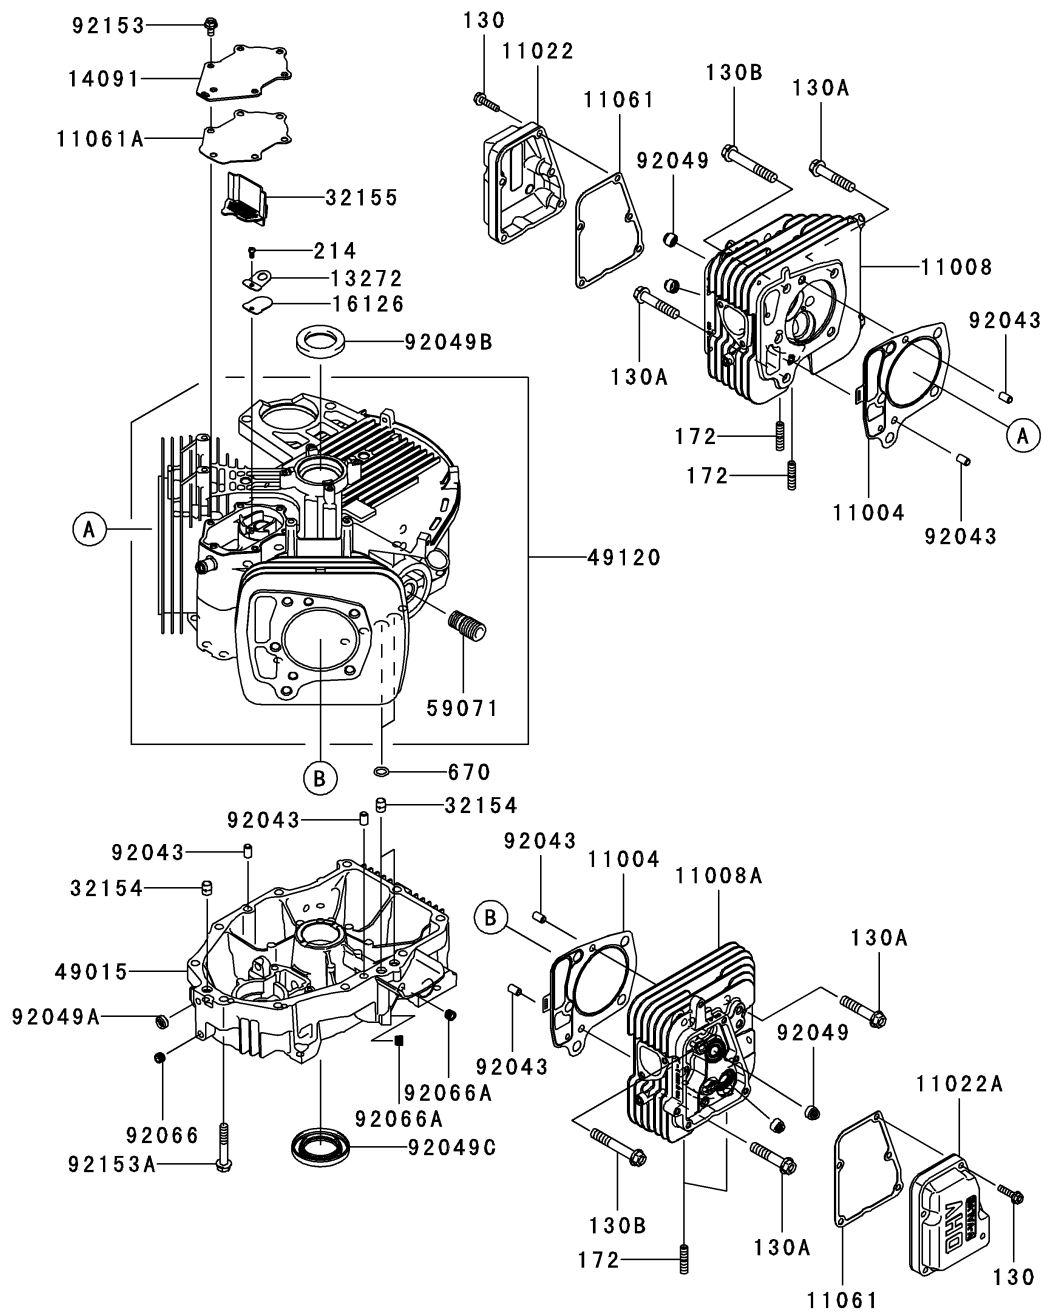


Kawasaki FR651V-AS05 Cylinder/Crankcase

Ref.	Part Number	Description
11004	KM-11004-7026	Head Gasket
11008	KM-11008-7039	Complete Cylinder Head, #1
11008A	KM-11008-7040	Complete Cylinder Head, #2
11022	KM-11022-7019	Rocker Case, #1
11022A	KM-11022-7020	Rocker Case, #2
11061	KM-11061-7083	Rocker Case Gasket
11061A	KM-11061-7084	Breather Gasket
13272	KM-13272-7004	Breather Plate
14091	KM-14091-7064	Breather Cover
16126	KM-16126-7020	Breather Valve
32154	KM-32154-7019	Pipe
32155	KM-32155-7003	Breather Pipe
49015	KM-49015-7079	Crankcase Cover
49120	KM-49120-7122	Complete Crankcase
59071	KM-59071-2079	Joint
92043	KM-92043-1263	Pin
92049	KM-92049-7001	Oil Seal, RVC2, 6 X 11 X 10.2
92049A	KM-92049-7005	Oil Seal, So 8 X 14 X 5 HS
92049B	KM-92049-7010	Oil Seal, Sd 35 X 48 X 8 R HS
92049C	KM-92049-7028	Oil Seal, 38 X 62 X 8 MTCLV
92066	KM-92066-7023	Plug
92066A	KM-92066-7026	Plug
92153	KM-92153-7043	Bolt, 6 X 12
92153A	KM-92153-7054	Bolt, 8 X 50
130	KM-130AA0625	Flanged Bolt, 6 X 25
130A	KM-130CA1050	Flanged Bolt, 10 X 50
130B	KM-130CA1065	Flanged Bolt, 10 X 65
172	KM-172BA0818	Stud Bolt, 8 X 18
214	KM-214AA0408	Pan Screw +-, 4 X 8
670	KM-670B2011	O-Ring, 11mm


Kawasaki FR651V-AS05 Piston/Crankshaft

 E0120-A398A

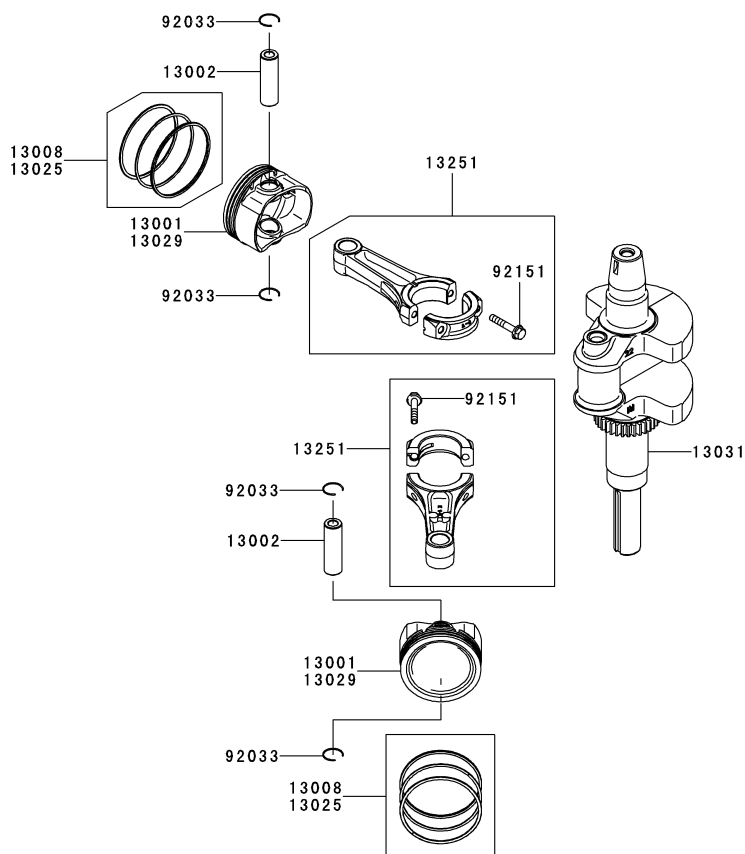


Ref.	Part Number	Description
13001	KM-13001-7027	Engine Piston
13002	KM-13002-7006	Piston Pin
13008	KM-13008-7005	Piston Ring Set
13025	KM-13025-7009	Piston Ring Set L, 0.5
13029	KM-13029-7010	Engine Piston L, 0.5
13031	KM-13031-7084	Complete Crankshaft
13251	KM-13251-7025	Connecting Rod Assembly
92033	KM-92033-7016	Snap Ring
92151	KM-92151-7017	Bolt, 6 X 35

 E0140-A447A

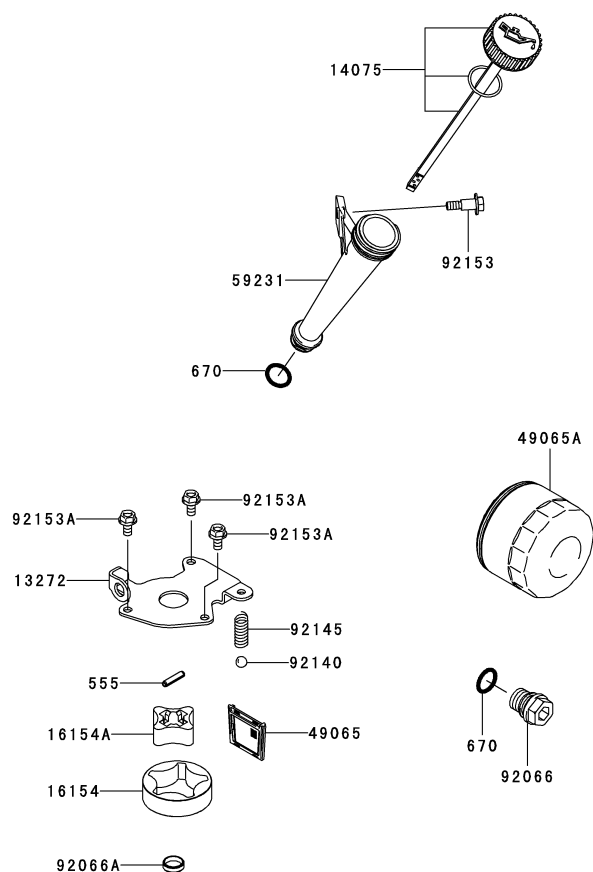

Ref.	Part Number	Description
13272	KM-13272-7011	Rotor Plate
14075	KM-14075-7013	Oil Gauge Cap Assembly
16154	KM-16154-7010	Outer Rotor Pump
16154A	KM-16154-7011	Inner Rotor Pump
49065	KM-49065-7006	Oil Filter
49065A	KM-49065-7007	Oil Filter
59231	KM-59231-7016	Filler
92066	KM-92066-7003	Plug
92066A	KM-92066-7028	Plug
92140	KM-92140-7003	Ball
92145	KM-92145-7002	Spring
92153	KM-92153-7008	Bolt
92153A	KM-92153-7043	Bolt, 6 X 12
555	KM-555A0420	Spring Pin, 4 X 20
670	KM-670D2016	O-Ring, 16mm

 E0130-A176A

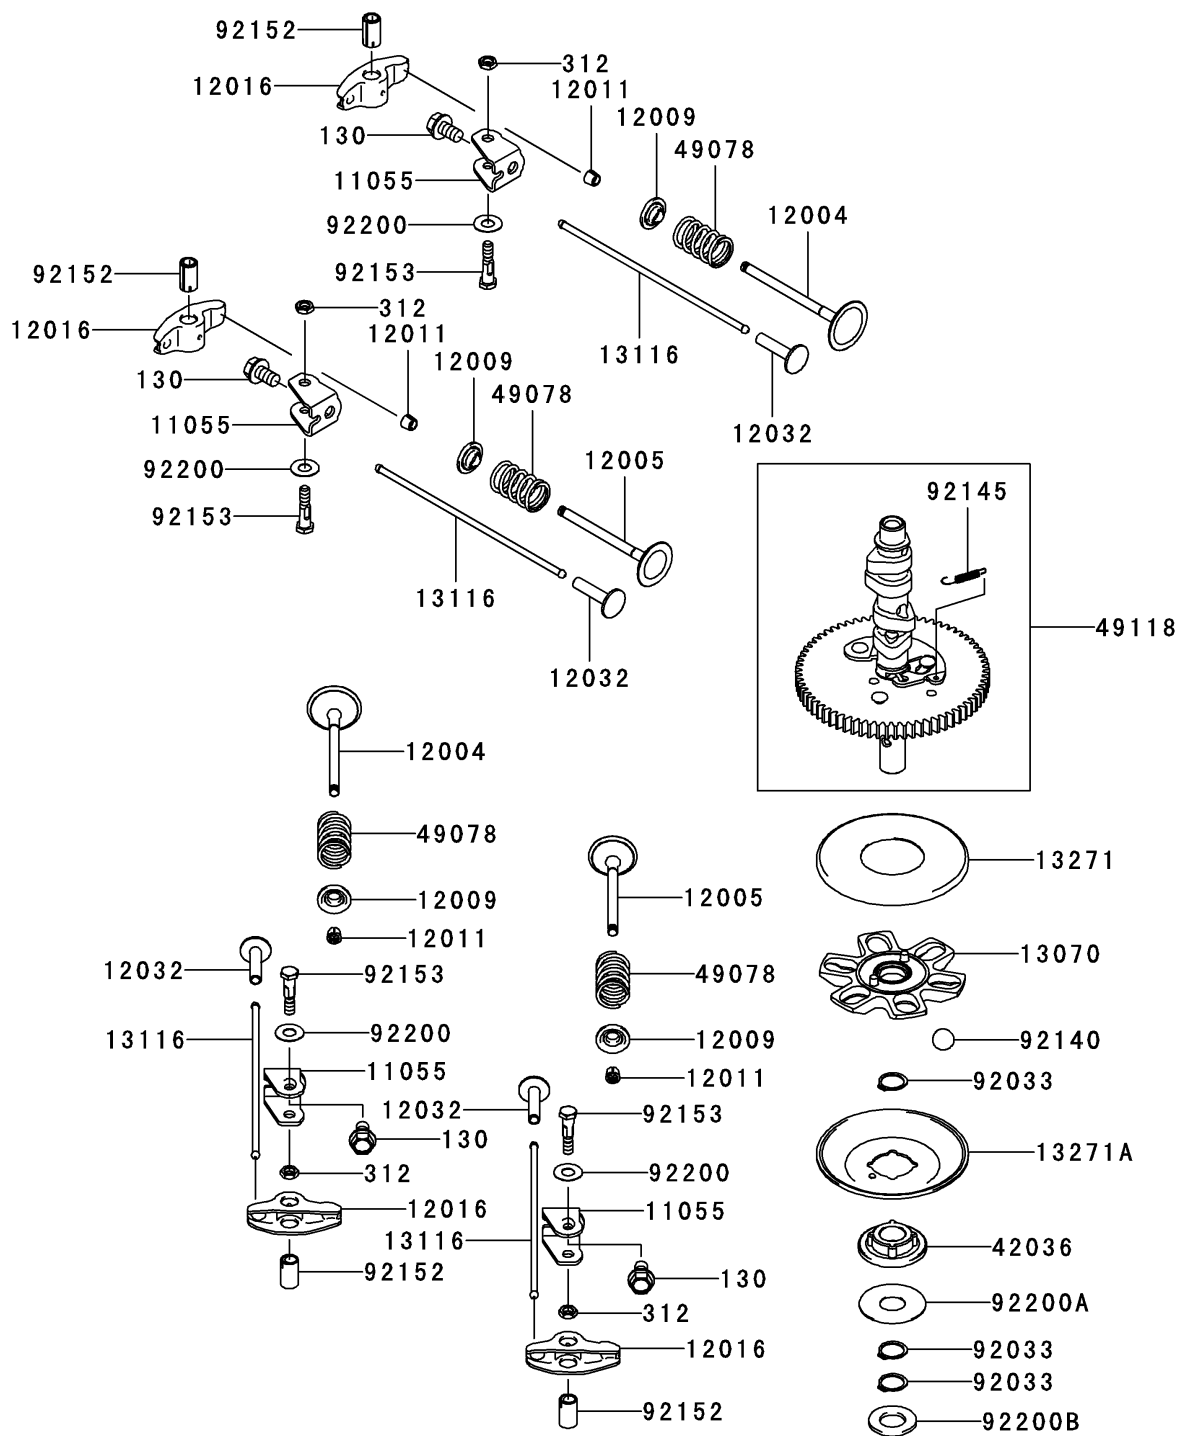


Kawasaki FR651V-AS05 Valve & Camshaft

Ref.	Part Number	Description
11055	KM-11055-7009	Bracket
12004	KM-12004-7008	Intake Valve
12005	KM-12005-7009	Exhaust Valve
12009	KM-12009-7001	Valve Spring Retainer
12011	KM-12011-2056	Collet
12016	KM-12016-2066	Rocker Arm
12032	KM-12032-7001	Tappet
13070	KM-13070-7017	Governor Guide
13116	KM-13116-7007	Push Rod
13271	KM-13271-7007	Plate
13271A	KM-13271-7021	Governor Plate
42036	KM-42036-7010	Sleeve
49078	KM-49078-7002	Engine Valve Spring, IN
49118	KM-49118-7022	Complete Camshaft
92033	KM-92033-7001	Snap Ring
92140	KM-92140-7005	Ball
92145	KM-92145-7001	Spring
92152	KM-92152-7012	Collar
92153	KM-92153-7100	Bolt, 6 X 29.5
92200	KM-92200-2151	Washer, 8.1 X 18 X 0.5
92200A	KM-92200-7009	Washer, 16 X 42 X 0.91
92200B	KM-92200-7048	Washer, 16.3 X 30 X 2.28
130	KM-130AA0814	Flanged Bolt, 8 X 14
312	KM-312AA0600	Hex Nut, 6mm

Kawasaki FR651V-AS05 Cooling Equipment

 
E0150-A873A

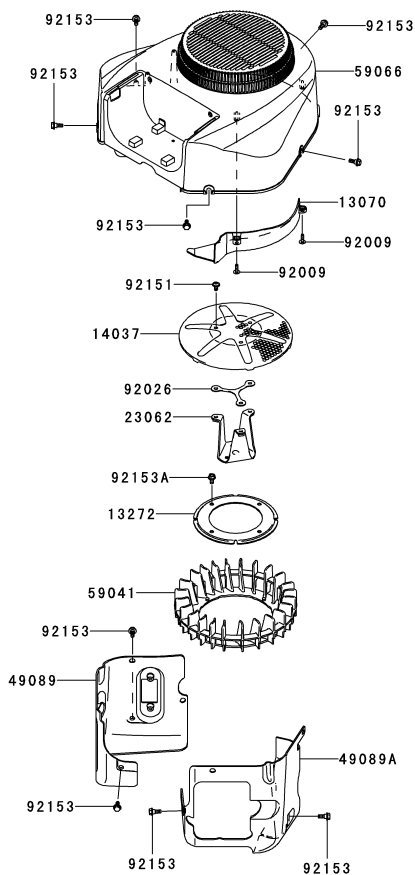

Ref.	Part Number	Description
13070	KM-13070-7019	Cooling Air Guide
13272	KM-13272-7006	Fan Plate
14037	KM-14037-70089H	Screen
23062	KM-23062-7005	Complete Bracket
49089	KM-49089-7079	Engine Shroud
49089A	KM-49089-7080	Engine Shroud
59041	KM-59041-7014	Fan
59066	KM-59066-7046	Fan Housing
92009	KM-92009-2303	Screw
92026	KM-92026-7007	Spacer
92151	KM-92151-7012	Bolt, 6 X 12
92153	KM-92153-7007	Bolt
92153A	KM-92153-7043	Bolt, 6 X 12

Kawasaki FR651V-AS05 Electric Equipment

 E0160-B284A

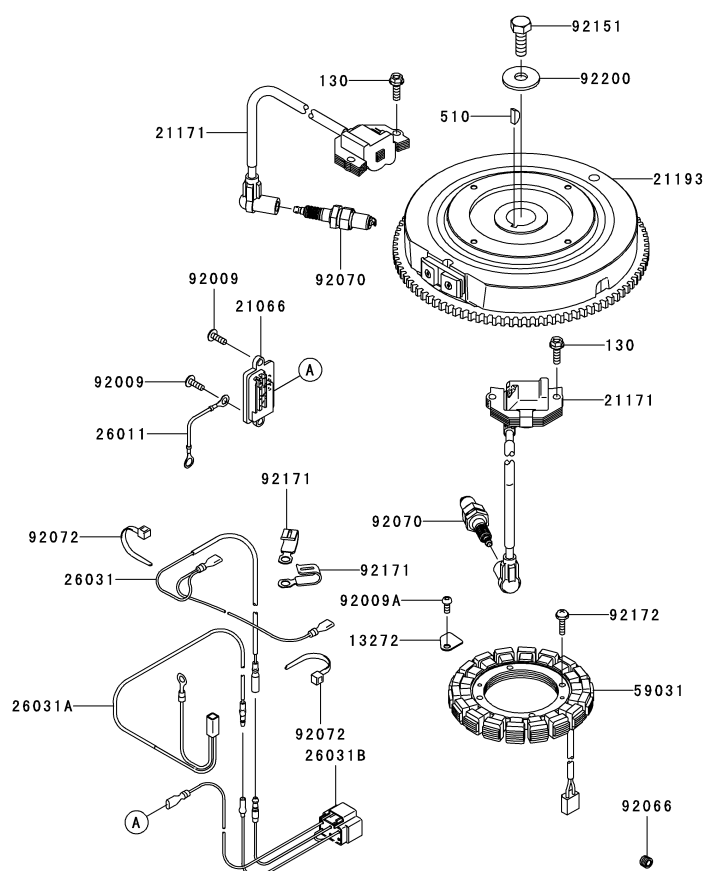


Ref.	Part Number	Description
13272	KM-13272-7012	Plate
21066	KM-21066-7017	Voltage Regulator
21171	KM-21171-7041	Ignition Coil Assembly
21193	KM-21193-7038	Flywheel Assembly
26011	KM-26011-7025	Lead Wire, L = 95
26031	KM-26031-7040	Harness
26031A	KM-26031-7041	Harness
26031B	KM-26031-7044	Harness
59031	KM-59031-7017	Charging Coil
92009	KM-92009-2303	Screw

Ref.	Part Number	Description
92009A	KM-92009-2308	Screw
92066	KM-92066-7026	Plug
92070	KM-BPR4ES	Spark Plug, BPR4ES (NGK)
92072	KM-92072-7003	Band
92151	KM-92151-2097	Bolt, 12 X 30
92171	KM-92171-7008	Clamp
92172	KM-92172-7018	Screw, 5 X 20
92200	KM-92200-7002	Washer
130	KM-130AA0620	Flanged Bolt, 6 X 20
510	KM-510A5100	Woodruff Key

Kawasaki FR651V-AS05 Control Equipment

 
E0170-A652A

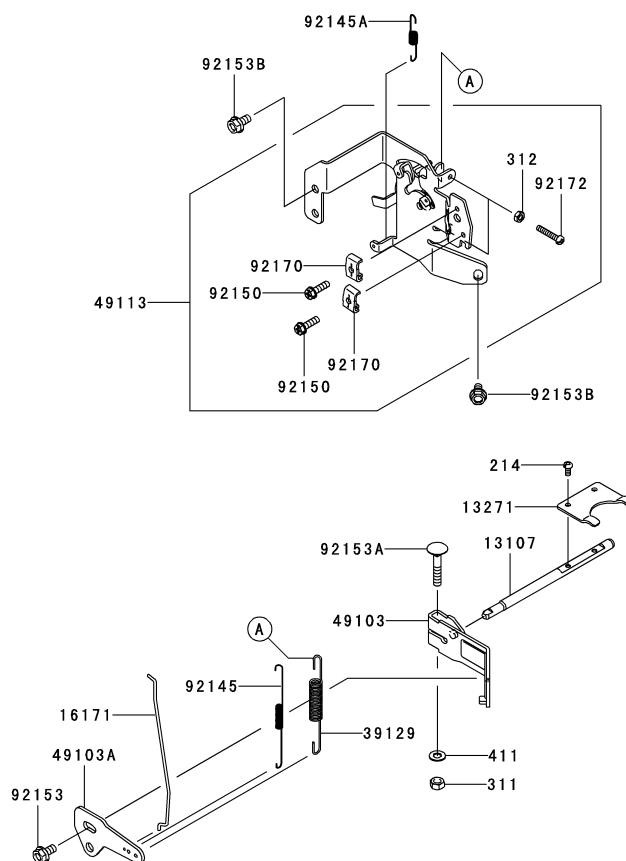

Ref.	Part Number	Description
13107	KM-13107-7047	Shaft
13271	KM-13271-7038	Plate
16171	KM-16171-7022	Link
39129	KM-39129-7028	Governor Spring
49103	KM-49103-7014	Governor Arm
49103A	KM-49103-7015	Governor Arm
49113	KM-49113-7050	Complete Control Panel
92145	KM-92145-7057	Spring
92145A	KM-92145-7058	Spring
92150	KM-92150-2182	Bolt, 5 X 18

Ref.	Part Number	Description
92153	KM-92153-0009	Bolt, 6 X 12
92153A	KM-92153-7033	Bolt, 6 X 35
92153B	KM-92153-7043	Bolt, 6 X 12
92170	KM-92170-7001	Clamp
92172	KM-92172-7035	Screw, 5 X 30
214	KM-214AA0408	Pan Screw +-, 4 X 8
311	KM-311AA0600	Hex Nut, 6mm
312	KM-312AA0500	Hex Nut, 5mm
411	KM-411AA0600	Plain Washer, 6mm

 
E0210-A457A

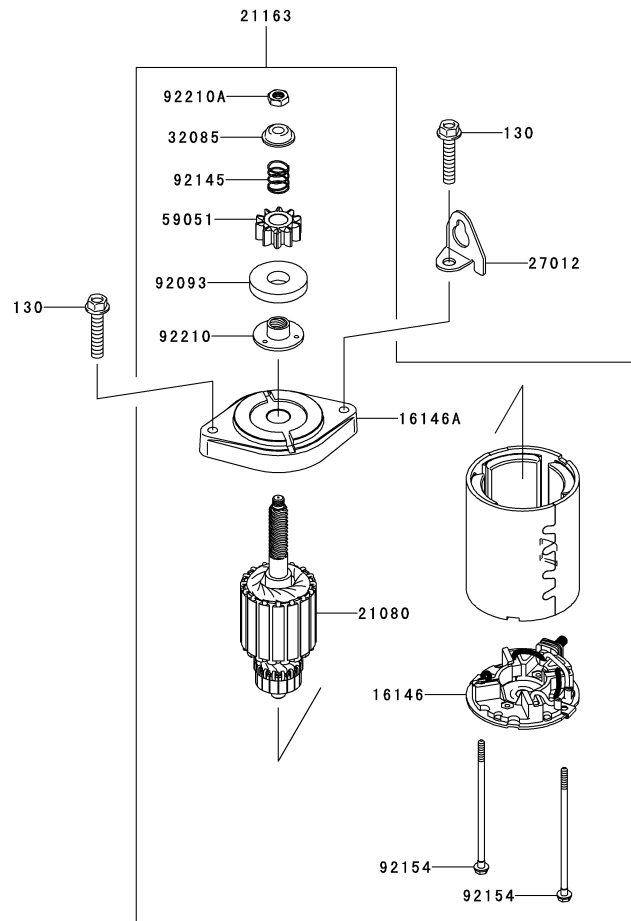

Ref.	Part Number	Description
16146	KM-16146-7027	Cover Assembly
16146A	KM-16146-7028	Cover Assembly
21080	KM-21080-7006	Armature
21163	KM-21163-7024	Electric Starter
27012	KM-27012-7004	Hook
32085	KM-32085-7005	Stopper
59051	KM-59051-7034	Spur Gear
92093	KM-92093-7007	Seal
92145	KM-92145-7060	Spring
92154	KM-92154-7001	Bolt
92210	KM-92210-7017	Nut
92210A	KM-92210-7036	Nut
130	KM-130AA0840	Flanged Bolt, 8 x 40

Kawasaki FR651V-AS05 Air Filter/Muffler

 
E0190-B094A

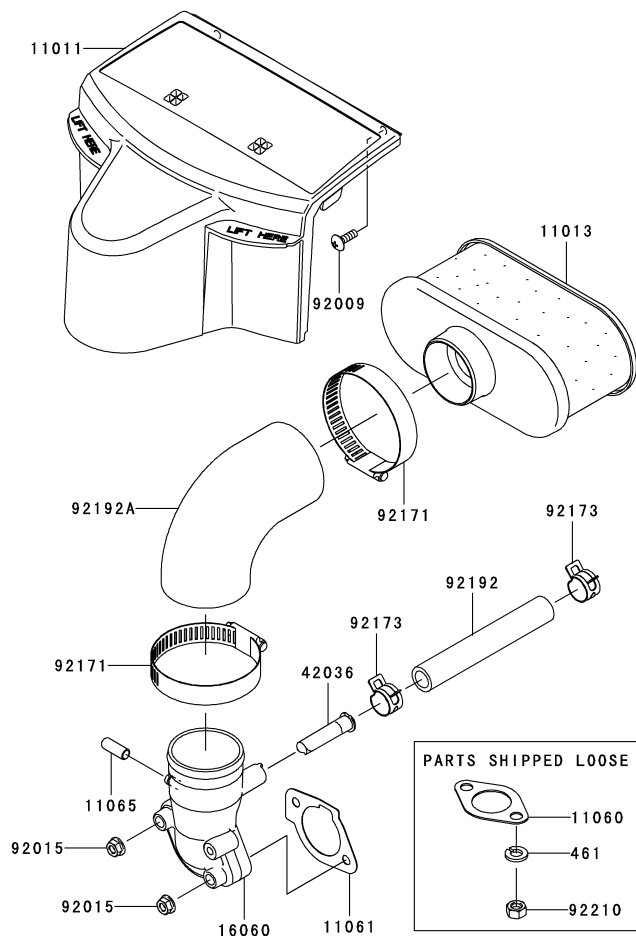

Ref.	Part Number	Description
11011	KM-11011-7054	Air Filter Case
11013	KM-11013-7047	Air Filter Element
11060	KM-11060-7016	Muffler Gasket
11061	KM-11061-7086	Carburetor/Intake Pipe Gasket
11065	KM-11065-7023	Cap
16060	KM-16060-7038	Intake Pipe
42036	KM-42036-7017	Breather Sleeve
92009	KM-92009-2303	Screw
92015	KM-92015-1367	Nut
92171	KM-92171-7007	Clamp
92173	KM-92173-7003	Clamp
92192	KM-92192-7146	Tube, 12.6 x 18.6 x 118
92192A	KM-92192-7151	Air Filter Tube
92210	KM-92210-7027	Nut, M8
461	KM-461DA0800	Spring Washer, 8mm

Kawasaki FR651V-AS05 Fuel Tank/Fuel Valve

 E0200-A679A

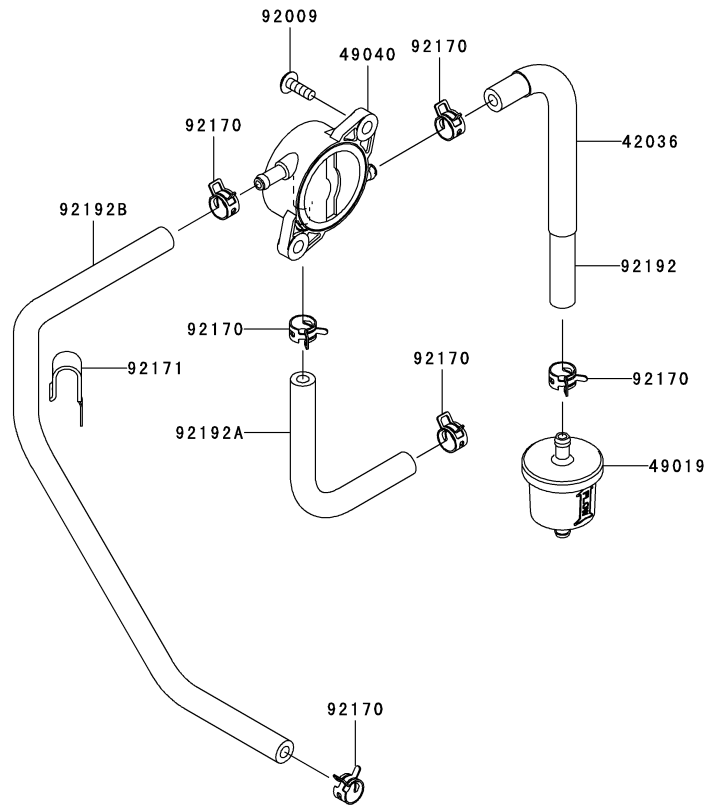


Ref.	Part Number	Description
42036	KM-42036-7015	Sleeve
49019	KM-49019-7005	Fuel Filter
49040	KM-49040-7008	Fuel Pump
92009	KM-92009-2303	Screw
92170	KM-92170-2009	Clamp
92171	KM-92171-7008	Clamp
92192	KM-92192-7145	Tube, 6.35 X 12.7 X 185
92192A	KM-92192-7148	Tube, 6.4 X 12.7 X 150
92192B	KM-92192-7150	Tube, 6.35 X 12.7 X 390

Kawasaki FR651V-AS05 Engine Labels


56033




 56070

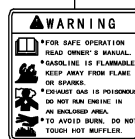

Ref.	Part Number	Description
56033	KM-56033-7001	Manual Label
56070	KM-56070-7001	Warning Label

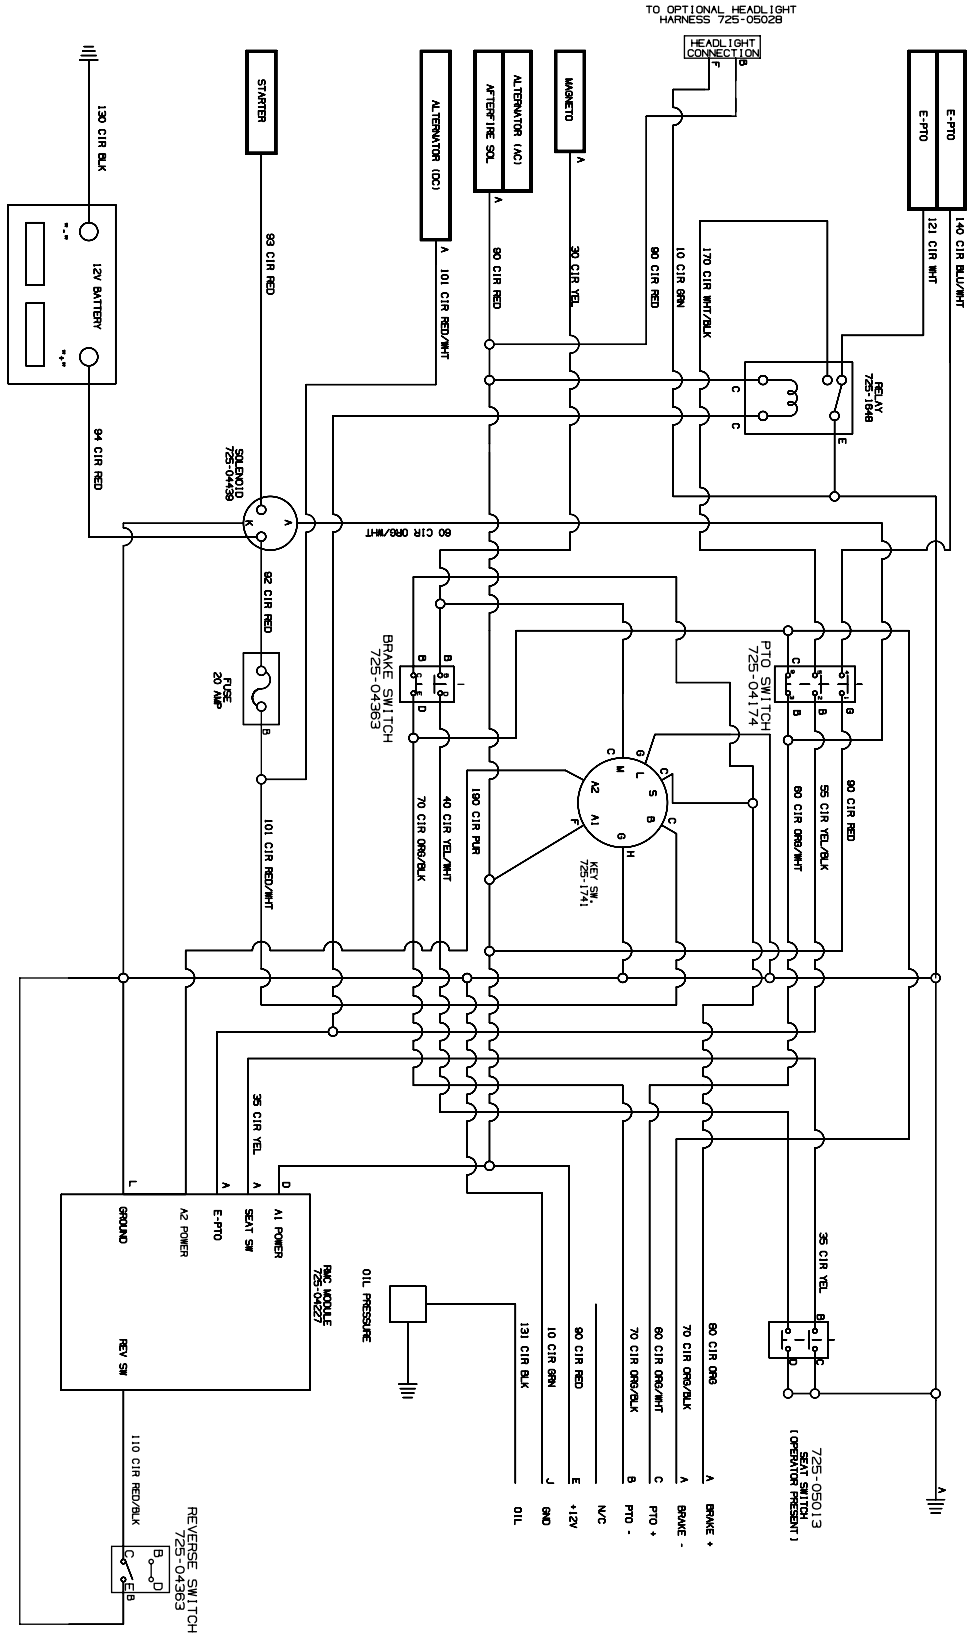 

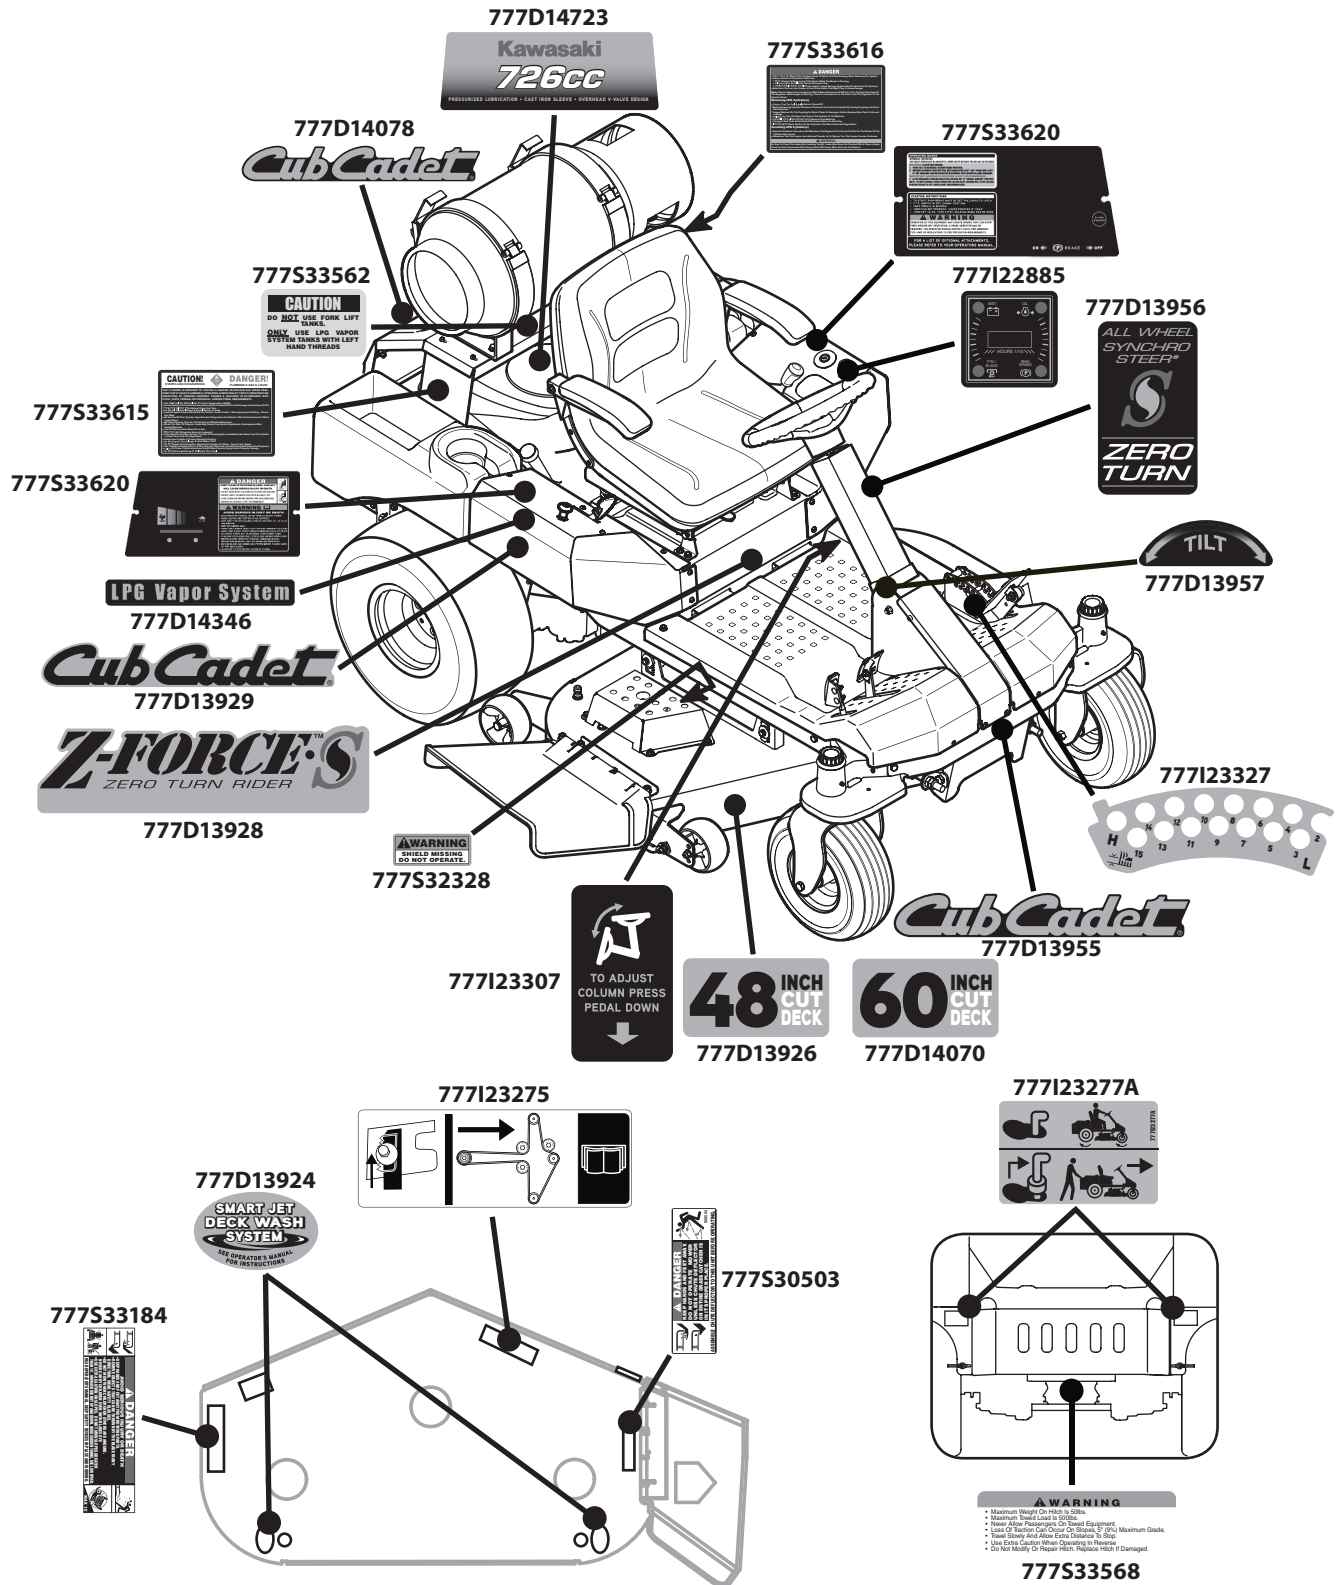 

[illegible]

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
