

Cub Cadet®


ILLUSTRATED PARTS MANUAL

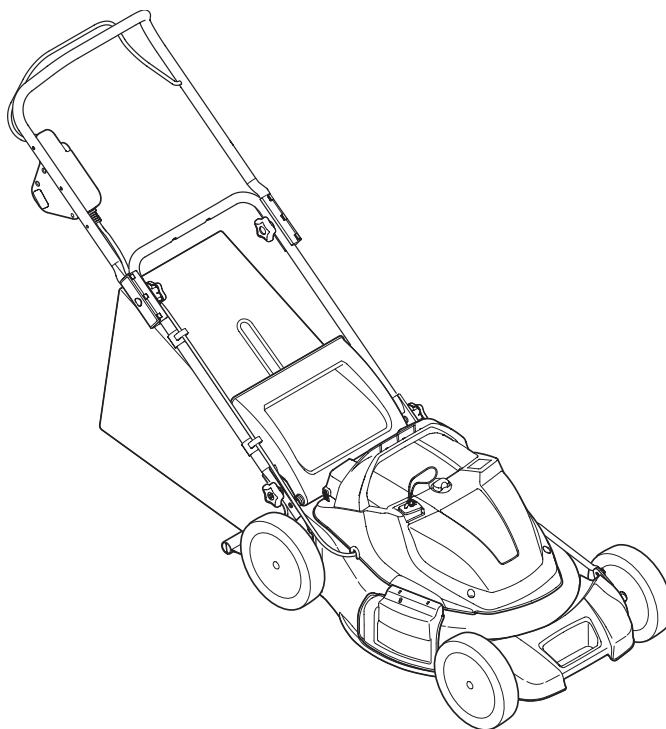

Electric Mower — Models 182, 188, 189

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Model 182

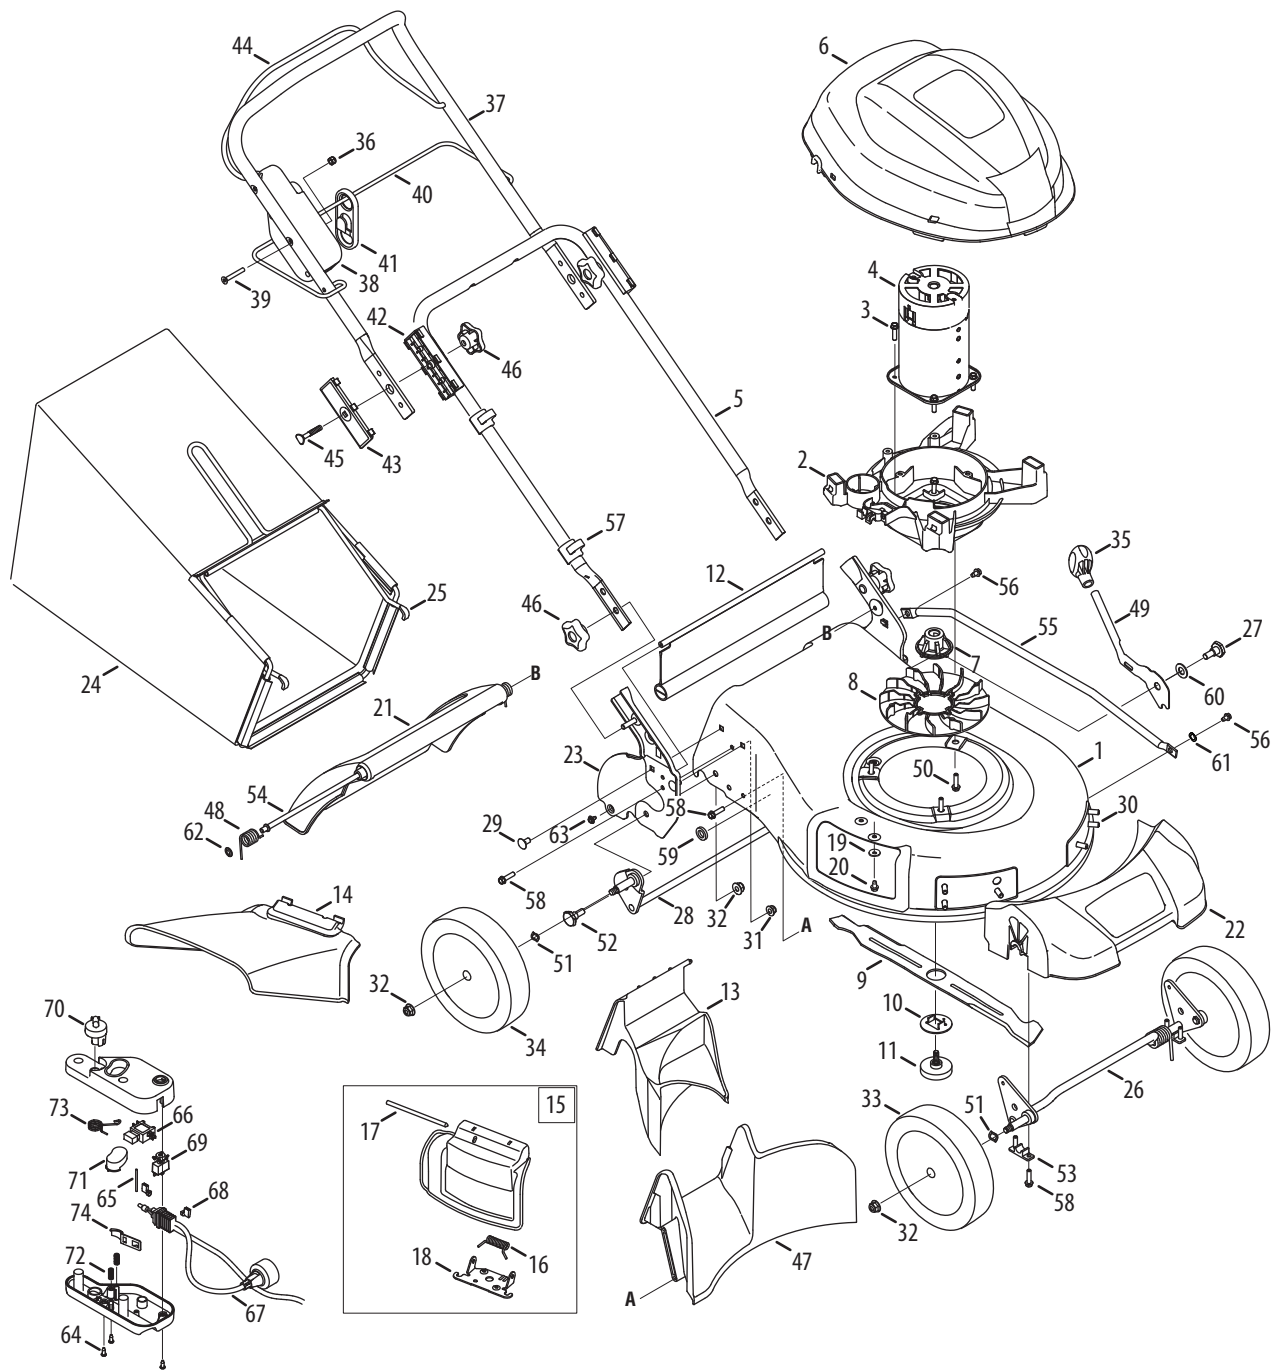

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXXX-0637). Please refer to the table below for current color codes:

0637	Black	0685	Blue (Cub Cadet)
4021	Yellow (Cub Cadet)	0691	Black Jack (Cub Cadet Commercial)
0499	Beige (Cub Cadet)		

Ref No.	Part Number	Description
1	787-01649	19" Deck
2	731-05727	Motor Bracket
3	710-0895	Screw, 1/4-15 x .750
4	924-04010	Electric Motor, 120V
5	749-04312	Lower Handle
6	731-05749	Motor Shroud
7	631-04228	Blade Hub
8	731-05832	Electric Fan
9	942-04152	Mulching Blade
10	782-7051	Blade Locking Plate
11	624-0078	Blade Bolt Assembly
12	731-05639A	Trail Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710	Hinge Pin
18	17032A	Chute Deflector Adapter
19	736-0270	Beleville Washer
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05634	Front Cover
23	687-02325	Handle Bracket - RH
—	687-02324	Handle Bracket - LH
24	964-04078	Grass Bag
25	647-04107	Grass Bag Frame
26	687-02225	Front Bracket Assembly
27	938-0148	Screw, Shoulder, .50 x .66
28	687-02228	Rear Bracket Assembly
29	710-3025	Screw, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	634-04347	Rear Wheel
35	720-04096	Foam Grip
36	712-0324	Nut, Hex Lock, 1/4-20
37	749-04353	Upper Handle

Ref No.	Part Number	Description
38	925-04035	Motor/Blade Control
39	753-04430	Screw, Flat, 1/4-20 x 1.75
40	747-04672	Guide Rod
41	726-0368	Cord Retainer
42	731-05186	Lower Handle Insulator
43	731-05178	Upper Handle Insulator
44	747-04663A	Motor/Blade Control Handle
45	710-0572	Bolt Carriage, 5/16-18 x 2.50
46	720-04072A	Star Knob
47	731-05710A	Rear Baffle
48	732-04534	Door Torsion Spring - RH
—	732-04535	Door Torsion Spring - LH
49	732-04377C	Spring Lever
50	710-0726	Screw, 5/16-12 x .750
51	936-0504	Washer, Wave, .510 x .750 x .017
52	938-0507B	Screw, Shoulder, .500 Dia. X .434
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04356	Cross Bracket
56	738-04278	Screw, Shldr., 1/4-20 x .50
57	731-2422	Cable Guide
58	710-1241	Screw, 1/4-15 x 1.000
59	731-05880	Spacer, .515 x 1.00 x .310 Lg.
60	936-0255	Washer, Bell, .510 x 1.14 x .040
61	736-04413	Washer, Wave, .390 x .825 x .016
62	726-0201	Nut, Speed
63	710-0779A	Screw, #10-16 x .500
64	1755	Screw, 10-9 x .50
65	711-1145	Switch Pivot Shaft
66	725-04435	Switch
67	725-04449	Wiring Harness
68	725-04499	Jumper Wire
69	725-1712	Circuit Breaker
70	731-1571A	Bail Lock Clip
71	731-1572	Bail Lock Button
72	732-04427	Compression Spring, .260 x .687
73	732-0741A	Torsion Spring
74	787-01466A	Switchbox Lever


Model 188

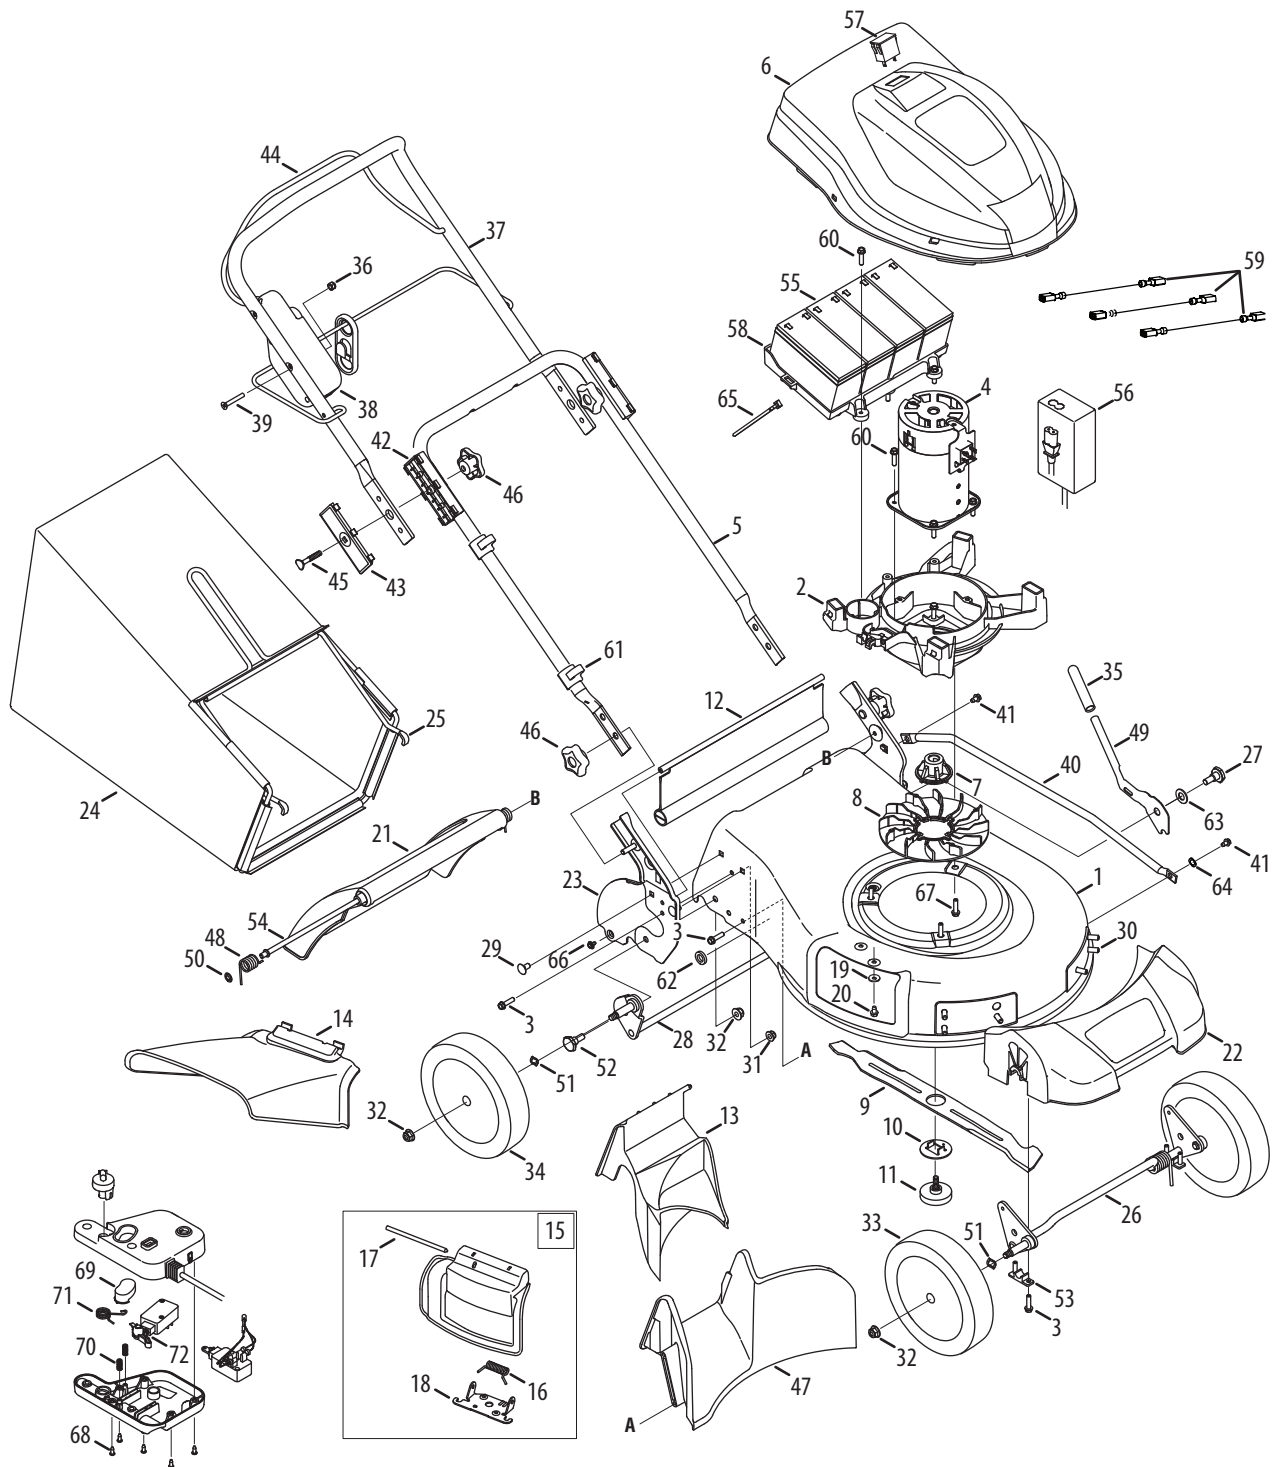

Ref No.	Part Number	Description
1	787-01649	19" Deck
2	731-05727	Motor Bracket
3	710-1241	Screw, 1/4-15 x 1.000
4	724-04025P	Motor, 48V
5	749-04312	Lower Handle
6	731-05753	Battery Shroud
7	631-04228	Blade Hub
8	731-05832	Electric Fan
9	942-04152	Mulching Blade
10	782-7051	Blade Locking Plate
11	624-0078	Blade Bolt Assembly
12	731-05639A	Trail Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710	Hinge Pin
18	17032A	Chute Deflector Adapter
19	736-0270	Beleville Washer
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05634	Front Cover
23	687-02325	Handle Bracket - RH
—	687-02324	Handle Bracket - LH
24	964-04066	Grass Bag
25	647-04082	Grass Bag Frame
26	687-02225	Front Bracket Assembly
27	938-0148	Screw, Shoulder, .50 x .66
28	687-02228	Rear Bracket Assembly
29	710-3025	Hhcs, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	634-04346	Front Wheel
34	634-04347	Rear Wheel
35	720-0230	Foam Grip
36	712-0324	Nut, Hex Lock, 1/4-20
37	749-04353	Upper Handle

Ref No.	Part Number	Description
38	925-04037A	Switch Assembly
39	712-04213	Screw, Flat, 1/4-20 x 1.75
40	749-04356	Cross Bracket
41	738-04278	Screw, Shldr., 1/4-20 x .50
42	731-05186	Lower Handle Insulator
43	731-05178	Upper Handle Insulator
44	747-04663A	Motor/Blade Control Handle
45	710-0572	Bolt Carriage, 5/16-18 x 2.50
46	720-04072A	Star Knob
47	731-05710A	Rear Baffle
48	732-04534	Door Torsion Spring - RH
—	732-04535	Door Torsion Spring - LH
49	732-04377C	Spring Lever
50	726-0201	Nut, Speed
51	936-0504	Washer, Wave, .510 x .750 x .017
52	938-0507B	Screw, Shoulder, .500 Dia. X .434
53	741-0492A	Bushing, Block, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	925-04381A	Battery, 12V
56	725-04387	Battery Charger
57	725-04438	Battery Level Indicator
58	731-05754	Battery Tray
59	725-04497A	Battery Jumper
60	710-0895	Screw, 1/4-15 x .750
61	731-2422	Cable Guide
62	731-05880	Spacer, .515 x 1.00 x .310 Lg.
63	936-0255	Washer, Bell, .510 x 1.14 x .040
64	736-04413	Washer, Wave, .385 x .598
65	726-0230	Cable Tie
66	710-0779A	Screw, #10-16 x .500
67	710-0726	Screw, 5/16-12 x .750
68	1755	Screw, 10-9 x .50
69	731-1572	Bail Lock Button
70	732-04427	Compression Spring, .260 x .687
71	732-0741A	Torsion Spring
72	725-04436	Switch Button
—	731-06089	Key (Not Shown)

Model 189

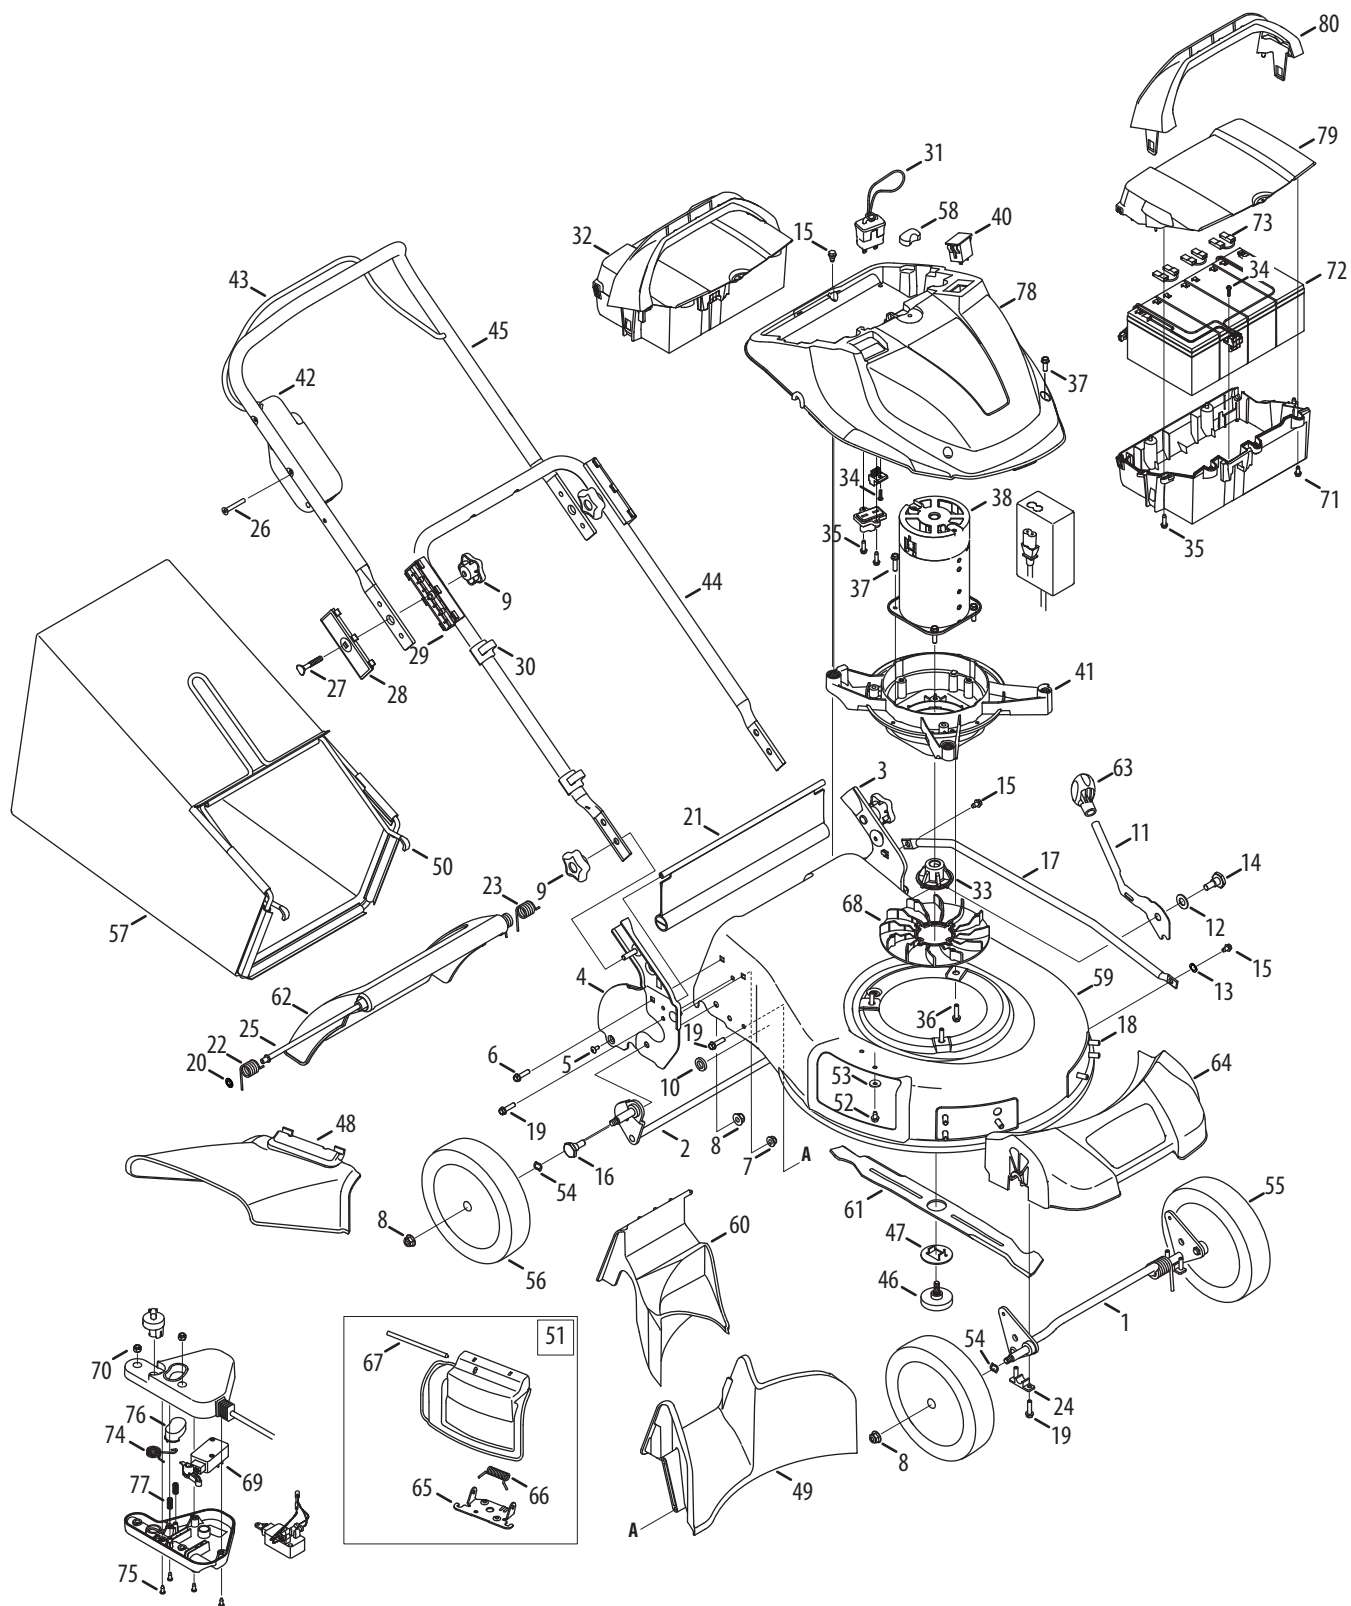

Ref No.	Part Number	Description
1	687-02225	Front Bracket Assembly
2	687-02228	Rear Bracket Assembly
3	687-02324	LH Bracket Assembly
4	687-02325	RH Bracket Assembly
5	710-0779A	Screw, #10-16 x .500
6	710-3025	Hex Screw, 5/16-18:.625
7	712-04063	Flangelock Nut, 5/16-18
8	712-04065	Flangelock Nut, 3/16-18
9	720-04072A	Star Knob
10	731-05880	Spacer, .515 X 1.00 X .310 LG
11	732-04377C	Height Lever
12	936-0255	Bell Washer, .510 x 1.14 x .040
13	736-04413	Wave Washer, .385 ID X .598 OD
14	938-0148	Shoulder Screw, .50 x .66
15	738-04278	Shoulder Screw, 1/4-20:0.50
16	938-0507B	Shoulder Screw, .500 x .434
17	749-04356	Height Bracket
18	710-04995	Hi-lo Screw, :5/16-14:.750
19	710-1241	Hi-lo Screw, 1/4-15:1.00
20	726-0201	Speed Nut
21	731-05639A	Trailshield
22	732-04534	RH Torsion Spring
23	732-04535	LH Torsion Spring
24	741-0492A	Bushing
25	747-04589	Pivot Rod
26	753-04430	Flat Screw, 1/4-20:1.75
27	710-0572	Carriage Bolt, 5/16-18:2.50
28	731-05178	Upper Handle Insulator
29	731-05186	Lower Handle Insulator
30	731-2422	Cable Guide
31	925-04116	Key
32	625-04118	Replaceable Battery
33	631-04228	Fan Assembly
34	710-04329	Screw, 1.59 x .610
35	710-04373A	Hi-lo Screw, #12-16:.75
36	710-0726	Screw, 5/16-12:0.750
37	710-0895	Hi-lo Screw, 1/4-15:0.750
38	724-04025P	Motor
39	725-04387A	Battery Charger
40	725-04438	Battery Level Indicator
41	731-07444	Motor Bracket

Ref No.	Part Number	Description
42	925-04102	Switch Assembly
43	747-04663A	Switch Bail
44	749-04312	Lower Handle
45	749-04353	Upper Handle
46	624-0078	Blade Assembly Bolt
47	782-7051	Blade Locking Plate
48	731-04177	Discharge Chute
49	731-05710A	Rear Baffle
50	647-04082	Grass Bag Frame
51	987-02055	Mulch Plug
52	710-0599	Taptite Screw, 1/4-20 x .500
53	736-0270	Bell Washer, .265 x .75 x .062
54	936-0504	Wave Washer, .510 x .750 x .017
55	634-04347	Rear Wheel
56	634-04346	Front Wheel
57	964-04064	Grass Bag
58	720-04144	Locking Knob
59	787-01798	Deck
60	731-05746	Mulch Plug
61	942-04152	Blade
62	931-05686	Rear Door
63	720-04096	Height Adjust Knob
64	931-05634	Front Axle Cover
65	17032A	Chute Deflector Adaptor
66	732-1014	Torsion Spring, .290 ID x 1.68
67	747-0710	Hinge Pin, .250
68	731-05832	Fan
69	725-04436	Switch Button
70	712-0324	Hexlock Nut, 1/4-20
71	710-04261	Screw, #12-16:.50
72	725-04381A	12V Battery
73	725-04497A	Battery Jumper
74	732-0741A	Torsion Spring
75	1755	Screw, 10-9 x .50
76	731-1572	Bail Lock
77	732-04427	Compression Spring, .260 x .687
78	631-04435	Motor Shroud
79	731-07448	Battery Cover
80	731-07449	Battery Handle
—	731-04973	Battery Harness (Not Shown)

Model 182

777122813

**CIRCUIT BREAKER
RESET BUTTON**

777532911

TO REDUCE THE RISK OF INJURY, DO NOT
OPERATE UNLESS DISCHARGE COVER OR
GRASS CATCHER IS IN ITS PROPER PLACE.
IF DAMAGED, REPLACE IMMEDIATELY.



777122747

TO START



**HOLD BUTTON
LIFT BAIL**

WHEN MOTOR STARTS,
RELEASE BUTTON.

TO STOP



RELEASE BAIL

NOTICE

USE a UL approved
outdoor extension
cord


Recommended:

100 foot 14 Gauge

Acceptable:

50 foot 16 Gauge

777122946


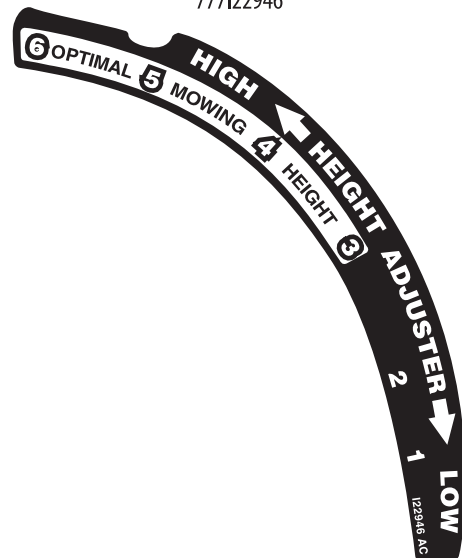


777532816




⚠ DANGER				
AVOID SERIOUS INJURY OR DEATH				
- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE UNIT TO WATER OR OPERATE UNIT ON WET GROUND. REPLACE DAMAGED CORD IMMEDIATELY. - DISCONNECT FROM SUPPLY CIRCUIT BEFORE SERVICING OR REMOVING BLADE. - KEEP HANDS AND FEET AWAY FROM ROTATING PARTS. - DO NOT MOW WHEN CHILDREN OR OTHERS ARE AROUND.		- REMOVE OBJECTS THAT CAN BE THROWN BY THE BLADE IN ANY DIRECTION. WEAR SAFETY GLASSES. - USE EXTRA CAUTION ON SLOPES. DO NOT MOW SLOPES GREATER THAN 15°. MOW ACROSS, NEVER UP AND DOWN. NEVER PULL MOWER CLOSE TO YOUR FEET. LOOK DOWN AND BEHIND BEFORE AND WHILE MOVING BACKWARDS.		
READ OPERATOR'S MANUAL. KEEP SAFETY DEVICES (BLADE CONTROL, TRAILING SHIELD, DISCHARGE COVER, ETC.) IN PLACE AND WORKING. IF DAMAGED, REPLACE IMMEDIATELY.				
⚠ WARNING WHEN REPAIRING THIS UNIT USE ONLY IDENTICAL REPLACEMENT PARTS. PARTS MUST BE RE-ASSEMBLED IN PROPER ORDER TO MAINTAIN DOUBLE INSULATION PROTECTION. REFER TO REPAIR PARTS SECTION OF YOUR OWNERS MANUAL OR CONTACT YOUR AUTHORIZED SERVICE CENTER.		DOUBLE INSULATED AC ONLY E251550 LISTED LAWN MOWERS 2002		
		Volts 120 Amps 12 Hertz 60 PLACE MODEL PLATE HERE		

777D14228



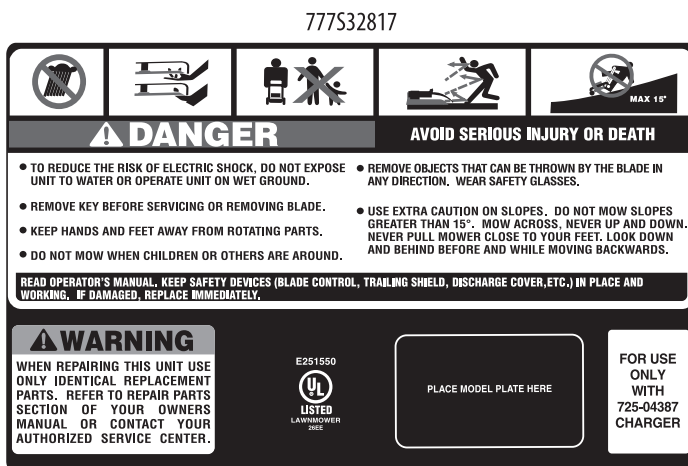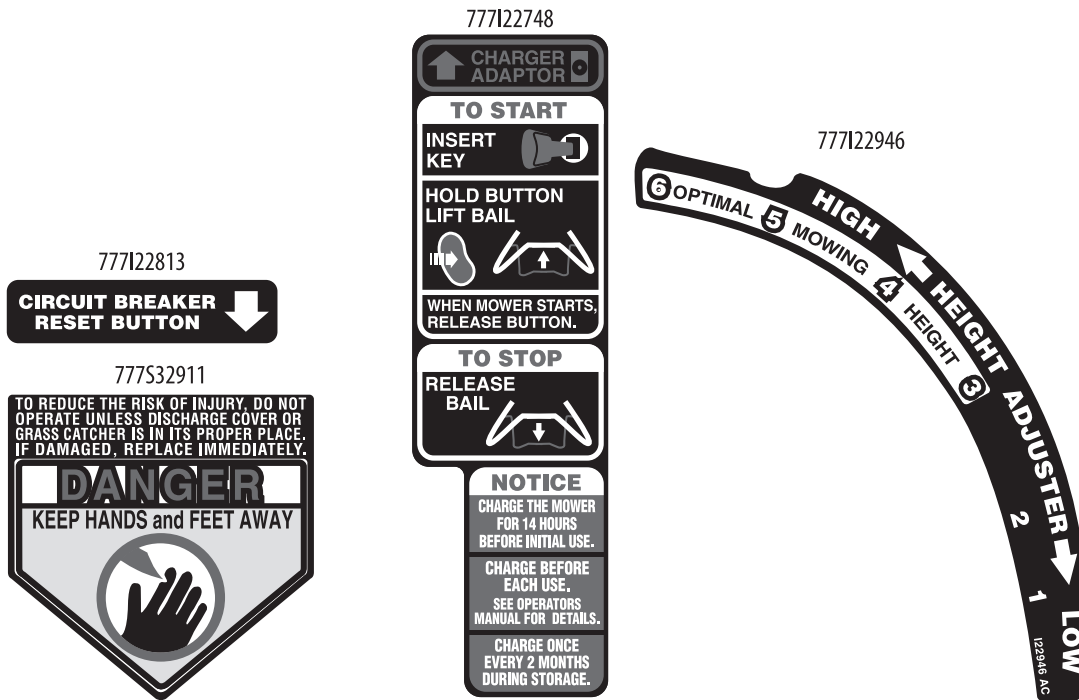

Model 189

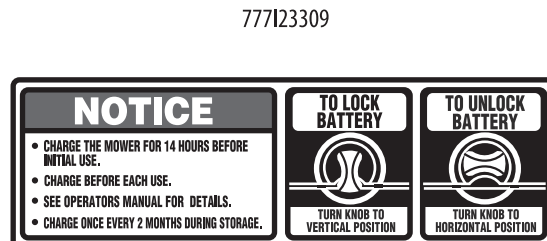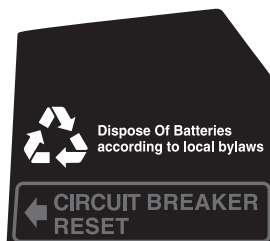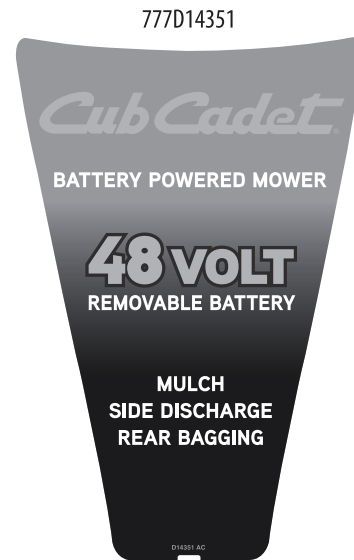

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
