

Supplement Sheet

Date: September 24, 2015
Subject: XT3 Three-Stage Snow Thrower
Attachment Cable Route
Model(s): 19A40023100

Important: The chute crank cables on the XT3 Three-Stage Snow Thrower Attachment must be routed along the outside of the chute crank assembly, away from the muffler.

1. Remove the eye bolt, flat washer and hex nut secured via the flange lock nut from the chute crank assembly. See Figure 1-1.

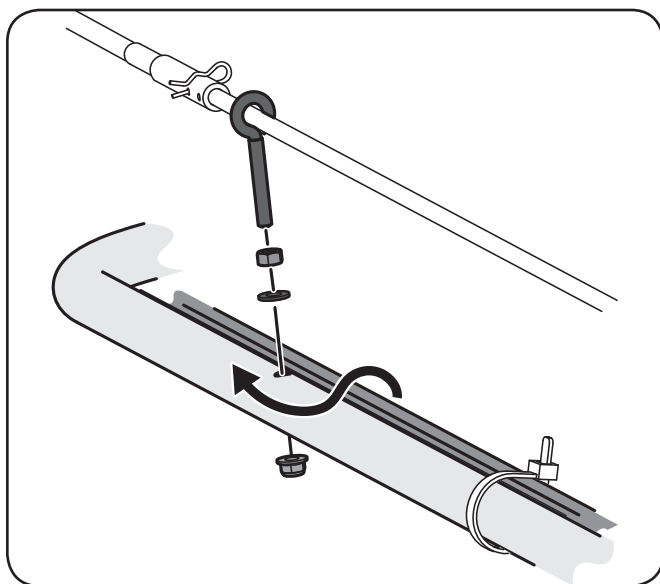


Figure 1-1

2. Position the two chute crank cables along the outside of the chute crank assembly, to the outside of the eye bolt mounting hole.

3. Reinstall the eye bolt, flat washer and hex nut to the chute crank assembly using the flange lock nut. Make sure the two chute crank cables are positioned to the outside of the eye bolt. See Figure 1-2.

Optional: Secure the chute crank cables along the outside of the chute crank assembly using cable ties.

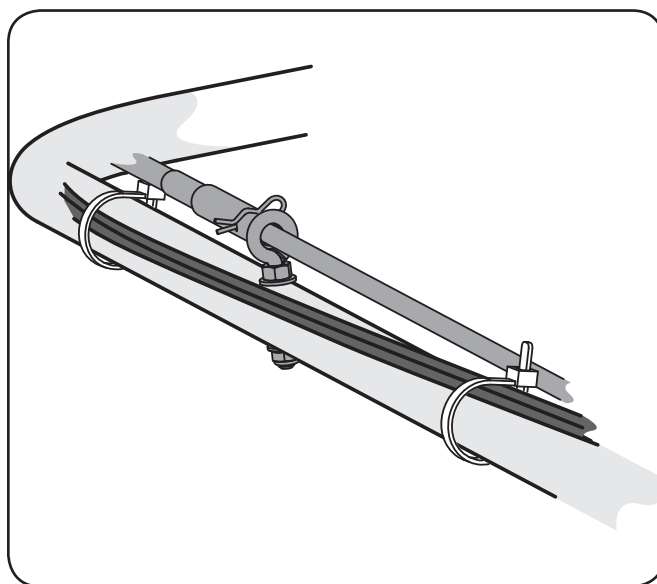


Figure 1-2

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
