

Cub Cadet.

ILLUSTRATED PARTS MANUAL

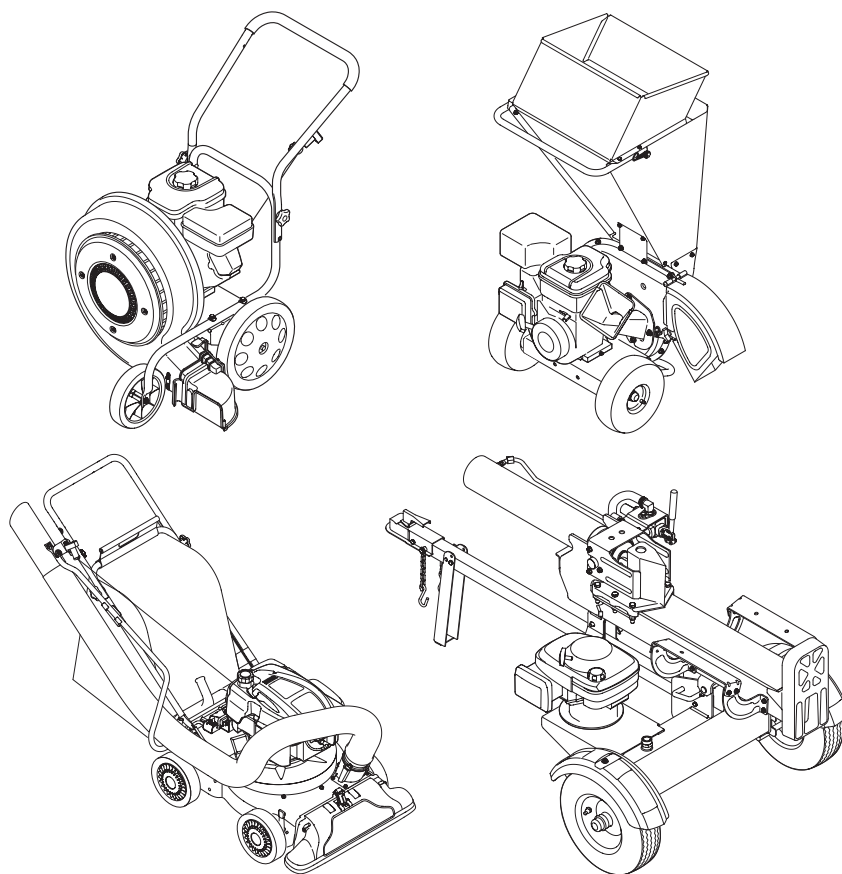

Fall / Winter Chore Performers

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Chore Performer. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

CS Model Series 410	10	Engine Model 1P70C0A-11	40
CS Model Series 410 Labels	20	Engine Model 170-L0-11	50
CSV Model 050	14	JS 1150	8
CSV Model 050 Labels	21	JS 1150 Labels	19
Engine Model 178-L0-11	22	LS 27 CC	4
Engine Model 170-C0A-11	30	LS 27 CC Labels	18

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER


--	--	--	--	--	--	--	--	--	--	--

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black	0685	Blue (Cub Cadet)
4021	Yellow (Cub Cadet)	0691	Black Jack (Cub Cadet Commercial)
0499	Beige (Cub Cadet)		

Page Left Blank Intentionally

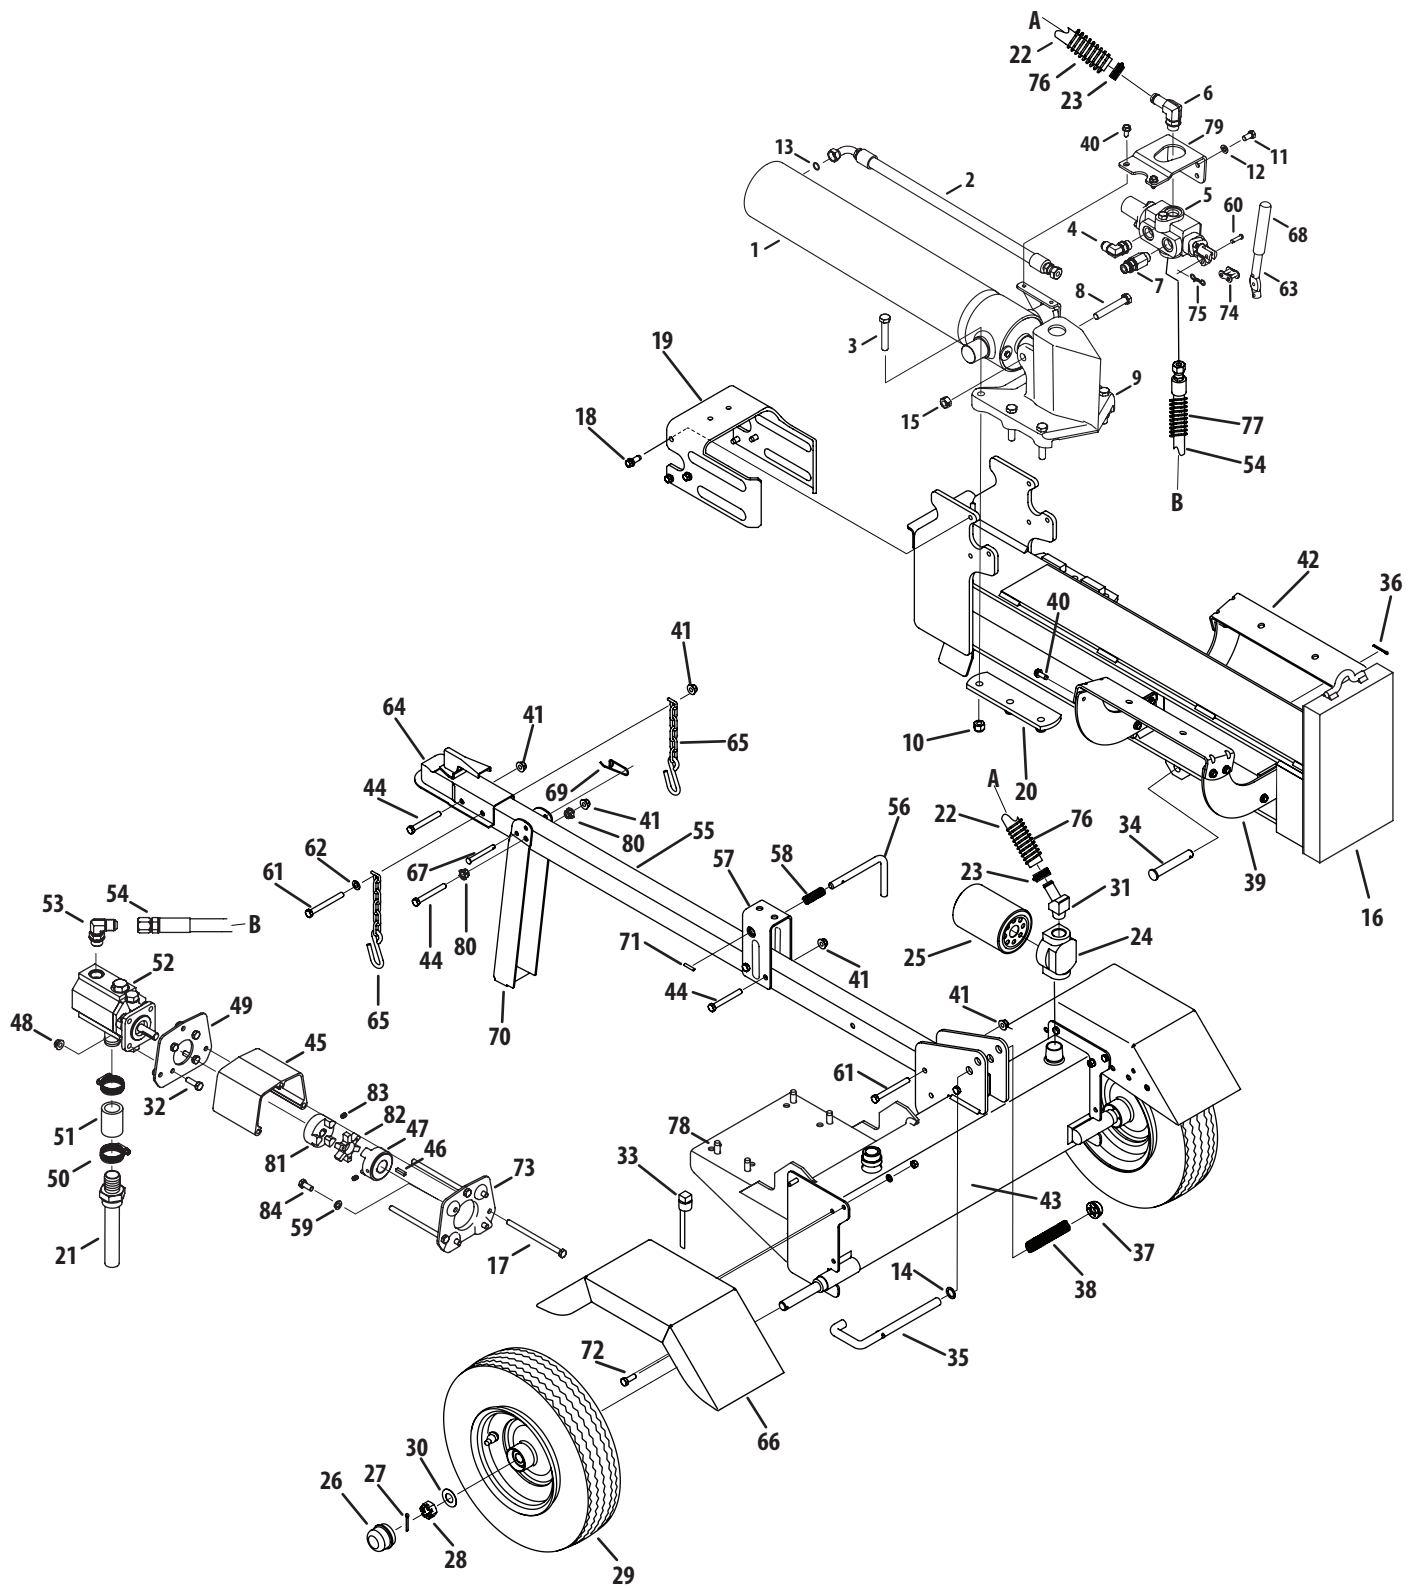


Ref.	Part Number	Description
1	918-04713	Hydraulic Cylinder
2	727-04362	Hydraulic Tube
3	710-1018	Hex Cap Screw, 1/2-20 x 2.75
4	737-04320	90 Degree Solid Adapter
5	718-04706P	Control Valve
6	737-04307	Return Elbow
7	737-04309	Nipple Pipe, 1/2-14
8	710-1806	Hex Cap Screw, 1/2-13 x 3.25
9	719-04529	Wedge Assembly
10	912-3058	Hex Lock Nut, 1/2-20
11	710-0216	Hex Cap Screw, 3/8-16 x .75
12	936-0169	Lock Washer, 3/8
13	721-04411	O-Ring, .489 ID x .070 Dia.
14	936-0116	Flat Washer, .635 x .93 x .06
15	712-3022	Hex Lock Nut, 1/2-13
16	681-04126	Beam Assembly
17	710-0974	Hex Screw, 5/16-18 x 4.75
18	710-04683	Self Tapping Screw, 3/8-16 x 1.0
19	781-04426	Dislodger Bracket
20	781-0790A	Back Plate
21	737-04308	Inlet Filter
22	727-0443	Return Hose, 3/4 x 44
23	726-0132	Hose Clamp, 5/8
24	737-04267	Filter Housing
25	723-0405	Oil Filter
26	734-0873	Hub Cap
27	714-0162	Cotter Pin
28	712-0359	Slotted Nut, 3/4-16
29	634-0187	Complete Wheel Assembly
	921-0168	Dust Seal
	941-0987	Roller Bearing
30	936-0351	Flat Washer, .760 x .500
31	737-04323	Hydraulic Fitting, 1 1/16 Orb x .75
32	710-0376	Hex Screw, 5/16-18 x 1.00
33	737-0348A	Vented Dipstick
34	711-05169	Clevis Pin
35	747-04983	Lock Rod
36	914-0470	Cotter Pin
37	726-0214	Push Cap

Ref.	Part Number	Description
38	732-0583	Compression Spring
39	781-04293	Log Tray Bracket
40	710-04484	Hex Washer Screw, 5/16-18 x .750
41	712-04065	Flange Lock Nut, 3/8-16
42	781-04179	Log Tray
43	681-04148	Frame Assembly
44	710-0521	Hex Bolt, 3/8-16 x 3
45	719-0281	Coupling Shield
46	914-0122	Square Key, 3/16" x .75
47	718-04395	Coupling, .875
48	712-04063	Flange Lock Nut, 5/16-18
49	781-0097	Rear Coupling Support Bracket
50	726-0132	Hose Clamp, 5/8
51	727-0451	Hose
52	918-04729	Gear Pump
53	737-04320	45 Degree Elbow Fitting
54	727-04288	High Pressure Hydraulic Hose
55	781-04424	Tongue Assembly
56	747-1261	Latch Rod
57	781-04420	Latch
58	932-3127	Compression Spring
59	936-0119	Lock Washer, 5/16
60	711-04585	Clevis Pin
61	710-3085	Hex Cap Screw, 3/8-16 x 3.50
62	936-0185	Flat Washer, .375 x .738 x .063
63	747-04539	Hydraulic Valve Control
64	681-04030	Hitch Coupling Assembly
65	713-0433A	Chain
66	781-04002	Fender
67	911-0813	Clevis Pin
68	720-04088	Grip
69	732-0194	Spring Pin
70	781-04430	Jack Stand
71	715-0120	Spiral Pin
72	710-0602	Self-Tapping Screw, 5/16-18 x 1.00
73	781-0098A	Front Coupling Support Bracket
74	913-04036	Valve Handle Link
75	714-04040	Cotter Pin, Bow Tie
76	781-0526A	Hose Guard, 44"

Continued on next page

Ref.	Part Number	Description
77	781-0538A	Hose Guard, 48"
78	710-04683	Sems Screw, 3/8-16 x 1.00
79	781-04418	Outer Valve Bracket
80	941-0475	Plastic Bushing, .380 ID
81	718-04392	Coupling, .500
82	735-04103	Spider Bushing
83	710-1842A	Set Screws
84	710-0157	Hex Cap Screw, 5/16-24 x .75


Page Left Blank Intentionally

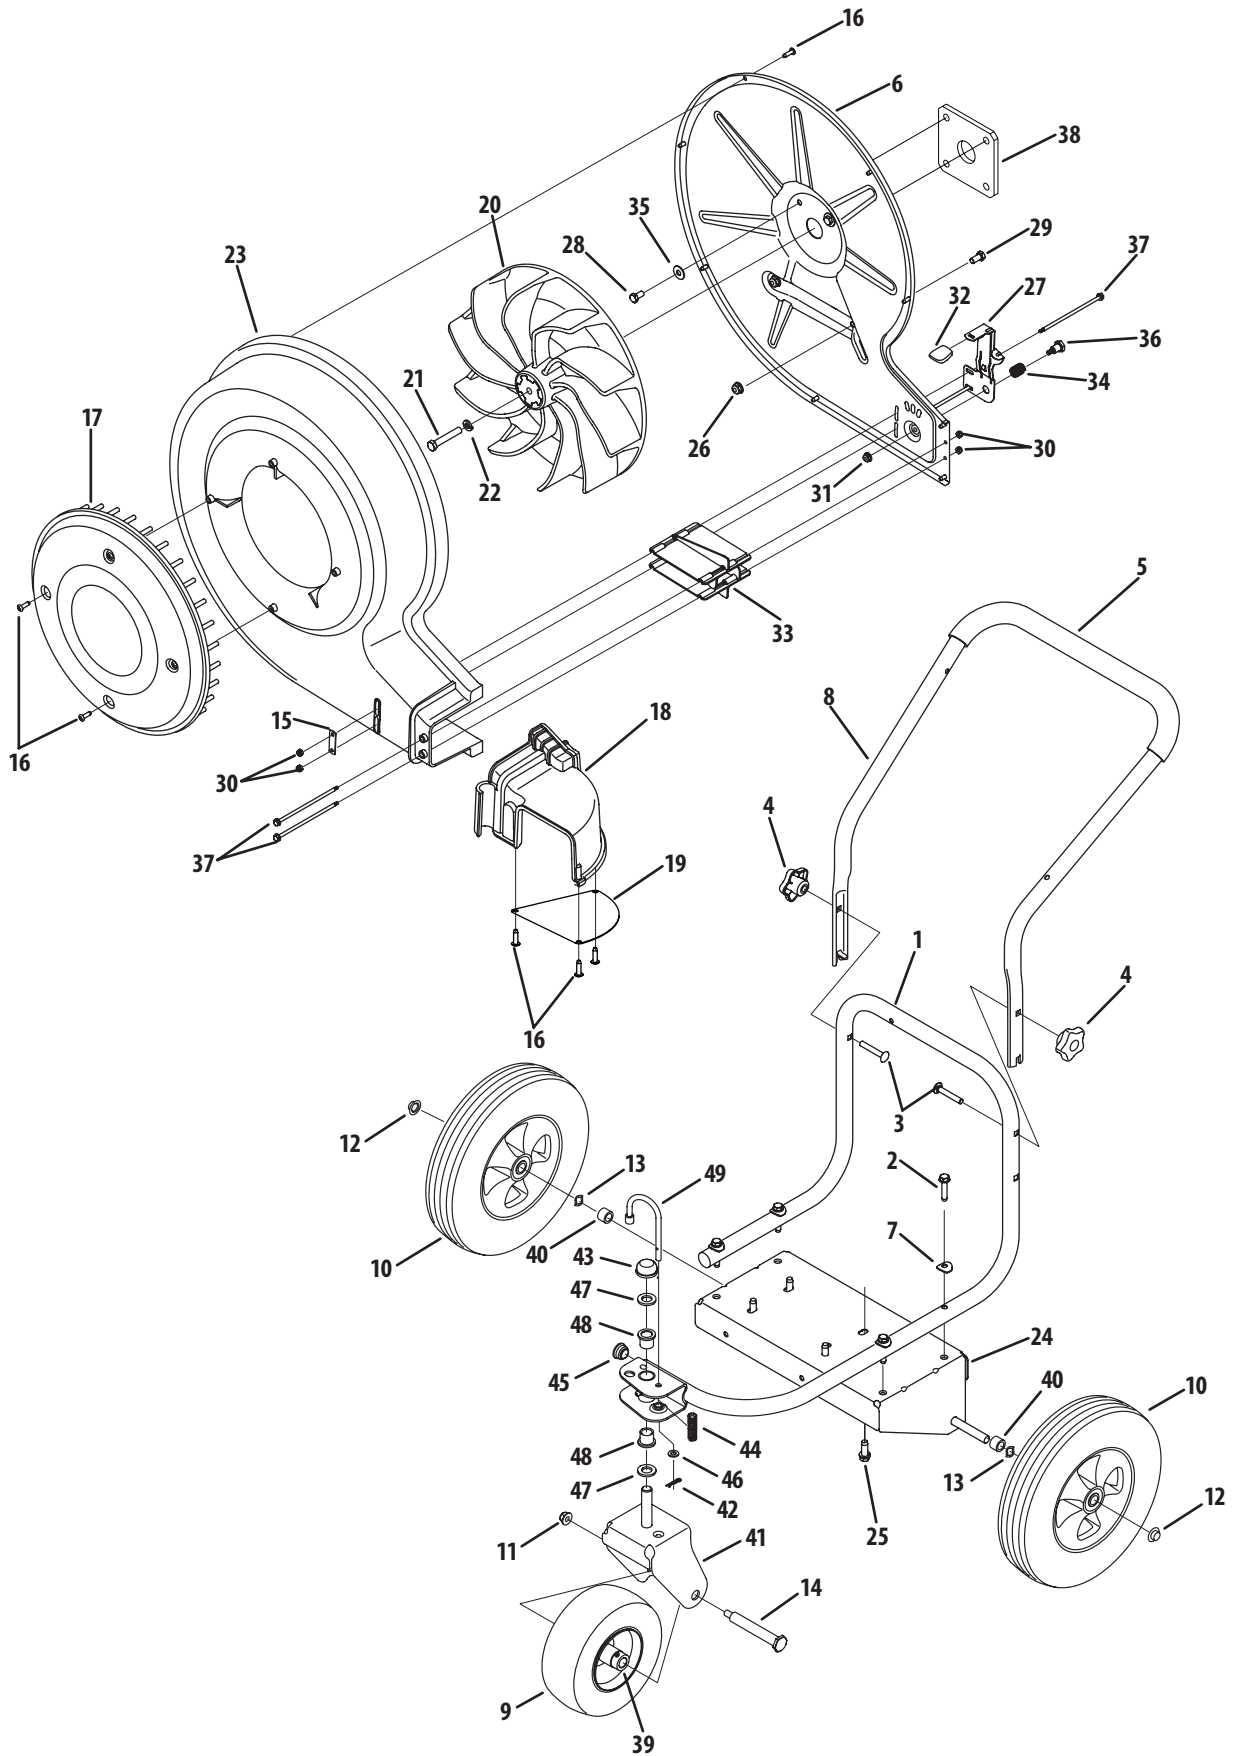

Ref.	Part Number	Description
1	681-04086	Lower Handle Assembly
2	710-04605	Hex Screw, 5/16-18 x 1.50
3	710-0487	Carriage Screw, 5/16-18 x 2.00
4	720-04072A	Star Knob, 5/16-18
5	720-04091	Foam Grip, .970 x 25
6	781-04165	Back Plate
7	936-0451	Saddle Washer, .320 x .93 x .060
8	749-04291	Upper Handle
9	734-04278	Wheel, 8 x 3
10	734-04279	Wheel, 12 x 3, Beige
11	712-04065	Flange Lock Nut, 3/8-16
12	726-0299	Push Cap, 1/2"
13	936-0504	Wave Washer, .510 x .750 x .017
14	738-04290	Shoulder Screw, .625 x 3.94
15	781-04212	Guide Plate
16	710-04373A	Hex Screw, 12-16 x .75
17	731-05929	Blower Cover
18	631-04253	Chute Assembly
19	781-04175	Chute Plate
20	631-04213	Impeller Assembly
21	710-1254	Hex Screw, 3/8-24 x 2.25
22	936-0217	Lock Washer, 3/8
23	731-05592	Blower Housing
24	681-04084A	Frame
25	710-0654A	Sems Screw, 3/8-16 x 1.000


Ref.	Part Number	Description
26	712-04063	Flange Lock Nut, 5/16-18
27	781-04181	Louver Lever
28	710-0888	Hex Bolt, 5/16-24 x 1.00
29	710-3008	Hex Bolt, 5/16-18 x .75
30	712-04035	Hex Lock Nut, #8-32
31	712-04064	Flange Lock Nut, 1/4-20
32	720-0426	Height Adjustment Knob
33	731-05644	Louver Plate
34	932-3042	Comp. Spring, .515 x .641 x .95
35	736-0242	Bell Washer, .340 x .872 x .060
36	738-04222	Shoulder Screw, .437 x .50 x 1/4-20
37	738-04223	Shoulder Screw, .18 x 4.8 x 8-32
38	781-04292	Engine Plate
39	941-0706	Flange Bearing w/ Fitting
40	750-04854	Spacer, .525 x .775 x .560
41	681-04085	Caster Wheel Bracket Assembly
42	914-0104	Cotter Pin
43	726-0214	Push Cap
44	932-0306A	Compr. Sprng., .531 OD x 1.75 Lg
45	735-0246A	End Plug
46	936-0264	Washer, Flat, .330 x .630 x .0635
47	736-0366	Washer, Flat, .640 x 1.12 x .125
48	741-0685	Flange Bearing, .631 ID
49	747-0924	Lock Pin

CS Model Series 410

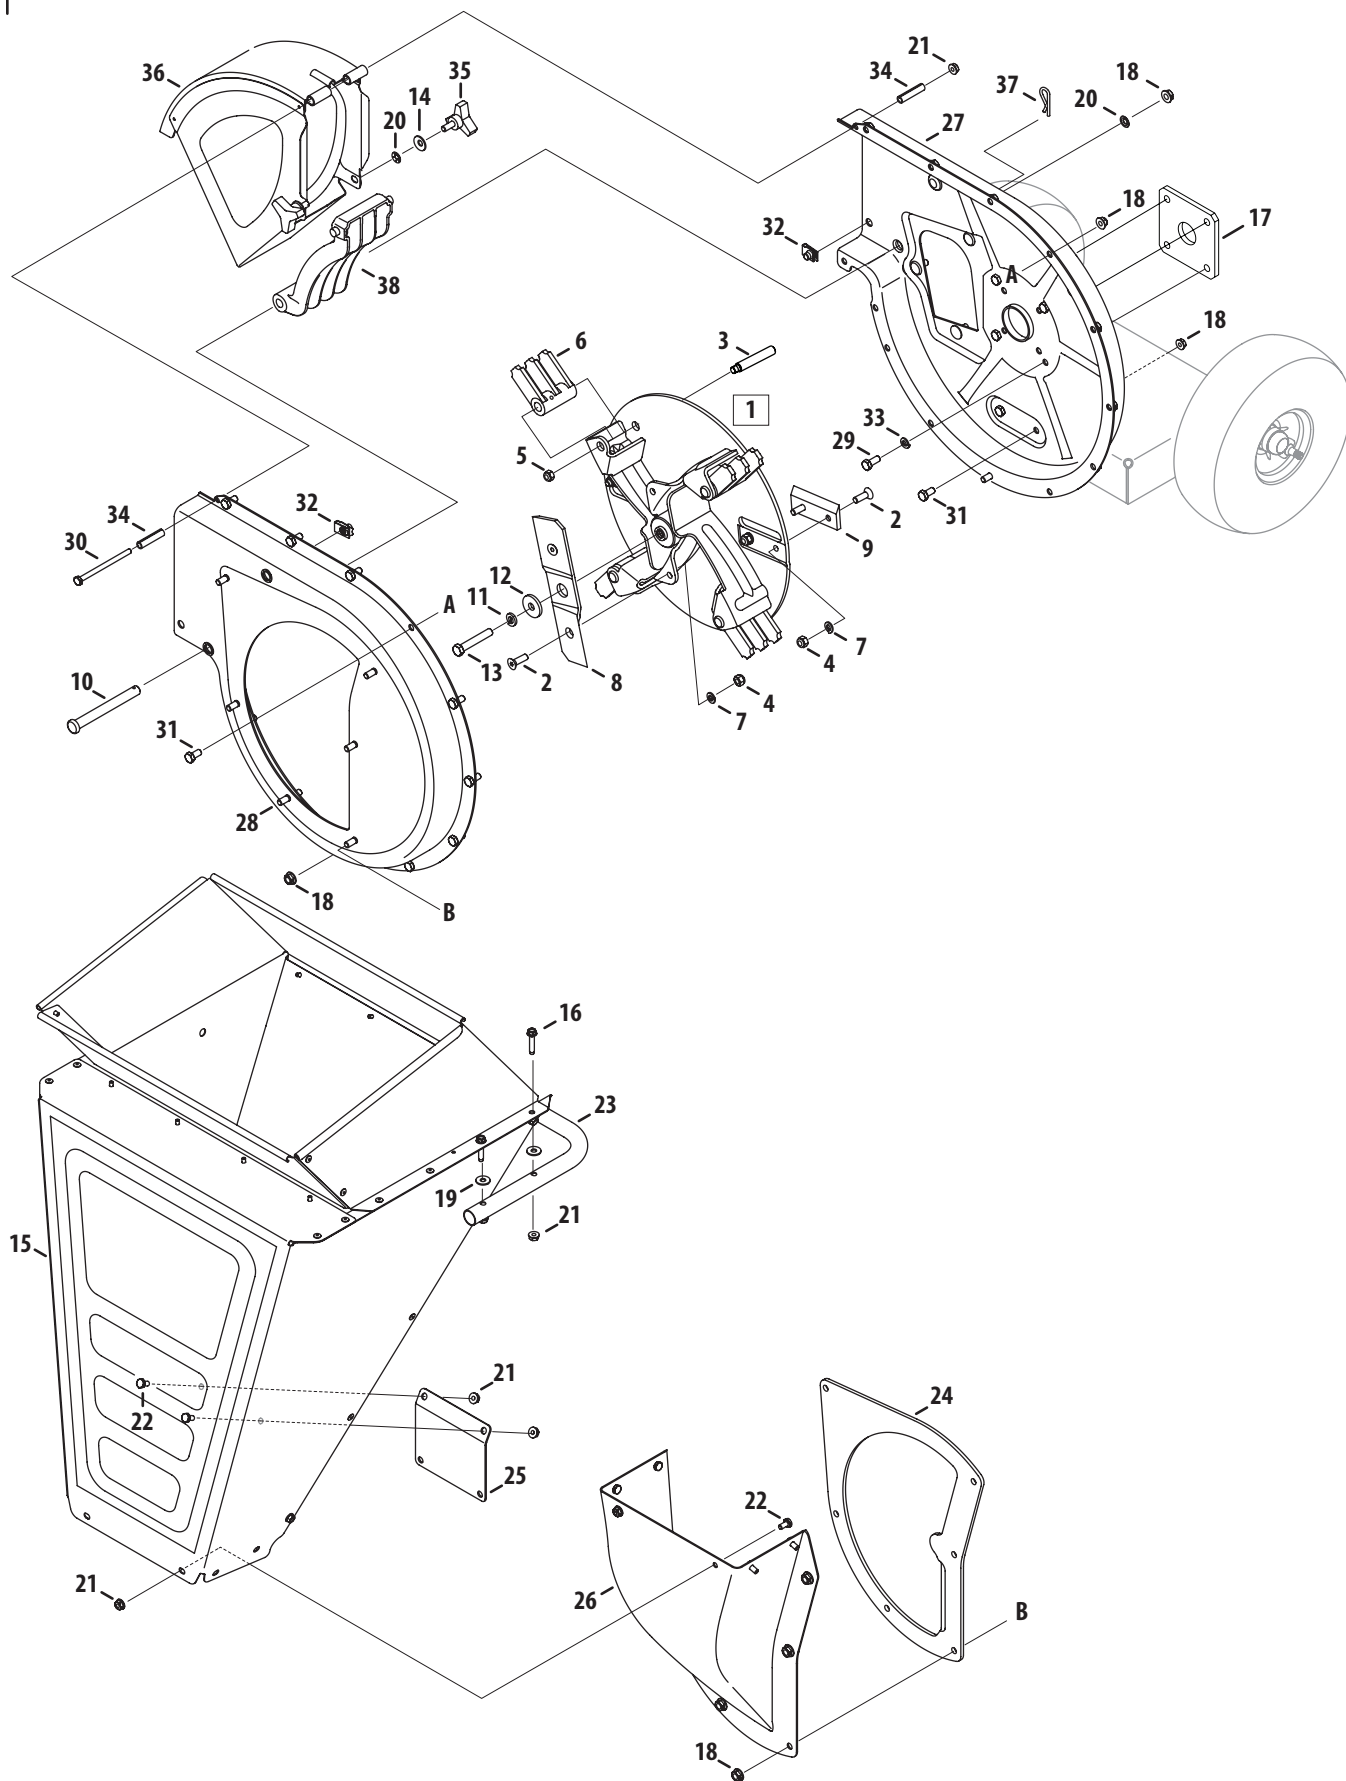

Ref No.	Part Number	Description
1	981-04094	Impeller Assembly Complete
2	710-1054	Machine Screw, 5/16-24 x 1.0
3	738-04286A	Shoulder Pin, .5 x 2.625
4	912-0411	Hex Lock Nut, 5/16-24
5	712-0266A	Nut, Jam Lock, 3/8-16
6	719-04308	Flail Blade
7	936-0119	Lock Washer, 5/16
8	942-04050	Shredder Blade
9	942-0544B	Chipper Blade
10	911-0835	Clevis Pin,.50 x 4.62
11	936-0217	Lock Washer, 3/8
12	736-0247	Flat Washer,.406 x 1.25
13	710-1254	Hex Cap Screw, 3/8-24 x 2.2
14	736-0242	Bell Washer.340 ID x.872 OD
15	681-04011	Shredder Hopper Assembly
16	710-0809	Hex Cap Screw, 1/4-20 x 1.250
17	781-04292	Engine Plate
18	712-04063	Flange Lock Nut, 5/16-18
19	736-0173	Flat Washer, .28 x .74 x .063


Ref No.	Part Number	Description
20	726-0201	Speed Nut,.3125ID
21	712-04064	Nut, Flange, Lock, 1/4-20
22	710-0599	TT Screw, 1/4-20 x .5
23	749-04103	Hopper Handle
24	781-04007	Shredder Plate
25	781-04027	Hopper Support Bracket
26	781-04033	Inlet Guide
27	681-04116	Inner Flail Housing Assembly
28	681-04002	Outer Flail Housing Assembly
29	710-0888	Hex Cap Screw, 5/16-24 x 1.00
30	710-0825	Hex Cap Screw, 1/4-20 x 3.75
31	710-3025	Hex Cap Screw, 5/16-18 x .625
32	926-0211	U-Nut, 5/16-18
33	936-0119	Lock Washer, 5/16
34	950-0793	Hinge Spacer,.265 x.380 x 1.66
35	720-0170	Knob, 5/16-18
36	681-0094A	Chute Deflector Assembly
37	914-0149B	Internal Cotter Pin
38	719-04070	Shredder Screen

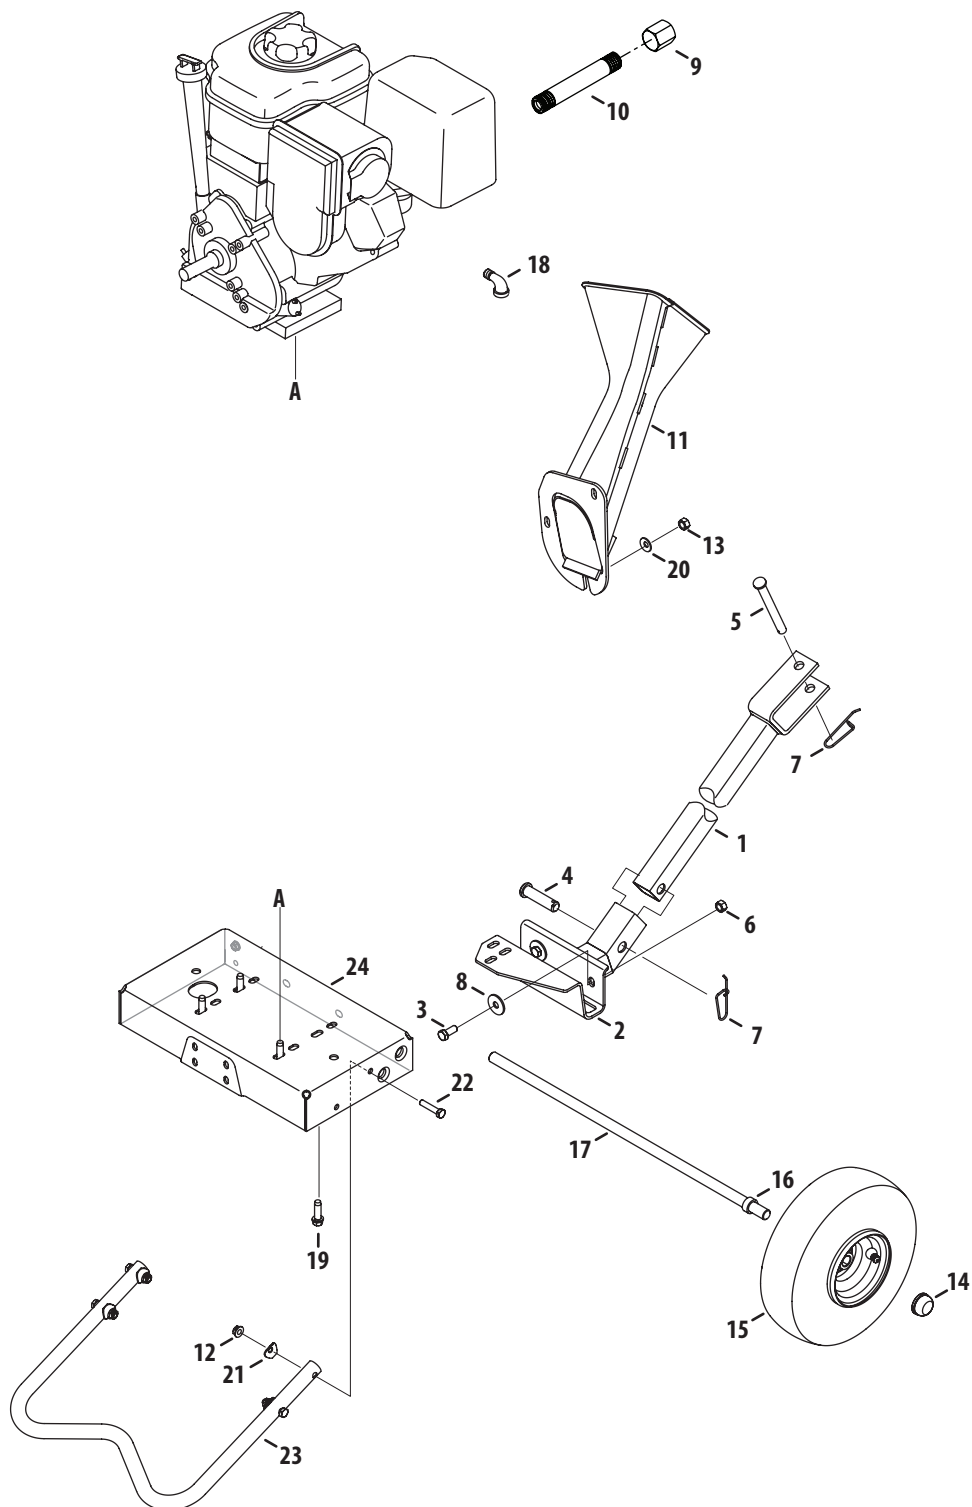

Ref No.	Part Number	Description
1	981-0133	Tongue Hitch Mount
2	681-0134A	Base Hitch Mount
3	710-3001	Hex Cap Screw, 3/8-16 x.88
4	711-0299	Clevis Pin,.625 x 2.4
5	911-0835	Clevis Pin,.50 x 4.62
6	712-04065	Flange Lock Nut, 3/8-16
7	732-0194	Spring Pin
8	936-0133	Flat Washer,.411 x 1.25 x 1.0
9	737-0132	End Cap, 1/4 NPT
10	737-0298	Pipe, 1/4 NPT x 3.5 LG
11	681-04118	Chipper Chute
12	712-04063	Flange Lock Nut, 5/16-18
13	912-3010	Hex Nut, 5/16-18
14	726-0214	Push Cap, 5/8
15	634-04627	Wheel, 10 x 4 x 4
16	950-0786	Spacer, .64 x .88 x .38
17	738-0813	Axle, 22.47"
18	937-0195	Elbow Fitting
19	710-0502A	Hex Sems Screw, 3/8-16 x 1.25
20	736-0242	Bell Washer.340 ID x.872 OD
21	936-0451	Washer,.320 ID x.93 OD
22	710-0805	Hex Cap Screw, 5/16-18 x 1.50
23	749-04104	Tube Support
24	681-0184C	Frame Assembly
—	964-04023*	Debris Collection Bag
—	723-0400*	Safety Glasses

* Not Shown




CSV Model 050

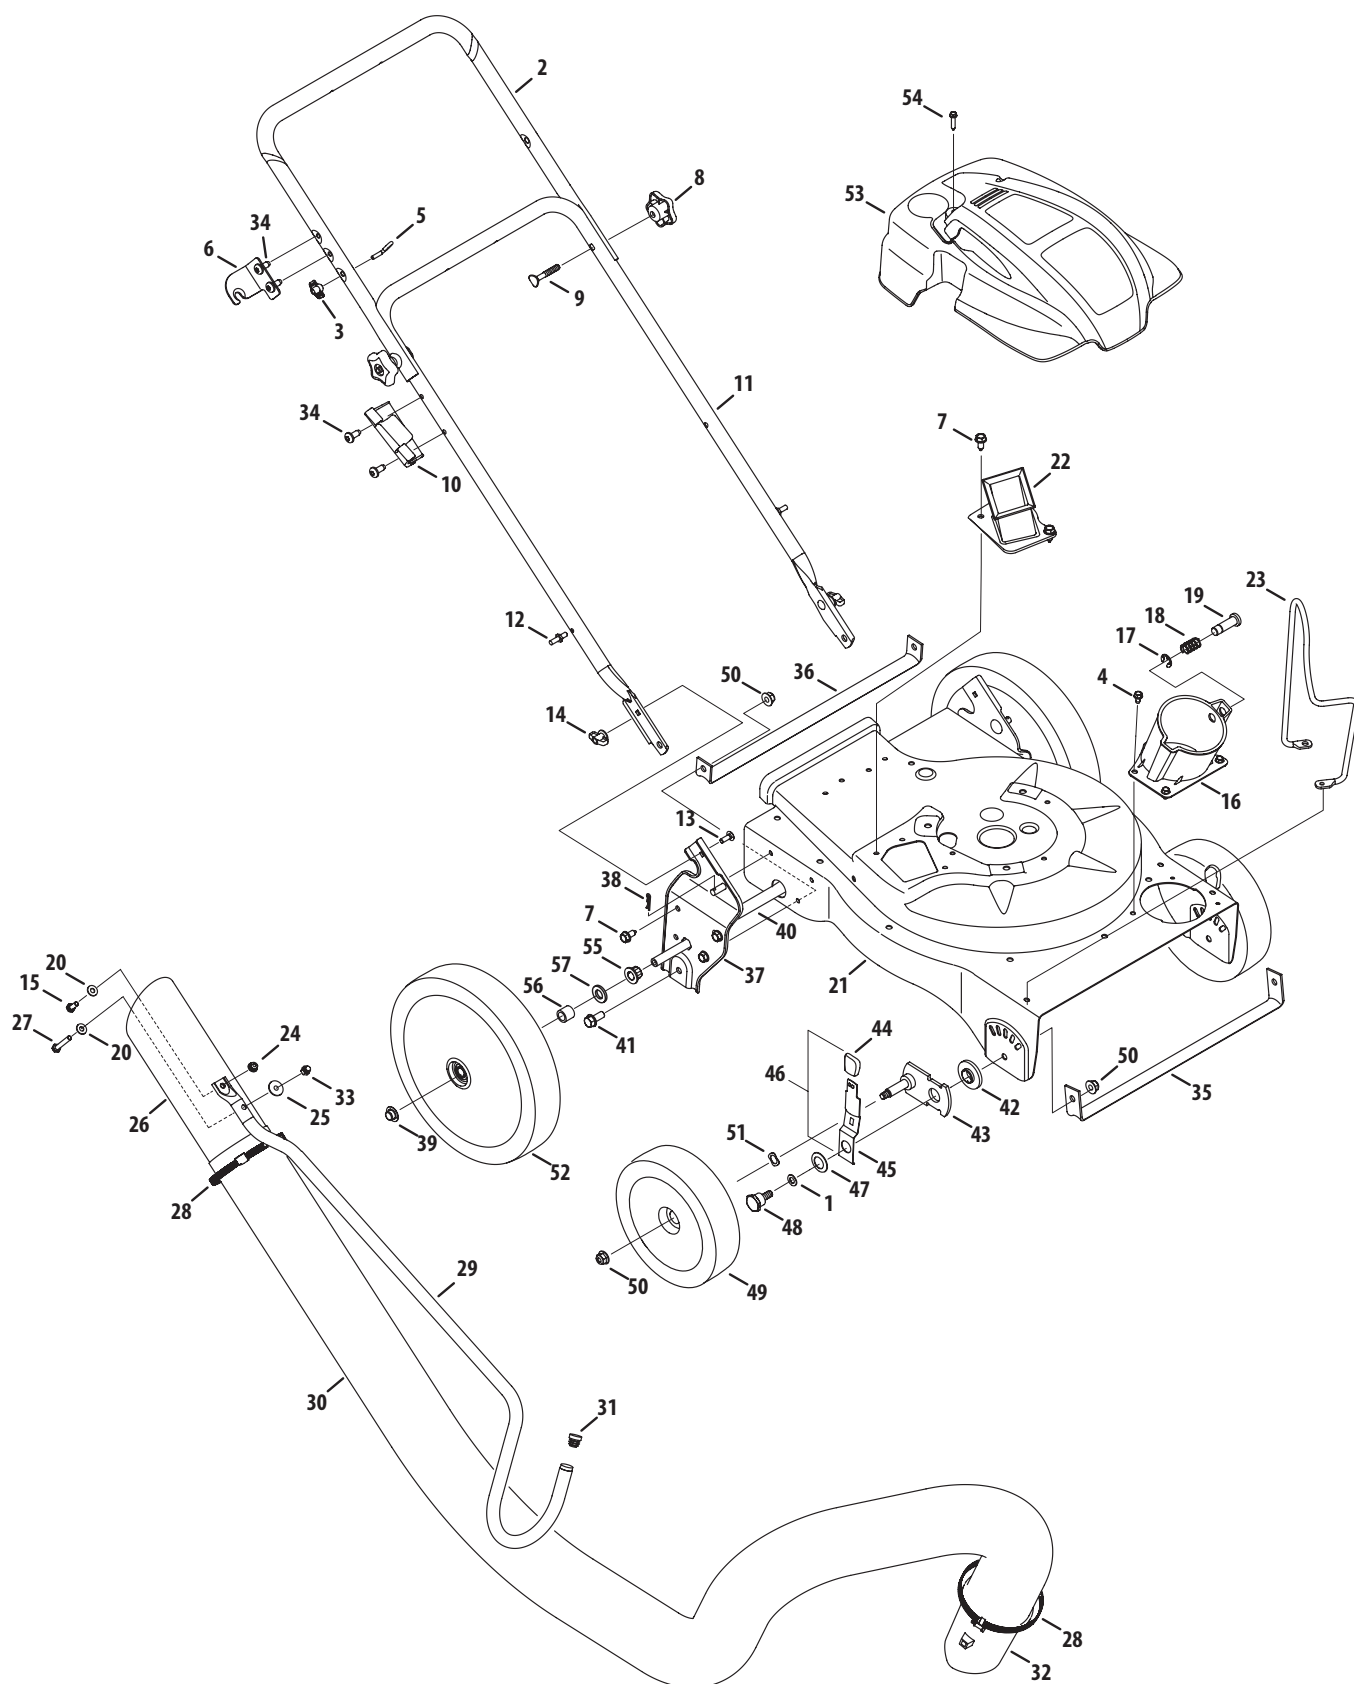

Ref No.	Part Number	Description
1	936-0314	Thrust Washer.375 ID x.70 OD
2	749-04172	Upper Handle
3	720-0279	Knob
4	710-05073	Screw, 1/4-20 x .500
5	710-1205	Eye Bolt
6	781-1056	Upper Handle Bracket
7	710-0726	Hex Cap Screw 5/16-12 x.750
8	720-04072A	Star Knob
9	710-1174	Carriage Bolt
10	731-04911	Nozzle Handle Clip
11	749-04165	Lower Handle
12	711-1293	Studs
13	710-0703	Carriage Screw 1/4-20 x.75
14	712-0397A	Wing Nut 1/4-20
15	710-0751	Hex Cap Screw 1/4-20 x.620
16	681-0195	Hose Base Adapter Assembly (Incl. Ref.# 17-19)
17	916-0104	E Ring.500 Dia
18	932-3035	Compression Spring
19	711-1571	Clevis Pin
20	936-3020	Flat Washer.271 ID x.630 OD
21	781-04223	Upper Flail Housing
22	681-04088	Chipper Chute Assembly
23	747-04985	Hose Cradle
24	712-04064	Flange Lock Nut, 1/4-20
25	748-0457	Spacer
26	731-2478	Hose Nozzle
27	710-3288	Hex Cap Screw 1/4-20 x 2.625
28	723-0295	Adjustment Clamp
29	749-1270A	Nozzle Handle

Ref No.	Part Number	Description
30	764-0648A	Vacuum Hose
31	720-0369	Handle Plug
32	731-06469	Hose Adapter
33	912-0442	Cap Lock Nut, 1/4-20
34	710-1611B	TT Screw, 5/16-18 x .750
35	781-04082	Front Wheel Support Brace
36	781-04081	Rear Wheel Support Brace
37	981-0156A	Handle Bracket Ass'y RH
	981-0155A	Handle Brkt Ass'y LH
38	914-0104	Cotter Pin
39	726-0299	Push Cap
40	711-04908	Axle
41	710-04482	HHflg, 3/8-16 x .875
42	741-04242	Height Adjustment Bearing
43	687-02342	Pivot Arm Assembly
44	720-0426	Height Adjustment Knob
45	732-1026	Spring Lever
46	987-02051	Height Lever Assembly (Incl. Ref.# 44-45)
47	736-0741	Bell Washer.760 ID x.25 OD
48	738-1172	Shoulder Screw,.750 x.500
49	634-04347	Front Wheel
50	712-04065	Flange Lock Nut, 3/8-16
51	936-0232	Washer, Wave, .531 x .781 x .013
52	634-04367	Rear Wheel
53	931-04232B	Engine Shroud
54	710-04744	Screw, #12-16 x 1.00
55	741-04108	Brg. Flg, Hex
56	748-0190	Spacer
57	936-0369	Washer, Flat, .508ID x 1.00 OD

CSV Model 050

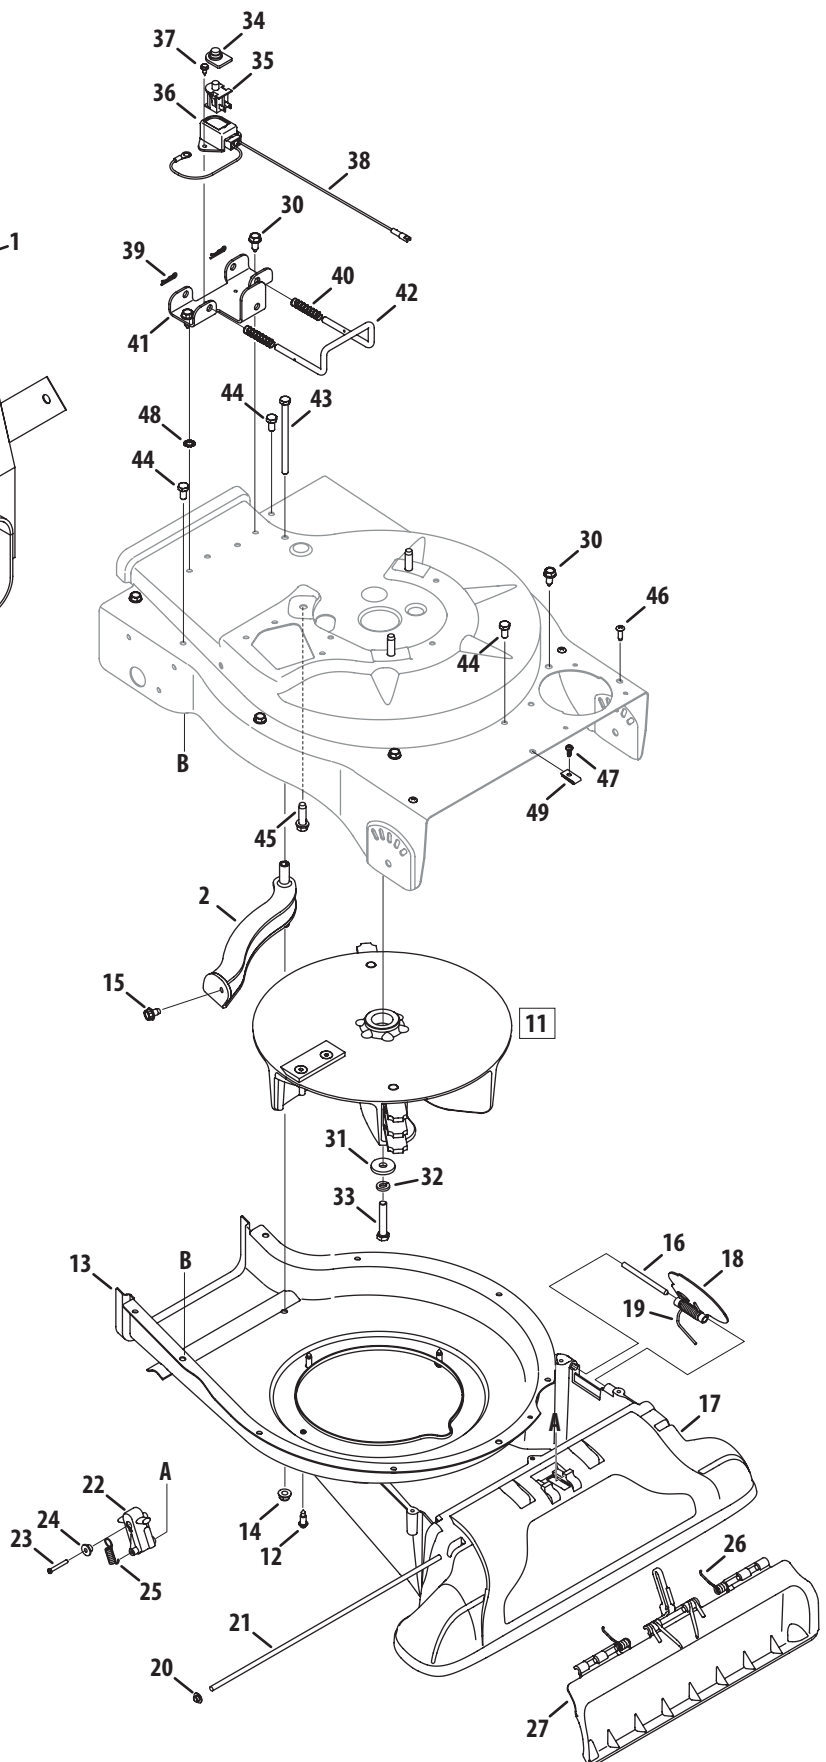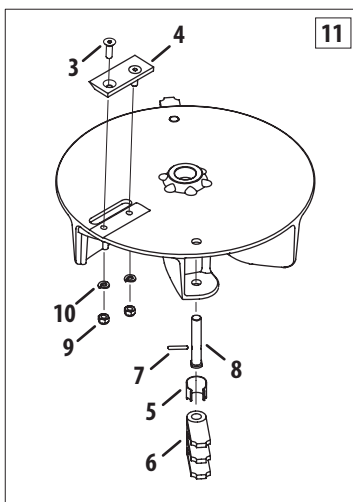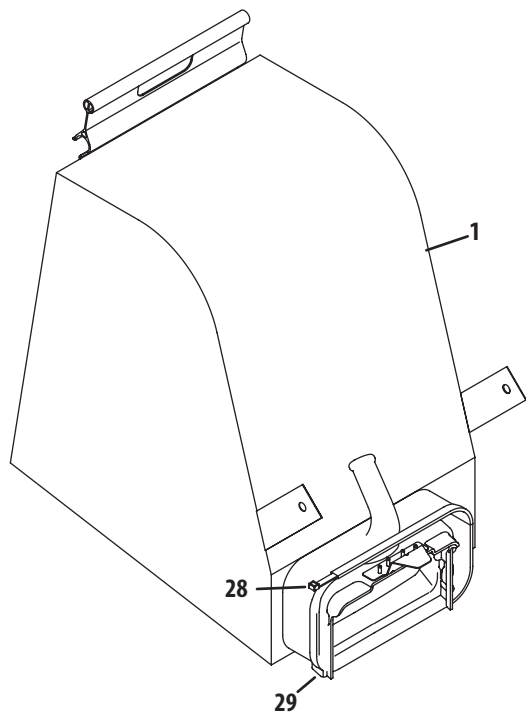

Ref No.	Part Number	Description
1	664-04040	Bag Assembly (incl. Ref 28)
2	681-0154	Screen Assembly
3	710-1054	Hex Screw 5/16-24 x 1.0
4	981-0490	Chipper Blade
5	781-0735	Pin Clip
6	719-0329	Flail
7	715-0166	Spiral Pin
8	711-1401	Clevis Pin
9	912-0411	Lock Nut, 5/16-24
10	936-0119	Lock Washer, 5/16
11	981-0152	Impeller Assembly (Incl. Ref.# 3 – 10)
12	710-1650	Shoulder Screw, #12-24 x.30 x.46
13	781-0721B	Lower Flail Housing
14	712-04063	Flange Lock Nut 5/16-18
15	710-0607	Screw, 5/16-18 x.500
16	747-04297	Hinge Pin
17	981-04031	Nozzle
18	781-1064	Base Adapter Door
19	732-1156	Torsion Spring
20	926-0106	Cap Speed Nut 1/4
21	711-1551	Pivot Rod
22	731-2485A	Nozzle Door Lever
23	710-1256	Hex Screw, #8-18 x 1.25
24	750-1294	Shoulder Spacer
25	732-3118	Extension Spring

Ref No.	Part Number	Description
26	732-1151A	Nozzle Door Torsion Spring
27	731-2294A	Nozzle Door
28	726-0288	Tie Strap, 42"
29	631-0083	Chute Assembly
30	710-0726	Hex Index Screw, 5/16-12 x.750
31	736-0247	Flat Washer.375 ID x 1.25 OD
32	936-0217	Lock Washer 3/8
33	710-0818	Hex Cap Screw 3/8-24 x 2.0
34	925-1700	Switch Cover
35	925-3166	Safety Switch
36	931-1613	Safety Switch Cover
37	910-0224	Hex Washer Screw #10-16 x.50
38	629-0920A	Wire Harness
39	914-0104	Cotter Pin
40	732-0962	Compression Spring
41	781-0778A	Mounting Bracket
42	747-1153	Lock Rod
43	710-3195	Hex Cap Screw 5/16-18 x 4.5
44	710-3025	Hex Cap Screw 5/16-18 x.625
45	710-0654A	Hex Washer Screw 3/8-16 x 1.00
46	710-1220	Screw, #12-16 x.750
47	710-0351	Screw #10 - 16 x.500
48	736-0607	External L-Washer 5/16
49	726-0139	Speed Nut
—	723-0400	Safety Glasses (Not Shown)

LS 27 CC Labels

777X45191




777D14951



777x43688



777I23426

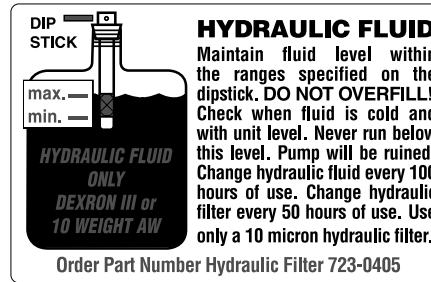

777S33682



777S33681

WARNING TO AVOID INJURY AND/OR PROPERTY DAMAGE

MOVING LOG SPLITTER BY HAND • Lock beam in horizontal position. • Lock jack stand in down position. • Do not attempt to move log splitter up or down a slope by hand.	TOWING LOG SPLITTER • Lock beam in horizontal position. • Attach coupler to Class I or higher hitch with 2" ball. • Latch securely. • If coupler adjustment is needed, refer to owner's manual.	• Raise jack stand and latch securely in full up position. • Attach safety chains to tow vehicle. • Do not tow faster than 45 mph. • High speed may cause loss of control. • Check local, state and federal requirements before towing on any public road.
---	--	--

777S33680

OPERATOR'S INSTRUCTIONS VERTICAL 1. READ THE OPERATOR'S MANUAL. 2. Place log splitter on flat dry solid ground and block wheels. 3. Lock in either the Horizontal or Vertical position. 4. Start engine, set throttle to maximum speed and allow hydraulic fluid to warm up. 5. Place the log against the end plate. 6. Stabilize log with your left hand (as shown) on its side opposite the beam, when needed. Remove your left hand when wedge just contacts the log. 7. Move control handle FORWARD with your right hand to split log. Release control handle to NEUTRAL to stop wedge. 8. Move control handle to REVERSE to fully retract the wedge and dislodge the log.	HORIZONTAL	DANGER 1. Read operator's manual. 2. Keep hands away from wedge, end plate, partly split wood and moving parts. 3. Stabilize log on its side opposite the beam, never on ends between log and wedge on log and end plate. 4. Only one operator permitted. Adult who loads and stabilizes log must be person operating the control handle. 5. Keep bystanders, helpers and children at least 10 feet away. 6. Never check for leaks with your hands. High pressure fluid can escape through a pin hole leak and cause serious injury by puncturing the skin and causing blood poisoning. 7. Operate the log splitter on flat, dry, solid ground and block wheels. 8. Wear protective work gloves, safety shoes and safety glasses, watch your footing. 9. Never operate under the influence of alcohol or drugs. 10. Do not refuel a hot or running engine. WARNING Operation Of This Equipment May Create Sparks That Can Start Fires Around Dry Vegetation. A Spark Arrestor May Be Required. The Operator Should Contact Local Fire Agencies For Laws Or Regulations To Fire Prevention Requirements.
---	--------------------------	---


777D14955

	277cc OHV CAST IRON SLEEVE D14955
--	--

777D14953

	27^{US} TON HIGH PERFORMANCE COMMERCIAL GRADE LOG SPLITTER D14953-AC
--	---

777S32905

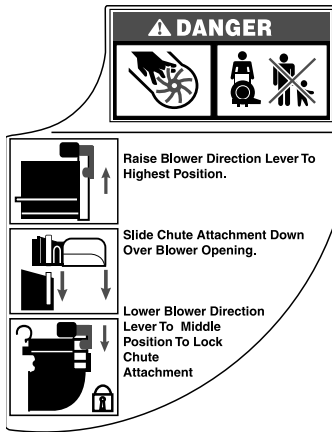


777D16360




777D15169



777S32904

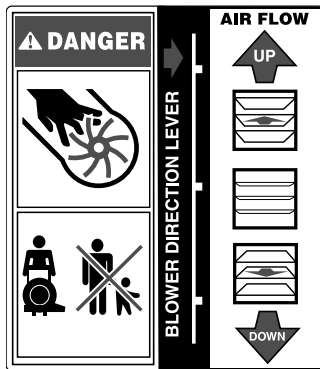


777I22812

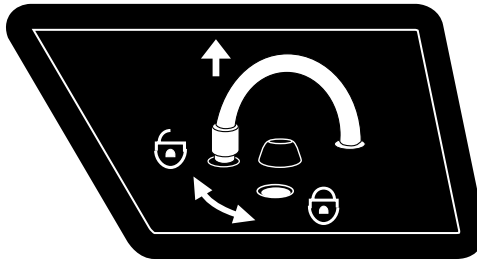

777X43688



777S33200

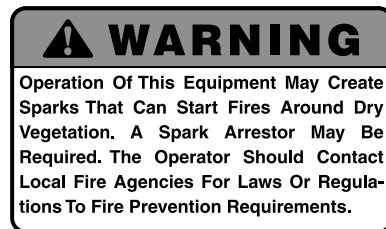

777D15167




777S33732



CS Model Series 410 Labels

777S33113

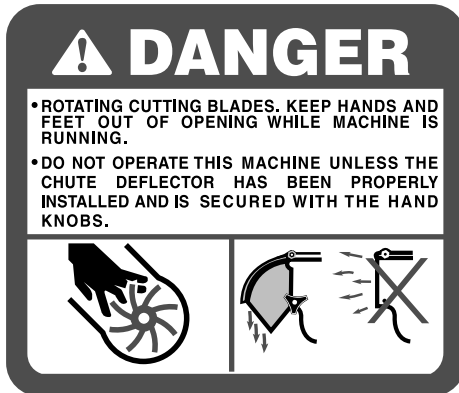

777S33673



777D15167




777S33676



777S33671



777S32604

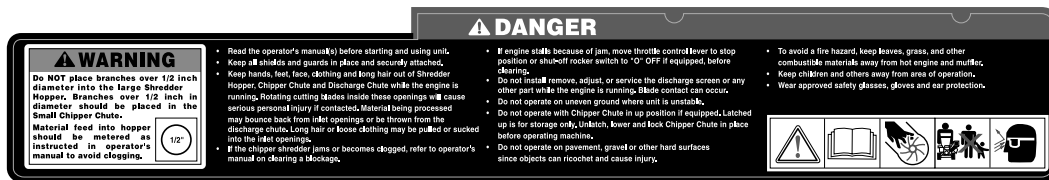

777D15169




777D15164




777X43688




777I23444

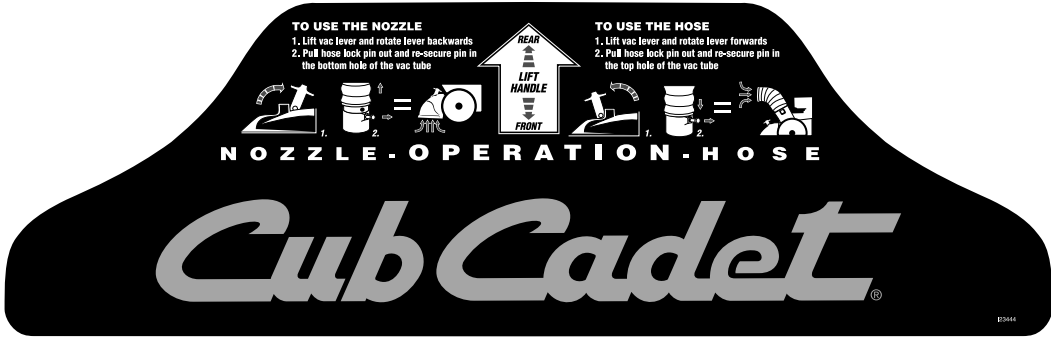

777S33694

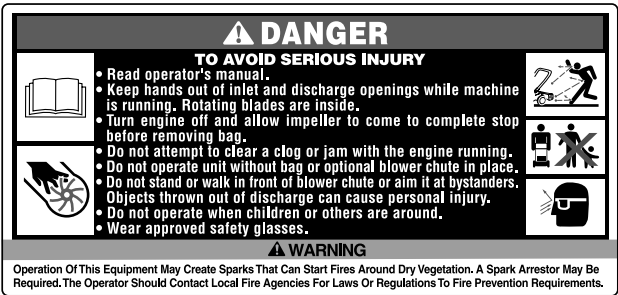


777S33695

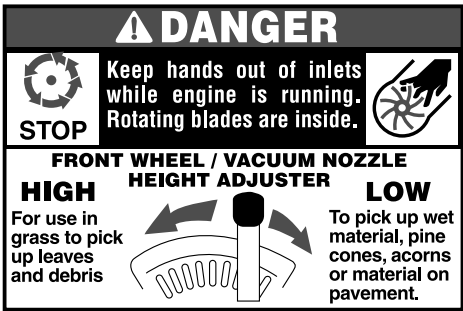

777D16358




777I23042

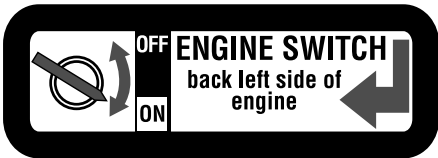

777X43688





178-L0-11 Air Cleaner

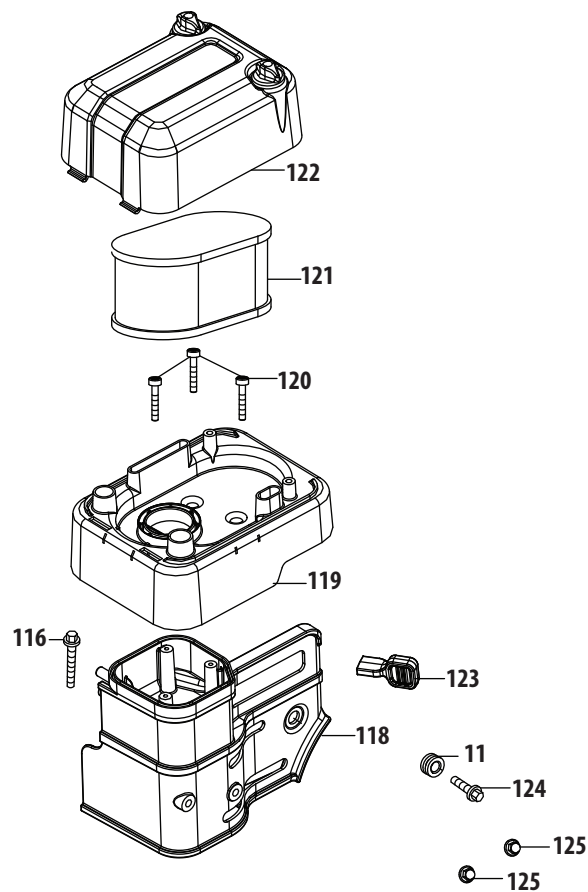

Ref.	Part Number	Description
11	736-04452	Washer, Flat
116	710-04969	Bolt M6×30
118	951-12407	Air Filter Housing
119	951-12408	Air Filter Base
120	710-05352	Countersunk Screw
121	951-12260	Air Filter Assembly
122	951-12047	Air Filter Cover
123	951-12409	Throttle Control Knob
124	710-04968	Bolt M6×16
125	712-04213	Plate-Shaped Nut


178-L0-11 Carburetor Assembly

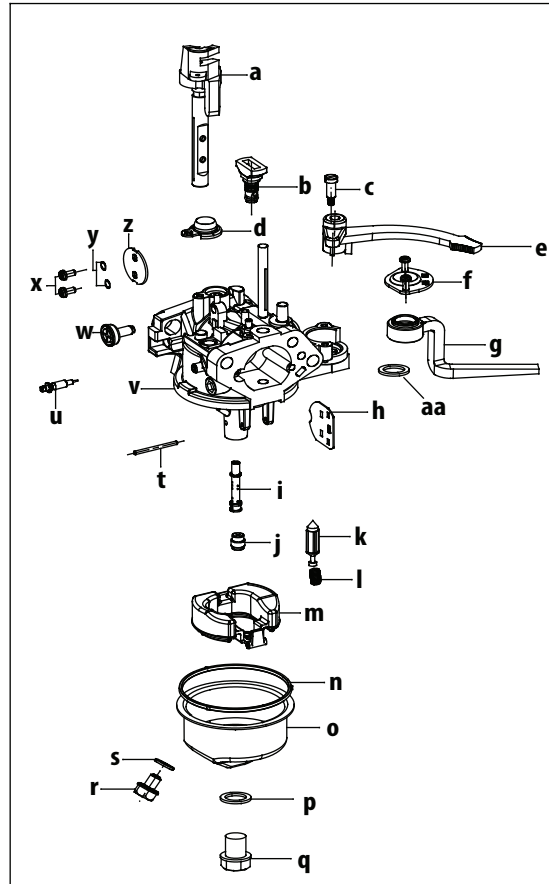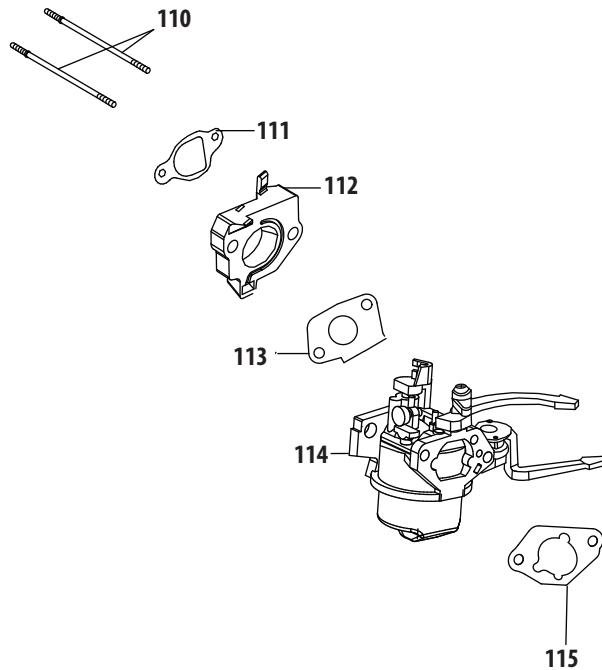

Ref.	Part Number	Description
110	710-05351	Carburetor Stud
111	951-11225	Carburetor Insulator Gasket
112	951-11222	Carburetor Insulator
113	951-11223	Carburetor Gasket
114	951-12374	Carburetor Assembly
115	951-12406	Carburetor Gasket Plate
a	N/A	Throttle Shaft
b	N/A	Idle Jet Assembly
c	N/A	Pin
d	N/A	Lock Plate
e	951-12422	Choke Knob
f	N/A	Throttle Shaft Dust Seal
g	951-12423	Fuel Shut-Off Lever
h	N/A	Choke Plate
i	N/A	Emulsion Tube
j	N/A	Main Jet
k	N/A	Needle Valve
l	N/A	Needle Valve Spring
m	N/A	Float

Ref.	Part Number	Description
n	951-11970	Fuel Bowl Gasket
o	N/A	Fuel Bowl Gasket
p	951-11348	Fuel Bowl Gasket
q	710-04945	Fuel Bowl Mounting Bolt
r	710-04938	Fuel Drain Plug
s	951-11349	Fuel Drain Plug Gasket
t	N/A	Float Pin
u	N/A	Mixture Screw
v	N/A	Carburetor Body
w	N/A	Idle Speed Adjusting Screw
x	N/A	Screw M3x5
y	N/A	Lock Washer
z	N/A	Throttle Plate
aa	951-12475	Gasket, Fuel Shut off
	951-12383	Carburetor Kit - Major (Incl.f,l,j,k,l,m,n,o,s,t)
	951-12377	Gasket Kit - - External (Incl.66,90,105,111-113,115)

178-L0-11 Crankshaft & Crankcase

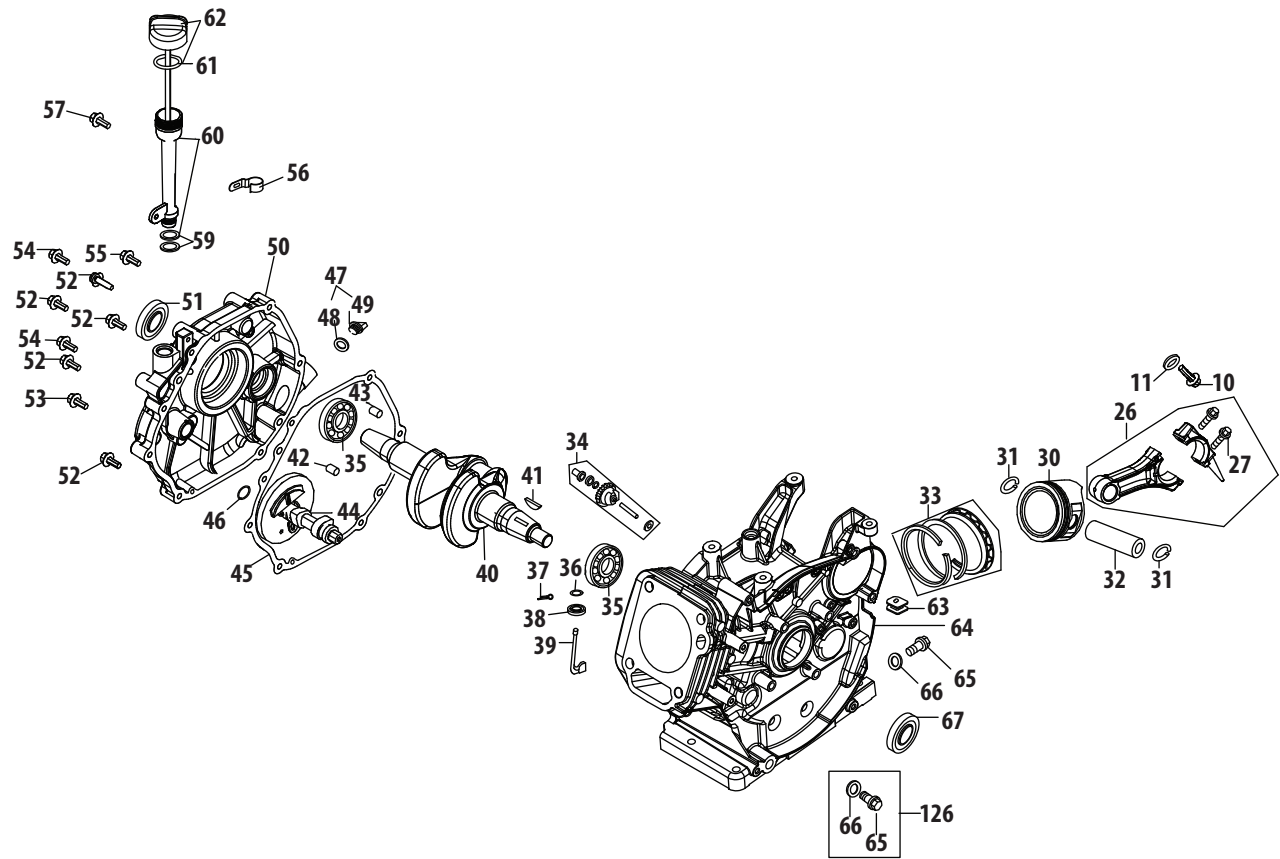


178-L0-11 Crankshaft & Crankcase

Ref.	Part Number	Description
10	710-04968	Bolt M6×16
11	736-04452	Washer
26	951-12066	Connecting Rod Assembly
27	710-05319	Connecting Rod Bolt
30	951-12043	Piston
31	951-11632	Piston Pin Snap Ring
32	951-12044	Piston Pin
33	951-12387	Piston Ring Kit
34	751-12068	Governor Gear/Shaft Assembly
35	951-12069	Radial Ball Bearing
36	736-04453	Washer 8×20×0.8
37	714-04077	Cotter Pin
38	951-12388	Governor Seal
39	951-12071	Governor Arm Shaft
40	951-12389	Crankshaft Assembly
41	951-10307	Woodruff Key
42	715-04102	Dowel Pin 9×12
43	715-04092	Dowel Pin 7×14
44	951-12072	Camshaft Assy.
45	951-11374	Crankcase Cover Gasket
46	736-04545	Washer 16×24×0.5
47	951-12390	Oil Filler Plug Assembly
48	951-12391	O-Ring 15.8×2.5
49	951-12394	Oil Filler Plug
50	951-12395	Cover Comp, Left Crankcase

Ref.	Part Number	Description
51	951-12396	Oil Seal, 30×46×8
52	710-04971	Bolt M8×38
53	710-04972	Bolt M8×45
54	710-05052	Bolt M8×35
55	710-04968	Bolt M6×16
56	951-11320	Dipstick Clamp
57	710-05349	Bolt M6×8
59	951-12397	Oil Fill Tube O-Ring
60	951-12384	Oil Fill Tube Asm
61	951-11547	Dipstick O-Ring
62	951-12382	Dipstick Assembly
63	951-12398	Wire Clamp Rubber
64	951-12381	Crankcase (Incl.26,30-47,50-54,64-67,83, 86,87,90,92,105,111,112)
65	951-12399	Oil Drain Plug
66	736-04585	Washer 12×20×2
67	951-12400	Oil Seal 30×46×8
126	951-12378	Oil Drain Plug & Washer Assembly
	952Z178-L0-11	Complete Engine
	951-12377	Gasket Kit - External (Incl.66,90,105,111-113,115)
	951-12380	Gasket Kit - Complete (Incl.38,45,51,66,67,87,90, 105,111-113)


178-L0-11 Fuel Tank & Mounting

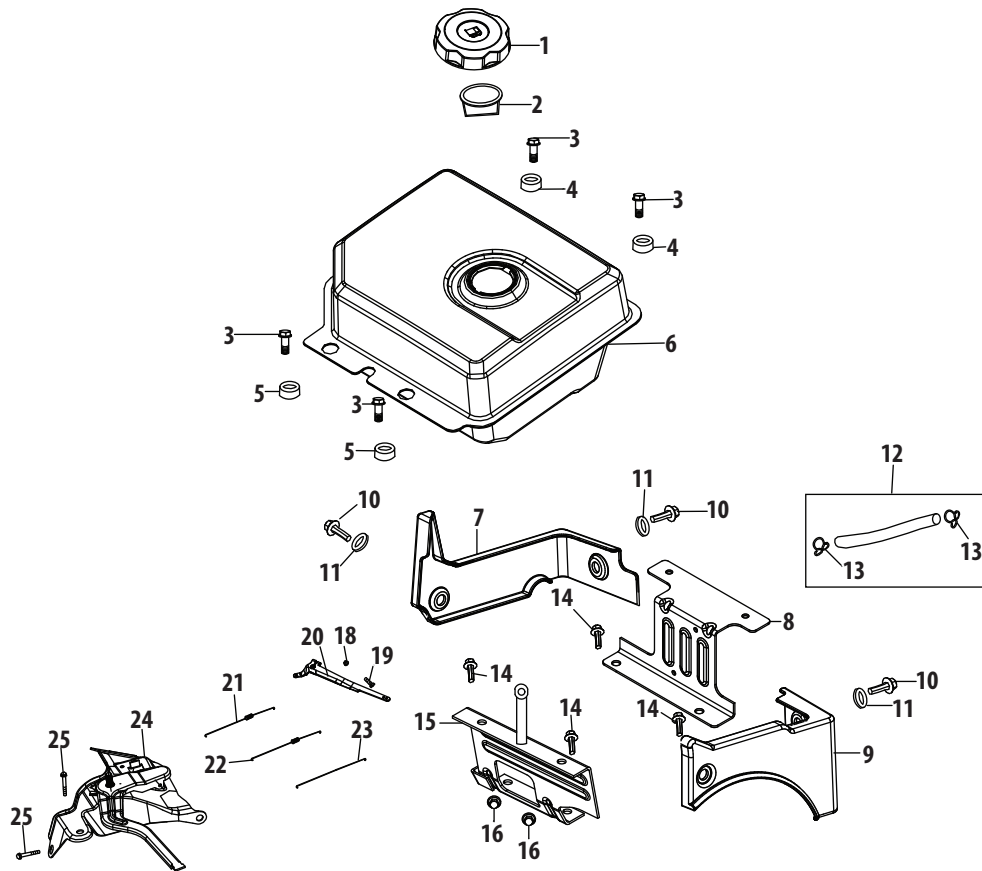

Ref.	Part Number	Description
1	951-10917A	Fuel Cap Assembly
2	951-11933	Fuel Level Indocator
3	710-04970	Bolt M8×20
4	750-05312	Bush, Gas Tank
5	750-05313	Bush, Gas Tank
6	951-11201	Fuel Tank Assembly
7	951-11184	Plastic Cover
8	951-11184	Rear Mainting Bracket Assy.
9	951-12385	Engine Cover
10	710-04968	Bolt M6×16
11	736-04452	Bush
12	951-11200	Fuel Hose Fuel Hose Kit


Ref.	Part Number	Description
13	951-11731	Fuel Hose Clamp
14	710-04921	Bolt M8×14
15	951-11182	Gas Tank Bracker
16	712-04219	Nut M8
18	712-04212	Nut M6
19	710-04908	Governor Arm Bolt
20	951-11231	Governor Arm
21	951-11202	Governor Spring
22	951-11203	Throttle Linkage Spring
23	951-11204	Governor Rod
24	951-12386	Throttle Control Bracket
25	710-04916	Bolt, M6×14

178-L0-11 Flywheel & Blower Housing

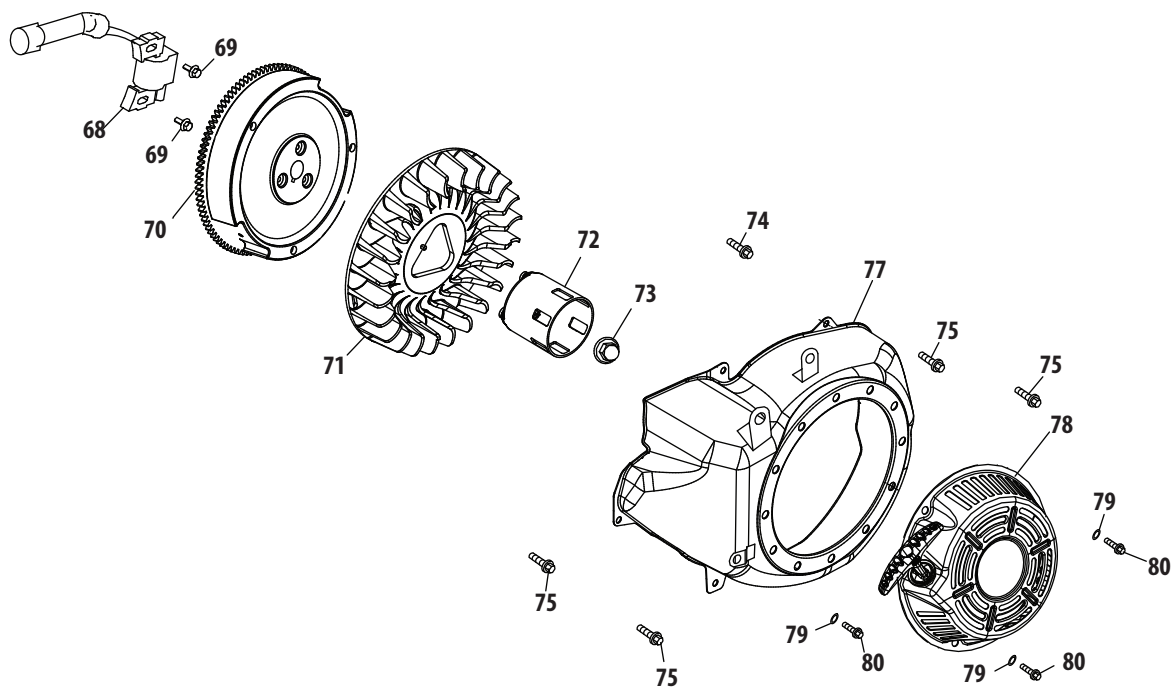

Ref.	Part Number	Description
68	951-12375	Ignition Coil Assembly
69	710-05350	Ignition Coil Bolt
70	951-12401	Flywheel
71	951-11217	Fan, Cooling
72	951-11218	Starter Cup
73	712-04220	Nut, Special, M16×1.5
74	710-04968	Bolt M6×16
75	710-04915	Bolt M6×12
77	951-12402	Starter Housing
78	951-12376	Recoil Starter Assy
79	736-04455	Washer Φ6
80	710-04974	Bolt M6×10

178-L0-11 Cylinder Head

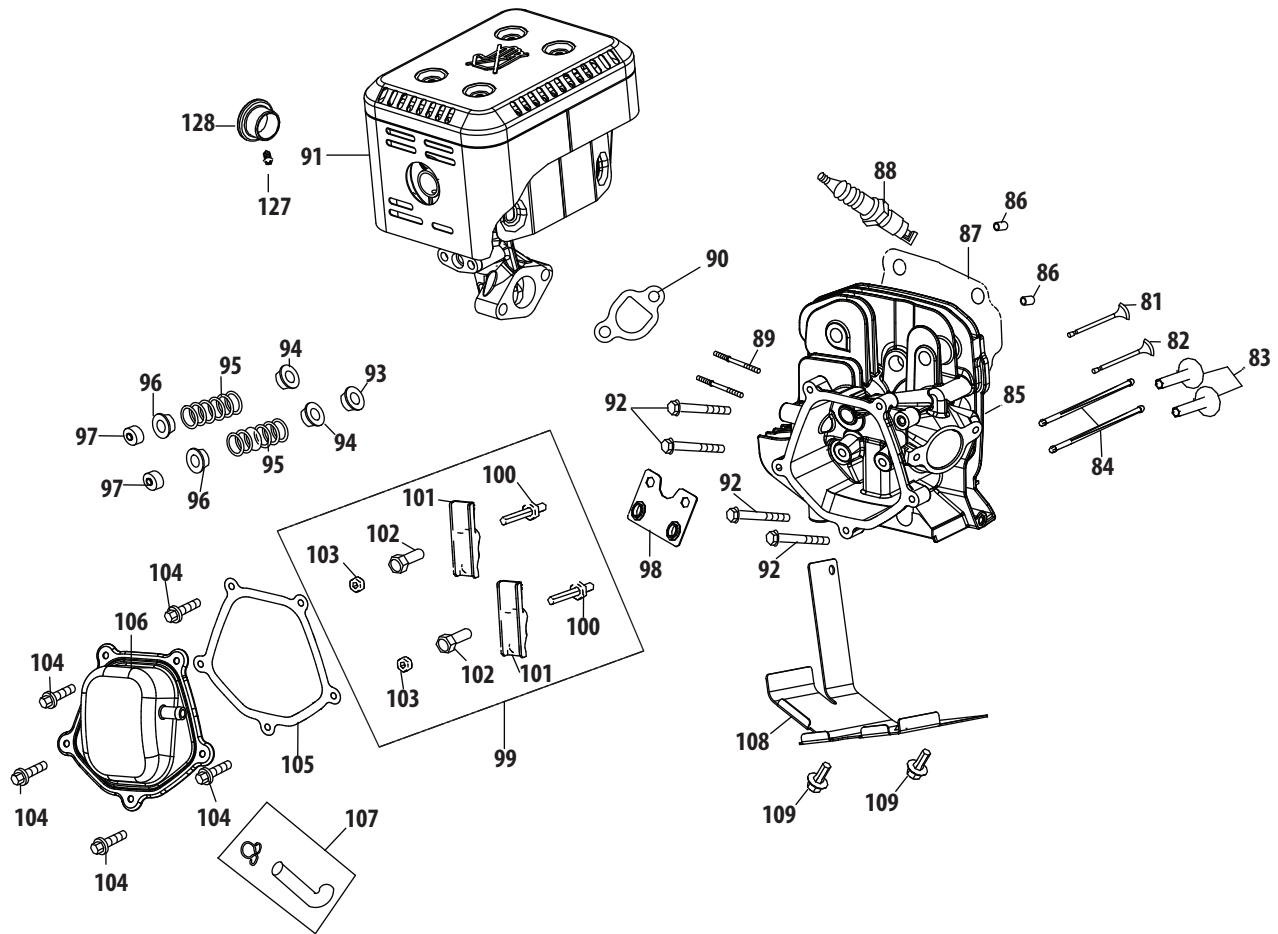


178-L0-11 Cylinder Head



Ref.	Part Number	Description
81	951-12379	Valve Kit
82	951-12379	Valve Kit
83	951-11962	Tappet
84	951-11199	Push Rod Kit
85	951-11188	Cylinder Head Assembly (Incl.81,82,85,87,89,90,92-98, 100-103,105,110-112)
86	715-04097	Dowel Pin 12×20
87	951-12076	Gasket, Cylinder Head
88	951-10292	Spark Plug/F6Rtc
89	710-04964	Muffler Stud M8×48.5
89	951-11207	Muffler Stud Assembly
90	951-11212	Muffler Gasket
91	951-12404	Muffler Assembly
92	710-04973	Bolt M10×1.25×80
93	951-11964	Intake Valve Seal
94	951-12077	Valve Spring Retainer
95	951-12078	Valve Spring
96	951-12080	Retainer, Ex.Valve Spring
97	951-12081	Adjuster, Exh Valve
98	951-11965	Push Rod Guide

Ref.	Part Number	Description
99	951-11981	Rocker Arm Assembly
100	710-04962	Bolt, Pivot
101	951-11966	Rocker Arm
102	751-11123	Adjusting Nut ,Valve
103	751-11124	Nut, Pivot Locking
104	710-05054	Valve Cover Bolt
105	951-11967	Valve Cover Gasket
106	951-11220	Valve Cover
107	951-12403	Breather Hose Assembly
108	951-12405	Air Shield
109	710-04915	Bolt M6×12
127	710-05347	Bolt, Self Tapping
128	951-12344	Spark Arrestor
	952Z178-L0-11	Complete Engine
	951-11226	Cylinder Head Service Kit (Incl.87,92,93,105)
	951-12377	Gasket Kit - External (Incl.66,90,105,111-113,115)
	951-12380	Gasket Kit - Complete (Incl.38,45,51,66,67,87,90, 105,111-113)

170-C0A-11 Air Cleaner

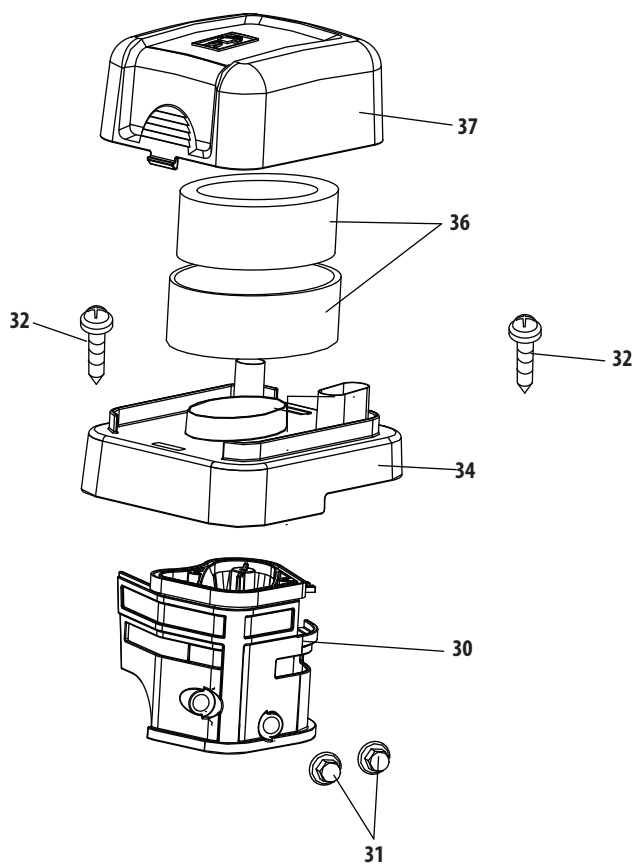


Ref.	Part Number	Description
30	951-10806	Air Cleaner Housing
31	712-04213	Nut
32	710-05102	Self-Tapping Bolt M4.2×16
34	951-12135	Silencer Plate
36	951-10794	Air Cleaner Filter Assembly
37	951-12136	Air Cleaner Cover

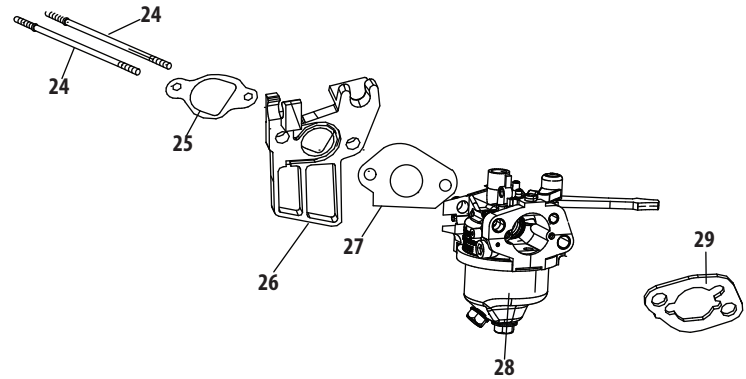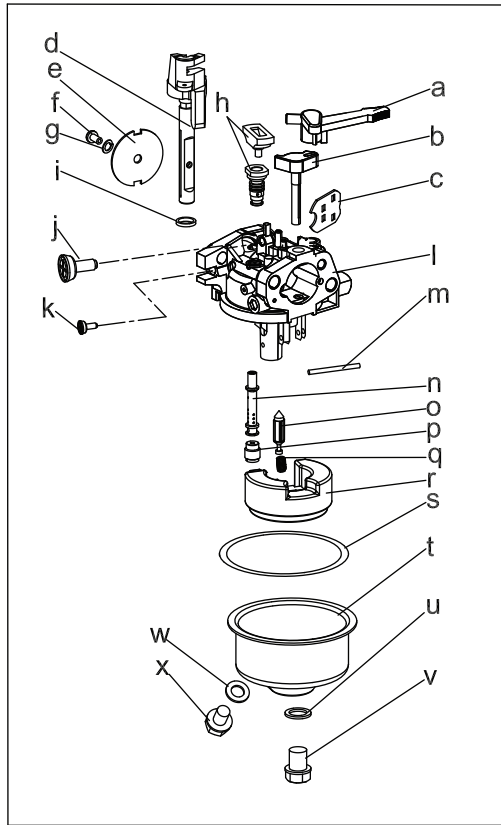

Ref.	Part Number	Description
24	710-05101	Stud M6×110
25	951-11567	Carburetor Insulator Gasket
26	951-11568	Carburetor Insulator
27	951-11569A	Carburetor Gasket
28	951-12124	Carburetor Assembly
29	951-11571	Carburetor Gasket Plate
a	951-11177	Control Lever,Choke
b		Choke Shaft
c		Choke Plate
d		Throttle Shaft
e		Throttle Plate
f		Screw M3×5
g		Lock Washer
h		Idle Jet Assembly
i		Gasket, Throttle Plate
j		Idle Speed Adjusting Screw


Ref.	Part Number	Description
k		Mixture Screw
l		Carburetor Body
m		Float Pin
n		Emulsion Tube
o		Needle Valve
p		Main Jet
q		Needle Valve Spring
r		Float
s	951-11589	Fuel Bowl Gasket
t		Fuel Bowl
u	951-11348	Fuel Bowl Gasket
v	710-04945	Fuel Bowl Mounting Bolt
w	951-11349	Fuel Drain Plug Gasket
x	710-04938	Fuel Drain Plug
	951-12119A	Carburetor Kit - Major (Incl.h,i,j,m,n,o,p,q,r,s,u,w)

170-C0A-11 Crankcase

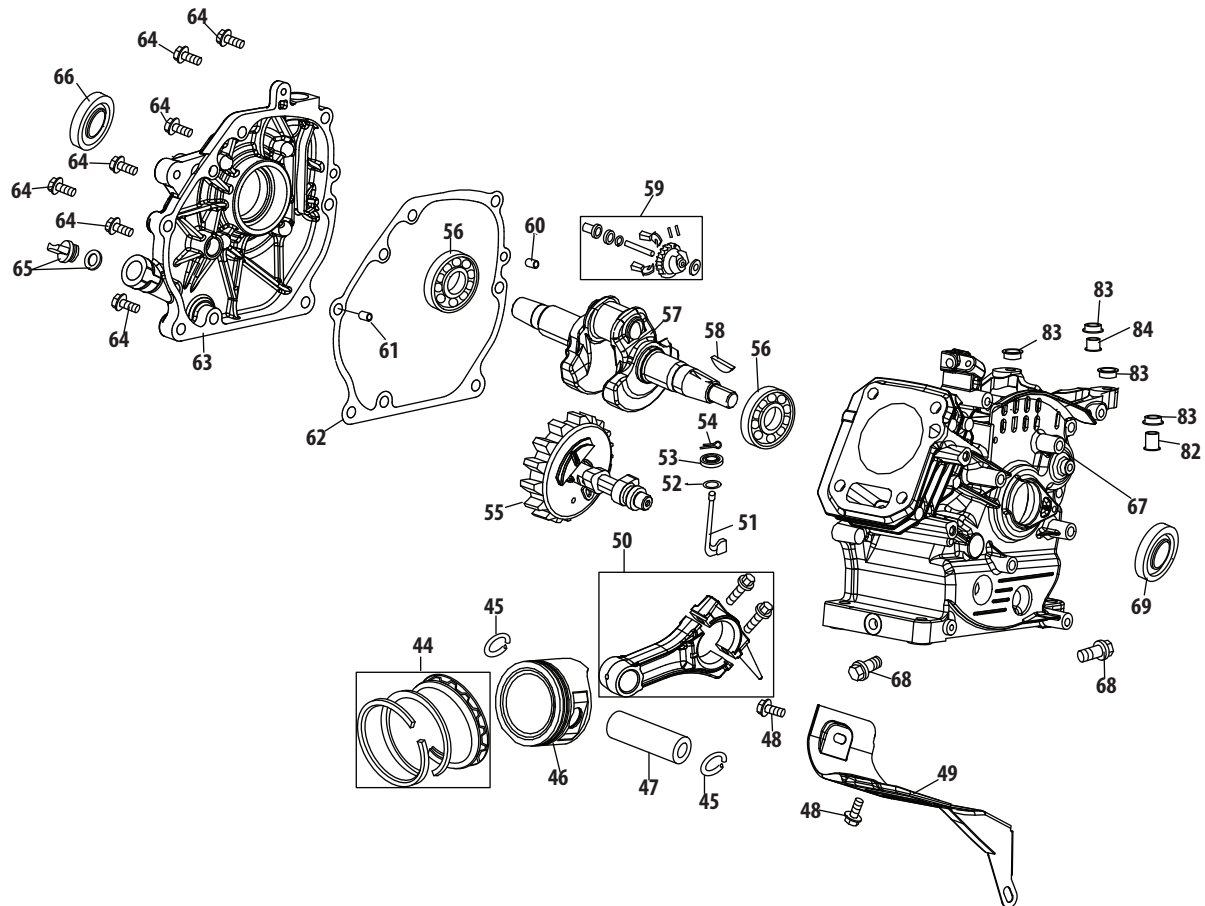


Ref.	Part Number	Description
44	951-12111	Piston Ring Set
45	951-11632	Piston Pin Snap Ring
46	951-12007	Piston
47	951-11633	Piston Pin
48	710-04915	Bolt M6×12
49	951-11113	Air Shield
50	951-11573	Connecting Rod Assembly
51	951-11356	Governor Arm Shaft
52	736-04461	Washer, 5.2×1.9
53	951-11574	Governor Seal
54	714-04074	Cotter Pin
55	951-11575	Camshaft Assy.
56	951-11369	Radial Ball Bearing, 6205
57	951-12133	Crankshaft Assembly
58	951-10307	Woodruff Key
59	951-11576	Governor Gear/Shaft Asm
60	715-04092	Dowel Pin, 7×14
61	715-04089	Dowel Pin, 9×14
62	951-11371	Crankcase Cover Gasket
63	951-12125	Cover Comp, Left Crankcase
64	710-04932	Bolt M8×32
65	951-11283	Oil Fill Plug Assembly
66	951-11578	Oil Seal, 25×41.25×6
67	951-12122A	Crankcase (Incl.4,20,25,26,38,40,41, 44-47,50-57,59-64,66-69)
68	951-12514	Oil Drain Plug
69	951-12126	Oil Seal , 25×41.25×6
82	735-04265	Isolator Bushing
83	735-04266	Rubber Isolation Mount
84	735-04267	Isolator Bushing
	952Z170-C0A-11	Complete Engine
	951-12573	Gasket Kit - External (Incl.4,20,25-27,29)
	951-12572	Gasket Kit - Complete (Incl.4,20,25-27,29,38, 52,53,62,66,69)

170-C0A-11 Starter Assembly

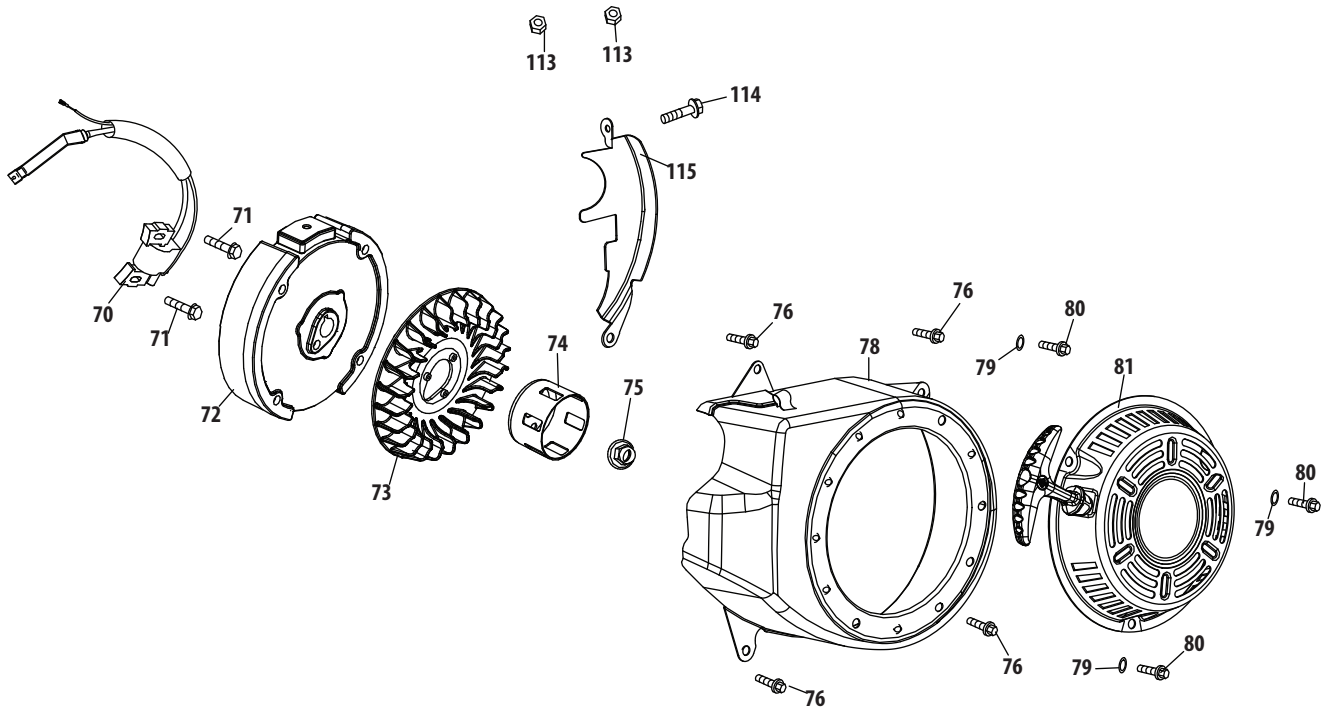


Ref.	Part Number	Description
70	951-10792	Ignition Coil Assembly
71	710-04919	Bolt M6x25
72	951-10805	Flywheel
73	951-10909	Fan, Cooling
74	951-10911	Starter Cup
75	712-04209	Nut, Special M14x1.5
76	710-04915	Bolt M6x12
78	951-11583	Blower Housing
79	736-04455	Gasket 6
80	710-04974	Bolt M6x10
81	951-12418	Recoil Starter
113	712-04212	Nut, M6
114	710-04918	Bolt M6x20
115	951-11109	Blower Housing Shield

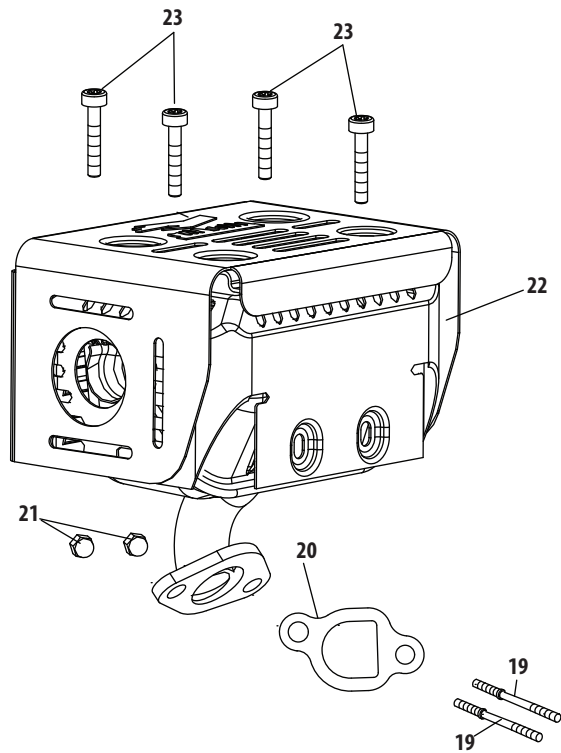


Ref.	Part Number	Description
19	710-04911	Muffler Stud M8×36
19	951-12027	Muffler Stud Assembly
20	951-11285	Exhaust Pipe Gasket
21	712-04214	Nut, M8
22	951-12123	Muffler Assembly
23	710-05002	Bolt M5×10
	777I23259	Choke Lever Label
	777S33612	Engine Oil / Warning Label
	777I23174	Throttle Label
	777I23026	Electric Start Warning Label
	777I22992	Electric Start Label

170-C0A-11 Cylinder Head

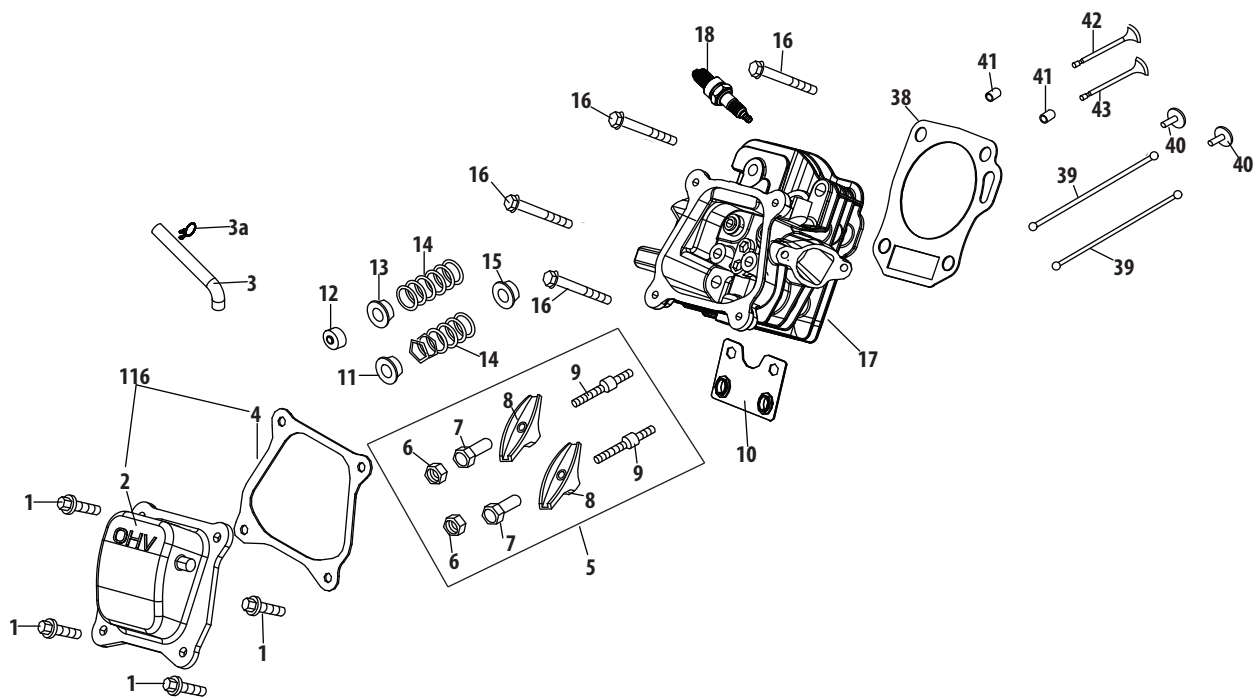

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-11054A	Valve Cover
3	731-07059	Breather Hose Assembly
3a	726-04101	Hose Clamp
4	951-11565	Valve Cover Gasket
5	951-11892	Rocker Arm Assembly
6	751-11124	Nut,Pivot Locking
7	751-11123	Adjusting Nut ,Valve
8	951-11893	Rocker Arm
9	710-04902	Bolt, Pivot
10	951-11895	Push Rod Guide
11	951-12000	Retainer, In.Valve Spring
12	951-12002	Adjuster, Exh Valve
13	951-12003	Retainer, Ex.Valve Spring
14	951-12004	Valve Spring
15	951-11894	Intake Valve Seal
16	710-04933	Bolt M8×55
17	951-10668A	Cylinder Head Assembly (Incl.4,6-15,17,20,25,26,38,42,43)
18	951-10292	Spark Plug/F6Rtc
38	951-11572	Gasket, Cylinder Head
39	951-10648	Push Rod
40	951-11899	Tappet
41	715-04090	Dowel Pin, 10×16
42	951-10647A	Valve Kit
43	951-10647A	Valve Kit
116	951-11063A	Valve Cover Kit
	952Z170-C0A-11	Complete Engine
	951-12573	Gasket Kit - External (Incl.4,20,25-27,29)
	951-12572	Gasket Kit - Complete (Incl.4,20,25-27,29,38, 52,53,62,66,69)

170-C0A-11 Fuel Tank & Mounting

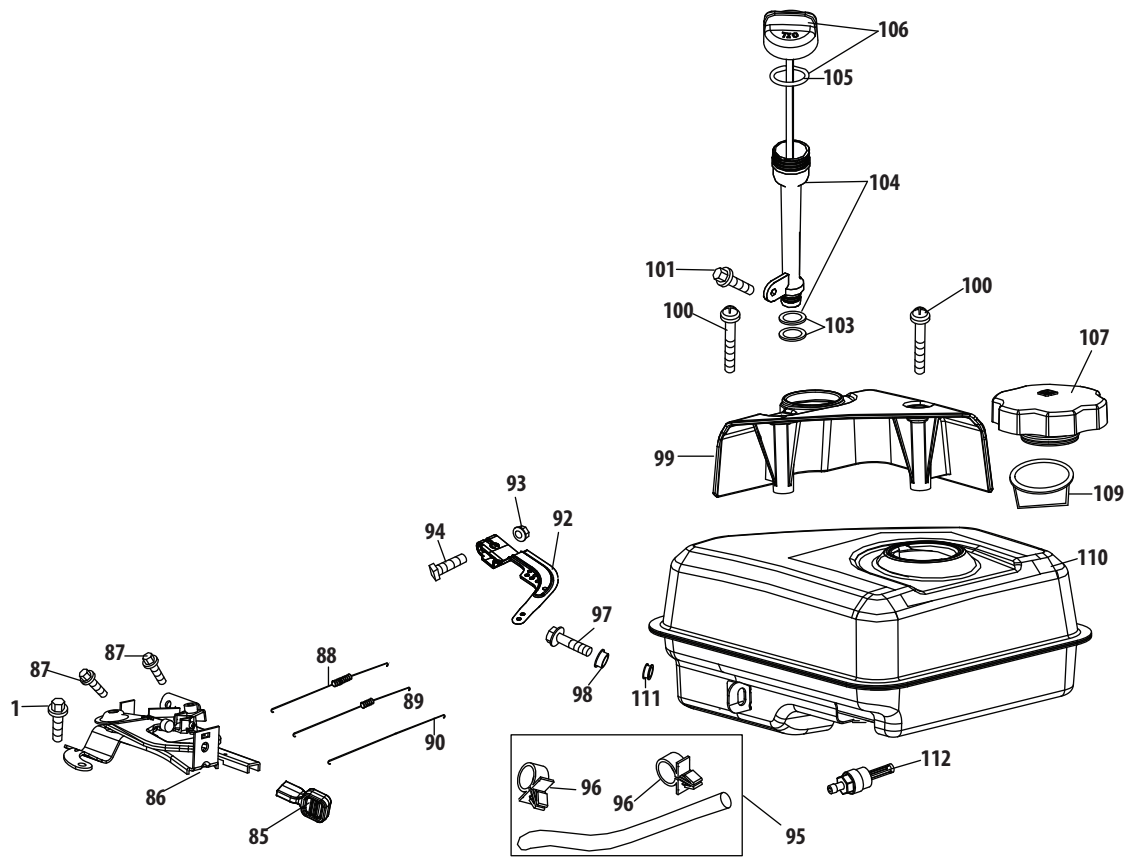


Ref.	Part Number	Description
1	710-04968	Bolt M6×16
85	951-11067	Throttle Control Knob
86	951-12131	Primer Bracket
87	710-04928	Bolt M6×12
88	951-11585	Governor Spring
89	951-10664	Throttle Linkage Spring
90	951-10665	Throttle Linkage
92	951-11106	Governor Arm
93	712-04212	Nut M6
94	710-04908	Governor Arm Bolt
95	951-10650	Fuel Line Kit
96	951-10650	Fuel Hose Clamp
97	710-04918	Bolt M6×20
98	735-04268	Isolator Bushing
99	951-10662	Dipstick Decoration Cover
100	710-04905	Bolt


Ref.	Part Number	Description
101	710-04915	Bolt M6×12
103	951-11381	Oil Fill Tube O-Ring
104	951-11913	Oil Fill Tube
105	951-11904	Dipstick O-Ring
106	951-12482	Dipstick Gauge
107	951-10917A	Fuel Cap Assembly
109	951-11933	Fuel Filter
110	951-12132	Fuel Tank
111	750-05314	Rubber Isolation Mount
112	951-10651	Fuel Tank Nipple
	777I23259	Choke Lever Label
	777S33612	Engine Oil / Warning Label
	777I23174	Throttle Label
	777I23026	Electric Start Warning Label
	777I22992	Electric Start Label

[illegible]

1P70C0A-11 Air Cleaner

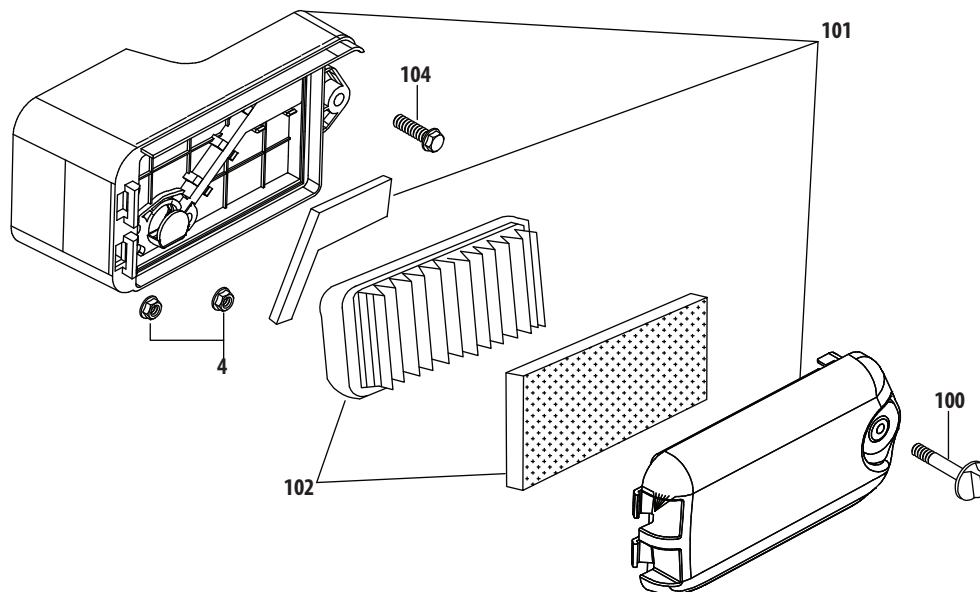


Ref.	Part Number	Description
4	712-04212	Nut M6X10Mm
100	951-10297	Air Filter Cover Thumb Screw
101	951-10412B	Air Cleaner Housing Assy Comp
102	951-10298	Air Cleaner Kit
104	710-04969	Bolt M6X30

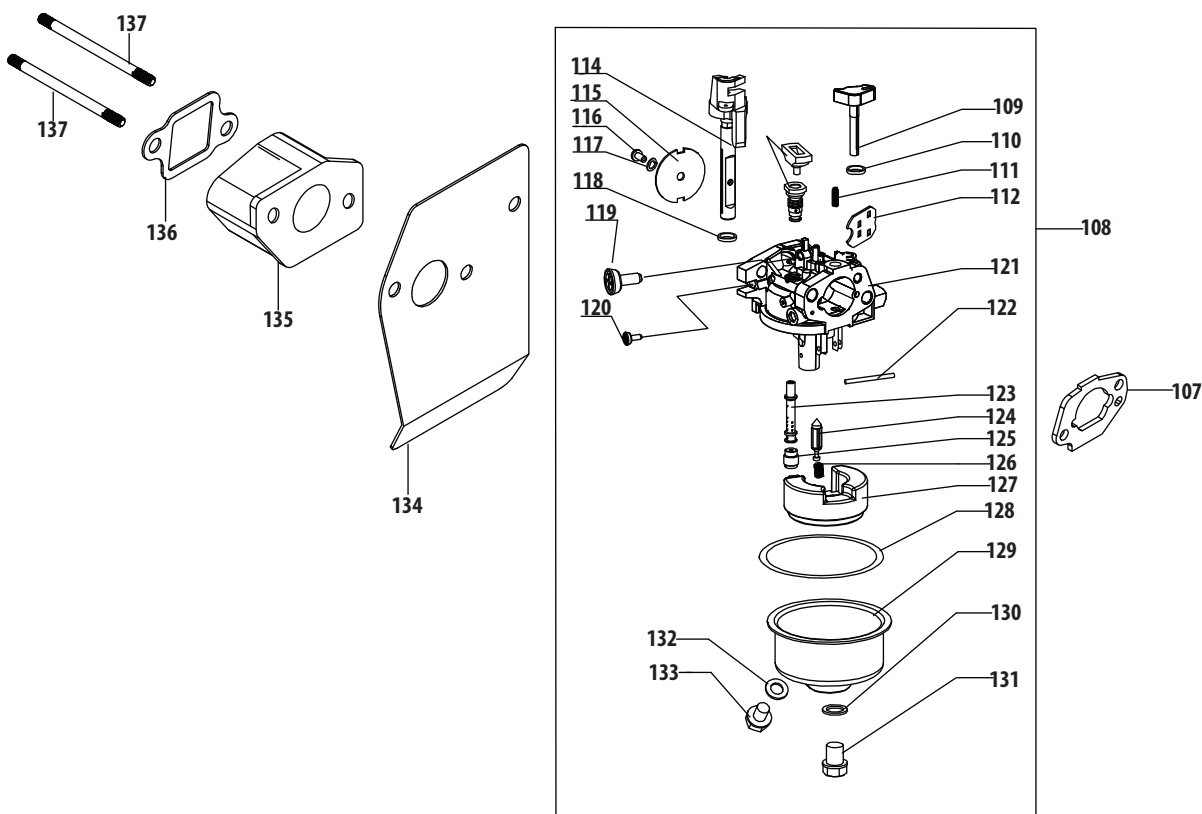

Ref.	Part Number	Description
107	951-11525	Carburetor Gasket Plate
108	951-10929	Carburetor Assembly
109		Choke Shaft
110		Fiber O-Ring
111		Choke Plate
112		Choke Detent Spring
113		Idle Jet Assembly
114		Throttle Shaft
115		Throttle Plate
116		Screw M3X6 Throttle Plate
117		Lock Washer
118		Fiber O-Ring
119		Idle Speed Adjusting Screw
120		Idle Mixture Screw
121		Carburetor Body
122		Float Pin
123		Emulsion Tube


Ref.	Part Number	Description
124		Needle Valve
125		Main Jet
126		Needle Valve Spring
127		Float
128	951-11589	Fuel Bowl O-Ring
129		Fuel Bowl
130	951-11348	Fuel Bowl Gasket
131	710-04945	Fuel Bowl Mounting Bolt
132	951-11349	Fuel Drain Plug Gasket
133	710-04938	Fuel Drain Plug
134	951-12110	Carburetor Gasket
135	951-11255	Carburetor Insulator
136	951-11254	Carburetor Insulator Gasket
137	710-04981	Carb Stud M6X113
	951-12178A	Carburetor Kit - Major (Incl.110,113,118,119, 122-128,130,132)

1P70C0A-11 Crankcase

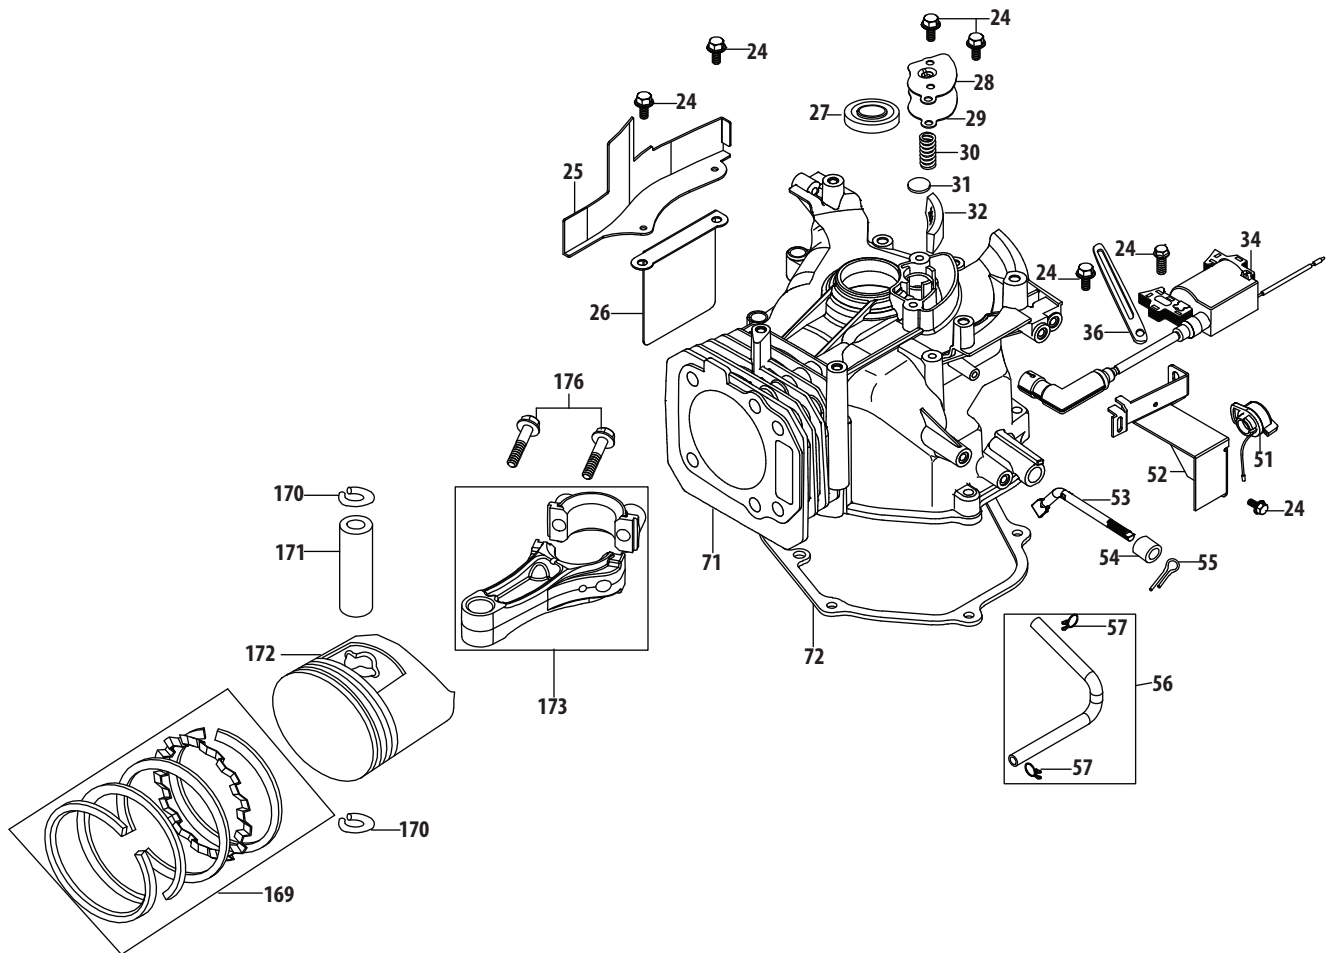


Ref.	Part Number	Description
24	710-04916	Bolt M6X14
25	951-12104	Engine Brake Cover Plate
26	951-11602	Label Bracket
27	951-11545	Upper Crankshaft Seal
28	951-11612	Breather Cover Plate
29	951-11613	Breather Gasket
30	732-04718	Breather Spring
31	951-11614	Breather Valve
32	951-11762	Mesh Screen
34	951-10931	Ignition Coil Assembly
35	710-04979	Bolt M6X18
36	951-11680	Flexible Clamp
51	951-10622	Ignition Switch
52	951-12169	Fuel Tank / Console Bracket
53	951-11608	Governor Arm Shaft
54	951-11574	Governor Seal
55	714-04074	Governor Shaft Cotter Pin
56	951-11260	Breather Hose Assembly
57	726-04101	Breather Hose Clamp
71	951-12177	Short Block Assembly (Incl.24,27-32,40,53-55,71-74, 79,82,83,91,93-98,107,135,136, 152,155,160,161,163,164,169, 170-173,176)
72	951-11763	Crankcase Cover Gasket
169	951-12111	Piston Ring Set
170	951-11632	Piston Pin Snap Ring
171	951-11633	Piston Pin
172	951-11634	Piston
173	951-11768	Connecting Rod Assembly
176	710-05162	Connecting Rod Bolt
	952Z1P70C0A-11	Complete Engine
	951-11772	Gasket Kit - External (Incl.29,79,95,134,136,152,155)
	951-11770	Gasket Kit - Complete (Incl.27,29,54,72,79,95,98,134, 136,152,155,160)

1P70C0A-11 Crankshaft & Crankcase Cover

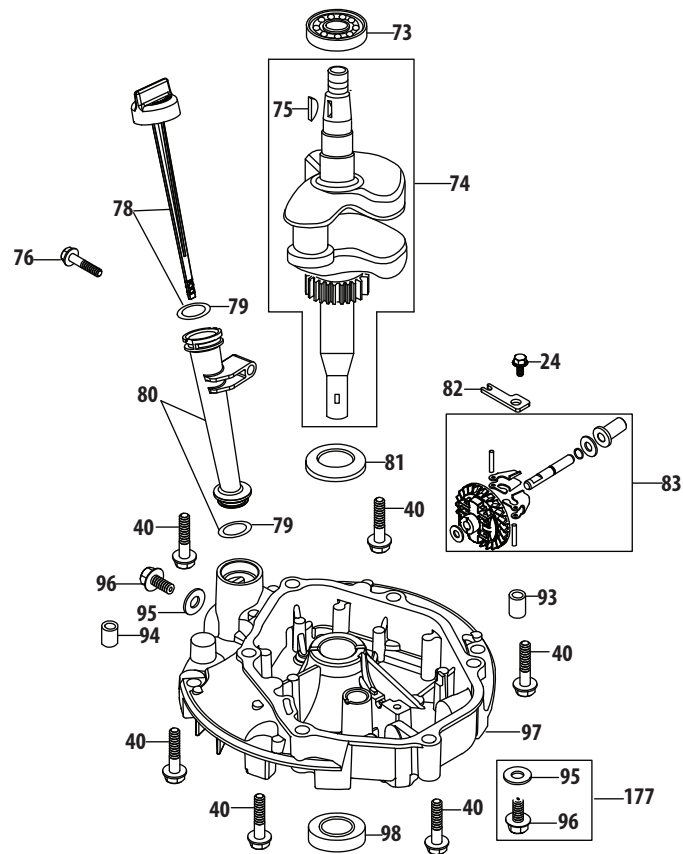


Ref.	Part Number	Description
24	710-04916	Bolt M6X14
40	710-04922	Bolt M8X50
73	951-11369	Main Bearing
74	951-12174	Crankshaft Assembly
75	951-10307	Woodruff Key
76	710-04980	Bolt M6X35
78	951-11764	Dipstick Assembly
79	951-11547	Dipstick / Oil Fill Tube O-Ring
80	951-11765	Oil Filler Tube Assembly
81	736-04491	Crankshaft Thrust Washer

Ref.	Part Number	Description
82	951-11625	Governor Gear Mounting Plate
83	951-11626	Governor Gear/Shaft Assembly
93	715-04092	Crankcase Cover Dowel Pin 7×14
94	715-04089	Crankcase Cover Dowel Pin 9×14
95	736-04440	Oil Drain Plug Washer
96	710-04906	Oil Drain Plug
97	951-11794	Crankcase Cover
98	951-11627	Lower Crankshaft Seal
177	951-10370	Oil Drain Plug And Washer Assy

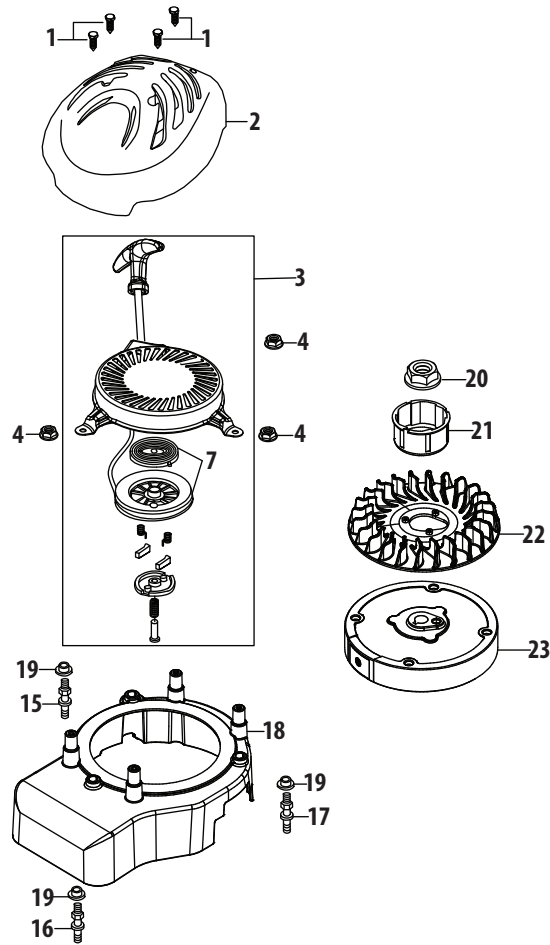


Ref.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 X 1.00"
2		Outer Shroud (See Unit Breakdown)
3	951-11720	Recoil Starter Assembly
4	712-04212	Nut M6X10Mm Starter/Carb/Muff
7	951-11721	Recoil Spring And Pulley Assy
15	710-04976	Shroud Stud Left/Black
16	710-04977	Shroud Stud Front/Unmarked
17	710-04978	Shroud Stud Right/White
18	951-10369	Inner Shroud
19	750-05320	Spacer
20	712-04287	Flywheel Nut M14
21	951-12176	Starter Cup
22	951-10909	Cooling Fan
23	951-10935	Flywheel

1P70C0A-11 Cylinder Head

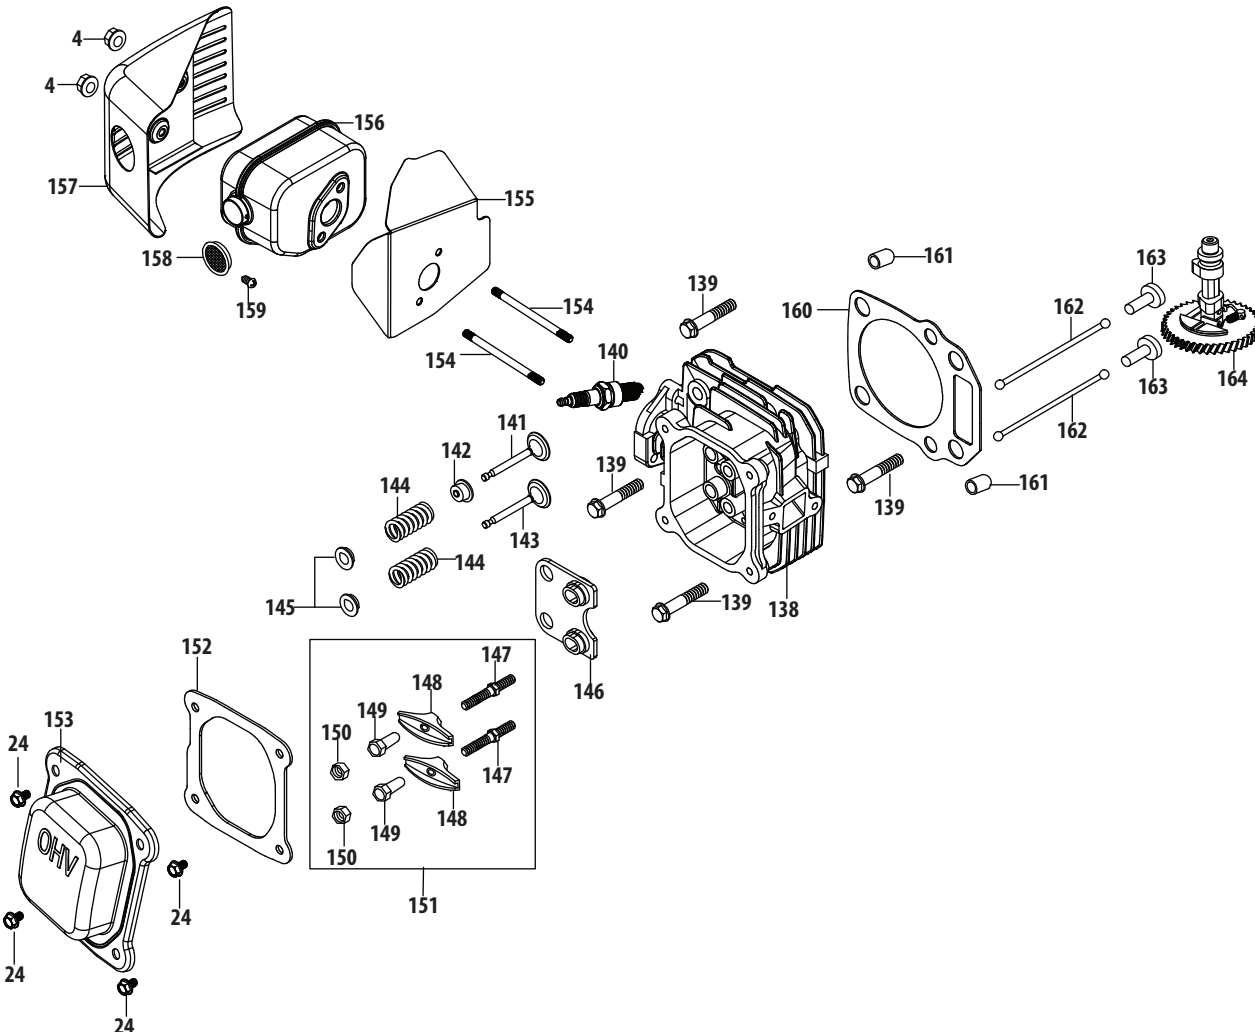

Ref.	Part Number	Description
4	712-04212	Nut M6X10M
24	710-04916	Bolt M6X14
138	951-10413A	Cylinder Head Assembly (Incl.135,136,138,141-150,152,155,160)
139	710-04982	Bolt M8X54 Cylinder Head
140	951-10292	Spark Plug/F6Rtc
141	951-10345	Valve Kit
142	951-11818	Intake Valve Seal
143	951-10345	Valve Kit
144	951-12116	Valve Spring
145	951-12000	Valve Spring Retainer
146	951-11629	Push Rod Guide
147	710-04902	Rocker Arm Stud
148	951-12175	Rocker Arm
149	751-11123	Fulcrum Nut
150	751-11124	Jam Nut
151	951-11606	Rocker Arm Assembly
152	951-11551	Valve Cover Gasket
153	951-11548	Valve Cover
154	710-05094	Muffler Stud M6X95
154	951-10342	Muffler Stud Assemblby
155	951-11739	Muffler Gasket
156	951-10403	Muffler Assembly
157	951-10411	Muffler Shield
158	951-10351	Spark Arrestor
159	710-04983	Spark Arrestor Screw
160	951-11630	Cylinder Head Gasket
161	715-04090	Cylinder Head Dowel Pin 10×16
162	751-10344	Push Rod Kit
163	951-11607	Tappet
164	951-11767	Camshaft Assembly
	952Z1P70C0A-11	Complete Engine
	951-11772	Gasket Kit - External (Incl.29,79,95,134,136,152,155)
	951-11770	Gasket Kit - Complete (Incl.27,29,54,72,79,95,98,134, 136,152,155,160)

1P70C0A-11 Fuel Tank & Mounting

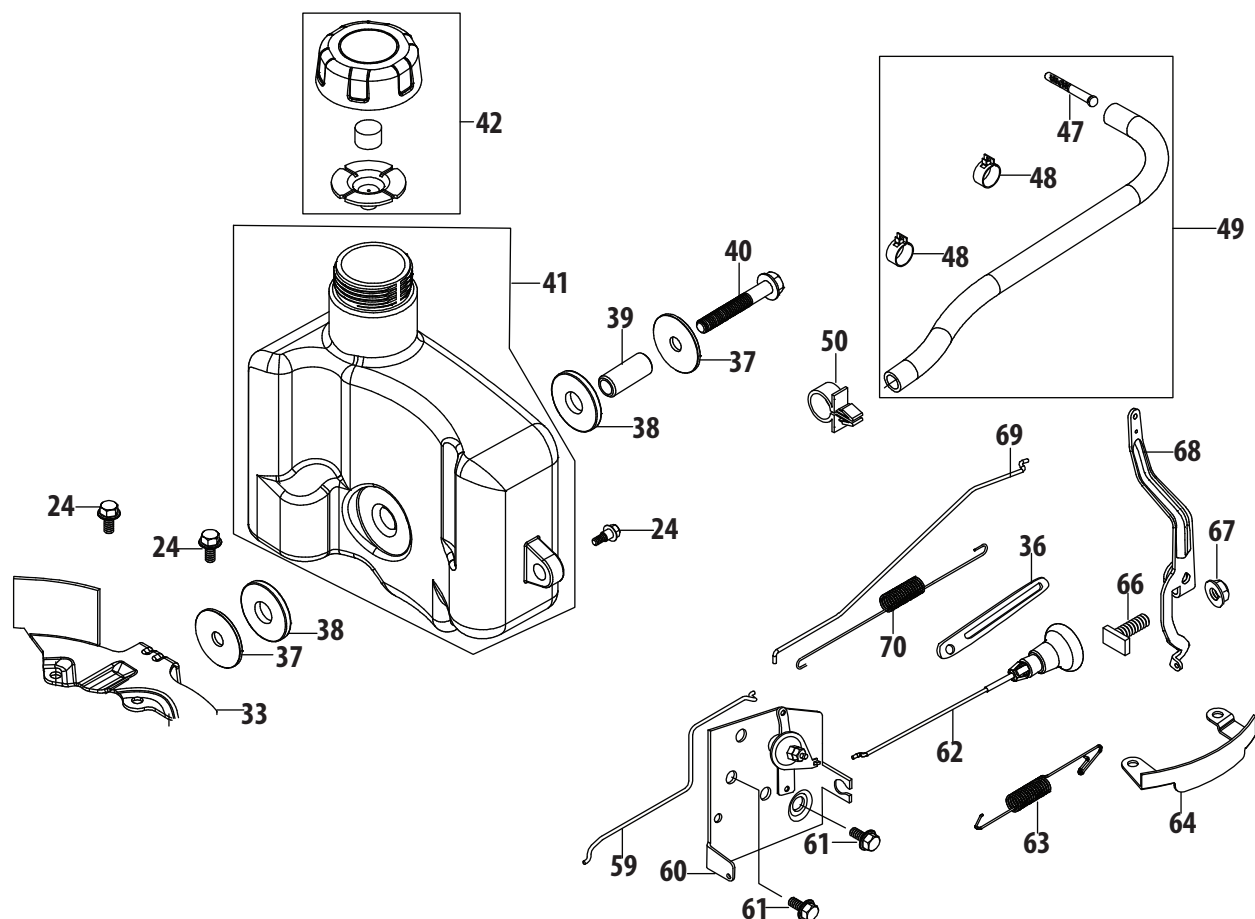


Ref.	Part Number	Description
24	710-04916	Bolt M6X14
33	951-11616	Fuel Tank Bottom Bracket
36	951-11680	Flexible Clamp
37	736-04456	Fuel Tank Washer
38	951-10335	Rubber Bushing
39	750-05322	Fuel Tank Bushing
40	710-04922	Bolt M8X50
41	951-10368	Fuel Tank Assembly
42	951-10300	Fuel Cap Assembly
47	951-10358A	Fuel Filter
48	951-11700	Fuel Hose Clamp
49	951-10364	Fuel Line Kit

Ref.	Part Number	Description
50	723-04071	Plastic Support Clamp
59	951-12107	Choke Linkage
60	951-12170	Component Bracket
61	710-04915	Bolt M6X12
62	951-10933	Choke Control
63	951-10387	Governor Spring
64	951-12171	Governor Arm Guard
66	710-04908	Governor Arm Bolt
67	712-04212	Governor Arm Nut M6
68	951-12172	Governor Arm
69	951-11259	Throttle Linkage Rod
70	951-11258	Throttle Linkage Spring


[illegible]

170-L0-11 Air Filter

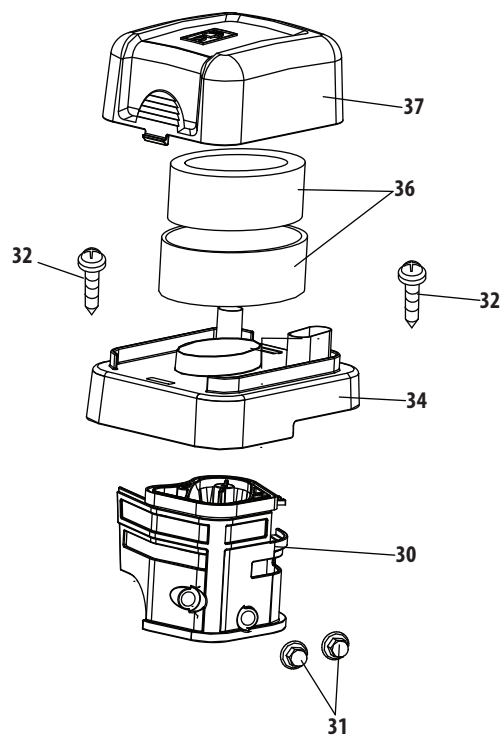


Ref.	Part Number	Description
30	951-12157	Air Cleaner Housing
31	712-04213	Nut
32	710-05102	Self-Tapping Bolt M4.2×16
34	951-12135	Housing - Air Filter Base
36	951-10794	Air Cleaner Filter Assembly
37	951-12136	Air Cleaner Cover

170-L0-11 Crankcase

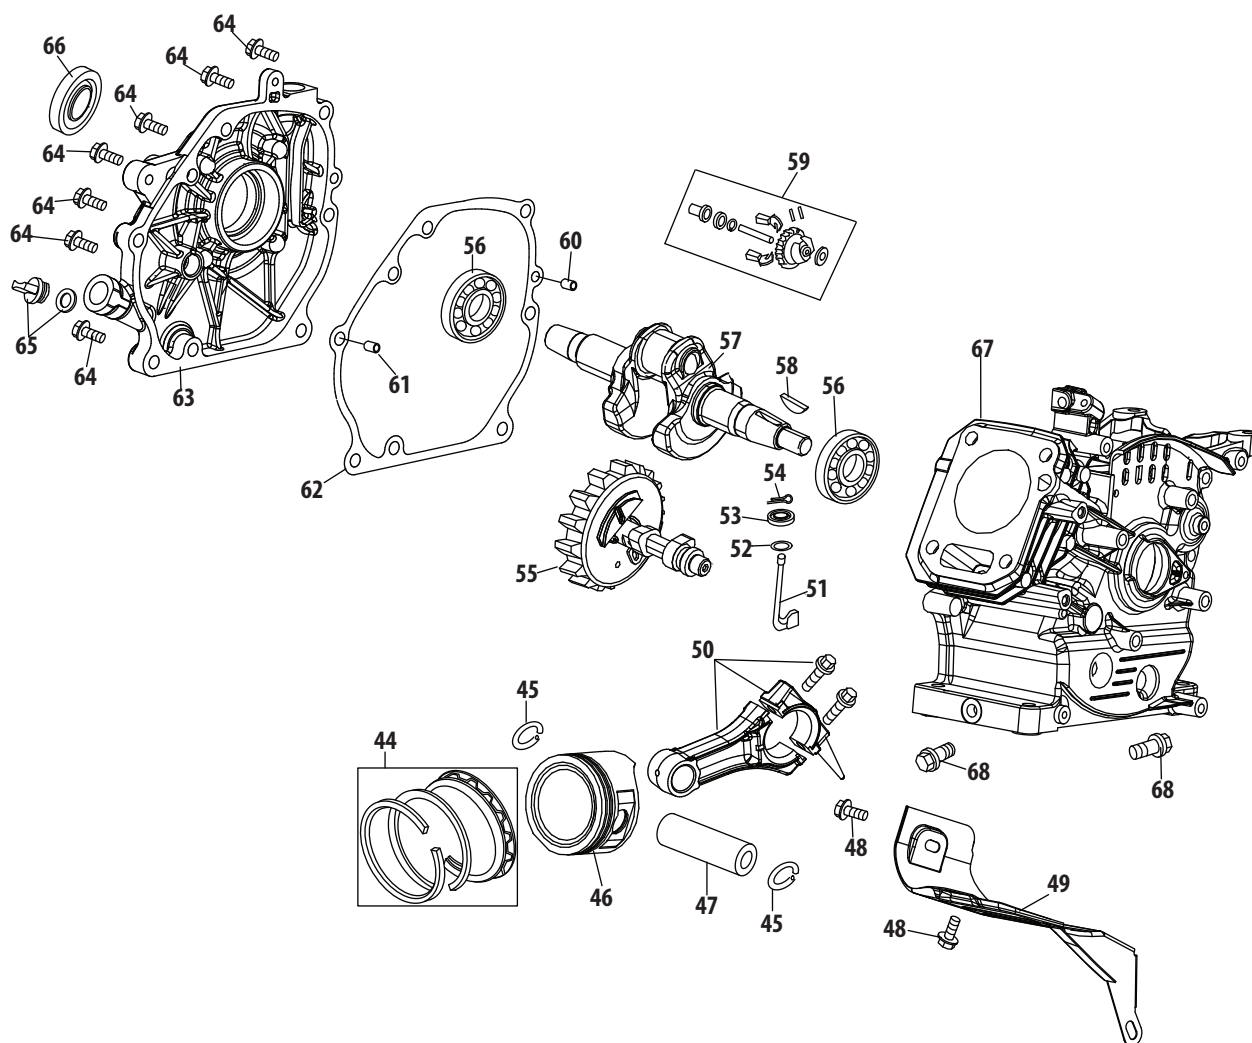

Ref.	Part Number	Description
44	951-12111	Piston Ring Set
45	951-11632	Piston Pin Snap Ring
46	951-12007	Piston
47	951-11633	Piston Pin
48	710-04915	Bolt M6×12
49	951-11113	Air Shield
50	951-11573	Connecting Rod Assembly
51	951-11356	Governor Arm Shaft
52	736-04461	Washer, 5.2×1.9
53	951-11574	Governor Seal
54	714-04074	Cotter Pin
55	951-11575	Camshaft Assy.
56	951-11369	Radial Ball Bearing, 6205
57	951-12160	Crankshaft Assembly
58	951-10307	Woodruff Key
59	951-11576	Governor Gear/Shaft Assembly
60	715-04092	Dowel Pin, 7×14
61	715-04089	Dowel Pin, 9×14
62	951-11371	Crankcase Cover Gasket
63	951-12125	Cover Comp, Left Crankcase
64	710-04932	Bolt M8×32
65	951-11283	Dipstick Assembly
66	951-11578	Oil Seal, 25×41.25×6
67	751-12551	Short Block (Incl. 4,20,25,26,38,40, 41,44-47,50-69)
68	751-12514	Oil Drain Plug
	751-12550	Gasket Kit - Complete (Incl. 4,20,25-27,29,38, 52,53,62,66,69)


170-L0-11 Fuel Tank & Mounting

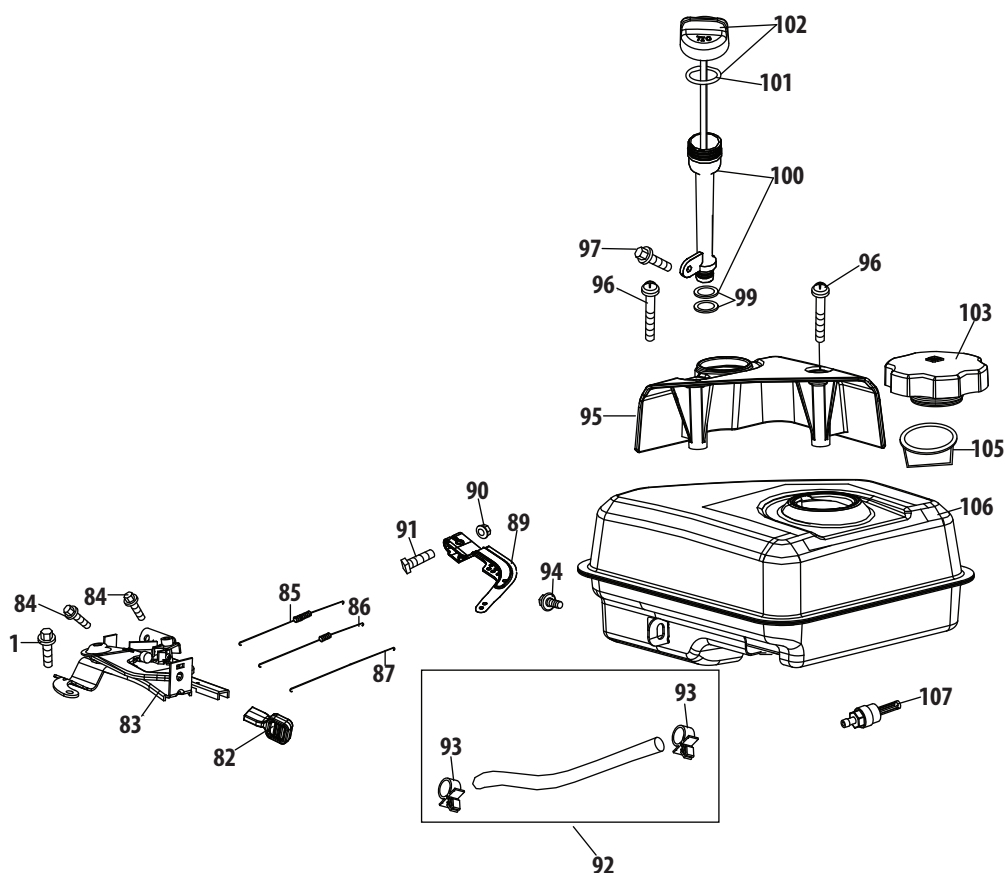

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
82	951-11067	Throttle Control Knob
83	951-12131	Primer Bracket
84	710-04928	Bolt M6×12
85	951-11585	Governor Spring
86	951-10664	Throttle Linkage Spring
87	951-10665	Throttle Linkage
89	951-11106	Governor Arm
90	712-04212	Nut M6
91	710-04908	Governor Arm Bolt
92	951-10650	Fuel Line Kit
93	951-11700	Fuel Hose Clamp
94	710-04915	Bolt M6×12
95	951-10662	Dipstick Decoration Cover
96	710-04905	Bolt

Ref.	Part Number	Description
97	710-04915	Bolt M6×12
99	951-11381	Oil Fill Tube O-Ring
100	951-11913	1/ 4 Turn Oil Fill Tube
101	951-11904	Dipstick O-Ring
102	951-12482	Dipstick Guage
103	951-10917A	Fuel Cap Assembly
105	951-11933	Fuel Level Indicator
106	951-12159	Fuel Tank
107	951-10651	Fuel Tank Nipple
	777I23259	Choke Label
	777I23433	Fuel Shut-Off Label
	777I23174	Throttle Label
	777S33612	Oil / Warning Label


170-L0-11 Flywheel & Blower Housing

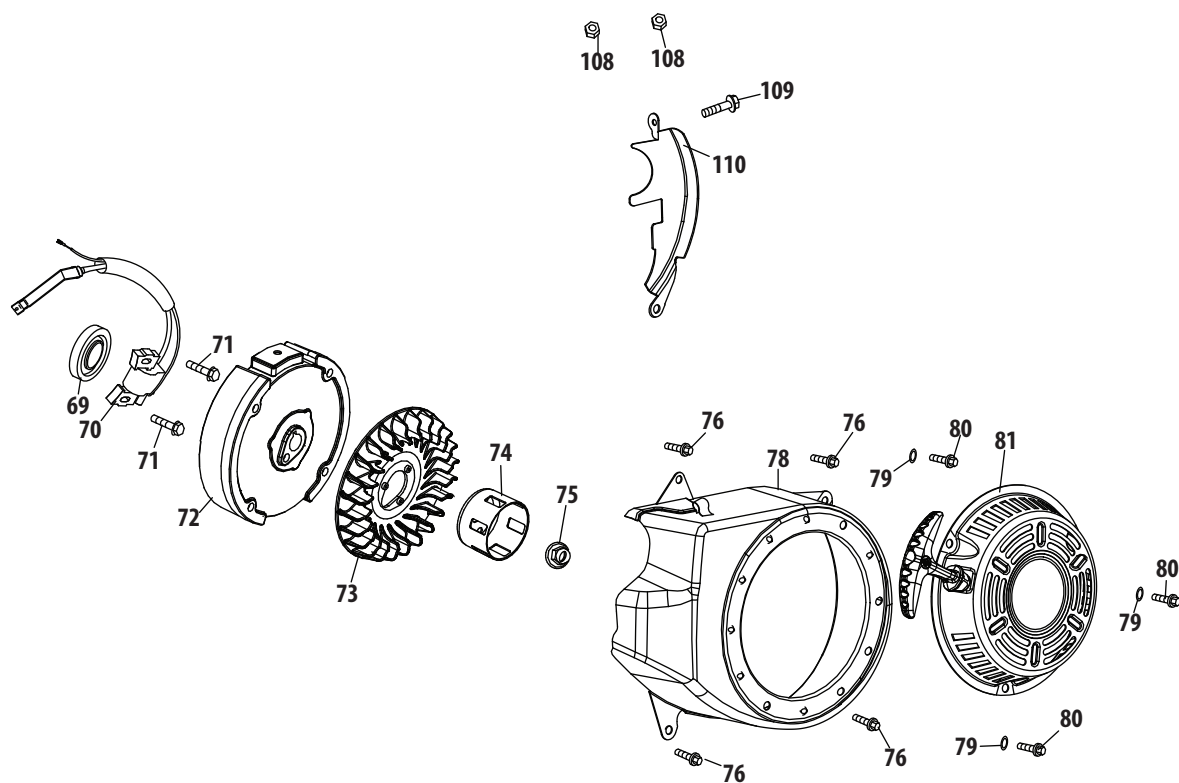

Ref.	Part Number	Description
69	951-12126	Oil Seal, 25x741.25x6
70	951-10792	Ignition Coil Assembly
71	710-04919	Bolt M6x25
72	951-10805	Flywheel
73	951-10909	Fan - Cooling
74	951-10911	Starter Cup
75	712-04209	Nut Special M14x1.5
76	710-04915	Bolt M6x12


Ref.	Part Number	Description
78	951-11583	Blower Housing
79	736-04455	Washer, Flat
80	710-04974	Bolt M6x10
81	951-12418	Recoil Starter
108	712-04212	Nut, M6
109	710-04918	Bolt M6x20
110	951-11109	Blower Housing Shield

170-L0-11 Cylinder Head

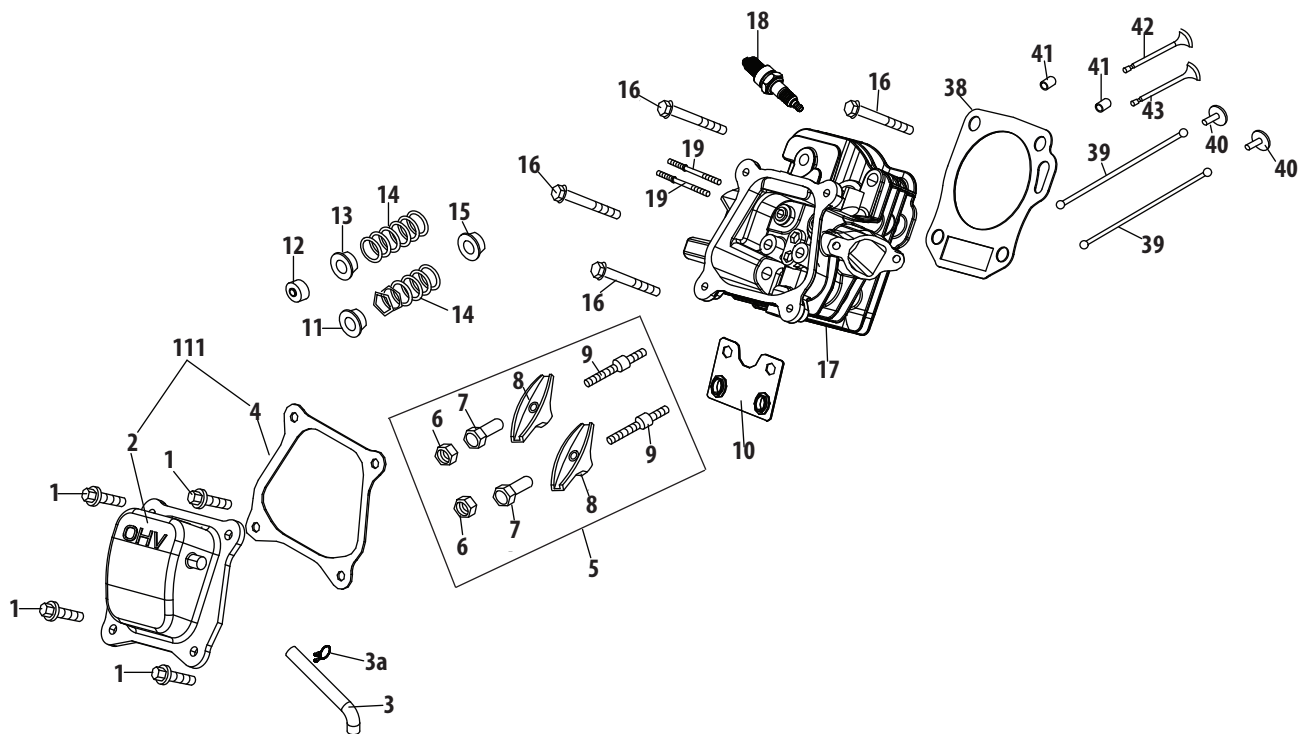

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-11054	Valve Cover
3	731-07059	Hose
3a	726-04101	Hose Clamp
4	951-11565	Valve Cover Gasket
5	951-11892	Roker Arm Assembly
6	751-11124	Nut, Pivot Locking
7	751-11123	Adjusting Nut ,Valve
8	951-11893	Rocker Arm
9	710-04902	Bolt, Pivot
10	951-11895	Push Rod Guide
11	951-12000	Retainer, In.Valve Spring
12	951-12002	Adjuster, Exh Valve
13	951-12003	Retainer, Ex.Valve Spring
14	951-12004	Valve Spring
15	951-11894	Intake Valve Seal
16	710-04933	Bolt M8×55
17	951-10668A	Cylinder Head Assembly (Incl. 4,6-15,17,20,25, 26,38,42,43)
18	951-10292	Spark Plug/F6Rtc
19	710-04911	Stud M8×36
19	951-10657	Muffler Stud Assembly
38	951-11572	Gasket Cylinder Head
39	951-10648	Push Rod
40	951-11899	Tappet
41	715-04090	Dowel Pin, 10×16
42	951-10647A	Exhaust Valve
43	951-10647A	Intake Valve
111	951-11063A	Valve Cover Kit
	951-10819	Cylinder Head Service Kit (Incl. 4,15,16,38)
	751-12549	Gasket Kit - External (Incl. 4,20,25,26,27,29)
	751-12550	Gasket Kit - Complete (Incl. 4,20,25-27,29,38, 52,53,62,66,69)

170-L0-11 Muffler

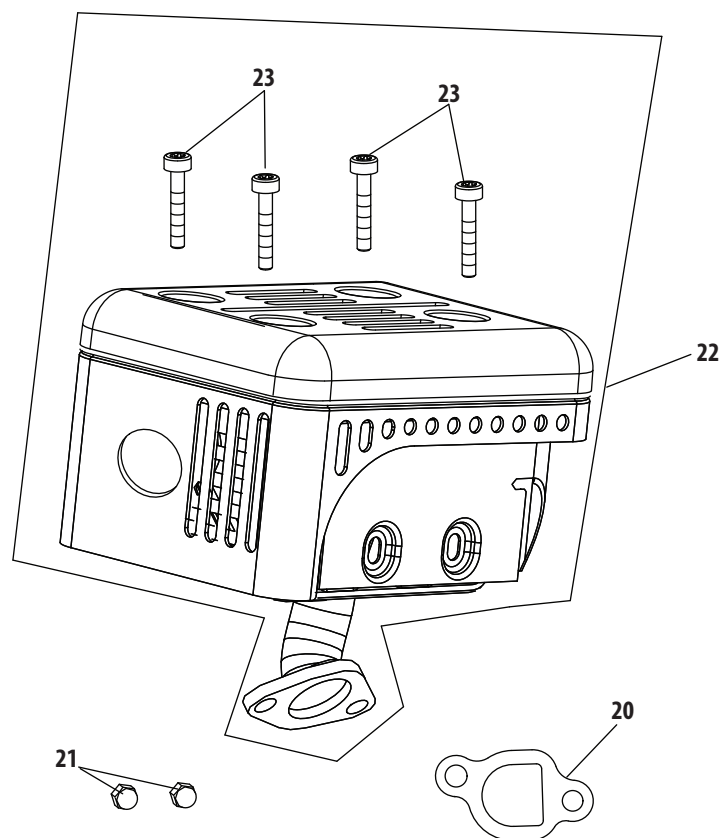

Ref.	Part Number	Description
20	951-11285	Exhaust Pipe Gasket
21	712-04214	Nut, M8
22	951-12156	Muffler Assembly
23	710-05002	Bolt M5×10
	777I23259	Choke Label
	777I23433	Fuel Shut-Off Label
	777I23174	Throttle Label
	777S33612	Oil / Warning Label

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
