

THROTTLE CONTROL

OPERATION

NOTE:

Throttle Control marked for 'Stop' , 'Start'  and 'Run'  positions. Refer figures 1 and 2.

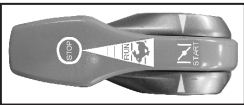


Figure 1. Throttle Control - "START" Position

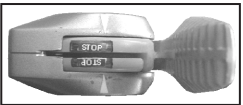


Figure 2. Throttle Control - "STOP" Position

To Start the engine

1.Standing behind the trimmer, move the throttle control lever to the "Start" position, depress the spindle control lever and hold it against the upper handle.Refer figure 3.

2.Pull the starter grip lightly until resistance is felt,then pull rapidly to overcome compression, prevent kickback and start engine.Repeat if necessary.

Move the throttle control lever to the " Run" position to adjust the engine speed.Refer figure 4.

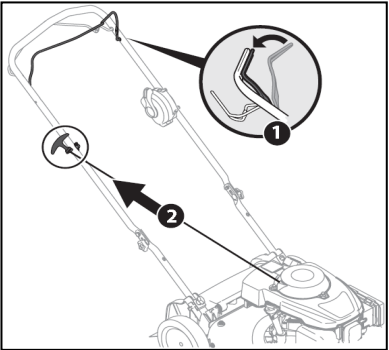


Figure 3.

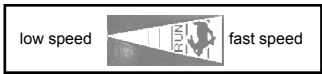


Figure 4.

To Stop the engine

Move the throttle control lever to the "Slow/ Stop" position and release the blade control handle.

Wait till the engine comes to a complete stop before removing or fitting the trimmer line to the trimmer,or attempting any maintenance work on the trimmer.

REMOTE AIR CLEANER



- Keep the air entry vent in the outer housing clear.
- Keep the air cleaner clean and replace if damaged.
- Don't allow dirt or contaminants to enter the air tube.
- Replace the air cleaner cartridge if damaged or unserviceable.

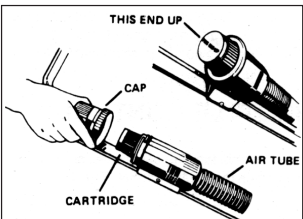







Figure 5. Remote Air Cleaner

- Unscrew the cap.Refer figure 5.
- Remove the air cleaner cartridge.
- Tap the air cleaner cartridge gently on a flat surface to dislodge dirt.
- Replace the clean cartridge with the hole down.
- Replace the cap.

IMPORTANT:

Read all safety precautions and instructions carefully before operating equipment.
Refer to operating instructions of equipment.
Ensure engine is stopped and level before performing any maintenance or service.

REPLACEMENT PARTS

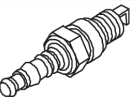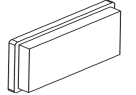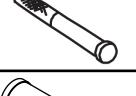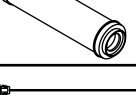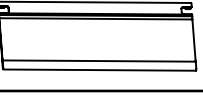Component	Part number and Description	
	14 132 11-S	Spark Plug
	14 083 01-S	Air Cleaner Kit
	14 083 02-S	Air Filter
	14 227 20-S	Fuel Cap Assembly
	14 050 14-S	Fuel Filter
	751-12717	Air Cleaner Cartridge
	746-05179	Control Cable,30"
	734-04030	Wheel
	731-2315	Deflector Flap
	731-12125	Trail Shield
	490-040-C035	.155" Trimmer Line(Ten-pack)

Please refer to the replacement parts chart above to order spare parts for the model with Kohler engine.