

Cub Cadet®

ILLUSTRATED PARTS MANUAL

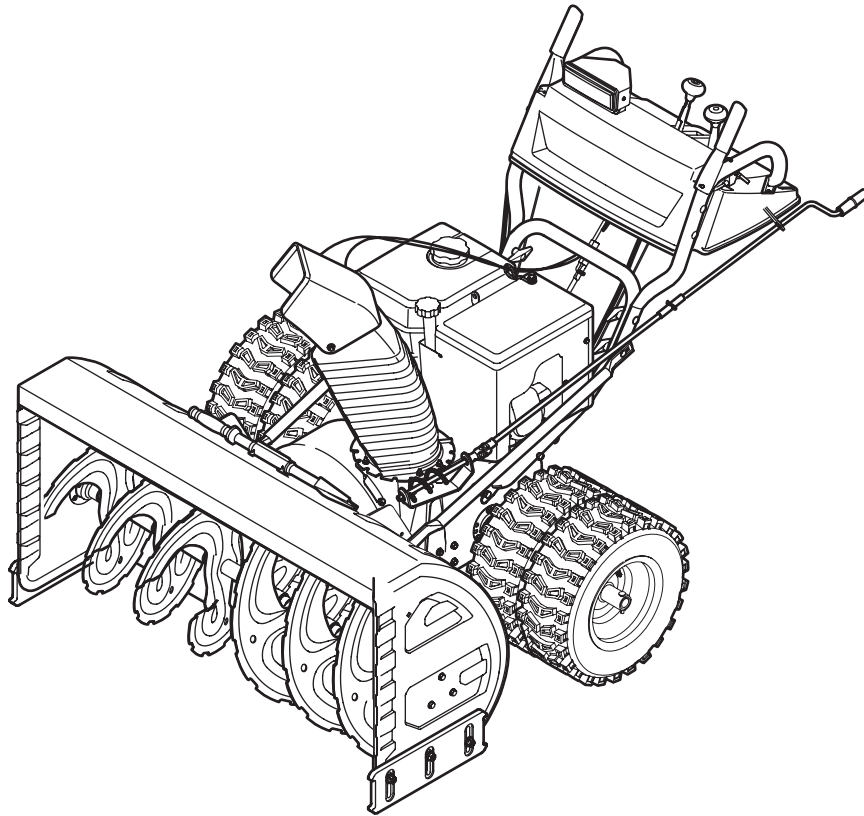

Two Stage Snow Thrower — 945 SWE

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Snow Thrower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Augers, Auger Housing & Gearbox.....	4	Label Map	11
Engine Model 490-SU 420cc.....	12	Snow Thrower Drive System.....	8
Handles, Handle Panel & Discharge Chute.....	6		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

SERIAL NUMBER

----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black
4021	Yellow (Cub Cadet)
0499	Beige (Cub Cadet)

0685	Blue (Cub Cadet)
0691	Black Jack (Cub Cadet Commercial)

This page left intentionally blank.

Augers, Auger Housing, and Gearbox

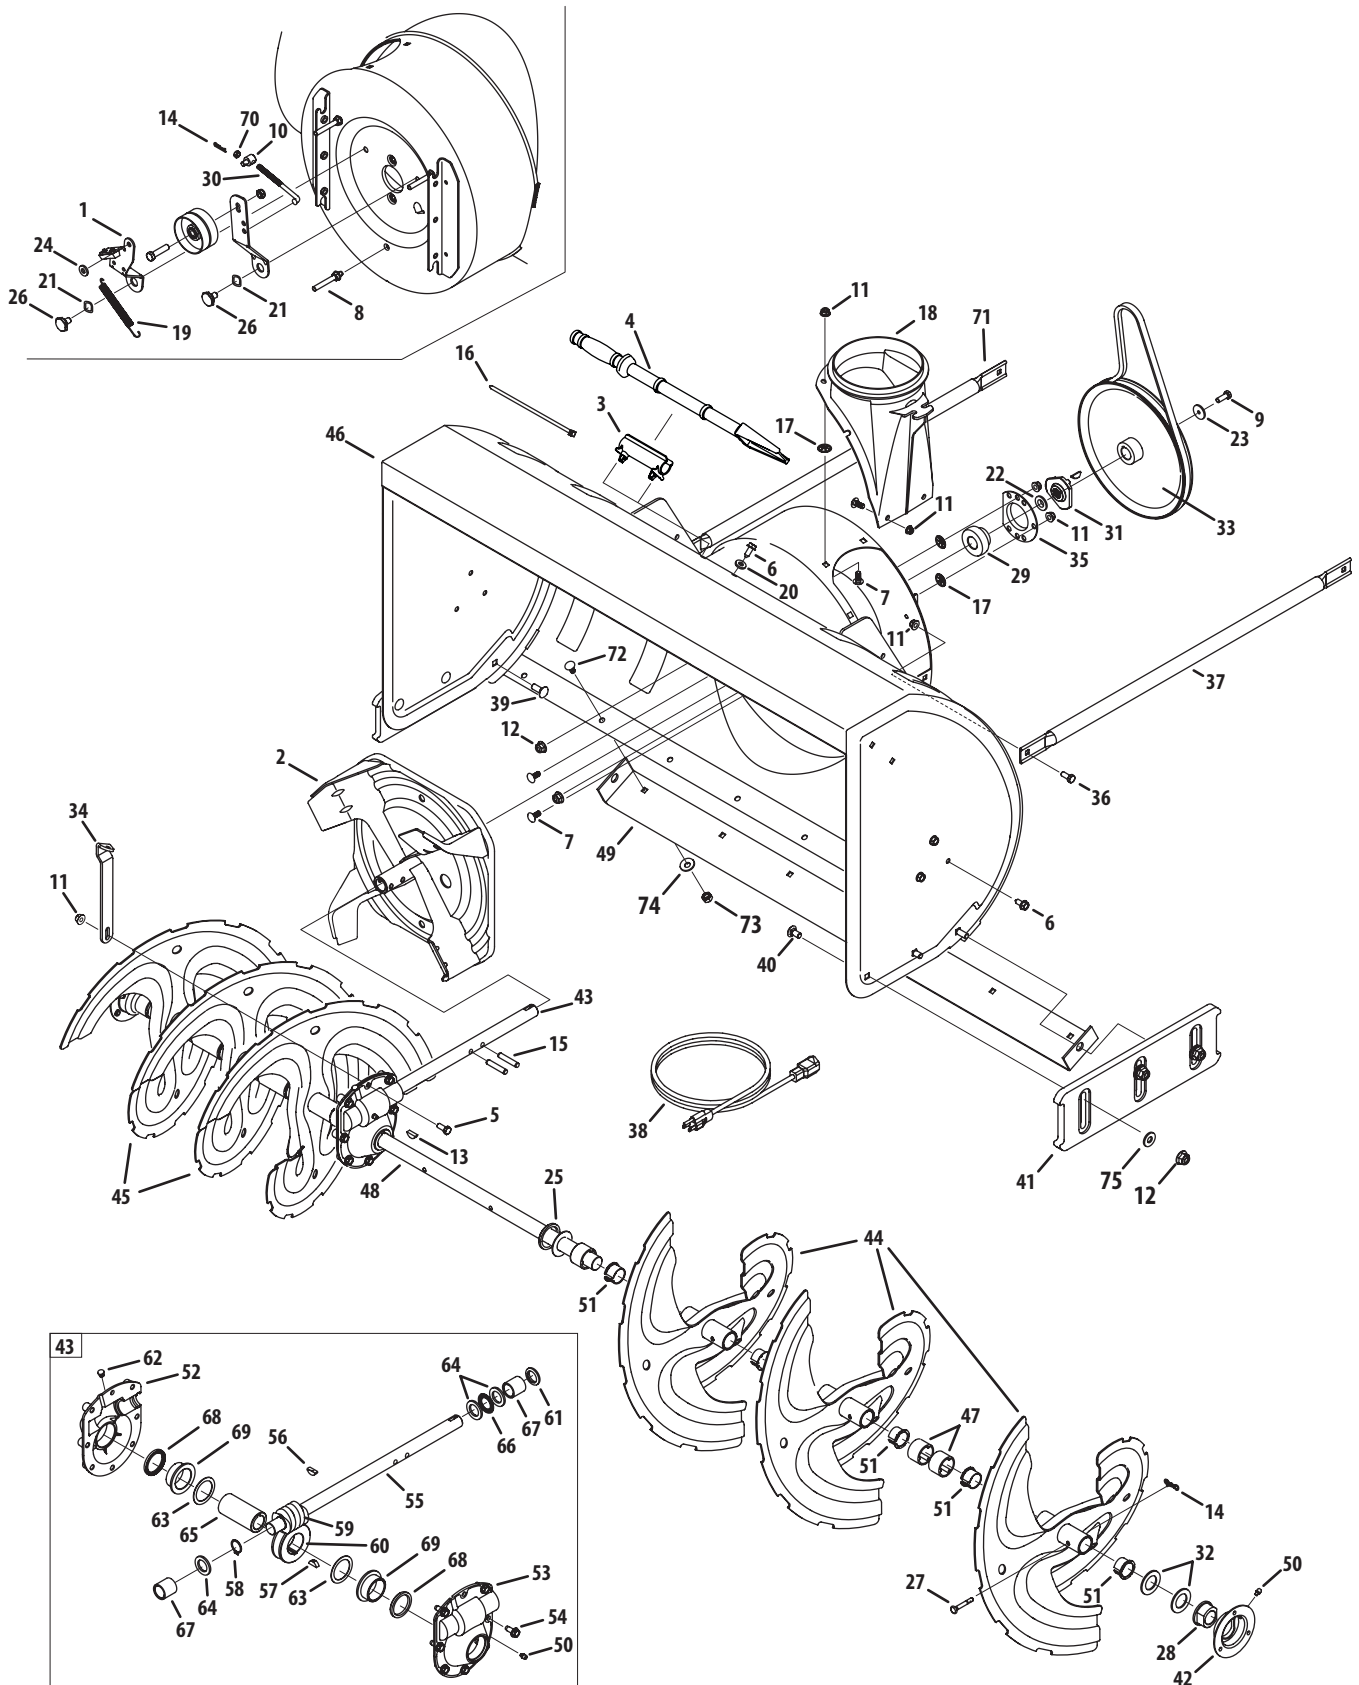


Augers, Auger Housing, and Gearbox

Ref.	Part Number	Description
1.	918-0281A	Bracket Assembly, Auger Brake
2.	684-0090B	Impeller, 16"
3.	731-2635	Clip, Mounting
4.	931-2643	Tool, Clean-out
5.	710-0376	Screw, Hex Cap, 5/16-18 x 1.0 Gr5
6.	710-04484	Screw, 5/16-18 x .750
7.	710-0451	Screw, Carriage, 5/16-18 x .75
8.	710-04606A	Screw w/Stud, 5/16-18 x .4300
9.	710-1245B	Screw, Hex Cap Lock, 5/16-24, 875
10.	911-0677	Ferrule
11.	712-04063	Nut, Hex Flange Lock, 5/16-18
12.	712-04065	Nut, Hex Flange Lock, 3/8-16
13.	914-0135	Key, Woodruff, 1/4 x 3/4
14.	714-04040	Pin, Bow-tie Cotter
15.	915-0118	Pin, Spiral, 5/16 x 1.75
16.	725-0157	Cable Tie
17.	926-04012	Nut, Push
18.	731-1696B	Adapter, Chute, 6"
19.	732-0858	Spring, Extension
20.	936-0159	Washer, Flat, .349 x .879 .063
21.	736-0174	Washer, Wave, .625 x .885 x .015
22.	736-0188	Washer, Bell., .78 x 1.49 x .06
23.	736-0505	Washer, Flat, .34 x 1.5 x .15 Ht.
24.	936-3008	Washer, .344 x .75 x .12
25.	736-3046A	Washer, 1.01 x 1.86 x .06
26.	938-0281	Screw, Shoulder, .625 x .17
27.	738-04155	Pin, Shear, .25 x 1.75
28.	741-0192	Bearing, Flange w/Flats
29.	941-04024	Bearing, Self Aligning
30.	747-0980A	Rod, Auger Idler
31.	748-04067A	Adapter, Pulley w/Pins
32.	950-04020	Spacer, 1.004 x 1.375 x .25
33.	756-04244A	Pulley, Auger Drive, 10.0
34.	790-00264A	Bracket, Gear Box Support
35.	05244B	Housing, Bearing
36.	710-3008	Screw, 5/16-18 x .75 GR5
37.	749-04485	Tube, Support, LH
38.	929-0071	Extension Cord, 110V

Ref.	Part Number	Description
39.	710-3034	Screw, Carriage, 3/8-16 x .75
40.	710-3168	Screw, Carriage, 3/8-16 x 1.00
41.	731-07032	Skid Shoe
42.	784-0315A	Housing, Bearing
43.	918-04514	Gear Box Assembly
44.	684-04151	Spiral Assembly, LH
45.	684-04152	Spiral Assembly, RH
46.	684-04234	Housing, Auger - 45"
47.	731-05163	Spacer, 1.50 x 1.00 x 1.00
48.	738-04159	Axle, Spiral
49.	790-00195A	Shave Plate, 45"
50.	937-3000	Grease Fitting, 3/16
51.	741-0494	Flange Bushing
52.	918-0246	Housing Assembly, Auger, RH
53.	918-0435	Housing Assembly, Auger, LH
54.	710-1260A	Screw, LD, 5/16-18 x .750
55.	711-04714	Auger Drive Shaft
56.	914-0126	Key, Hi Pro, 3/16 x 3/4
57.	914-0135	Key, 1/4 x 3/4 Dia.
58.	716-0111	External Retainer Ring
59.	917-0299	Gear, Worm
60.	917-1425	Gear, Worm, LH
61.	921-0145	Seal, Oil
62.	721-0325	Plug
63.	936-0266	Wash, Flat, 1.52ID x 2.0 OD
64.	936-0291	Wash, Flat, .88 ID x .38 OD
65.	738-0275	Worm Gear Shaft
66.	741-0184	Bearing, Thrust
67.	941-0217	Sleeve
68.	921-0146	Oil Seal
69.	741-0670	Flange Bearing
70.	712-3007	Jam Nut, 5/16-18
71.	749-04489	Tube, Support, RH
72.	710-04525	Screw, Carriage, 5/16-18 x .750
73.	712-04103	Nut, Hex, 5/16-18
74.	736-04216	Washer, Bell., .34 x .872 x .060
75.	736-0262	Washer, Flat, .385 x .870 x .092

Handles, Handle Panel & Discharge Chute

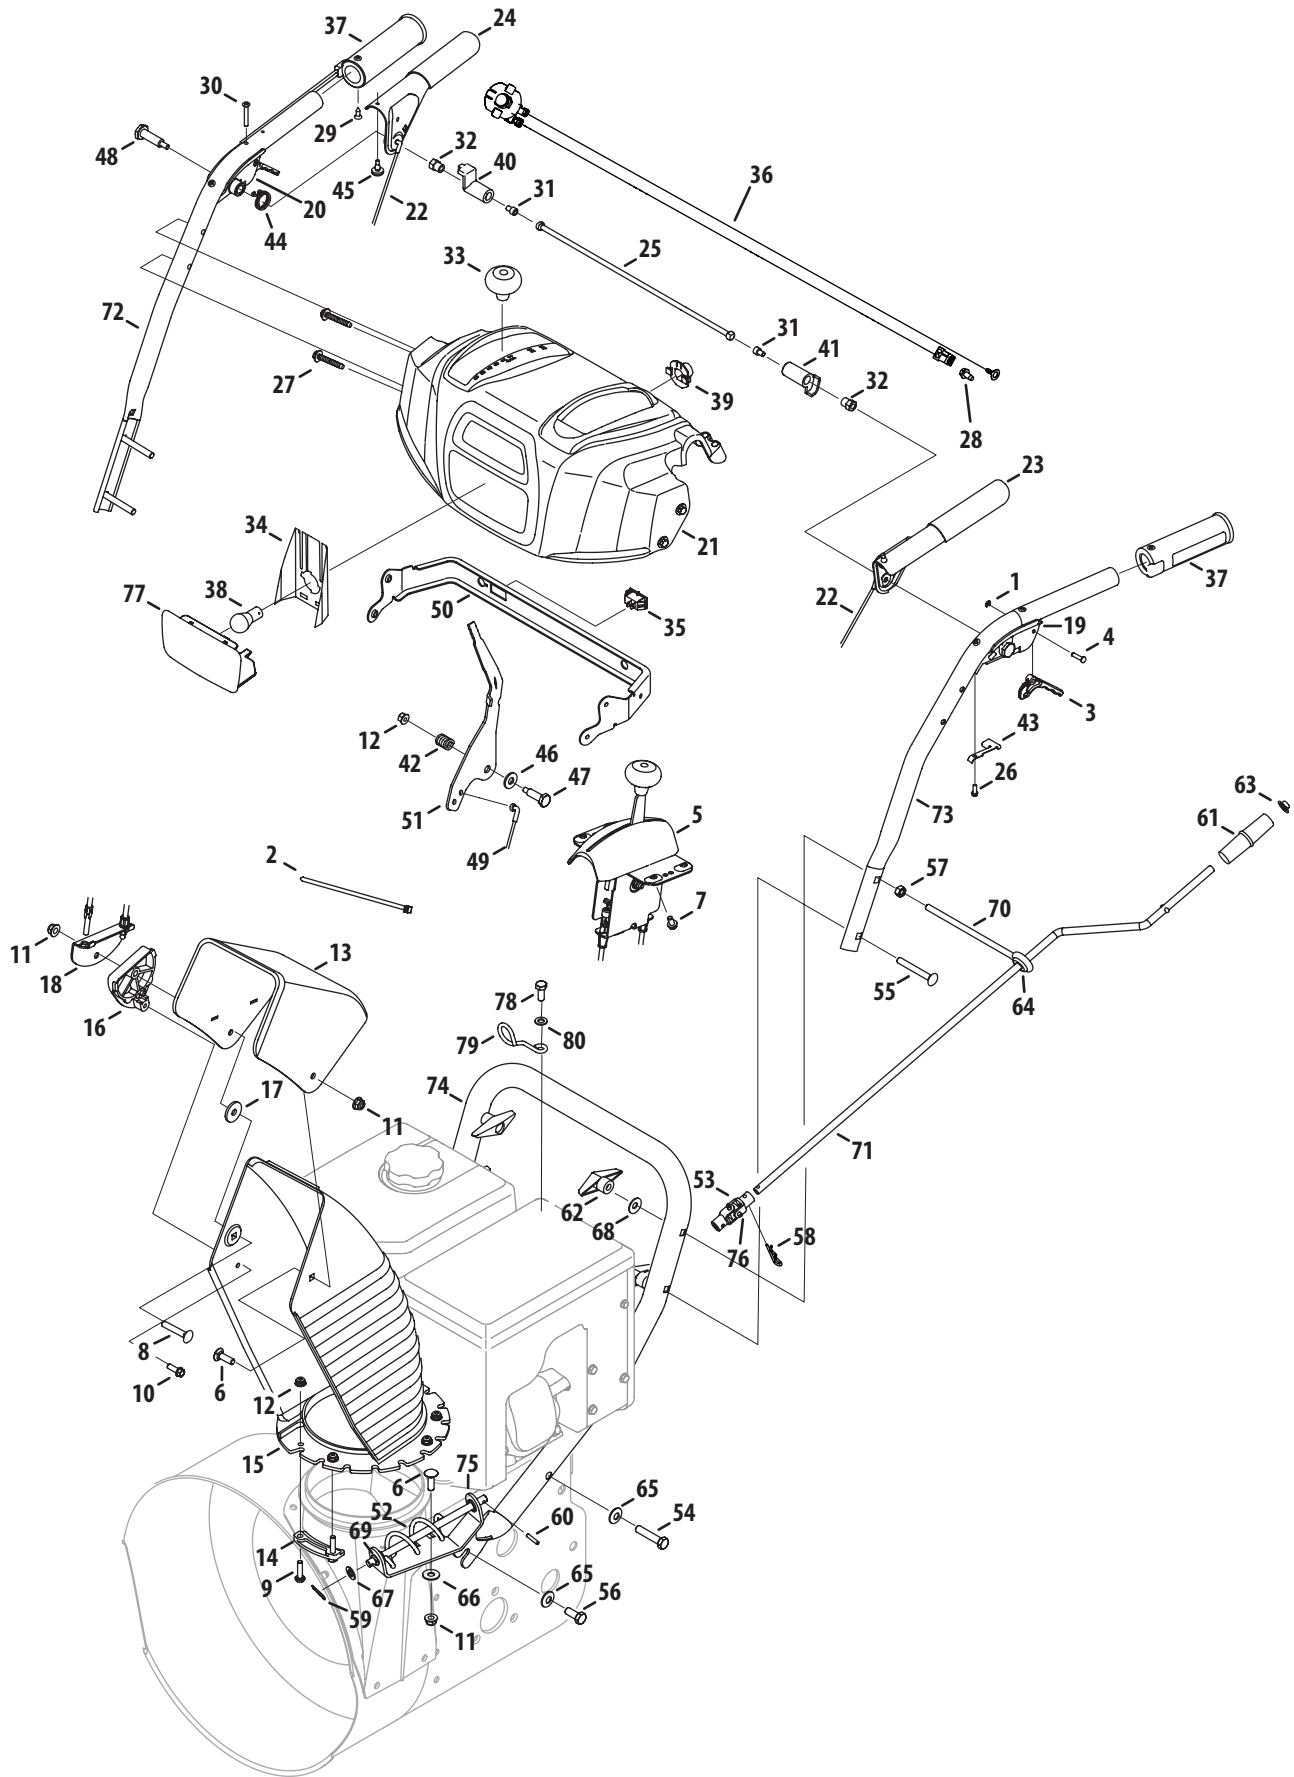


Handles, Handle Panel & Discharge Chute

Ref.	Part Number	Description
1.	716-04036	E-Ring
2.	725-0157	Cable Tie
3.	731-04954	Trigger Lock
4.	738-04126	Pin, 3/16
5.	984-04230	Chute Control Assembly
6.	710-0276	Carriage Screw, 5/16-18 x 1.0
7.	710-04187	Screw, 1/4-15 x .50
8.	710-0458	Carriage Screw, 5/16-18 x 1.75
9.	710-0597	Hex Screw 1/4-20 x 1.0
10.	710-0895	Screw, 1/4-15 x .750
11.	712-04063	Flange Lock Nut 5/16-18
12.	712-04064	Flange Lock Nut 1/4-20
13.	731-0846C	Upper Chute, 6.0
14.	731-0851A	Chute Flange Keeper
15.	731-0903E	Lower Chute
16.	731-1313C	Cbl. Guide, Chute Tilt
17.	936-0231	Flat Wash, .344 x 1.125 x .12
18.	784-5594	Cable Bracket
19.	631-04133A	Handle Assembly, LH
20.	631-04134B	Handle Assembly, RH
21.	931-04187A	Handle Panel
22.	646-0012	Cable Ass'y, Auger/Drive
23.	684-04105B	Engagement Handle, LH
24.	684-04106B	Engagement Handle, RH
25.	684-04250	Clutch Lock Rod Assembly
26.	710-04326	Screw, #8-16 x .50
27.	710-04586	Screw, 1/4-20 x 1.625
28.	710-0599	Hex Screw, 1/4-20 x .5
29.	710-0837	Screw, #10-16 x .625
30.	710-1233	Screw, #10-24 x 1.375
31.	710-3069	Screw, 1/4-20 x .50
32.	712-04081A	Nut, Hex, 1/4-20
33.	720-04039	Shift Knob
34.	777X41804	Lens Lable
35.	725-04393	Heated Grip Switch
36.	725-05148	Wire Harness
37.	725-05149	Heated Grip
38.	725-1629	Lamp, 12.8V
39.	925-1649	Light Socket
40.	731-04894D	Lock Plate

Ref.	Part Number	Description
41.	731-04896B	Clutch Lock Cam
42.	732-0193	Compression Spring
43.	732-04219C	Clutch Lock Spring
44.	732-04238	Torsion Spring, .8156 ID x .3038
45.	935-0199A	Rubber Bumper
46.	936-0267	Flat Washer, .385 x .87 x .06
47.	738-04125	Screw, Shldr., .374 x 1.05
48.	738-04348	Screw, Shldr., .437 x 1.345
49.	746-04341	Clutch Cable
50.	790-00248B	Panel Bracket
51.	790-00281B	Shift Lever
52.	684-04308A	Chute Crank Assembly
53.	684-04350	Joint Block Assembly
54.	710-04682	Hex Screw, 3/8-16 x 2.00
55.	710-0572	Carriage Screw, 5/16-18 x 2.5
56.	710-3118	Screw, Hex, 3/8-16 x 1.00
57.	912-3010	Nut, Hex, 5/16-18
58.	914-0101	Internal Cotter Pin
59.	914-0104	Internal Cotter Pin
60.	715-04095	Spring Pin, .156 dia. x .875 Lg.
61.	720-0201A	Knob, Crank
62.	720-04072A	Wing Knob, 5/16-18
63.	926-0100	Push Cap, 3/8
64.	735-0234	Rubber Grommet
65.	736-0105	Bell Wash, .375 x .87 x .063
66.	936-0159	Flat Washer, .349 x .879 x .063
67.	936-0185	Flat Wash, .375 x .738 x .063
68.	736-0242	Wash, Bell, .34 x .872 x .06
69.	941-0475	Plastic Bushing, .38 ID
70.	747-04747	Eye Bolt, .70 Dia.
71.	747-04925A	Chute Rod, .375 Dia. x 29.72
72.	749-04674	Handle, Upper, RH
73.	749-04675	Handle, Upper, LH
74.	749-0991	Handle, Lower
75.	790-00329	Chute Crank Bracket
76.	715-0150	Roll Pin, 3/16 Dia. x 1.100
77.	731-05324	Lens
78.	710-04022	Hex Screw, M8-1.25
79.	732-04677	Cable Guide
80.	936-0264	Flat Washer, .330 x .630 x .0635

Snow Thrower Drive System

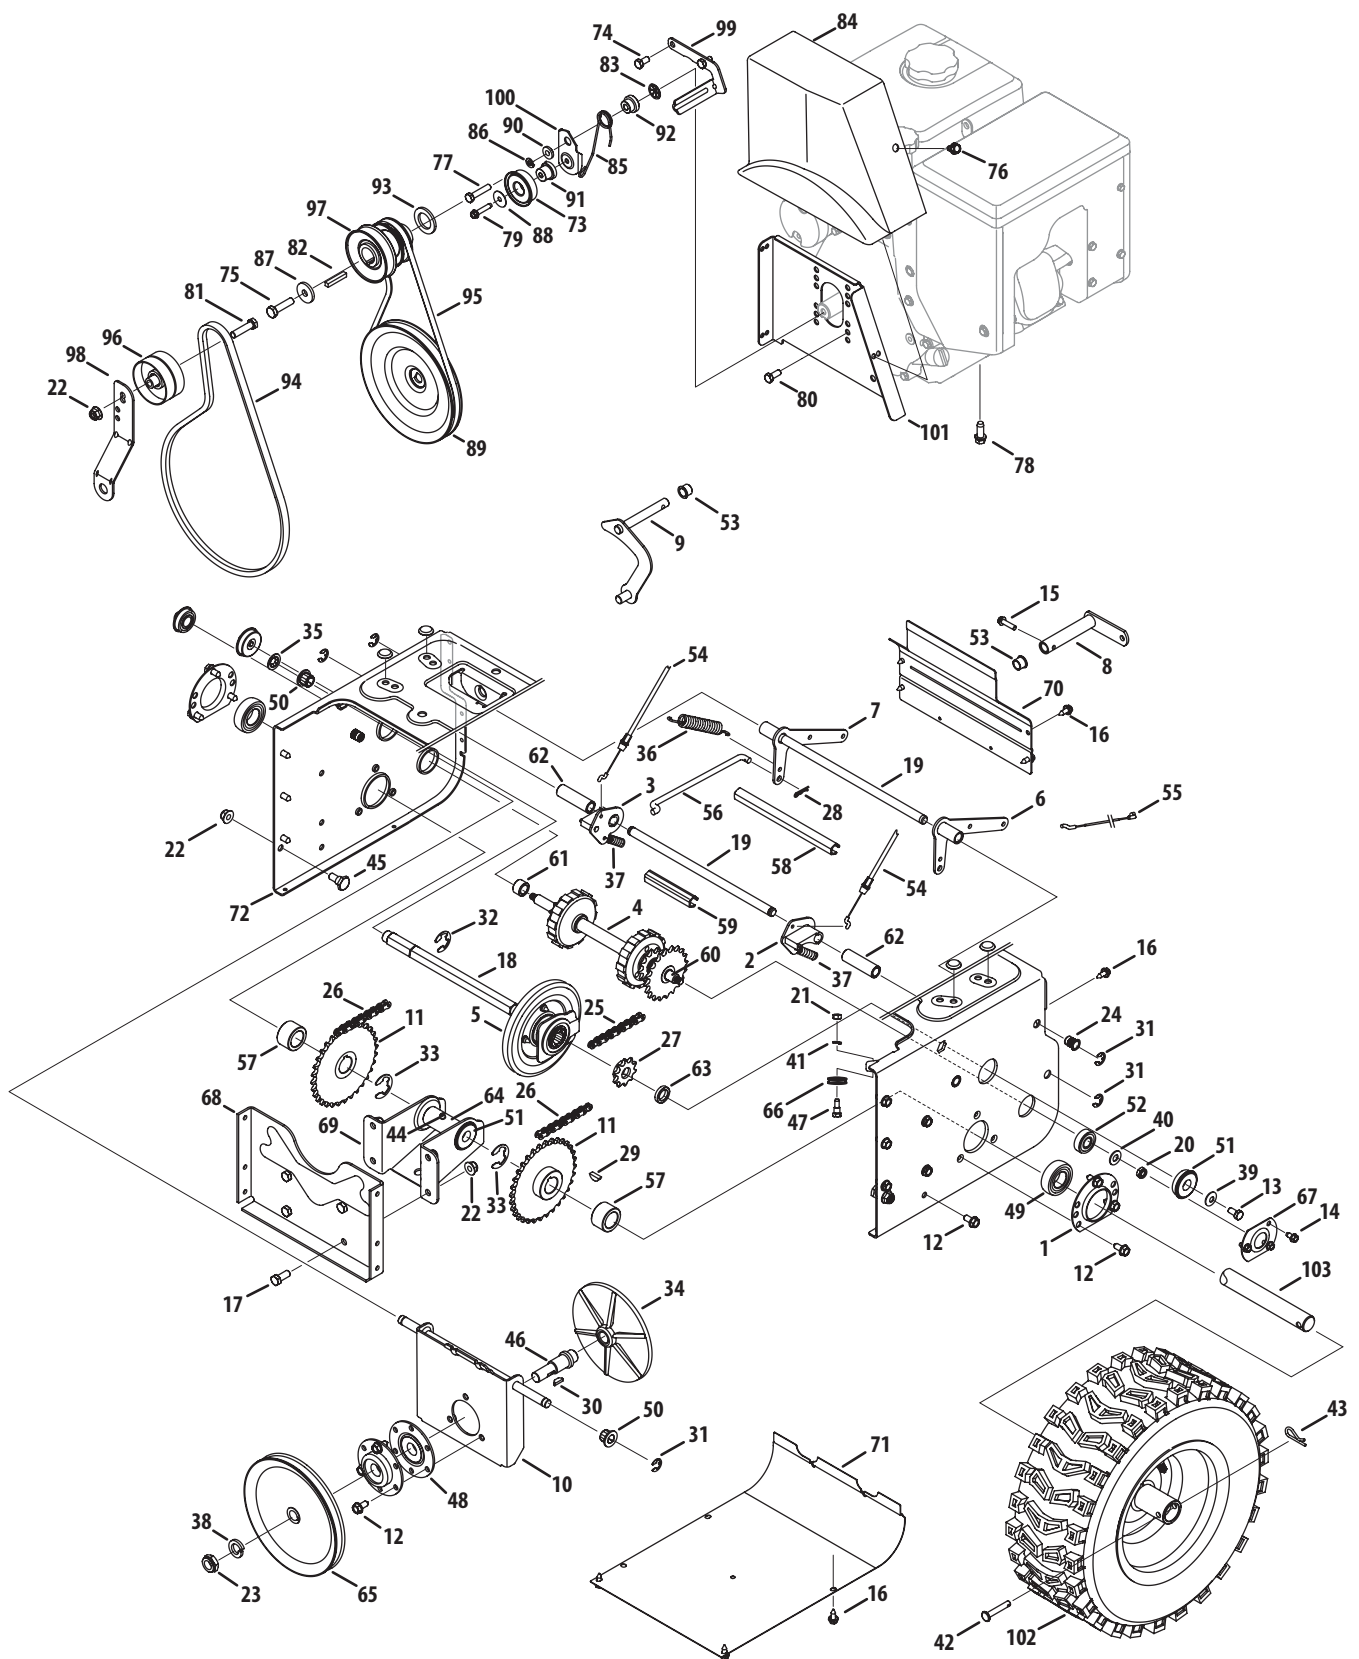

Snow Thrower Drive System

Ref. No.	Part No.	Description
1.	05244B	Housing, Bearing
2.	618-0279P	Dogg, Steering Drive, LH
3.	618-0280P	Dogg, Steering Drive, RH
4.	918-0282E	Shaft Assembly, Steering
5.	918-04178	Assembly, Friction Wheel
	718-04034	Wheel, Friction, Bonded
	710-0896	Screw, Hex Wash
6.	684-0118B	Bracket, Auger Actuator
7.	684-0119B	Bracket, Drive Actuator
8.	684-0161	Arm, Shift
9.	684-04229	Rod Assembly, Shift
10.	684-04212	Brkt, Friction Drive Suprt.
11.	684-04235	Sprocket, 32T
12.	710-04484	TT Screw, 5/16-18 x .750
13.	710-0538	Screw, Hex Cap Lock,
14.	710-0599	Screw, Hex, 1/4-20 x .50
15.	710-0788	Screw, Hex, 1/4-20 x 1.00
16.	710-1652	Screw, Hex Wash.
17.	710-3001	Screw, Hex Cap, 3/8-16
18.	911-04279	Shaft, Hex Drive
19.	711-04605	Shaft, Actuator
20.	912-0116	Nut, Hex Insert Jam Lock
21.	912-0138	Nut, Hex, 1/4-28 GR5
22.	712-04065	Nut, Hx Flnge Insert Lk
23.	912-0413	Nut, Hx Insert Jam Lk
24.	712-0717	Nut, Insert 3/8-16
25.	713-0284	Chain, Endless, #41 x 36L
26.	713-0286	Chain, #420 x 40L
27.	913-04015	Sprocket, #41 x 10T
28.	914-0104	Pin, Internal Cotter
29.	914-0135	Key, Woodruff
30.	914-0388	Key, Hi-Pro, 3/16 x 5/8
31.	916-0104	E-Ring
32.	716-0136	Ring, Retaining
33.	716-04048	Ring, Retainer
34.	917-0302	Plate, Drive
35.	726-0221	Speed Nut, .500
36.	932-0121	Spring, Extension
37.	932-0209	Spring, Extension
38.	936-0158	Washer, Lock, 5/8
39.	736-0242	Wsh, Bell., .34 x .872 x .06

Ref. No.	Part No.	Description
40.	936-0300	Wash, .406 x .875 x .059
41.	936-0329	Washer, Lock, 1/4
42.	711-04615	Pin, Clevis
43.	914-0149B	Pin, Internal Cotter
44.	937-3000	Fitting, Lube, 3/16 Drive
45.	738-0143	Screw, Shldr., .498 x .34
46.	738-0279	Spindle, Drive Plate
47.	738-0924A	Screw, Hex Shldr., 1/4-28
48.	741-0163A	Ass'y, Bearing/Housing
49.	941-04025	Bearing, Self Aligning
50.	741-04108	Bearing, Hex Flange
51.	941-0563	Bearing, Ball
52.	741-0747	Bush, Flg, .5625 ID x 1.375 x .4375
53.	741-0748	Bush, Flg, .5 ID x .627 OD
54.	746-04337	Cable, Steering
55.	946-0951A	Cable, Auger Idler
56.	747-0973	Rod, Drive Clutch
57.	750-04703	Spacer, 1.01 x 1.50 x .93
58.	750-04717	Spacer, .49 x 7.865
59.	750-04718	Spacer, .49 x 3.545
60.	750-05342	Spacer, .566 x .87 x .190
61.	750-05343	Spacer, .566 x .87 x 1.25
62.	750-0903B	Spcr., .514 x .632 x 2.44
63.	950-0997	Spacer, .675 x 1.0 x .23
64.	750-1302B	Spcr, .6725 x 1.125 x 2.48
65.	756-0344	Pulley, Drive
66.	756-0625	Roller, Cable
67.	784-0404	Retainer Bracket
68.	784-0406A	Bracket, Frame Support
69.	784-0407	Bracket, Axle Support
70.	790-00257	Cover, Upper Frame
71.	790-00259	Cover, Lower Frame
72.	790-00349	Trans Frame
73.	684-04169	Idler Pulley Assembly
74.	710-0627	Screw, Hex 5/16-24 x .75
75.	710-0191	Screw, Hex 3/8-24 x 1.25
76.	710-0607	Screw, Hx Wash Hd Tapp
77.	710-0624	Screw, Hex Cap, 5/16-24 x 1.50
78.	710-0654A	Screw, 3/8-16 x 1.00
79.	710-0809	Screw, 1/4-20 x 1.25
80.	738-04439	Screw, Shldr., .500 x .145

Continued on following page

Snow Thrower Drive System *(Continued)*

Ref. No.	Part No.	Description
81.	710-0347	Screw, Hex Cap, 3/8-16 x 1.75
82.	714-0118	Key, Square, 1/4 x 1.5
83.	926-04012	Nut, Push
84.	931-2531	Cover, Belt
85.	732-04308A	Torsion Spring, .850 dia. x .333 lg.
86.	936-0119	Washer, Lock, 5/16
87.	736-0247	Washer, Flat, .406 x 1.25
88.	736-3092	Washer, Flat, .265 x 1.0 x .030
89.	756-04244A	Auger Pulley, 10.0 x .5
90.	748-04112B	Shldr. Spacer, .3175 x .500 x .094
91.	750-04571	Shldr. Spacer, .260 x .785 x .538
92.	750-04821	Shoulder Spacer, .340 x 1.00
93.	750-05316	Spacer, 1.02 x 1.63 x .1425
94.	954-04194A	V-Belt, 4L x 44.60
95.	954-04202	V Belt, 3/8 x 36.68
96.	756-04224	Pulley, Flat Idler, 2.75 OD
97.	756-0241B	Double Pulley, 3.25 x 2.75
98.	784-0385D	Bracket, Auger Idler
99.	790-00167A	Belt Keeper Bracket
100.	790-00208C	Idler Drive Wheel Bracket
101.	790-00254A	Belt Cover Bracket
102.	634-0225A	Wheel Ass'y. - LH
	634-0226A	Wheel Ass'y. - RH
	734-2031	Tire
	734-1124A	Rim Assembly
	934-0255	Valve
103.	711-04606	Axle, Wheel, 45"

777D15123




777D15045



777X43688



777I22340

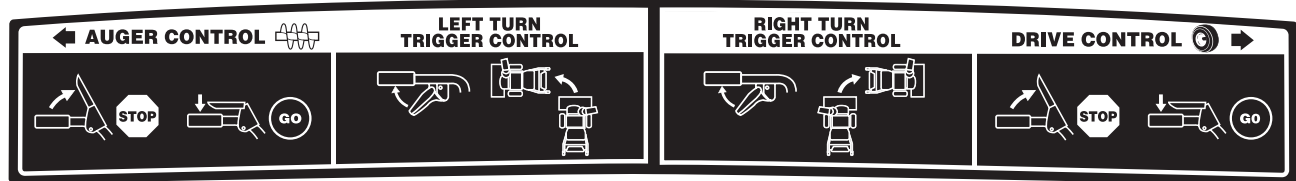


777D15086



777S32636




777D15132

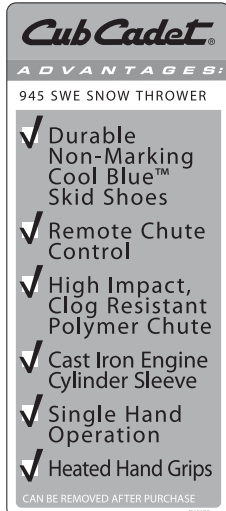

777S32280



777D15110

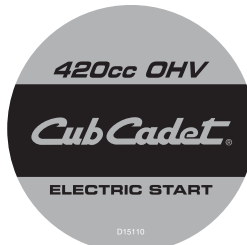


777I22341



777I22363




777I23013

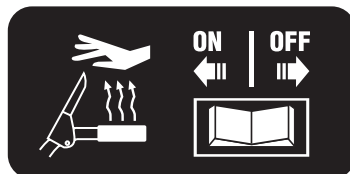

777D15114



420cc 490-SU Engine

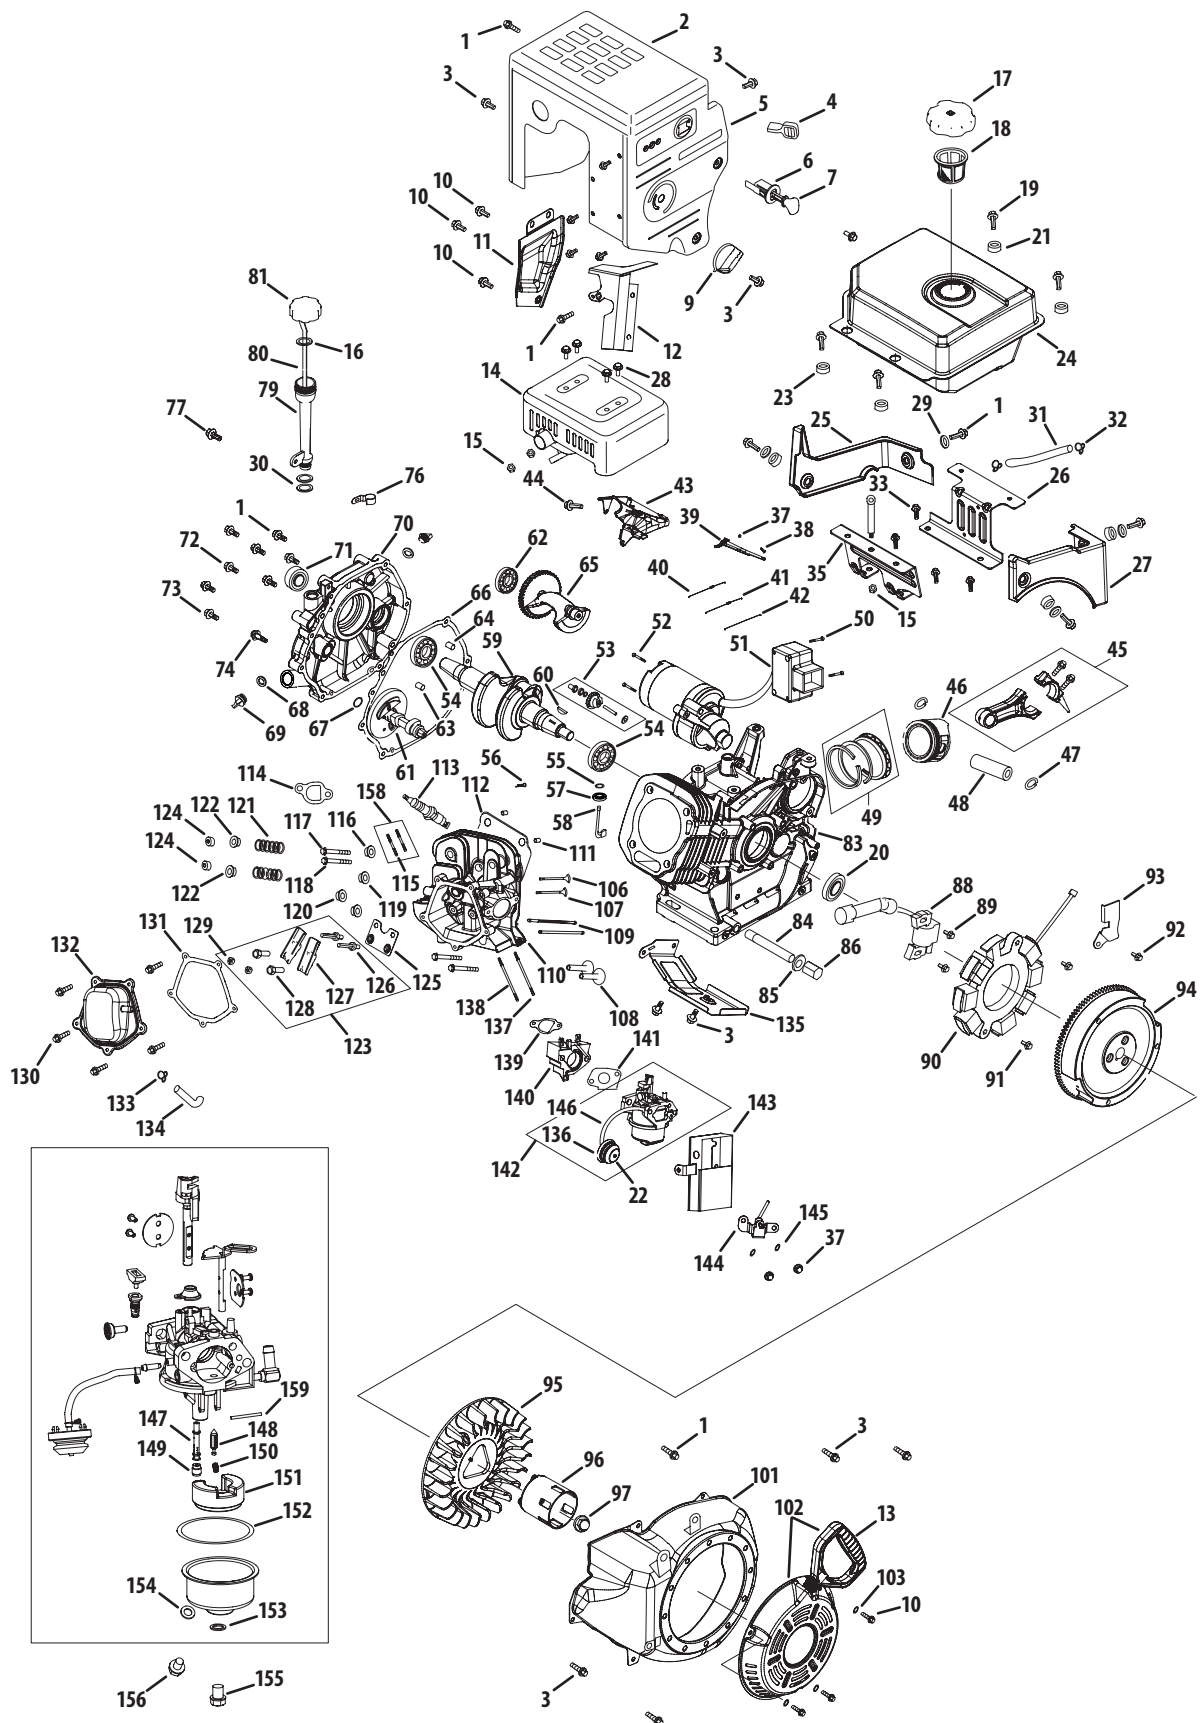

Ref.	Part Number	Description
1	710-04968	Bolt, M6 x 16
2	951-11339	Muffler Shield
3	710-04915	Bolt, M6 x 12
4	951-10757	Throttle Control Knob
5	951-11595	Control Panel
6	951-10637	Ignition Switch Assembly
7	731-05632	Key
9	951-11302	Choke Knob
10	710-04914	Bolt, Flange, M6 x 10
11	951-11181	Muffler Baffle
12	951-11321	Carburetor Heat Shield
13	731-05696	Starter Handle
14	951-11338	Muffler Assembly
15	712-04219	Nut, M8 x 1.25
16	951-11904	O-Ring
17	951-10649	Fuel Cap
18	951-11933	Fuel Level Indicator
19	710-04970	Flange Bolt, M8 x 20
20	951-11499	Oil Seal
21	750-05312	Bushing
22	951-11824	Primer Bulb
23	750-05313	Bushing
24	951-11201	Fuel Tank
25	951-11319	Fuel Tank Shroud
26	951-11318	Fuel Tank Mounting Bracket
27	951-11351	Engine Shroud
28	710-05051	Bolt
29	736-04452	Flat Washer
30	951-11903	O-Ring
33	710-04921	Bolt, Flange, M8 x 14
35	951-11182	Fuel Tank Mounting Bracket
37	712-04212	Nut, Flange, M6
38	710-04908	Bolt, M6 x 21, Governor Arm
39	951-11307	Governor Arm Bracket
40	951-11306	Governor Spring
41	951-11203	Throttle Return Spring
42	951-11309	Governor Rod
43	951-11311	Throttle Control Assembly
44	710-04916	Bolt, Flange, M6 x 14
50	710-04965	Screw, M4 x 55
51	951-11196	Electric Starter

Ref.	Part Number	Description
52	710-04967	Flange Bolt, M8 x 55
54	951-11957	Bearing
55	736-04453	Governor Shaft Washer
56	714-04077	Governor Shaft Clip
58	951-11365	Governor Arm Shaft
60	951-10307	Flywheel Key
62	951-11969	Bearing
63	715-04102	Dowel Pin
64	715-04092	Dowel Pin, 7 x 14
65	951-12095	Balance Gear Ass'y
66	951-11376	Crankcase Cover Gasket
67	736-04476	Washer
71	951-11375	Oil Seal
72	710-04971	Flange Bolt, M8 x 38
73	710-04972	Bolt, M8 x 45
74	710-05052	Bolt, M8 x 35
76	951-11320	Oil Tube Support Bracket
77	710-04966	Flange Bolt M6 x 8
79	951-11972	Dipstick Tube Ass'y Inc. Ref. 157
84	951-11350	Oil Drain Pipe
85	736-04440	Oil Drain Washer
86	710-04906	Oil Drain Plug
88	951-11305	Ignition Coil
89	710-04920	Bolt, Flange, M6 x 28
90	951-11961	Stator
91	710-04969	Flange Bolt, M6 x 30
92	710-04966	Flange Bolt, M6 x 8
93	951-11186	Alternator Wire Clamp Bracket
94	951-11312	Flywheel
95	951-11313	Cooling Fan
96	951-11314	Starter Cup
97	712-04220	Nut, M16 x 1.5
101	951-11211	Blower Housing
102	951-11310	Recoil Starter Assembly
103	736-04455	Flat Washer Recoil
111	715-04097	Dowel Pin, 12 x 20
113	951-10292	Spark Plug
114	951-11212	Muffler Gasket
115	710-04964	Exhaust Stud
116	736-04550	Flex Washer
117	710-05039	Head Bolt

420cc 490-SU Engine

Ref.	Part Number	Description
118	710-05053	Bolt, M10 x 1.25 x 87
123	951-11981	Rocker Arm Ass'y
126	710-04962	Rocker Stud Bolt
128	751-11123	Pivot Adjusting Nut
129	751-11124	Pivot Locking Nut
130	710-05054	Bolt - Valve Cover, M6 x 16
132	951-11220	Valve Cover
133	726-04101	Breather Hose Clip
134	951-11221	Breather Hose
135	951-11317	Cylinder Baffle
136	951-10639A	Primer Ass'y
137	710-05055	Carburetor Stud, M6 x 8 x 98
138	710-05056	Carburetor Stud, M6 x 8 x 118
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
141	951-11354	Carburetor Gasket
142	951-11352A	Carburetor Assembly
143	951-11304	Heater Box
144	951-11192	Choke Assembly
145	736-04477	Lock Washer
146	751-11991	Primer Hose
153	951-11348	Fuel Bowl Gasket
154	951-11349	Fuel Drain Plug Gasket
155	710-04945	Fuel Bowl Mounting Bolt
156	710-04938	Fuel Drain Plug
—	951-10651	Fuel Tank Nipple (Not Shown)
—	952Z490-SU-10	Engine Complete
—	951-11340	Crankcase Cover Kit
54	951-11957	Bearing
66	951-11376	Crankcase Cover Gasket
67	736-04476	Washer
70	—	Crankcase Cover
71	951-11375	Oil Seal
72	710-04971	Flange Bolt, M8 x 38
73	710-04972	Bolt, M8 x 45
74	710-05052	Bolt, M8 x 35
—	951-11358	Crankshaft Kit
54	951-11957	Bearing
59	—	Crankshaft Assembly
60	951-10307	Flywheel Key
71	951-11375	Oil Seal

Ref.	Part Number	Description
—	951-11336	Fuel Line Kit
31	—	Fuel Line
32	951-11731	Fuel Line Clamp
—	951-11360	Shortblock Assembly
45	951-11951	Connecting Rod Ass'y Complete
46	951-12092	Piston
47	951-11953	Piston Pin Clip
48	951-11954	Piston Pin
49	951-12093	Piston Ring Set - Complete
53	951-11956	Governor Assembly
54	951-11957	Bearing
55	736-04453	Governor Shaft Washer
56	714-04077	Governor Shaft Clip
57	951-11958	Oil Seal - Governor Shaft
58	951-11365	Governor Arm Shaft
59	—	Crankshaft Assembly
60	951-10307	Flywheel Key
61	951-11959	Camshaft Assembly
63	715-04102	Dowel Pin
64	715-04092	Dowel Pin, 7 x 14
66	951-11376	Crankcase Cover Gasket
67	736-04476	Washer
70	—	Crankcase Cover
71	951-11375	Oil Seal
72	710-04971	Flange Bolt, M8 X 38
73	710-04972	Bolt, M8 x 45
74	710-05052	Bolt, M8 x 35
83	—	Crankcase
84	951-11350	Oil Drain Pipe
85	736-04440	Oil Drain Washer
86	710-04906	Oil Drain Plug
108	951-11962	Valve Lifter (Tappet)
111	715-04097	Dowel Pin, 12 x 20
112	951-12094	Cylinder Head Gasket
114	951-11212	Muffler Gasket
117	710-05039	Head Bolt
118	710-05053	Bolt, M10 x 1.25 x 87
131	951-11967	Valve Cover Gasket
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator

Ref.	Part Number	Description
—	951-11359	Crankcase Kit
54	951-11957	Bearing
57	951-11958	Oil Seal - Governor Shaft
71	951-11375	Oil Seal
83	—	Crankcase
—	951-11361	Cylinder Head Assembly
106	—	Exhaust Valve
107	—	Intake Valve
110	—	Cylinder Head
112	951-12094	Cylinder Head Gasket
114	951-11212	Muffler Gasket
115	710-04964	Exhaust Stud
117	710-05039	Head Bolt
118	710-05053	Bolt, M10 x 1.25 x 87
119	951-11964	Intake Valve Seal
120	951-12077	Valve Spring Retainer
121	951-12078	Valve Spring
122	951-12080	Valve Spring Retainer - Exhaust
124	951-12081	Exhaust Valve Cap
125	951-11965	Push Rod Guide
126	710-04962	Rocker Stud Bolt
127	951-11966	Rocker Arm
128	751-11123	Pivot Adjusting Nut
129	751-11124	Pivot Locking Nut
131	951-11967	Valve Cover Gasket
137	710-05055	Carburetor Stud, M6 x 8 x 98
138	710-05056	Carburetor Stud, M6 x 8 x 118
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
—	951-11355	Carburetor Kit - Major
147	—	Main Nozzle
148	—	Needle Valve
149	—	Main Jet
150	—	Needle Valve Spring
151	—	Float
152	951-11970	Bowl Gasket
153	951-11348	Fuel Bowl Gasket
154	951-11349	Fuel Drain Plug Gasket
159	—	Float Pin
158	951-11207	Exhaust Stud Assembly
115	710-04964	Exhaust Stud

Ref.	Part Number	Description
—	951-11362	Gasket Kit - Complete
57	951-11958	Oil Seal - Governor Shaft
66	951-11376	Crankcase Cover Gasket
71	951-11375	Oil Seal
85	736-04440	Oil Drain Washer
112	951-12094	Cylinder Head Gasket
114	951-11212	Muffler Gasket
131	951-11967	Valve Cover Gasket
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
141	951-11354	Carburetor Gasket
—	951-11363	Gasket Kit - External
85	736-04440	Oil Drain Washer
114	951-11212	Muffler Gasket
131	951-11967	Valve Cover Gasket
139	951-11315	Carb Insulator Gasket
140	951-11353	Carburetor Insulator
141	951-11354	Carburetor Gasket
—	951-11337	Valve Kit
106	—	Exhaust Valve
107	—	Intake Valve
—	951-11333	Valve Cover Kit
131	951-11967	Valve Cover Gasket
132	951-11220	Valve Cover
—	951-11345	Oil Filler Plug Assembly
68	951-11960	O-Ring
69	—	Oil Fill Plug
—	951-10641	Oil Drain Assembly
84	951-11350	Oil Drain Pipe
85	736-04440	Oil Drain Washer
86	710-04906	Drain Plug
—	951-11335	Push Rod Kit
109	—	Push Rod
—	751-11971	Dipstick Assembly
16	951-11904	Dipstick
81	—	Oil Cap
—	951-11357	Cylinder Head Kit
112	951-12094	Cylinder Head Gasket
117	710-05039	Cylinder Head Bolt
118	710-05053	Cylinder Head Bolts
119	951-11964	Valve Seal
131	951-11967	Valve Cover Gasket



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
