

Cub Cadet[®]

ILLUSTRATED PARTS MANUAL

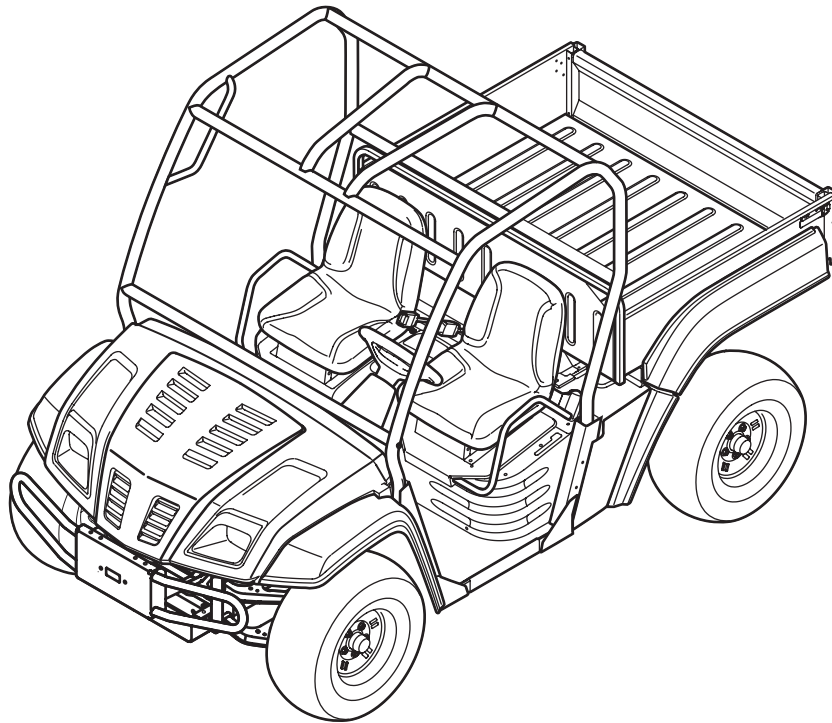

4 x 4 Utility Vehicle - Model Series 460
4 x 2 Utility Vehicle - Model Series 470

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Table of Contents


<i>Axle, Front Suspension</i>	26	<i>Engine, Yanmar 21.9 H.P.</i>	
<i>Axle, Rear Suspension</i>	26	<i>Cylinder Block</i>	54
<i>Battery</i>	14	<i>Gear Housing</i>	56
<i>Bed</i>	4 & 6	<i>Mounting Flange & Oil Sump</i>	58
<i>Bed Lift</i>	4	<i>Cylinder Head & Bonnet</i>	60
<i>Bench Seat†</i>	90	<i>Exhaust Manifold</i>	62
<i>Brake Lever Assembly</i>	8	<i>Camshaft & Driving Gear</i>	63
<i>Bumper</i>	10	<i>Crankshaft & Piston</i>	64
<i>Dash Panel</i>	12	<i>Lub. Oil System</i>	65
<i>Diff. Lock Lever</i>	8	<i>Fuel Injection Valve</i>	66
<i>Engine, Kohler 20 H.P.</i>		<i>Fuel Injection Pump</i>	68
<i>Crank Shaft</i>	30	<i>Governor</i>	70
<i>Crank Case</i>	30	<i>Cooling Water System</i>	72
<i>Oil Pan & Lubrication</i>	32	<i>Starting Motor</i>	74
<i>Head/Valve/Breather</i>	32	<i>Gasket Set</i>	76
<i>Ignition & Electrical</i>	34	<i>Engine/ Transmission Accessories, Kohler</i>	16
<i>Blower Housing & Baffles</i>	34	<i>Engine/ Transmission Accessories, Kohler EFI</i>	18
<i>Starting System</i>	36	<i>Engine/ Transmission Accessories, Yanmar</i>	20
<i>Fuel System</i>	36	<i>Euro Cab†</i>	
<i>Engine Controls</i>	38	<i>Covering Elements</i>	93
<i>Air Intake & Filtration</i>	40	<i>Door</i>	94
<i>Exhaust</i>	40	<i>Frame</i>	95
<i>Engine, Kohler EFI 31 H.P.</i>		<i>Front Glass</i>	96
<i>Crank Shaft</i>	42	<i>Front Lighting/ Rear Lighting</i>	97
<i>Crank Case</i>	42	<i>Rear Glass</i>	98
<i>Oil Pan & Lubrication</i>	44	<i>Roof Insert</i>	99
<i>Head/Valve/Breather</i>	44	<i>Roof</i>	100
<i>Ignition & Electrical</i>	46	<i>Rotating Light</i>	101
<i>Starting System</i>	46	<i>Fenders, Front</i>	12
<i>Fuel System</i>	48	<i>Fenders, Rear, Left</i>	4
<i>Engine Controls</i>	50	<i>Fenders, Rear, Right</i>	6
<i>Air Intake & Filtration</i>	50	<i>Frame</i>	10
<i>Cooling System</i>	52	<i>Fuel Tank</i>	14
<i>Decals</i>	52	<i>Head Rest†</i>	89

† If Equipped

<i>Hood Rack†</i>	88
<i>Kohler Gas Alternator†</i>	23
<i>Labels (Models K465/6)</i>	77
<i>Labels (Model C465)</i>	78
<i>Labels (Model C466)</i>	79
<i>Labels (Model M466)</i>	80
<i>Labels (Model M46E)</i>	81
<i>Labels (Model M467)</i>	82
<i>Labels (Model B475)</i>	83
<i>Operator Protective Structure</i>	92
<i>Pedal, Brake</i>	8
<i>Pedal, Throttle</i>	8
<i>Radiator†</i>	29
<i>Schematic, Electrical</i>	
<i>Kohler</i>	84
<i>Kohler EFI</i>	85
<i>Yanmar</i>	86
<i>Diesel Engine</i>	87
<i>Seats</i>	14
<i>Seat Belts</i>	3
<i>Shifter Lever Assembly</i>	8
<i>Steering</i>	26
<i>Transmission</i>	24
<i>Transmission Brake Assembly</i>	18
<i>Wheels, Front</i>	26
<i>Wheels, Rear</i>	26

† If Equipped

Rear Left Fender and Cargo Bed

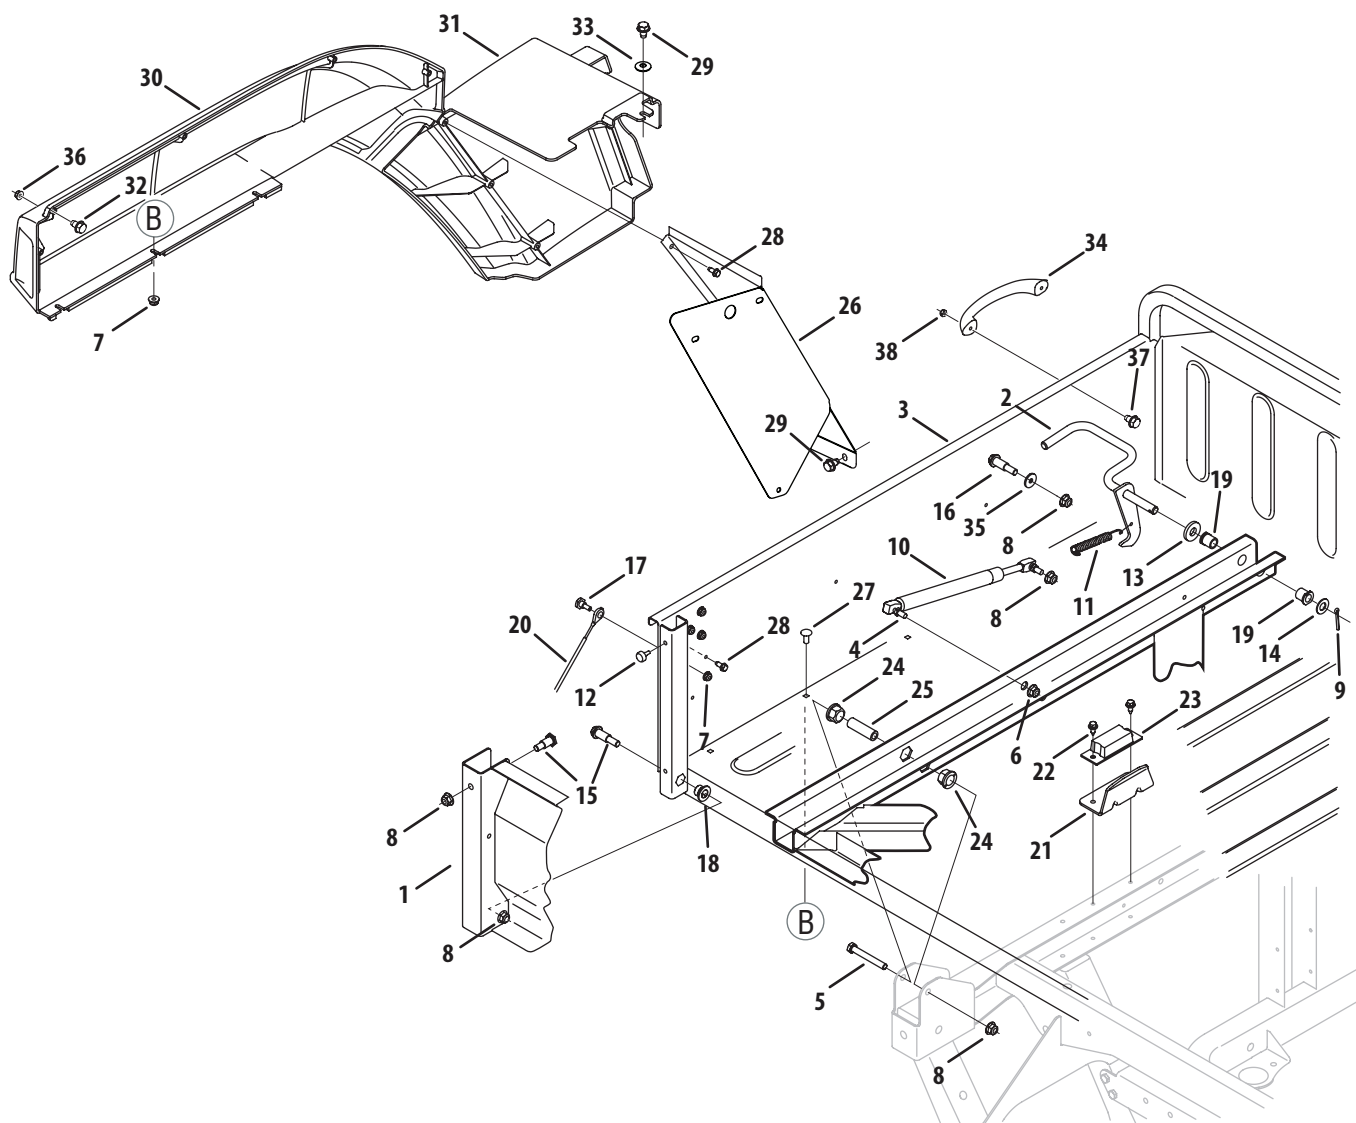


Rear Left Fender and Cargo Bed

Ref No.	Part Number	Description
1	607-04159B-0637	Tgt Asm, Black
	607-04159B-4021	Tgt Asm, Cub Yellow
2	607-04180	Lvr Asm, bed, latch
3	607-04191B	Box Asm, bed
4	710-04166	Stud, ball, 5/16-18
5	710-3022	Screw, 3/8-16, 2.75, gr5, std
6	712-04063	Nut, flglk, 5/16-18, grf, nylon
7	712-04064	Nut, flglk, 1/4-20, grf, nylon
8	712-04065	Nut, flglk, 3/8-16, grf, nylon
9	714-0162	Pin, cot, 5/32, 1.25
10	732-04109B	Spr, gas, 6.91 Stroke
11	932-0428A	Spr, extn, .50 Od X 4.35 Lg
12	735-0271A	Bmpr, .62 Dia. x .3
13	736-04019	Wash, flat, .531 X 1.25 X .181
14	936-0572	Wash, flat, .510 X 1.00 X .060
15	738-0430	Scr, shldr, .50 X .685, 3/8-16
16	738-0966A	Scr, shldr, .50x.925, 3/8-16
17	738-1023	Scr, shldr, .375x.280, 1/4-20
18	741-0324A	Brg, flg, hex, .506 Id X .590 Lg
19	941-0673	Brg, flg, .503 X .689 X .792
20	746-04245	Cbl, lanyard

Ref No.	Part Number	Description
21	707-04786-0637	Brkt, Bed Guide
22	710-1652	Scr, tt, 1/4-20x.625, hxindwsh
23	731-04016	Bmpr, suspn, extn
24	948-0229	Brg, hex Flng .629 Id
25	750-04634	Spcr, .390 Id X.625 Od X2.03 Lg
26	707-04728C-0637	Brkt, Lh, Shld
27	710-0134	Scr, Crg, 1/4-20, .62, Gr2
28	710-04261	Scr, #12-16, .50, Hxindwsh
29	710-0607	Scr, Tt, 5/16-18, 0.500
30	731-05280A	Fdr, Lh Rr
	731-05450A	Fdr, Lh Rr, Camo
31	731-05282A	Fdr, Lwr Lh Rr
	731-05452	Fdr, Lwr Lh Rr, Camo
32	710-0286	Screw, Mach., 1/4-20 x .500
33	736-0242	Washer, Bell, .340 x .872 x .060
34	731-06155	Handle
35	736-0262	Washer, Flat, .385 x .870 x .092
36	712-0264	Nut, Acorn, 1/4-20
37	710-0924	Screw, Mach., 1/4-20 x .750
38	712-0324	Nut, Hexlk., 1/4-20

† If Equipped

Rear Right Fender and Cargo Bed

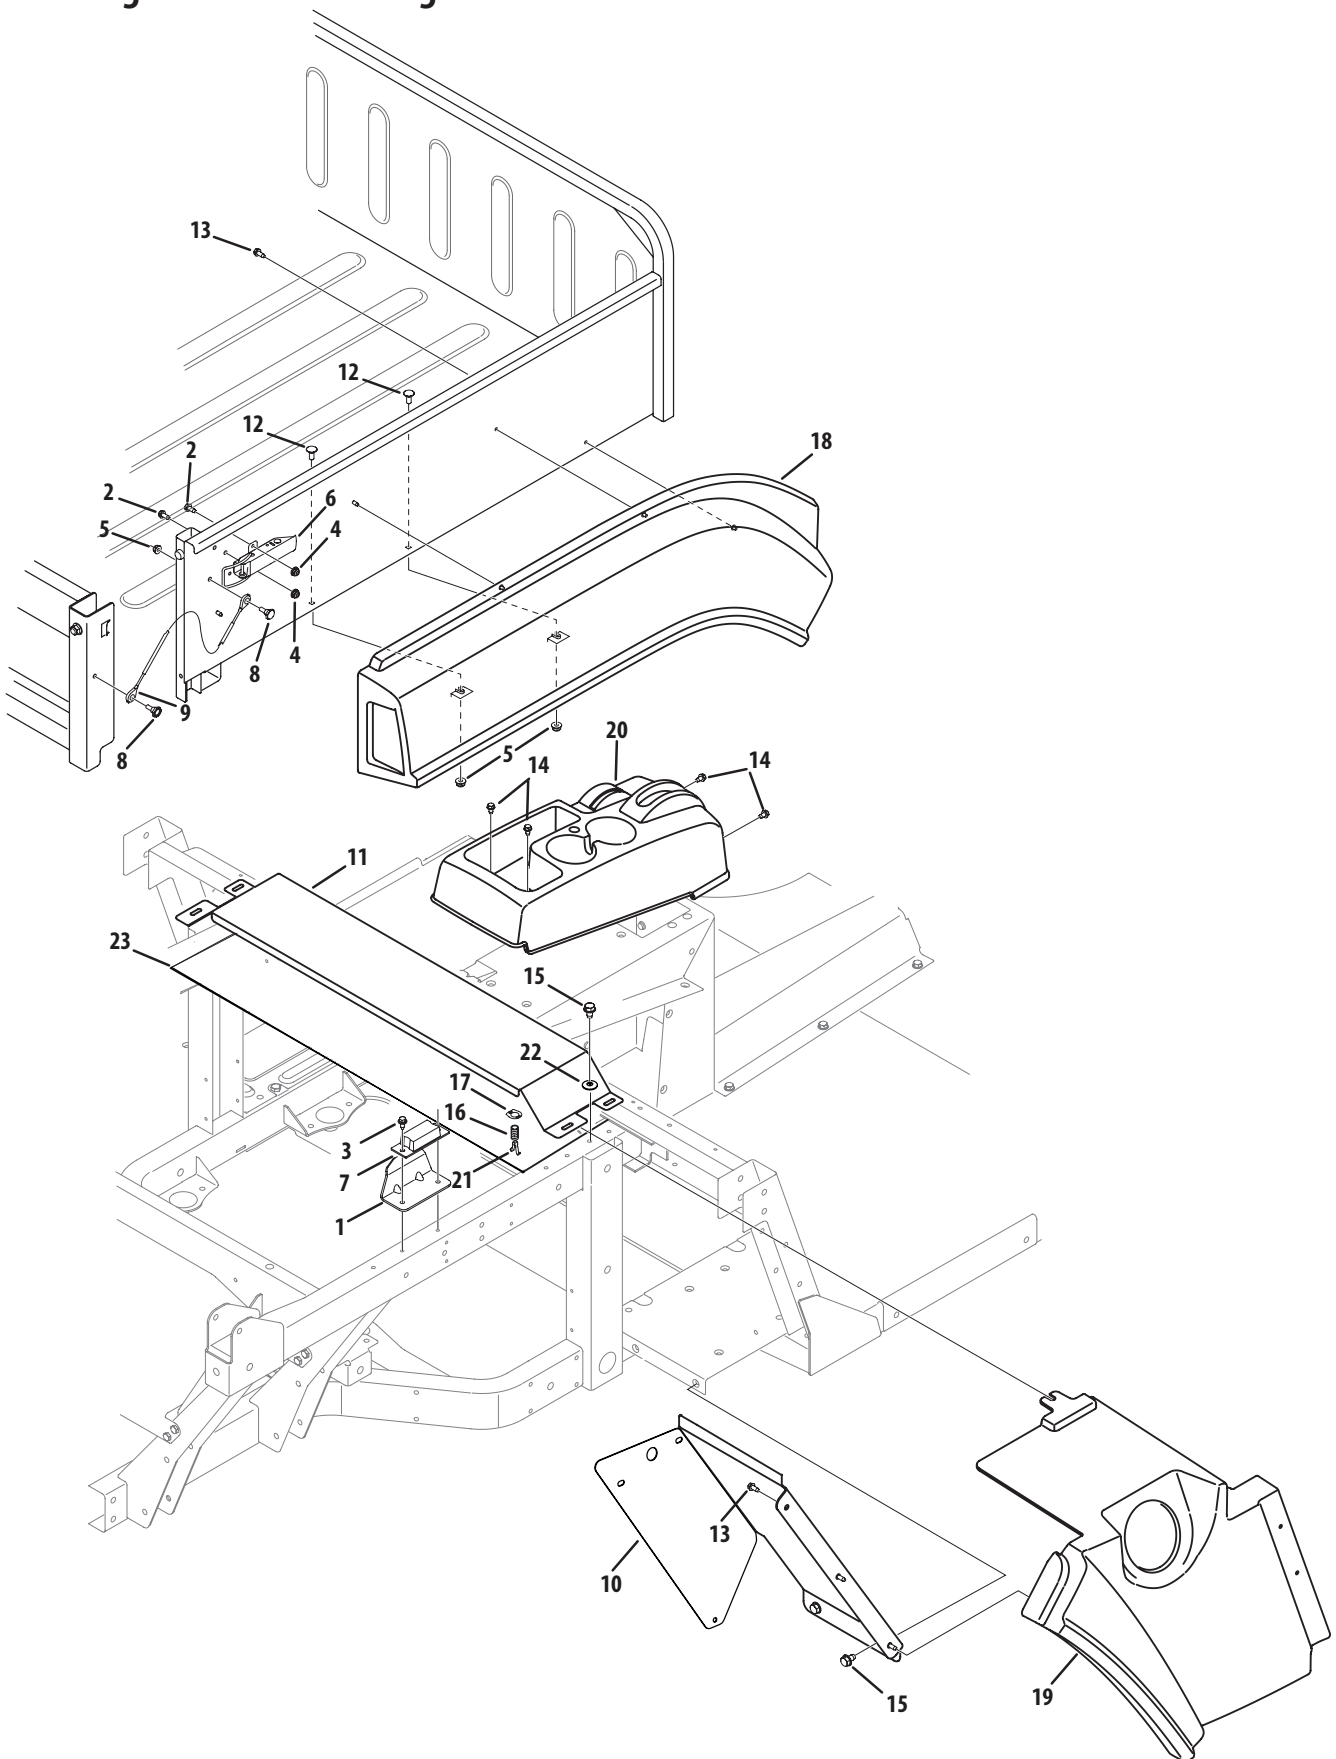


Rear Right Fender and Cargo Bed

Ref No.	Part Number	Description
1	707-04786-0637	Brkt, Bed Guide
2	710-0473	Scr, mach, #10-24, 0.500, trusphi
3	710-1652	Scr, tt, 1/4-20x.625, hxindwsh
4	712-0161	Nut, hexlk, #10-24, gr2, nylon
5	712-04064	Nut, flglk, 1/4-20, grf, nylon
6	726-04058	Latch, draw, over Center
7	731-04016	Bmpr, suspn, extn
8	738-1023	Scr, shldr, .375x.280, 1/4-20
9	746-04245	Cbl, lanyard
10	707-04729C-0637	Brkt, Rh, Shld
11	707-04748A-0637	Cvr, Uv
12	710-0134	Scr, Crg, 1/4-20, .62, Gr2
13	710-04261	Scr, #12-16, .50, Hxindwsh
14	710-0599	Scr, Tt, 1/4-20, 0.500
15	710-0607	Scr, Tt, 5/16-18, 0.500
16	732-0937	Spr, Compr, .40 OD X .040 Dia.
17	726-3056	Latch, Pnl, 1/4 Turn
18	731-05281A	Fdr, Rh Rr
	731-05451A	Fdr, Rh Rr, Camo
19	731-05283A	Fdr, Lwr Rh Rr
	731-05453	Fdr, Lwr Rh Rr Camo
20	731-05436	Cnsol, Seat
	707-05059-0637†	Cover, Shf, Bench Seat
21	732-0936	Spr, Clip
22	736-0242	Washer, Bell, .340 x .872 x .060
23	751-10435	Insl., CVR, UV

† If Equipped

Pedals and Levers

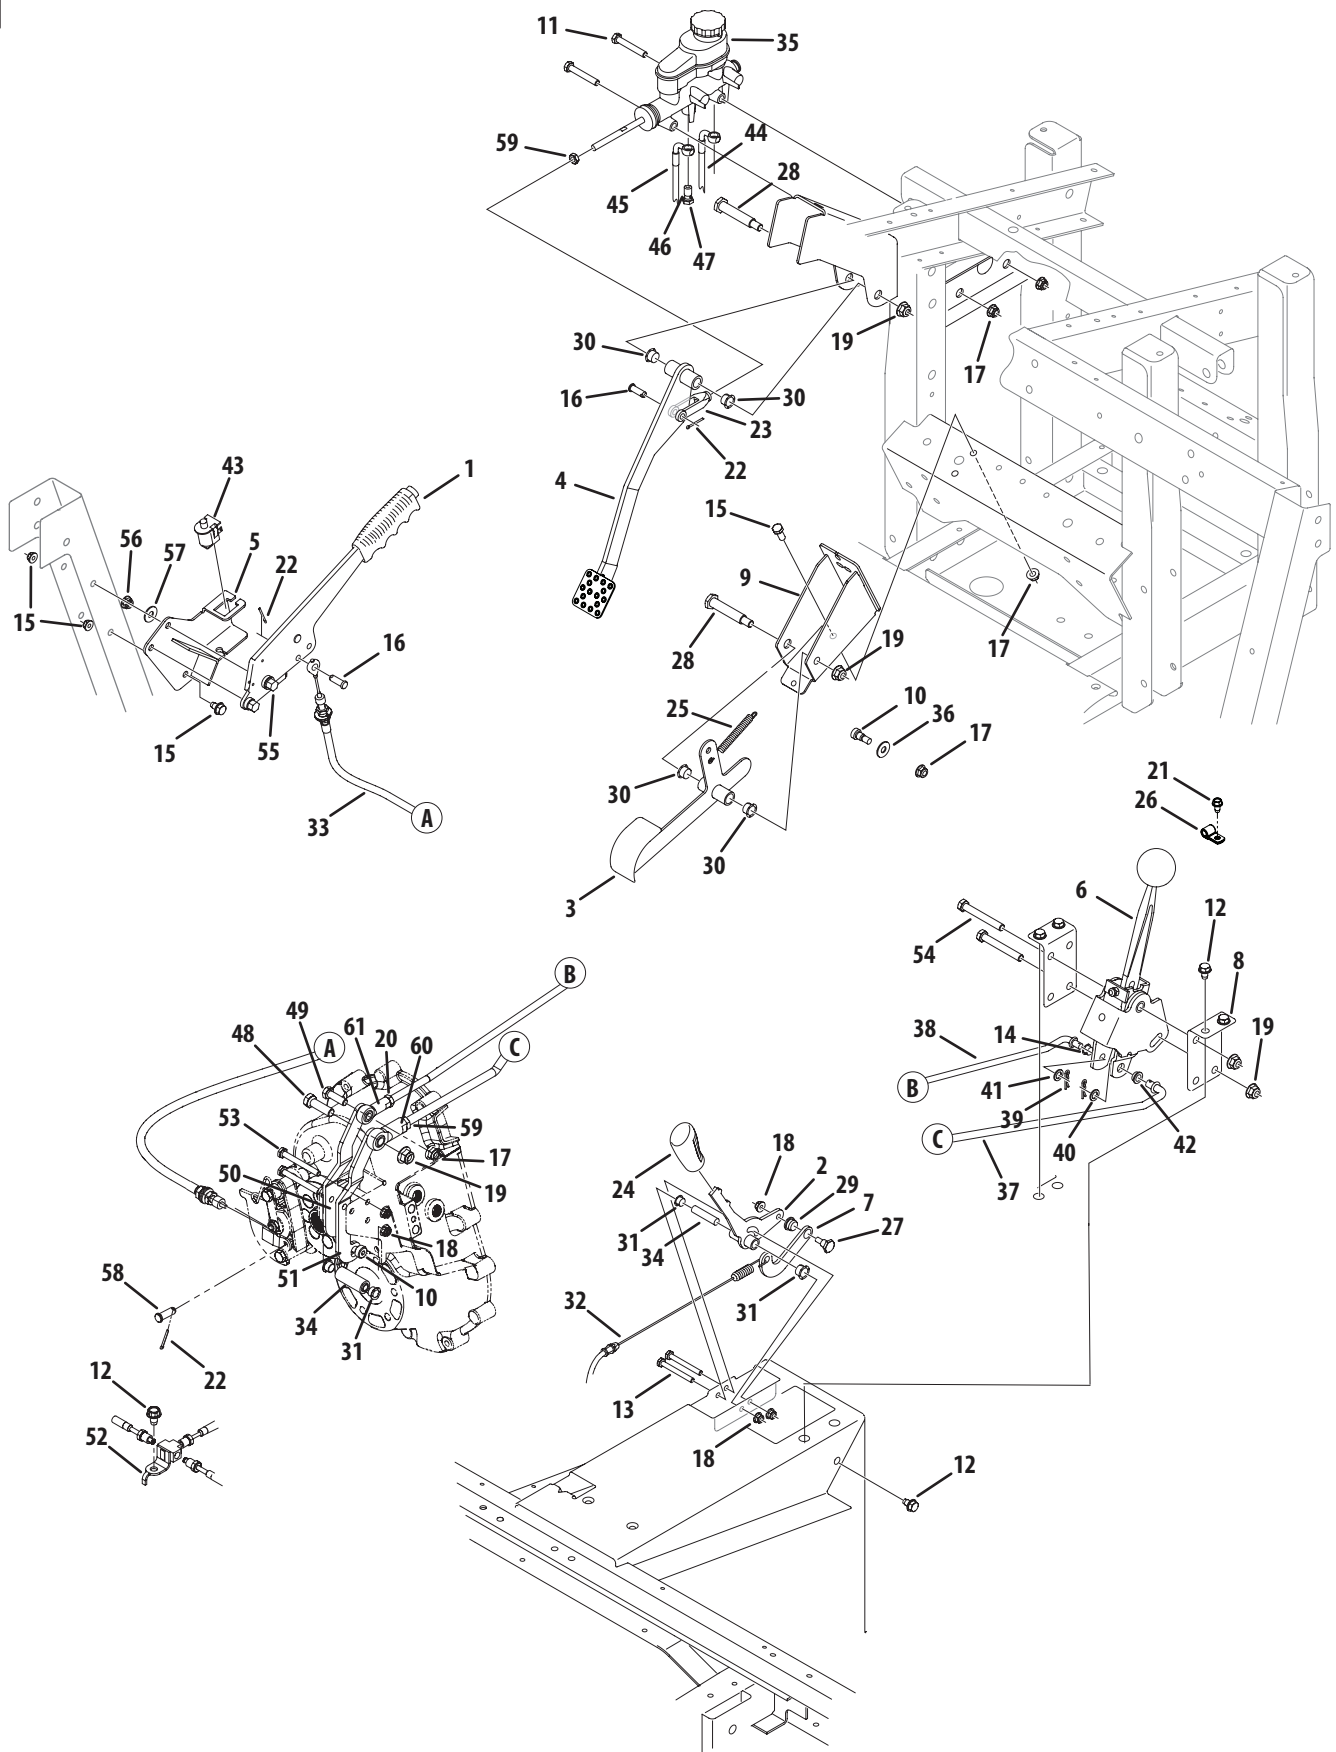

Ref No.	Part Number	Description
1	603-04089	Lvr Assembly, Brake
2	607-04181-0637A	Lvr Assembly, Diff Lock
	607-04287-0637‡	Lvr Ass'y, Diff Lock, Bench Seat
3	607-04188A-0637	Ped Assembly, Accel
4	607-04193B-0637	Ped Assembly, Brake
5	607-04208-0637	Brkt Assembly, Mt, Park Brake
6	907-04212†	Shft Assembly, Hurst, 4x4
	607-04246††	Shft Assembly, Hurst, 4x2
7	707-04642	Plt, Pawl, Over Center
8	707-04805-0637	Mt, Shft, Cnsol
9	707-04823A-0637	Brkt, Mt, Accel Pedal
10	710-04027	Scr, Shldr, .372 X .375, 5/16-18
11	710-04039	Screw, 5/16-18, 2.00, Gr5, Patch
12	710-0607	Scr, Tt, 5/16-18, 0.500
13	710-0641	Screw, 1/4-20, 2.25, Gr5, Std
14	741-04198	Brg., Flange, .315 ID
15	710-3008	Screw, 5/16-18, .75, Gr5, Std
16	711-0653	Pin, Clevis, 312 Od X 1.0"
17	712-04063	Nut, Flglk, 5/16-18
18	712-04064	Nut, Flglk, 1/4-20, Grf, Nylon
19	712-04065	Nut, Flglk, 3/8-16, Grf, Nylon
20	712-3025	Nut, Jam, 5/16-24, Gr5
21	710-0599	Screw, Tt, 1/4-20 x .500
22	914-0111	Pin, Cot, 3/32, 1.0
23	719-3018	Yoke, 5/16-24
24	731-04735	Hndl, Selct
25	932-0611	Spr, Extn, .38 Od X 3.6
26	726-04056	Clamp, Hose
27	938-0974	Scr, Shldr, .375x.380, 1/4-20
28	738-1011A	Scr, Shldr, .500 X 2.230, 3/8-16
29	941-0475	Plastic Bushing .380 Id
30	741-0491	Brg, Flg, Nyliner, .500idx.34lg


Ref No.	Part Number	Description
31	941-3073	Brg, Flg, .375 X .580 X .250
32	746-04248	Cbl, Cont, Diff, Lock
33	746-04254	Cbl, Cont, Park, Brake, 4x4
34	750-04500	Spcr, Pivot, Diff Lock
35	661-04042	Cyl, Master, Tandem
36	936-0159	Wash, Flat, .349 X .879 X .063
37	747-04528	Link, Shft, F N R
38	747-04529†	Link, Shft, Hi Lo, 4x4
39	714-0127†	Pin, Cotter, 1/16 x .75
	914-0104††	Pin, Cotter, .072 Dia. x 1.13 Lg.
40	936-0140	Wash, Flat, .385 X .62 X .063
41	936-0264	Wash, Flat, .330 X .630 X .0635
42	741-04199	Brg, Flg, .377 Id
43	925-3166	Switch
44	927-04233	Hose, Brake, Master Cyl, Front
45	927-04230	Hose, Brake, Master Cyl, Rear
46	737-04129	Ftg, Banjo Ftg Bolt, M10 x 1.00
47	737-04130	Ftg, Banjo Ftg Crush Wash
48	710-3005	Screw, 3/8-16 x 1.25
49	710-0528†	Screw, 5/16-18 x 1.25
50	607-04210†	Lvr., Assembly, Shift, Hi-Lo, 4x4
51	607-04211	Lvr., Assembly, Shift, F N R
52	737-04128	Ftg., Tee, -3, 45 Deg Flare
53	710-1122	Screw, 1/4-20 x 2.50
54	710-3022	Screw, 3/8-16 x 2.75
55	710-3103	Screw, 5/16-18 x 2.00
56	712-3007	Nut, Jam, 5/16-18
57	936-0275	Washer, Flat, .344 x .688 x .065
58	711-0684	Pin, Clevis
59	912-3001	Nut, Jam, 3/8-24
60	723-04038	Rod, End, 3/8 ID
61	723-04039†	Rod, End, 5/16 ID

† Equipped on 4x4 Units

†† Equipped on 4x2 Units

‡ If Equipped

Frame and Bumper

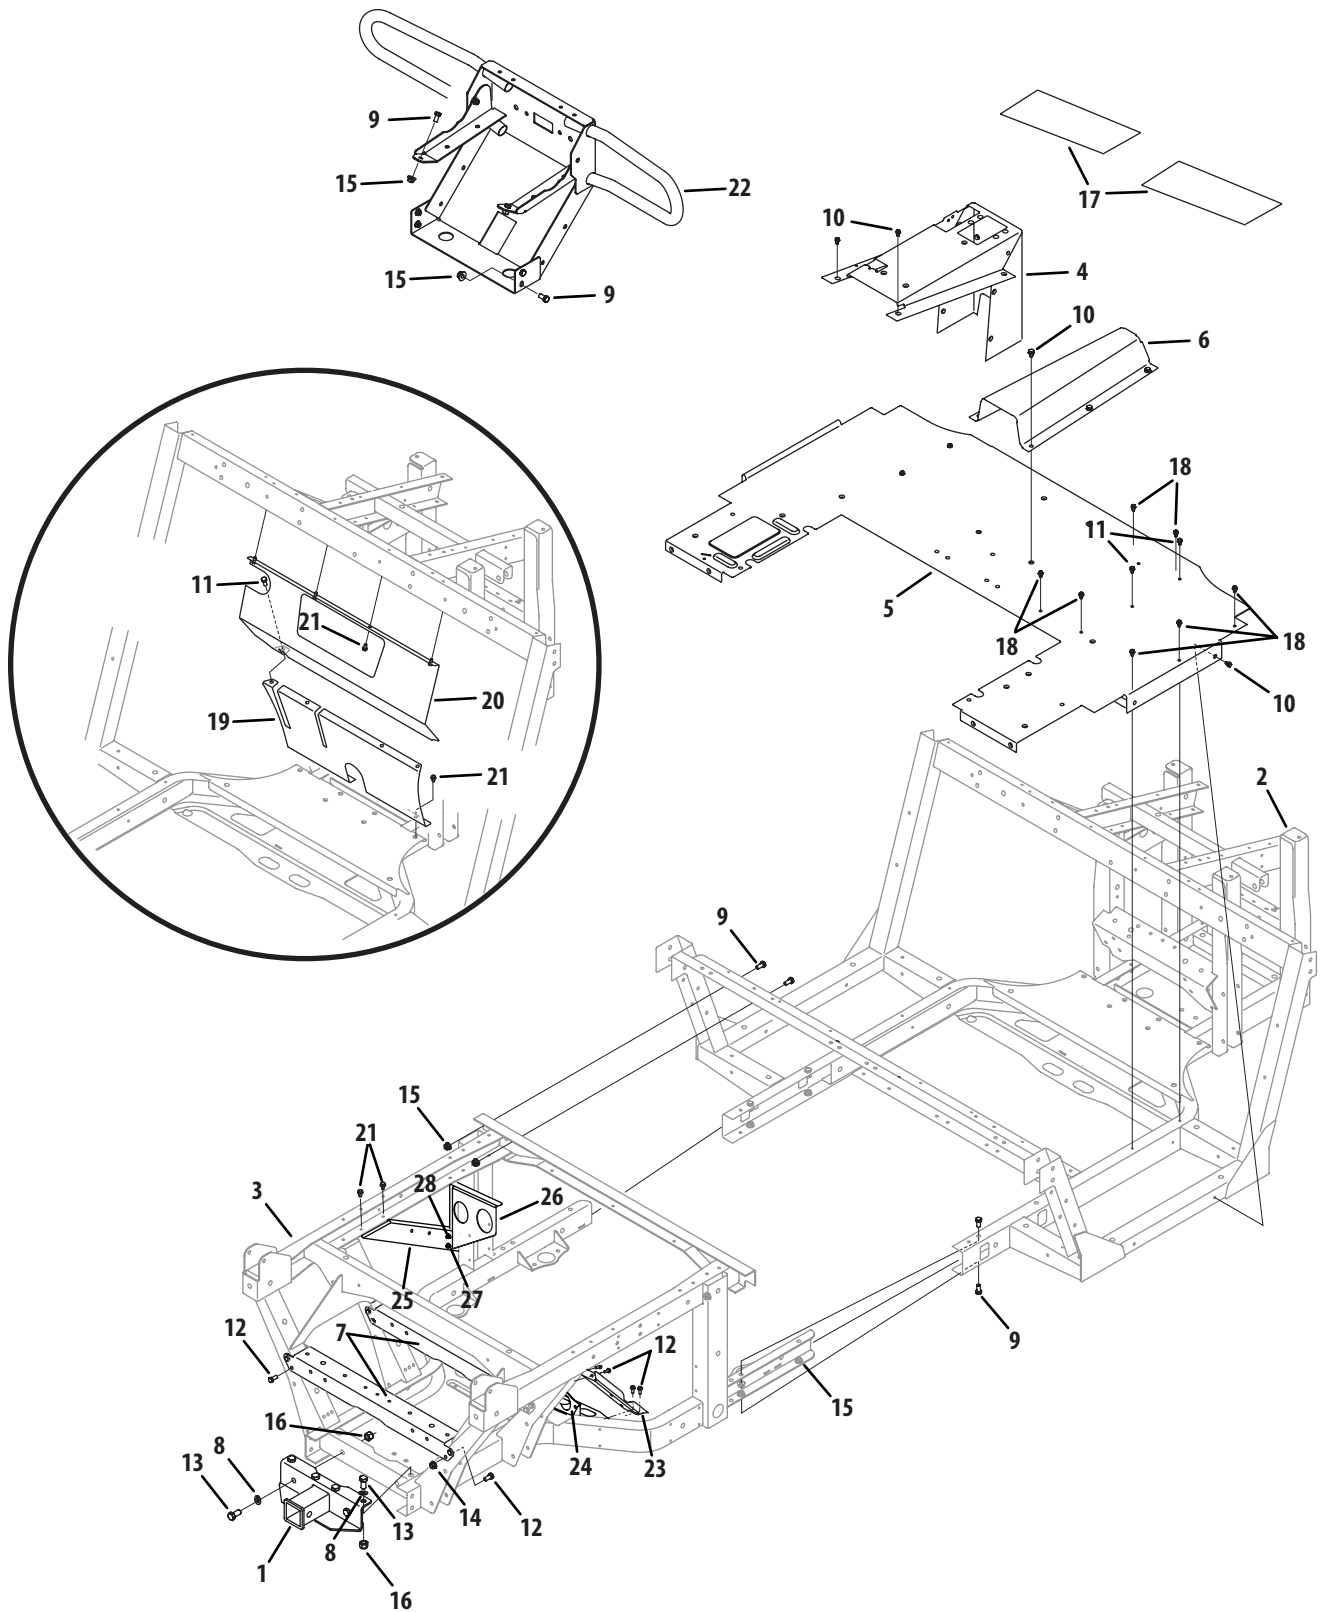


Ref No.	Part Number	Description
1	607-04142A-0637	Hitch Assembly, receiver Rr
2	607-04182D	Frm Assembly, front, uv
3	607-04184B-0637	Frm Assembly, rear, uv
4	707-04554A-0637	Plt, cnsol, 4x4
5	707-04563E	Plt, floor
6	707-04684A-0637	Cvr, shf, dr, front, 4x4
7	707-04770B-0637	Chan, support, rear
8	936-0272	Washer, Flat, .510 x 1.00 x .060
9	710-0216	Screw, 3/8-16, .75, gr5, std
10	710-0607	Scr, tt, 5/16-18, 0.500
11	710-1017	Scr, ab, 1/4-14, 0.625, trustxi
12	710-3008	Screw, hhcs, 5/16-18 (4x2)
	710-04043	Screw, Hxflg, 5/16-18 (4x4)
13	710-3131	Screw, 1/2-13, 1.00, gr5, std
14	712-04063	Nut, flglk, 5/16-18, grf, nylon
15	712-04065	Nut, flglk, 3/8-16, grf, nylon
16	712-3083	Nut, hexlk, 1/2-13, grb, nylon
17	723-04021†	Pad, abrasive, toe Plate
18	726-0465	Clip, pnl, ret,
19	707-04712B-0637	Pnl, Dash, Lower, 4x4
20	707-04711B-0637	Pnl, Dash, Upper
21	710-0599	Scr, tt, 1/4-20 x .500
22	607-04131C-0637	Bmpr Assembly, frt.
23	607-04329†	Mt Assm, Sway Bar, RH
	607-04328†*	Mt Assm, Sway Bar, LH
24	607-04330†	Mt Assm, ISO, Trans/ Eng
25	607-04331†	Brkt Assm, Air Filter Mnt
26	607-04333†	Brkt Assm, Supt, Hose
27	710-0751†	Hhcs, 1/4-20 x .620
28	712-04064†	Nut, Flglk, 1/4-20

† Equipped on 4x4 Units Only

* Not Shown

Front Fenders and Dash

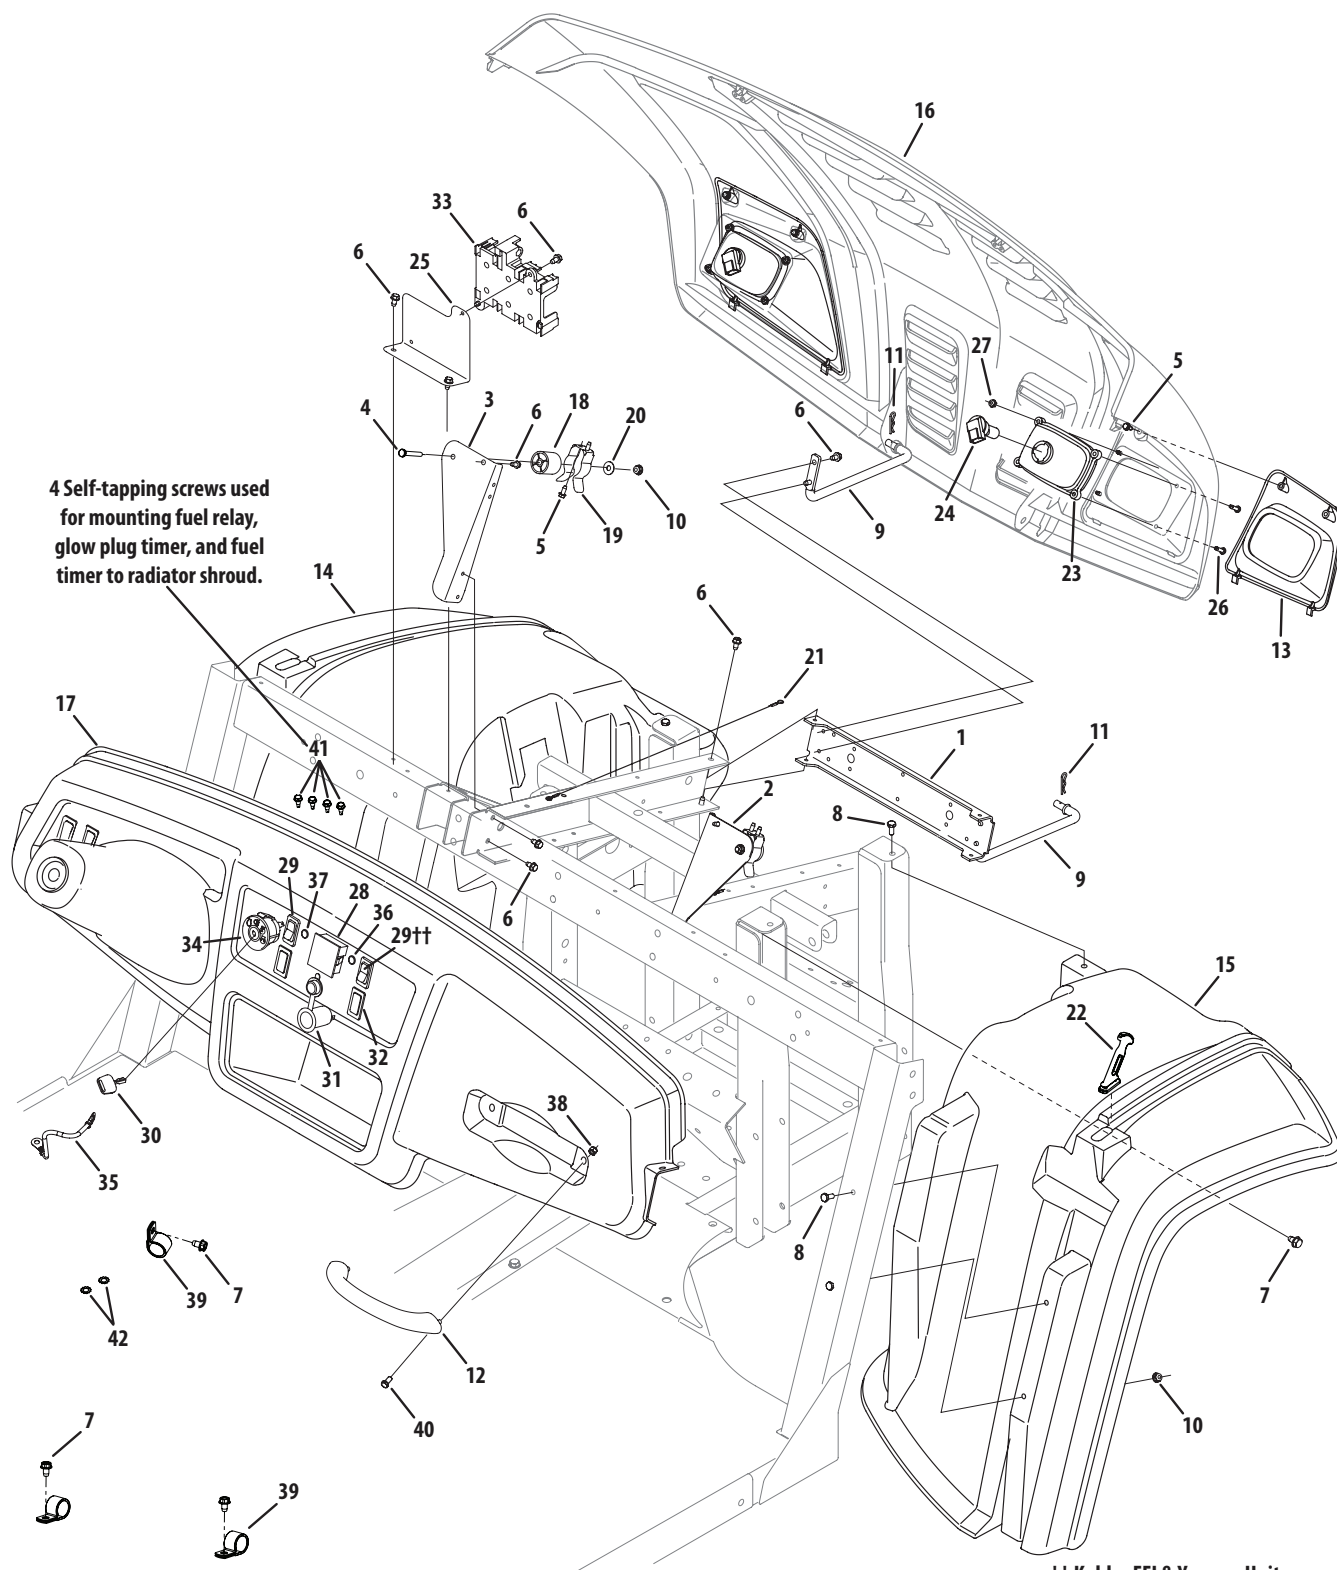

Front Fenders and Dash

Ref No.	Part Number	Description
1	707-04484-0637	Chan, Frm, Cross
2	707-04779-0637	Brkt, Hood/dash, Mount, Rh
3	707-04782-0637	Brkt, Hood/dash, Mount, Lh
4	710-0136	Screw, 1/4-20, 1.75, Gr5, Std
5	710-04261	Screw, #12-16 x .50
6	710-0599	Screw, TT, 1/4-20 x .500
7	710-0607	Screw, TT, 5/16-18 x .500
8	710-3015	Screw, 1/4-20, .75, Gr5, Std
9	607-04224-0637	Rod Ass'y, Mt, Hood
10	712-04064	Nut, Flange Lock, 1/4-20
11	914-0101	Pin, Cot, Int .08 X 1.42
12	731-06155	Hndl, Bag, W/scr 400/500 S
13	731-05285	Bzl, Hdl RH
	731-05284	Bzl, Hdl LH
14	731-06710	Fdr, Lh 4x4
	731-05454B	Fdr, Lh 4x4, Camo
15	731-06711	Fdr, Rh 4x4
	731-05455B	Fdr, Rh 4x4, Camo
16	731-06638	Hood, 4x4
	931-05456	Hood, 4x4, Camo
	731-06717	Hood, 4x4, Camo, Treestand
	731-06715	Hood, 4x4, Green
	731-07019	Hood, 4x4, Red
17	731-05322A	Dash, Uv 4x4
18	731-3232	Rlr, Latch, Hood
19	732-1178	Spr, Latch, Hood
20	736-0342	Wash, Fl, .283 X .75 X .030
21	746-04328	Cbl, Hood
22	735-04145	Strap, Hood
23	625-04036P	Headlight Assembly (Incl. # 24)
24	925-3161A	Headlamp Bulb

Ref No.	Part Number	Description
25	707-04811-0637	Brkt, Mt, Fuse
26	710-3009	Screw, TT, #10-24 x .750
27	712-0161	Nut, Hex Lock, #10-24
28	925-04022B	Meter, Ind., Hour Flat Face
29	725-04352‡	Switch, 4x4, Rocker
30	925-1745	Key, Delta, Plastic
31	725-2003	Recptl, Pwr, 12v
32	731-04010	Pnl, Plug, Switch
33	731-05490	Relay, Hldr, 3-Way
34	925-1741	Switch, Key, 4 Pos. Delta
35	725-3283‡	Engine Ground Wire
36	925-04285†	Lgt., Ind., Red, LED
	725-04660††	Lamp, Ind., Red, Incandescent
37	925-04288†	Lgt., Ind., Yellow, LED
	925-04530††	Lamp, Ind., Green, Incandescent
38	712-0324	Nut, Hexlk., 1/4-20
39	726-0475	Clamp
40	710-0166A	Scr., Mach., 1/4-20 x 1.00
41	710-0456†	Screw, #10-16 x .500
42	736-0607†	Wash., Lock, 5/16
—	725-04625*	Harness, Jumper, Neutral Switch (4x4)
	725-04678*	Harness, Jumper, Neutral Switch (4x2)
—	725-04840*	Harness, Wire, Kohler
—	925-04730A††*	Harness, Wire, Kohler, EFI
—	725-04759*	Harness, Wire, Yanmar
—	725-04758†*	Harness, Engine, Diesel, Yanmar
—	735-04069A*‡	Floor Mat, RH
—	735-04068A*‡	Floor Mat, LH


† Diesel Unit Only

†† Kohler EFI Unit Only

‡ If Equipped

* Not Shown

Seats/ Battery/ Fuel Tank

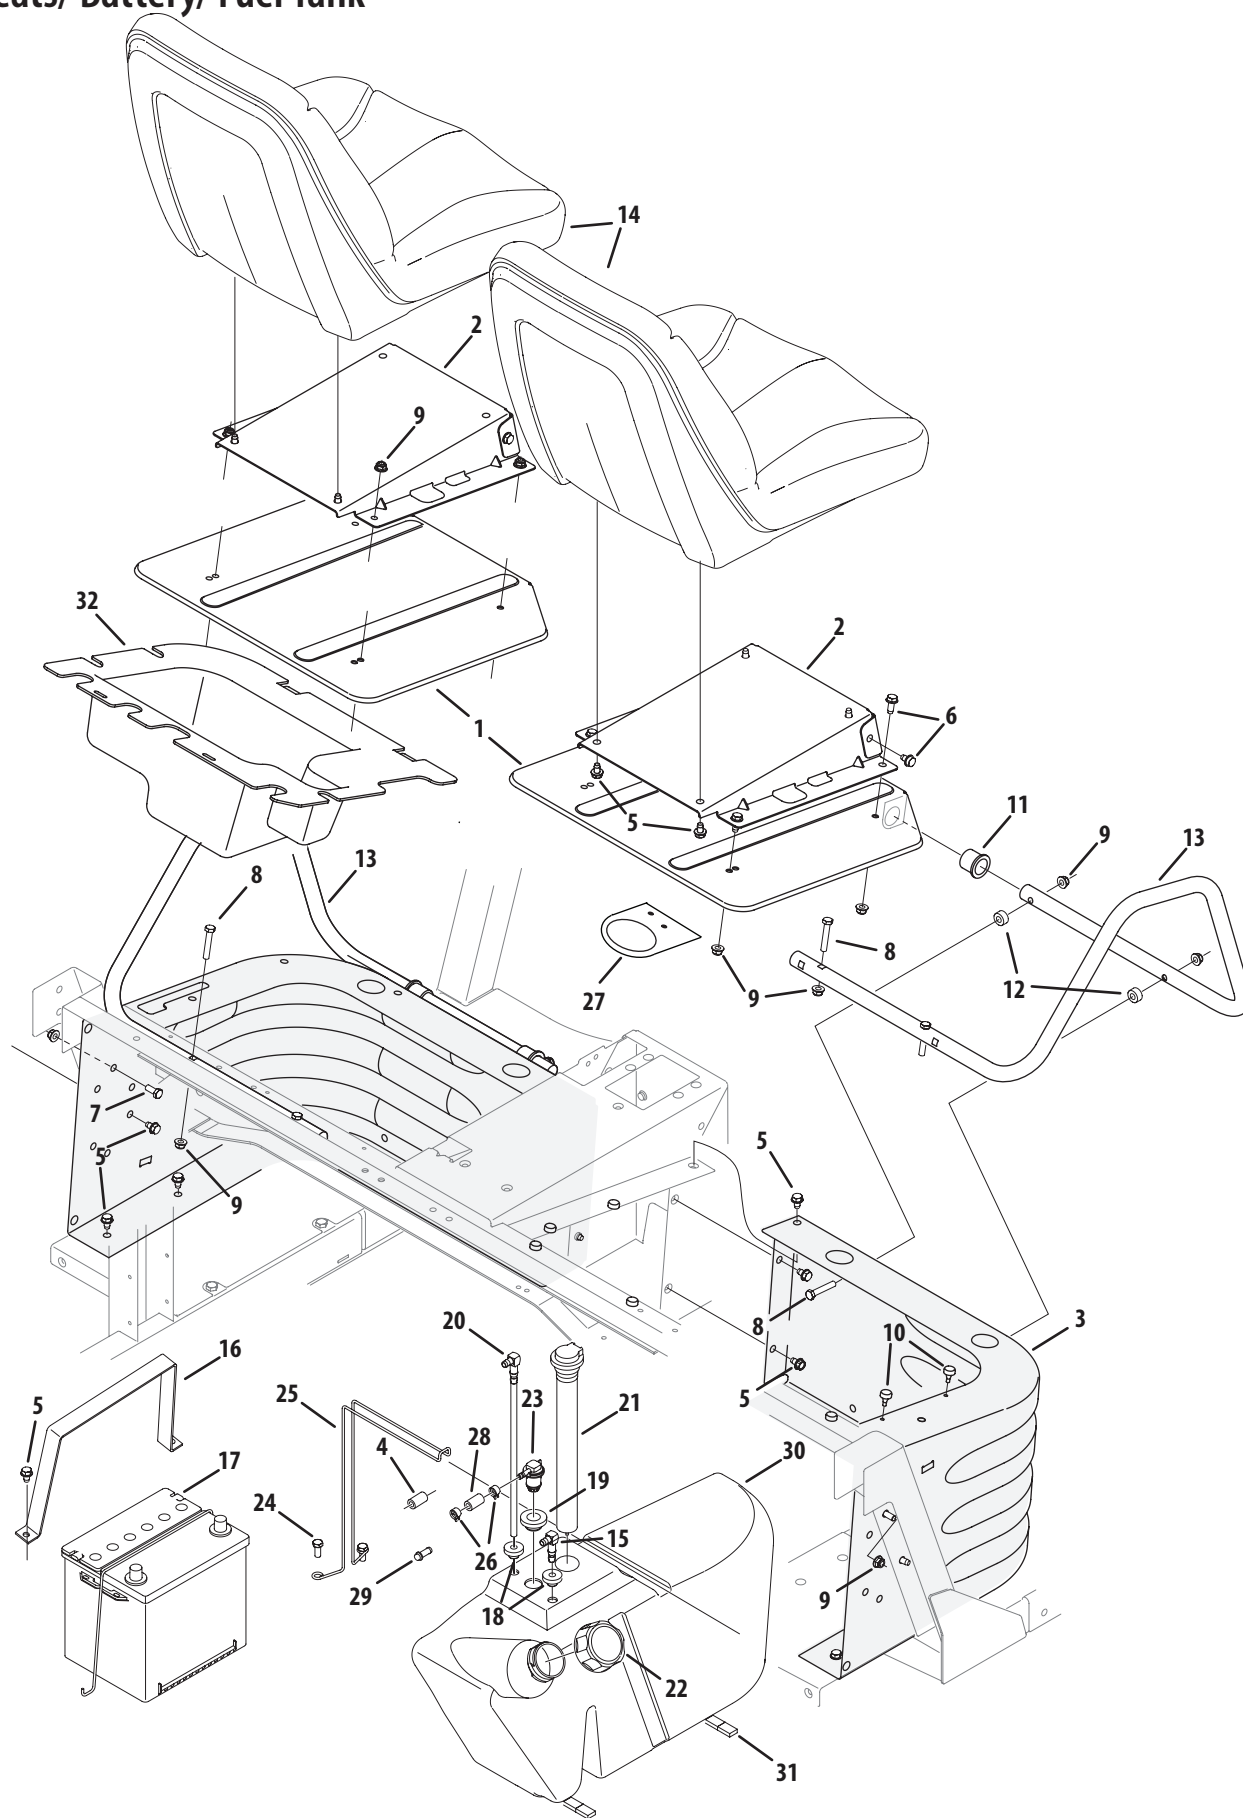

Seats/ Battery/ Fuel Tank

Ref No.	Part Number	Description
1	607-04228B-0637	Plt, Seat, Assm.
2	707-05261	Brkt., Mt., Seat
3	607-04223B-0637	Box, Seat
4	751-10681^	Line, Fuel, HP
5	710-0607	Scr., TT, 5/16-18 x .500
6	710-1260A	Screw, LD, 5/16-18 x .750
7	710-3008	Screw, 5/16-18 x .75
8	710-3180	Screw, 5/16-18 x 1.75
9	712-04063	Nut, Flglk, 5/16-18
10	735-0271A	Bmpr, .62 Dia. x .3
11	741-04215	Brg, Flg, .894 ID x 1.1315 OD
12	750-0258	Spcr, .315 x .750 x .375 Lg.
13	750-05186	Hndl, Grab
14	757-04008A	Seat, High Back
	757-04097^	Seat, Sport
15	751-3174^†	Ftg., Fuel, Pickup
16	707-04870A-0637	Brkt., Mt., Battery
17	925-04514	Battery, 450 CCA Wet
18	735-04065	Bush, Tank, Gas


Ref No.	Part Number	Description
19	735-04067	Bush, Tank, Vent
20	751-10288	Ftg, Fuel, Pickup
21	951-10361	Sensor, Fuel, Low
22	751-10374‡	Cap, Fuel
	751-10373†	Cap, Fuel
23	951-10375	Ftg, Fuel, Vent
24	710-0607‡	Screw, 5/16-18 x .500
	710-3008†	Screw, 5/16-18 x .75
25	732-04357	Wire, tank, fuel
26	726-0205†	Clamp, Hose, .490 Dia.
27	707-04991-0637	Brkt., Tube, CVT
28	751-10350‡†	Fuel Line, 5/16 Id
	751-10349^†	Hose, Fuel Line, Low Permeation
29	737-0296†	Vent, 3/8 Dia.
30	951-04208^	Tank assembly, Fuel
	951-04158†	Tank assembly, Fuel
	951-04159‡	Tank assembly, Fuel
31	722-3022-12	Tape, .625 Wide X.25 Thk Foam
32	731-05622	Tray, Seat box

‡ Kohler Engine

† Diesel Engine

^ Kohler EFI Engine

Kohler Engine/ Transmission Accessories

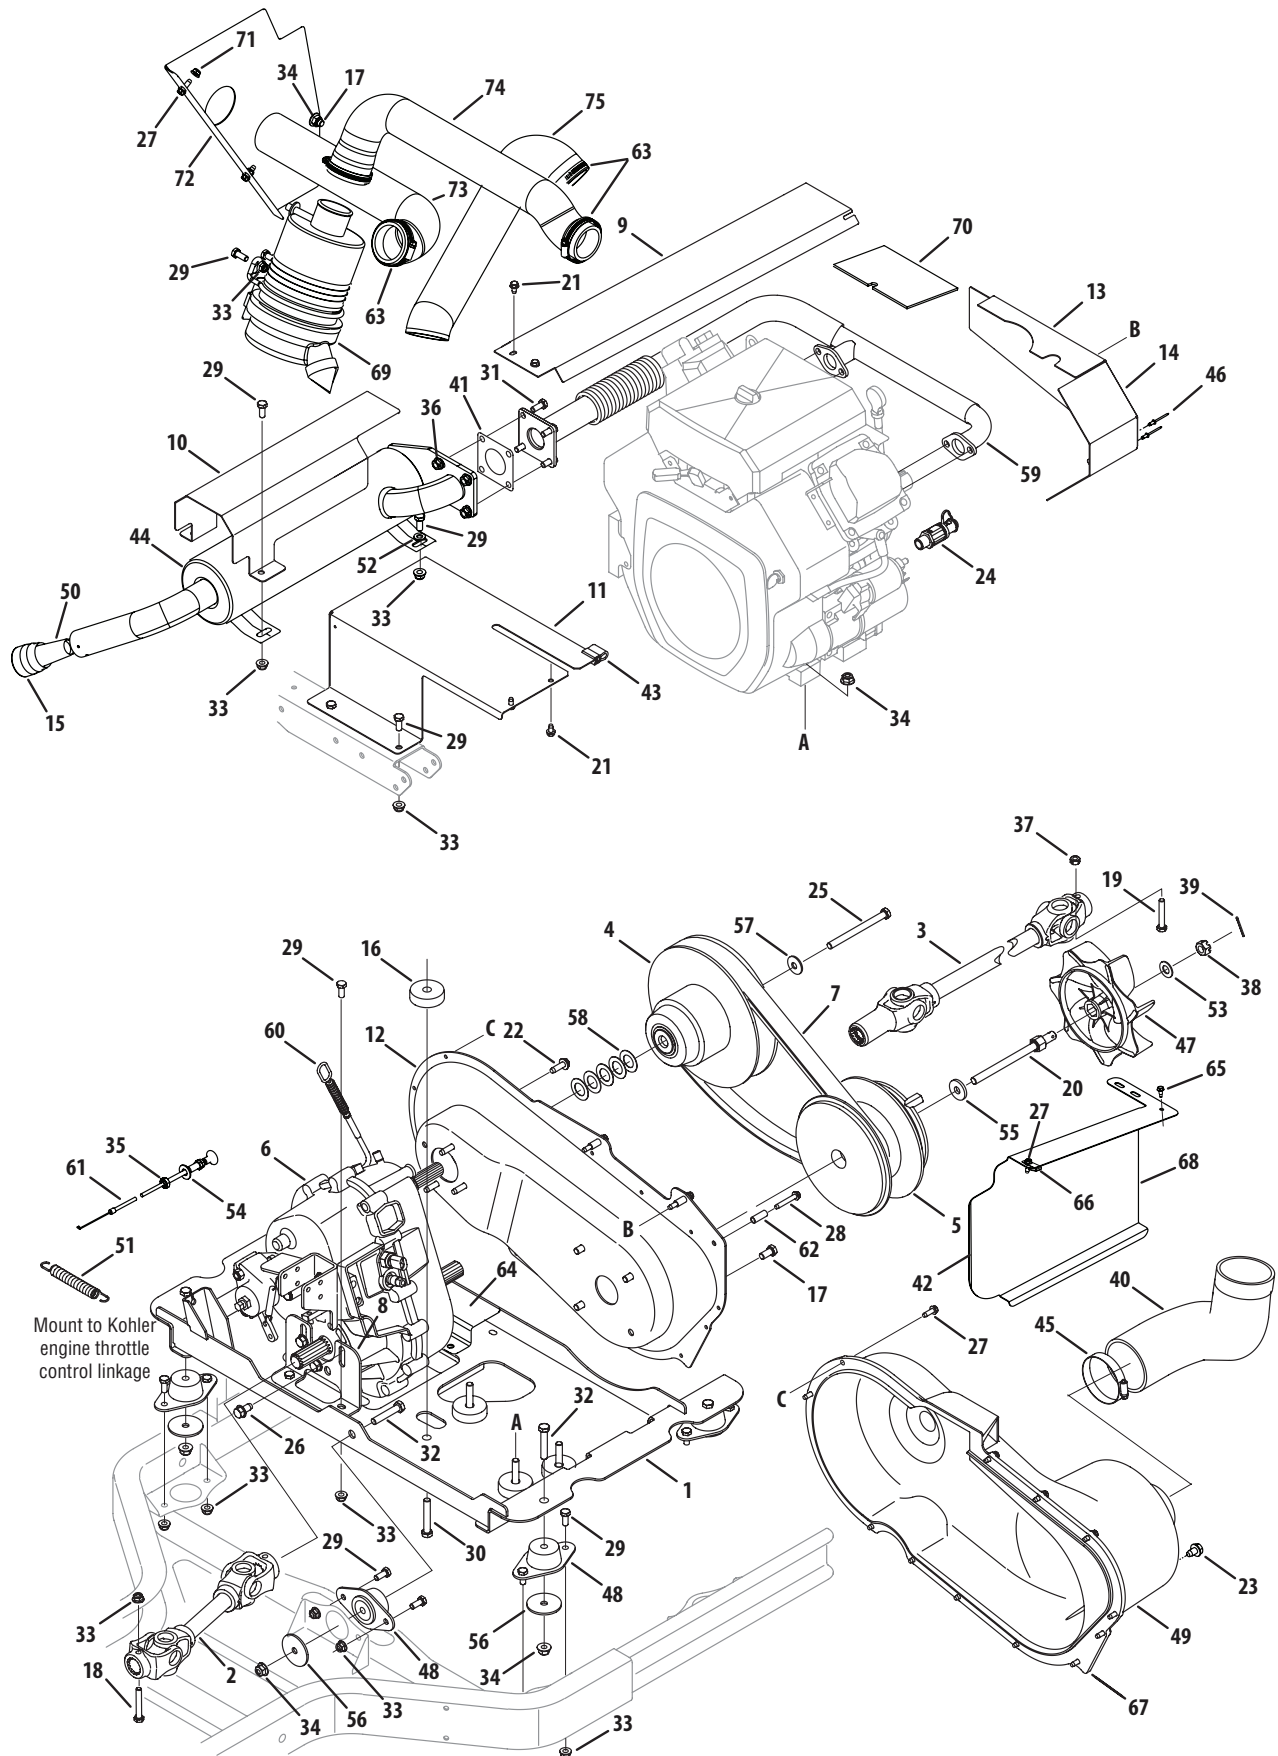

Kohler Engine/ Transmission Accessories

Ref No.	Part Number	Description
1	607-04177D-0637	Tray Asm, Eng, Kohler
2	918-04306	Shf Asm, Rr/prop
3	918-04314†	Shf Asm, Frt/prop, Hilliard
4	918-04586	Clu Asm, Cvt, Driven
5	918-04678	Clu Asm, Cvt, Driver, Cvr
	918-04585‡	Clu Asm, Cvt, Driver, Cvr
6	618-04726†	Case Asm, Transfer
	618-04754††	Case Asm, Transfer
7	754-04125	Belt, Cvt, 4x4
8	707-04724-0637	Brkt, Trans, Mount
9	707-04887A	Cvr, Heat, Sheild
10	707-04891	Exh, Shield, Heat
11	707-04902A-0637*	Shrd, Eng, Kohler
12	707-04943A	Cvr, Back, Kohler
13	707-04972A*	Cvr, Eng, Kohler
14	707-04979*	Cvr, Engine, Rr, Kohler
15	751-10690	Clamp
16	750-04619	Spcr, Engine, Kohl
17	710-0216	Hhcs, 3/8-16, .75, Gr5, Std
18	710-04039	Hhcs, 5/16-18, 2.00, Gr5
19	710-04653†	Hhcs, 5/16-18, 1.875, Gr5
20	710-04657	Hhcs, 7/16-20, 5.00, Gr5
21	710-0599	Scr, Tt, 1/4-20, 0.500
22	710-0650†	Scr, Tt, 5/16-18, .875
23	710-0603	Scr, B, 5/16-12, 0.500
24	951-10517	Drain, Oil
25	710-04764	Hhcs, 3/8-24, 3.50, Gr5, Std
26	710-0623	Scr, Tt, 3/8-16, 0.750
27	710-0642	Scr, Tt, 1/4-20, 0.750
28	710-1325*	Scr, Tt, 1/4-20, 1.625
29	710-3008	Hhcs, 5/16-18, .75, Gr5, Std
30	710-3011	Hhcs, 3/8-16, 2.25, Gr5, Std
31	710-3038	Hhcs, 5/16-18, .875, Gr5, Std
32	710-3144	Hhcs, 3/8-16, 2.00, Gr5, Std
33	712-04063	Nut, Flglk, 5/16-18, Grf, Nylon
34	712-04065	Nut, Flglk, 3/8-16, Grf, Nylon
35	712-0711*	Nut, Jam, 3/8-24, Gr5
36	712-3004A	Nut, Flglk, 5/16-18, Gr5, Sd Lk
37	912-3009†	Nut, Hexlk, 5/16-18, Grb, Ctrlk
38	912-3012	Nut, Hex, 1/2-20, Gr5, Slot




Ref No.	Part Number	Description
39	914-0111	Pin, Cot, 3/32, 1.0
40	751-10510	Tube, Cvt, Intake
41	721-04167	Gskt, Eng
42	751-10926‡	Insl, Cvr, Tank, Fuel
43	723-3061*	Heat Baffle Seal
44	751-10152B	Muffler
45	726-04080	Clamp, Hose, Adj.
	726-04068‡	Clamp, Hose, Adj.
46	728-0117	Riv, Pop, .125 Od, #42
47	731-04275	Impeller, Blo
48	731-04667	Mt, Comprs, Eng, Hd
49	731-06748	Cvr, Cvt
50	751-10689	Arstr, Scrn, Spark
51	932-3002*	Spring Latch
52	936-0264	Wash, Flat, .330 X .630 X .0635
53	936-0272	Wash, Flat, .510 X 1.00 X .060
54	936-0300*	Wash, Flat, .406 X .875 X .059
55	736-0322	Wash, Flat, .450x1.250x.164
56	736-04018	Wash, Flat, .38 X 2.00 X .12
57	936-0452	Wash, Bell, .396 X 1.140 X .095
58	736-0566	Wash, Fl, .793x1.368 X.025, Ht (Only 2 Washers on Koh. EFI)
59	751-10821	Pipe, Exh, Kohl
	751-10680‡	Pipe, Exh, Kohl, EFI
60	746-04253B	Cbl, Cont, Throt, Kohler
61	746-04292*	Cbl, Cont, Choke, Kohl
62	750-04184*	Spcr, .260 Id X .375od X 1.0l
63	726-0476†	Clamp, Hose
64	707-05217-0637*	Shld, Shft, Harness
65	710-0456‡	Scr, #10-16 x .500
66	712-04092‡	Nut, 1/4-20
67	721-04292	Seal, CVT, Cvr
68	707-05214-0637‡	Cvr, Tank, Fuel
69	951-04156†	Fltr Assm, Air Cln
70	751-10444*	Insl, Frame, UV
71	712-04064†	Nut, Flglk, 1/4-20
72	707-05257-0637†	Plt, Baffle
73	751-10995†	Hose, Air, Inlet
74	751-10996†	Hose, Air, Intake
75	751-10997	Hose, CVT, Exhaust

† Equipped on 4x4 Units ‡ Kohler EFI Engine

†† Equipped on 4x2 Units * If Equipped

‡ Additional Kohler EFI Parts Found on the Next Page

Additional Kohler EFI Engine/ Transmission Accessories

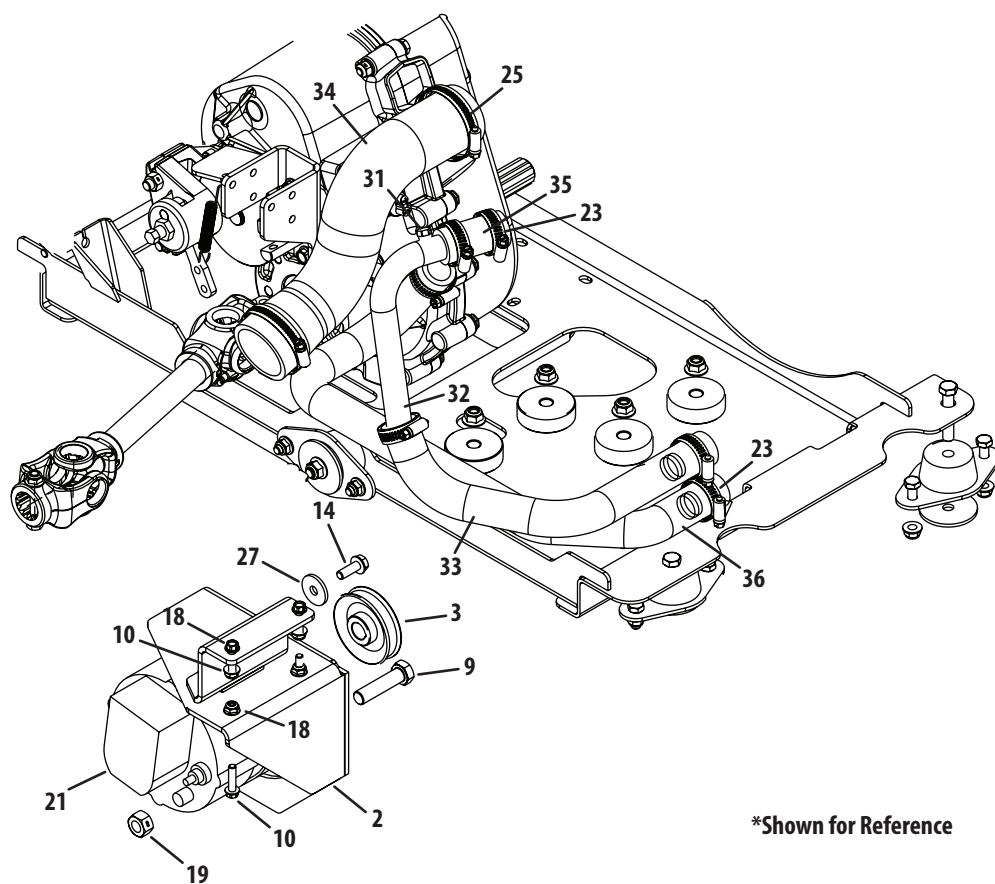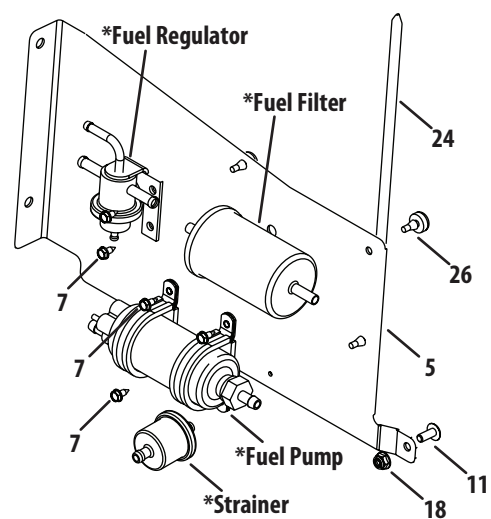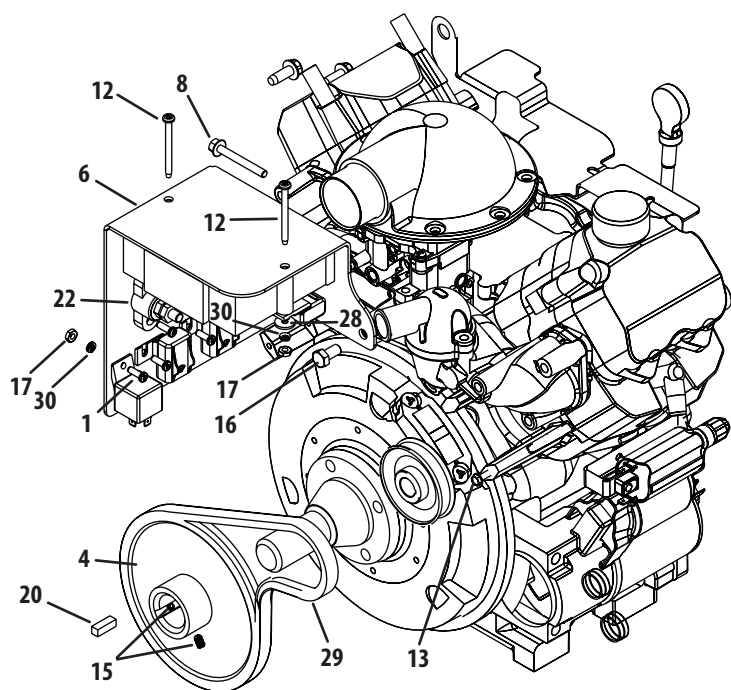


*Shown for Reference

Additional Kohler EFI Engine/ Transmission Accessories

Ref No.	Part Number	Description
1	1964	Screw
2	607-04227-0637	Supt, Asm, Altnr, UV, Kohler
3	756-04097	Pulley, 2.65 OD x 3L
4	756-04357	Pulley, 6.00 OD x 1.125
5	707-05161-0637	Brkt, Fuel System, Kohler EFI
6	707-05167-0637	Brkt, Electrical, Kohler EFI
7	910-0224	Screw, #10-16 x .500
8	710-04192	Screw, M6-1
9	710-0489	Hhcs, 1/2-13 x 2.00
10	710-0788	Scr, tt, 1/4-20 x 1.00
11	710-0946	Scr, Mach, 1/4-20 x .625
12	710-1184	Scr, Mach, #10-32 x 2.00
13	710-1237	Scr, #10-32 x .625
14	710-1238	Scr, 5/16-18 x .875
15	1903631	Scr, 1/4-20 x 3/8
16	710-3138	Hhcs, M8-1.25
17	712-0349	Nut, Hex, #10-32
18	712-04064	Nut, Flglk, 1/4-20
19	712-3022	Nut, Hexlk, 1/2-13
20	914-0119	Sq key, 1/4 x .75lg
21	725-04806	Altrnr, Aux, 65 Amp
22	725-04661	Elec, Power, Distribution Post
23	726-0174	Clamp, Hose, Adj
24	726-0230	Tie, Cable
25	726-0476	Clamp, Hose, Adj
26	735-0271A	Bumper
27	936-0231	Wash, Flat, .344 x 1.125 x .12
28	936-0400	Wash, Flat, .194 x .62 x .063
29	954-04014	Belt, V-Type
30	936-0722	Wash, Lock
31	737-04232	Ftg, Petcock
32	750-04989	Tube, Rdtr
33	751-10258A	Hose, Rdtr
34	751-10677	Hose, Air Inlet
35	751-10678	Hose, Rdtr, Top Rear
36	751-10679	Hose, Rdtr, Lower Rear

Yanmar Engine/ Transmission Accessories

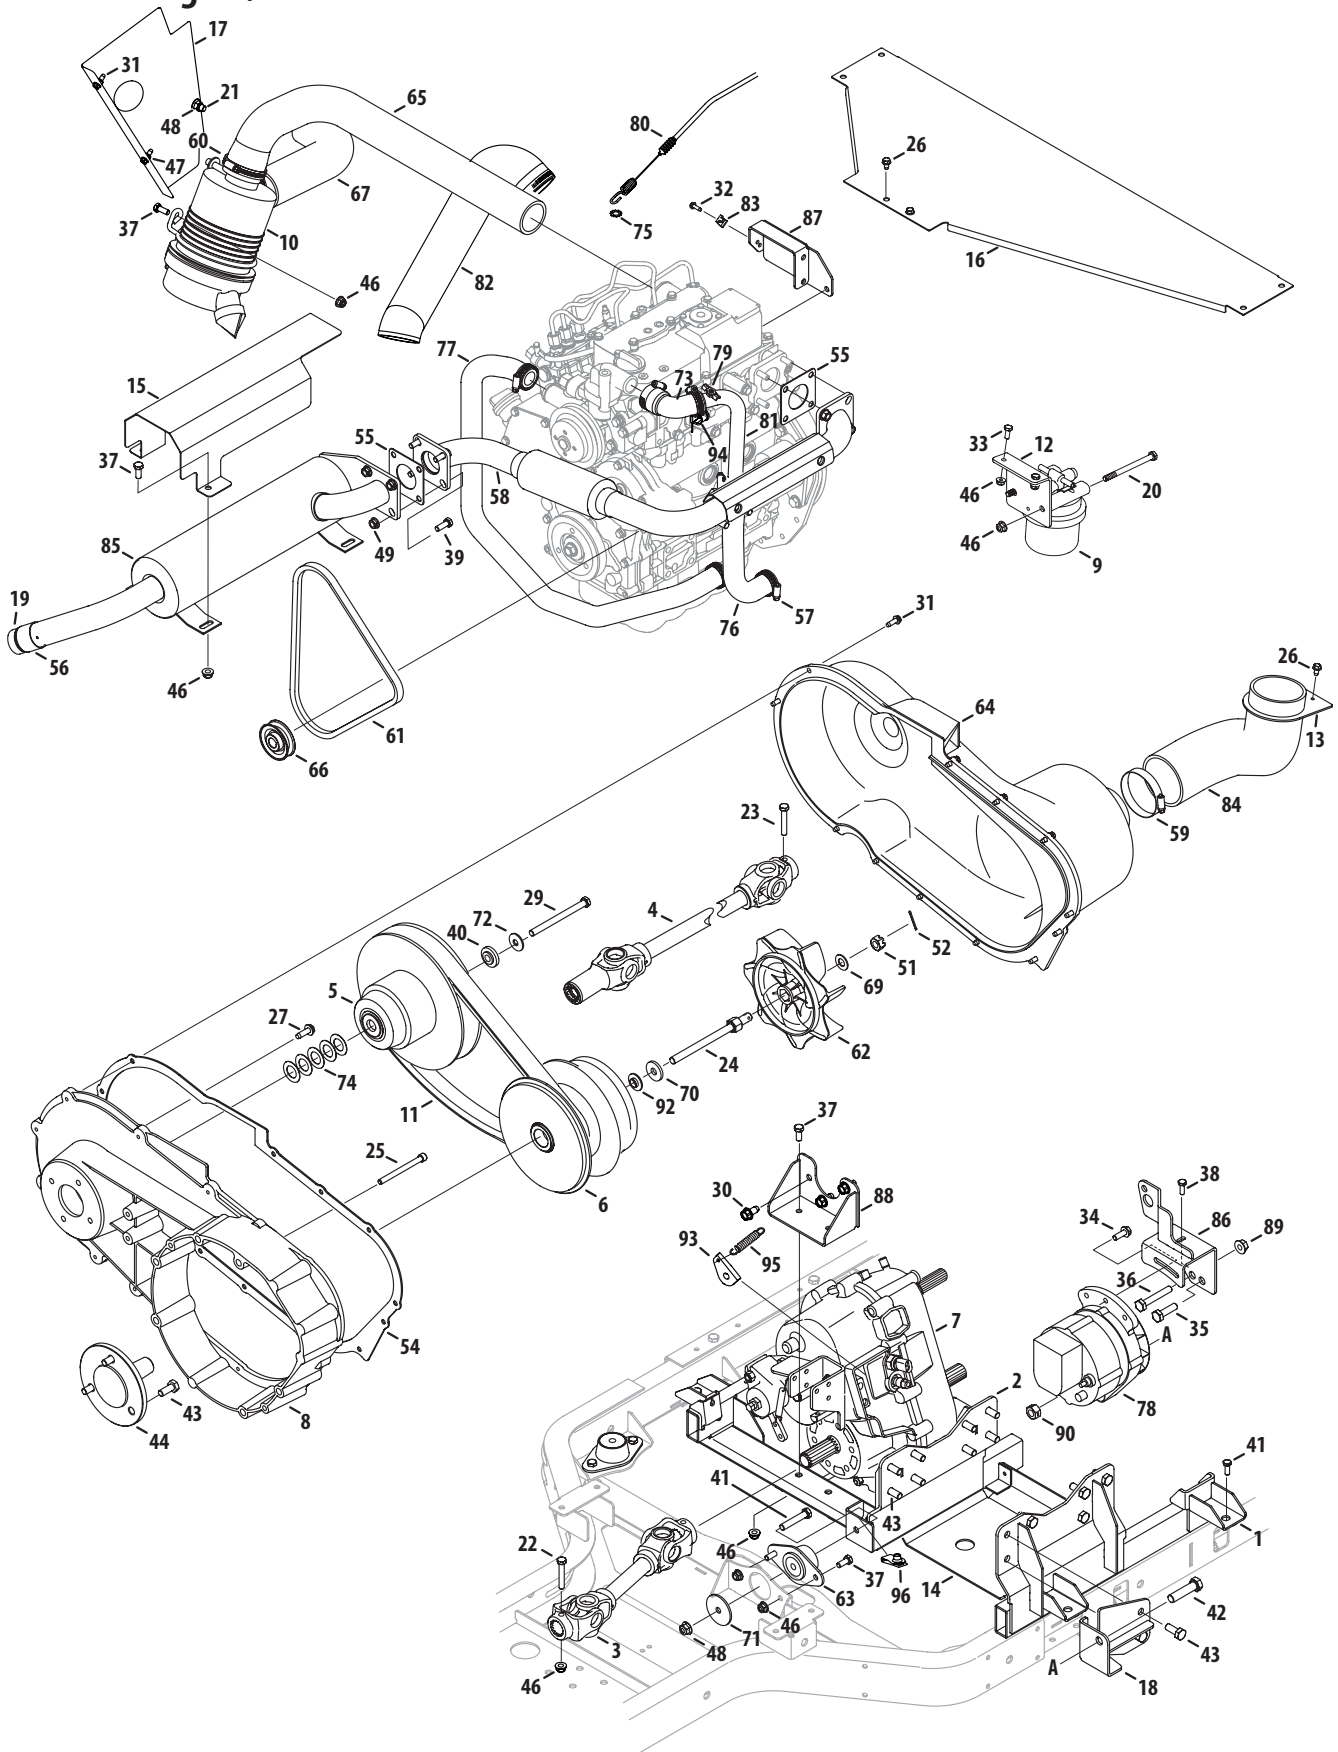

Yanmar Engine/ Transmission Accessories

Ref No.	Part Number	Description
1	607-04310	Tray Asm, Eng, Yanmar
2	607-04311	Tray Asm, Eng, Trans
3	918-04306	Shf Asm, Rr/prop
4	918-04314	Shf Asm, Frt/prop, Hilliard
5	918-04586	Clu Asm, Cvt, Driven
6	918-04680	Clu Asm, Driver, Yanmar
7	618-04726	Case Asm, Transfer
8	619-04207	Hsg Asm, Cvt, Yanmar; mach
9	951-04044	Fltr Asm, Diesel
10	951-04156	Fltr Asm, Aircl, Yanmar
11	754-04125	Belt, Cvt, 4x4
12	707-04714-0637	Brkt, Fltr, Fuel Yanmar
13	707-04991-0637	Brkt, Tube, CVT
14	707-05179	Shld, Oil, Eng
15	707-04891	Exh, Shield, Heat
16	707-04969	Plt, Heat, Shield, Yanmar
17	707-05257-0637	Plt, Baffle
18	607-04327	Brkt. Mt, Lwr, Alt
19	751-10690	Clamp
20	710-0190	Hhcs, 5/16-18, 4.00, Gr5, Std
21	710-0216	Hhcs, 3/8-16, .75, Gr5, Std
22	710-04039	Hhcs, 5/16-18, 2.00, Gr5, Patch
23	710-04653	Hhcs, 5/16-18, 1.875, Gr5, Patch
24	710-04657	Hhcs, 7/16-20, 5.00, Gr5, Special
25	710-04769	Scr, M10-1.50
26	710-0599	Scr, Tt, 1/4-20, 0.500, Hxindwsh
27	710-0602	Scr, Tt, 5/16-18, 1.000, Hxindwsh
28	710-0603	Scr, B, 5/16-12, 0.500, Hxindwsh
29	710-0620	Hhcs, 3/8-24, 4.50, Gr5, Std
30	710-0623	Scr, Tt, 3/8-16, 0.750, Hxindwsh
31	710-0642	Scr, Tt, 1/4-20, 0.750, Hxindwsh
32	710-1003	Scr, #10-16, 0.625, Hxindwsh
33	710-0726	Scr, Ab, 5/16-12, 0.750, Hxindwsh
34	710-1238	Hhcs, 5/16-18, .875, Gr5, Std
35	710-1313	Hhcs, M8-1.5, 35 mm, Gr8.8, Std
36	710-04025	Hhcs, M10-1.5
37	710-3008	Hhcs, 5/16-18, .75, Gr5, Std
38	710-3015	Hhcs, 1/4-20, .75, Gr5, Std
39	710-3038	Hhcs, 5/16-18, .875, Gr5, Std


Ref No.	Part Number	Description
40	738-04232	Spcr., Shldr.
41	710-3144	Hhcs, 3/8-16, 2.00, Gr5, Std
42	710-0489	Hhcs, 1/2-13, 2.00, Gr5, Std
43	710-3208	Hhcs, M10-1.5, 25mm, Gr5
44	911-04964	Shf, Output, Yanmar, Tapered
45	712-04193	Nut, U
46	712-04063	Nut, Flglk, 5/16-18, Grf, Nylon
47	712-04064	Nut, Flglk, 1/4-20, Grf, Nylon
48	712-04065	Nut, Flglk, 3/8-16, Grf, Nylon
49	712-3004A	Nut, Flglk, 5/16-18, Gr5, Sd Lk
50	912-3009	Nut, Hexlk, 5/16-18, Grb, Ctrlk
51	912-3012	Nut, Hex, 1/2-20, Gr5, Slot
52	914-0111	Pin, Cot, 3/32, 1.0
53	732-04248	Spring, Extension
54	721-04292	Gskt, CVT Cover
55	721-04167	Gskt, Eng
56	751-10689	Arstr, Scrn, Spark
57	726-0174	Clamp, Hose, Adj
58	751-10756	Pipe, Exh, Yanmar
59	726-04080	Clamp, Hose, Adj
60	726-0476	Clamp, Hose, Adj 2-3"
61	954-04225	Belt, V
62	731-04275	Impeller, Blo
63	731-04667	Mt, Compr, Eng, Hd
64	731-06748	Cvr, Cvt
65	751-10994	Hose, Air Inlet, Yanmar
66	756-04379	Pulley
67	751-10995	Hose, Air Inlet
68	936-0264	Wash, Flat, .330 X .630 X .0635
69	936-0272	Wash, Flat, .510 X 1.00 X .060
70	736-0322	Wash, Flat, .450x1.250x.164, Ht
71	736-04018	Wash, Flat, .38 X 2.00 X .12
72	936-0452	Wash, Bell, .396 X 1.140 X .095
73	751-10894	Tube, Upr, rr, Rdtr, Yanmar
74	736-0566	Wash, Fl, .793x1.368 X.025, Ht
75	736-0607	Wash, Lock, 5/16 Ext Tooth
76	751-10893	Tube, lwr, rdtr
77	751-10779	Hose, Rdtr, Rr, Yanmar
78	725-04806	Altnr, Aux, 65 Amp

Continued on next page

Yanmar Engine/ Transmission Accessories

Ref No.	Part Number	Description
79	737-04232	Ftg, Petcock, 1/8"
80	946-04540	Cbl, Cont, Throt, Yanmar
81	750-04989	Tube, Rdtr
82	751-10997	Hose, CVT, Exhaust
83	751B221535	Clamp, Casing
84	751-10510	Tube, Cvt, Intake
85	751-10152B	Muffler
86	607-04312	Mt Assem, Alt, Yanmar
87	607-04325	Brkt, Mt, Throttle
88	607-04326	Brkt, Mt, Trans, rr
89	712-04052	Nut, Hex, Flg, Lk
90	712-3022	Nut, HxIk, 1/2-13
91	712-3086	Nut, Flg, M8-1.25
92	738-04231	Spcr., Shldr.
93	707-05272	Brkt., throt., spr., return
94	726-0272	Clamp

Kohler Gas Alternator (If Equipped with Euro Cab)

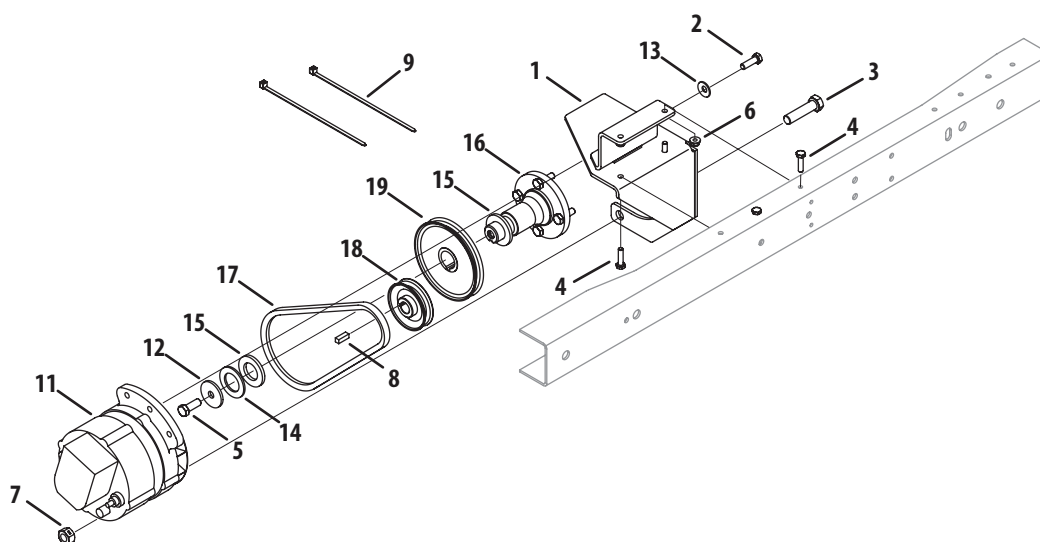


Ref No.	Part Number	Description
1.	607-04227	Supt., Assy., Altnr., UV, Koh
2.	710-0376	Hhcs, 5/16-18 x 1.00
3.	710-0489	Hhcs, 1/2-13 x 2.00
4.	710-0597	Hhcs, 1/4-20 x 1.00
5.	710-3118	Hhcs, 3/8-16 x 1.00
6.	712-04064	Nut, Flglk., 1/4-20
7.	712-3022	Nut, Hexlk., 1/2-13
8.	714-0119	Sq., Key, 1/4 x .75
9.	725-0157	Tie, Cable
10.	725-04349†	Harn., Acsry., UV, Kohler

Ref No.	Part Number	Description
11.	725-04806	Altnr., Aux., 65 Amp
12.	736-0227	Wash., Flat, .390 x 1.5 x .134
13.	736-0242	Wash., Bell, .340 x .872 x .060
14.	736-0250	Wash., Flat, 1.00 x 1.75 x .107
15.	736-0274	Wash., Flat, 1.01 x 1.75 x .172
16.	751K2414453	Shft., Kohl., Front, Drive
17.	754-0457	Belt, 3/8 x 24.68
18.	756-04342	Pulley, 2.37 OD, 3L
19.	756-04197	Pulley, 4.5 OD, 1" Bore

† Not Shown

Transmission

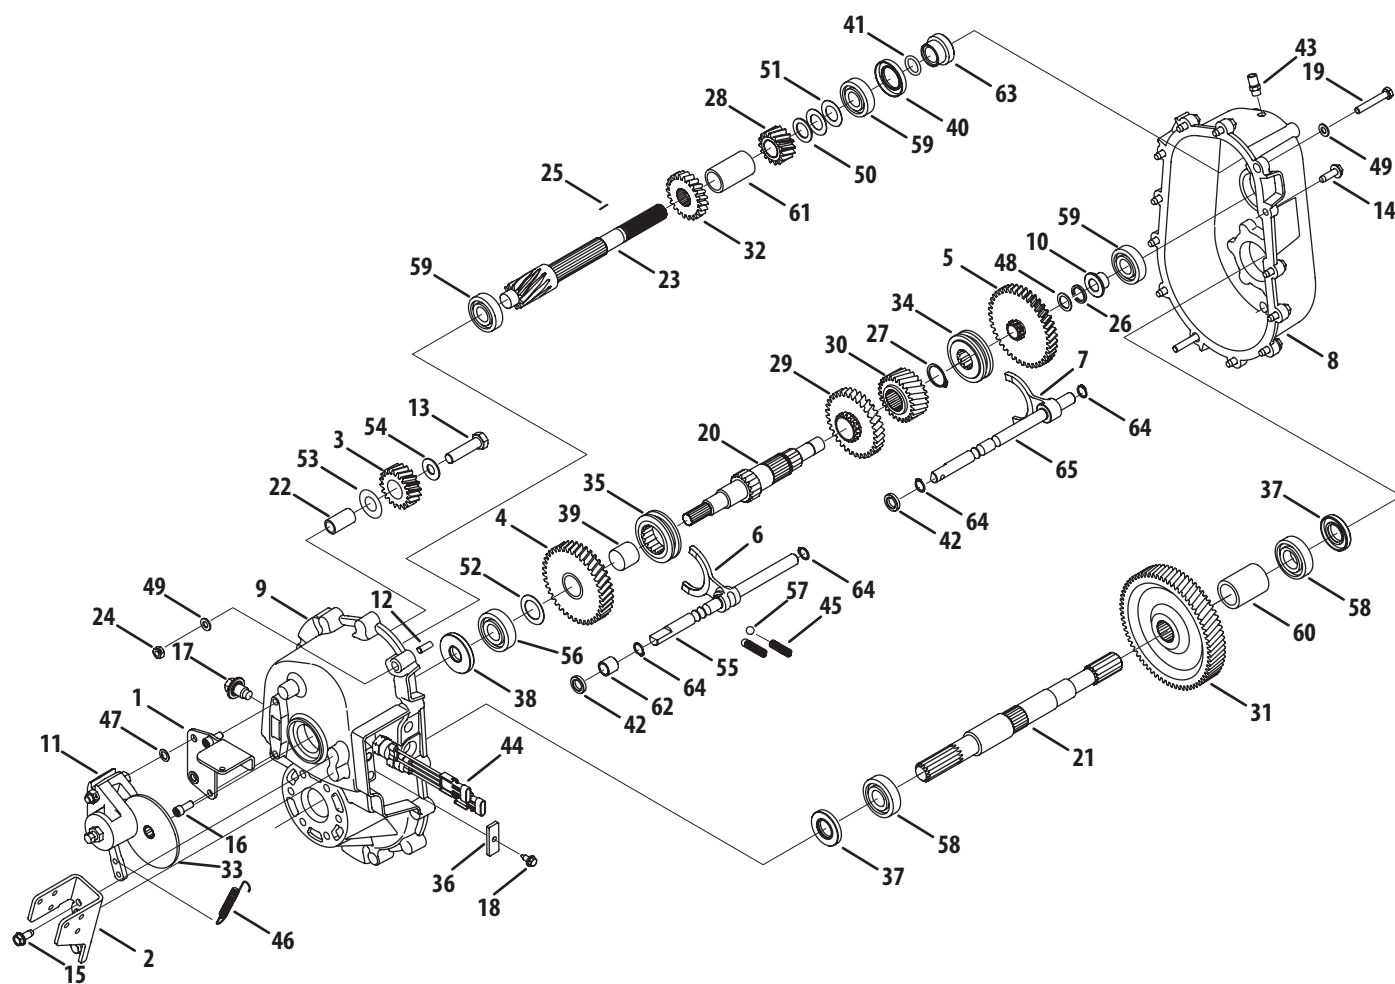

Ref No.	Part Number	Description
1	607-04321	Brkt Asm, Brk, Mnt, Painted
2	607-04322	Brkt Asm, Shift, Trans, Painted
3	911-04072	Gear Asm, Rev Idler
4	717-04237	Gear, Rev, 39T
5	617-04035†	Gear Asm, Low Speed
6	718-04176	Yoke, Actr, Uv
7	718-04079B†	Yoke Actr, Lo
8	719-04454	Hsg, Lh, Uv
9	719-04332A	Hsg, Rh, Uv
10	750-04681†	Spcr, Flg, .630 x .787 x .662
11	661-04019	Brake Asm, Transfer Case
12	915-3045	Dowel, Bush, .400 x .484 x .750
13	710-04644	Hhcs, 1/2-13, 2.00, Gr5, Lock
14	710-0602	Scr, Tt, 5/16-18, 1.000, Hxindwsh
15	710-1260A	Scr, Tt, 5/16-18, 0.750, Hxindwsh
16	710-1314A	Scr, Soc Hd, 5/16-18, .750
17	710-1633	Scr, Plug, M14x1.5 X .827
18	710-1652	Scr, Tt, 1/4-20x.625, Hxindwsh
19	710-3103	Hhcs, 5/16-18, 2.00, Gr5, Std
20	911-04445A†	Shf, Mid, Transfer Case
	911-04664‡	Shf, Mid, Transfer Case
21	911-04446	Shf, Output, Transfer Case
22	911-04447	Shf, Rev Idler
23	911-04934	Shf, Input, Transfer Case
24	912-0158	Nut, Hexlk, 5/16-18, Gra, Ctrlk
25	915-0138†	Pin, Roll, 1/8 Od, .63
26	916-0131†	Ext Snap Ring .625 Dia Shaft
27	716-04059	Ring, Ret, 1.125 Dia Shaft
28	717-04573†	Gear, Low Pinion, 15t
29	917-04236	Gear, High, 33t
30	917-04332	Gear, Final Pinion, 22t
31	917-04333	Gear, Final, 73t
32	917-04369	Gear, Pnion, High, 22t
33	717-1177A	Disc, Brk, Uv
34	718-04163†	Colr, Lo


Ref No.	Part Number	Description
35	718-04226A	Colr, Hi-rev, 4x4
36	718-04240	Plt, Detent Spring
37	721-04146	Seal, Oil, 25x46x7
38	721-04161	Seal, Oil, 20x52x7
39	741-3118	Brg, Slv, 25mm x 28mm x 25mm
40	721-04187	Seal, Oil, 30 X 47 X 7
41	721-04188	O-rg, .734 Id X .139
42	721-0496	Seal, Oil, .563 X .875 X .188
43	723-3021	Creeper Drive Housing Breather
44	725-04626	Sw, Saf, Neut (4x4 Only - Qty. (2). 4x2 Only - Qty. (1); Other replaced with Qty. (1) 737-04215*- Ftg, Plug)
45	732-0424	Spr, 3/8 Od X 1 1/4 Lg
46	732-04248	Spr, Extn, .38 Od X 3.9 Lg
47	936-0117	Wash, Flat, .385 X .620 X .033
48	936-0256†	Wash, Flat, .635x.930x.033, Ht
49	936-0264	Wash, Flat, .330 X .630 X .0635
50	936-0287	Wash, Flat, .793 X 1.24 X .06, Ht
51	736-0563	Wash, Flat, .793x1.368x.010, Ht
52	736-0615	Wash, Flat, 1.007x1.542x.03, Ht
53	736-3047	Wash, Thrust, .757 X 1.38 X .062
54	736-3084	Wash, Flat, .51 X 1.12 X .06, Ht
55	711-05081	Shf, Actr, Fwd, Rev
56	941-04044	Brg, Ball, .79 Id X 2.05 Od X .6
57	741-04209	Ball, Detent, .375
58	941-3037	Brg, Ball, 25x52x15, 6205, Open
59	941-3057	Brg, Ball, 20x47x14, 6204, Open
60	750-04496	Spcr, Output Shaft
61	750-05142†	Spcr, Mid Shaft
	750-04774‡	Spcr, .930 x 1.125 x 3.019
62	750-04705A	Spcr, .566 X .725 X .650
63	750-04778A	Spcr, Input, Uv, Transfer Case
64	716-04135	Ring, Ret
65	711-05082	Shf, Actr, Lo
—	921-04019‡*	Plug, Oil

† Equipped on 4x4 Only

‡ Equipped on 4x2 Only

* Not Shown

Axles and Steering

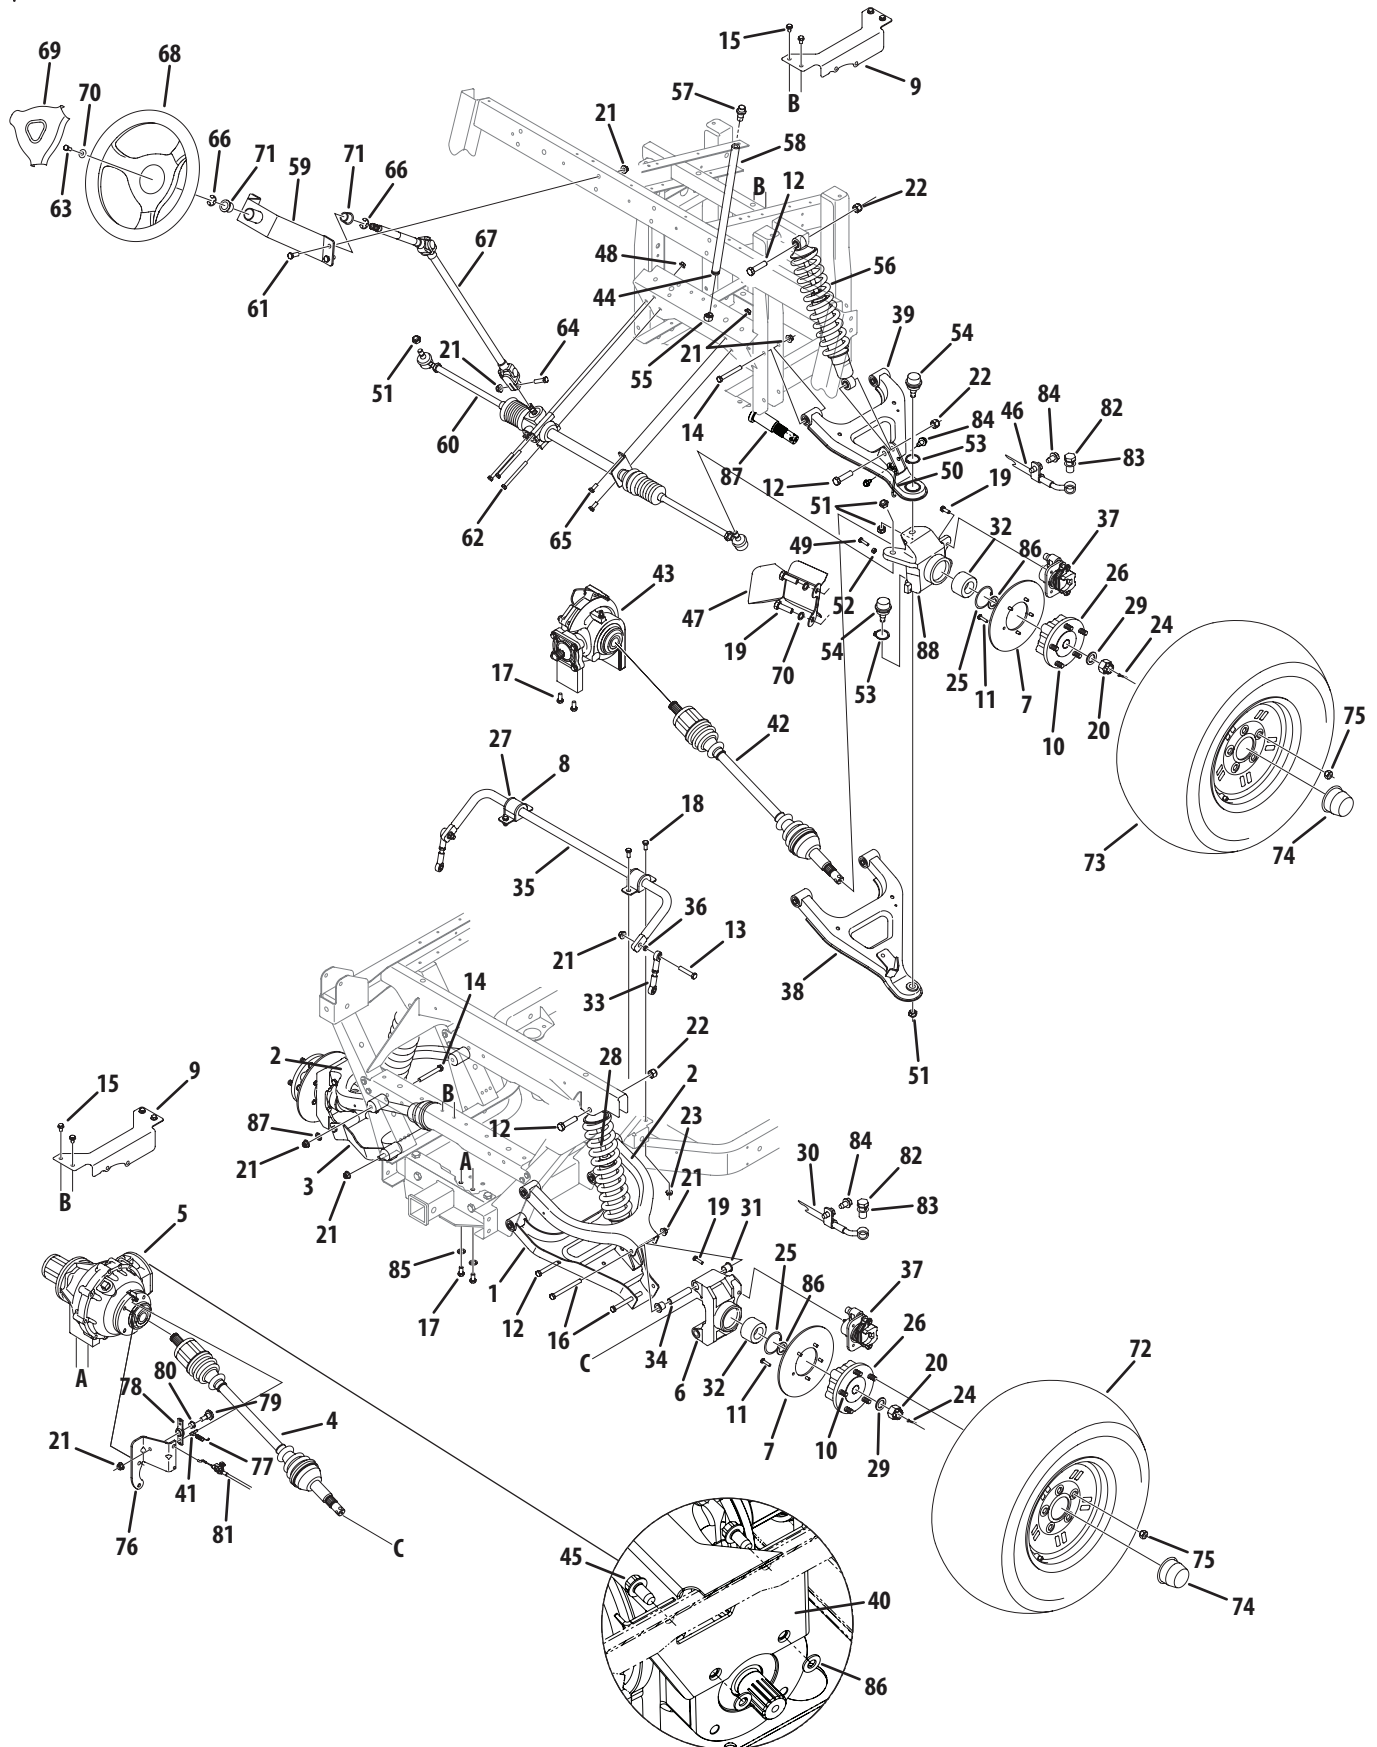

Axles and Steering

Ref No.	Part Number	Description
1	607-04163A	Cont Assembly, lwr, r/rr
2	607-04162A	Cont Assembly, rr Upr
3	607-04169A	Cont Assembly, lwr, l/rr
4	611-04063A	Axle Assembly, cv Joint
	759-04173†	Hog Ring
	731-05082†	DOJ Boot Kit (Includes clamp)
	731-05083†	Rzeppa Boot Kit (Incl. clamp)
5	918-04236	Diff Assembly, Uv, complete
6	619-04188	Hsg, rr, mach
7	707-04436A	Disc, brake, 8.00x.188
8	707-04655-0637*	Mt, sway Bar
9	707-04603A-0637	Mt, rear/diff, 4x4
	707-04604A-0637*	Mt, front/diff, 4x4
10	710-0852	Stud, rib Neck, 7/16-14 X 1.6
11	710-0433	Screw, 1/4-20, .625, gr5, lock
12	710-0489	Screw, 1/2-13, 2.00, gr5, std
13	710-04640*	Screw, 3/8-18, 1.75, gr5
14	710-0521	Screw, 3/8-16, 3.00, gr8, std
15	710-0607*	Scr, tt, 5/16-18, 0.500
16	710-04637	Screw, 3/8-16, 4.00, gr5
17	710-0216*	Screw, 3/8-16, .75, gr5, std
18	710-0157*	Screw, 5/16-24, .75, gr5, std
19	710-04639	Screw, m8-1.25, 25.00
20	712-04109	Nut, slotted, 22x1.5
21	712-04065	Nut, flglk, 3/8-16, grf, nylon
22	712-3083	Nut, hexlk, 1/2-13, grb, nylon
23	712-04063	Nut, flglk, 5/16-18, grf, nylon
24	714-0162	Pin, cot, 5/32, 1.25
25	716-04055	Ring, ret, dho-60
26	918-04489	Hub, whl
27	731-05352*	Bush, sway Bar
28	732-04423	Shabs, 5.0 Stroke, rr
29	936-0291	Wash, flat, .88 X 1.38 X .125, ht
30	927-04228	Hose, brake, rear
31	741-04234A	Brg, flg, .625 X .750 X .750 Lg
32	741-04166	Brg, dble Row, 60x30x37
33	747-04514	Rod, cont, .375x3.886
34	750-04358B	Tube, pivot, rr/cont Arm

Ref No.	Part Number	Description
35	750-04487A*	Bar, sway, rr
36	736-3010	Washer, Flat, .407 x .812 x .135
37	961-04043	Brake, hyd, caliper, frt, RH
	961-04044	Brake, hyd, caliper, frt, LH
38	607-04145A	Cont Assembly, r/frt, lwr
39	607-04148	Arm Assembly, r/frt, upr
40	707-05018-0637	Brkt., Diff, rr
41	715-04011	Pin, Roll
42	911-04071A*	Axle Assembly, cv Joint, 4x4
	759-04173†	Hog Ring
	731-05082†	DOJ Boot Kit (Includes clamp)
	731-05083†	Rzeppa Boot Kit (Incl. clamp)
43	918-04316*	Diff Assembly, cfd, 4x4
44	726-04041*	Clamp, Hose, Adj.
45	710-0623	Scr., tt, 3/8-16 x .750
46	927-04224	Hose, brake, front
47	707-04833-0637*	Brkt, shld, strg, RH
	707-04832-0637†*	Brkt, shld, strg, LH
48	712-3004A	Nut, Flg Lk, 5/16-18
49	710-0597	Screw, 1/4-20, 1.00, gr5, spec
50	732-04383	Wire, Brake Line
51	712-04086	Nut, nylock, m12x1.25
52	712-3006	Nut, hex, 1/4-20, gr5
53	716-04039	Ring, ret, 34x1.6
54	723-04024	B/jnt, bj14d-6201
55	726-0205*	Clamp, hose, .490 Dia.
56	732-04424	Shabs, 5.0 Stroke, frt
57	737-0296*	Vent, 3/8 Dia
58	751-10350*	Hose, fuel Line
59	607-04124-0637	Supt Assembly, strg, whl
60	617-04041P	Strg Assembly, gr
61	710-0514	Screw, 3/8-16, 1.00, gr5, std
62	710-1266	Screw, 5/16-18, 3.50, gr5, std
63	710-1880	Screw, 5/16-18, .75, gr5, patch
64	710-3005	Screw, 3/8-16, 1.25, gr5, std
65	710-3008	Screw, 5/16-18, .75, gr5, std
66	916-0231	Ring, e Type, .750
67	717-04200	Shft, strg

† Not Shown

* 4x4 Units Only

Continued on next page

Axles and Steering

Ref No.	Part Number	Description
68	731-04514	Whl,strg,soft Grip 3 Spoke 5/8
69	731-06459	Cvr, whl, steering
70	736-0242	Wash,bell,.340 X .872 X .060
71	941-0339	Brg,flg,.754id X 1.00odx.925
72	634-04443	Whl Ass'y, rh,25x11-12
	634-04445	Whl Ass'y, rh,25x11-12, trl,blk
	634-04484††	Whl Ass'y, rh,25x11-12
	634-04444†	Whl Ass'y, lh,25x11-12
	634-04446†	Whl Ass'y, lh,25x11-12, trl,blk
	634-04485†††	Whl Ass'y, lh,25x11-12
	634-04407**	Whl Ass'y, compl,25x10-12
	634-04575	Whl Ass'y,25x10-12, All Trail
	734-04156	Tire Only, 25x11-12
	734-04323**	Tire Only, 25x10.5-12
73	634-04216B	Whl Ass'y, rh,25x10-12
	634-04246B	Whl Ass'y, rh,25x10-12, trl,blk
	634-04486††	Whl Ass'y, rh,25x10-12
	634-04217B†	Whl Ass'y, lh,25x10-12
	634-04247B†	Whl Ass'y, lh,25x10-12, trl,blk
	634-04487†††	Whl Ass'y, lh,25x10-12
	634-04407**	Whl Ass'y, compl,25x10-12
	634-04575	Whl Ass'y,25x10-12, All Trail
	734-04157	Tire Only, 25x10-12

Ref No.	Part Number	Description
	734-04323**	Tire Only, 25x10.5-12
74	707-04740	Cap, Whl UV
	707-05007††	Cap, Whl UV, Chrome
75	712-3050	Nut, lug, 7/16-14
	712-04127††	Nut, lug, 7/16-14, Chrome
76	707-04693-0637	Brkt, diff, cbl,mnt
77	732-0418	Spr, ext, .38od x 2.10
78	607-04216A	Lvr, Ass'y, Diff Lock
79	938-0507B	Scr, shldr, .500 dia x .434
80	741-0491	Brg, flg, nyliner, .500id x .34lg
81	746-04248	Cbl, cont, diff, lock
82	737-04129	Ftg, banjo ftg bolt, M10x1.00
83	737-04130	Ftg, banjo ftg, 10mm
84	710-0599	Screw, tt, 1/4-20x.500
85	736-0262	Washer, Flat, .385 x .870 x .092
86	936-0275	Wash, Flat, .344 x .688 x .065
87	711-04401**	Axle, Frt, 4x2
88	619-04137A	Hsg,knuckle,r/frt,mach
	619-04142A†	Hsg,knuckle,l/frt,mach
—	723-3021†	Creeper Drive Hsg Breather
—	737-04149†	Adap, Diff, Breather
—	607-04152A†	Cont Assembly,l/ftr,lwr
—	607-04153†	Cont Assembly,l/frt,upr


† Not Shown

†† Kohler EFI Units

* 4x4 Units Only

** 4x2 Units Only

Radiator (If Equipped)

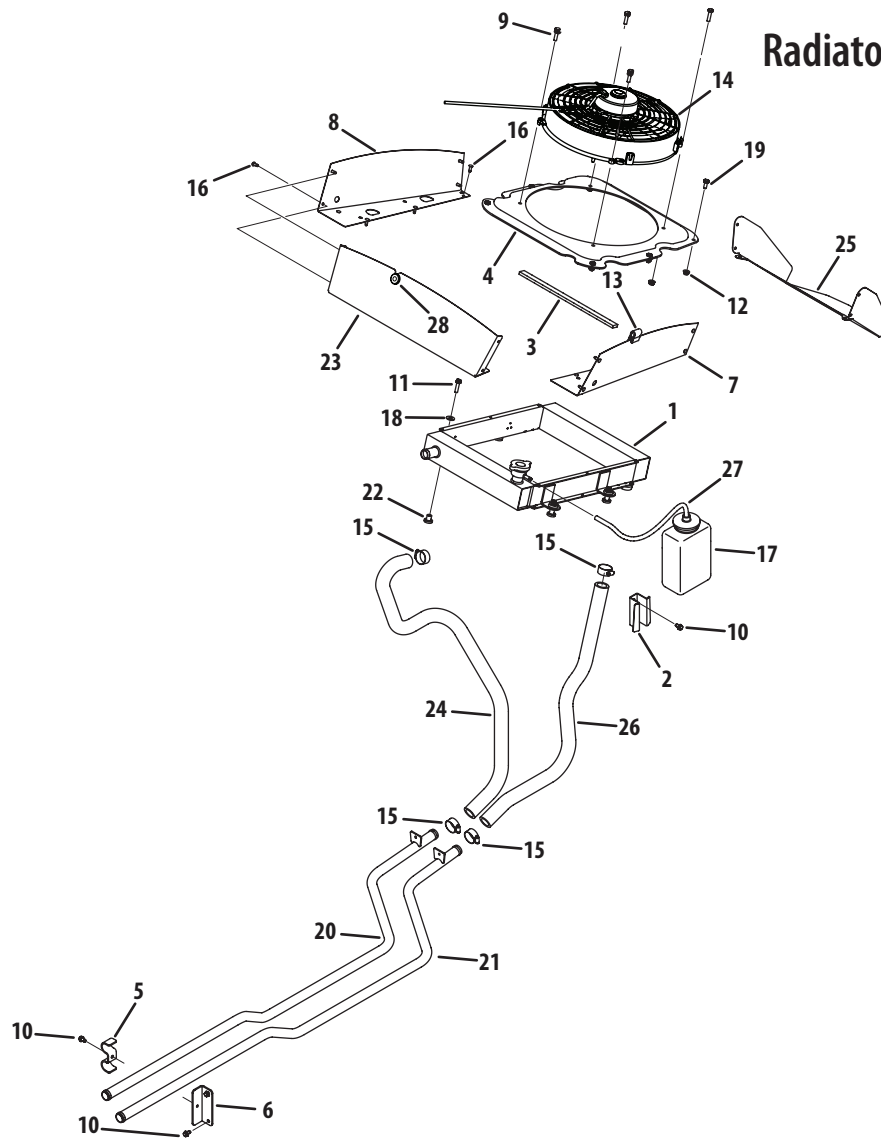


Ref No.	Part Number	Description
1	951-04148	Rdtr Asm, zin Core
2	703-05461A-0637	Brkt, over Flow, bottle
3	722-3022-12	Tape, .625 Wide x .25 Thk Foam
4	731-05688	Shrd, Fan, Mount
5	707-04659-0637	Brkt, tube, uv
6	707-04697-0637	Brkt, rdtr Hose
7	707-04894-0637	Shrd, rh
8	707-04895-0637	Shrd, lh
9	710-0597	Hhcs, 1/4-20, 1.00, gr5
10	710-0599	Scr, tt, 1/4-20, 0.500, hxindwsh
11	710-0788	Scr, tt, 1/4-20, 1.000, hxindwsh
12	712-04064	Nut, flglk, 1/4-20, grf, nylon
13	723-3061	Heat Baffle Seal
14	725-04766	Fan, elec, 12v, w/Guard, Yan
	725-04224A	Fan, elec, 12v, w/Guard, Koh EFI


Ref No.	Part Number	Description
15	726-0132	Clamp, hose, adj
16	928-0123	Pop Rivet 3/16 Dia x .450, sty1
17	731-04731	Cntnr, over Flow, coolant
18	736-0173	Wash, flat, .28 x .74 x .063
19	710-0751	Scr., 1/4-20 x .620
20	750-04769A-0637	Tube, inside, rdtr 4x4
21	750-04768-0637	Tube, outside, rdtr 4x4
22	750-04762	Spcr, Step
23	707-04896-0637	Shrd, rear
24	751-10256	Hose, rdtr, frt 4x4
25	707-04897-0637	Shrd, front
26	751-10261	Hose, rdtr, frt 4x4
27	751-10377	Tube, overflow, rdtr
28	735-0225	Grommet, Rubber, Yan
	735-04093	Grommet, Rubber, Koh, EFI

Kohler Engine - Crank Shaft & Crank Case

Crankshaft

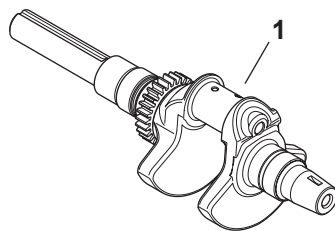

Crankcase

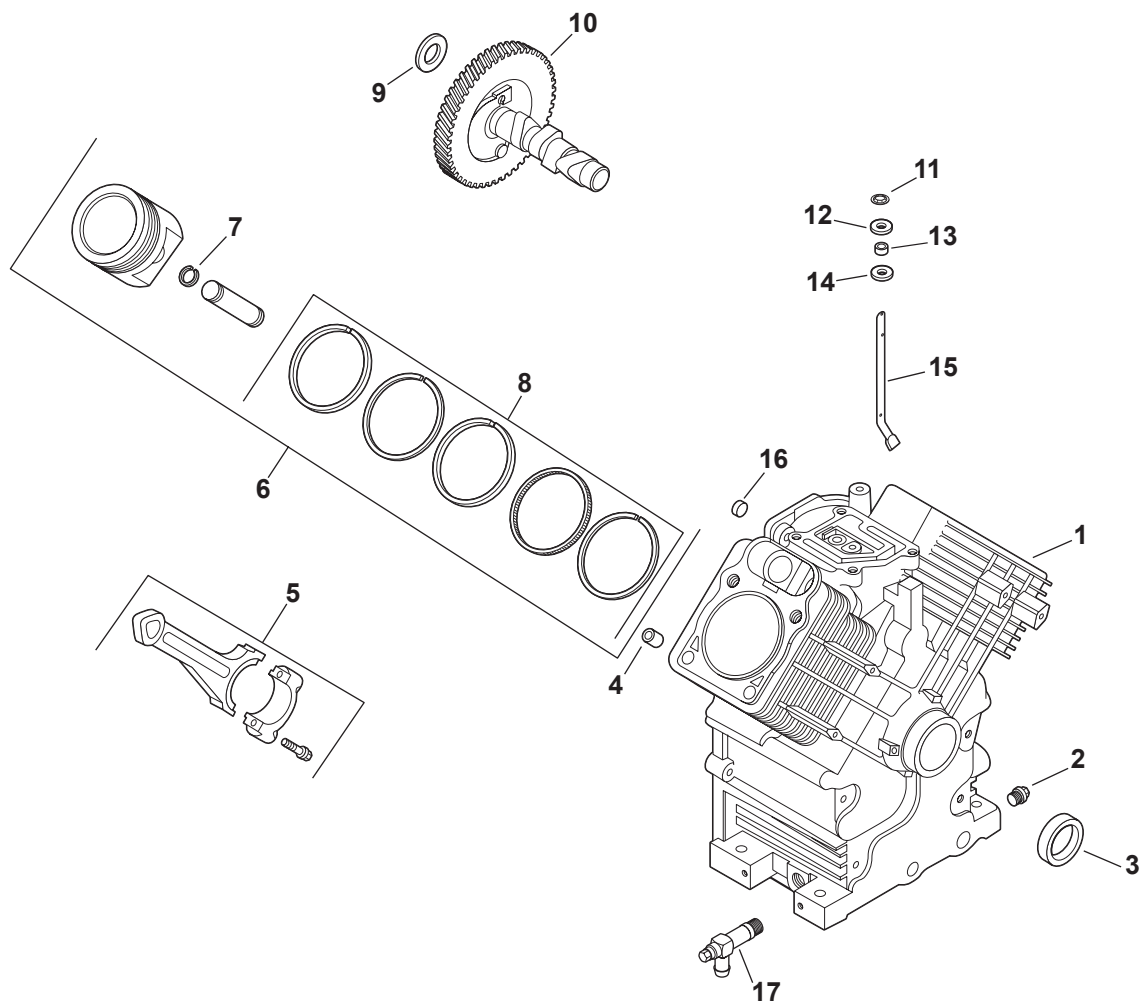

Crank Shaft

Ref No.	Part Number	Description
1.	KH-24-014-154-S	Crankshaft (Includes 2)

Crankcase


Ref No.	Part Number	Description
1.	(Use Miniblock)	Crankcase
2.	KH-25-139-57-S	Plug, sq. head 3/8" (2)
3.	KH-24-032-19-S	Seal, front oil
4.	KH-24-380-16-S	Pin, loYanmaring (6)
5.	KH-24-067-24-S	Connecting Rod (Std.) (2)
	KH-24-067-14-S	Connecting Rod (.25) (2)
6.	KH-24-874-38-S	Piston w/Ring Set (Std.) (2) (Includes 7,8)
	KH-24-874-14-S	Piston w/Ring Set (.08) (2)
	KH-24-874-18-S	Piston w/Ring Set (.25) (2)
	KH-24-874-41-S	Piston w/Ring Set (.50) (2)
7.	KH-24-018-01-S	Retainer, piston pin (4)
8.	KH-24-108-22-S	Ring Set (Std. & .08) (2)
	KH-24-108-24-S	Ring Set (.25) (2)
	KH-24-108-13-S	Ring Set (.50) (2)
9.	KH-12-422-09-S	Shim, camshaft (A.R.) red

Ref No.	Part Number	Description
	KH-12-422-13-S	Shim, camshaft (A.R.) black
	KH-12-422-07-S	Shim, camshaft (A.R.) white
	KH-12-422-08-S	Shim, camshaft (A.R.) blue
	KH-12-422-10-S	Shim, camshaft - yellow
	KH-12-422-11-S	Shim, camshaft (A.R.) green
	KH-12-422-12-S	Shim, camshaft (A.R.) gray
10.	KH-24-012-10-S	Camshaft
11.	KH-24-018-09-S	Retainer, ring
12.	KH-M-931010-S	Washer, plain 9 mm
13.	KH-28-032-09-S	Seal, governor cross shaft
14.	KH-24-468-15-S	Washer, plain 1/4"
15.	KH-24-144-38-S	Shaft, governor cross
16.	KH-52-139-09-S	Plug, cup
17.	KH-25-462-12-S	Valve, oil drain (goes in the 2 o'clock position)


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Engine - Oil Pan/Lubrication

Oil Pan/Lubrication

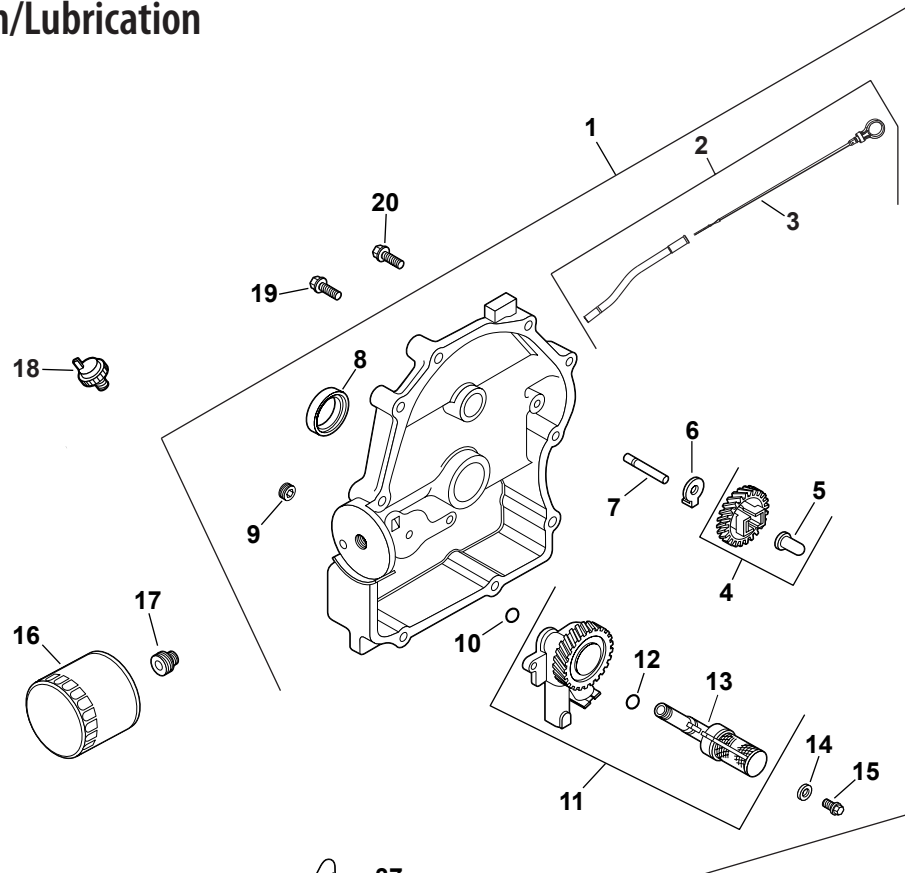

Head/Valve/Breather

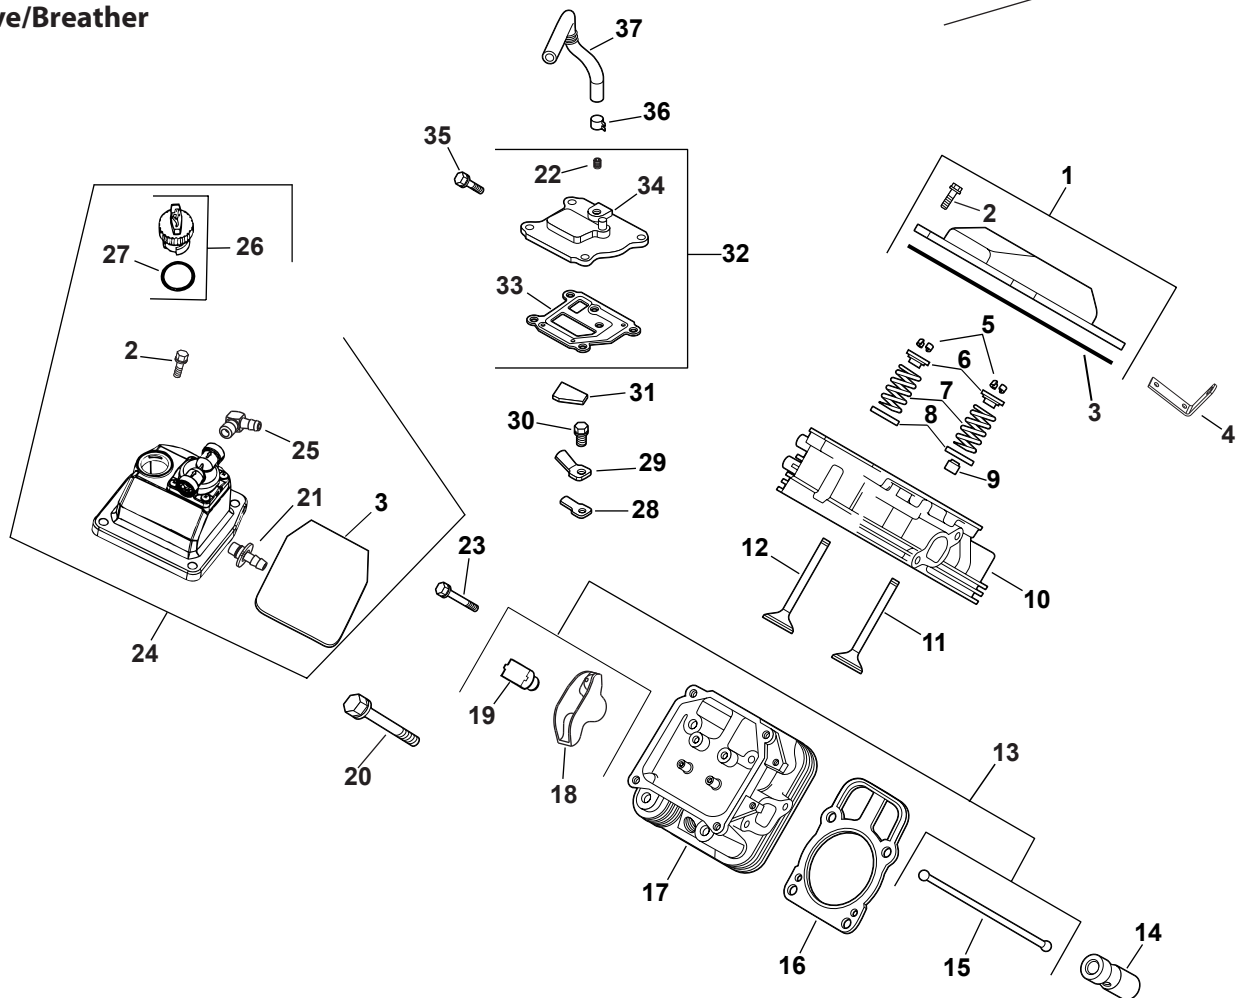

Oil Pan/ Lubrication

Ref No.	Part Number	Description
1.	KH-24-009-167-S	Plate, closure ass'y (Incl. 2-15)
2.	KH-24-755-121-S	Kit, tube w/dipstick (Includes 3)
3.	KH-24-038-10-S	Dipstick
4.	KH-24-043-12	Kit, governor gear (Includes 5)
5.	KH-12-380-01	Pin, governor regulating
6.	KH-24-448-02-S	Tab, locking
7.	KH-12-144-02	Shaft, governor gear
8.	KH-25-032-06-S	Seal, oil (PTO end)
9.	KH-25-139-60-S	Plug, pipe 1/8" (2)
10.	KH-24-153-08	O-Ring
11.	KH-24-393-51-S	Oil pump ass'y (Includes 12,13)
12.	KH-24-153-01	O-Ring, oil pick-up

Ref No.	Part Number	Description
13.	KH-24-381-04	Pick-up, oil
14.	KH-M-631005	Washer, plain 6 mm (2)
15.	KH-M-645025-S	Screw, hex flange M6x1.0x25 (2)
16.	KH-12-050-01-S	Filter, oil
17.	KH-24-136-01	Nipple, oil filter
18.	KH-25-099-27-S	Switch, pressure
19.	KH-24-086-17-S	Screw, hex flg, M8x1.25x45 (9)
20.	KH-24-086-17-S	Screw, hex. flange M8x1.25x45
—	KH-25-113-05†	Decal, oil sentry
—	KH-24-113-08†	Decal, 20 HP
—	KH-25-113-39-S†	Decal, clear laminate

Head/ Valve/ Breather

Ref No.	Part Number	Description
1.	KH-24-755-140-S	Kit, oil fill rocker cover (Incl. 2,3)
2.	KH-M-651030-S	Screw, hex flange M6x1.0x30 (4)
3.	KH-24-153-30-S	O-Ring, valve cover
4.	KH-24-445-01	Strap, lifting (2)
5.	KH-12-755-03	Kit, retainer (2)
6.	KH-12-173-01	Cap, valve spring (2)
7.	KH-24-089-02	Spring, valve (2)
8.	KH-235011-S	Retainer, spring (2)
9.	KH-66-032-05-S	Seal, valve stem
10.	KH-24-318-107-S	Head assembly, #1 cylinder
11.	KH-24-017-01	Valve, intake (Std.)
	KH-24-017-02	Valve, intake (.25)
12.	KH-24-016-01	Valve, exhaust (Std.)
	KH-24-016-02	Valve, exhaust (.25)
13.	KH-24-755-66	Kit, valve train (Incl. 15,18,19)
14.	KH-25-351-04-S	Lifter, valve (4)
15.	KH-24-411-05	Rod, push (2)
16.	KH-24-841-01-S	Kit, cyl head gskt (Incl. 21,22) (2)
17.	KH-24-318-115-S	Head assembly, #2 cylinder
18.	KH-25-186-01	Arm, rocker (2)
19.	KH-24-599-02-S	Pivot, rocker arm (2)


Ref No.	Part Number	Description
20.	KH-12-086-16	Screw, Flg, M10x1.5x90 (8)
21.	KH-25-294-10-S	Fitting, 45°
22.	KH-25-139-60-S	Plug, ctsk pipe 1/8"
23.	KH-M-640034-S	Screw, hex flange M6x1.0x34 (2)
24.	KH-24-559-12-S	Kit, fuel pump (Includes 2, 3, 21, 25-27)
25.	KH-25-294-11-S	Fitting, 90° (2)
26.	KH-24-755-46	Cap assembly, oil fill (Incl. 27)
27.	KH-24-153-02	O-Ring, dipstick
28.	KH-24-402-03	Reed, breather
29.	KH-66-018-04-S	Retainer, reed
30.	KH-M-0545010	Screw, hex. flange M5x0.8x10
31.	KH-24-050-11-S	Filter, breather
32.	KH-24-033-01	Kit, breathe (Includes 33,34)
33.	KH-24-041-51-S	Gasket, breather
34.	KH-24-096-86-S	Cover, breather
35.	KH-M-645020-S	Screw, hex flange M6x1.0x20 (4)
36.	KH-25-237-14-S	Clamp, hose
37.	KH-24-326-89-S	Hose, breather
—	KH-24-755-147-S†	Kit, cylnd head hardware (Includes 5-9,11,12,15,18,19,23)

† Not Shown


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Engine - Ignition/ Electrical & Blower Housing/ Baffles

Ignition/Electrical

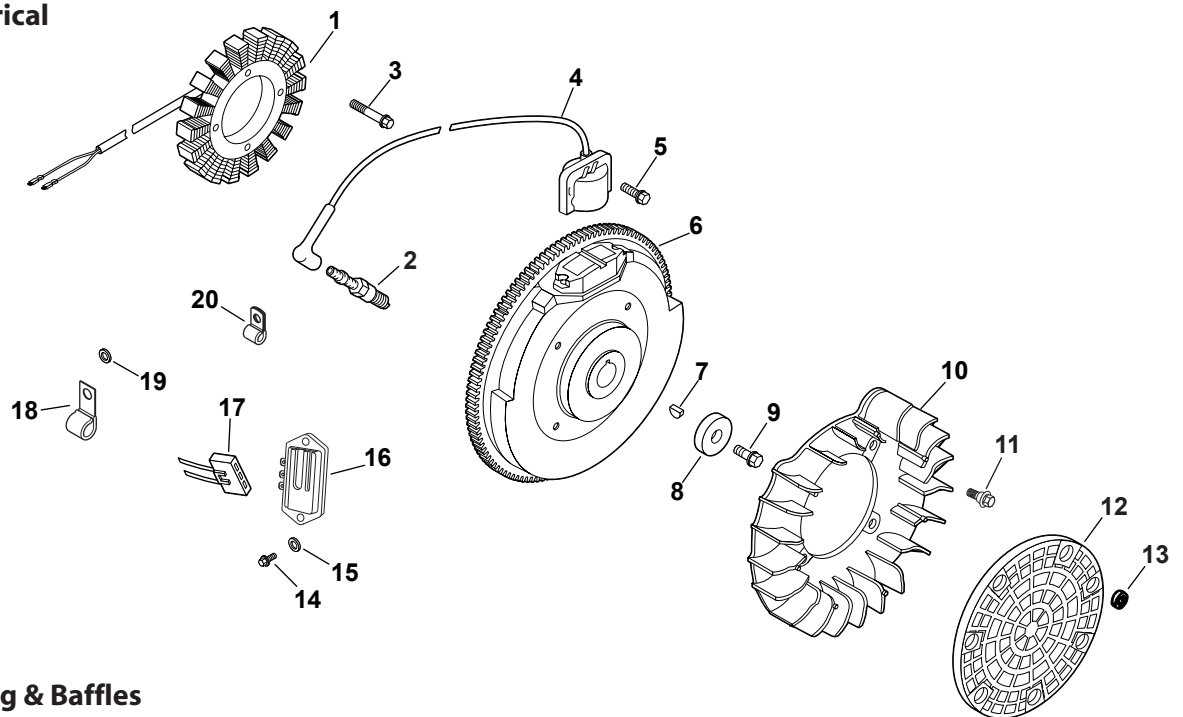

Blower Housing & Baffles

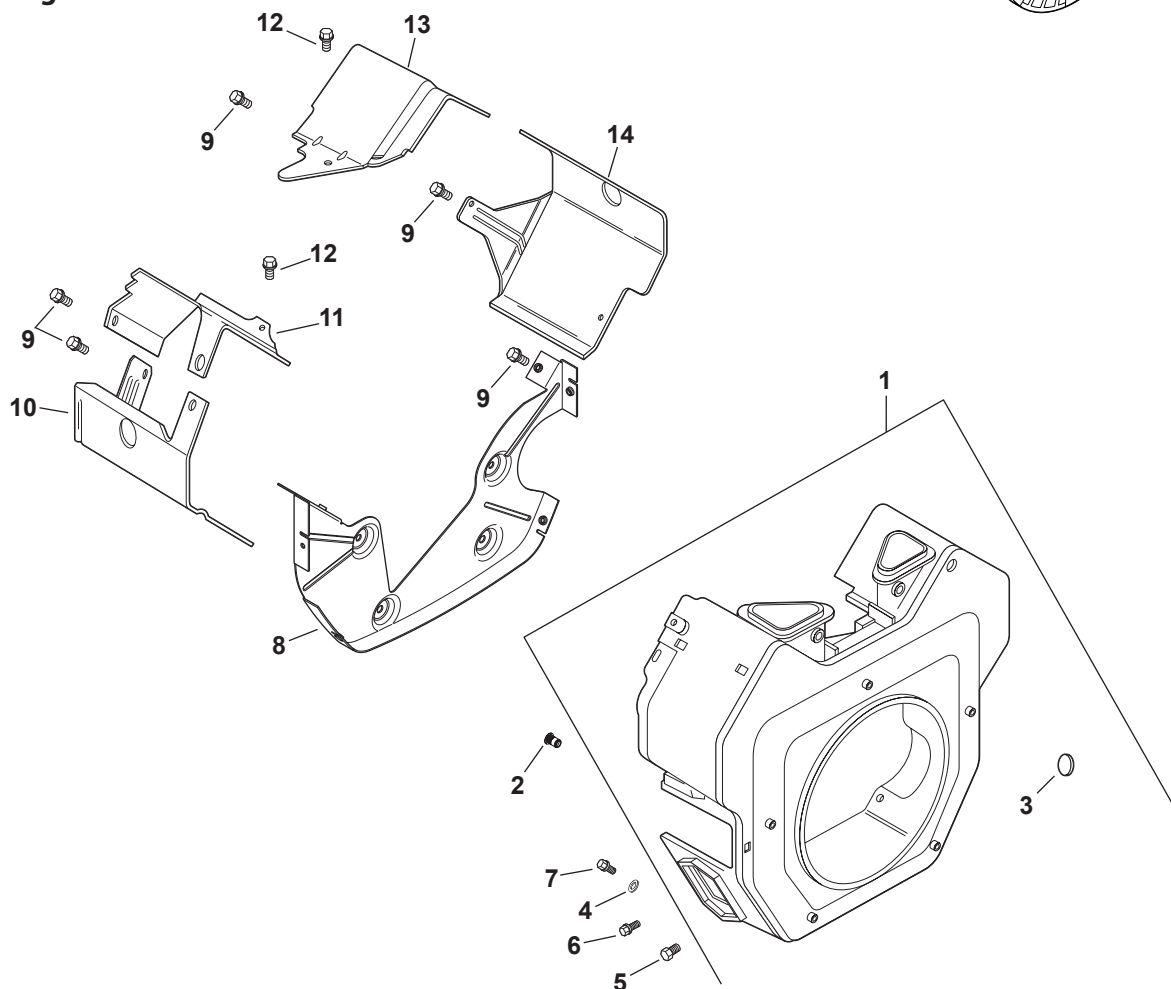

Ignition/ Electrical

Ref No.	Part Number	Description
1.	KH-237878	Kit, 15 amp stator
2.	KH-25-132-12-S	Spark Plug (2)
3.	KH-M-548025-S	Screw, hex. cap M5x0.8x25 (2)
4.	KH-24-584-45-S	Module, ignition (2)
5.	KH-M-545020-S	Screw, hex flange M5x0.8x20 (4)
6.	KH-24-025-55-S	Flywheel
7.	KH-X-42-15	Key, 3/16" x 5/8"
8.	KH-12-468-03	Washer, flat 13/32"
9.	KH-12-086-14	Screw, hex flange M10x1.5x46
10.	KH-24-157-15-S	Fan
11.	KH-25-086-47	Bolt, shoulder (4)
12.	KH-24-162-03	Screen, grass
13.	KH-24-018-03-S	Retainer, (3)

Ref No.	Part Number	Description
14.	KH-24-086-18	Screw, phillips hd. 11-16x7/8" (2)
15.	KH-X-25-92	Washer, plain 3/16" (2)
16.	KH-41-403-09	Rectifier-regulator
17.	KH-25-155-41-S	Connector (3 contact)
18.	KH-235173	Clip, cable
19.	KH-X-25-63	Washer, plain 1/4"
20.	KH-12-154-01	Clamp, insulated
—	KH-25-086-91-S†	Screw, tapping (2)
—	KH-24-126-137-S†	Bracket, ground strap
—	KH-25-468-07-S†	Washer, flat
—	KH-24-176-08†	Harness, wiring
—	KH-25-454-03-S†	Tie, wire (2)

† Not Shown

Blower Housing & Baffles

Ref No.	Part Number	Description
1.	KH-24-027-163-S	Housing, blower (Includes 3, KH-41-037-10-S)
2.	KH-24-332-01-S	Insert, threaded (5)
3.	KH-25-313-06-S	Grommet
4.	KH-25-468-07-S	Washer, flat, 7/32" (2)
5.	KH-M-561016-S	Screw, hex. flange M5x0.8x16
6.	KH-M-545016-S	Screw, hex. flange M5x0.8x16 (3)
7.	KH-M-545020-S	Screw, hex. flange M5x0.8x20 (4)
8.	KH-24-146-50-S	Plate, back (Incl KH-25-154-11-S)


Ref No.	Part Number	Description
9.	KH-M-645016-S	Scr, hex flng (6) M6x1.0x16 (6)
10.	KH-24-063-39-S	Baffle, cyl barrel #2 side
11.	KH-24-063-70-S	Baffle, valley - #2 side
12.	KH-M-545010	Screw, hex flange M5x0.8x10 (2)
13.	KH-24-063-59-S	Baffle, valley - #1 side
14.	KH-24-063-85-S	Baffle, cylinder barrel - #1 side
—	KH-41-037-10-S†	Nameplate, service
—	KH-25-154-11-S†	Clip, repair (speed nut)
—	KH-24-086-35-S†	Screw, lbd sckt pan M5 x 0.8 x 10 (5)
—	KH-24-468-10†	Washer, flat, 7/32" (5)

† Not Shown


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Engine - Starting & Fuel Systems

Starting System

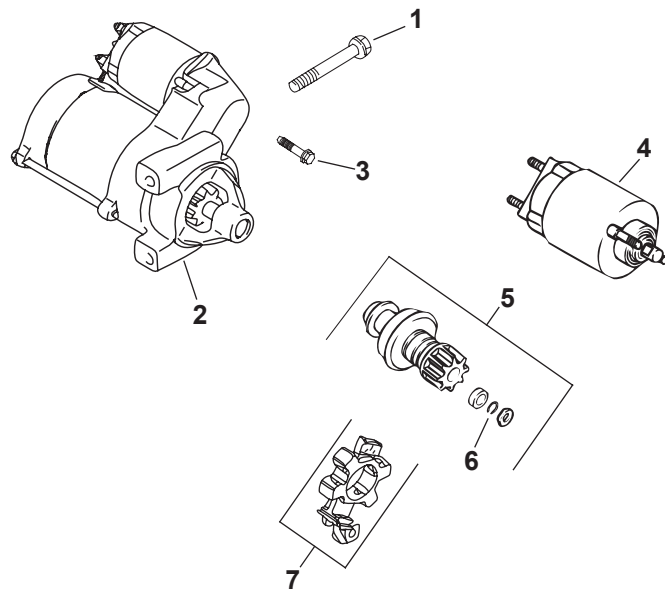

Fuel System

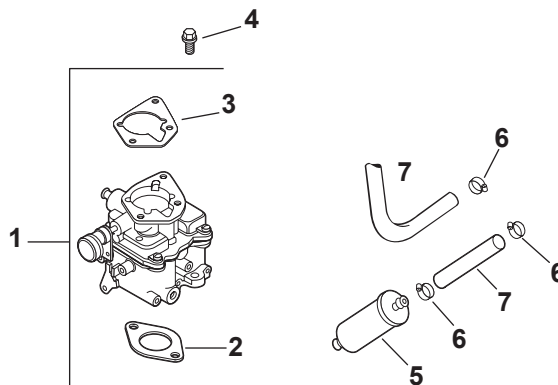

Starting System

Ref No.	Part Number	Description
1.	KH-M-851080-S	Scr, hex flange M8x1.25x80 (2)
2.	KH-25-098-11-S	Starter, solenoid ass'y (Incl 3-7)
3.	KH-25-086-113-S	Screw, external torx hd. (3)
4.	KH-25-435-06-S	Kit, solenoid (Includes 3)
5.	KH-25-755-33-S	Kit, starter pinion (Includes 6)
6.	KH-25-141-05-S	Ring
7.	KH-25-221-01-S	Brush, holder


Fuel System

Ref No.	Part Number	Description
1.	KH-24-853-144-S	Kit, carb w/gasket (Incl 2,3)
2.	KH-24-041-06	Gasket, air cleaner base
3.	KH-24-041-53-S	Gasket, carburetor
4.	KH-M-651025-S	Screw, hex flange M6x1.0x25 (2)
5.	KH-24-050-13-S	Filter, fuel
6.	KH-25-237-14-S	Clamp, hose (4)
7.	KH-25-111-34-S	Line, fuel 24" - cut to length (2)
—	KH-24-518-24-S†	Lead, ground (solenoid to carb mounting screw)
—	KH-24-755-125-S†	Kit, high altitude
—	KH-24-757-01†	Kit, solenoid
—	KH-24-757-02-S†	Kit, float
—	KH-24-757-03-S†	Kit, carburetor repair
—	KH-24-757-07†	Kit, choke repair

† Not Shown

NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Engine Controls

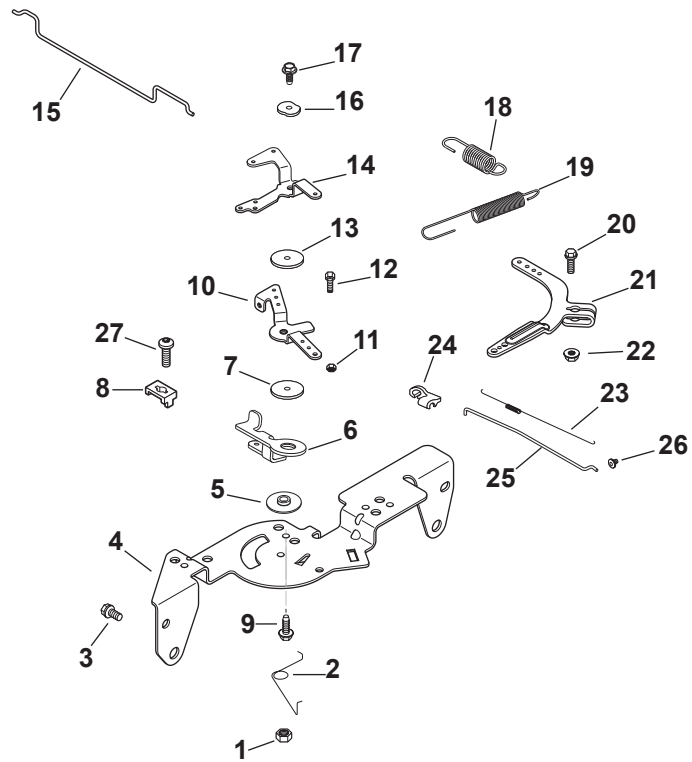


Engine Controls

Ref No.	Part Number	Description
1.	KH-M-547050-S	Nut, hex. lock M5x0.8
2.	KH-24 089 03	Spring, choke return
3.	KH-M-645016-S	Screw, hex flange M6x1.0x16 (4)
4.	KH-24-126 161-S	Bracket, control
5.	KH-24-112 27-S	Spacer, control assembly
6.	KH-24-090 47-S	Lever, throttle actuator
7.	KH-24-468 20-S	Washer, flat, 5mm
8.	KH-12-237 01	Clamp, cable (2)
9.	KH-M-545016-S	Screw, hex. flange M5x0.8x16
10.	KH-24-090-48-S	Lever, throttle control
11.	KH-M-446030-S	Nut, M4x0.7
12.	KH-M-401030	Screw, cap M4x0.7x30
13.	KH-24-468-01	Washer, flat, 5.5 mm
14.	KH-24-090-05	Lever, choke
15.	KH-24-079-21-S	Linkage, choke
16.	KH-41-468-03	Washer, spring 1/4"
17.	KH-M-545020-S	Screw, hex. flange M5x0.8x20
18.	KH-24-089-55-S	Spring, governor
19.	KH-24-089-45-S	Spring, governor
20.	KH-24-211-03-S	Bolt, rd hd sq neck, M6x1.0x25
21.	KH-24-090-51-S	Lever, governor
22.	KH-M-641060-S	Nut, flange M6x1.0
23.	KH-24-089-01	Spring, linkage
24.	KH-25-158-11	Bushing, linkage retaining
25.	KH-24-079-01	Linkage, throttle
26.	KH-25-158-08	Bushing, throttle linkage
27.	KH-24-086-43-S	Scr, lbd thd frm, M5 x 0.8 x 16


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler Engine - Air Intake/ Filtration & Exhaust

Air Intake/Filtration

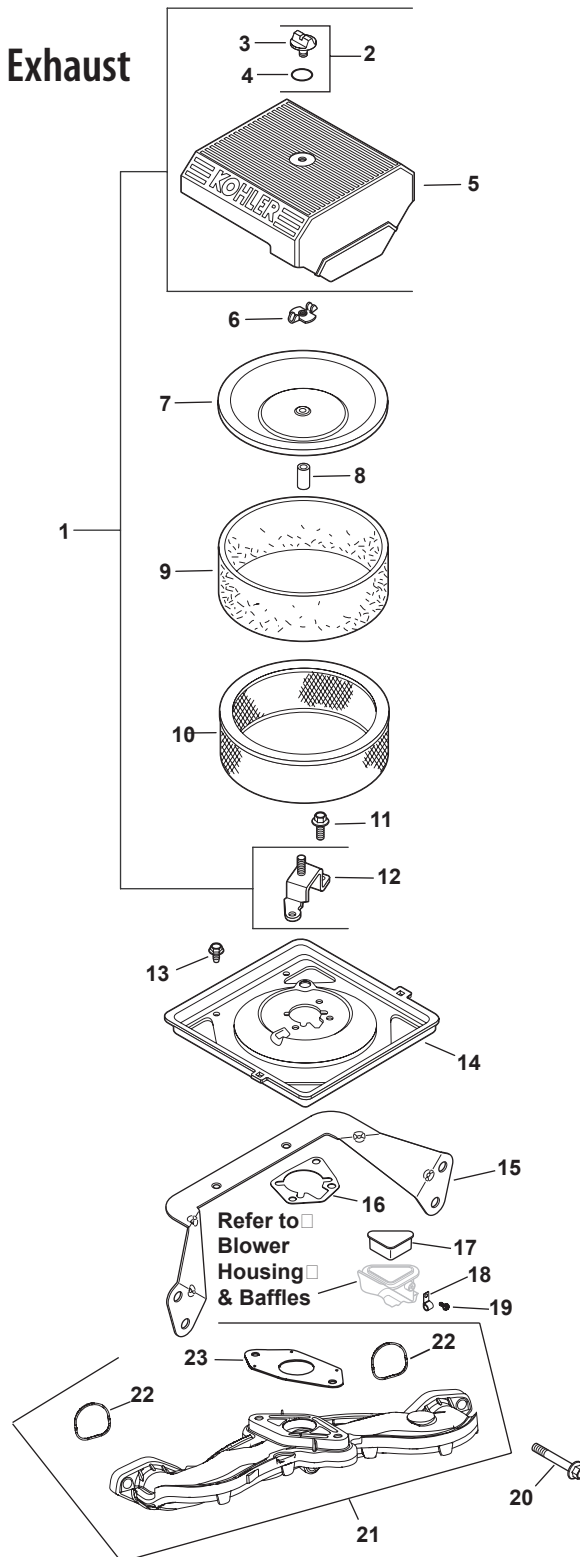

Exhaust

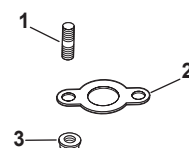

Air Intake/ Filtration

Ref No.	Part Number	Description
1.	KH-24-743-08	Kit, air cleaner cover (Incl 2 5,12)
2.	KH-54-755-01-S	Kit, knob w/seal (Includes 3,4)
3.	KH-25-341-04-S	Knob, cover
4.	KH-24-153-20-S	O-Ring
5.	KH-24-096-69-S	Cover, air cleaner
6.	KH-12-100-01	Nut, wing
7.	KH-24-096-01	Cover, inner air cleaner
8.	KH-24-032-03	Seal, inner air cleaner
9.	KH-47-883-03-S1	Element, precleaner
10.	KH-47-883-03-S1	Element, air cleaner
11.	KH-24-086-53-S	Screw, flg thd frm M6x1.0x16
12.	KH-24-126-21-S	Bracket, air cleaner

Ref No.	Part Number	Description
13.	KH-M-545010	Screw, flg thd frm M5x0.8x10
14.	KH-24-094-39-S	Base, air cleaner
15.	KH-24-126-130-S	Bracket, air cleaner base
16.	KH-24-041-06	Gasket, air cleaner base
17.	KH-24-096-17-S	Cover, blower housing
18.	KH-25-154-04-S	Clip, cable
19.	KH-25-086-91-S	Screw, wsh hd tap #8-18x1/2"
20.	KH-M-651040-S	Screw, flg M6x1.0x40
21.	KH-24-164-93-S	Manifold, intake - plastic (Includes 22 & 23)
22.	KH-24-153-27-S	O-Ring, intake port
23.	KH-24-041-53-S	Gasket, carburetor

Exhaust


Ref No.	Part Number	Description
1.	KH-25-072-04	Stud M8x1.25x33 (4)
2.	KH-24-041-49-S	Gasket, exhaust manifold (2)
3.	712-3086	Nut, hex. flange M8x1.25 (5)
—	KH-24-782-15†	Miniblock
—	KH-24-755-107-S†	Gasket Set

† Not Shown


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler EFI Engine - Crank Shaft & Crank Case

CRANKSHAFT

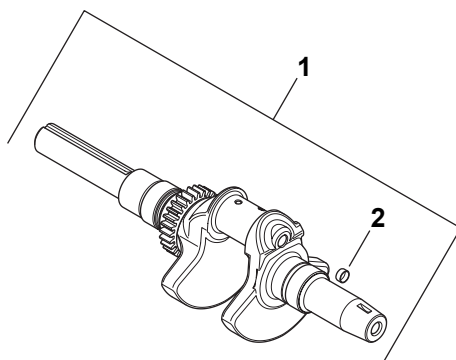

CRANKCASE

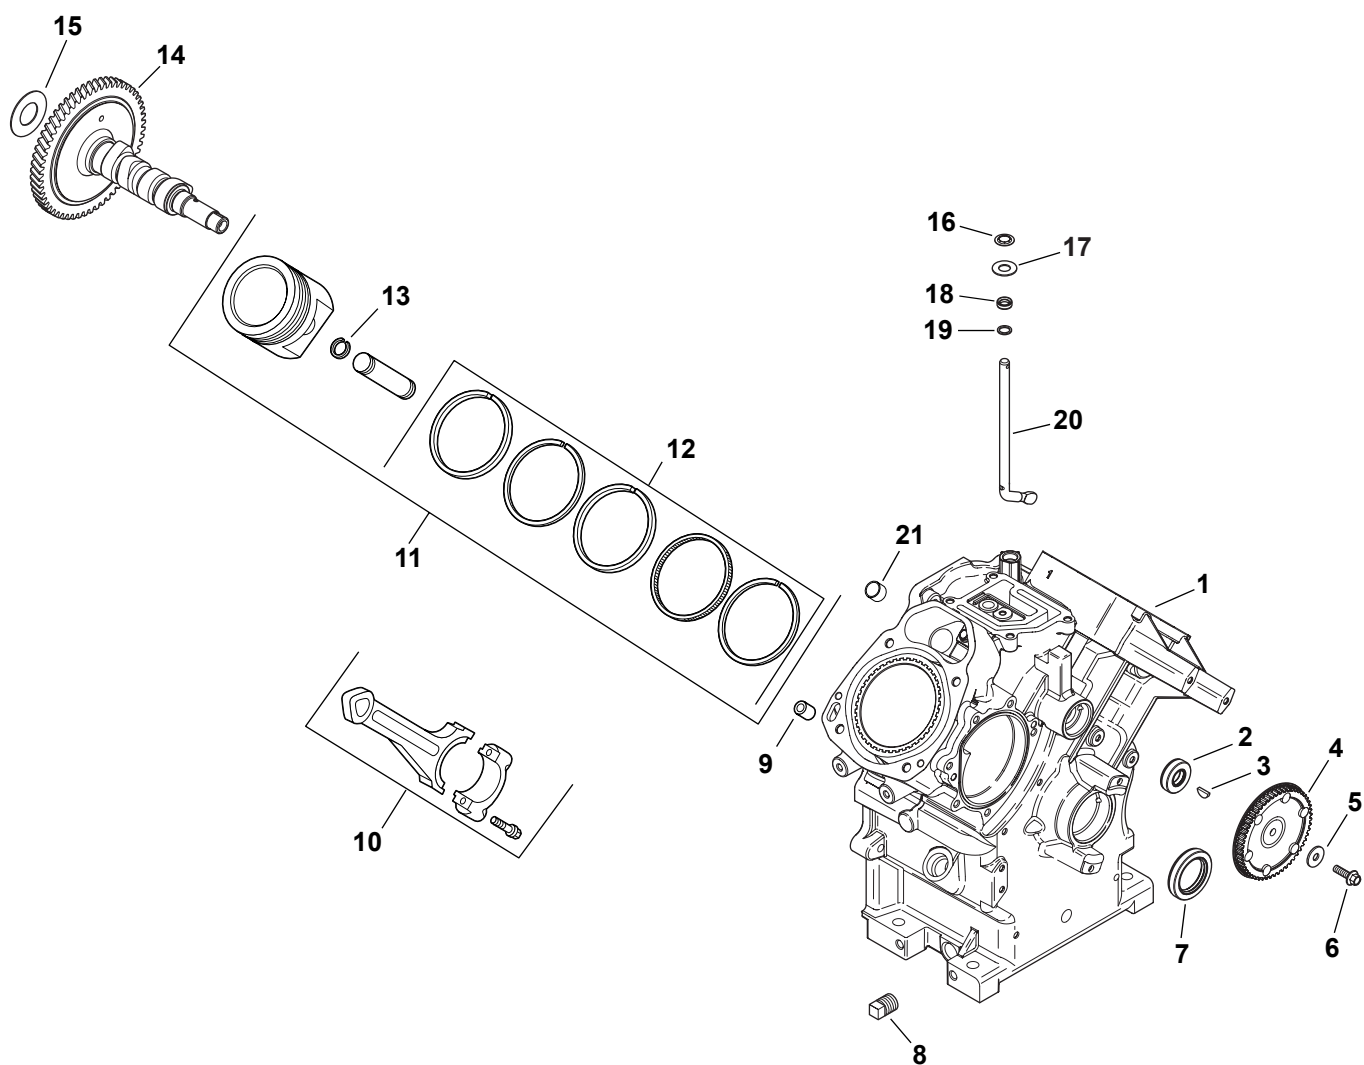

Crank Shaft

Ref No.	Part Number	Description
1	66 014 118-S	Crankshaft (Includes 2)
2	52 139 09-S	Plug, Cup

Crankcase

Ref No.	Part Number	Description
1		Crankcase (Use: Short Block)
2	KH-66-032-07-S	Seal, Camshaft
3	KH-X-42-2-S	Key, 3/32" x 3/8"
4	KH-66-093-01-S	Sprocket, Camshaft
5	736-0173	Washer, Flat 1/4"
6	KH-M-651020-S	Screw, Flg, M6 x 1.0 x 20
7	KH-24-032-19-S	Seal, Oil (Helix Lip)
8	KH-25-139-57-S	Plug, Sq Hd Pipe, 3/8"
9	KH-24-380-16-S	Pin, LoYanmaring
10	KH-24-067-24-S	Connecting Rod (Std)
	KH-24-067-25-S	Connecting Rod (.25)
11	KH-24-874-30-S	Kit, Piston w/Ring Set (Incl.12,13)
	KH-24-874-31-S	Kit, Piston w/Ring Set (.08)
12	KH-24-108-22-S	Ring Set (Std)
	KH-24-108-23-S	Ring Set (.08)
13	KH-24-018-01-S	Retainer, Piston Pin


Ref No.	Part Number	Description
14	KH-66-012-06-S	Kit Camshaft - EFI (Incl 25 357 14-S)
15	KH-12-422-07-S	Shim, Camshaft (White .028")
	KH-12-422-08-S	Shim, Camshaft (Blue .03")
	KH-12-422-09-S	Shim, Camshaft (Red .032")
	KH-12-422-10-S	Shim, Camshaft (Yellow .034")
	KH-12-422-11-S	Shim, Camshaft (Green .036")
	KH-12-422-12-S	Shim, Camshaft (Gray .038")
	KH-12-422-13-S	Shim, Camshaft (Black .04")
16	KH-24-018-09-S	Retainer, Ring
17	KH-M-931010-S	Washer, Flat 9 mm
18	KH-28-032-09-S	Seal, Governor Cross Shaft
19	KH-24-468-15-S	Washer, Flat, 11/32"
20	KH-24-144-38-S	Shaft, Governor Cross
21	KH-52-139-09-S	Plug, Cup
—	KH-25-357-14-S†	Lubricant, Camshaft

† Not Shown


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler EFI Engine - Oil Pan/Lubrication

OIL PAN/LUBRICATION

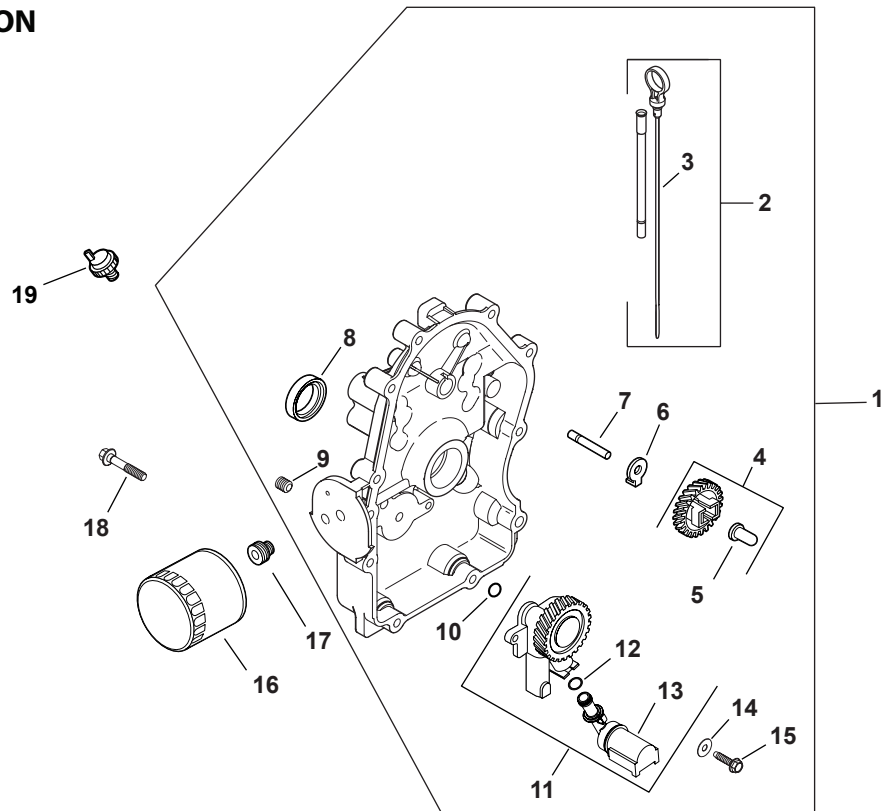

HEAD/VALVE/BREATHER

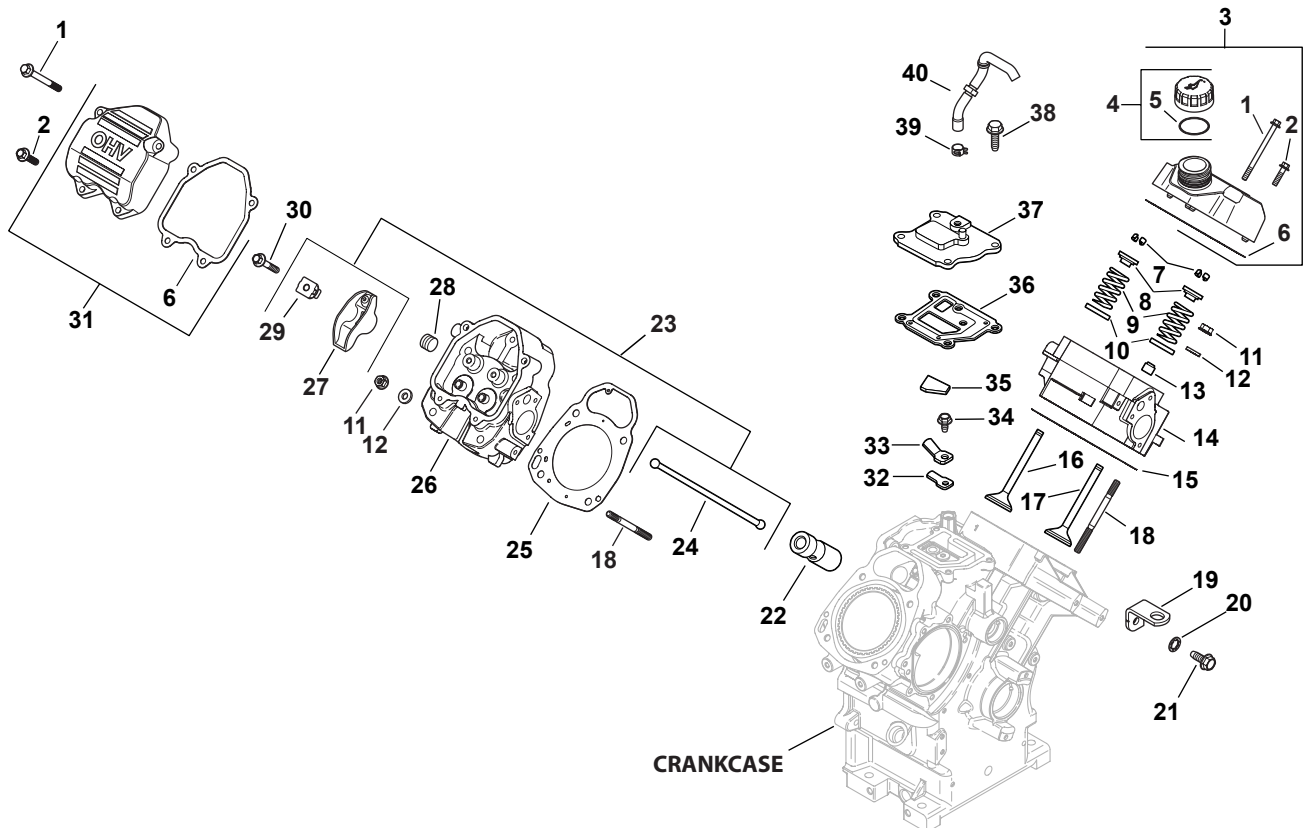

CRANKCASE

Oil Pan/ Lubrication

Ref No.	Part Number	Description
1	KH-24-009-157-S	Closure Plate Assembly
2	KH-24-755-121-S	Kit, Dipstick/ Tubes (Includes 3)
3	KH-24-038-10-S	Dipstick
4	KH-24-043-12	Kit, Governor Gear w/Pin (Incl 5)
5	KH-12-380-01	Pin, Governor Regulating
6	KH-24-448-02-S	Tab, Locking
7	KH-12-144-02-S	Shaft, Governor Gear
8	KH-25-032-06-S	Seal, Oil
9	KH-25-139-60-S	Plug, Ctsk Pipe, 1/8"
10	KH-24-153-08	O-Ring

Ref No.	Part Number	Description
11	KH-24-393-51-S	Kit, Oil Pump Ass'y (Incl 12, 13)
12	KH-24-153-01	O-Ring, Oil Pick-up
13	KH-24-381-04	Pick-up, Oil
14	KH-M-631005	Washer, Flat 6 mm
15	KH-M-645025-S	Screw, Flg Thd Frm M6x1.0x25
16	KH-12-050-01-S	Filter, Oil
17	KH-24-136-01	Nipple, Oil Filter
18	KH-24-086-17-S	Screw, Flg M8 x 1.25 x 45
19	KH-25-099-27-S	Switch, Oil Pressure

Head/ Valve/ Breather


Ref No.	Part Number	Description
1	KH-M-651050-S	Screw, Flg, M6 x 1.0 x 50
2	KH-25-086-124-S	Screw, Flg, M6 x 1.0 x 25
3	KH-66-096-08-S	Kit, Rocker Cover (Oil Fill) (Incl 1,2,4-6)
4	KH-24-755-46	Kit, Oil Fill Cap (Yellow) (Incl 5)
5	KH-24-153-01	O-Ring, Oil Pick-up
6	KH-66-041-09-S	Gasket, Valve Cover
7	KH-12-755-03	Kit, Retainer
8	KH-12-173-01	Cap, Valve Spring
9	KH-24-089-02	Spring, Valve
10	KH-66-018-02-S	Retainer
11	KH-24-100-10-S	Nut, Flg, M8 x 1.25
12	KH-220534	Washer, Flat, 5/16"
13	KH-66-032-05-S	Seal, Valve Stem
14	KH-66-318-27-S	Kit, Cylinder Head (#1 Side)
15	KH-66-841-01-S	"Kit, Cyl Head Gasket (#1 Side) (Includes 11 [Qty 4], 12 [Qty 4], 24 041 49-S & 66 041 05-S)"
16	KH-24-016-01	Valve, Exhaust (Std)
	KH-24-016-02	Valve, Exhaust (.25)
17	KH-24-017-01	Valve, Intake (Std)
	KH-24-017-02	Valve, Intake (.25)
18	KH-66-072-03-S	Stud
19	KH-12-445-05	Strap, Lifting
20	KH-X-22-11	Washer, Int Tooth Lock 1/4"

Ref No.	Part Number	Description
21	KH-M-645016-S	Screw, Flg Thd Frm M6x1.0x16
22	KH-25-351-04-S	Kit, Hyd VI Lft (Incl 25 357 14-S)
23	KH-24-755-66	Kit, Valve Train (Incl 24, 27, 29)
24	KH-24-411-05	Rod, Push
25	KH-66-841-04-S	"Kit, Cyl Head Gasket (#2 Side) (Includes 11 [Qty 4], 12 [Qty 4], 24 041 49-S & 66 041 05-S)"
26	KH-66-318-30-S	Kit, Cylinder Head (#2 Side)
27	KH-25-186-01	Arm, Rocker
28	KH-25-139-62-S	Plug, Pipe Ctsk, 3/8"
29	KH-24-599-02-S	Pivot, Rocker Arm
30	KH-66-086-07-S	Screw, Rocker Arm Pivot
31	KH-66-096-11-S	Kit, Rocker Cover (Includes 6)
32	KH-24-402-03	Reed, Breather
33	KH-66-018 04-S	Retainer, Reed
34	KH-M-545010-S	Screw, Flg Thd Frm, M5x.8x10
35	KH-24-050-11-S	Filter, Breather
36	KH-24-041-51-S	Gasket, Breather
37	KH-24-096-86-S	Cover, Breather
38	KH-M-645020-S	Screw, Flg Thd Frm, M6x1.0x20
39	KH-25-237-08-S	Clamp, Band Spring Hose
40	KH-66-326-34-S	Hose Assembly, Breather
—	KH-24-041-49-S	Gasket, Exhaust
—	KH-66-041-05-S	Gasket, Intake Manifold
—	KH-25-357-14-S	Lubricant, Camshaft


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler EFI Engine - Ignition/ Electrical & Starting System

IGNITION/ELECTRICAL

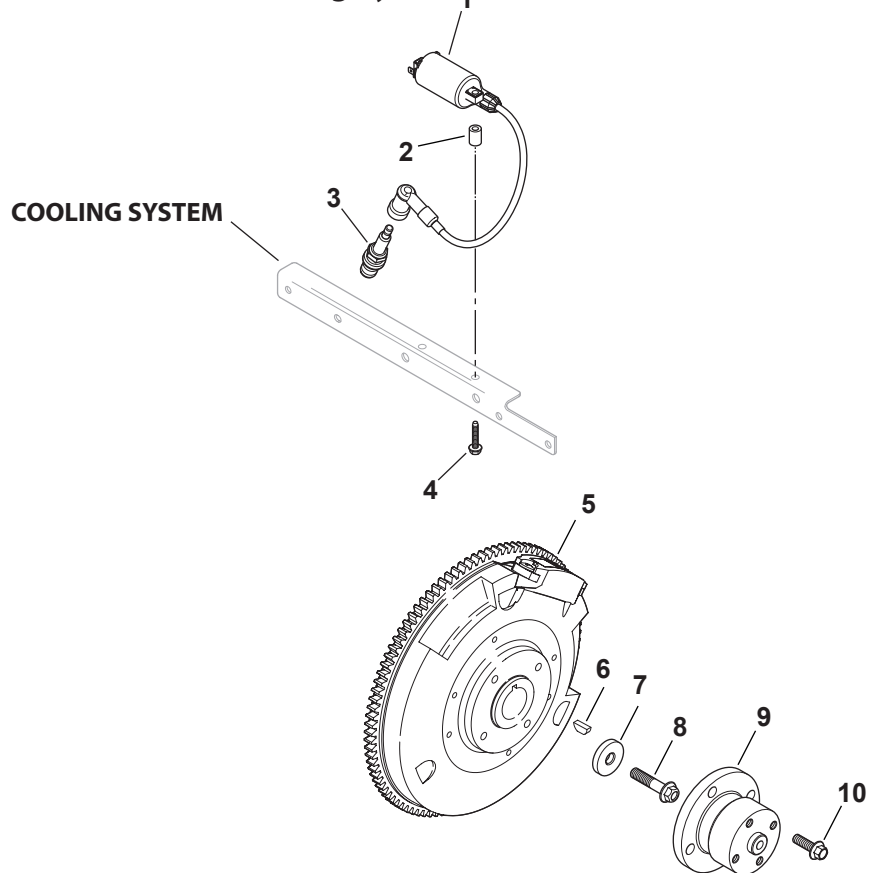

STARTING SYSTEM

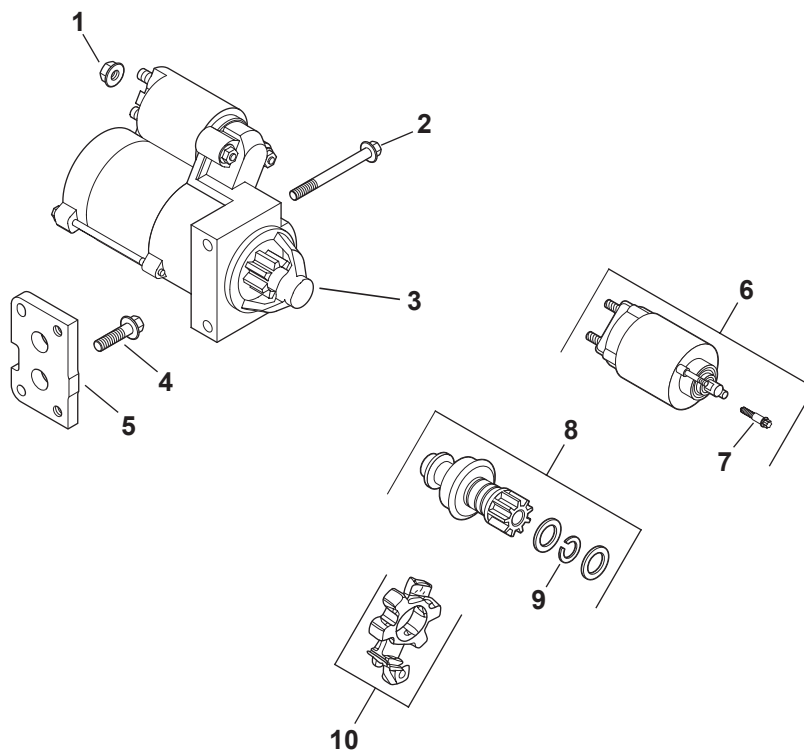

Ignition/ Electrical

Ref No.	Part Number	Description
1	KH-24-519-02-S	Coil, Ignition
2	KH-12-112-18-S	Spacer
3	KH-66-132-01-S	Spark Plug
4	KH-M-670045-S	Screw, Thrd Frm, M6 x 1.0 x 45
5	KH-24-025-23-S	Kit, Flywheel
6	KH-X-42-15	Key, 3/16" x 5/8"
7	KH-12-468-03	Washer, Flat, 13/32"
8	KH-12-086-14	Screw, Flg, M10 x 1.5 x 45
9	KH-66-144-04-S	Shaft, Front Drive
10	KH-M-839025-S	Screw, Flg, M8 x 1.25 x 25
—	KH-M-561016-S†	Screw, Flg Thd Frm, M5x.8x16
—	KH-X-22-5-S†	Washer, Int Tooth Lock, 5/16"
—	KH-M-645020-S†	Screw, Flg Thd Frm, M6x1.0x20
—	KH-25-454-07-S†	Tie
—	KH-M-645025-S†	Screw, Flg Thd Frm, M6x1.0x25

† Not Shown


Starting System

Ref No.	Part Number	Description
1	KH-M-841080	Nut, Flg, M8 x 1.25
2	KH-M-839080-S	Screw, Flg, M8 x 1.25 x 80
3	KH-25-098-11-S	Starter Ass'y, Solenoid Shift (Includes 6-10)
4	KH-M-851030-S	Screw, Flg, M8 x 1.25 x 30
5	KH-66-146-54-S	Plate, Starter
6	KH-25-435-06-S	Kit, Solenoid (Includes 7)
7	KH-25-086-113-S	Screw, External Torx Head
8	KH-25-755-33-S	Kit, Starter Pinion (Includes 9)
9	KH-25-141-05-S	Ring
10	KH-25-221-01-S	Brush, Holder

NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler EFI Engine - Fuel System

FUEL SYSTEM

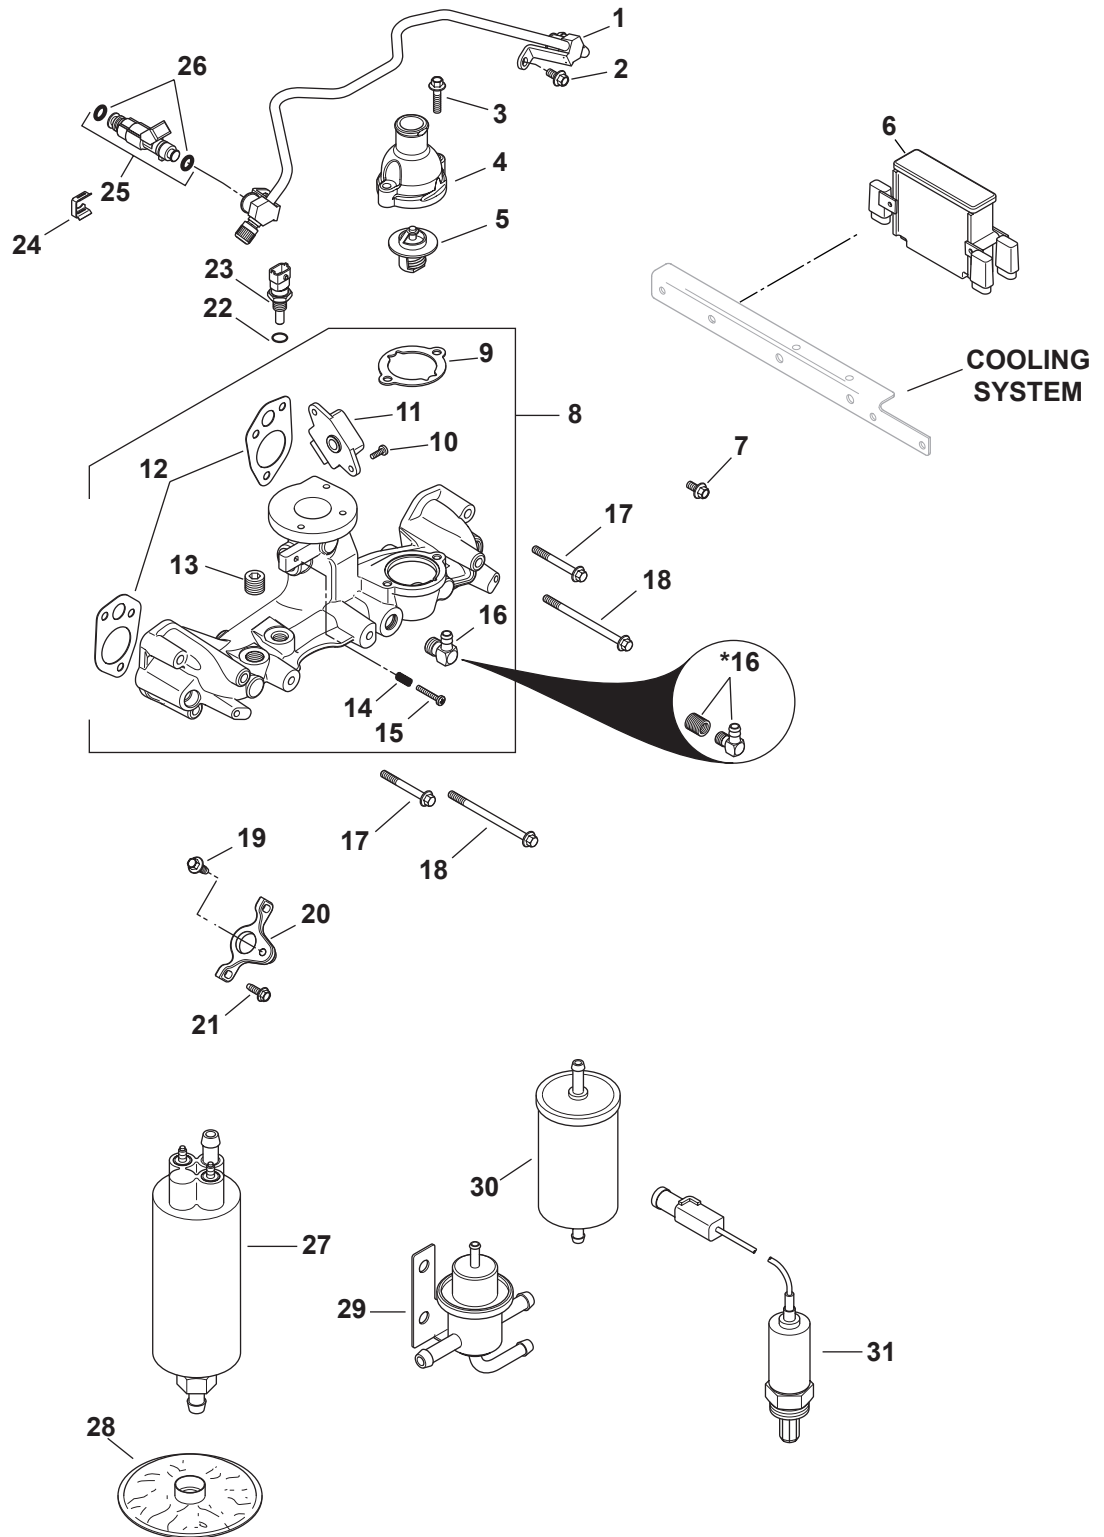

Fuel System


Ref No.	Part Number	Description
1	KH-66-399-02-S	Rail, Fuel
2	KH-M-651012-S	Screw, Flg, M6 x 1.0 x 12
3	KH-25-086-124-S	Screw, Flg, M6 x 1.0 x 25
4	KH-66-081-01-S	Housing, Thermostat
5	KH-66-453-01-S	Kit, Thermostat
6	KH-66-584-05-S	Module, Engine Mngmnt. (ECU)
7	KH-M-650012-S	Screw, Flg, M6 x 1.0 x 12
8	KH-66-164-22-S	Kit, EFI Intake Mnfld (Incl 9-15)
9	KH-66-041-01-S	Gasket, Thermostat
10	KH-M-442012-S	Screw, Phl Pan, M4x0.7x12
11	KH-24-418-06-S	Kit, Throttle Position Sensor
12	KH-66-041-05-S	Gasket, Intake Manifold
13	KH-25-139-62-S	Plug, Pipe Ctsk, 3/8"
14	KH-12-089-11	Spring, Speed Control (Short)
15	KH-M-442025-S	Screw, Phl Pan M4 x 0.7 x 25
16	KH-66-155-02-S	Connector, Hose
17	KH-M-651050-S	Screw, Flg M6 x 1.0 x 50
18	KH-M-651090-S	Screw, Flg M6 x 1.0 x 90
19	KH-24-086-42-S	Screw, Flg Thd Frm M6x1.0x16
20	KH-24-126-131-S	Bracket, Speed Sensor
21	KH-M-545016-S	Screw, Flg Thd Frm M5x0.8x16
22	KH-12-153-04	O-Ring
23	KH-24-418-12-S	Sensor, Temperature
24	KH-24-154-05-S	Clip, Fuel Injector
25	KH-24-331-02-S	Injector, Fuel (Includes 26)
26	KH-24-153-26-S	O-Ring
27	KH-24-393-52-S	Pump Ass'y, Fuel
28	KH-24-050-06-S	Filter, Fuel Strainer
29	KH-24-403-16-S	Regulator Ass'y, Fuel Pressure
30	KH-24-050-03-S	Filter, Fuel
31	KH-24-418-05-S	Sensor, Oxygen
—	KH-25-454-07-St	Tie
—	KH-66-176-19-St	Harness, EFI Wiring
—	KH-25-454-07-St	Tie
—	KH-25-454-05-St	Tie

† Not Shown


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler EFI Engine - Engine Controls, Air Intake/ Filtration & Exhaust


ENGINE CONTROLS

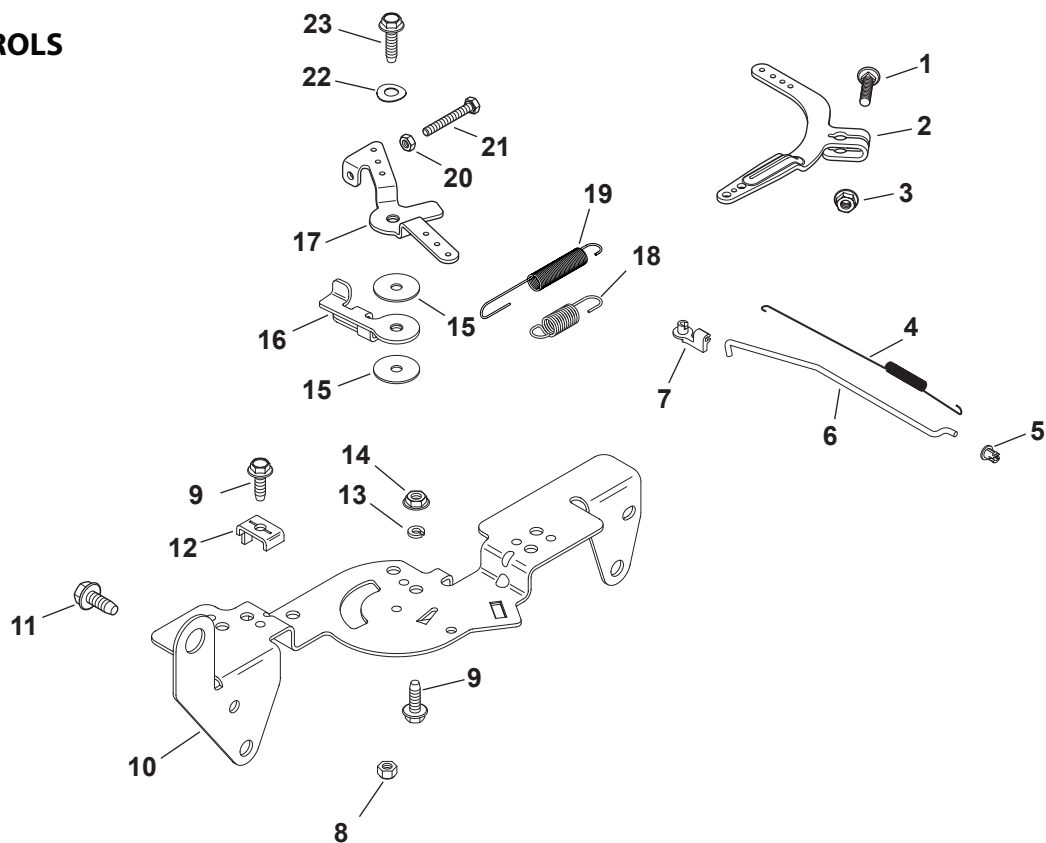


AIR INTAKE/FILTRATION

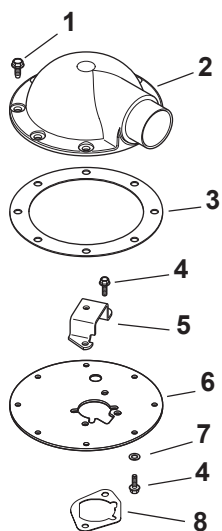

EXHAUST

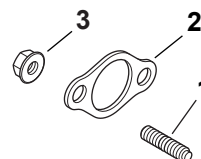

FUEL SYSTEM

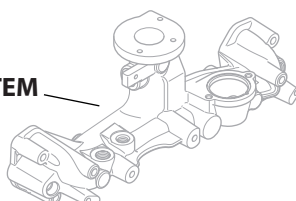

Engine Controls

Ref No.	Part Number	Description
1	KH-24-211-03-S	Bolt, Rd Hd Sq Neck, M6x1.0x25
2	KH-24-090-51-S	Lever, Governor
3	KH-M-641060-S	Nut, Flg, M6 x 1.0
4	KH-24-089-01	Spring, Linkage
5	KH-25-158-08	Bushing, Linkage Retaining
6	KH-24-079-01	Linkage, Throttle
7	KH-25-158-11	Bushing, Throttle Linkage
8	KH-M-547050-S	Nut, Lock M5 x .8
9	KH-M-545016-S	Screw, Flg Thd Frm M5x0.8x16
10	KH-24-126-56	Bracket, Control
11	KH-M-645016-S	Screw, Flg Thd Frm M6x1.0x16
12	KH-12-237-01	Clamp, Cable

Ref No.	Part Number	Description
13	KH-X-20-1	Washer, Spring Lock, 1/4"
14	KH-M-541050-S	Nut, Flg, M5 x .8
15	KH-24-468-01	Washer, Flat, 5.5 mm
16	KH-24-090-07	Lever, Throttle Actuator
17	KH-24-090-13	Lever, Throttle Control
18	KH-24-089-49-S	Spring, Governor
19	KH-24-089-51-S	Spring, Throttle Limiter
20	KH-M-446030-S	Nut, M4 x 0.7
21	KH-M-401030	Screw, Cap, M4 x .7 x 30
22	KH-41-468-03	Washer, Spring, 1/4"
23	KH-M-545020-S	Screw, Flg Thd Frm, M5 x .8 x 20

Air Intake/ Filtration

Ref No.	Part Number	Description
1	KH-M-645016-S	Screw, Flg Thd Frm, M6x1.0x16
2	KH-24-029-28-S	Adapter, Air Intake
3	KH-24-041-38-S	Gasket, Air Cleaner Adapter
4	KH-M-551016-S	Screw, Hvy Flg, M5 x .8 x 16
5	KH-24-126-143-S	Bracket, Air Cleaner
6	KH-24-029-35-S	Adapter, Plate
7	KH-X-25-12	Washer
8	KH-24-041-14	Gasket, Air Cleaner Base

Exhaust


Ref No.	Part Number	Description
1	KH-25-072-14-S	Stud, M8 x 1.25 x 33
2	KH-24-041-49-S	Gasket, Exhaust
3	KH-M-841080	Nut, Flg, M8 x 1.25
—	KH-25-454-05-S†	Tie

† Not Shown


NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

Kohler EFI Engine - Cooling System & Decals

COOLING SYSTEM

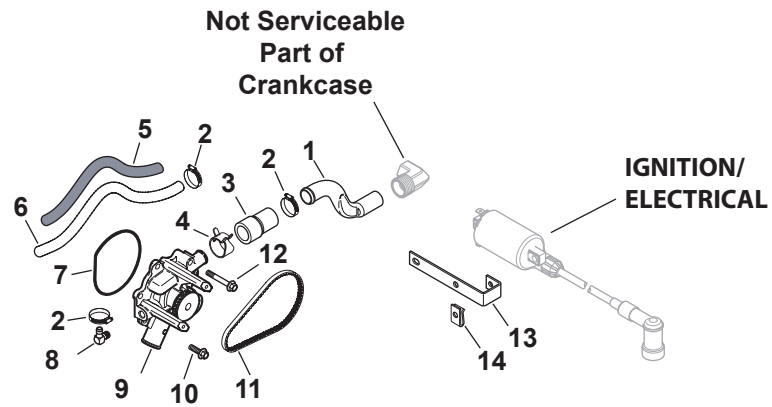

DECALS

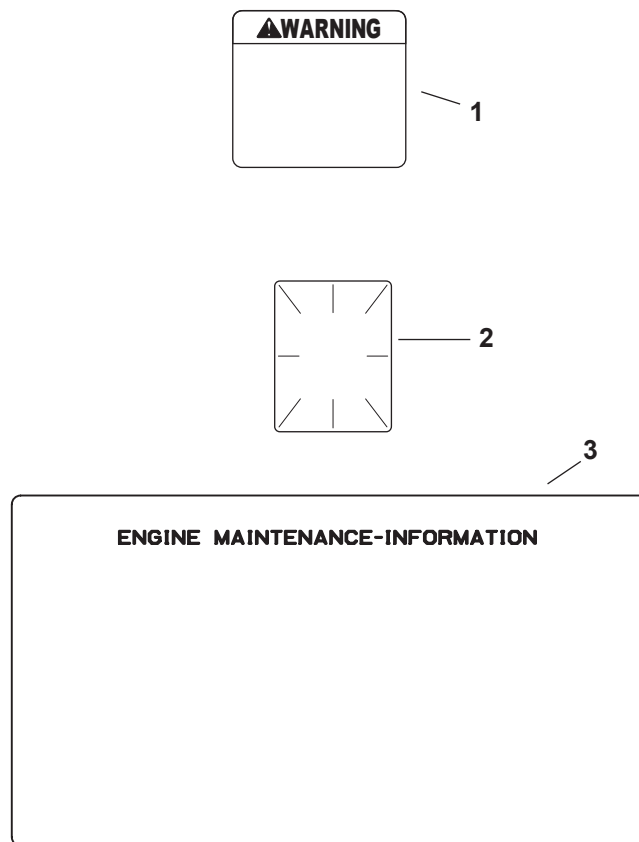

Artwork is representative.
Actual decals may differ depending on model and specification number.

Cooling System

Ref No.	Part Number	Description
1	KH-66-126-63-S	Tube, Crossover
2	KH-25-237-12-S	Clamp, Hose
3	KH-66-123-01-S	Tube, Crossover
4	KH-66-237-07-S	Clamp
5	KH-24-431-02-S	Sleeve, Insulating 14"
6	KH-66-326-24-S	Hose, By-pass
7	KH-66-153-01-S	O-Ring
8	KH-45-155-01-S	Connector
9	KH-66-393-01-S	Pump, Water
10	KH-M-651020-S	Screw, Flg, M6 x 1.0 x 20
11	KH-66-203-01-S	Belt, Water Pump
12	KH-M-651040-S	Screw, Flg, M6 x 1.0 x 40
13	KH-66-126-63-S	Bracket, Ignition Coil (EFI)
14	KH-66-154-05-S	Clip
—	KH-25-454-03-St	Tie, Wire


† Not Shown

Decals

Ref No.	Part Number	Description
1	KH-24-113-78-S	Decal, Warning
2	KH-25-113-39-S	Decal, Clear Laminate
3	KH-24-113-14	Decal, Engine Maint.

NOTE: Engine features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


Yanmar Engine - Cylinder Block (Figure 1)

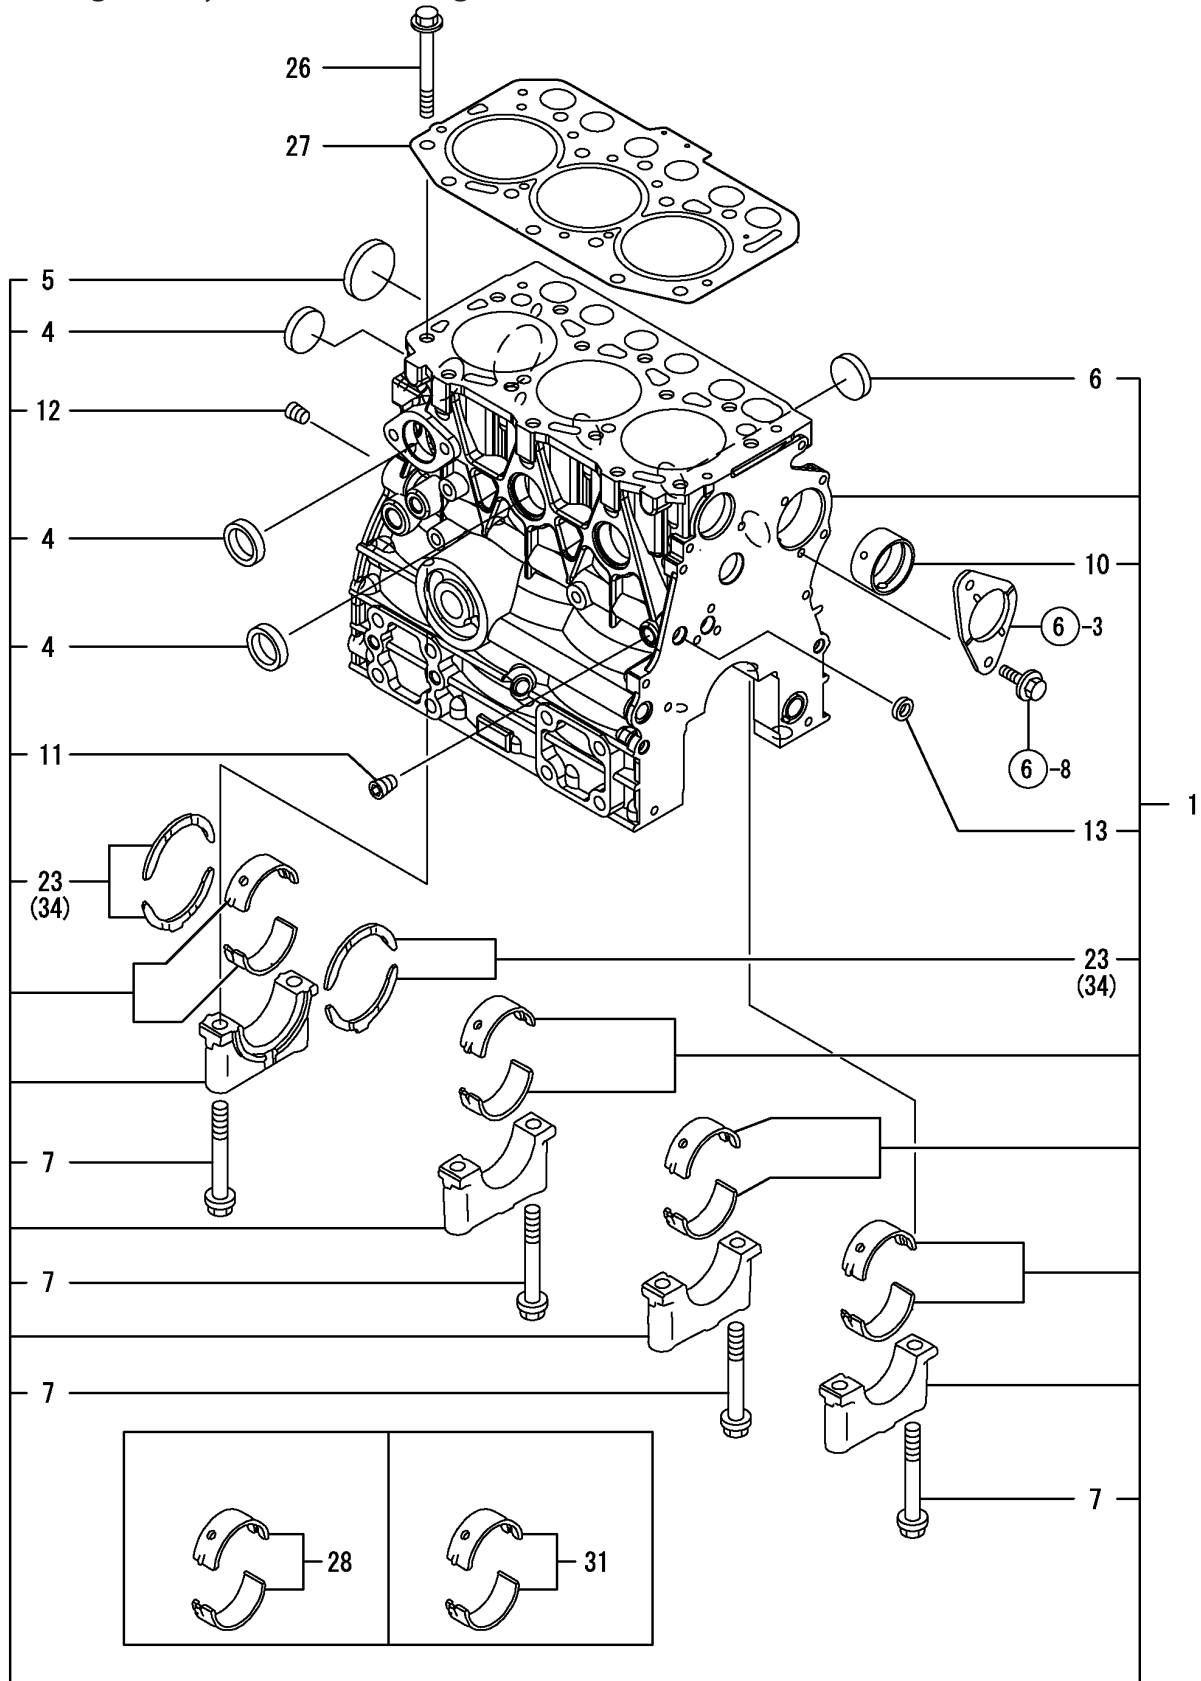

Cylinder Block

Ref No.	Part Number	Description
1	YA-719515-01560	Block Assembly, Cylinder
4	YA-105311-01090	Plug 30
5	YA-119623-01250	Plug 45
6	YA-119285-01990	Plug 25
7	YA-119620-02020	Bolt
10	YA-119717-02411	Bush, Camshaft
11	YA-124060-01050	Plug Pt, 1/8
12	YA-124160-01910	Plug Pt, 1/4
13	YA-27241-120000	Plug 12
23	YA-119717-02930	Bearing, Thrust
26	YA-119515-01200	Bolt, Cylinder Head
27	YA-119515-01330	Gasket, Cylinder Head
28	YA-719717-02901	Main Bearing Set
31	YA-719717-02911	Main Metal
34	YA-119810-02941	Bearing, Thrust


Yanmar Engine - Gear Housing (Figure 2)

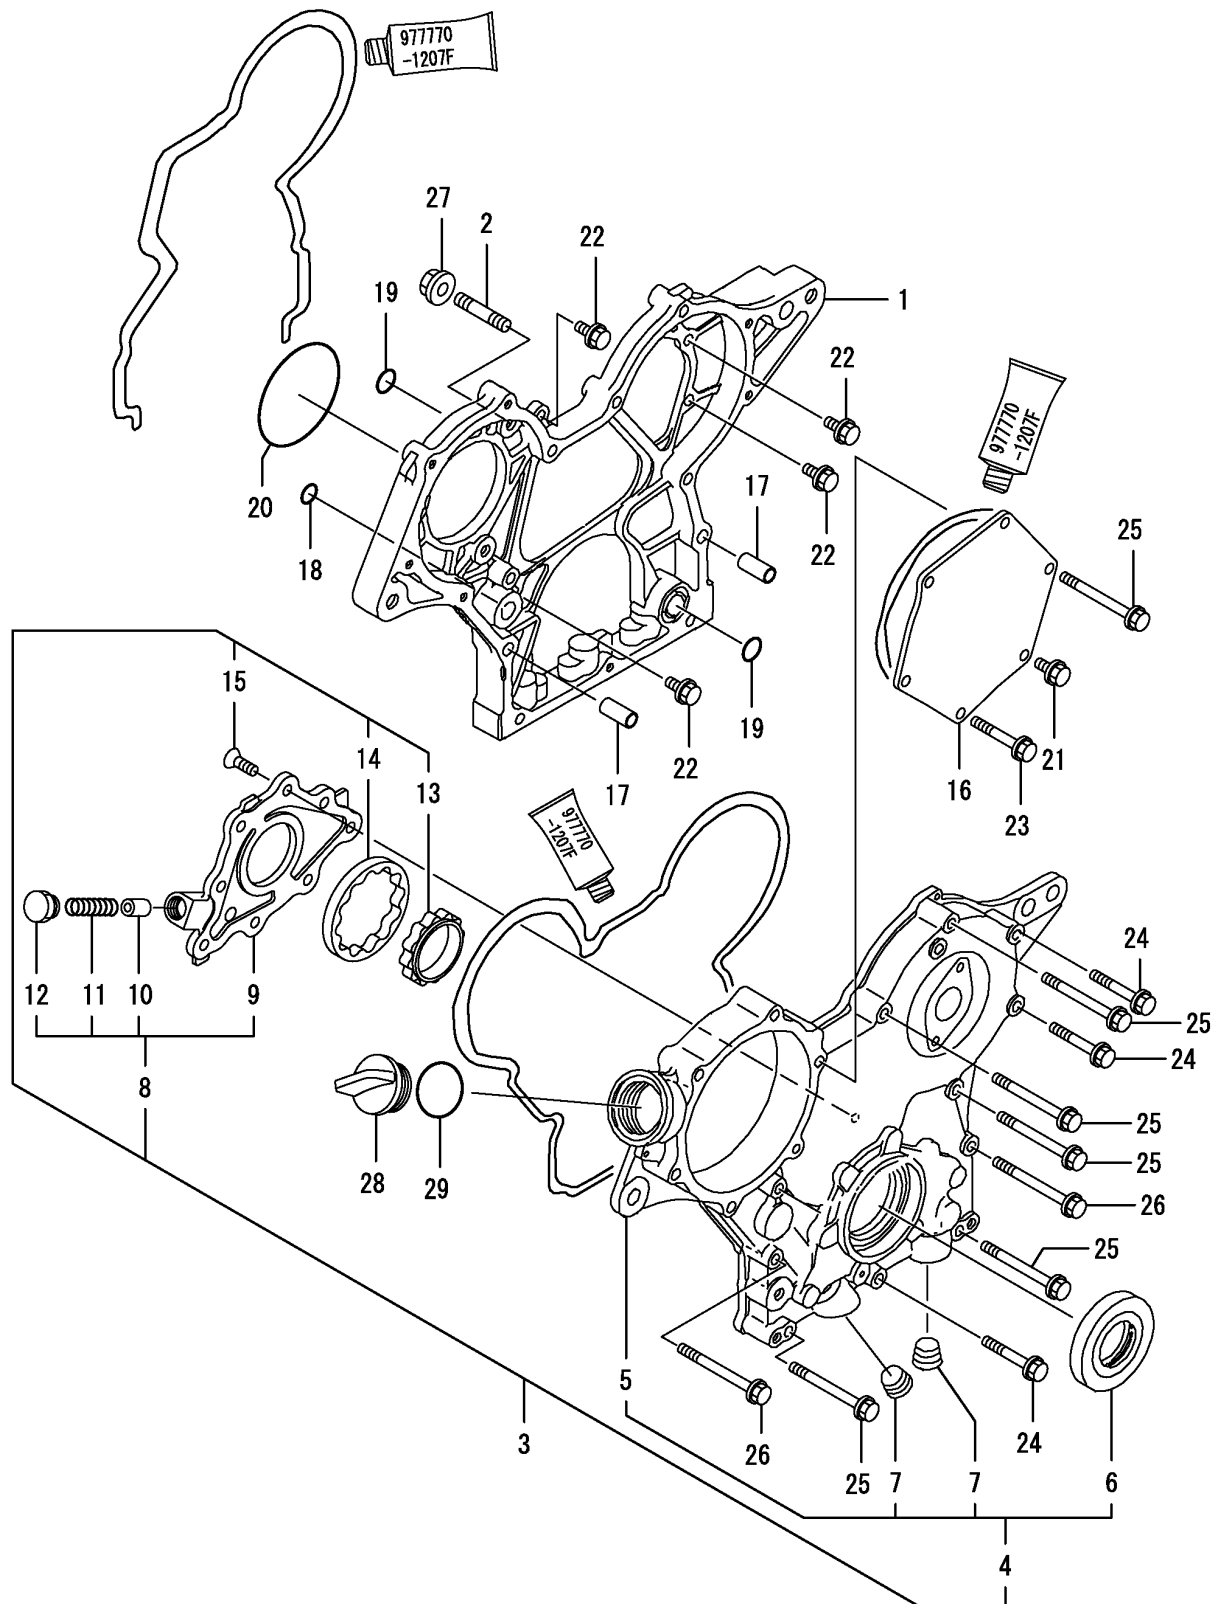

Gear Housing

Ref No.	Part Number	Description
1	YA-119717-01501	Case, Gear
2	YA-119717-01570	Bolt, Stud M8
3	YA-119734-01590	Cover Assembly, Gear Case
4	YA-719734-01500	Cover Assembly, Gear Case
5	N/A - order Ref. #4	Cover, Gear Case
6	YA-119717-01800	Seal, Oil
7	YA-23876-030000	Plug Pt, 3/8, Screw
8	YA-119717-32100	Cover Assembly, Pump
9	N/A - order Ref. #8	Cover, Lub. Oil Pump
10	YA-129900-32130	Valve, Relief
11	YA-129001-32320	Spring
12	YA-129001-32330	Plug
13	YA-119717-32110	Rotor, Inner
14	YA-119717-32120	Rotor, Outer
15	YA-119802-32130	Screw, M6 x 16
16	YA-119717-01750	Cover, Pump Timing
17	YA-119660-01911	Pipe, Knock
18	YA-119624-32040	O-Ring P 12.0
19	YA-119717-32050	O-Ring P 17.0
20	YA-121850-51960	O-Ring, F.I. Pump
21	YA-26106-060122	Bolt M 6 x 12 Plated
22	YA-26106-060162	Bolt M 6 x 16 Plated
23	YA-26106-060402	Bolt M 6 x 40 Plated
24	YA-26106-060402	Bolt M 6 x 40 Plated
25	YA-26106-060602	Bolt M 6 x 60 Plated
26	YA-26106-060652	Bolt M 6 x 65 Plated
27	YA-26306-080002	Nut
28	YA-124160-01751	Cover, Filler
29	YA-24311-000320	O-Ring 1A P-32.0


Yanmar Engine - Mounting Flange & Oil Sump (Figure 3)

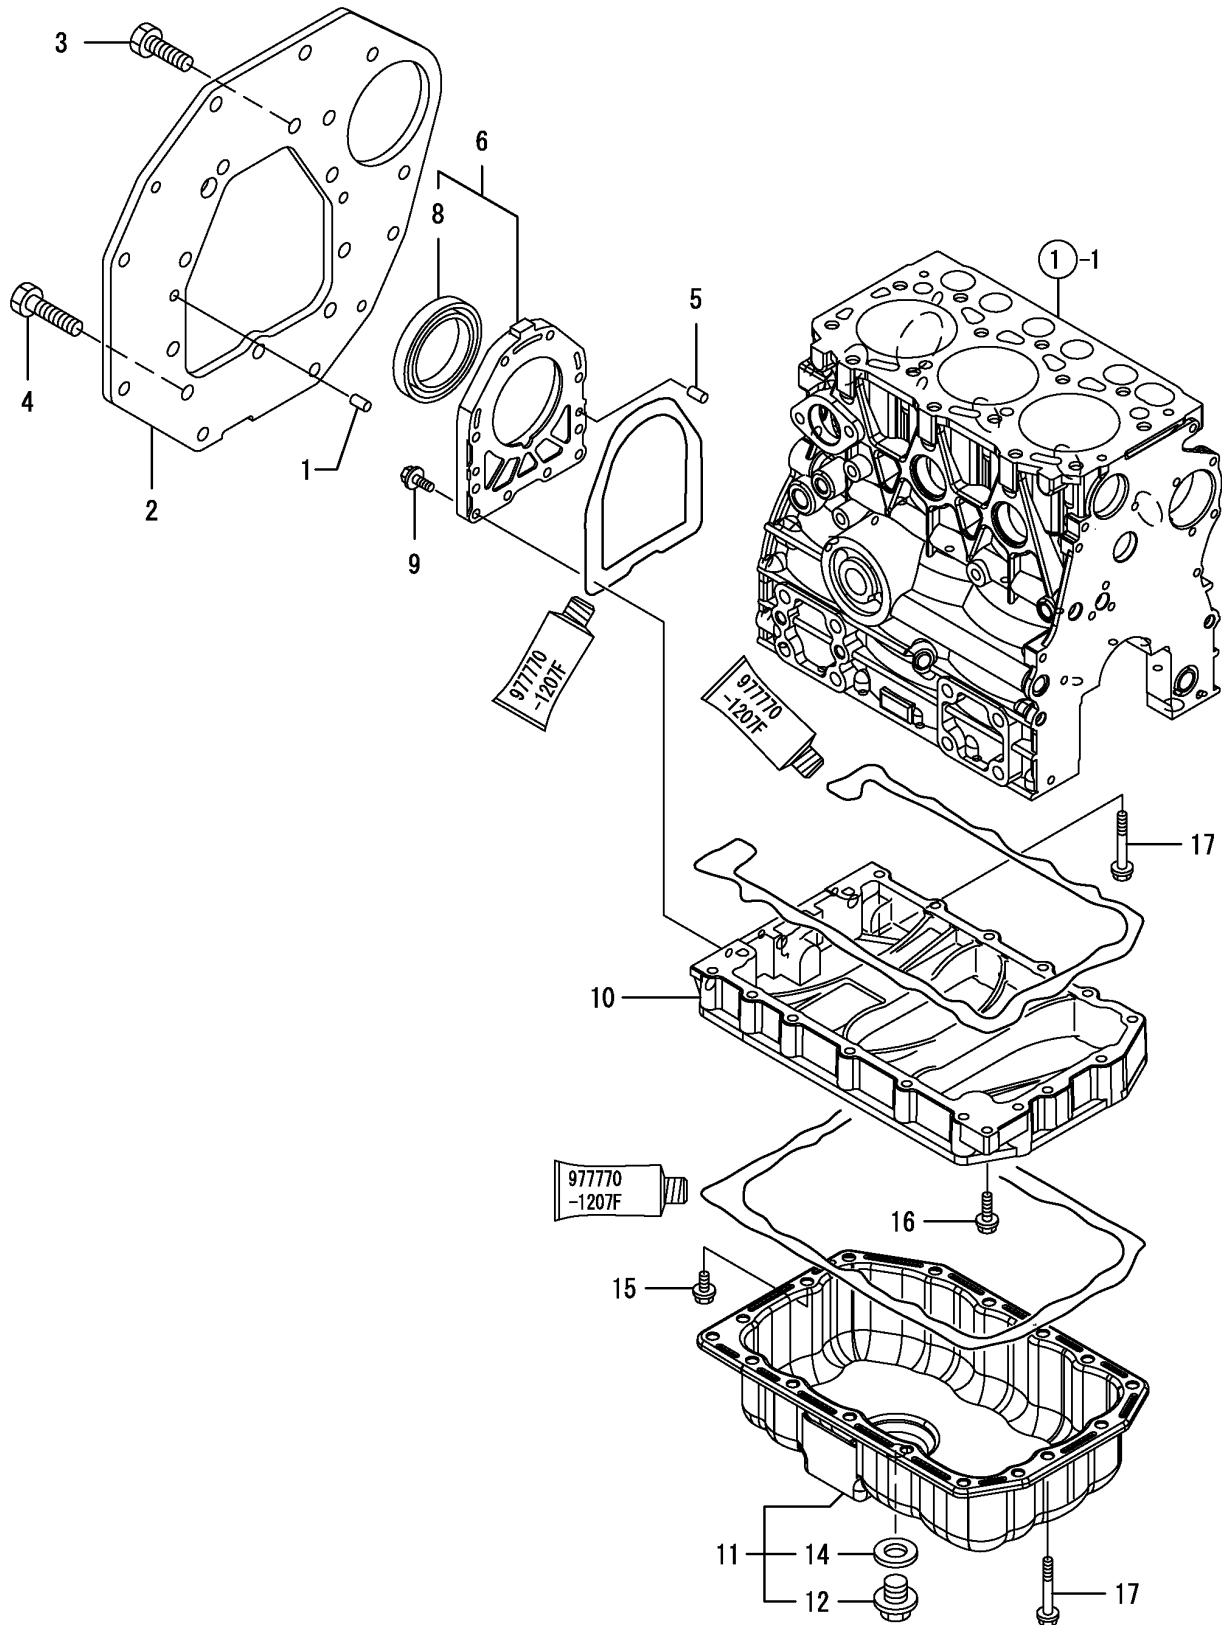

Mounting Flange & Oil Sump

Ref No.	Part Number	Description
1	YA-129100-01580	Parallel Pin, 8 x 16
2	YA-119415-01600	Flange, Mounting
3	YA-26206-100202	Bolt, M10 x 20
4	YA-26206-100252	Bolt, M10 x 25
5	YA-119620-01620	Parallel Pin, 6 x 10
6	YA-119527-01640	Case Assembly, Oil Seal
8	YA-124085-02220	Seal, Oil
9	YA-26106-060222	Bolt, M 6 x 22 Plated
10	YA-119515-01720	Spacer, Oil Sump
11	YA-119540-01770	Sump Assembly, Lub. Oil
12	YA-105425-01690	Plug, M16
14	YA-22190-160002	Seal, Washer, 16S
15	YA-26106-060122	Bolt, M 6 x 12 Plated
16	YA-26106-060252	Bolt, M 6 x 25 Plated
17	YA-26106-060452	Bolt, M 6 x 45 Plated

Yanmar Engine - Cylinder Head & Bonnet (Figure 4)

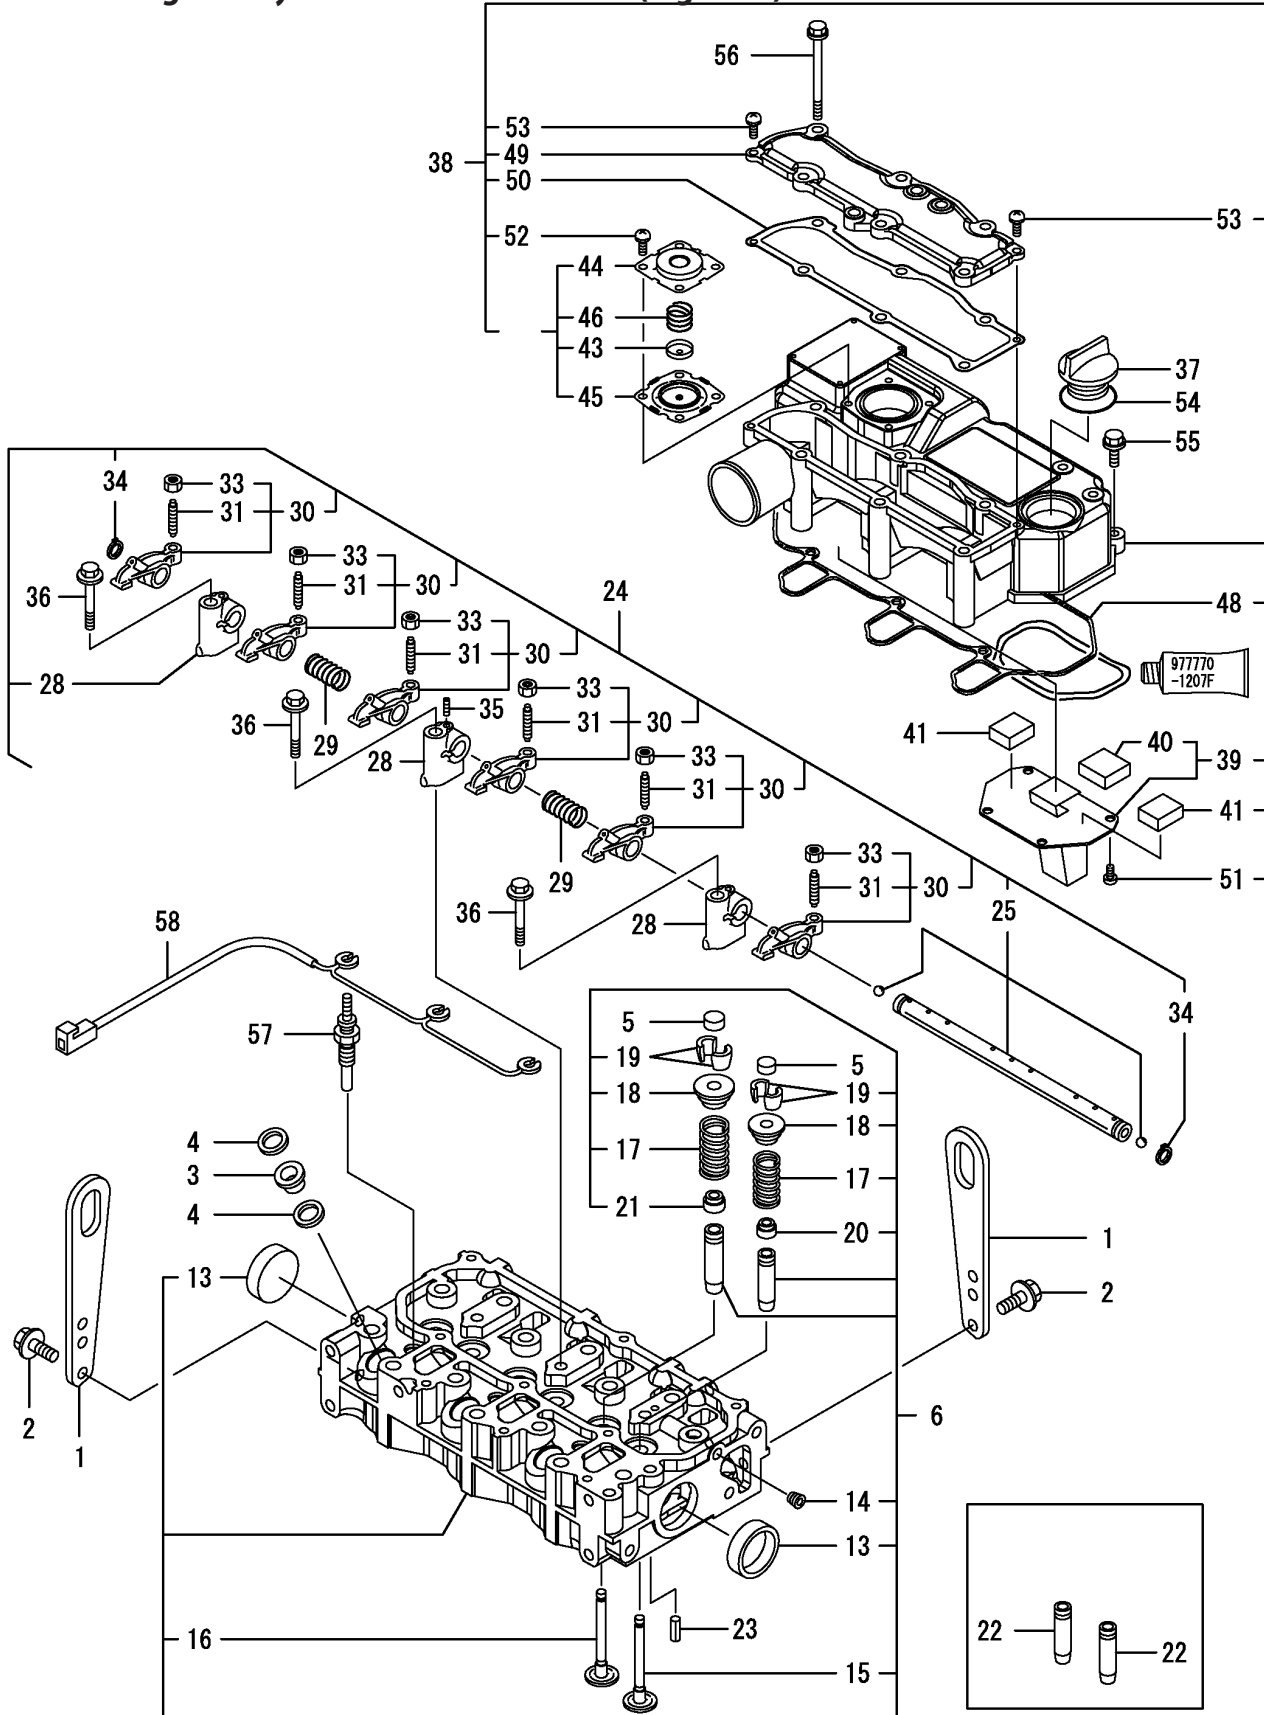


Cylinder Head & Bonnet

Ref No.	Part Number	Description
1	YA-129900-07900	Lifter, Engine
2	YA-26106-080162	Bolt, M 8 x 16 Plated
3	YA-129901-11450	Protector, Nozzle
4	YA-119600-11460	Gasket, Nozzle
5	YA-105010-11490	Cap, Valve
6	YA-119515-11750	Head Assembly, Cylinder
13	YA-119285-11990	Plug 35
14	YA-23876-005000	Plug Pt, 1/16, Screw
15	YA-119515-11101	Valve, Intake
16	YA-119515-11110	Valve, Exhaust
17	YA-119717-11131	Spring, Valve
18	YA-129508-11180	Retainer, Spring
19	YA-119717-11190	Cotter, Valve
20	YA-119717-11340	Seal, Valve Stem
21	YA-119717-11350	Seal, Valve Stem
22	YA-119515-11800	Guide, Valve
23	YA-22351-060012	Spring Pin, 6 x 12
24	YA-119515-11200	Support Assembly, Arm
25	YA-119515-11240	Shaft Assembly, Rocker
28	YA-119717-11260	Support, Rocker Arm
29	YA-119515-11280	Spring, Shaft
30	YA-119717-11650	Arm Assembly, Rocker
31	YA-129150-11230	Screw, Valve
33	YA-129150-11750	Nut, M8 x P1.0


Ref No.	Part Number	Description
34	YA-22242-000120	Circlip 12
35	YA-26979-050162	Screw, M 5 x 16
36	YA-26106-080402	Bolt, M8 x 40 Plated
37	YA-124160-01751	Cover, Filler
38	YA-119515-11380	Bonnet Assembly, Head
39	YA-119717-03031	Plate, Baffle
40	YA-119717-03070	Baffle, Breather
41	YA-119717-03070	Baffle, Breather
43	YA-119802-03110	Plate, Diaphragm
44	YA-119802-03121	Cover, Diaphragm
45	YA-119802-03131	Diaphragm
46	YA-119802-03141	Spring, Diaphragm
48	YA-119515-11310	Gasket, Bonnet
49	YA-119515-11320	Cover, Bonnet
50	YA-119515-11330	Gasket, Bonnet Cover
51	YA- 22857-500100	Screw, 5 x 10, Tapping
52	YA-22857-500100	Screw, 5 x 10, Tapping
53	YA-22857-500160	Screw, 5 x 16
54	YA-24311-000320	O-Ring, 1A P-32.0
55	YA-26106-060202	Bolt, M 6 x 20 Plated
56	YA-26106-060752	Bolt, M 6 x 75 Plated
57	YA-119717-77800	Plug, Glow
58	YA-119717-77820	Connector, Glow Plug

Yanmar Engine - Exhaust Manifold (Figure 5)

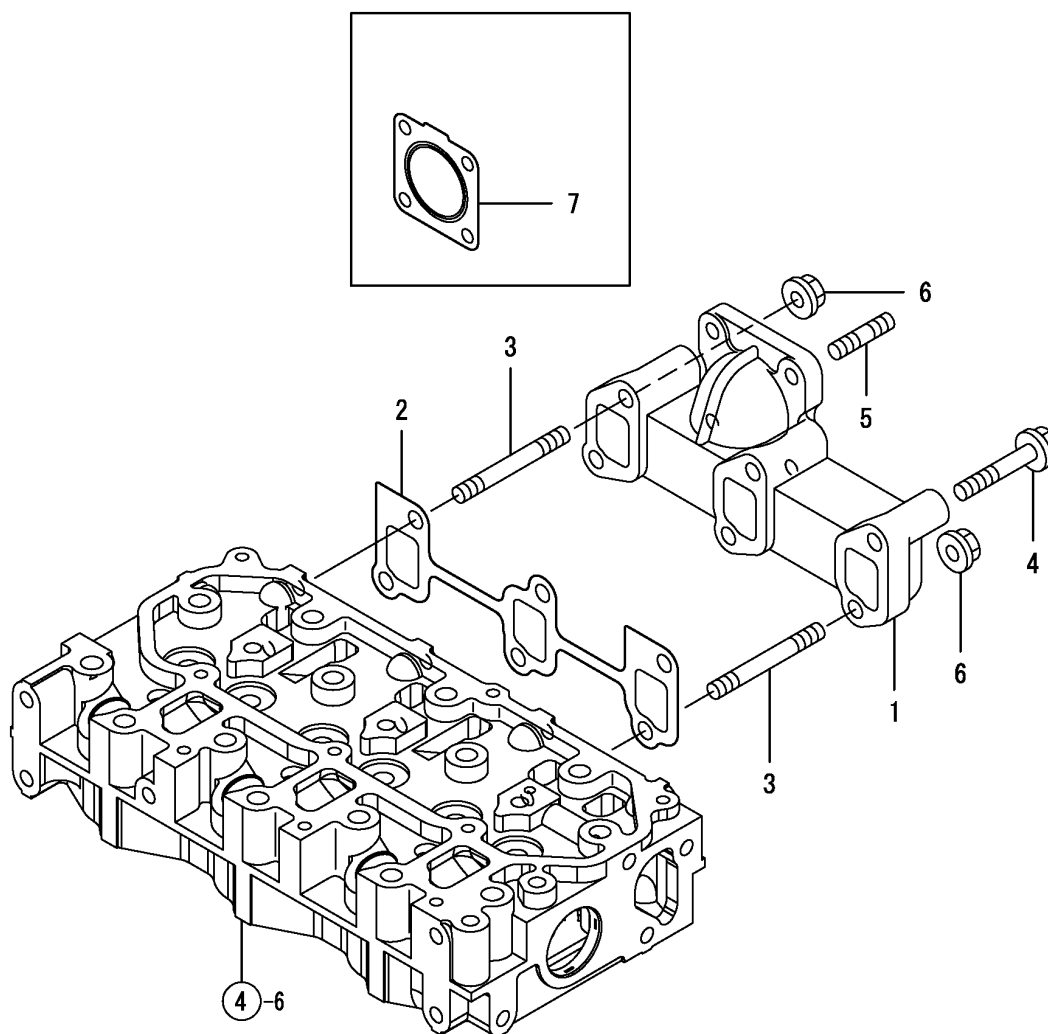

Ref No.	Part Number	Description
1	YA-119718-13100	Manifold, Exhaust
2	YA-119717-13110	Gasket, Manifold
3	YA-119717-13600	Stud, M8 x 50
4	YA-119802-13620	Bolt, M 8 x 50 Plated
5	YA-119131-18320	Bolt, M 8 x 22
6	YA-26306-080002	Nut
7	YA-119515-13200	Gasket, Silencer


Yanmar Engine - Camshaft & Driving Gear (Figure 6)

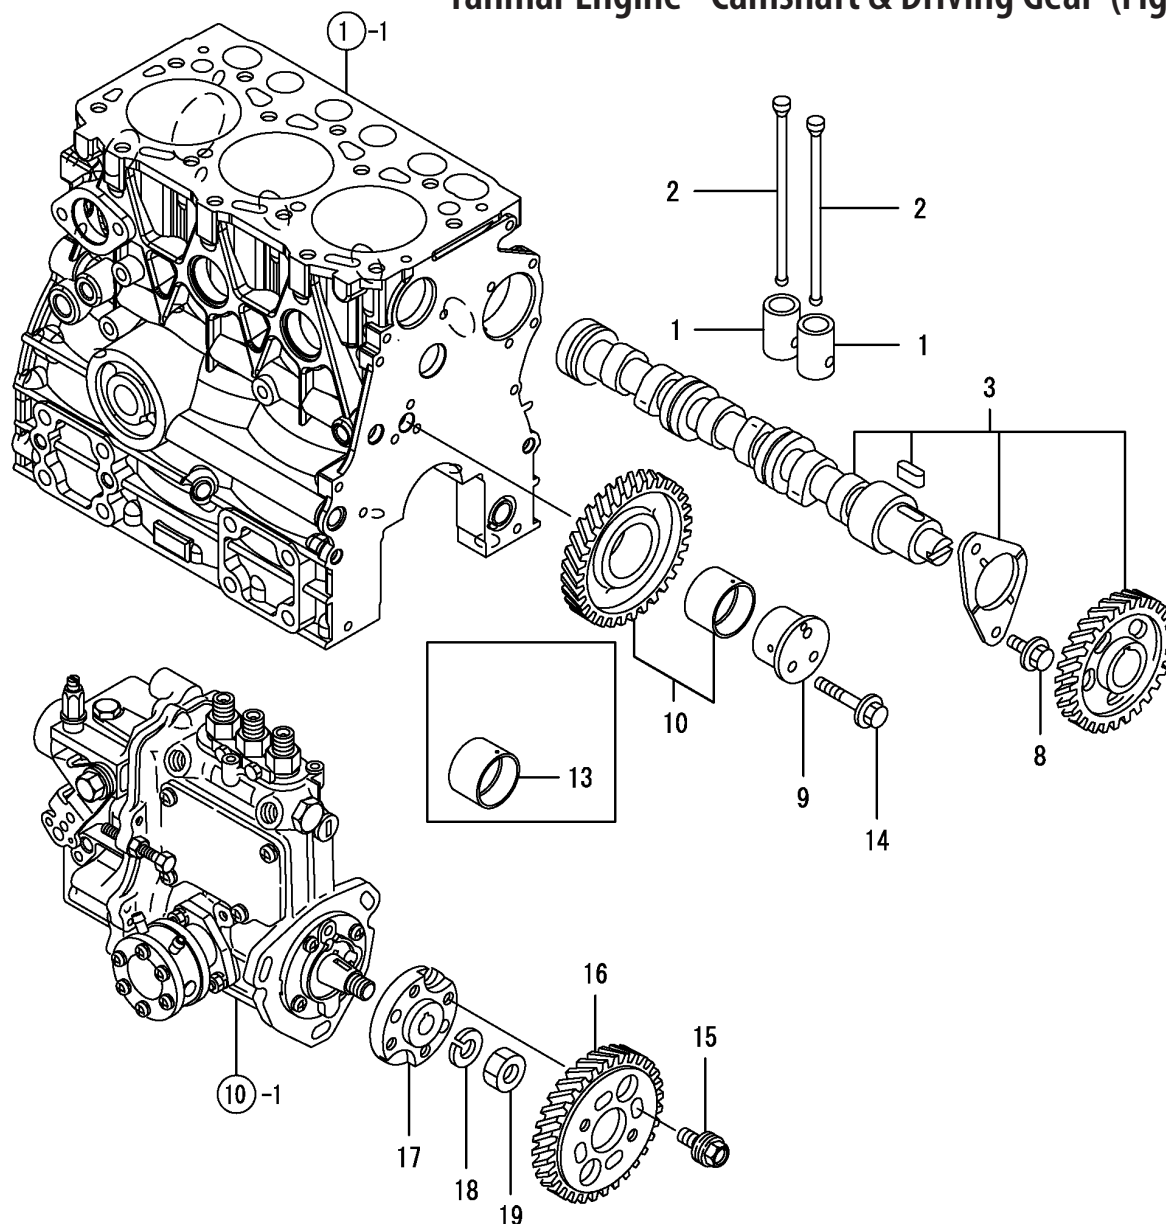

Ref No.	Part Number	Description
1	YA-119620-14200	Tappet
2	YA-119515-14400	Rod, Push
3	YA-119515-14581	Camshaft Assembly
8	YA-26106-060122	Bolt, M 6 x 12 Plated
9	YA-119717-25050	Shaft, Idle Gear
10	YA-119717-25101	Gear Assembly, Idle
13	YA-119717-25911	Bush, Idle Gear


Ref No.	Part Number	Description
14	YA-26106-060352	Bolt, M 6 x 35 Plated
15	YA-129150-25301	Bolt, FI-P
16	YA-119717-25930	Gear, Pump
17	YA-119717-51150	Flange
18	YA-22217-120000	Spring Washer 12
19	YA-26716-120002	Nut 12

Yanmar Engine - Crankshaft & Piston (Figure 7)

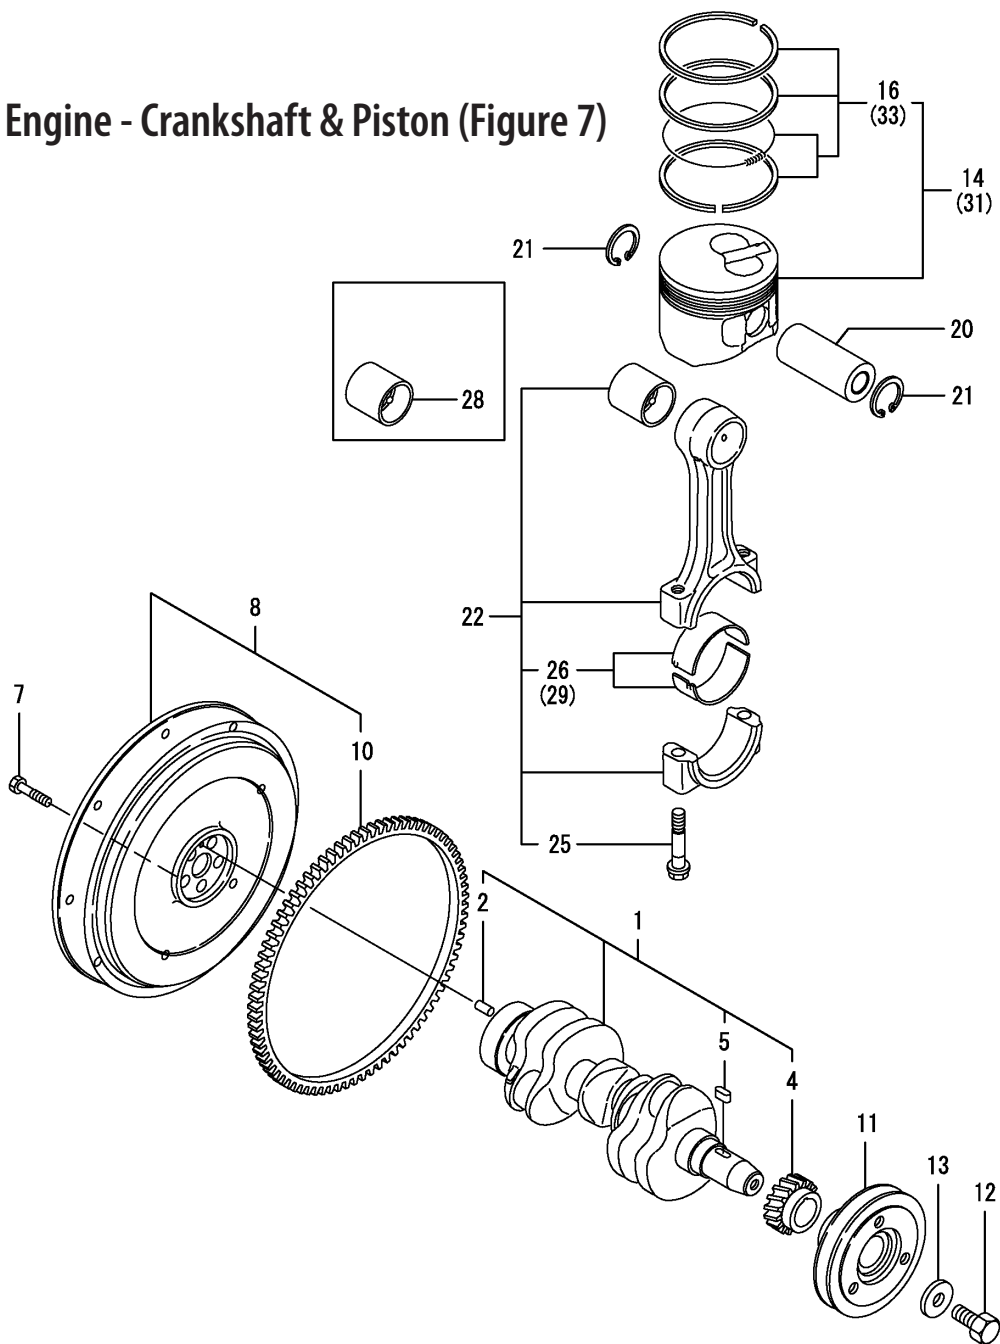

Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	YA-119515-21700	Crankshaft Assembly	16	YA-119515-22500	Ring Set
2	YA-129100-01580	Parallel Pin 8 x 16	20	YA-119515-22300	Pin, Piston
4	YA-119717-21200	Gear, Crankshaft	21	YA-22252-000220	Circlip 22
5	YA-22512-040120	Key, 4 x 12	22	YA-119515-23000	Rod Assembly, Connecting
7	YA-119620-21500	Bolt, Flywheel	25	YA-119717-23200	Bolt, Connecting Rod
8	YA-119515-21580	Flywheel Assembly	26	YA-119515-23601	Metal Assembly, Crank Pin
10	YA-124950-21600	Gear, Ring	28	YA-119717-23910	Bush, Piston Pin
11	YA-119717-21650	V-Pulley, Crankshaft	29	YA-119515-23611	Bearing, Pin
12	YA-119621-21680	Bolt M12 x 1.25, Flange	31	YA-119515-22900	Piston Assembly
13	YA-119620-21941	Washer	33	YA-119515-22550	Ring Set
14	YA-119515-22080	Piston Assembly			


Yanmar Engine - Lub. Oil System (Figure 8)

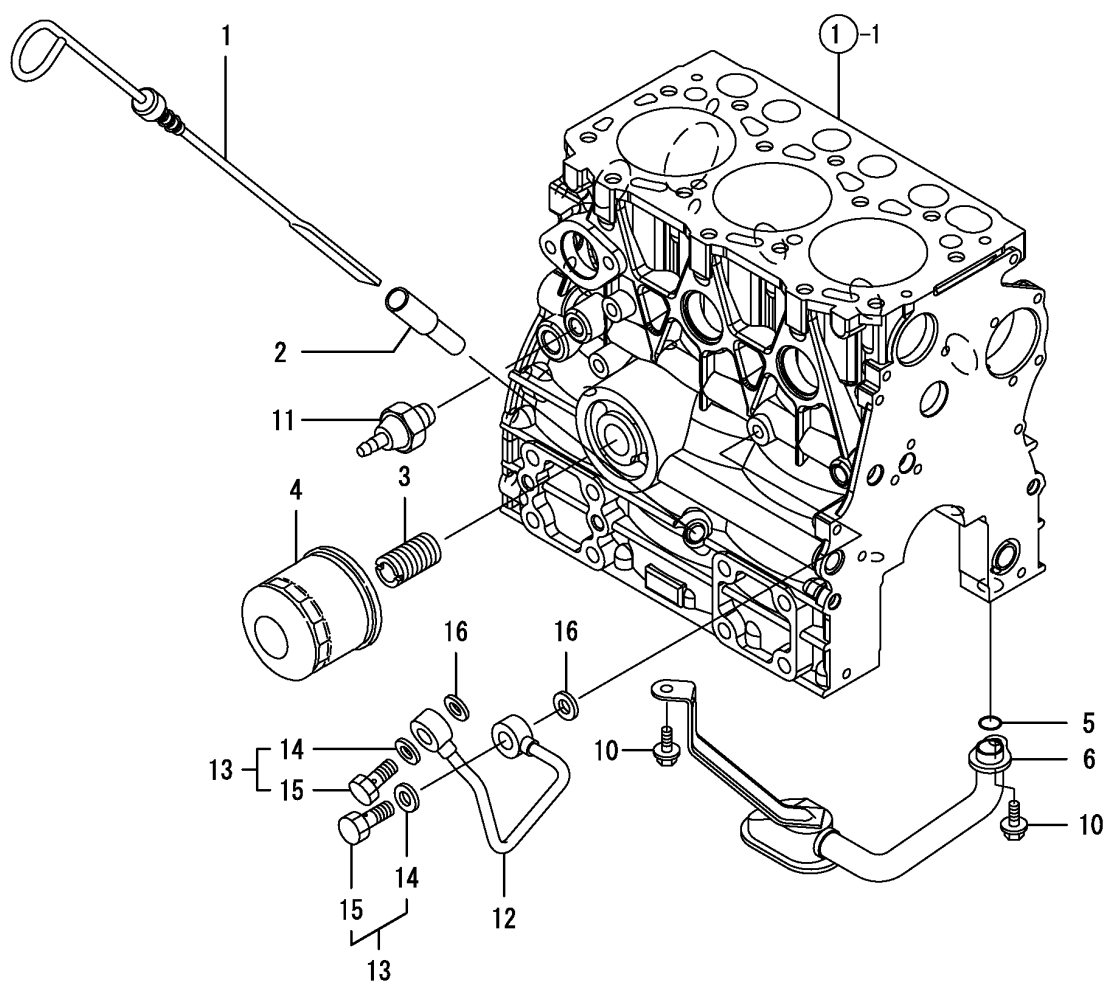

Ref No.	Part Number	Description
1	YA-119515-34801	Dipstick, Lub. Oil
2	YA-121520-34810	Guide, Dipstick
3	YA-129100-35140	Stud
4	YA-119305-35151	Filter Assembly, Lub. Oil
5	YA-119717-32060	O-Ring, P15.0
6	YA-119515-35080	Pipe Assembly, Lub. Oil
10	YA-26106-060102	Bolt, 6 x 10 Plated

Ref No.	Part Number	Description
11	YA-114250-39450	Switch
12	YA-119717-39210	Pipe Assembly, Hydraulic
13	YA-129005-59830	Bolt Assembly, Joint
14	YA-22190-080002	Seal Washer
15	YA-23857-030000	Joint Bolt
16	YA-22190-080002	Seal Washer

Yanmar Engine - Fuel Injection Valve (Figure 9)

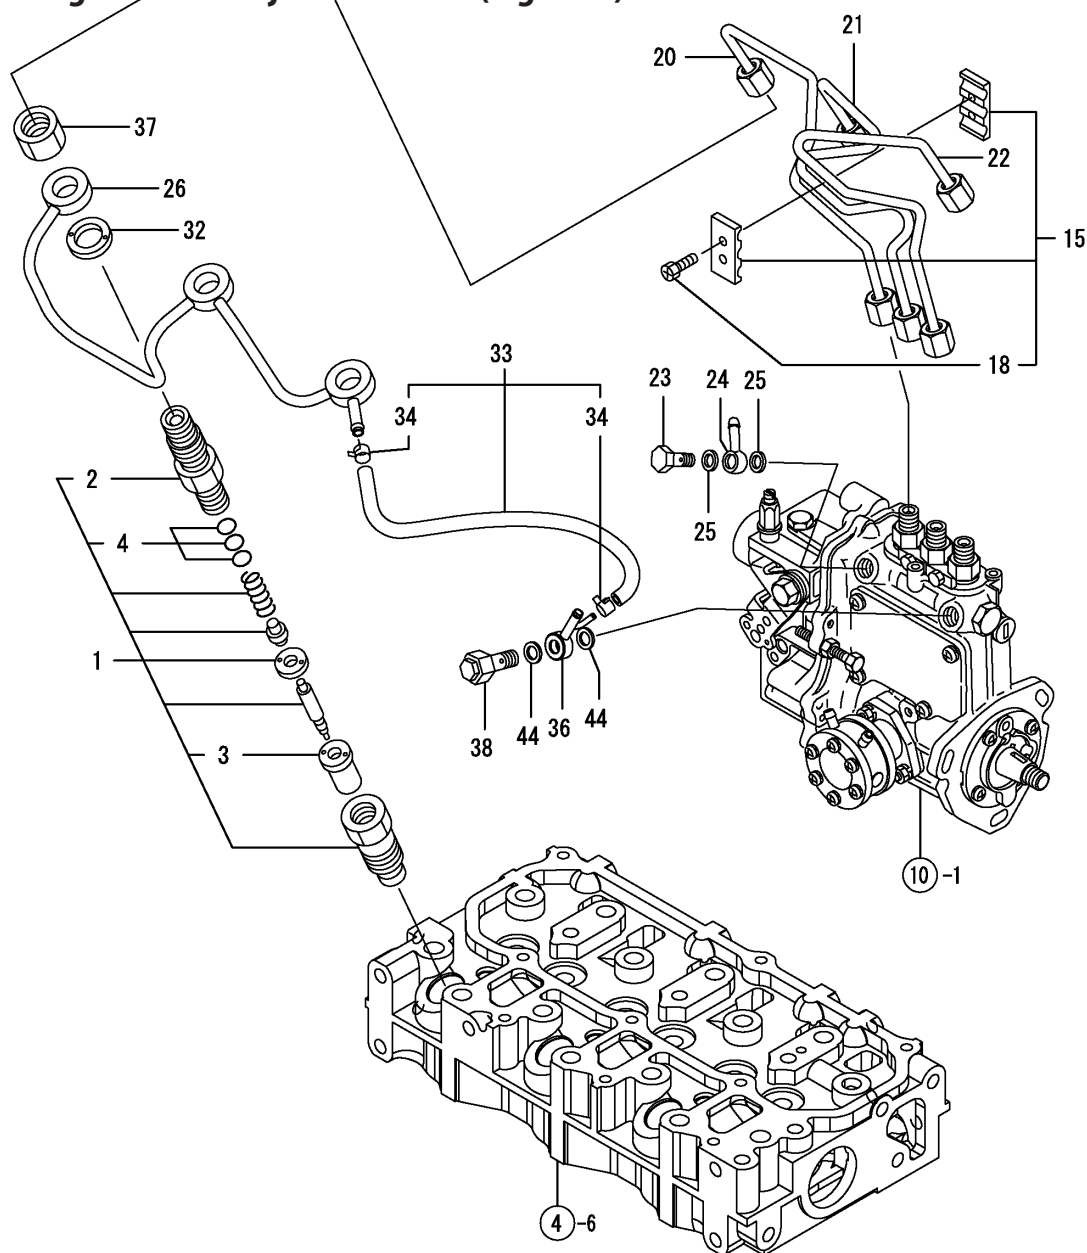


Ref No.	Part Number	Description
1	YA-119515-53001	Valve Assembly, Injection
2	YA-118200-53010	Holder, Nozzle
3	YA-119515-53010	Nozzle Assembly
4	YA-129901-53800	Shim Set
15	YA-129150-59120	Retainer, Inj. Pipe
18	YA-129150-59131	Bolt, M 4 x 14, Hex Sckt.
20	YA-119546-59810	Pipe, Fuel Injection
21	YA-119546-59820	Pipe, Fuel Injection
22	YA-119546-59830	Pipe, Fuel Injection
23	YA-103854-39140	Bolt, Pipe Joint

Ref No.	Part Number	Description
24	YA-101304-59020	Joint 12, Pipe
25	YA-22190-120002	Seal Washer 12
26	YA-119515-59540	Pipe Assembly, Return
32	YA-129901-59560	Gasket, Return
33	YA-119540-59570	Pipe, Fuel Return
34	YA-124066-59100	Clamp
36	YA-119840-59570	Joint
37	YA-119620-59700	Nut
38	YA-119813-59950	Valve Assembly, Check
44	YA-22190-120002	Seal Washer

Page Left Blank Intentionally

Yanmar Engine - Fuel Injection Pump (Figure 10)

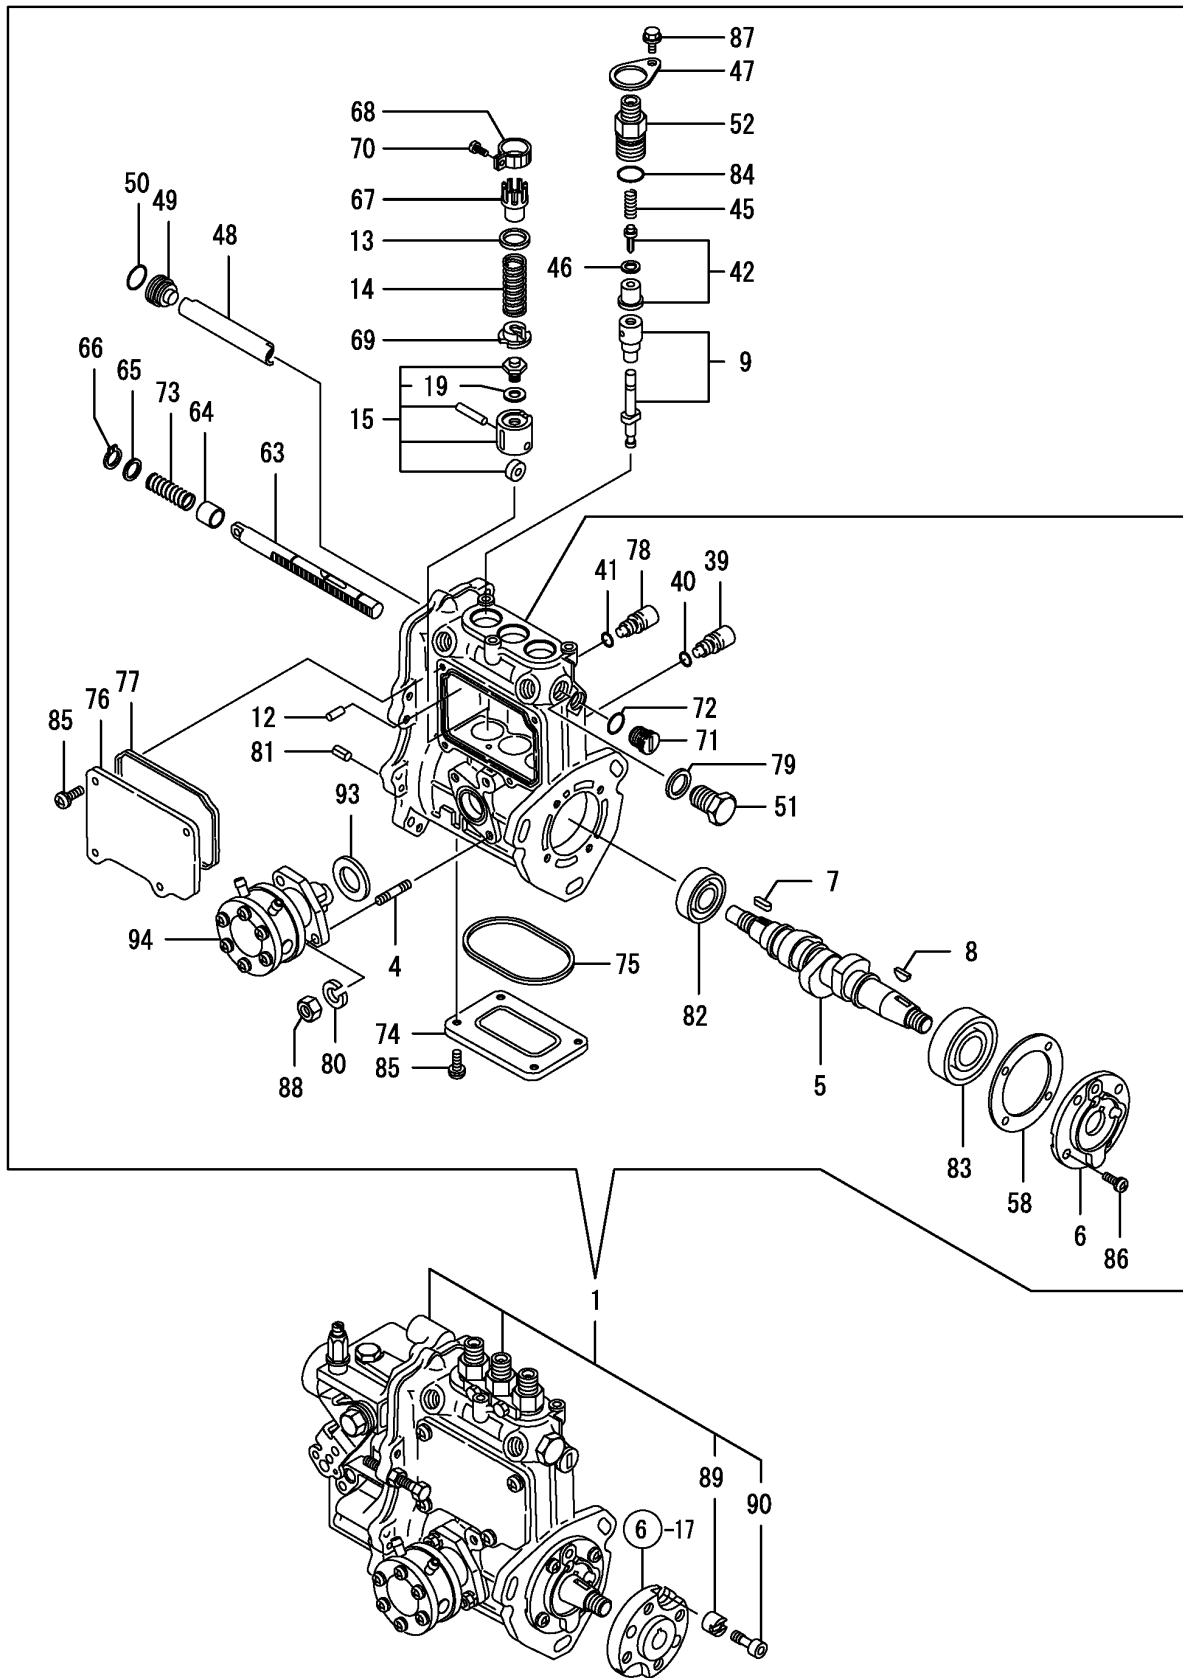


Fuel Injection Pump

Ref No.	Part Number	Description
1	YA-719533-51350	FIE Assembly
4	YA-129155-51020	Stud, Feed Pump
5	YA-119717-51030	Camshaft
6	YA-119717-51060	Support, Bearing
7	YA-119717-51070	Parallel Pin
8	YA-122710-51090	Key
9	YA-119415-51100	Plunger Assembly
12	YA-129155-51140	Pin, Barrel Locking
13	YA-158600-51170	Seat Spring
14	YA-119717-51190	Spring, Plunger
15	YA-119717-51200	Tappet Assembly
19	YA-129155-51600	Shim Pack
39	YA-158600-51270	Stopper
40	YA-129155-51280	O-Ring
41	YA-129155-51280	O-Ring
42	YA-119717-51300	Valve Assembly, Delivery
45	YA-119717-51330	Spring, Delivery
46	YA-124550-51350	Gasket, Delivery
47	YA-118400-51370	Locking
48	YA-129155-51400	Deflector
49	YA-158600-51410	Plug
50	YA-119717-51420	O-Ring
51	YA-158600-51420	Plug
52	YA-158600-51442	Valve Assembly, Delivery
58	YA-129155-51450	Shim Set, Adjusting
63	YA-119717-51500	Rack, Control
64	YA-129155-51521	Bush, Rack
65	YA-129155-51530	Spacer, Aux. Spring

Ref No.	Part Number	Description
66	YA-129155-51540	Circlip
67	YA-129155-51550	Pinion, Control
68	YA-129100-51560	Pinion
69	YA-119717-51570	Receiver, Spring
70	YA-129100-51570	Screw
71	YA-158600-51570	Plug
72	YA-129155-51580	O-Ring
73	YA-129155-51591	Spring, Rack
74	YA-129155-51701	Cover
75	YA-119717-51711	Packing
76	YA-119717-51750	Cover, Body Side
77	YA-119717-51761	Gasket
78	YA-158600-51790	Guide, Rack
79	YA-22190-160002	Seal Washer
80	YA-22217-060000	Spring Washer
81	YA-22351-050010	Spring Pin, 5 x 10
82	YA-24101-060034	Ball Bearing
83	YA-24101-063034	Ball Bearing
84	YA-24316-000150	O-Ring
85	YA-26022-050122	Screw, M 5 x 12
86	YA-26022-060162	Screw, M 6 x 16
87	YA-26106-050102	Bolt, M 5 x 10 Plated
88	YA-26716-060002	Nut
89	YA-119717-51480	Collar, FIC Fix
90	YA-119717-51490	Bolt, Fixation
93	YA-129155-52051	Gasket
94	YA-129158-52101	Feed Pump Assembly

Yanmar Engine - Governor (Figure 11)

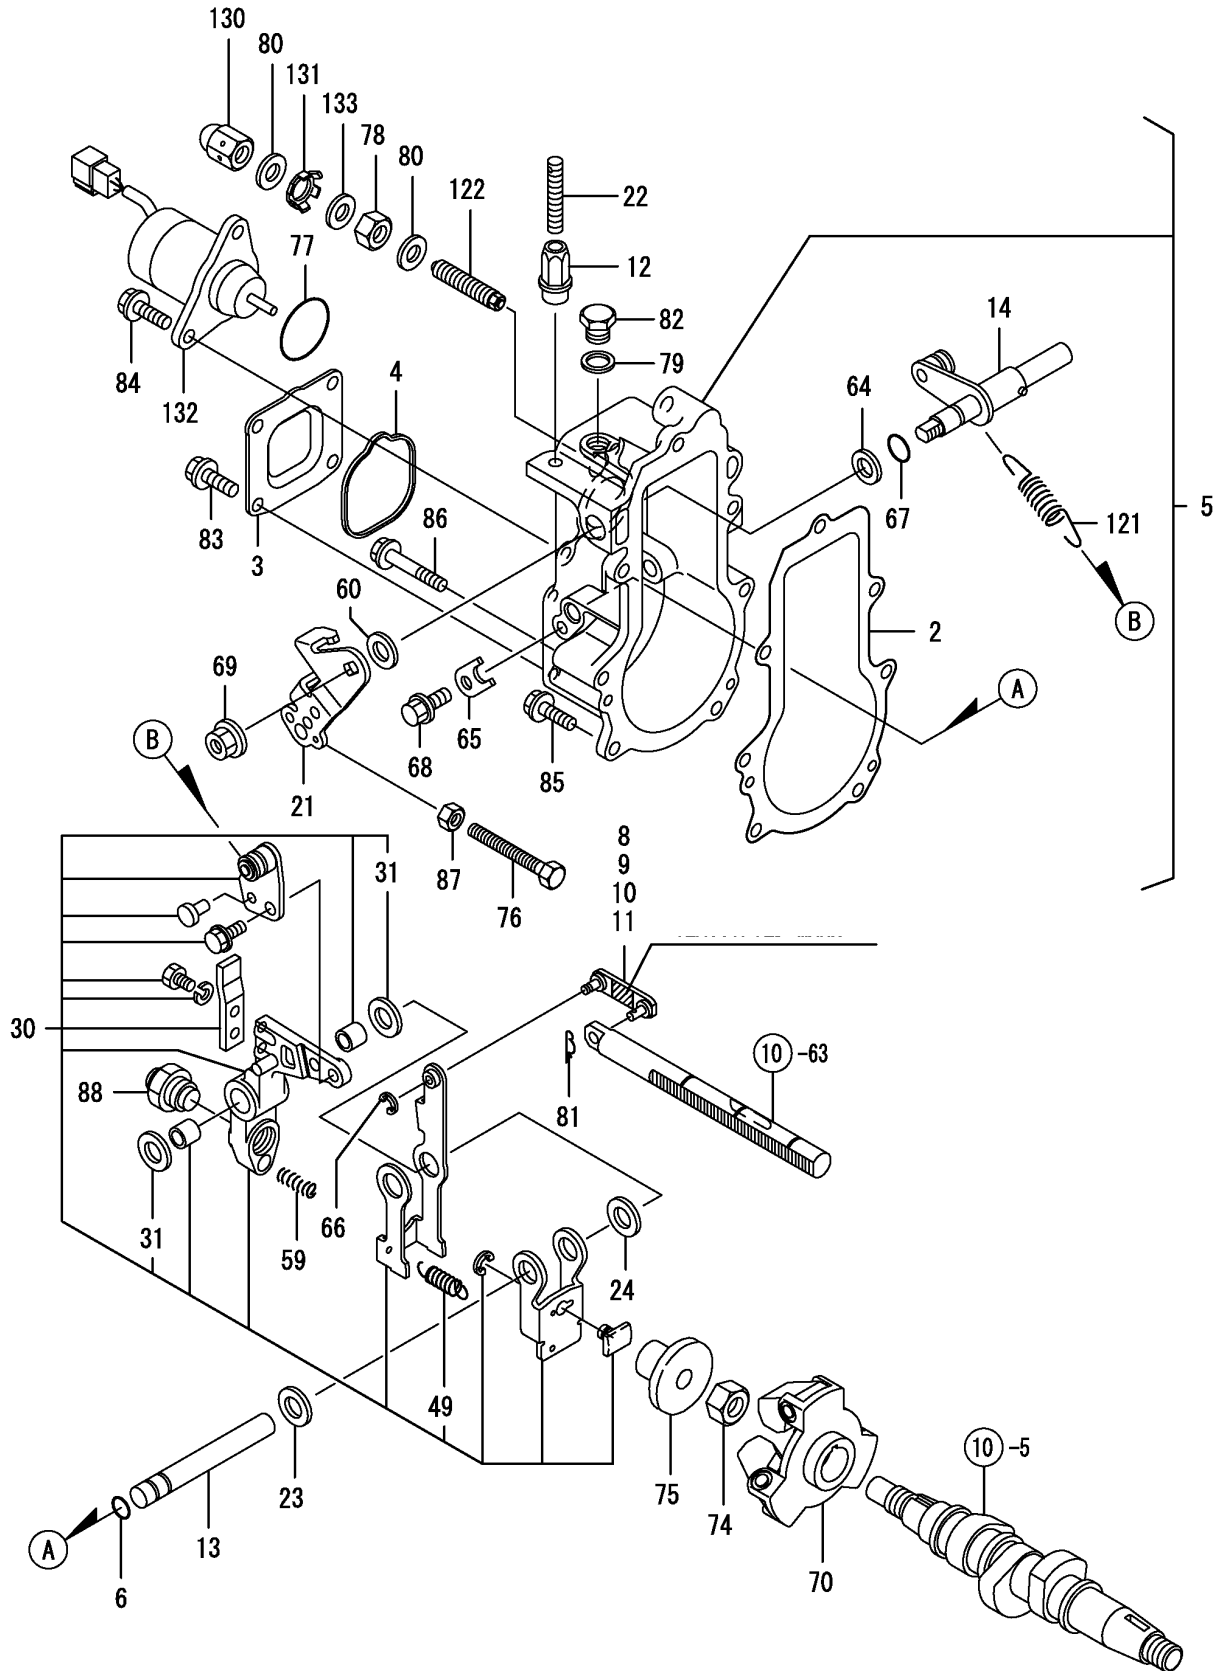


Governor

Ref No.	Part Number	Description
2	YA-119717-61050	Gasket, Case
3	YA-119717-61060	Case, Governor
4	YA-119717-61070	Gasket, Cover
5	YA-119717-61100	Case Assembly, Governor
6	YA-129155-51280	O-Ring
8	YA-119717-61120	Link
9	YA-119717-61130	Link
10	YA-119717-61140	Link
11	YA-119717-61150	Link
12	YA-129209-61370	Nut, M6
13	YA-129052-61390	Shaft, Gov. Lever
14	YA-119717-61400	Shaft Assembly, Control
21	YA-119515-61440	Lever, Control
22	YA-129155-61450	Bolt, Revol. Limit
23	YA-129156-61460	Shim
24	YA-129155-61480	Spacer Assembly
30	YA-119717-61500	Lever Assembly, Governor
31	YA-174307-51700	Shim Set
49	YA-129486-61540	Spring, Set
59	YA-129100-61650	Spring, Fuel Control
60	YA-158552-61700	Shim Assembly
64	YA-158552-61710	Shim
65	YA-119660-61901	Retainer, Shaft
66	YA-22272-000030	Circlip
67	YA-24341-000070	O-Ring

Ref No.	Part Number	Description
68	YA-26106-060102	Bolt, 6 x 10 Plated
69	YA-26366-080002	Nut, M 8
70	YA-119717-61200	Weight Assembly
74	YA-129008-61301	Nut, Governor Weight
75	YA-129155-61341	Sleeve
76	YA-129155-61460	Bolt, Idle Limit
77	YA-158552-61900	O-Ring
78	YA-129209-61920	Nut
79	YA-22190-100002	Seal Washer
80	YA-22190-120002	Seal Washer
81	YA-22372-040000	Snap Pin
82	YA-23887-100002	Plug 10
83	YA-26106-060102	Bolt, 6 x 10 Plated
84	YA-26106-060142	Bolt, M 6 x 14 Plated
85	YA-26106-060202	Bolt, M 6 x 20 Plated
86	YA-26106-060452	Bolt, M 6 x 45 Plated
87	YA-26756-060002	Lock Nut 6
88	YA-119515-61560	Angleich Assembly
121	YA-129573-61700	Spring, Governor
122	YA-158601-61700	Limiter Assembly, Fuel
130	YA-129209-61930	Cap Nut
131	YA-129209-61970	Plate
132	YA-119653-77950	Solenoid, Stop
133	YA-23414-120016	Gasket 12

Yanmar Engine - Cooling Water System (Figure 12)

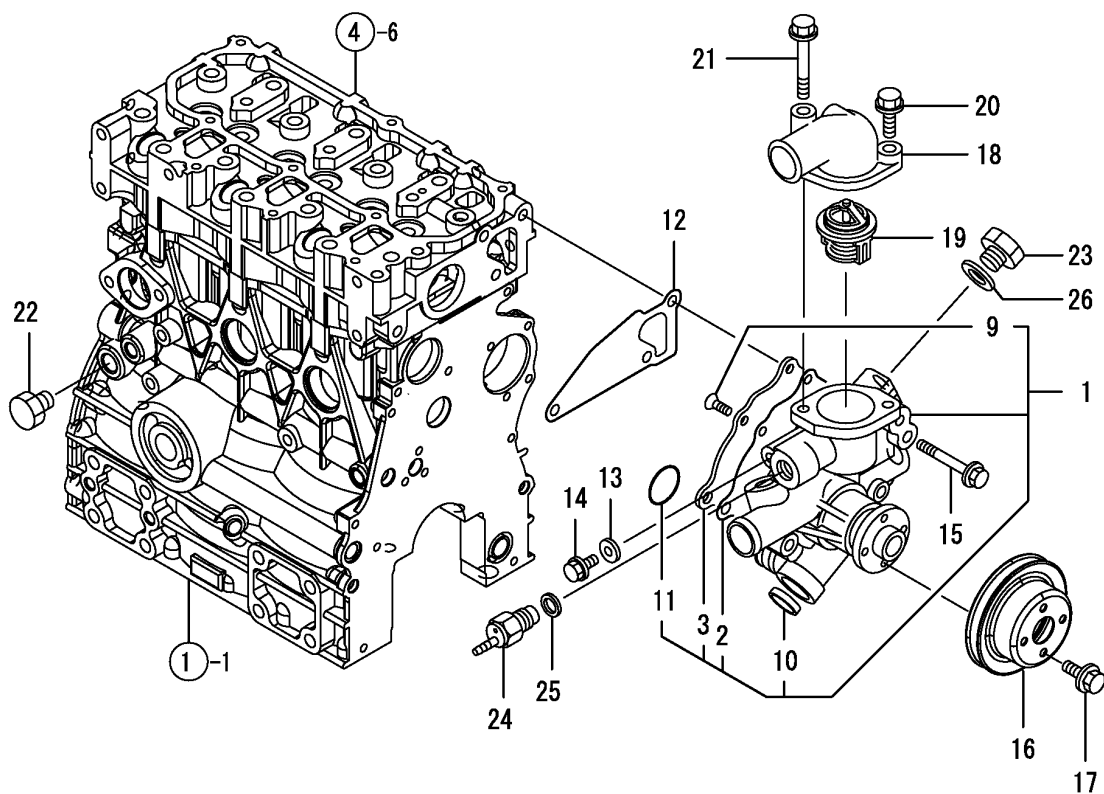


Ref No.	Part Number	Description
1	YA-119515-42001	Pump Assembly, Water
2	YA-119717-42031	Gasket
3	YA-119515-42041	Cover
9	YA-26577-060122	Screw, M 6 x 12
10	YA-27241-250000	Plug 25
11	YA-119717-42320	O-Ring
12	YA-119515-42020	Gasket, Water Pump
13	YA-23414-080000	Gasket 8, Round
14	YA-26106-080122	Bolt, M 8 x 12 Plated
15	YA-26106-080502	Bolt, M 8 x 50 Plated
16	YA-119717-42350	V-Pulley, C.W. Pump

Ref No.	Part Number	Description
17	YA-26106-060122	Bolt, M 6 x 12 Plated
18	YA-124101-49531	Cover, Thermostat
19	YA-119717-49800	Thermostat
20	YA-26106-080252	Bolt, M 6 x 25 Plated
21	YA-26106-080652	Bolt, M 6 x 65 Plated
22	YA-171056-49120	Plug, Drain
23	YA-121450-42450	Plug, M16
24	YA-121250-44901	Switch, Thermo
25	YA-124465-44950	Gasket 16
26	YA-124465-44950	Gasket 16

Page Left Blank Intentionally




Yanmar Engine - Starting Motor (Figure 13)

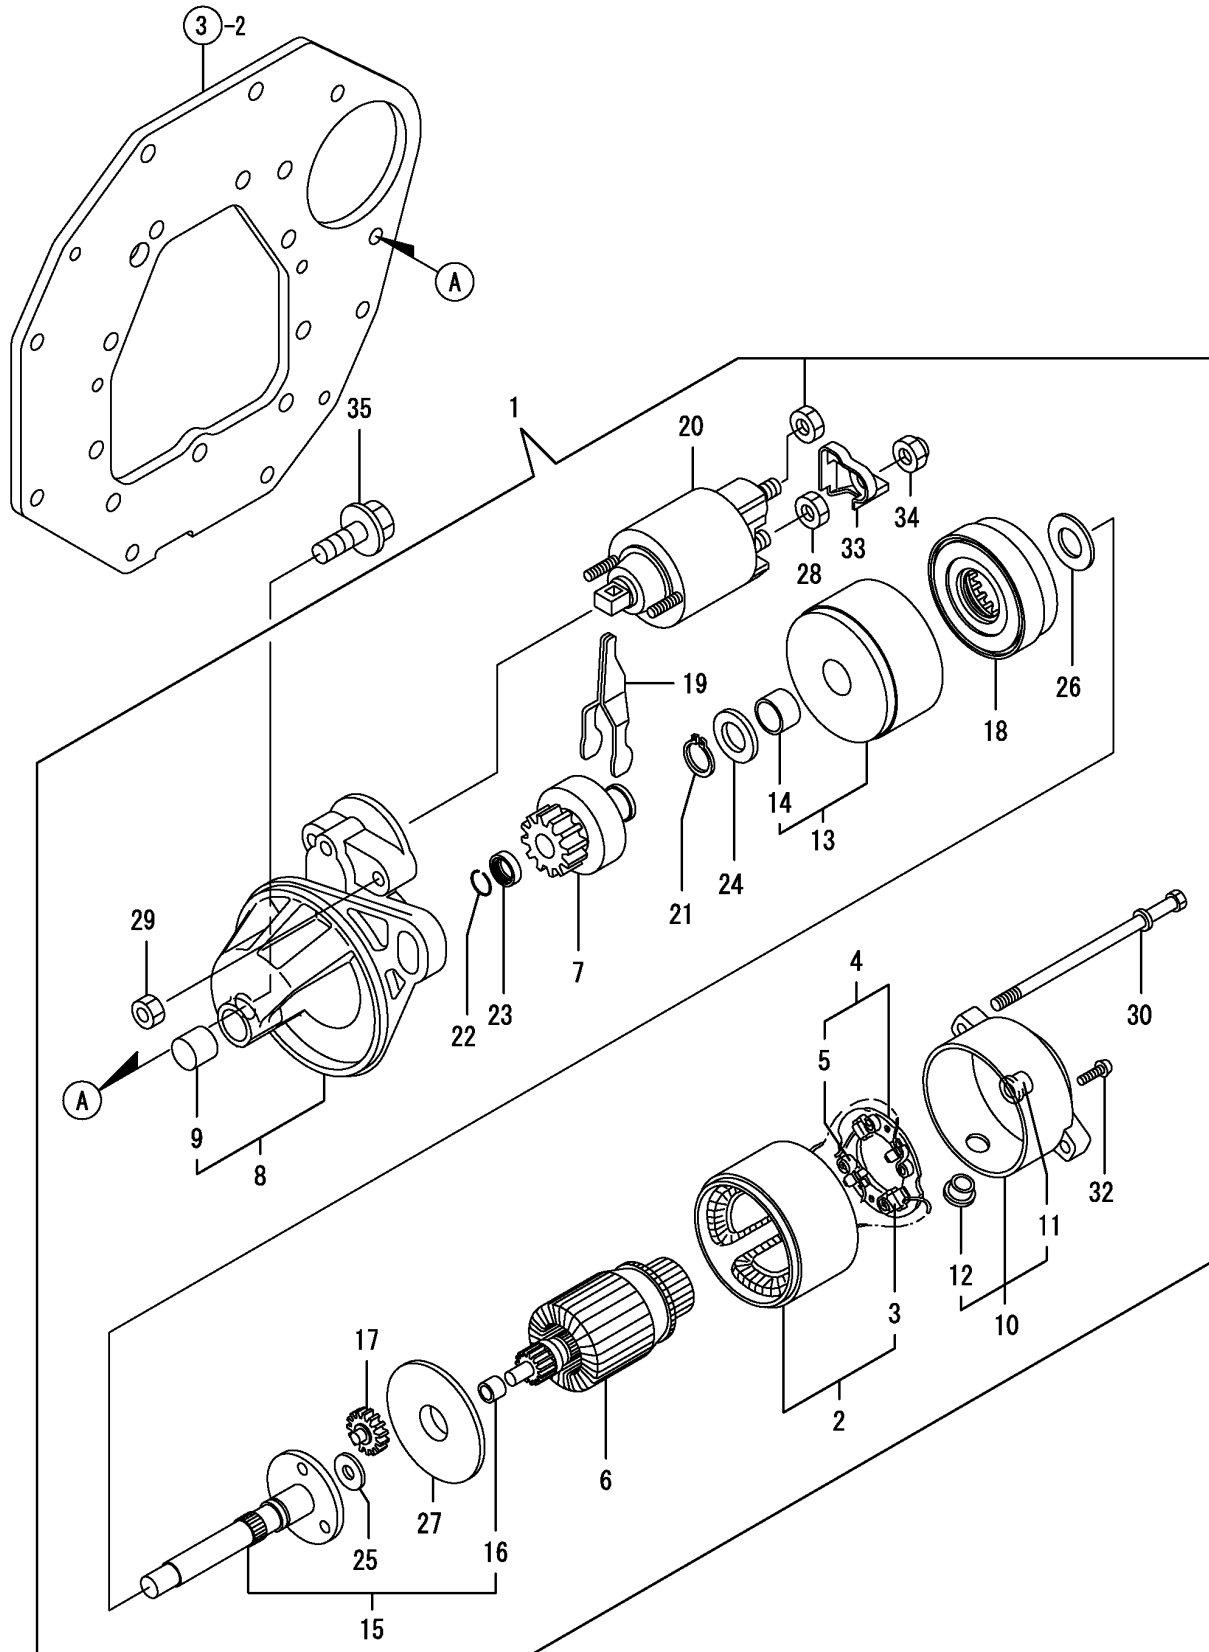

Starting Motor

Ref No.	Part Number	Description
1	YA-119717-77010	Starter
2	YA-X0281007750	Coil Assembly, Field
3	YA-X0280996180	Starter Kit
4	YA-X0285105190	Holder Assembly
5	YA-X0285205030	Spring
6	YA-X0282005991	Armature Assembly
7	YA-X0283006960	Clutch Sub-Assembly
8	YA-X4284001590	Housing Assembly, Starter
9	YA-X9491050100	Needle Bearing
10	YA-X0285007030	Frame Assembly
11	YA-X9491040990	Bearing
12	YA-X0280626010	Cover
13	YA-X0284105040	Bearing Sub-Assembly
14	YA-X9491034330	Bearing
15	YA-X0286105010	Shaft Sub-Assembly
16	YA-X9491034320	Bearing
17	YA-X0286305010	Gear
18	YA-X0286355010	Gear
19	YA-X0287405140	Lever
20	YA-X0534007800	Switch, Emergency
21	YA-X9055715000	Ring
22	YA-X9490721360	Ring
23	YA-X0280210331	Nut
24	YA-X9490138110	Washer
25	YA-X9490138090	Washer
26	YA-X9490138100	Washer
27	YA-X0284525010	Plate
28	YA-X9490562360	Nut
29	YA-X9490560750	Nut
30	YA-129407-77330	Bolt, Through
32	YA-X9490065670	Screw, M 4 x 6
33	YA-X0280335350	Cover Set, Terminal
34	YA-X1289510130	Nut
35	YA-26106-100252	Bolt, M 10 x 25 Plated


Yanmar Engine - Gasket Set (Figure 14)

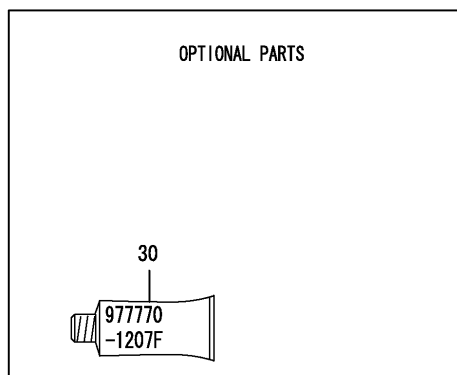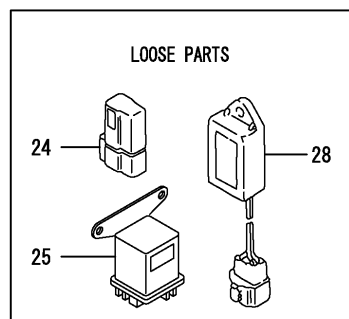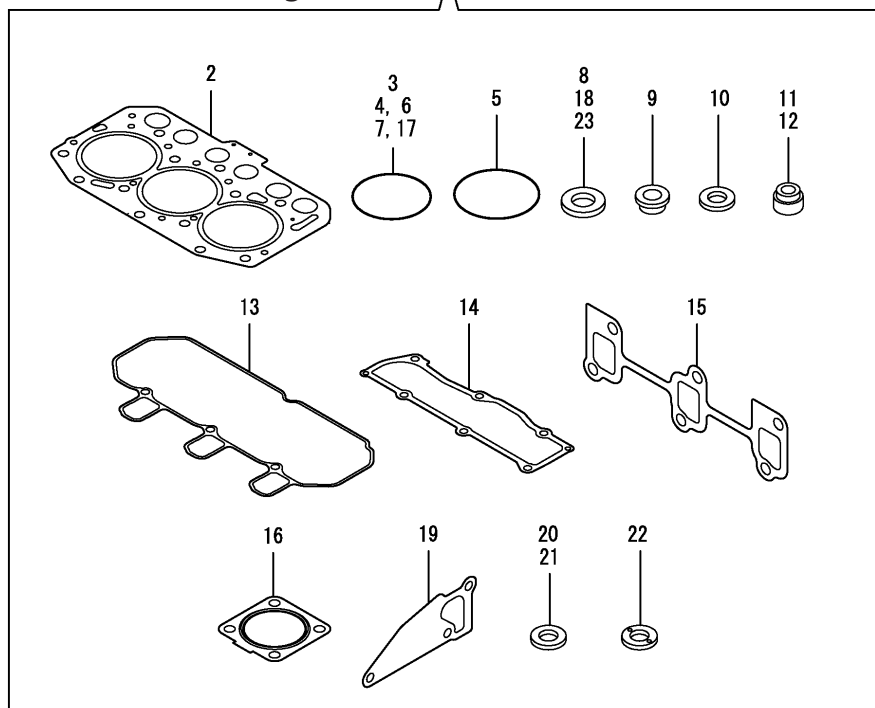

Ref No.	Part Number	Description
1	YA-719515-92620	Gasket Set
2	YA-119515-01330	Gasket, Cylinder Head
3	YA-119624-32040	O-Ring, P 12.0
4	YA-119717-32050	O-Ring, P 17.0
5	YA-121850-51960	O-Ring, F.I. Pump
6	YA-24311-000320	O-Ring, 1A P-32.0
7	YA-24341-000240	O-Ring, 1A S-24.0
8	YA-22190-160002	Seal Washer
9	YA-129901-11450	Protector, Nozzle
10	YA-119600-11460	Gasket, Nozzle
11	YA-119717-11340	Seal, Valve Stem
12	YA-119717-11350	Seal, Valve Stem
13	YA-119515-11310	Gasket, Bonnet
14	YA-119515-11330	Gasket, Bonnet Cover


Ref No.	Part Number	Description
15	YA-119717-13110	Gasket, Manifold
16	YA-119515-13200	Gasket, Silencer
17	YA-119717-32060	O-Ring, P15.0
18	YA-22190-080002	Seal Washer
19	YA-119515-42020	Gasket, Water Pump
20	YA-23414-080000	Gasket 8, Round
21	YA-124465-44950	Gasket 16
22	YA-129901-59560	Gasket, Return
23	YA-22190-120002	Seal Washer 12
24	YA-119643-66900	Diode
25	YA-119650-77910	Relay, Glow
28	YA-129211-77920	Timer
30	YA-977770-1207F	Gasket, Liquid

Labels (Models K465/6)

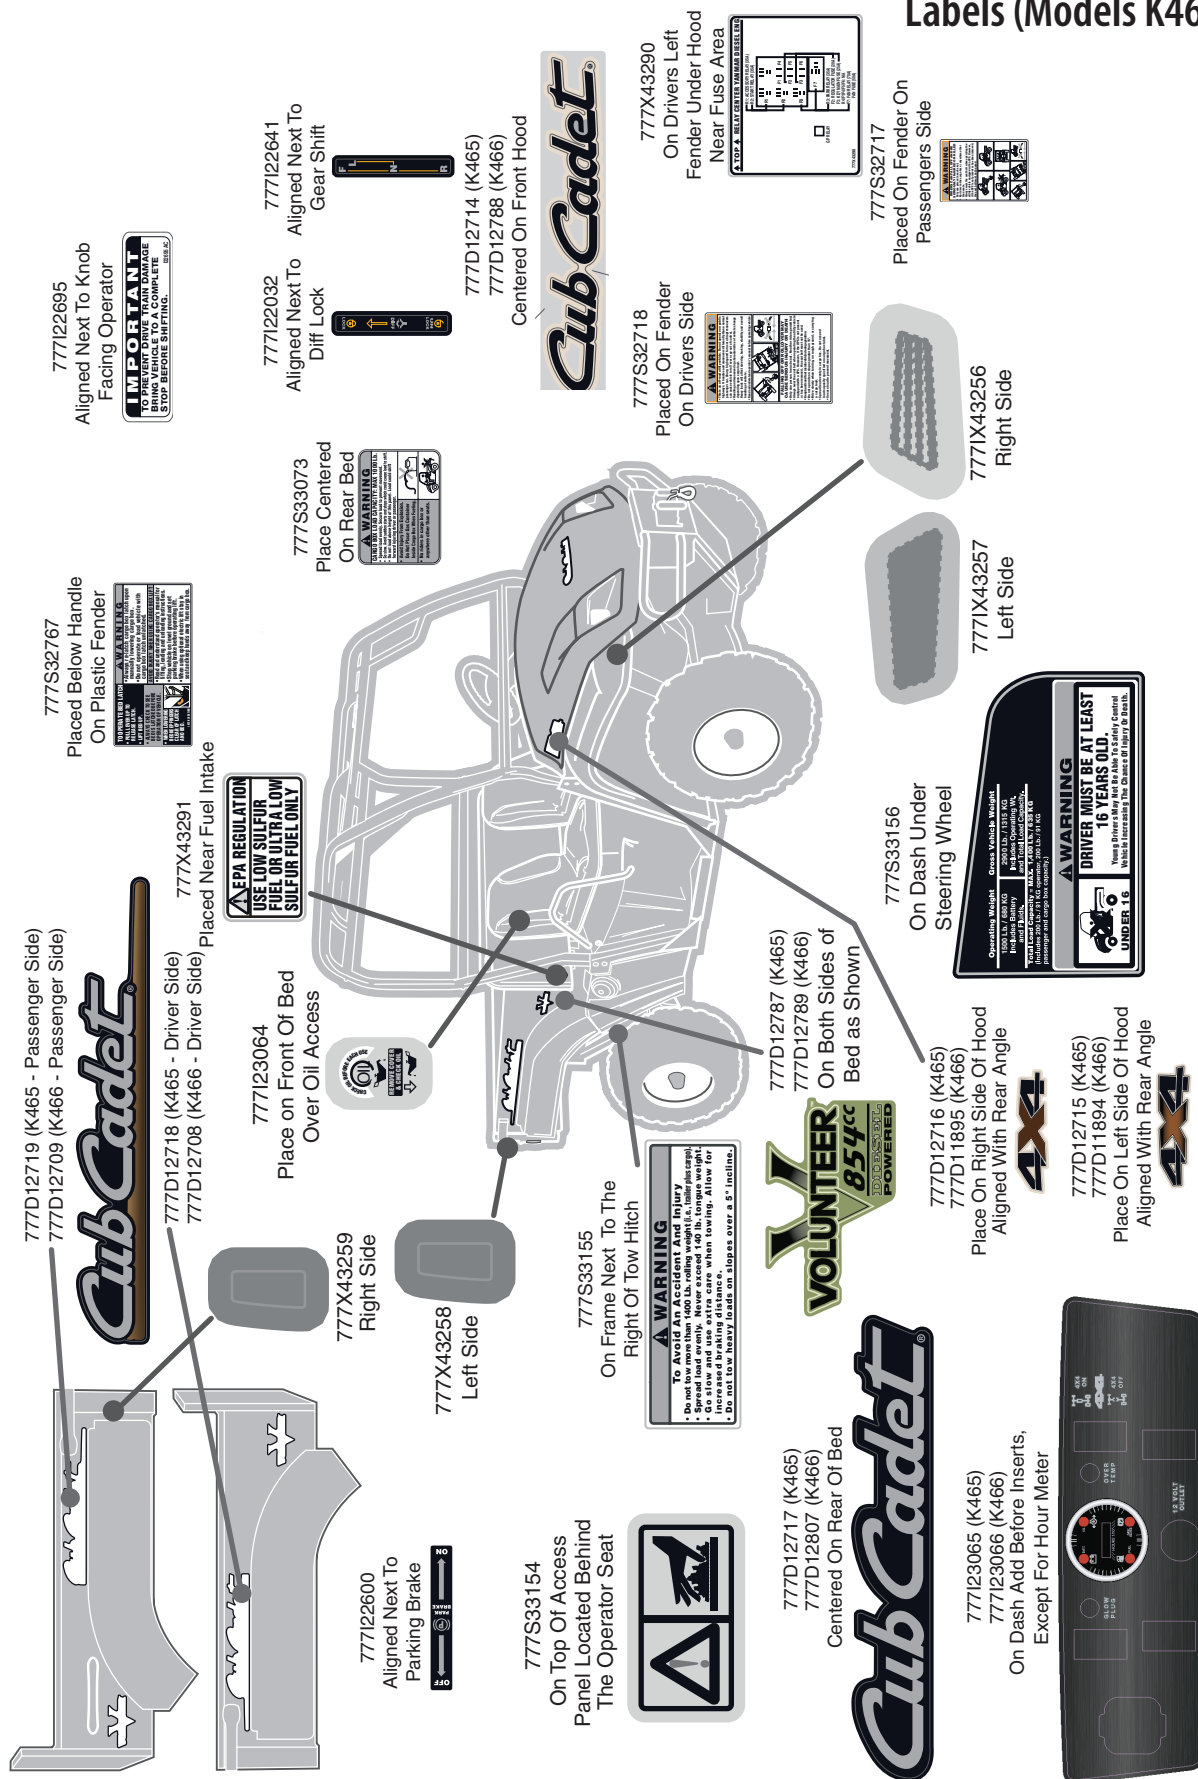




Labels (Model C466)

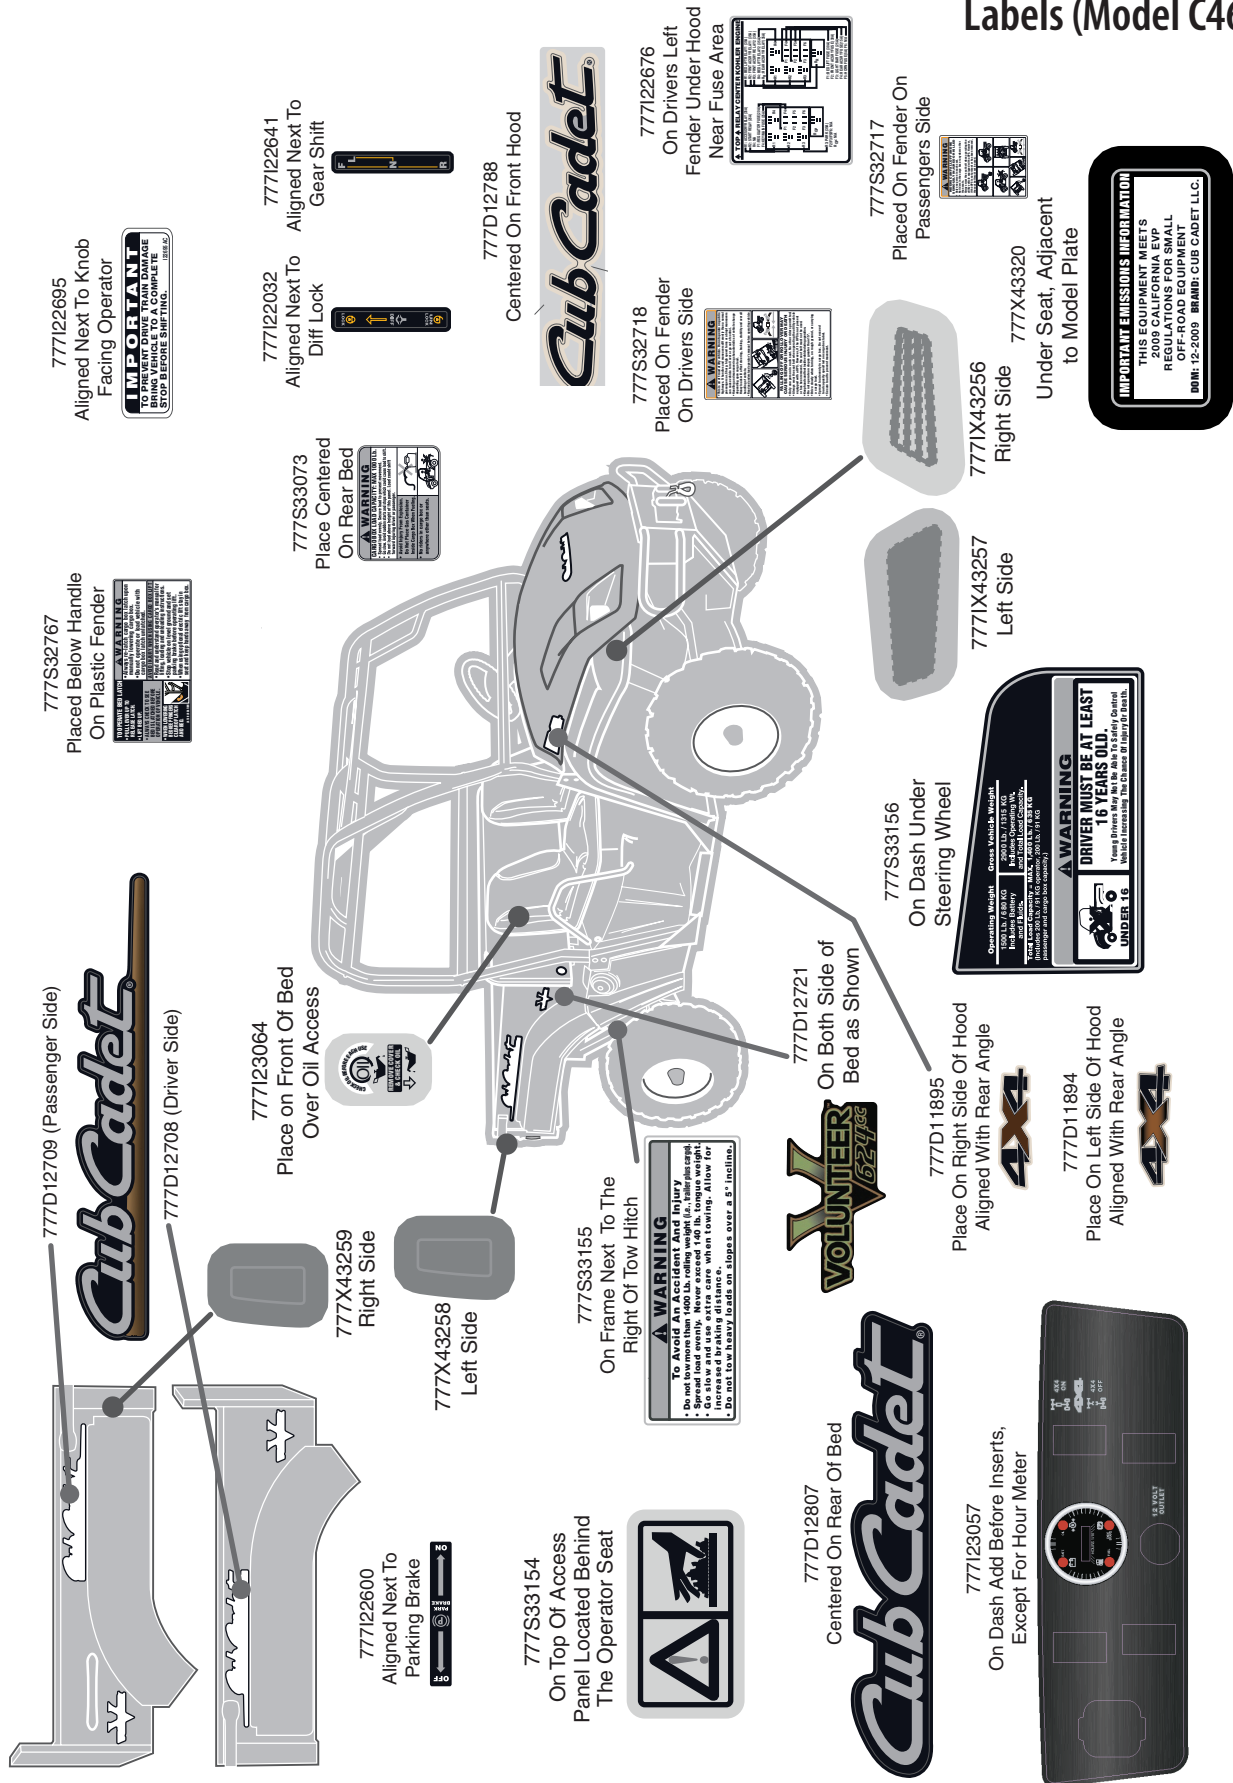




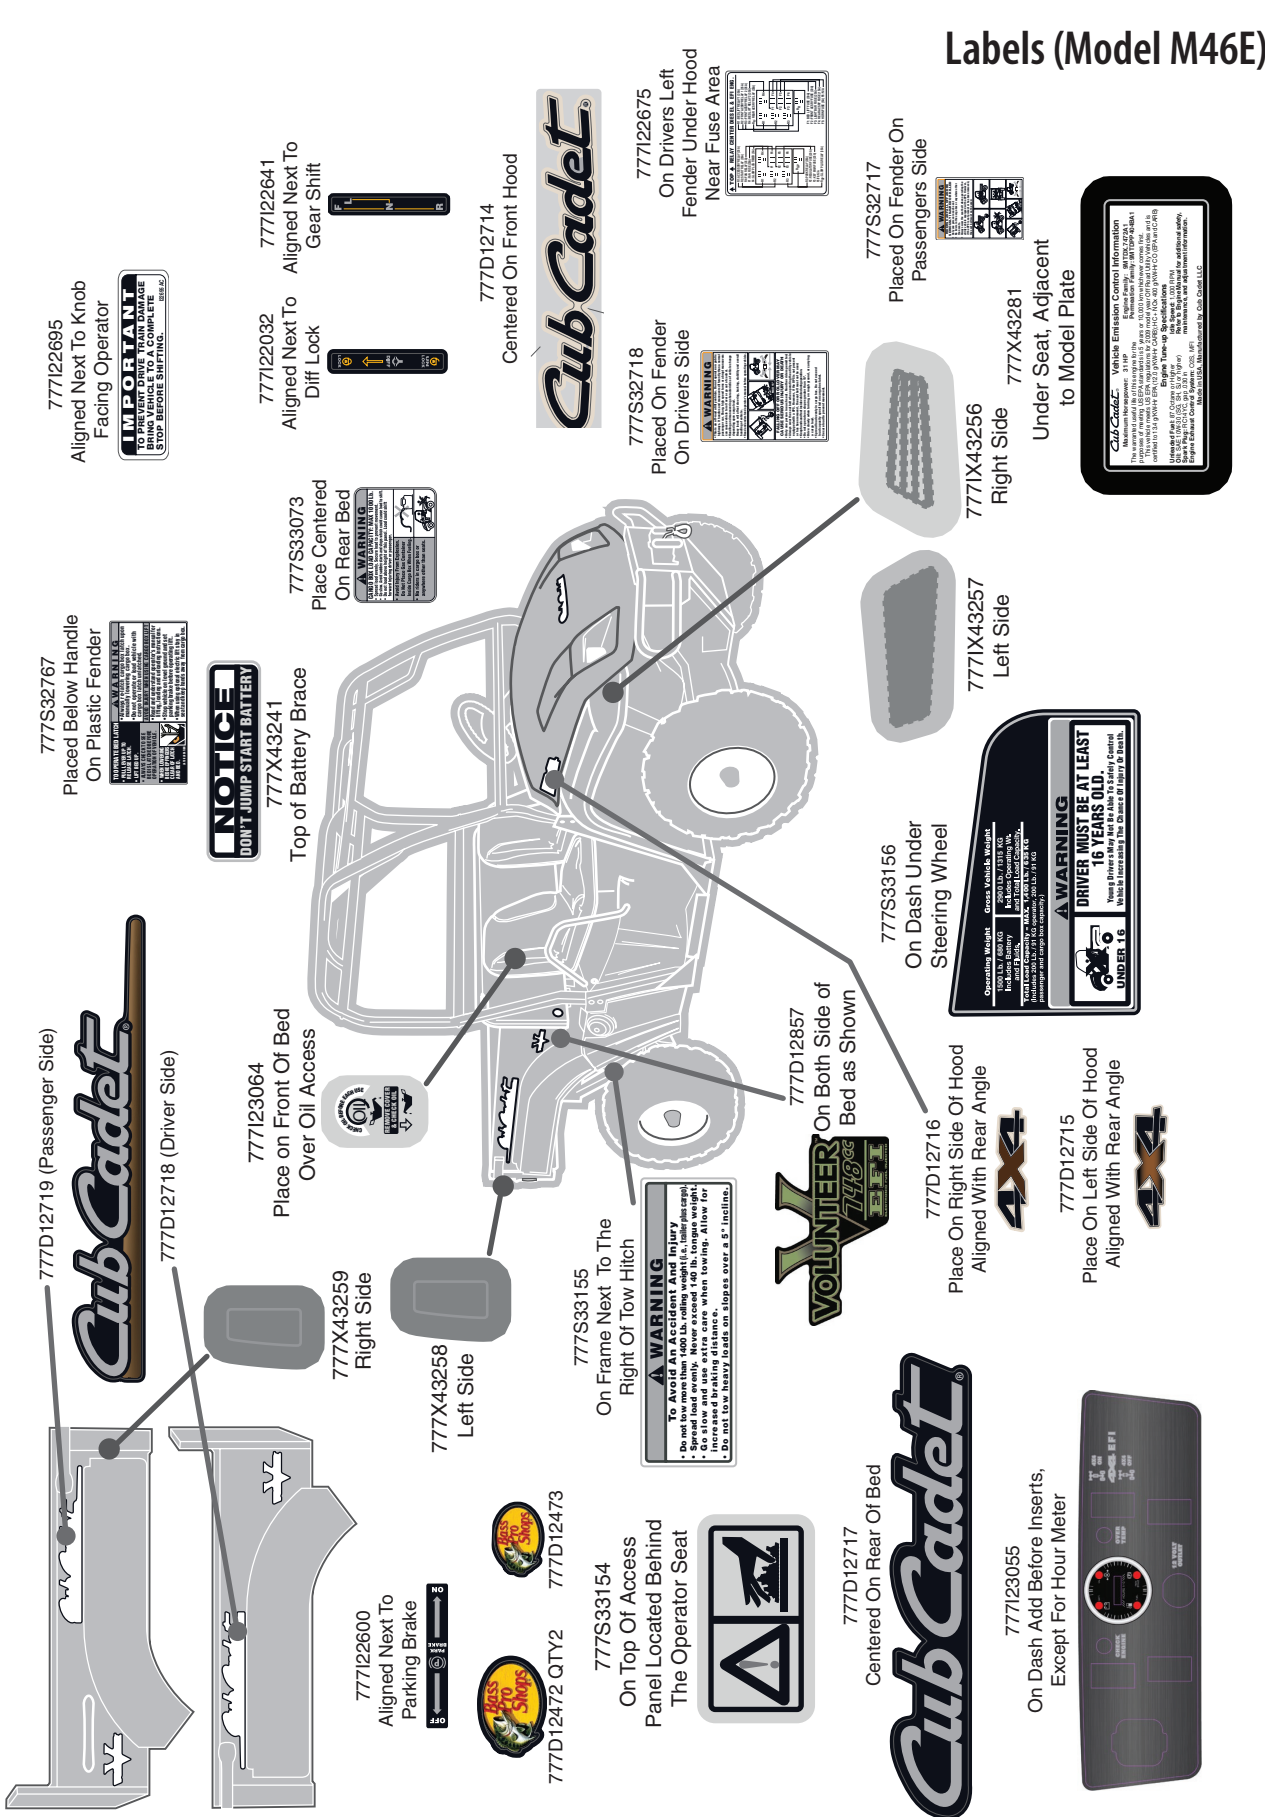





Electrical Schematic (Kohler)

 


85

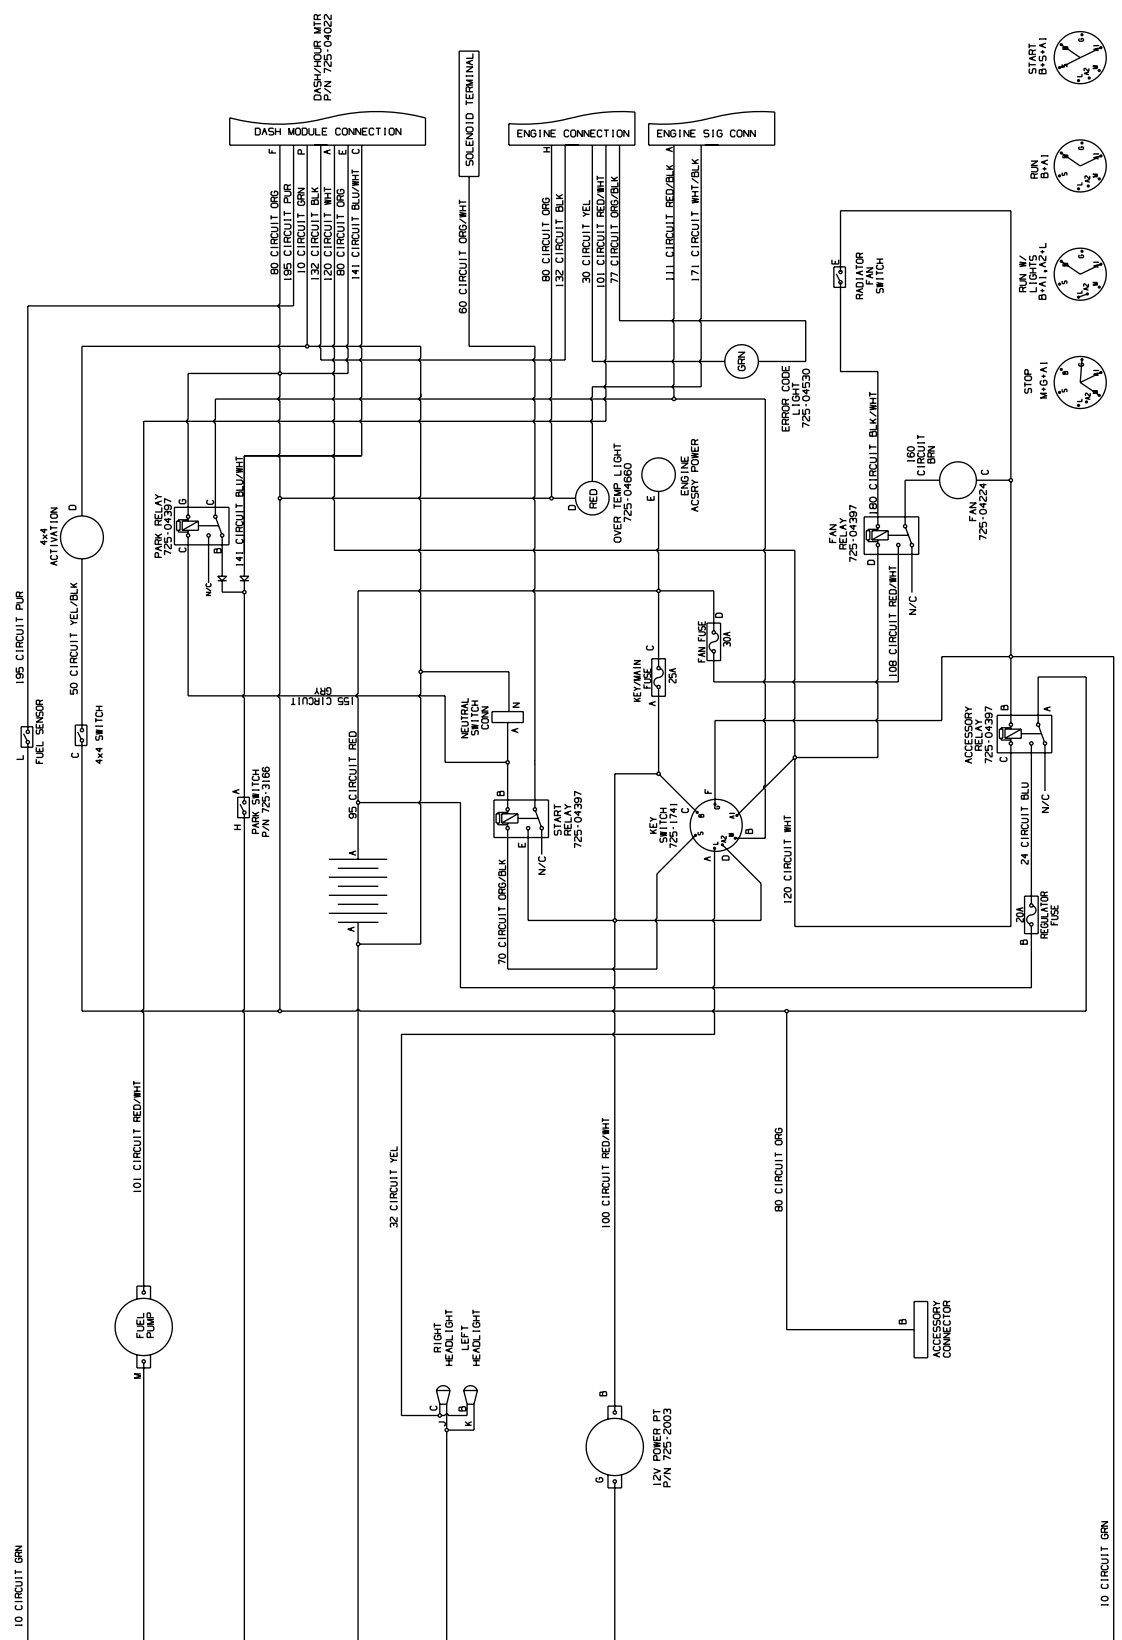


Electrical Schematic (Yanmar)

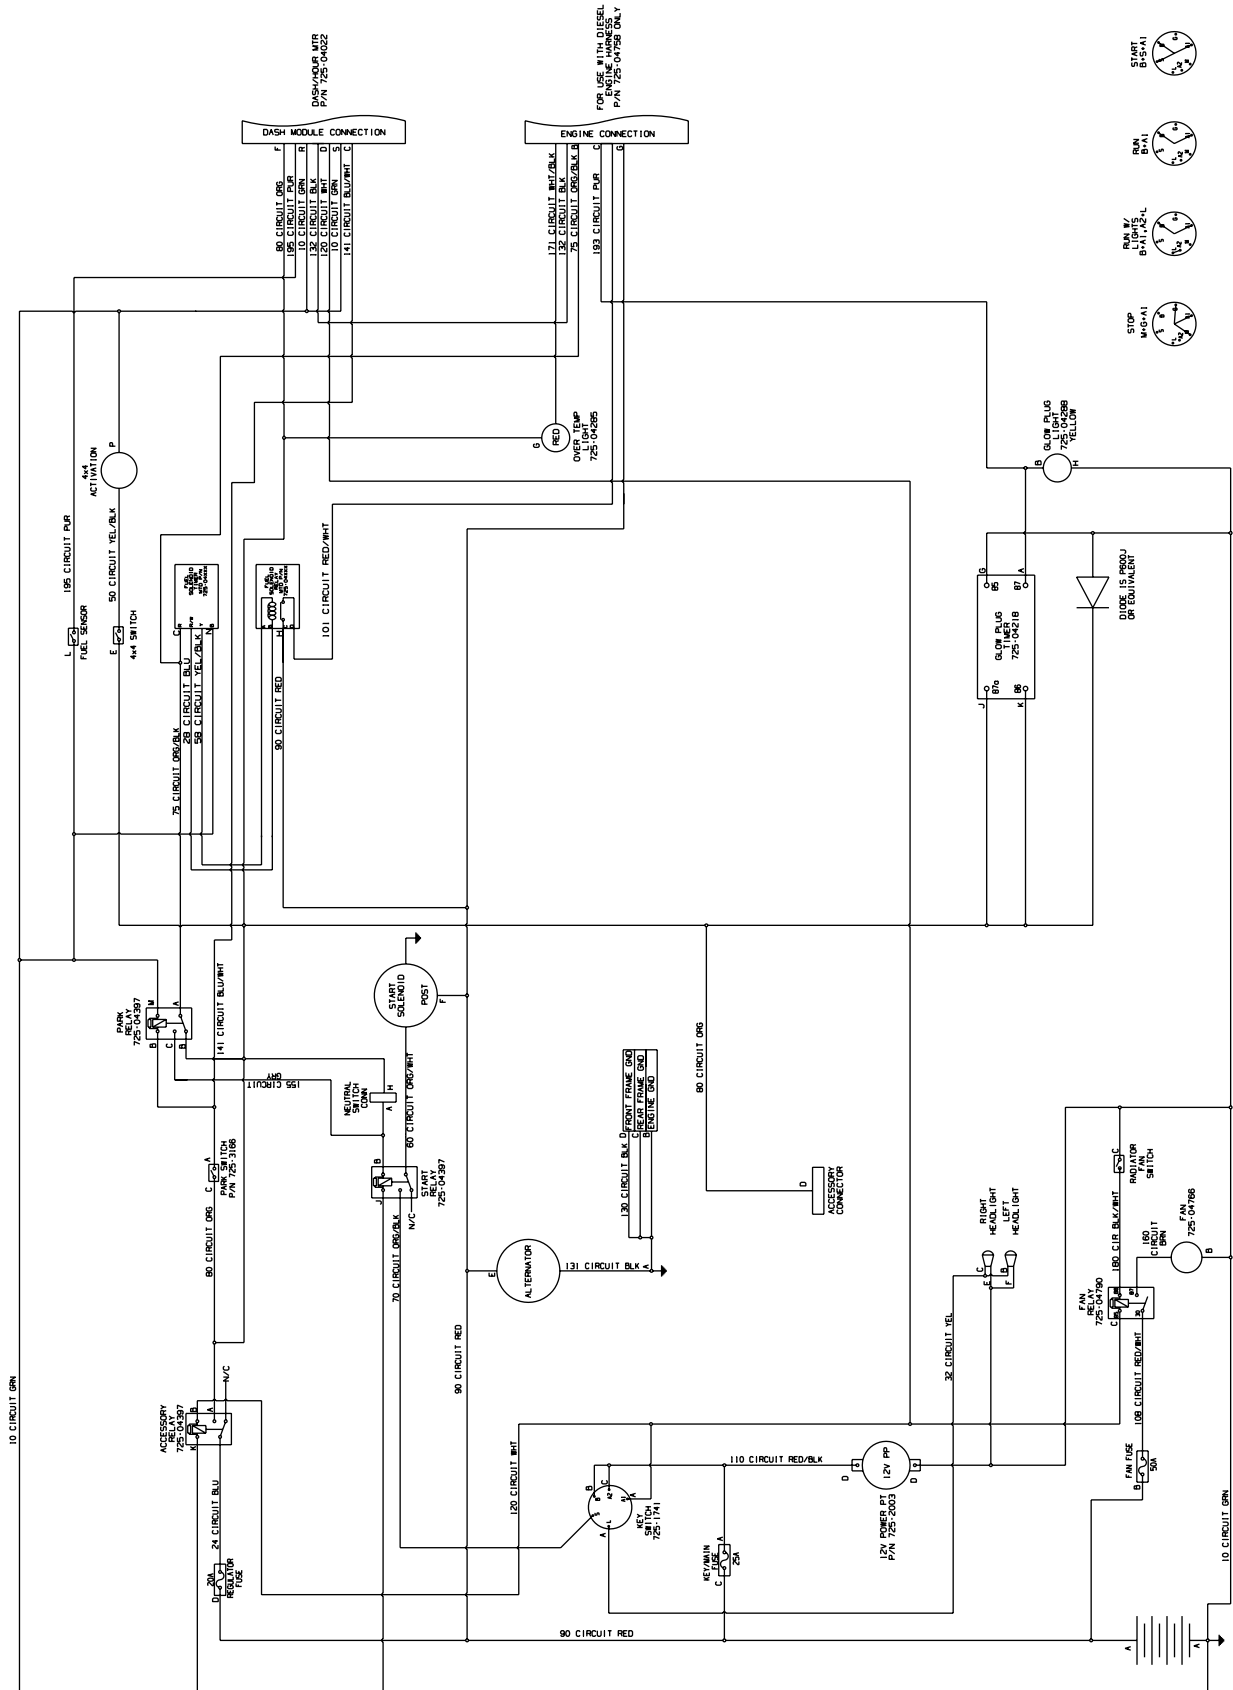

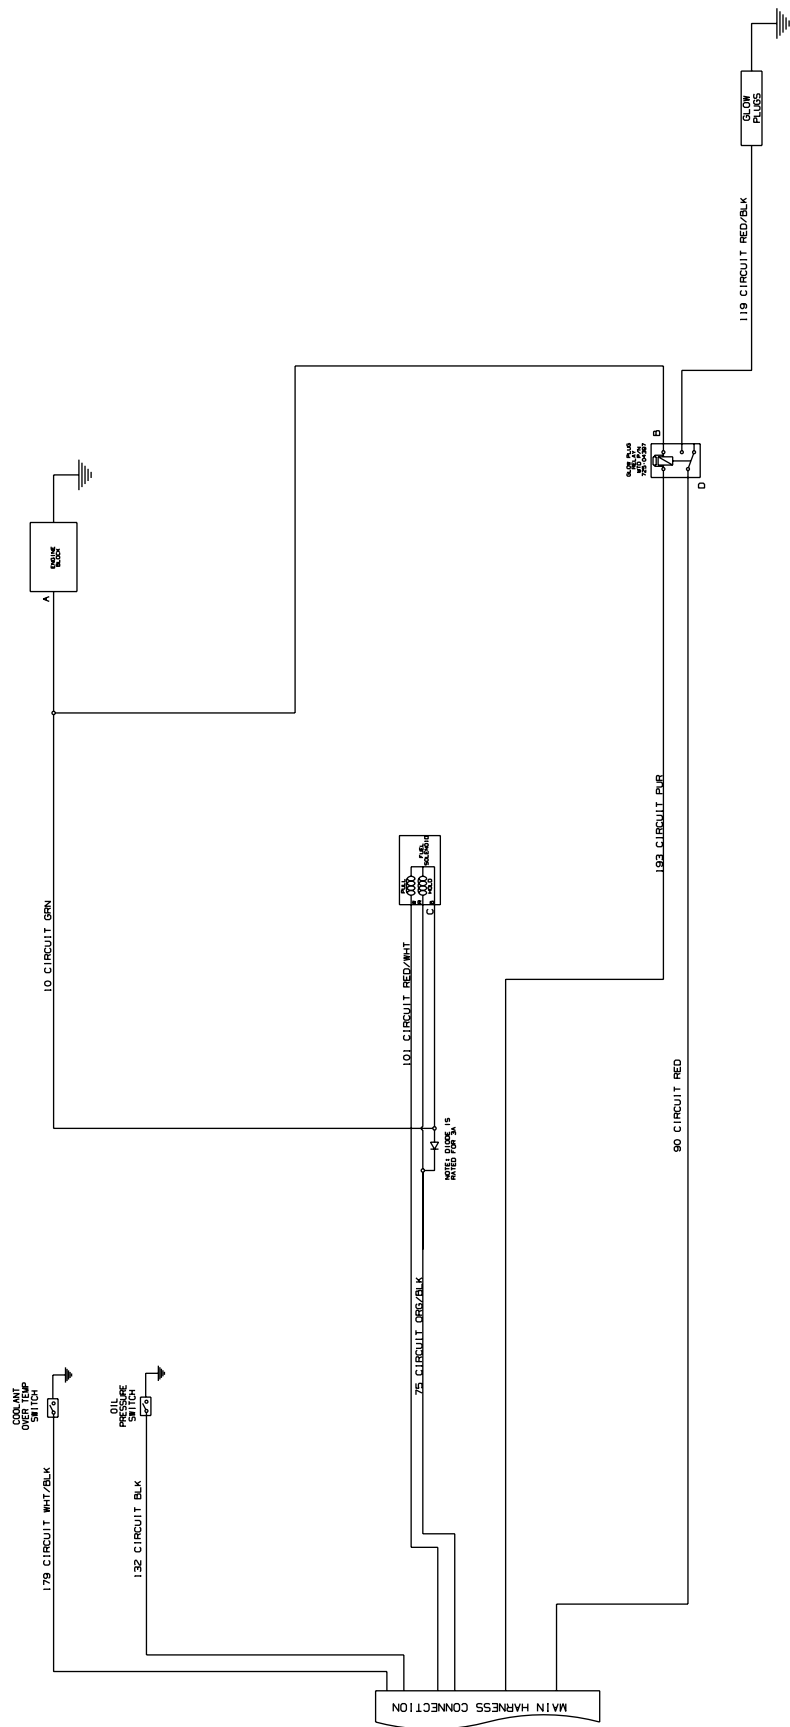


Hood Rack (If Equipped)

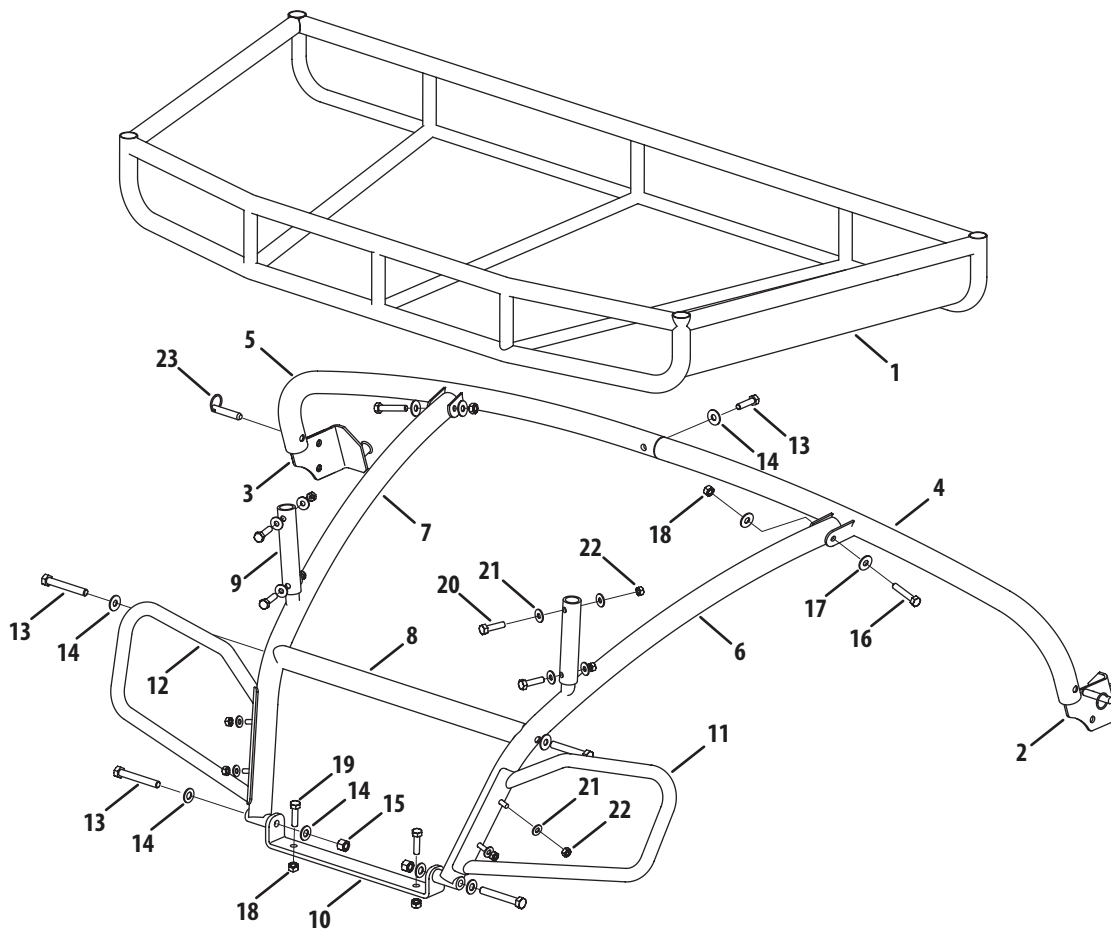


Ref No.	Part Number	Description
1	VL-1016100	Hood Rack
2	VL-1016101	Frame Mount - LH
3	VL-1016102	Frame Mount - RH
4	VL-1016103	Transverse Rack Support, Driv
5	VL-1016104	Transverse Rack Support, Pass
6	VL-1016105	Long, Rack Support, Driver
7	VL-1016106	Long, Rack Support, Pass
8	VL-1016107	Center Brace
9	VL-1016108	Rack Support, Vert
10	VL-1016109	Bumper Hinge Plate
11	VL-1016110	Light Guard, Driver
12	VL-1016111	Light Guard, Pass

Ref No.	Part Number	Description
13	710-3022	Hhcs, 3/8-16 x 2.75
14	736-3050	Wash, Flat, .406 x .812 x .051
15	712-0130	Nut, Hexlk, 3/8-16
16	710-3103	Hhcs, 5/16-18 x 2.00
17	936-0275	Wash, Flat, .344 x .688 x .065
18	912-0429	Nut, Hexlk, 5/16-18
19	710-0376	Hhcs, 5/16-18 x 1.00
20	710-0606	Hhcs, 1/4-20 x 1.50
21	936-3020	Wash, Flat, .271 x .630 x .065
22	712-0324	Nut, Hexlk, 1/4-20
23	VL-1016112	Ball Lock Pin, 3/8" x 2.00

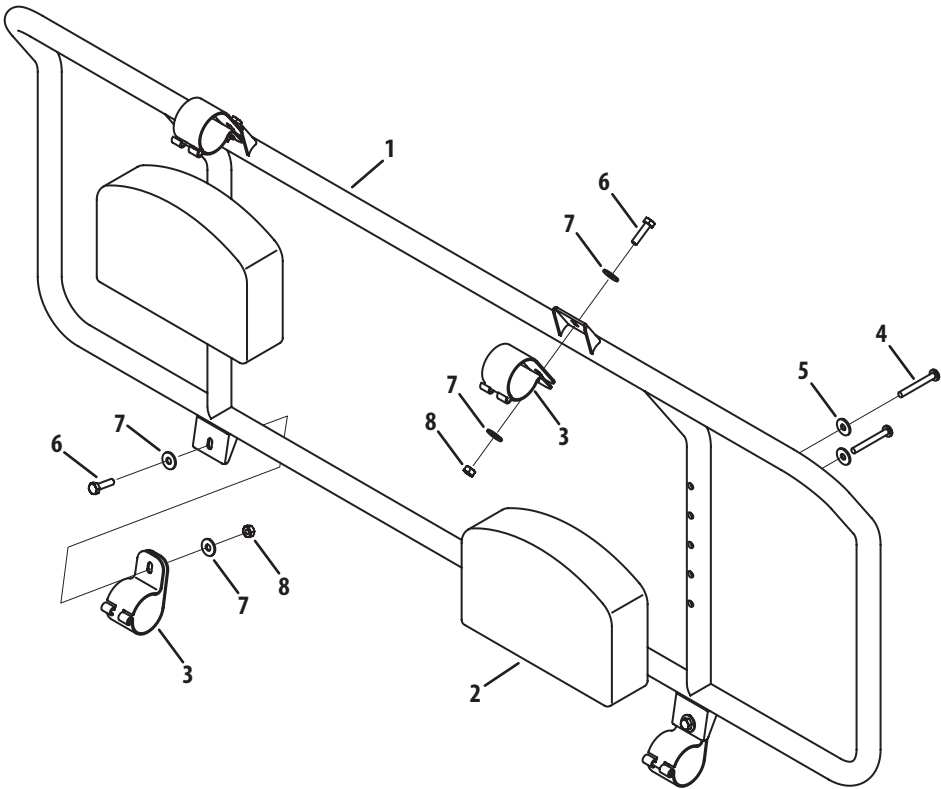

Ref No.	Part Number	Description
1	VL-1024100	Main Frame Tube
2	VL-1024101	Headrest
3	VL-1024102	Bar Clamp
4	710-1703	Hhcs, M8-1.25 x 45.00 Lg
5	936-0264	Wash, Flat, .330 x .630 x .0635
6	710-0597	Hhcs, 1/4-20 x 1.00
7	936-3020	Wash, Flat, .271 x .630 x .065
8	712-0324	Nut, Hexlk, 1/4-20

Bench Seat (If Equipped)

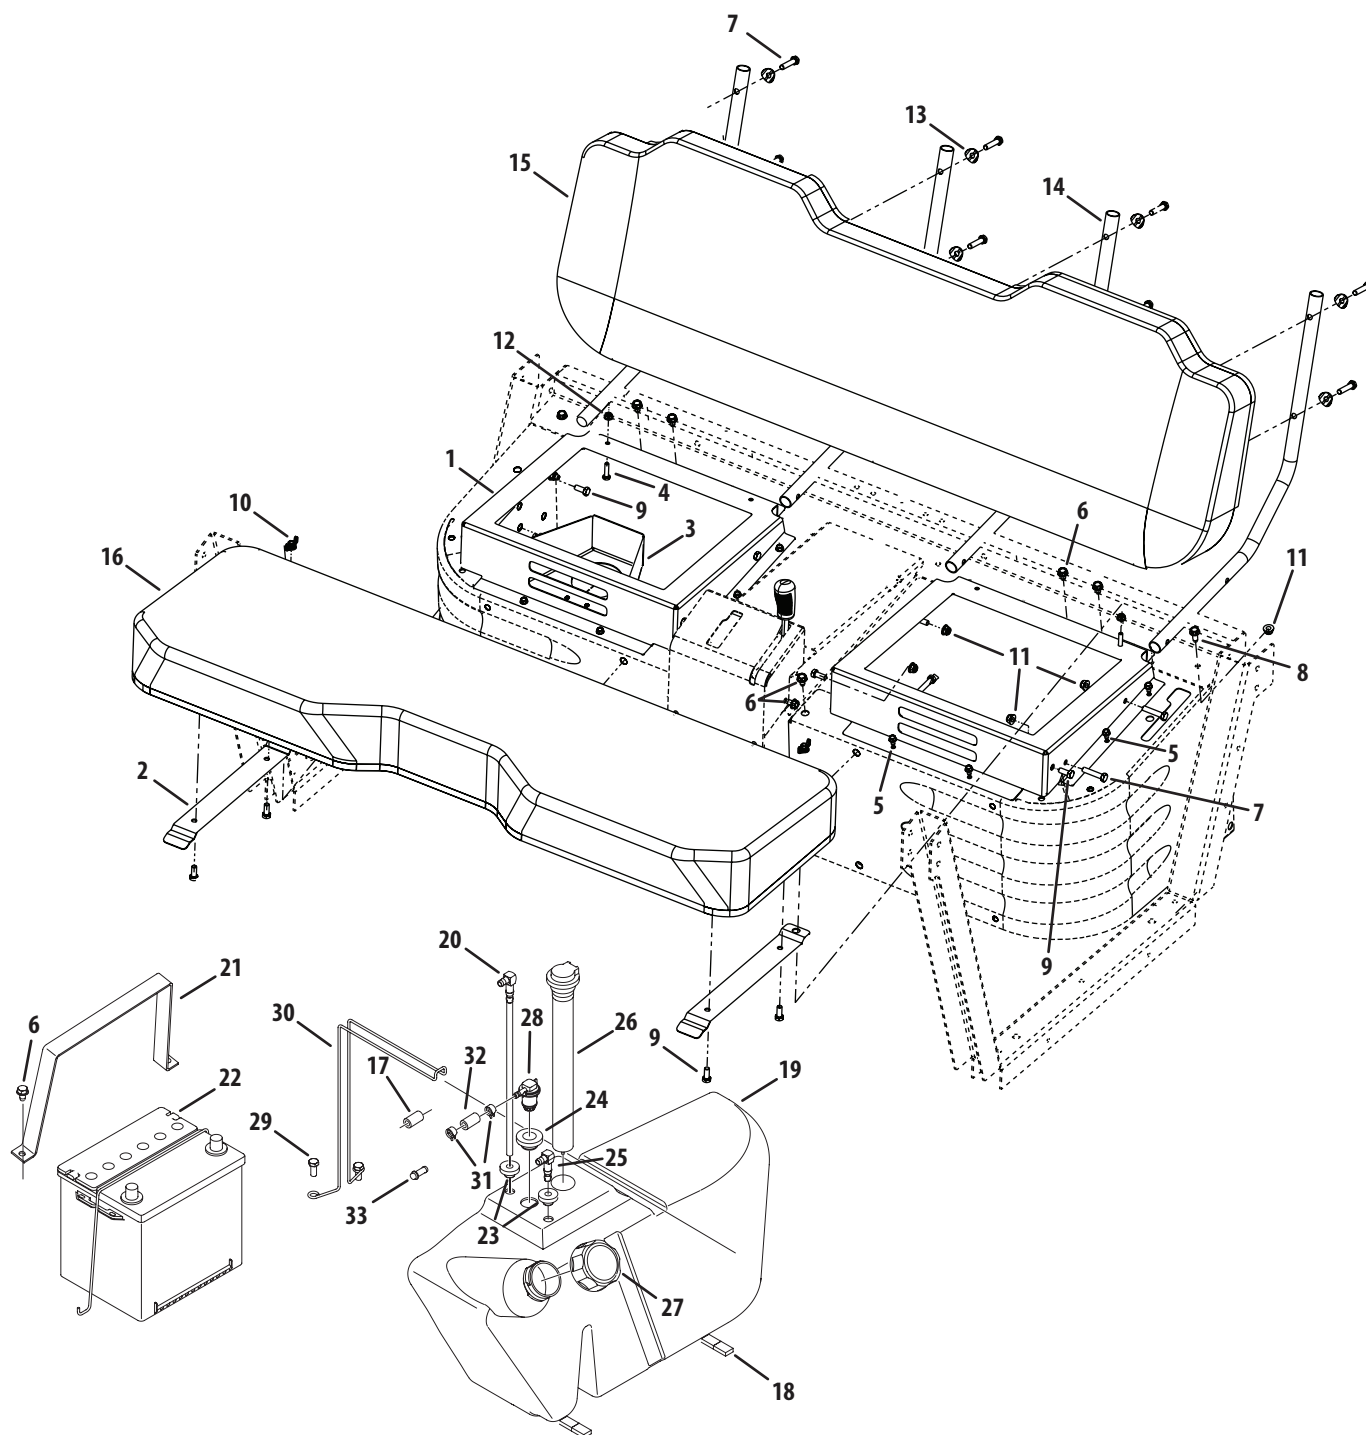

Bench Seat (If Equipped)

Ref No.	Part Number	Description
1	707-05089	Plt., Seat, Bench
2	707-05105	Brkt., Mt., Seat, Bench
3	707-05108	Brkt., Shld., Heat, Bench
4	710-0597	Hhcs., 1/4-20 x 1.00
5	710-0599	Scr., TT, 1/4-20 x .500
6	710-0607	Scr., TT, 5/16-18 x .500
7	710-0805	Hhcs., 5/16-18 x 1.50
8	710-1260A	Scr., TT, 5/16-18 x .750
9	710-3008	Hhcs., 5/16-18 x .750
10	912-0397	Nut, Wing, 1/4-20
11	712-04063	Nut, Flglk., 5/16-18
12	712-04064	Nut, Flglk., 1/4-20
13	936-0451	Wash., Sdl., .320 x .93 x .060
14	750-04857	Tube, Mt., Seat, Back
15	757-04067	Seat, Back, Bench
16	757-04068	Seat, Bench, Bottom
17	751-10681	Line, Fuel, HP
18	722-3022-12	Tape, .625 Wide X.25 Thk Foam
19	951-04208^	Tank assembly, Fuel


Ref No.	Part Number	Description
	951-04158†	Tank assembly, Fuel
	951-04159‡	Tank assembly, Fuel
20	751-3174^†	Ftg., Fuel, Pickup
21	707-04870A-0637	Brkt., Mt., Battery
22	925-04514	Battery, 450 CCA Wet
23	735-04065	Bush, Tank, Gas
24	735-04067	Bush, Tank, Vent
25	751-10288	Ftg, Fuel, Pickup
26	951-10361	Sensor, Fuel, Low
27	751-10374‡	Cap, Fuel
	751-10373†	Cap, Fuel
28	951-10375	Ftg, Fuel, Vent
29	710-0607‡	Screw, 5/16-18 x .500
	710-3008†	Screw, 5/16-18 x .75
30	732-04357	Wire, tank, fuel
31	726-0205†	Clamp, Hose, .490 Dia.
32	751-10350‡†	Fuel Line, 5/16 Id
	751-10349^†	Hose, Fuel Line, Low Perm.
33	737-0296†	Vent, 3/8 Dia.

‡ Kohler Engine

† Diesel Engine

^ Kohler EFI Engine


Operator Protective Structure and Seat Belts

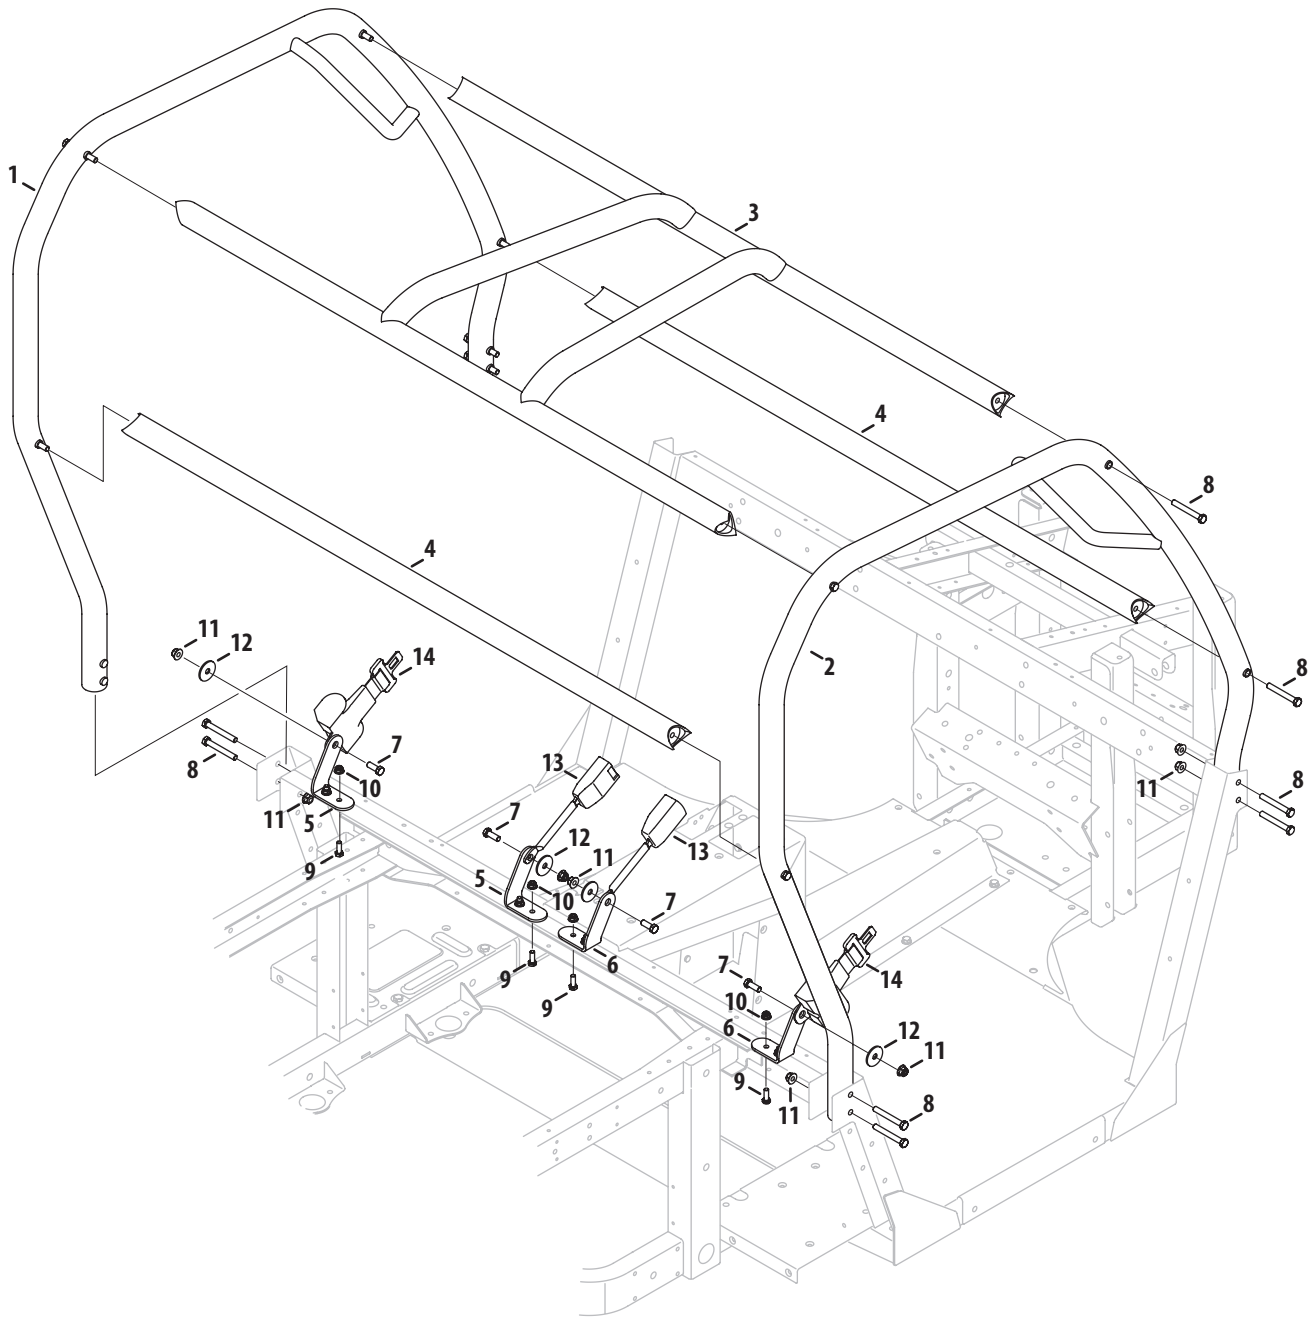

Ref No.	Part Number	Description
1	607-04195	Frm Assembly, OPS, LH
2	607-04196	Frm Assembly, OPS, RH
3	607-04197	Frm Assembly, OPS, Roof
4	607-04198	Frm Assembly, OPS, Frt
5	707-04790-0637	Brkt., Seat Belt, LH
6	707-04863-0637	Brkt., Seat Belt, RH
7	710-0514	Screw, 3/8-16 x 1.00

Ref No.	Part Number	Description
8	710-04656	Screw, 3/8-16 x 2.75
9	710-3038	Screw, 5/16-18 x .875
10	712-04063	Nut, Flglk, 5/16-18
11	712-04065	Nut, Flglk, 3/8-16
12	936-3039	Wash, Flat, .406 x 1.5 x .105
13	757-04048	Belt, Seat
14	757-04049	Belt, Seat


Euro Cab (If Equipped) - Covering Elements

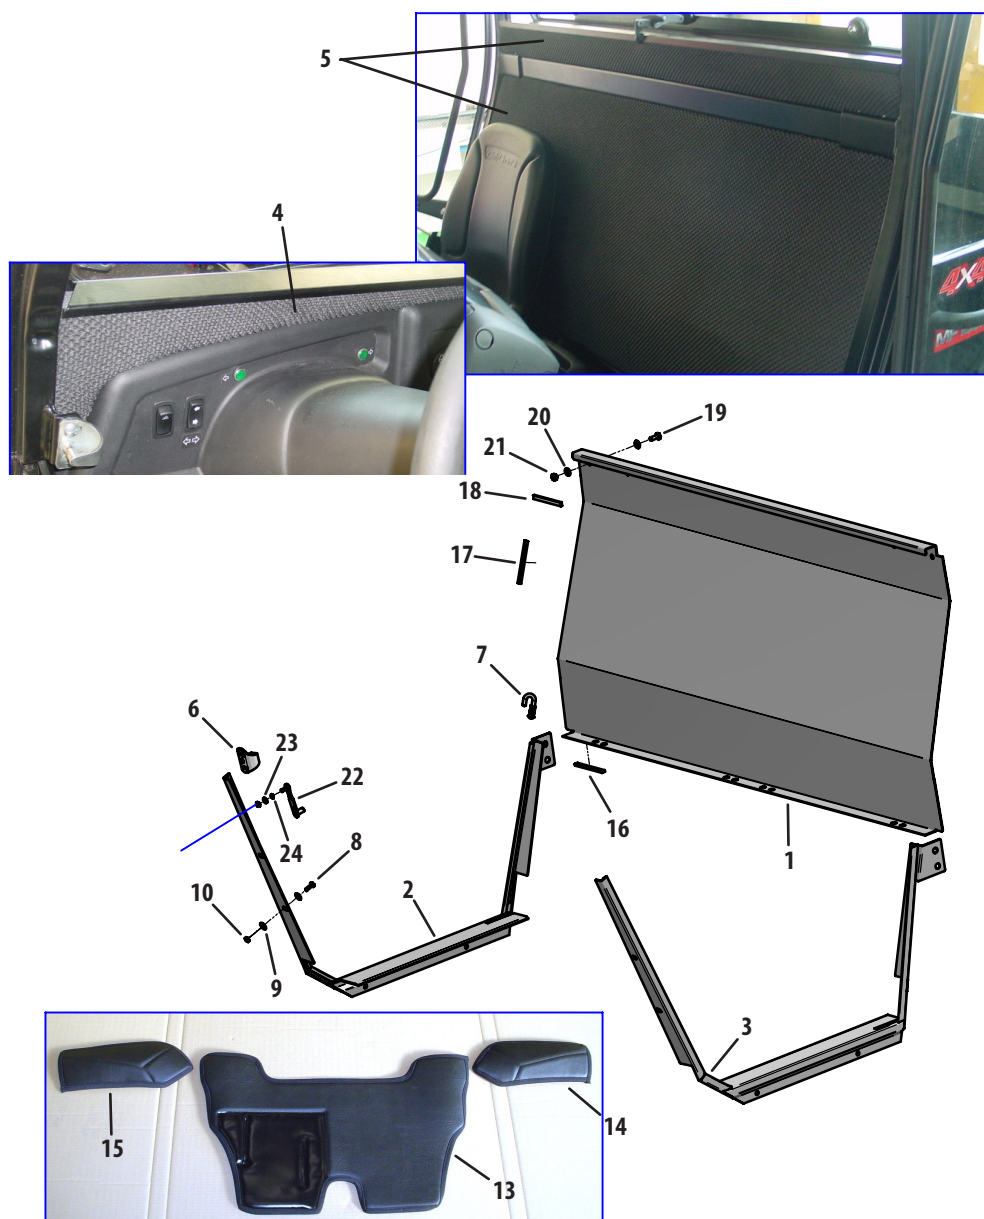

Ref No.	Part Number	Description
1	WT-2-120-37-820	Rear Plate
2	WT-2-120-37-130	Door Sill - RH
3	WT-2-120-37-131	Door Sill - LH
4	WT-2-120-37-120	Cover - Front Slat
5	WT-2-120-37-821	Padding - Rear Plate
6	WT-P-002-00-200	locking bolt
7	WT-P-002-00-150	Mounting (Spring)
8	WT-7-112-06-020	Screw
9	WT-7-200-06-018	Washer
10	WT-7-220-10-060	Nut
13	WT-2-120-37-826	Covering - Center


Ref No.	Part Number	Description
14	WT-2-120-37-827	Padding - RH
15	WT-2-120-37-828	Padding - LH
16	WT-6-310-60-036	Seal
17	WT-6-310-60-036	Seal
18	WT-6-310-60-036	Seal
19	WT-7-112-08-020	Screw
20	WT-7-200-08-018	Washer
21	WT-7-220-10-080	Nut
22	WT-2-112-10-250	Holder
23	WT-7-200-06-014	Washer
24	WT-7-210-06-011	Washer

Euro Cab (If Equipped) - Door

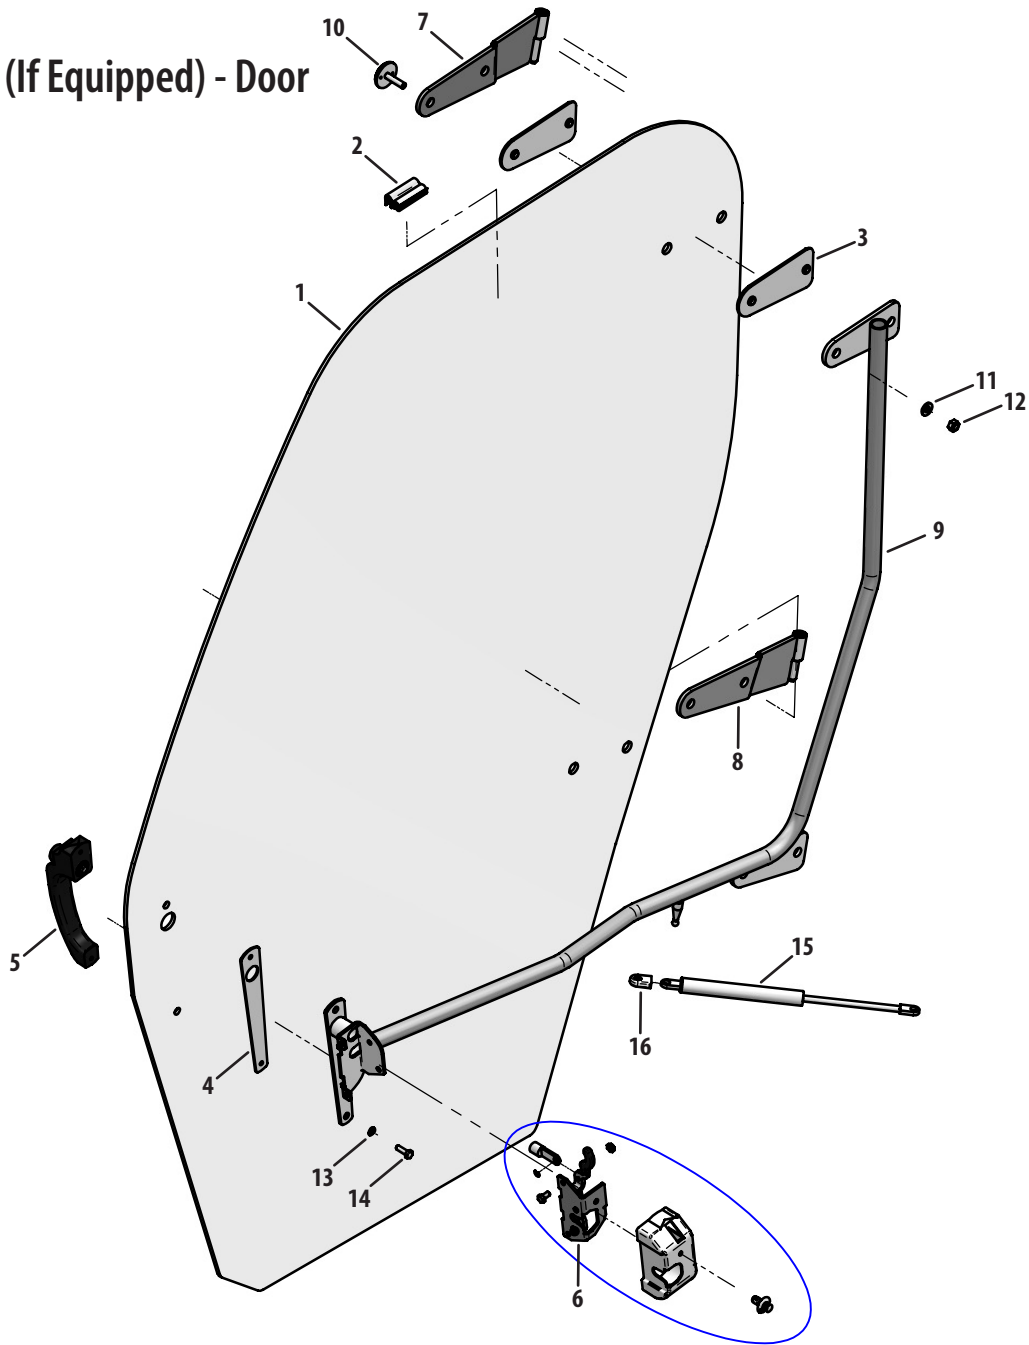

Ref No.	Part Number	Description
1	WT-4-120-37-710	Door - Glass
2	WT-6-310-10-001	Gasket - Seal
3	WT-7-980-00-614	Rubber
4	WT-7-980-00-600	Rubber
5	WT-P-000-00-660	Handle
6	WT-P-002-83-644	Lock
	WT-P-002-83-643	Lock
7	WT-2-120-37-610	Door Cone - Top RH
	WT-2-120-37-611	Door Cone - Top LH
8	WT-2-120-37-612	Door Cone - Below RH


Ref No.	Part Number	Description
	WT-2-120-37-613	Door Cone - Below LH
9	WT-2-120-37-620	Door Bail - RH
	WT-2-120-37-621	Door Bail - LH
10	WT-7-980-50-105	Screw
11	WT-7-200-08-018	Washer
12	WT-7-220-10-080	Nut
13	WT-7-210-06-011	Washer
14	WT-7-112-06-020	Screw
15	WT-6-100-10-320	Spring - Pneumatic
16	WT-7-980-00-800	Bracket

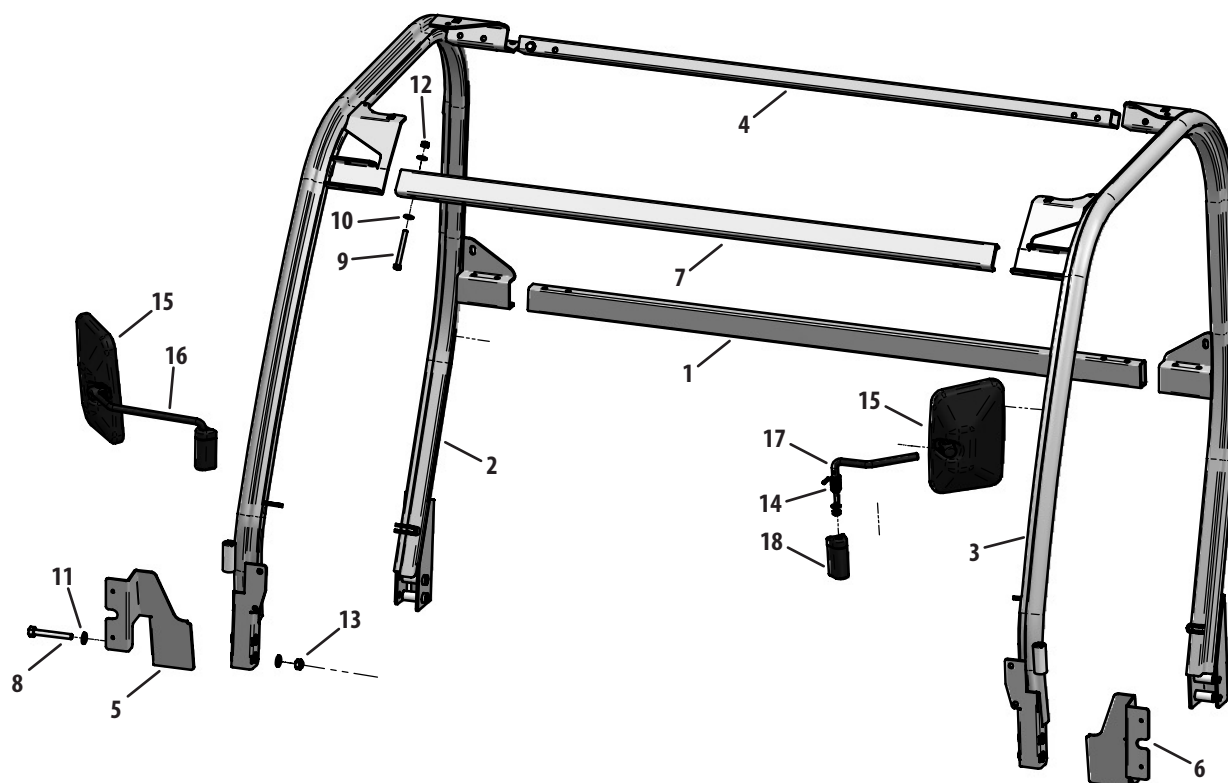

Ref No.	Part Number	Description
1	WT-2-120-37-114	Cross Tube - Rear
2	WT-2-120-37-115	Side Element - RH
3	WT-2-120-37-116	Side Element - LH
4	WT-2-120-37-118	Tube - Rear
5	WT-2-120-37-294	Console - Flasher RH
6	WT-2-120-37-295	Console - Flasher LH
7	WT-2-120-37-117	Cross Tube - Front
8	WT-7-110-10-080	Screw
9	WT-7-112-08-075	Screw

Ref No.	Part Number	Description
10	WT-7-200-08-018	Washer
11	WT-7-200-11-022	Washer
12	WT-7-220-10-080	Nut
13	WT-7-220-10-100	Nut
14	WT-6-000-10-647	Pressure Spring
15	WT-6-200-26-166	Mirror
16	WT-P-002-00-010	Mirror Support ri
17	WT-P-002-00-013	Mirror Support le
18	WT-7-980-00-511	Cover


Euro Cab (If Equipped) - Front Glass

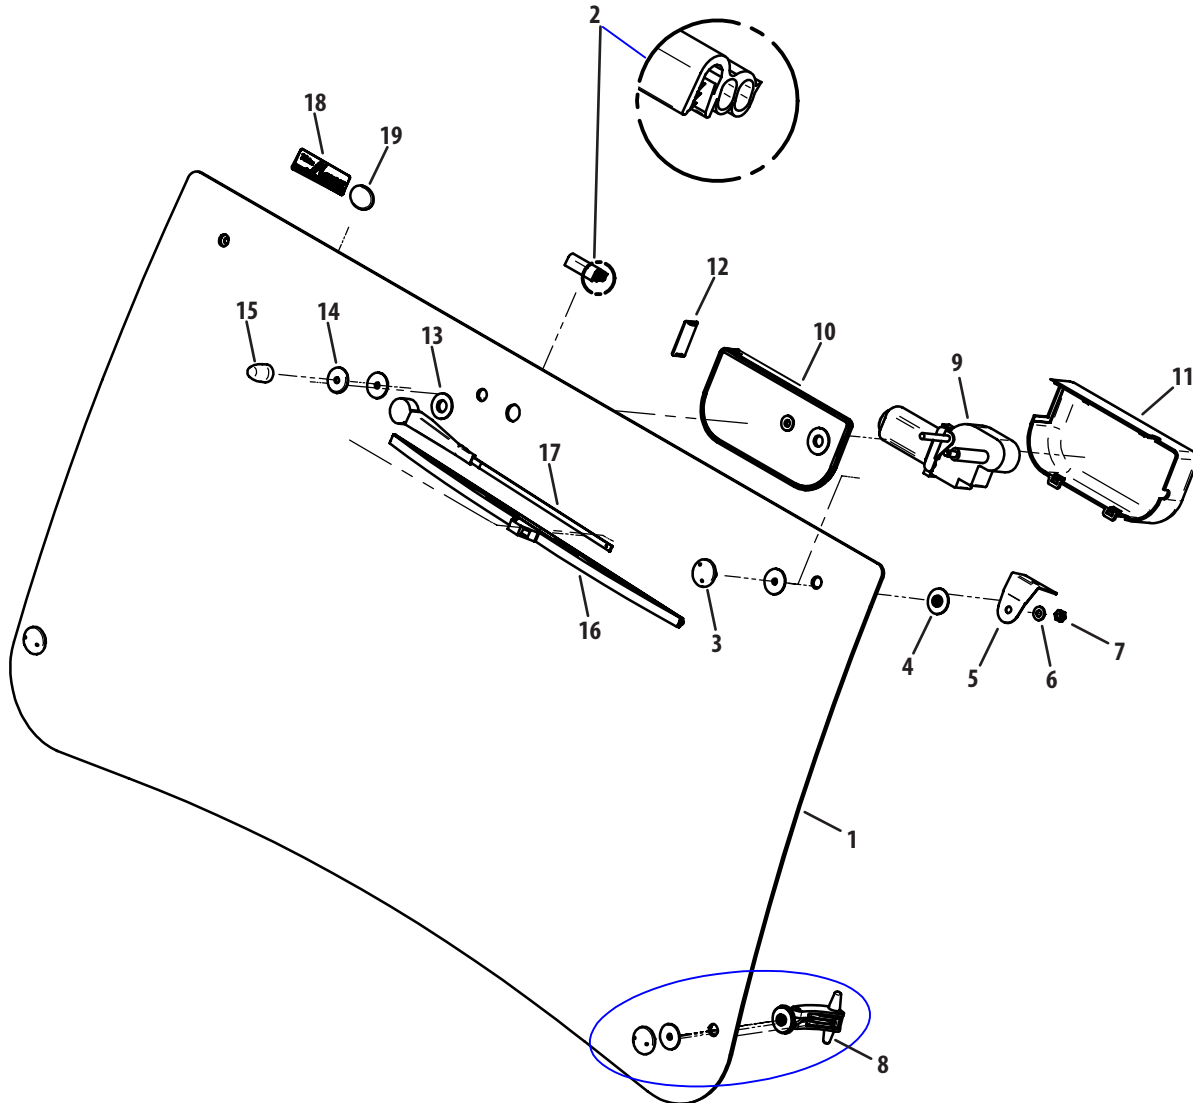


Ref No.	Part Number	Description
1	WT-4-120-37-252	Windshield - Front
2	WT-6-310-10-001	Gasket - Seal
3	WT-7-980-50-103	Screw
4	WT-7-980-14-513	Washer
5	WT-7-825-00-417	Bezel
6	WT-7-200-08-018	Washer
7	WT-7-220-10-080	Nut
8	WT-P-002-14-540	Window Opener
9	WT-6-250-12-880	Wiper Motor
10	WT-7-980-00-019	Cover

Ref No.	Part Number	Description
11	WT-7-980-00-018	Cover
12	WT-7-980-10-212	Orifice
13	WT-7-980-14-518	Washer
14	WT-7-980-14-515	Washer
15	WT-7-980-00-015	Covering
16	WT-6-254-01-550	Wiper Blade
17	WT-6-253-10-408	Wiper Arm
18	WT-6-410-10-065	Emblem - Winshield
19	WT-6-410-10-067	Emblem

Euro Cab (If Equipped) - Front Lighting

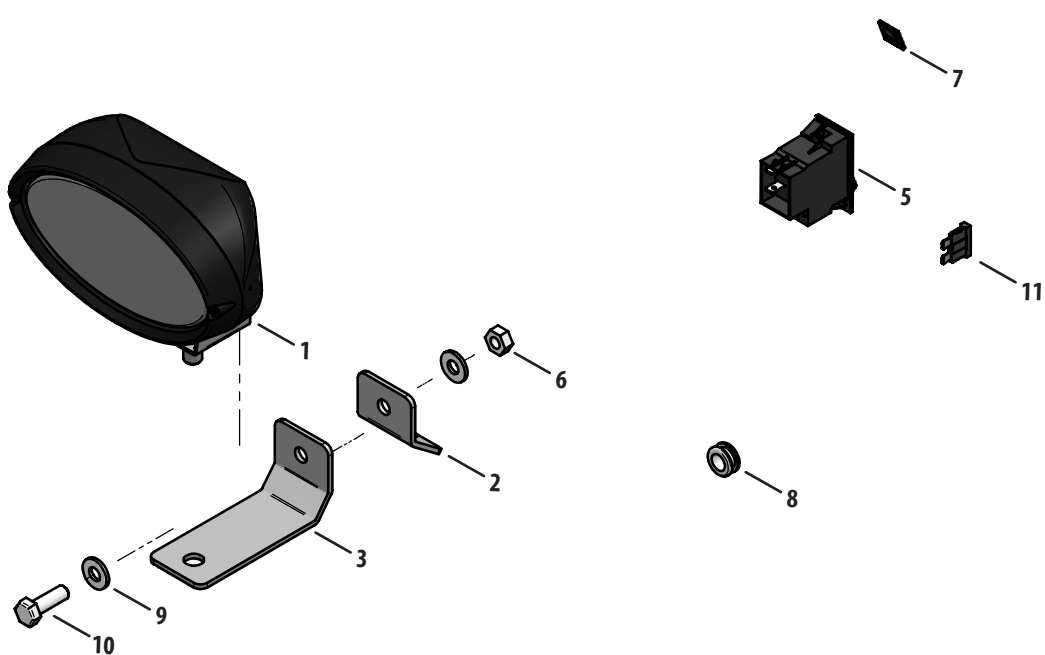


Euro Cab (If Equipped) - Rear Lighting

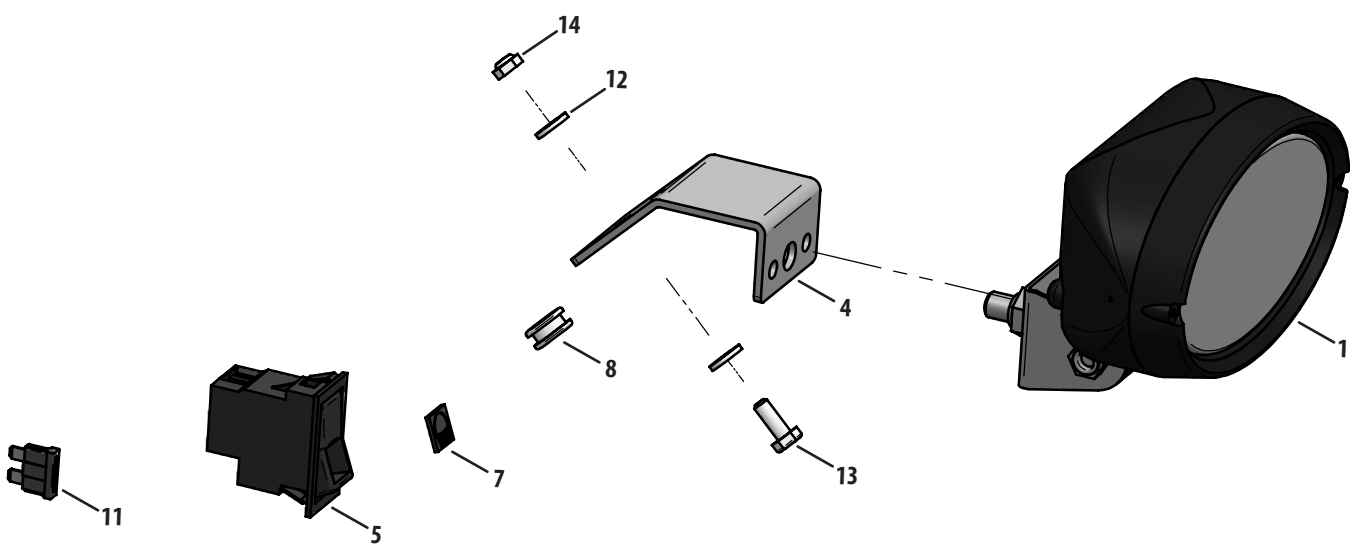


Ref No.	Part Number	Description
1	WT-6-210-20-904	Headlight H3
2	WT-2-120-37-892	Console - Lamp Inside
3	WT-2-120-37-891	Console - Lamp Outside
4	WT-2-120-37-890	Console - Lamp
5	WT-6-260-10-210	Rocker Switch
6	WT-7-220-10-080	Nut
7	WT-6-410-00-215	Emblem - Spotlight
8	WT-6-357-30-013	Grommet

Ref No.	Part Number	Description
9	WT-7-200-08-018	Washer
10	WT-7-112-08-025	Screw
11	WT-6-260-25-110	Fuse
12	WT-7-200-06-014	Washer
13	WT-7-112-06-016	Screw
14	WT-7-220-10-060	Nut
—	WT-2-120-37-705	Cable (H-3 Front Light)
—	WT-2-353-51-708	Cable - Wiper (H-3 Rear Light)

Euro Cab (If Equipped) - Rear Glass

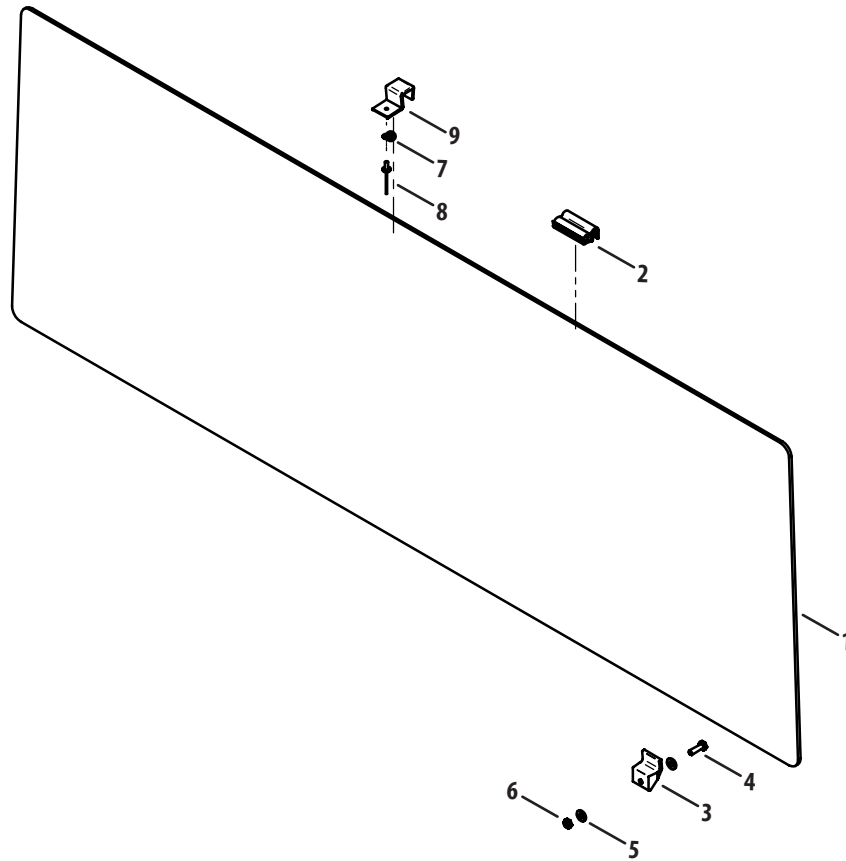


Ref No.	Part Number	Description
1	WT-4-120-37-250	Windshield - Read
2	WT-6-310-10-001	Gasket - Seal
3	WT-7-980-14-541	Bezel
4	WT-7-112-06-020	Screw
5	WT-7-200-06-014	Washer
6	WT-7-220-10-060	Nut
7	WT-7-200-04-010	Washer
8	WT-7-310-04-120	Rivet
9	WT-7-980-14-543	Bracket

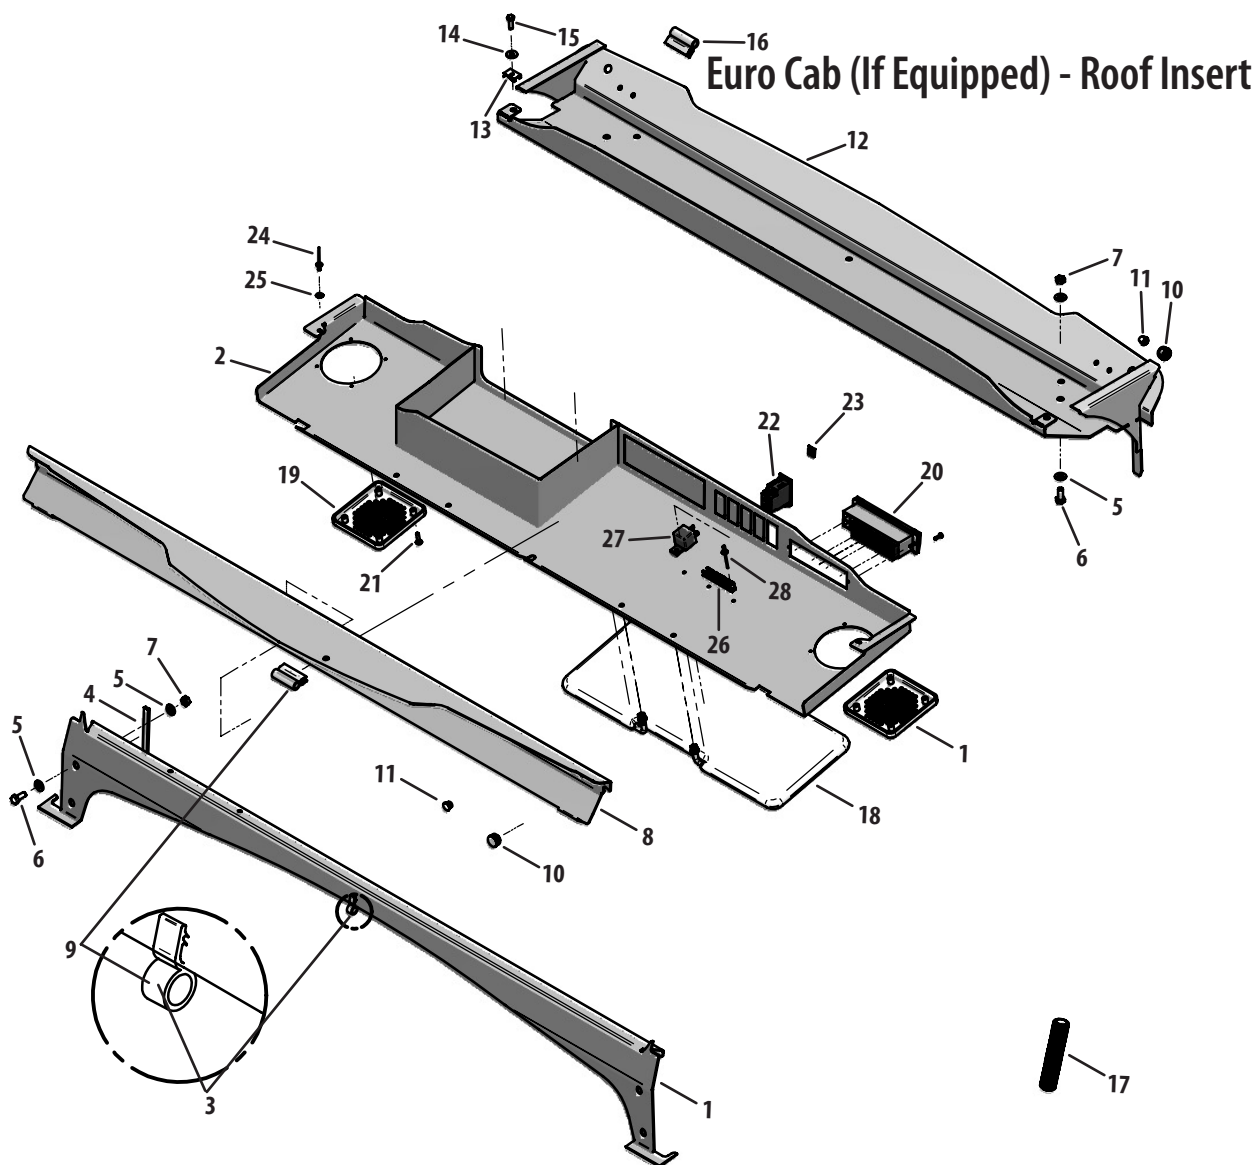

Ref No.	Part Number	Description
1	WT-2-120-37-119	Front Slat
2	WT-2-120-37-880	Roof Insert
3	WT-6-310-10-002	Seal, 40 mm
4	WT-6-310-60-036	Seal
5	WT-7-200-08-018	Washer
6	WT-7-112-08-020	Screw
7	WT-7-220-10-080	Nut
8	WT-2-120-37-141	Roof Cover - Front
9	WT-6-310-10-002	Seal, 42 mm
10	WT-7-980-14-512	Plug
11	WT-7-980-14-508	Plug
12	WT-2-120-37-140	Roof Cover - Backside
13	WT-7-315-60-060	Nut
14	WT-7-200-06-018	Washer
15	WT-7-112-06-020	Screw
16	WT-6-310-10-002	Seal


Ref No.	Part Number	Description
17	WT-6-357-40-230	Hose
18	WT-P-002-00-530	sun visor
19	WT-7-980-00-010	Cover
20	WT-P-002-03-240	fuse box
21	WT-7-127-35-019	screw
22	WT-6-260-10-240	switch
23	WT-6-410-00-200	Emblem
24	WT-7-310-04-120	Rivet
25	WT-7-200-04-012	Washer
26	WT-7-825-40-010	Ground Bar
27	WT-6-260-50-200	Relay - 12V
28	WT-7-310-04-100	Rivet
—	WT-6-260-25-107	Fuse
—	WT-2-870-47-700	Cable - Wiper
—	WT-2-870-47-704	Cable

Euro Cab (If Equipped) - Roof

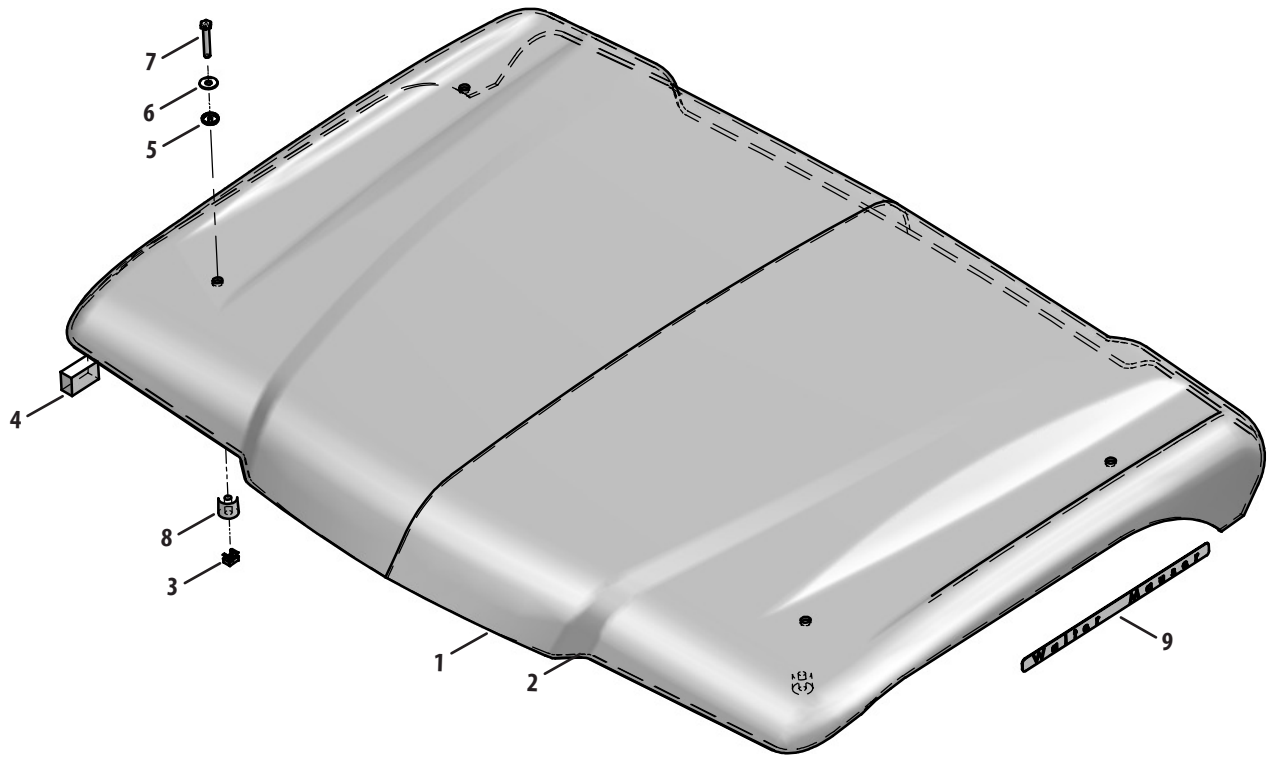

Ref No.	Part Number	Description
1	WT-P-800-37-330	Roof
2	WT-P-800-37-331	Roof
3	WT-7-315-47-080	Nut
4	WT-6-310-60-601	Seal
5	WT-7-980-14-550	Washer
6	WT-7-200-08-025	Washer
7	WT-7-112-08-050	Screw
8	WT-7-980-83-304	Shim
9	WT-6-410-10-042	Emblem - Windshield

Euro Cab (If Equipped) - Rotating Light

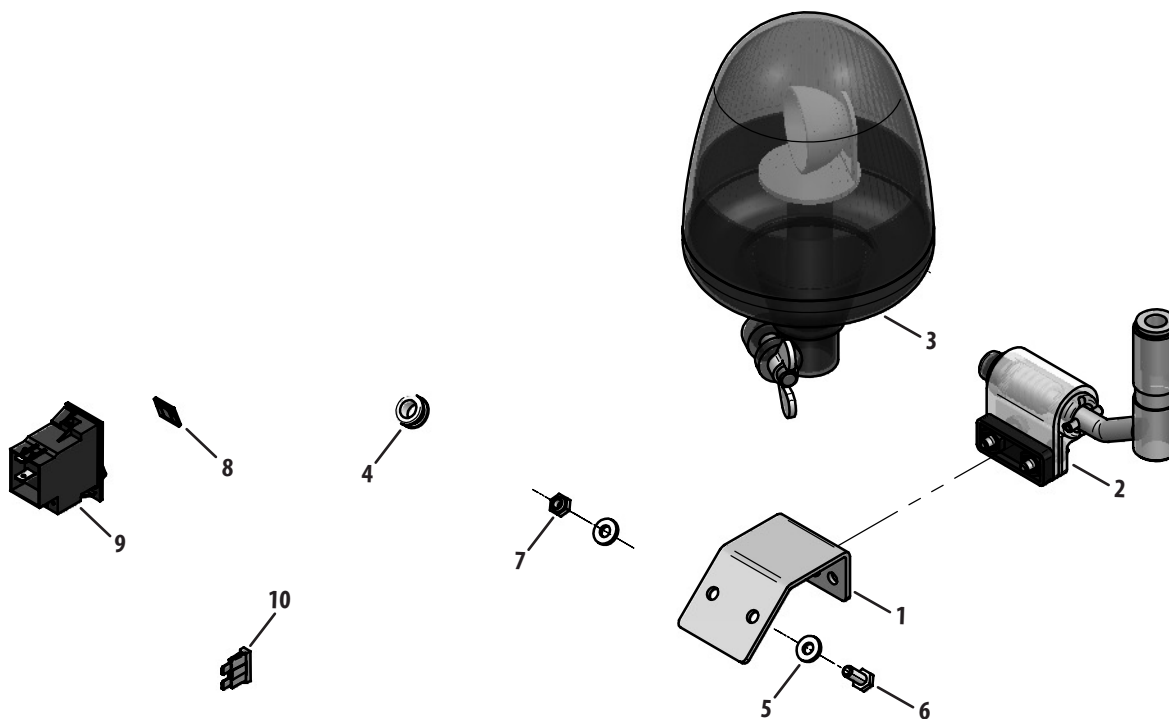

Ref No.	Part Number	Description
1	WT-2-120-37-890	Console - Lamp
2	WT-W-000-00-315	Console - Beacon LGT
3	WT-6-210-25-200	Light - Rotating
4	WT-6-357-30-013	Grommet
5	WT-7-200-06-014	Washer
6	WT-7-112-06-016	Screw
7	WT-7-220-10-060	Nut
8	WT-6-410-00-211	Emblem - Light
9	WT-6-260-10-210	Rocker Switch
10	WT-6-260-25-105	Fuse
—	WT-2-870-47-706	Cable - Rotating Light

[illegible]

[illegible]



To order replacement parts, call the Customer Dealer Referral Line at 1-877-282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
