

Cub Cadet[®]

ILLUSTRATED PARTS MANUAL

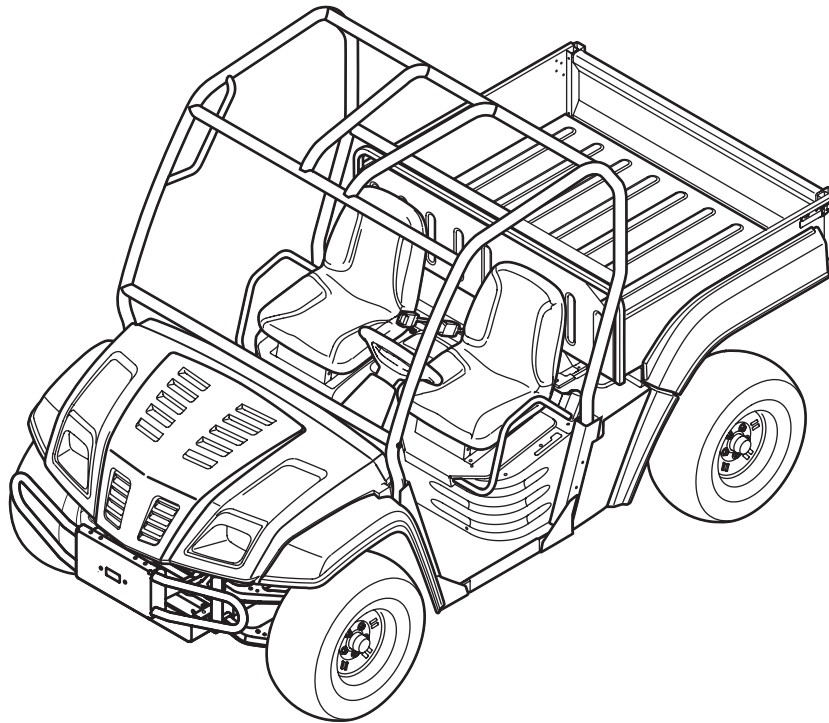

4 x 4 Utility Vehicle - Model Series 460

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Utility Vehicle. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

<u>Radiator</u>	<u>3</u>	<u>Operator Protective Structure & Seat Belts.....</u>	<u>19</u>
<u>Rear Left Fender & Cargo Bed</u>	<u>4</u>	<u>Transmission.....</u>	<u>20</u>
<u>Rear Right Fender and Cargo Bed</u>	<u>6</u>	<u>Axles & Steering.....</u>	<u>22</u>
<u>Pedals and Levers.....</u>	<u>8</u>	<u>Electric Bed Lift & Front Hitch.....</u>	<u>25</u>
<u>Frame and Bumper</u>	<u>10</u>	<u>Yanmar Engine</u>	<u>26</u>
<u>Front Fenders and Dash</u>	<u>12</u>	<u>Labels</u>	<u>47</u>
<u>Seats, Battery & Fuel Tank.....</u>	<u>14</u>	<u>Electrical Schematic.....</u>	<u>48</u>
<u>Yanmar Engine & Transmission Accessories.....</u>	<u>16</u>		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--


SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:


0637	Black	0685	Blue (Cub Cadet)
4021	Yellow (Cub Cadet)	0691	Black Jack (Cub Cadet Commercial)
0499	Beige (Cub Cadet)		

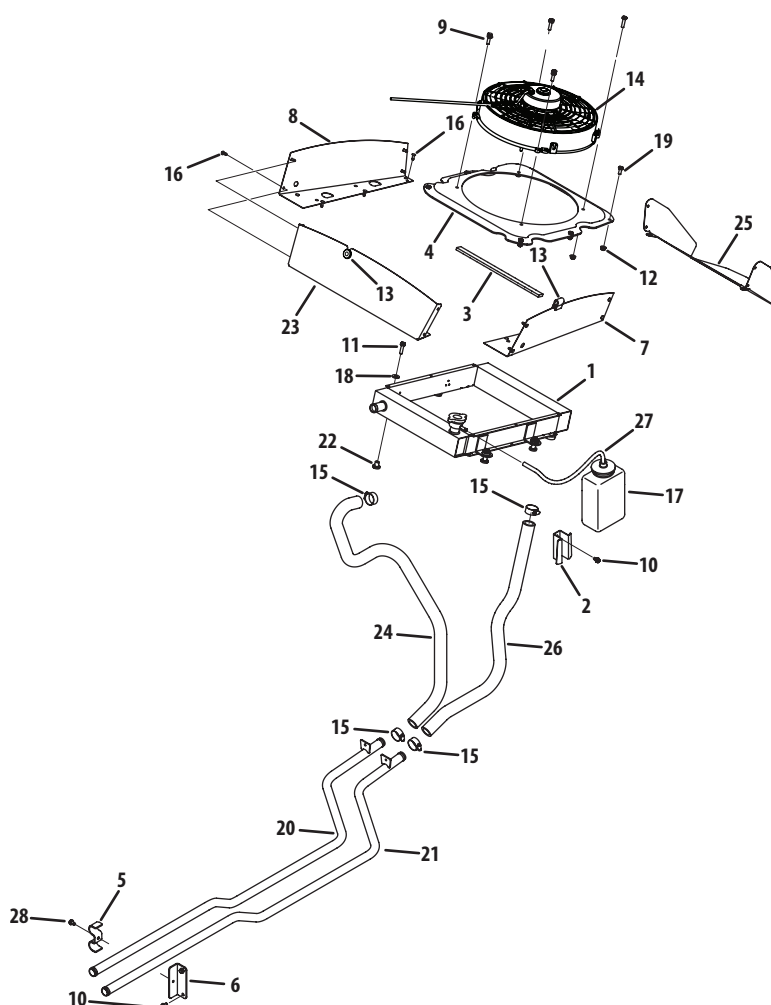

Ref No.	Part Number	Description
1	951-04148	Radiator Assembly
2	703-05461B	Overflow Bottle Bracket
3	721-04382	Tape, .625 x .25
4	731-05688	Fan Mount Shroud
5	707-04659	Tube Bracket
6	707-04697	Radiator Hose Bracket
7	707-04894	Shroud, RH
8	707-04895	Shroud, LH
9	710-0597	Hex Screw, 1/4-20 x 1.00
10	710-0599	Hex Washer Screw, 1/4-20 x 0.500
11	710-0788	Hex Washer Screw, 1/4-20 x 1.000
12	712-04064	Flange Lock Nut, 1/4-20
13	735-0225	Rubber Grommet
14	725-04766	Electric Fan, 12v


Ref No.	Part Number	Description
15	726-04114	Adjustable Hose Clamp
16	928-0123	Pop Rivet, 3/16 x .450
17	731-04731	Coolant Overflow Container
18	736-0173	Flat Washer, .28 x .74 x .063
19	710-0751	Screw, 1/4-20 x .620
20	750-04769A	Inside Radiator Tube, 4 x 4
21	750-04768	Outside Radiator Tube, 4 x 4
22	750-04762	Spacer, .26 x .41 x .75
23	707-04896	Rear Shroud
24	751-10256	Front Radiator Hose, 4 x 4
25	707-04897	Front Shroud
26	751-10261	Front Radiator Hose, 4 x 4
27	751-10377	Radiator Overflow Tube
28	710-0642	Hex Washer Screw, 1/4-20 x 0.750

Rear Left Fender & Cargo Bed

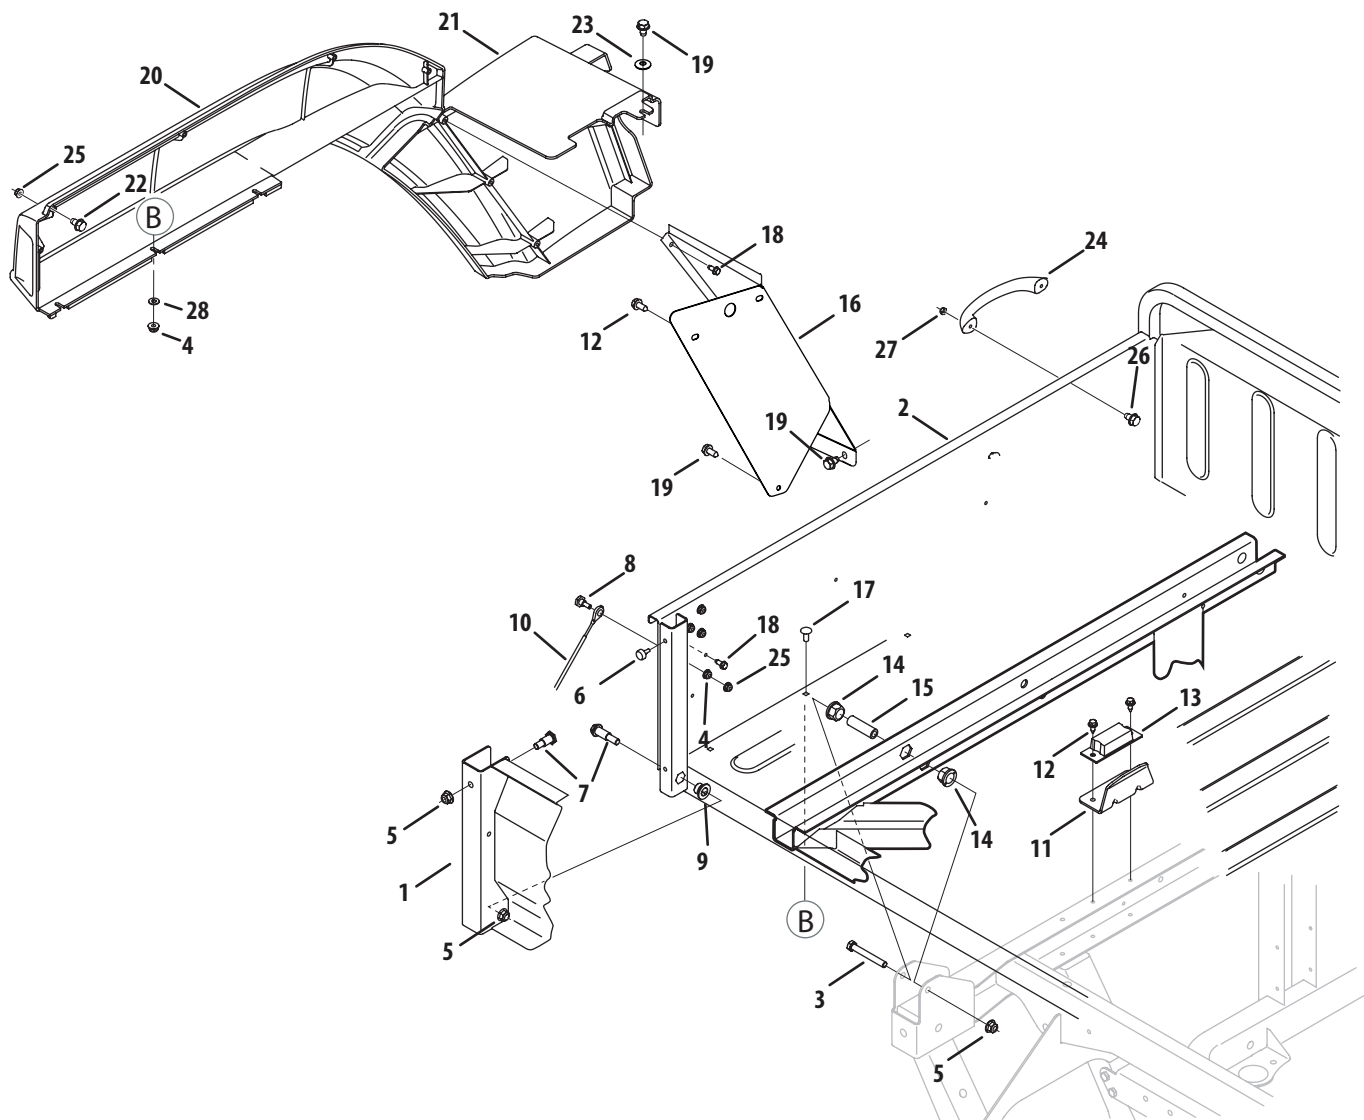


Ref No.	Part Number	Description
1	607-04159B	Tailgate Assembly, Black
2	607-04191C	Bed Box Assembly
3	710-3022	Screw, 3/8-16 x 2.75
4	712-04064	Flange Lock Nut, 1/4-20
5	712-04065	Flange Lock Nut, 3/8-16
6	735-0271A	Bumper, .62 x .3
7	738-0430	Shldr. Screw, 3/8-16 x .50 x .685
8	738-1023A	Shldr. Screw, 1/4-20 x .375 x .280
9	741-0324A	Hex Flange Bearing, .506 x .590
10	746-04245	Lanyard Cable
11	707-04786	Bed Guide Bracket
12	710-1652	Hex Washer Screw, 1/4-20 x .625
13	731-04016	Suspension Extension Bumper
14	948-0229	Hex Flange Bearing, .629
15	750-04634	Spacer, .390x .625 x 2.03
16	707-04728D	Shield Bracket, LH
17	710-0134	Carriage Screw, 1/4-20 x .62
18	710-04261	Hex Washer Screw, #12-16 x .50
19	710-04484	Screw, 5/16-18 x 0.750
20	931-05280C	Rear Fender, LH
21	931-05282B	Lower Rear Fender, LH
22	738-04505A	Shoulder Screw, .280 x .310 x 1/4-20
23	736-0242	Bell Washer, .340 x .872 x .060
24	731-06155	Handle
25	712-0264A	Acorn Nut, 1/4-20
26	710-0924	Machine Screw, 1/4-20 x .750
27	712-0324	Hex Lock Nut, 1/4-20
28	736-0173	Flat Washer, .28 x .74 x .063

Rear Right Fender and Cargo Bed

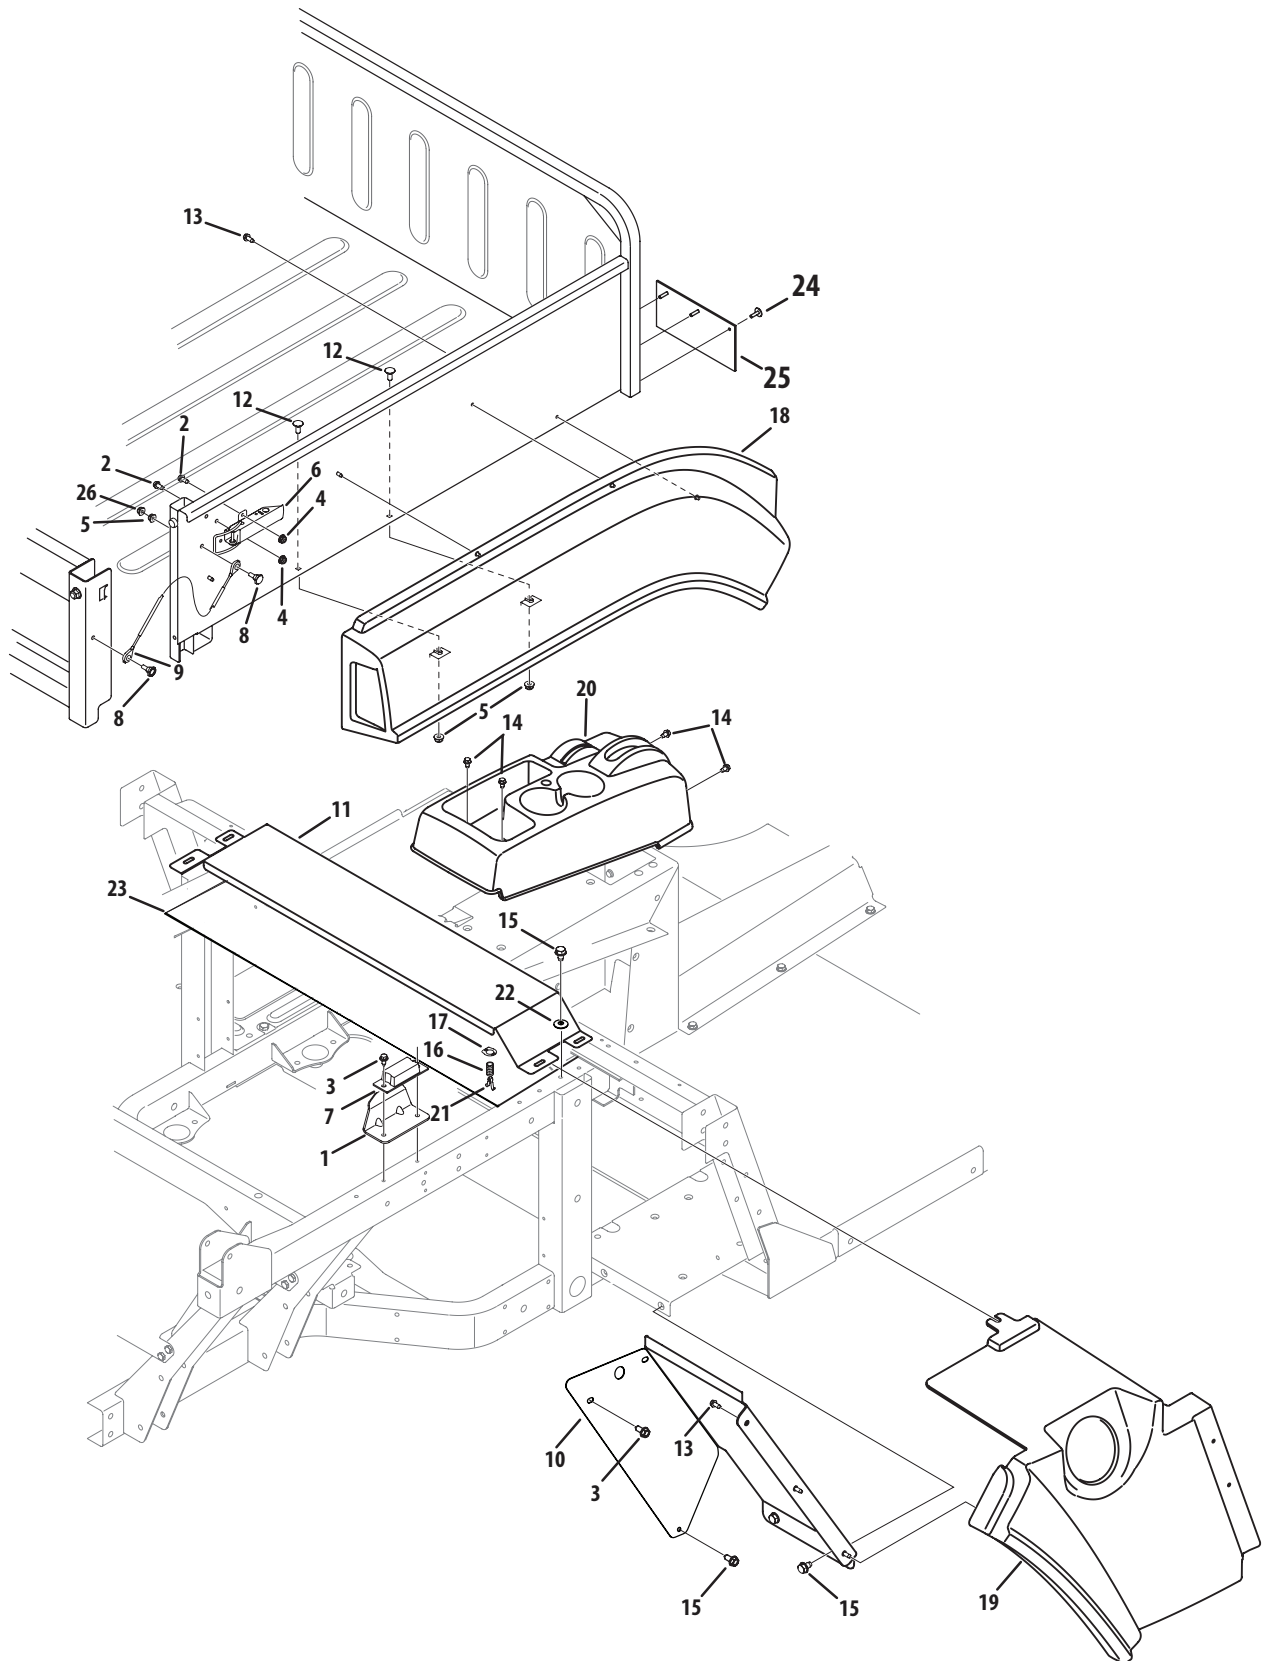

Ref No.	Part Number	Description
1	707-04786	Bed Guide Bracket
2	710-0473A	Machine Screw, #10-24 x 0.500
3	710-1652	Hex Washer Screw, ¼-20 x .625
4	712-0102A	Top Lock Nut, #10-24
5	712-04064	Flange Lock Nut, ¼-20
6	726-04058	Over Center Draw Latch
7	731-04016	Suspension Extension Bumper
8	738-1023A	Shldr. Scr, ¼-20 x .375 x .280
9	746-04245	Lanyard Cable
10	707-04729D	Shield Bracket Brkt, RH
11	707-04748A	UV Cover
12	710-0134	Carriage Screw, ¼-20 x .62
13	710-04261	Hex Washer Screw, #12-16 x .50
14	710-0599	Screw, ¼-20 x 0.500
15	710-04484	Screw, ⅝-18 x 0.750
16	732-0937	Comp. Spring, .40 x .040
17	726-3056	Panel Latch, ¼ Turn
18	931-05281C	Rear Fender Fdr, RH
19	931-05283B	Lower Rear Fender, RH
20	731-05436A	Seat Console
21	732-0936	Clip Spring
22	736-0242	Bell Washer, .340 x .872 x .060
23	751-10435	UV Cover Insullation
24	928-04004	Pop Rivet, .188 dia, 37-50 grip
25	735-04181	Rear Mud Flap
26	712-0264A	Acorn Nut, ¼-20


Pedals and Levers

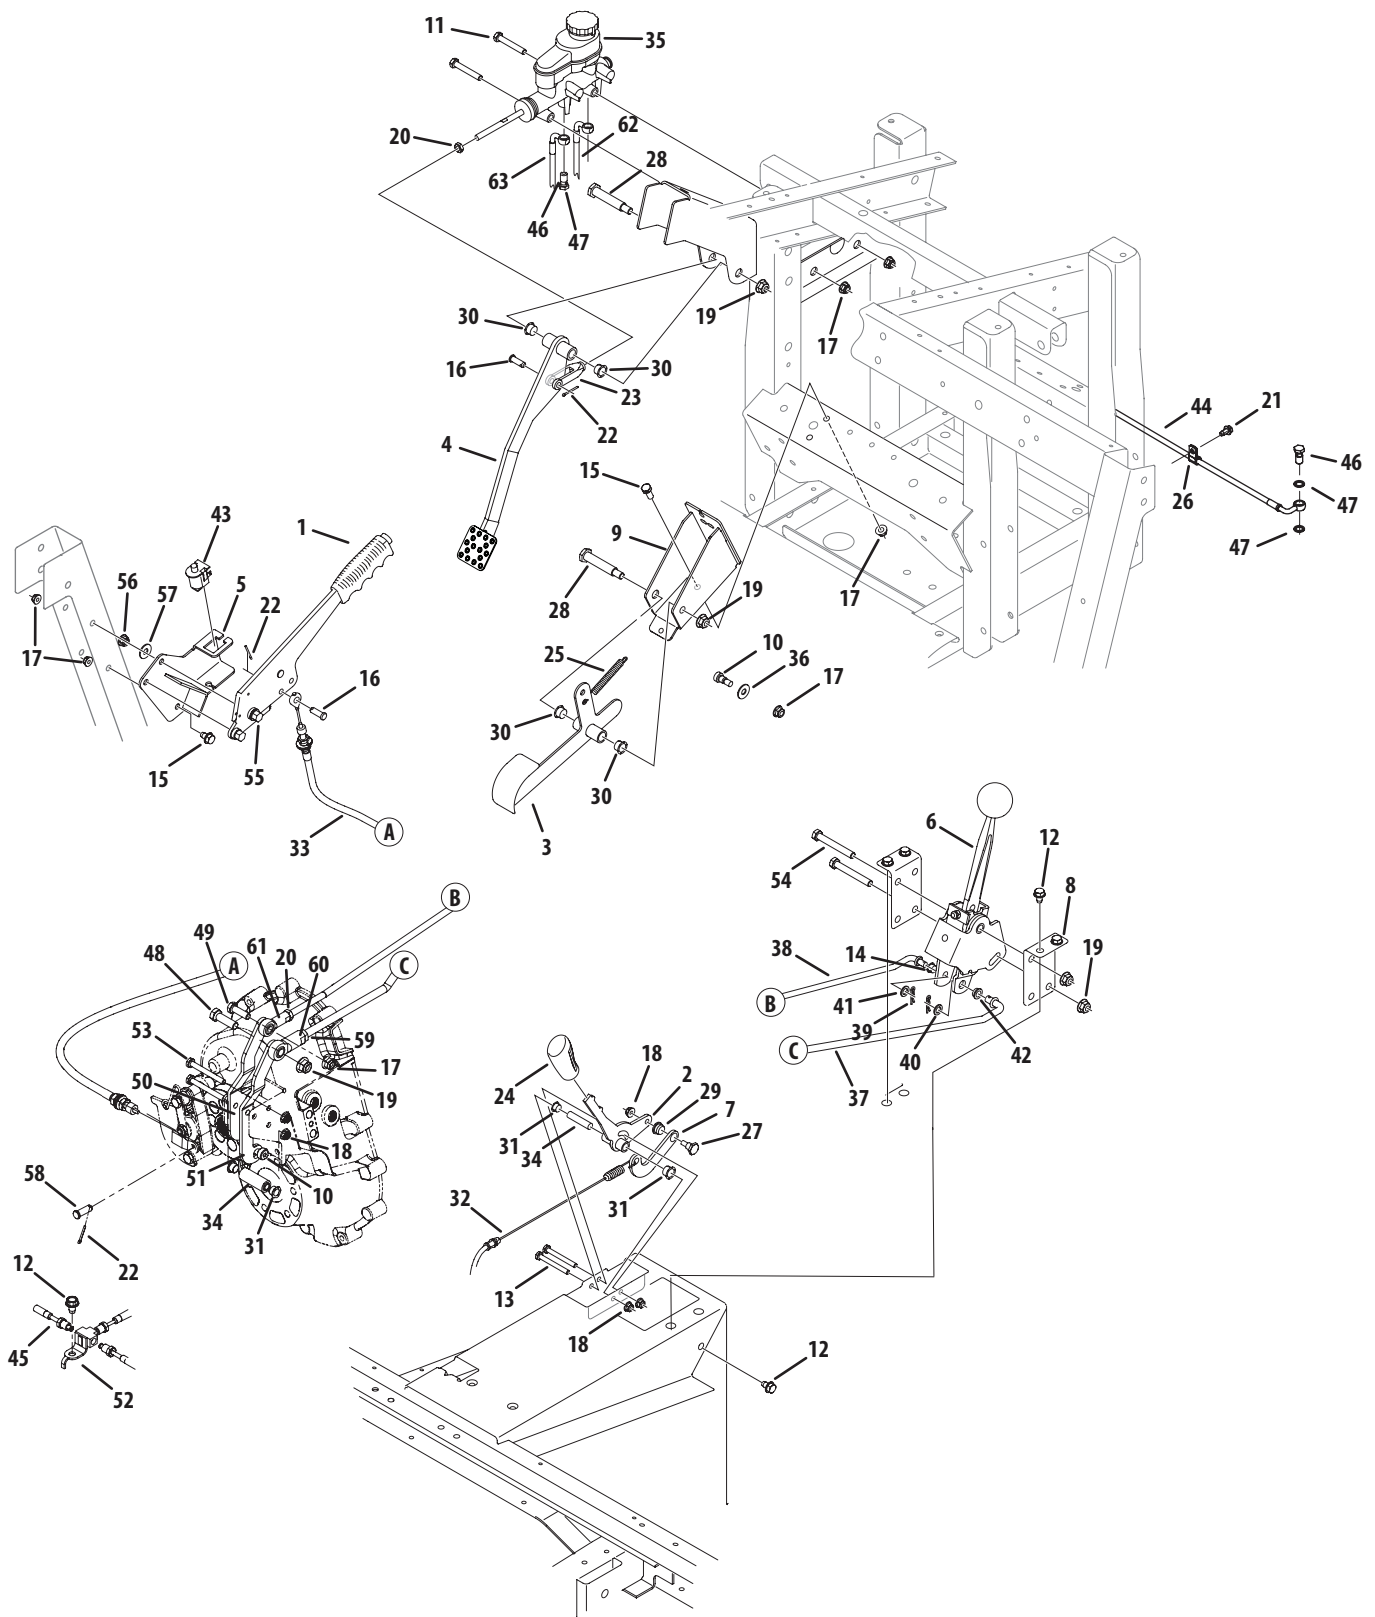

Ref No.	Part Number	Description
1	603-04089	Brake Lever Assembly
2	607-04181A	Differential Lock Lever Assembly
3	607-04188D	Accelerator Pedal Assembly
4	607-04193B	Brake Pedal Assembly
5	607-04208	Parking Brake Mount Brckt. Ass.
6	907-04212A	Hurst® Shift Assembly
7	707-04642	Over Center Pawl Plate
8	707-04805	Shift Console Mount
9	707-04823D	Accelerator Pedal Mount Bracket
10	710-04027	Shldr. Screw, 5/16-18 x .372 x .375
11	710-04039	Screw, 5/16-18 x 2.00
12	710-0607	Screw, 5/16-18 x 0.500
13	710-0641	Screw, 1/4-20 x 2.25
14	741-04198	Flange Bearing, .315
15	710-3008	Screw, 5/16-18 x .75
16	711-05063	Pin, Clevis, 312 Od x 1.0"
17	712-04063	Flange Lock Nut, 5/16-18
18	712-04064	Flange Lock Nut, 1/4-20
19	712-04065	Flange Lock Nut, 3/8-16
20	712-3025	Jam Nut, 5/16-24
21	710-0599	Screw, 1/4-20 x .500
22	914-0111	Cotter Pin, 3/32 x 1.0
23	719-3018	Yoke, 5/16-24
24	731-04735	Selector Handle
25	732-04973	Spring, External, .49 Od x 3.15
26	726-04056	Hose Clamp
27	938-0974	Shldr. Screw, 1/4-20 x .375 x .380
28	738-1011A	Shldr. Screw, 3/8-16 x .500 x 2.230
29	941-0475	Plastic Bushing .380 Id
30	741-0491	Flange Bearing, .500 x .34
31	941-3073	Flange Bearing, .375 x .580 x .250
32	746-04248	Differential Lock Control Cable



Ref No.	Part Number	Description
33	946-04254	Parkign Brake Control Cable
34	750-04500	Differential Lock Pivot Spacer
35	661-04042	Tandem Master Cylinder
36	936-0159	Flat Washer, .349 x .879 x .063
37	747-04528A	Shift Link, F/N/R
38	747-04529A	Hi-Lo Shift Link
39	714-04040	Cotter Pin, 72
40	936-0140	Flat Washer, .385 x .62 x .063
41	936-0264	Flat Washert, .330 x .630 x .0635
42	741-04199	Flange Bearing, .377
43	925-3166	Switch
44	927-04224	Master Cylinder Front Brake Hose
45	927-04228	Master Cylinder Rear Brake Hose
46	737-04129	Banjo Fitting Bolt, M10 x 1.00
47	737-04130	Banjo Fitting Crush Washer
48	710-3005	Screw, 3/8 x 1.25
49	710-0528	Screw, 5/16-18 x 1.25
50	607-04210	Hi-Lo Shift Lever Assembly
51	607-04211	Shift Lever Assembly, F/N/R
52	737-04128	Tee Fitting, -3:45 Degree Flare
53	710-1122	Screw, 1/4-20 x 2.50
54	710-3022	Screw, 3/8-16 x 2.75
55	710-3103	Screw, 5/16-18 x 2.00
56	712-3007	Jam Nut, 5/16-18
57	936-0275	Flat Washer, .344 x .688 x .065
58	711-04585	Clevis Pin
59	712-0711	Jam Nut, 3/8-24
60	723-04038	End Rod, 3/8
61	723-04039	End Rod, 5/16
62	927-04233	Hose, Brake, Master Cyl, Front
63	927-04230	Hose, Brake, Master Cyl, Rear

Frame and Bumper

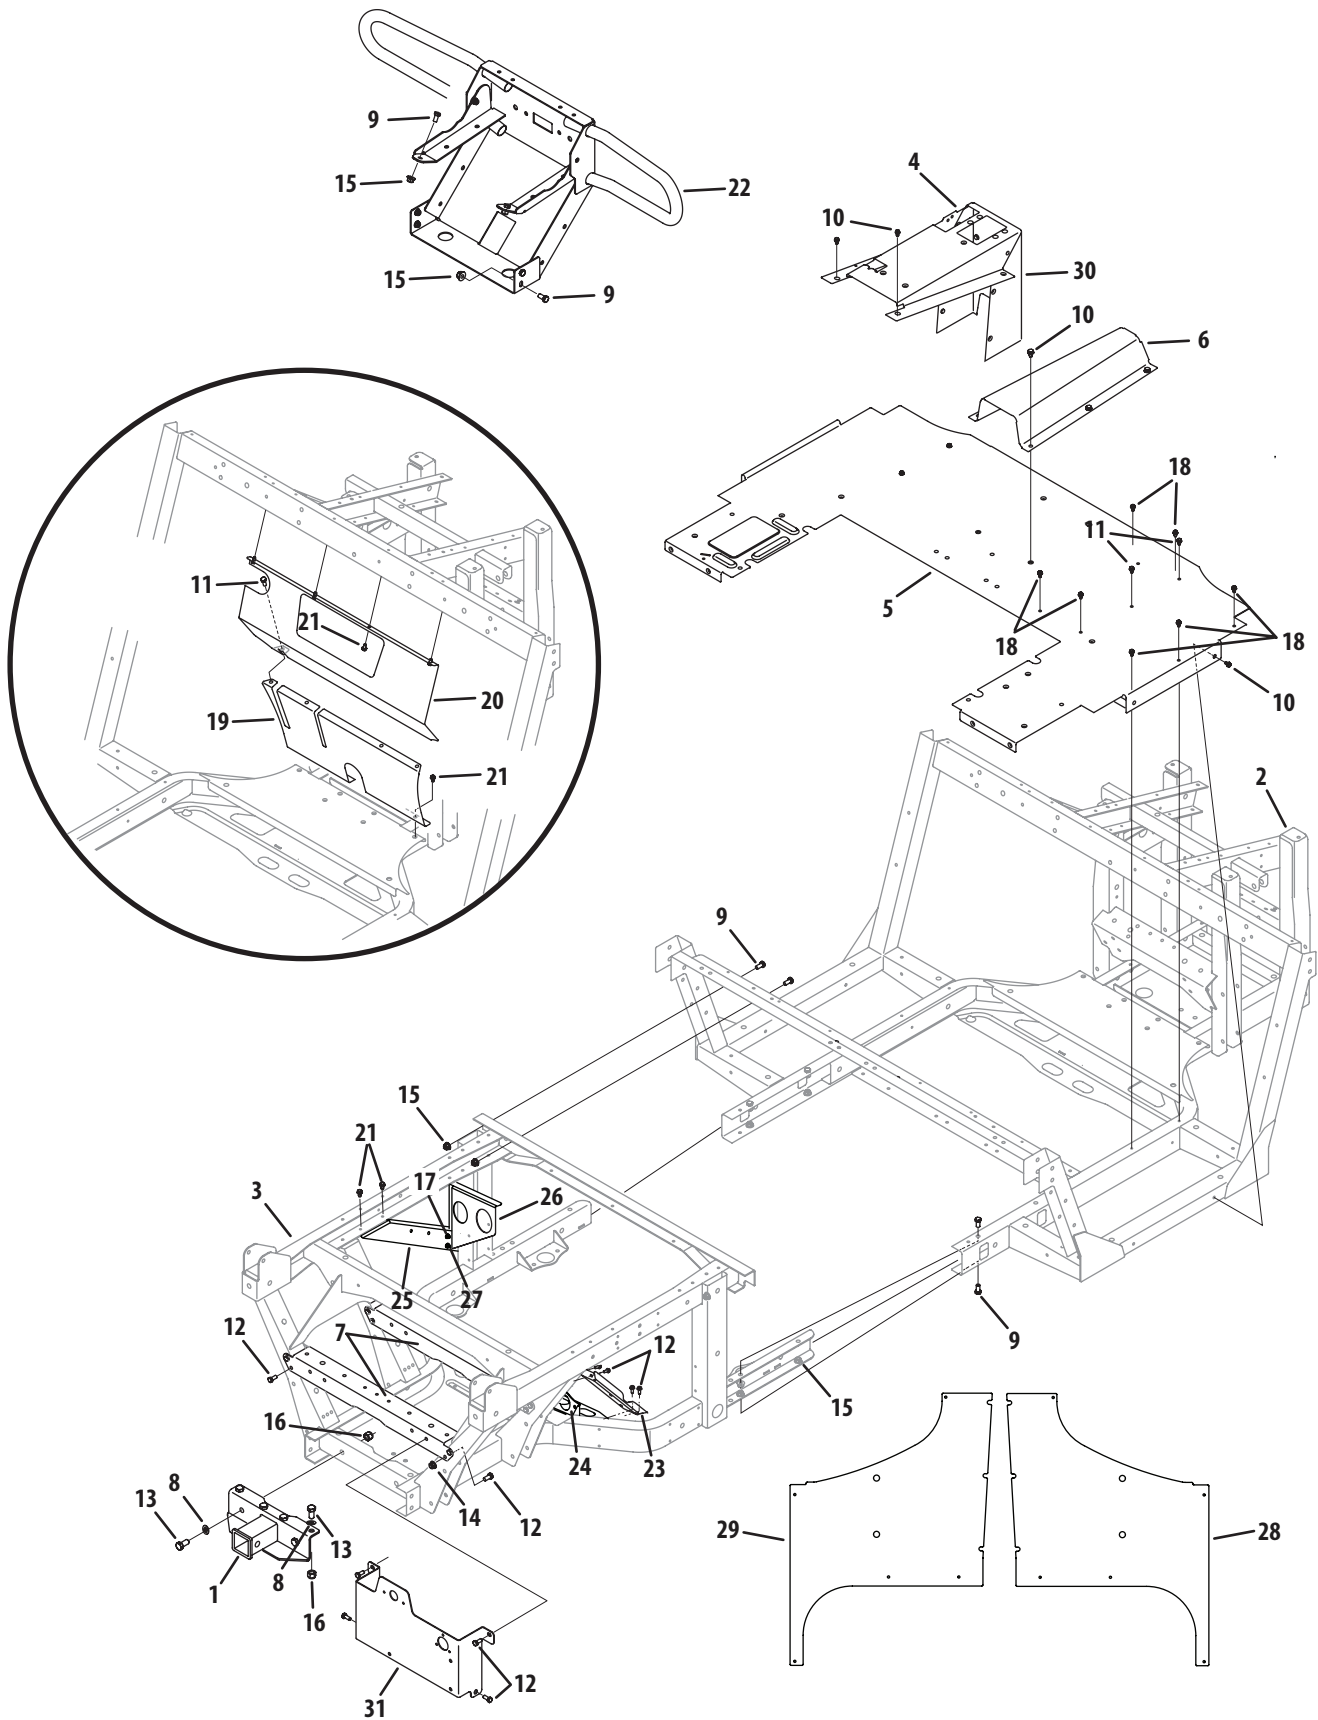

Ref No.	Part Number	Description
1	607-04142A	Rear Hitch Assembly Reviewer
2	607-04182F	Front Frame Assembly
3	607-04184E	Rear Frame Assembly
4	707-05326	Top Console Plate
5	707-04563E	Floor Plate
6	707-04684A	Front Drive Shaft Cover
7	707-04770C	Rear Support Channel
8	936-0272	Flat Washer, .510 x 1.00 x .060
9	710-0216	Screw, $\frac{3}{8}$ -16 x .75
10	710-0607	Screw, $\frac{5}{16}$ -18 x 0.500
11	710-1017	AB Screw, $\frac{1}{4}$ -14 x 0.625
12	710-3008	Hex Screw, $\frac{5}{16}$ -18
13	710-3032	Screw, $\frac{1}{2}$ -13 x 1.25
14	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
15	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
16	712-3083	Hex Lock Nut, $\frac{1}{2}$ -13
17	712-04064	Flange Lock Nut, $\frac{1}{4}$ -20
18	726-0465	Panel Retaining Clip
19	707-04712D	Lower Dash Panel
20	707-04711B	Upper Dash Panel
21	710-0599	Screw, $\frac{1}{4}$ -20 x .500
22	607-04131D	Front Bumper Assembly
23	607-04329B	Sway Bar Mount Assembly, RH
—	607-04328B	Sway Bar Mount Assembly, LH
24	607-04330	Transmission/Engine Mt. Assm.
25	607-04331A	Air Filter Mount Bracket Assm.
26	607-04333A	Support Hose Bracket Assm.
27	710-0751	Hex Screw, $\frac{1}{4}$ -20 x .620
28	735-04069A	Floor Mat, RH
29	735-04068A	Floor Mat, LH
30	707-05327-0637	Front Console Plate
31	707-05172	Plate Mounting Bracket


Front Fenders and Dash

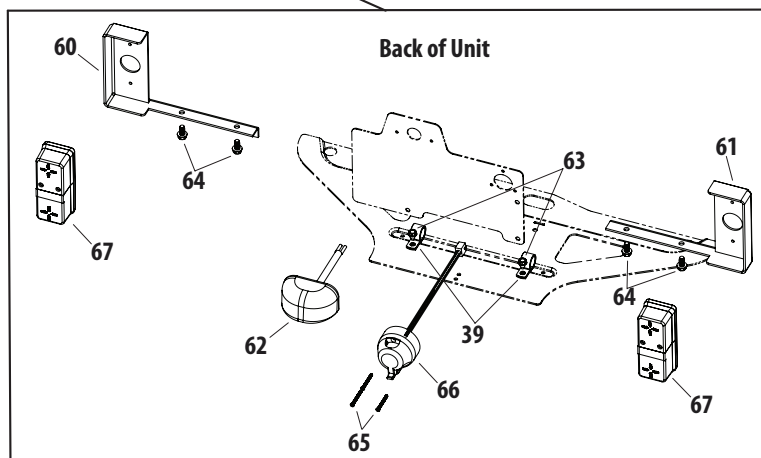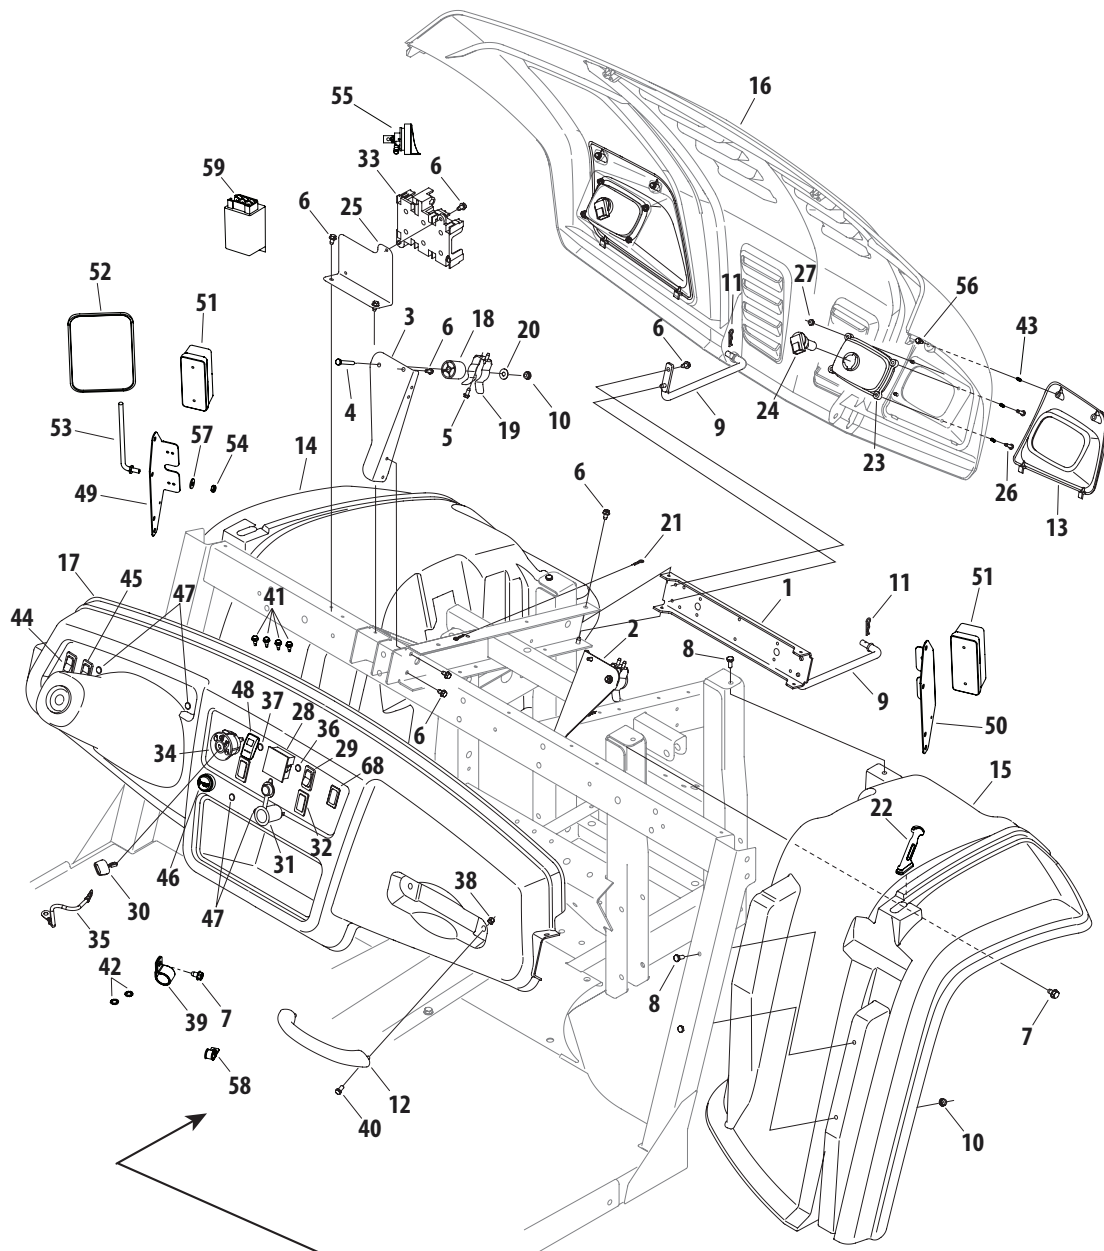

Ref No.	Part Number	Description
1	707-04484	Cross Frame Channel
2	707-04779A	Hood/Dash Mount Bracket, RH
3	707-04782A	Hood/Dash Mount Bracket, LH
4	710-0136	Screw, ¼-20 x 1.75
5	710-04261	Screw, #12-16 x .50
6	710-0599	Screw, ¼-20 x .500
7	710-04484	Screw, ⅝-18 x 0.750
8	710-05105	Hex Head Screw, 1/4-20 x 1.00
9	607-04224	Hood Mount Rod Assembly
10	712-04064	Flange Lock Nut, ¼-20
11	914-0101	Internal Cotter Pin, .08 x 1.42
12	731-06155	Handle
13	731-05285A	Headlight Bezel, RH
—	731-05284A	Headlight Bezel, LH
14	931-06710A	Fender, LH
15	931-06711A	Fender, RH
16	731-06638	Hood
17	931-04235B	Dash Assembly
18	731-3232	Hood Latch Roller
19	732-1178	Hood Latch Spring
20	736-0342	Flat Washer, .283 x .75 x .030
21	746-04328	Hood Cable
22	735-04145	Hood Strap
23	925-04546	Headlight Assembly (Inc. # 24)
24	925-04546	Headlight Bulb
25	707-04811	Fuse Mount Bracket
26	910-0749	Hex Screw, #10-24 x 1.00
27	712-0102A	Top Lock Nut, #10-24
28	925-04022B	Hour Meter Indicator
29	725-04352	Rocker Switch
30	925-1745A	Key
31	725-2003	Power Receptacle, 12V
32	731-04010	Switch Panel Plug
33	731-05490	3-Way Relay Holder
34	925-1741	Key Switch
35	725-3283	Engine Ground Wire
36	925-04285	Red LED Light


Ref No.	Part Number	Description
37	925-04288	Yellow LED Light
38	712-0324	Hex Lock Nut, ¼-20
39	726-0475	Clamp
40	710-0166A	Machine Screw, ¼-20 x 1.00
41	710-0473A	Screw, #10-24 x .500
42	736-0607	Lock Washer, ⅝
43	732-04414	Comp. Spring, .310 x .710 x .041
44	725-04031	Directional Switch
45	725-3279B	Hazard Switch
46	725-04014P	Horn Switch
47	925-04530	Green Indicator Light
48	725-04529	Master Light Switch
49	707-05002A	Light Bracket, RH
50	707-05001A	Light Bracket, LH
51	925-04487	Turn Signal Lamp
52	920-04029	Side Mirror
53	711-04183	Mirror Mount
54	912-0116	Jam Lock Nut, ⅜-24
55	725-04015A	Horn, 12V
56	710-1652	Screw, Tt, 1/4-20 x .625, Hxind.
57	736-3072	Flat Washer, .380 x .930 x .110
58	726-0272	Clamp
59	925-04211	Flasher Device Component
60	607-04269	Rear Light Bracket Ass'y, LH
61	607-04270	Rear Light Bracket Ass'y, RH
62	625-04052	Light Assembly
63	710-0607	Screw, ⅝-18 x .500
64	710-0623	Hex Washer Screw, ⅜-16 x .750
65	710-1625	Screw, #10-24 x 1.75
66	925-04160	Trailer Plug
67	925-04486	Lamp, Stop/Tail/Turn
68	725-06160	Seat Belt Indicator
NS	725-04625	Neutral Switch Jumper Harness
NS	725-05203A	Yanmar Wire Harness
NS	725-04440A	Wire Harness
NS	725-04610	Acessory Wire Harness

Seats, Battery & Fuel Tank

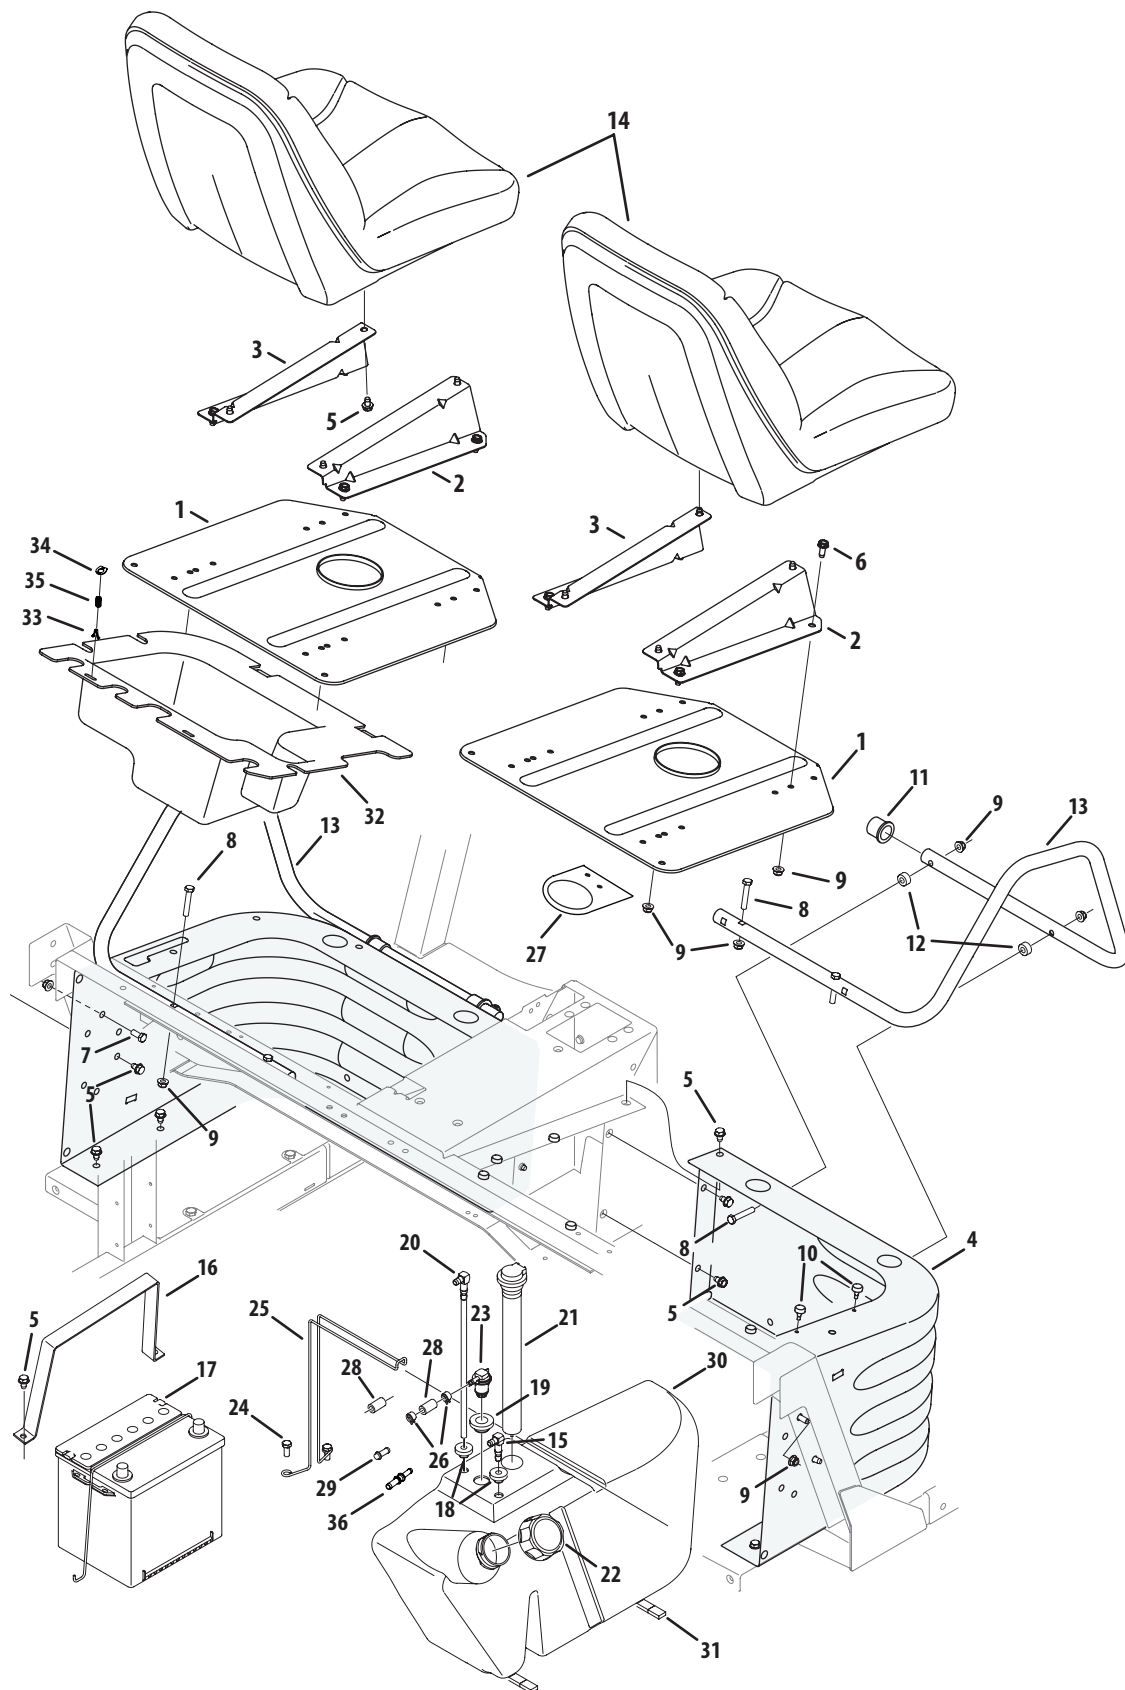

Ref No.	Part Number	Description
1	607-04228B	Seat Plate Assembly
2	707-05332	Seat Tilt Bracket, RH
3	707-05333	Seat Tilt Bracket, LH
4	607-04223C	Seat Box
5	710-0607	Screw, $\frac{5}{16}$ -18 x .500
6	710-04049	Screw, LD, 5/16-18 x .625
7	710-3008	Screw, $\frac{5}{16}$ -18 x .75
8	710-3180	Screw, $\frac{5}{16}$ -18 x 1.75
9	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
10	735-0271A	Bumper, .62 x .3
11	741-04215	Flange Bearing, .894 x 1.1315
12	750-0258	Spacer, .315 x .750 x .375
13	750-04424	Grab Handle
14	757-04063	High-Back Seat, w/ Drain
15	751-3174	Fuel Pickup Fitting
16	707-04870B	Battery Mounting Bracket
17	925-04514	450 CCA Wet Battery
18	735-04065	Gas Tank Bushing
19	735-04067	Tank Vent Bushing
20	751-10288	Fuel Pick-Up Fitting
21	951-10361	Low Fuel Sensor
22	751-10373	Fuel Cap
23	951-10375	Fuel Vent Fitting
24	710-3008	Screw, $\frac{5}{16}$ -18 x .75
25	732-04357	Fuel Tank Wire
26	726-0205	Hose Clamp, .490
27	707-04991	CVT Tube Bracker
28	751-10350	Fuel Line, $\frac{5}{16}$
—	751-10349	Low-Permeation Fuel Line
29	737-0296	Vent, $\frac{3}{8}$
30	951-04158A	Diesel Fuel Tank
31	721-04382	Tape, .75 Wide x.25 Thk Foam
32	731-05622	Seat Box Tray
33	732-0937	Spring, .40 OD x .040 Dia.
34	726-3056	Latch
35	732-0936	Spring Clip
36	951-10055	Fitting, Reducer, 5/16 x 1/4

Yanmar Engine & Transmission Accessories

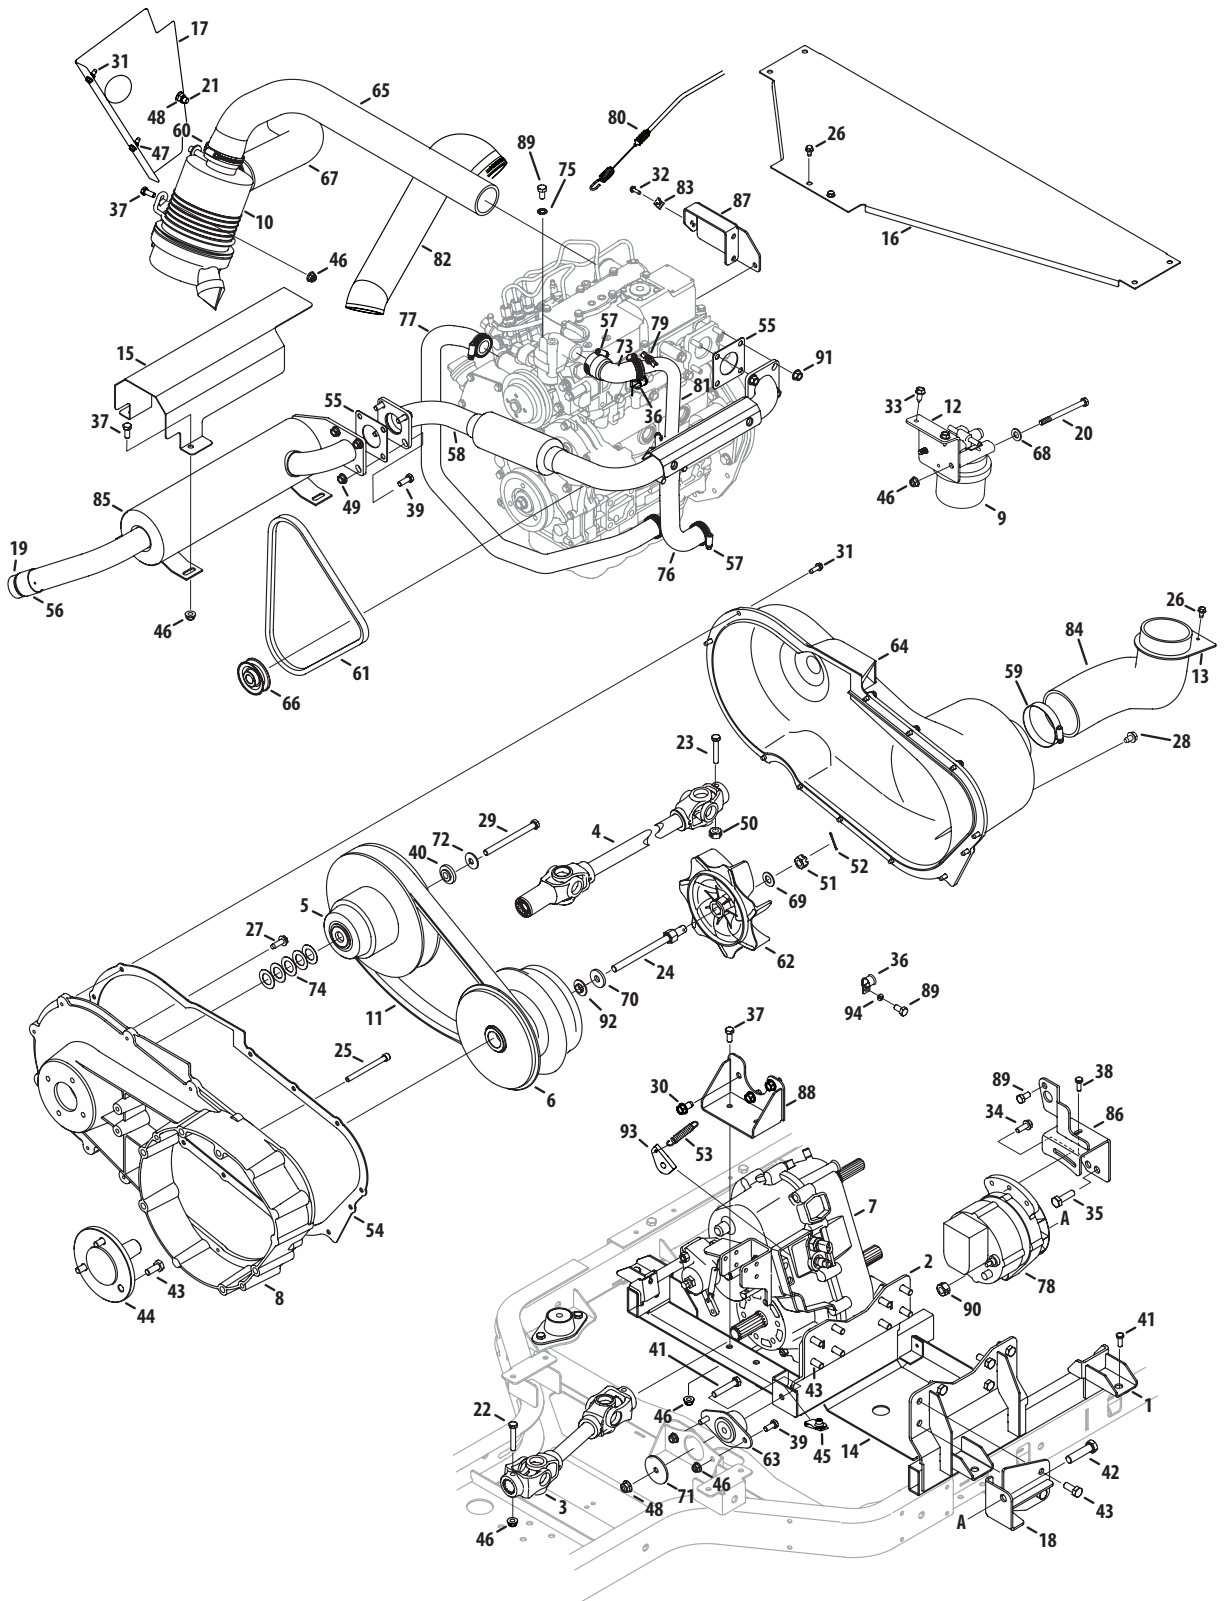


Yanmar Engine & Transmission Accessories

Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	607-04310	Yanmar Engine Tray Assembly	40	738-04232	Shoulder Spacer
2	607-04311	Engine Transmission Tray Assembly	41	710-3144	Hex Screw, 3/8-16 x 2.00
3	918-04306	Rear Shift Assembly	42	710-0489	Hex Screw, 1/2-13 x 2.00
4	918-04314	Front Shift Assembly	43	710-3208	Hex Screw, M10-1.5 x 25mm
5	918-05124	Hilliard Driven Clutch Assembly	44	911-04964	Yanmar Tappered Output Shaft
6	918-04680	Yanmar Driver Clutch Assembly	45	712-04193	U-Nut
7	959-05023	Transfer Case Assembly	46	712-04063	Flange Lock Nut, 5/16-18
8	619-04207	Yanmar CVT Housing Assembly	47	712-04064	Flange Lock Nut, 1/4-20
9	951-04044	Diesel Filter Assembly	48	712-04065	Flange Lock Nut, 3/8-16
10	951-04156	Yanmar Air Cleaner Filter Assy.	49	712-3004A	Flange Lock Nut, 5/16-18
11	754-04125B	Belt	50	912-3009	Hex Lock Nut, 5/16-18
12	707-04714	Yanmar Fuel Filter Bracket	51	912-3012	Hex Nut, 1/2-20
13	707-04991	Tube Bracket	52	914-0111	Cotter Pin, 3/32 x 1.0
14	707-05179	Engine Oil Shield	53	732-04248	Extension Spring
15	707-04891	Exhaust Heat Shield	54	721-04292	CVT Cover Gasket
16	707-04969	Yanmar Heat Shield Plate	55	721-04167	Engine Gasket
17	707-05257A	Baffle Plate	56	751-10689	Spark Arrestor Screen
18	607-04327	Lower Alternator Mount Bracket	57	726-04114	Clamp, Hose, Adj
19	751-10690	Clamp	58	751-10756	Yanmar Exhaust Pipe
20	710-0190	Hex Screw, 5/16-18 x 4.00	59	726-04080	Adjustable Hose Clamp
21	710-0216	Hex Screw, 3/8-16 x .75	60	726-0476	Adjustable Hose Clamp
22	710-3103	Hex Screw, 5/16-18 x 2.00	61	954-04225	V-Belt
23	710-04653	Hex Screw, 5/16-18 x 1.875	62	731-04275	Blower Impeller
24	710-04657	Hex Screw, 7/16-20 x 5.00	63	731-04667	Engine Head Compression Mount
25	710-04769	Screw, M10-1.50	64	731-06748	CVT Cover
26	710-0599	Hex Washer Screw, 1/4-20 x 0.500	65	751-10994	Yanmar Air Inlet Hose
27	710-0602	Hex Washer Screw, 5/16-18 x 1.000	66	756-04379	Pulley
28	710-0603	Hex Washer Screw, 5/16-12 x 0.500	67	751-10995	Air Inlet Hose
29	710-1257	Hex Head Screw, 3/8-24, 2.50	68	936-0264	Flat Washer, .330 x .630 x .0635
30	710-0623	Hex Washer Screw, 3/8-16 x 0.750	69	936-0272	Flat Washert, .510 x 1.00 x .060
31	710-0642	Hex Washer Screw, 1/4-20 x 0.750	70	736-0322	Flat Washert, .450 x 1.250 x .164
32	710-04669	Hex Washer Screw, #10-16 x 0.625	71	736-04018	Flat Washer, .38 x 2.00 x .12
33	710-04484	Screw, 5/16-18, 0.750, Hxindwsh	72	936-0452	Bell Washer, .396 x 1.140 x .095
34	710-1238	Hex Screw, 5/16-18 x .875	73	751-10894	Yanmar Upper Radiator Tube
35	710-1313	Hex Screw, M8-1.5 x 35 mm	74	736-0566	Flat Washer, .793 x 1.368 x .025
36	726-0272	Clamp	75	736-0607	External Tooth Lock Wash, 5/16
37	710-3008	Hex Screw, 5/16-18 x .75	76	751-10893	Lower Radiator Tube
38	710-3015	Hex Screw, 1/4-20 x .75	77	751-10779	Yanmar Rear Radiator Hose
39	710-3038	Hex Screw, 5/16-18 x .875	78	725-04806	Auxiliary Alertnator, 65 Amp

Continued on next page


Yanmar Engine & Transmission Accessories

Ref No.	Part Number	Description
79	737-04232	Petcock Fitting, 1/8
80	946-04540	Yanmar Throttle Control Cable
81	750-04989	Radiator Tube
82	751-10997	CVt Exhaust Hose
83	751B221535	Casing Clamp
84	751-10510	CVT Intake Tube
85	751-10152B	Muffler
86	607-04312	Yanmar Alternator Mount Assy.
87	607-04325A	Throttle Mount Bracket
88	607-04326	Transmission Mount Bracket
89	710-3138	Hex Head Screw, M8-1.25
90	712-3022	Hex Lock Nut, 1/2-13
91	712-3086	Flange Nut, M8-1.25
92	738-04231	Shoulder Spacer
93	707-05272	Throttle Return Spring Bracket
94	736-0173	Washer, Flat 1/4"
NS	725-0157	Cable Tie, 3/16 x .005 x 7.4

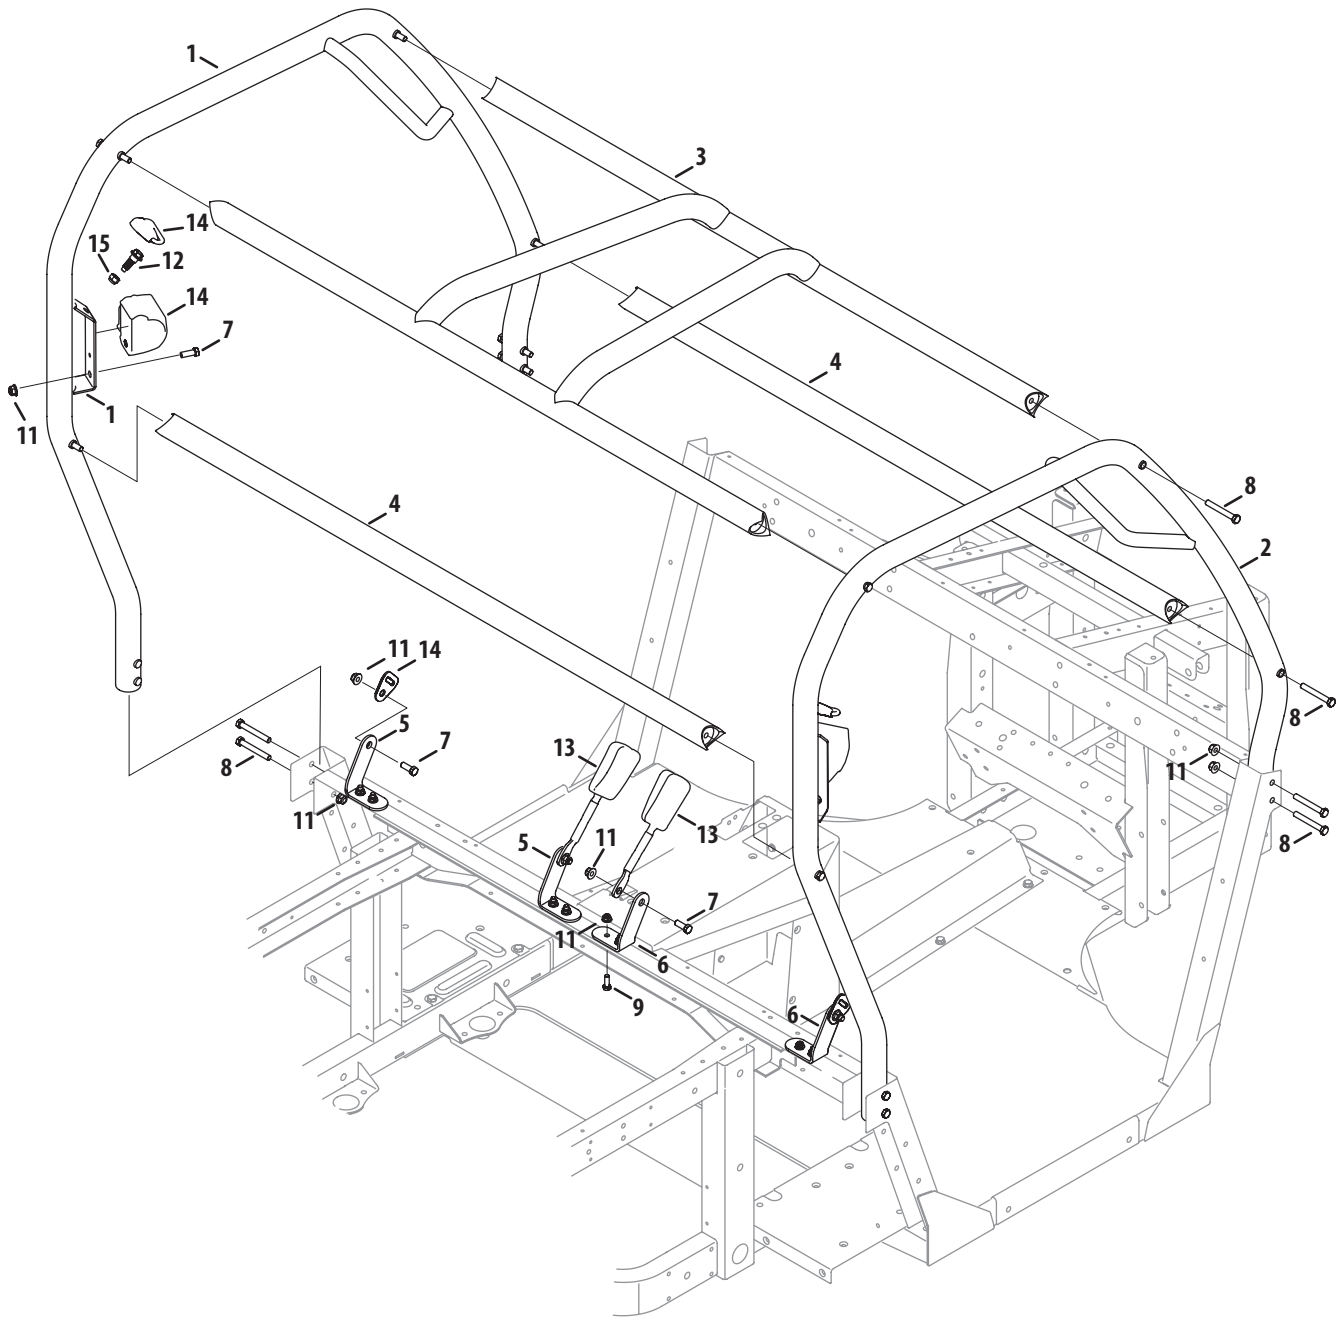


Ref No.	Part Number	Description
1	607-04195C	Frame Assembly, OPS, LH
2	607-04196C	Frame Assembly, OPS, RH
3	607-04197	Frame Assembly, OPS, Roof
4	607-04198	Frame Assembly, OPS, Frt
5	707-04790	Bracket, Seat Belt, LH
6	707-04863	Bracket, Seat Belt, RH
7	710-0514	Screw, 3/8-16 x 1.00
8	710-04656A	Screw, 3/8-16 x 2.75

Ref No.	Part Number	Description
9	710-3038	Screw, 5/16-18 x .875
10	712-04063	Nut, Flange Lock, 5/16-18
11	712-04065	Nut, Flange Lock, 3/8-16
12	738-04422	Shoulder Bolt, 7/16-20
13	757-04120B	Belt, Seat
14	757-04119	Belt, Seat
15	712-0459	Nut, Hex Lock, 7/16-20

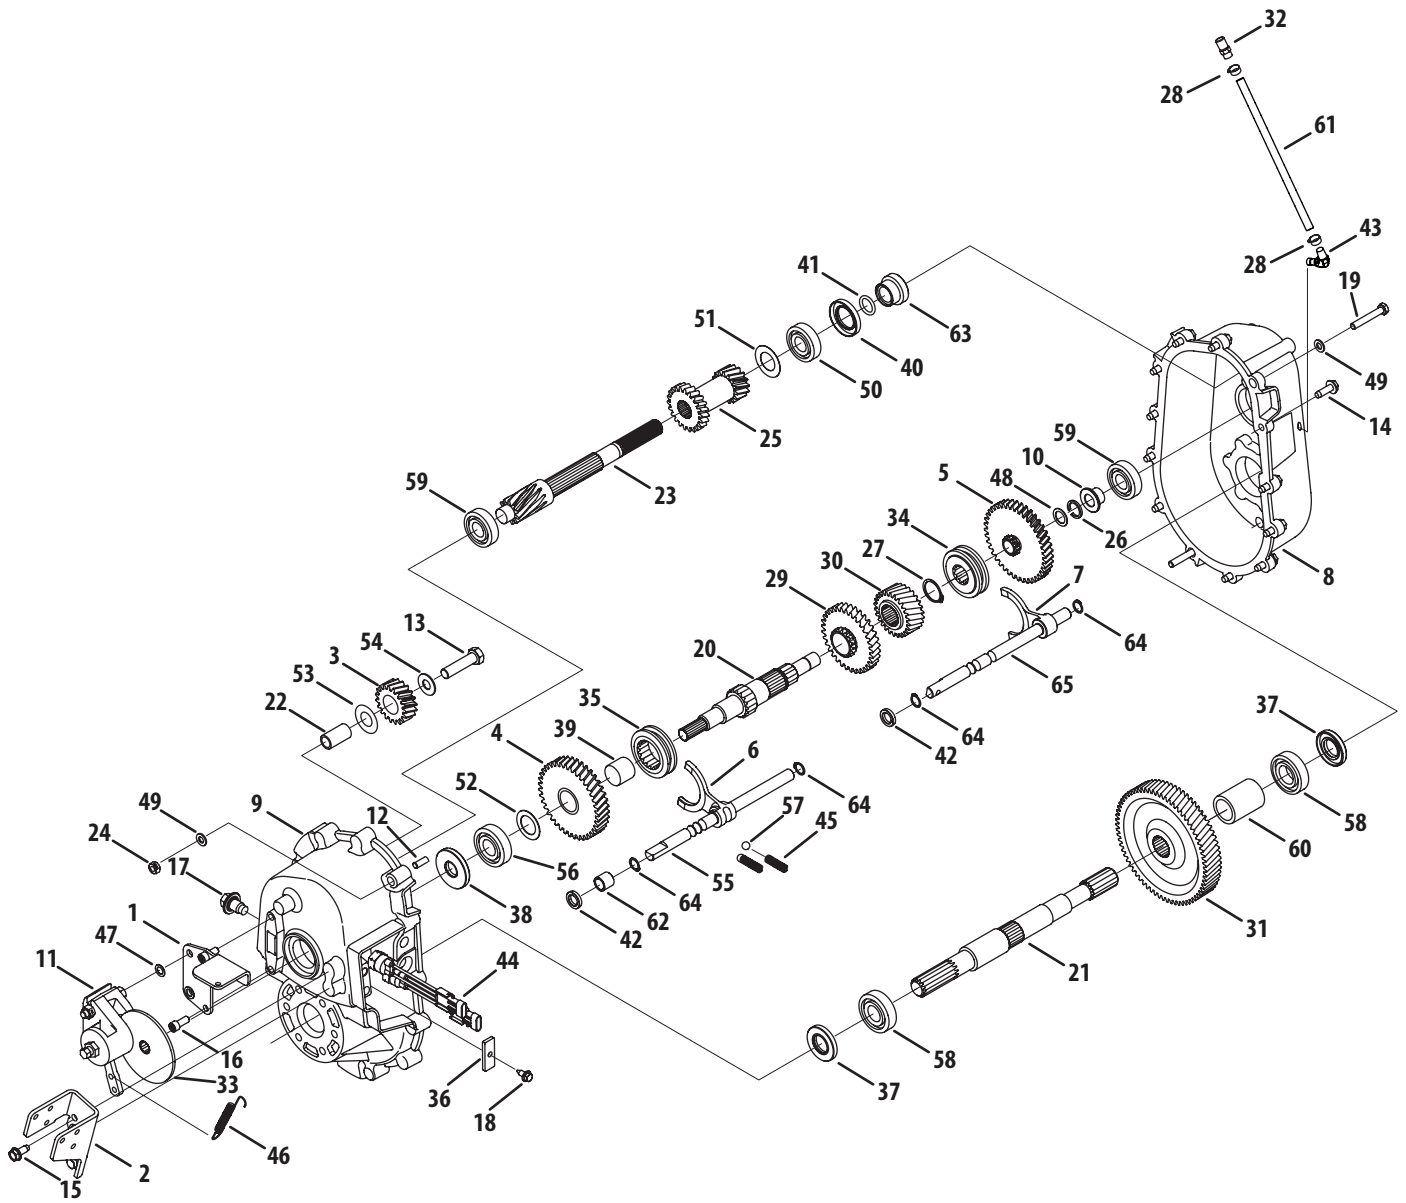

Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	607-04321	Bracket Assembly, Painted	34	718-04163	Collar, Lo
2	607-04322	Bracket Assembly, Shift, Painted	35	718-04226A	Collar, Hi-rev, 4x4
3	911-04072A	Gear Assembly, Rev Idler	36	718-04240	Plate, Detent Spring
4	717-04237	Gear, Rev, 39T	37	721-04146	Seal, Oil, 25x46x7
5	617-04035	Gear Assembly, Low Speed	38	721-04161	Seal, Oil, 20x52x7
6	718-04176	Yoke, Actr, Uv	39	741-3118	Bearing, 25mm x 28mm x 25mm
7	718-04079B	Yoke Actr, Lo	40	721-04493	Seal, Oil, 35 x 47 x 7
8	919-04790B	Housing, Lh, Uv	41	721-04494	O-ring, .924 Id x .103
9	719-04332A	Housing, Rh, Uv	42	721-0496	Seal, Oil, .563 x .875 x .188
10	750-04681	Spacer, Flg, .630 x .787 x .662	43	737-04346	Fitting, 90 degree Elbow
11	661-04019	Brake Assembly, Transfer Case	44	725-04626	Neutral Safety Switch
12	915-3045	Dowel, Bush, .400 x .484 x .750	45	732-0424	Spring, 3/8 Od x 1 1/4 Lg
13	710-04644	Hex Head Screw, 1/2-13, 2.00	46	732-04248	Spring, Extn, .38 Od x 3.9 Lg
14	710-0602	Screw, Tt, 5/16-18, 1.000, Hxindwsh	47	936-0117	Washer, Flat, .385 x .620 x .033
15	710-1260A	Screw, Tt, 5/16-18, 0.750, Hxindwsh	48	936-0256	Washer, Flat, .635x.930x.033, Ht
16	710-1314A	Screw, Soc Hd, 5/16-18, .750	49	936-0264	Washer, Flat, .330 x .630 x .0635
17	737-04310	Screw, Plug, M14 x 1.5 x .36	50	741-05018	Bearing, Ball, 25 x 62 x 17, 6305
18	710-1652	Screw, Tt, 1/4-20 x .625, Hxindwsh	51	750-06019	Spacer, 1.275 x 1.00 x .085
19	710-3103	Hex Head Screw, 5/16-18, 2.00	52	736-0615	Washer, Flat, 1.007x1.542x.03, Ht
20	911-04445A	Shaft, Mid, Transfer Case	53	736-3047	Washer, Thrust, .757 x 1.38 x .062
21	911-04446	Shaft, Output, Transfer Case	54	736-3084	Washer, Flat, .51 x 1.12 x .06, Ht
22	911-04447	Shaft, Rev Idler	55	911-05081	Shaft, Actr, Fwd, Rev
23	911-05754	Shaft, Input, Transfer Case	56	941-04044	Bearing, Ball, .79 Id x 2.05 Od x .6
24	912-0158	Nut, Hex Lock, 5/16-18, Ctrlk	57	741-04209	Ball, Detent, .375
25	917-05017	Gear, Pinion, Input Forward	58	941-3037	Bearing, Ball, 25x52x15, 6205
26	916-0131	External Snap Ring .625 Dia.	59	941-3057	Bearing, Ball, 20x47x14, 6204
27	716-04059	Ring, Retainer, 1.125 Dia.	60	750-04496	Spacer, Output Shaft
28	726-0205	Hoase Clamp, .490 Dia.	61	751-10350-22	Fuel Line, 5/16 Id
29	917-04236	Gear, High, 33t	62	750-04705A	Spacer, .566 x .725 x .650
30	917-04332	Gear, Final Pinion, 22t	63	750-05685	Spacer, Input, Uv, Transfer Case
31	917-04333	Gear, Final, 73t	64	716-04135	Ring, Ret
32	737-04073	Vent, 3/8 Dia.	65	911-05082	Shaft, Actr, Lo
33	717-1177A	Disc, Brk, Uv			

Axles & Steering

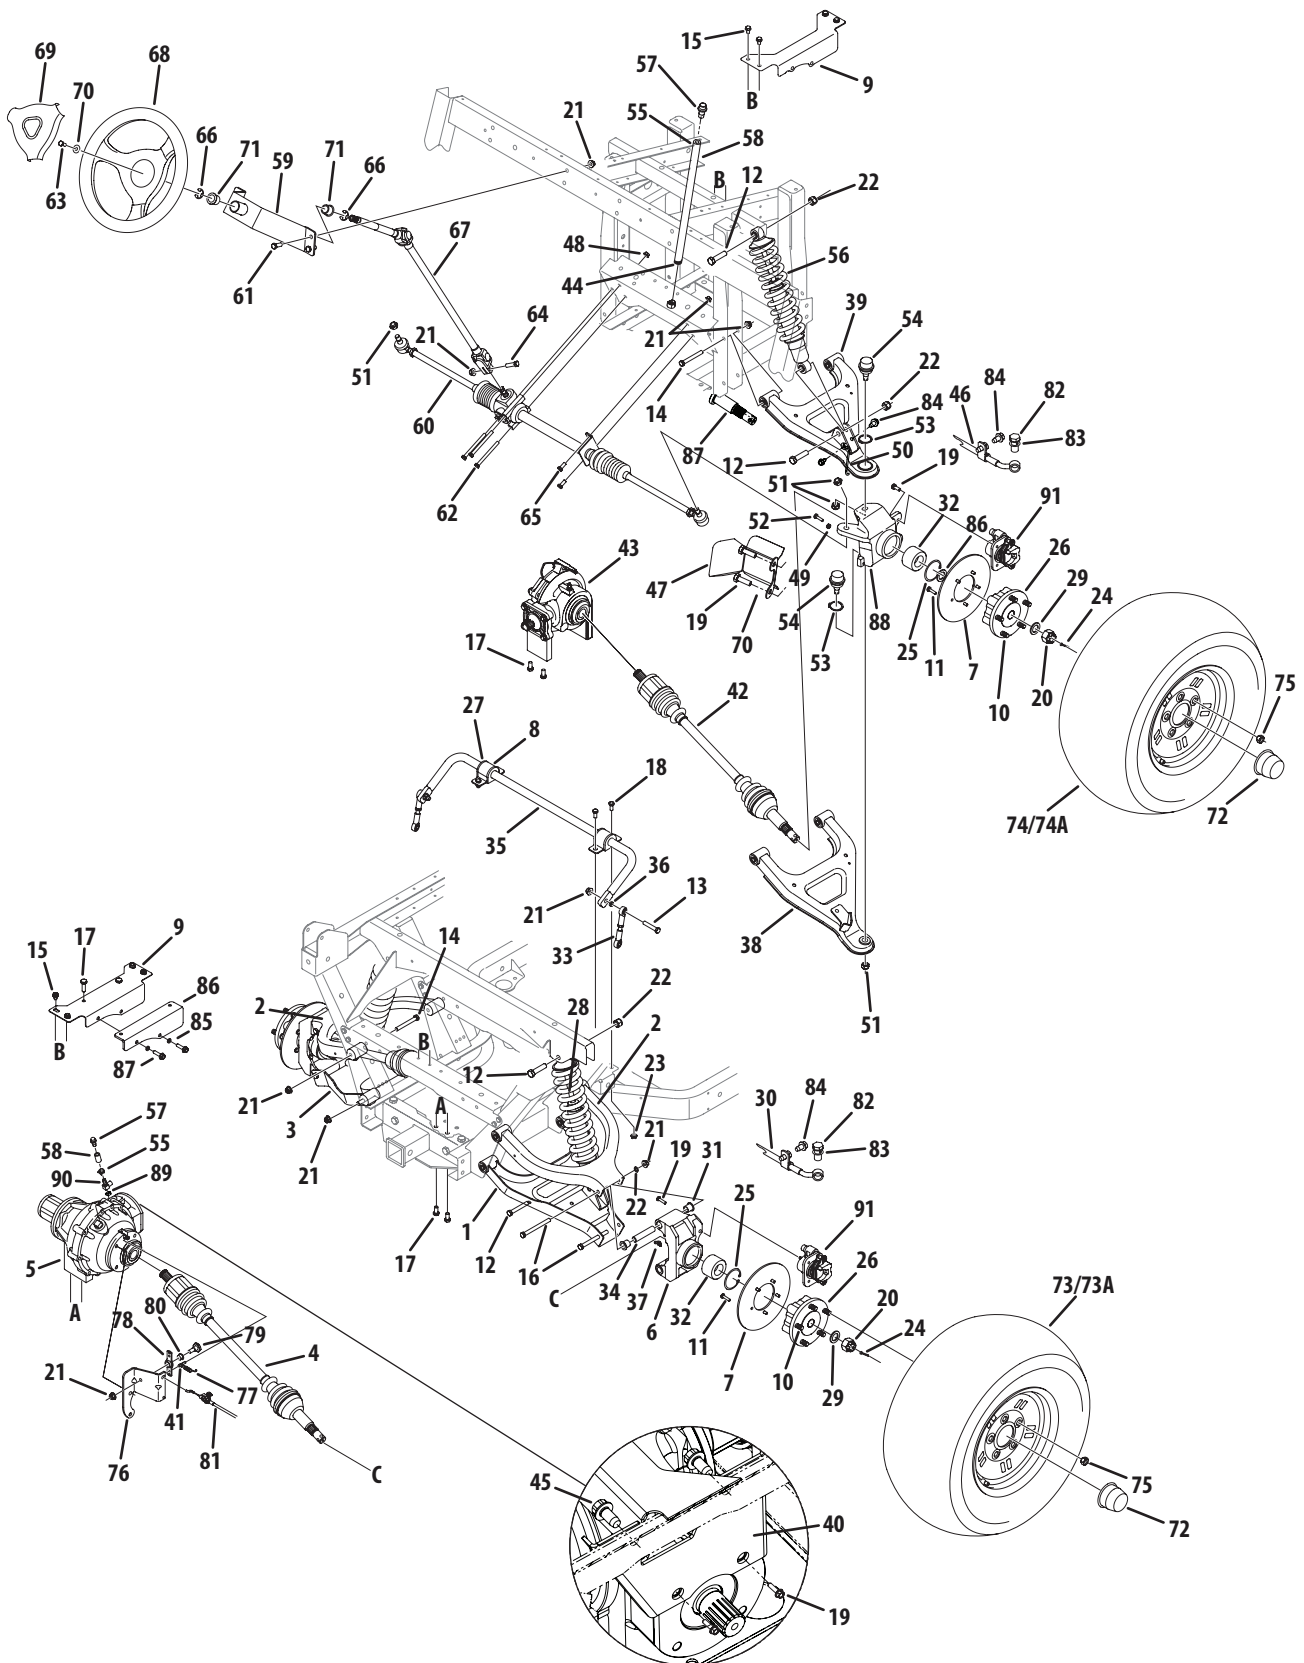



Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	907-04394A	Control Assy., Rear Right Lower	38	907-04398A	Control Assy., Lower Right Front
2	907-04395	Control Assy., Rear Right Upper	—	907-04399A	Control Assy., Lower Left Front
3	607-04396A	Control Assy., Rear Left Lower	39	907-04397A	Arm Assy., Upper Right Front
4	911-04063B	CV Joint Axle Assembly	—	907-04400A	Control Assy., Upper Left Front
—	731-05082	DOJ Boot Kit	40	707-05018B	Rear Differential Bracket
—	731-05083	Rzeppa Boot Kit	41	715-04011	Roll Pin
5	959-05016	UV Differential Assembly	42	911-04071A	CV Joint Axle Assembly, 4x4
6	619-04188B	Right Rear Housing	—	731-05082	DOJ Boot Kit
7	707-04436A	Brake Disc, 8.00 x .188	—	731-05083	Rzeppa Boot Kit
8	707-04655	Sway Bar Mount	43	918-04316A	Differential Assembly, 4x4
9	707-05791	Rear Differential Mount, 4x4	44	726-04041	Adjustable Hose Clamp
—	707-04604B	Front Differential Mount, 4x4	45	710-0623	Screw, 3/8-16 x .750
10	710-0852	Rib Neck Stud, 7/16-14 x 1.6	46	927-04224	Front Brake Hose
11	710-0433	Screw, 1/4-20 x .625	47	707-04833	Steering Shield Bracket, RH
12	710-0489	Screw, 1/2-13 x 2.00	—	707-04832	Steering Shield Bracket, LH
13	710-04640	Screw, 3/8-18 x 1.75	48	712-3004A	Flange Lock Nut, 5/16-18
14	710-0521	Screw, 3/8-16 x 3.00	49	710-0597	Screw, 1/4-20 x 1.00
15	710-0607	Screw, 5/16-18 x 0.500	50	732-04383	Brake Line Wire
16	710-04637	Screw, 3/8-16 x 4.00	51	712-04086	Lock Nut, M12 x 1.25
17	710-04482	Screw, 3/8-16 x .875	52	712-3006	Hex Nut, 1/4-20
18	710-3005	Hex Screw, 3/8-16 x 1.25	53	716-04039	Retaining Ring, 34 x 1.6
19	710-04639	Screw, M8-1.25 x 25.00	54	723-04024	B/Joint, BJ14D-6201
20	712-04109	Slotted Nut, 22 x 1.5	55	726-05003	Clamp, hose, .540 Dia.
21	712-04065	Flange Lock Nut, 3/8-16	56	732-04424	Front Stroke Shabs, 5.0
22	712-3083	Hex Lock Nut, 1/2-13	57	737-0296	Vent, 3/8
23	712-04063	Flange Lock Nut, 5/16-18	58	751-10350	Fuel Line Hose
24	714-0162	Cotter Pin, 5/32 x 1.25	59	607-04124	Steering Wheel Support Assy.
25	716-04055	Retaining Ring	60	617-04041P	Steering Assembly
26	918-04489	Wheel Hub	61	710-0514	Screw, 3/8-16 x 1.00
27	731-05352	Sway Bar Bushing	62	710-1266	Screw, 5/16-18 x 3.50
28	732-04423	Rear Stroke Shabs, 5.0	63	710-0643	Screw, 5/16-18 x 1.00
29	936-0291	Flat Washer, .88 x 1.38 x .125	64	710-3005	Screw, 3/8-16 x 1.25
30	927-04228	Rear Brake Hose	65	710-3008	Screw, 5/16-18 x .75
31	741-04234B	Flange Brng., .625 x .750 x .750	66	916-0231	E-Ring, .750
32	741-04166	Double-Row Brng., 60 x 30 x 37	67	717-04200	Steering Shaft
33	747-04514	Control Rod, .375 x 3.886	68	731-04514	Soft-Grip Steering Wheel, 5/8
34	750-04358B	Pivot Tube, Rear Right Control Arm	69	731-06459	Steering Wheel Cover
35	750-04487A	Sway Bar, Rear	70	736-0242	Bell Washer, .340 x .872 x .060
36	736-3010	Flat Washer, .407 x .812 x .135	71	941-0339	Flange Brng., .754 x 1.00 x .925
37	737-3001	Fitting, Grease	72	707-04740	Wheel Cap

Continued on next page

Axles & Steering

Ref No.	Part Number	Description
73	634-04449	RH Rear Wheel Assy., 25 x 11-12
—	934-04396-0691	Rim Assembly, 12 x 7
—	934-0255	Tubeless Air Valve
—	734-04156	Tire, 25 x 11-12
73A	634-04448	LH Rear Wheel Assy., 25 x 11-12
—	934-04396-0691	Rim Assembly, 12 x 7
—	934-0255	Tubeless Air Valve
—	734-04156	Tire, 25 x 11-12
74	634-04353	RH Front Wheel Assy., 25 x 10-12
—	934-04396-0691	Rim Assembly, 12 x 7
—	934-0255	Tubeless Air Valve
—	734-04157	Tire, 25 x 10-12
74A	634-04352	LH Front Wheel Assy., 25 x 10-12
—	934-04396-0691	Rim Assembly, 12 x 7
—	934-0255	Tubeless Air Valve
—	734-04157	Tire, 25 x 10-12
75	712-3050	Lug Nut, 7/16-14
76	707-04693A	Differential Cable Mount Bracket


Ref No.	Part Number	Description
77	732-0418	Extension Spring, .38 x 2.10
78	607-04216A	Differential Lock Lever Assembly
79	938-0507B	Shoulder Screw, .500 x .434
80	741-0491	Flange Bearing, .500 x .34
81	746-04248	Differential Lock Control Cable
82	737-04129	Banjo Bolt Fitting, M10 x 1.00
83	737-04130	Banjo Fitting, 10mm
84	710-0599	Screw, 1/4-20 x .500
85	736-0262	Flat Washer, .385 x .870 x .092
86	707-06000	Spacer, Differential
87	710-3011	Screw, 3/8-16 x 2.25, gr5, std
88	619-04137B	Right Front Knuckle Housing
—	619-04142B	Left Front Knuckle Housing
89	712-04272	Nut, Jam, M12 x 1.5 x 6MM
90	737-04278	Fitting, Fuel Pickup
91	961-04043	Hydro Brake Caliper, RH Front
—	961-04044	Hydro Brak Caliper, LH Front

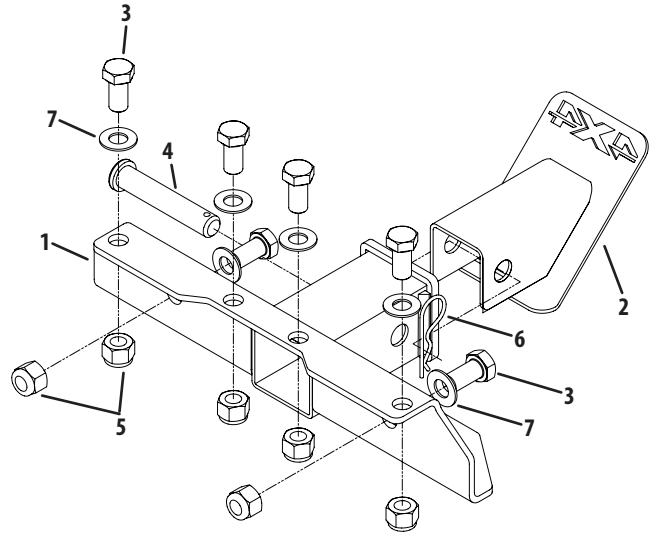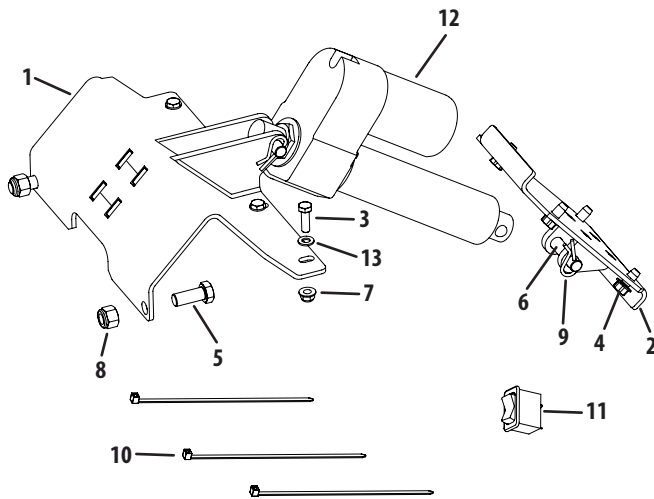

Ref No.	Part Number	Description
1	607-04217A	Read Bed Lift Mounting Plate
2	607-04218	Upper Bed Lift Assembly Plate
3	710-0376	Hex Screw, $\frac{5}{16}$ -18 x 1.00
4	710-0623	Hex Washer Screw, $\frac{3}{8}$ -16 x .750
5	710-3032	Hex Screw, $\frac{1}{2}$ -13 x 1.25
6	711-04007	Clevis Pin, .5 x 2.25
7	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
8	712-3083	Hex Lock Nut, $\frac{1}{2}$ -13
9	914-0149B	Internal Cotter Pin
10	725-0157	Cable Tie
11	725-04012	Bed Lift Switch
12	925-04379	Linear Actuator
13	936-0264	Flat Washer, .330 x .630 x .0635


Ref No.	Part Number	Description
1	607-04142A	Hitch Assembly Receiver
2	607-04233B	Hitch Cover Assembly, 4x4
3	710-3032	Hex Screw, $\frac{1}{2}$ -13 x 1.25
4	711-1165	Clevis Pin, .625 x 3.075
5	712-3083	Hex Lock Nut, $\frac{1}{2}$ -13
6	714-3020	Internal Cotter Pin
7	936-0272	Flat Washer, .510 x 1.00 x .060

Yanmar Engine - Gear Housing

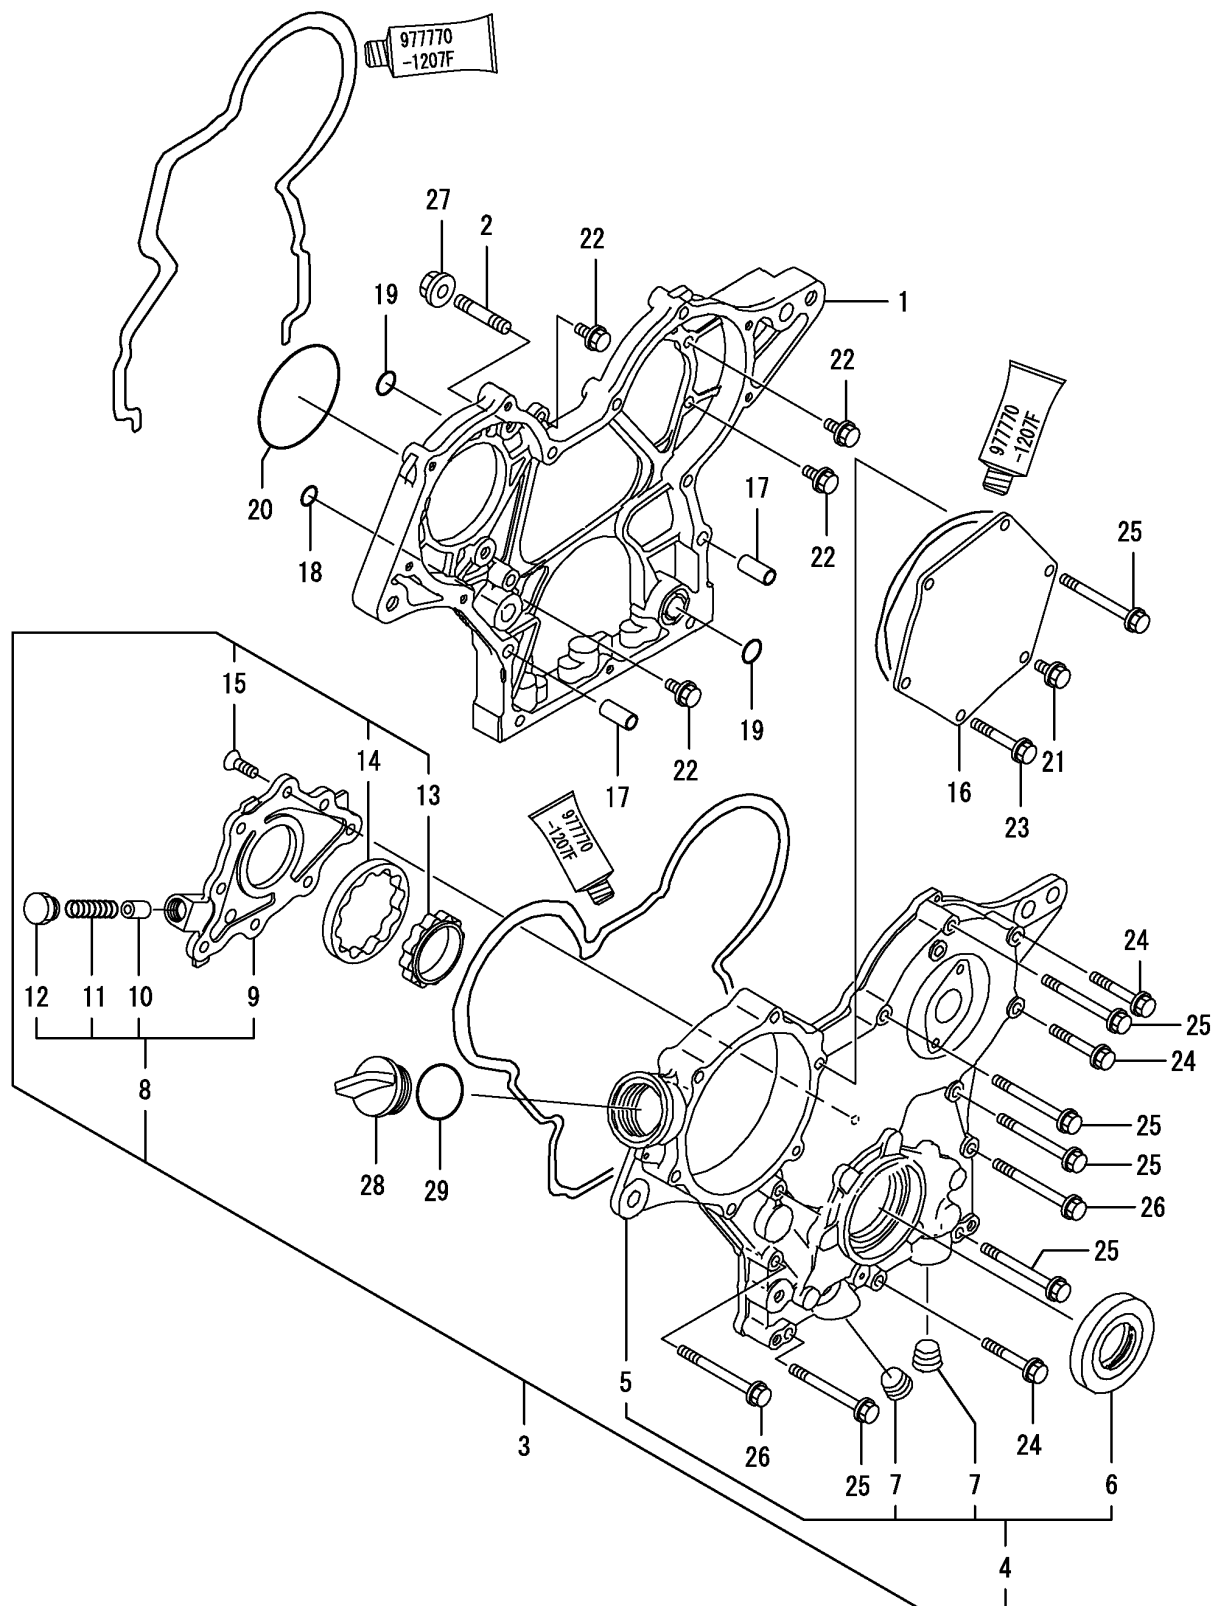


Ref No.	Part Number	Description
1	YA-119717-01501	Case, Gear
2	YA-119717-01570	Bolt, Stud M8
3	YA-119734-01590	Cover Assembly, Gear Case
4	YA-719734-01500	Cover Assembly, Gear Case
5	N/A - order Ref. #4	Cover, Gear Case
6	YA-119717-01800	Seal, Oil
7	YA-23876-030000	Plug Pt, 3/8, Screw
8	YA-119717-32100	Cover Assembly, Pump
9	N/A - order Ref. #8	Cover, Lub. Oil Pump
10	YA-129900-32130	Valve, Relief
11	YA-129001-32320	Spring
12	YA-129001-32330	Plug
13	YA-119717-32110	Rotor, Inner
14	YA-119717-32120	Rotor, Outer
15	YA-119802-32130	Screw, M6 x 16
16	YA-119717-01750	Cover, Pump Timing
17	YA-119660-01911	Pipe, Knock
18	YA-119624-32040	O-Ring P 12.0
19	YA-119717-32050	O-Ring P 17.0
20	YA-121850-51960	O-Ring, F.I. Pump
21	YA-26106-060122	Bolt M 6 x 12 Plated
22	YA-26106-060162	Bolt M 6 x 16 Plated
23	YA-26106-060402	Bolt M 6 x 40 Plated
24	YA-26106-060402	Bolt M 6 x 40 Plated
25	YA-26106-060602	Bolt M 6 x 60 Plated
26	YA-26106-060652	Bolt M 6 x 65 Plated
27	YA-26306-080002	Nut
28	YA-124160-01751	Cover, Filler
29	YA-24311-000320	O-Ring 1A P-32.0

Yanmar Engine - Mounting Flange & Oil Sump

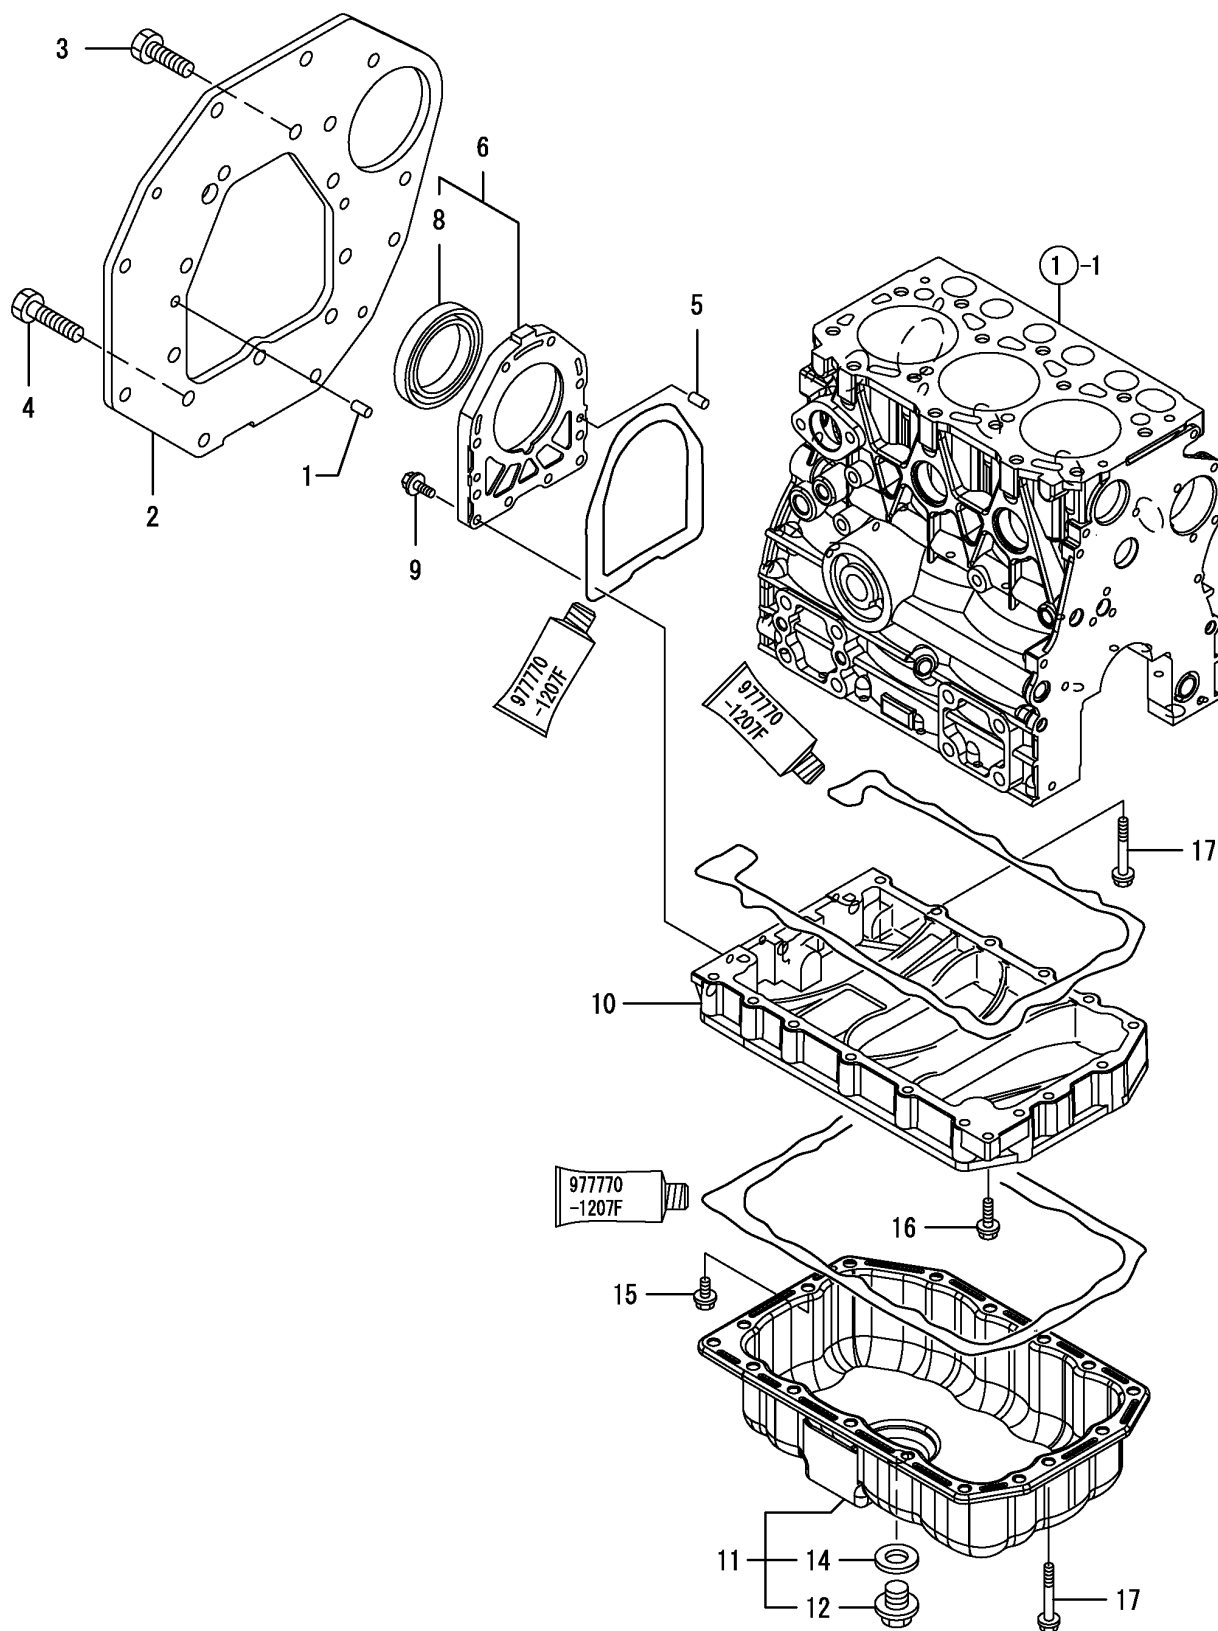

Ref No.	Part Number	Description
1	YA-129100-01580	Parallel Pin, 8 x 16
2	YA-119415-01600	Flange, Mounting
3	YA-26206-100202	Bolt, M10 x 20
4	YA-26206-100252	Bolt, M10 x 25
5	YA-119620-01620	Parallel Pin, 6 x 10
6	YA-119527-01640	Case Assembly, Oil Seal
8	YA-124085-02220	Seal, Oil
9	YA-26106-060222	Bolt, M 6 x 22 Plated
10	YA-119515-01720	Spacer, Oil Sump
11	YA-119540-01770	Sump Assembly, Lub. Oil
12	YA-105425-01690	Plug, M16
14	YA-22190-160002	Seal, Washer, 16S
15	YA-26106-060122	Bolt, M 6 x 12 Plated
16	YA-26106-060252	Bolt, M 6 x 25 Plated
17	YA-26106-060452	Bolt, M 6 x 45 Plated


Yanmar Engine - Cylinder Head & Bonnet

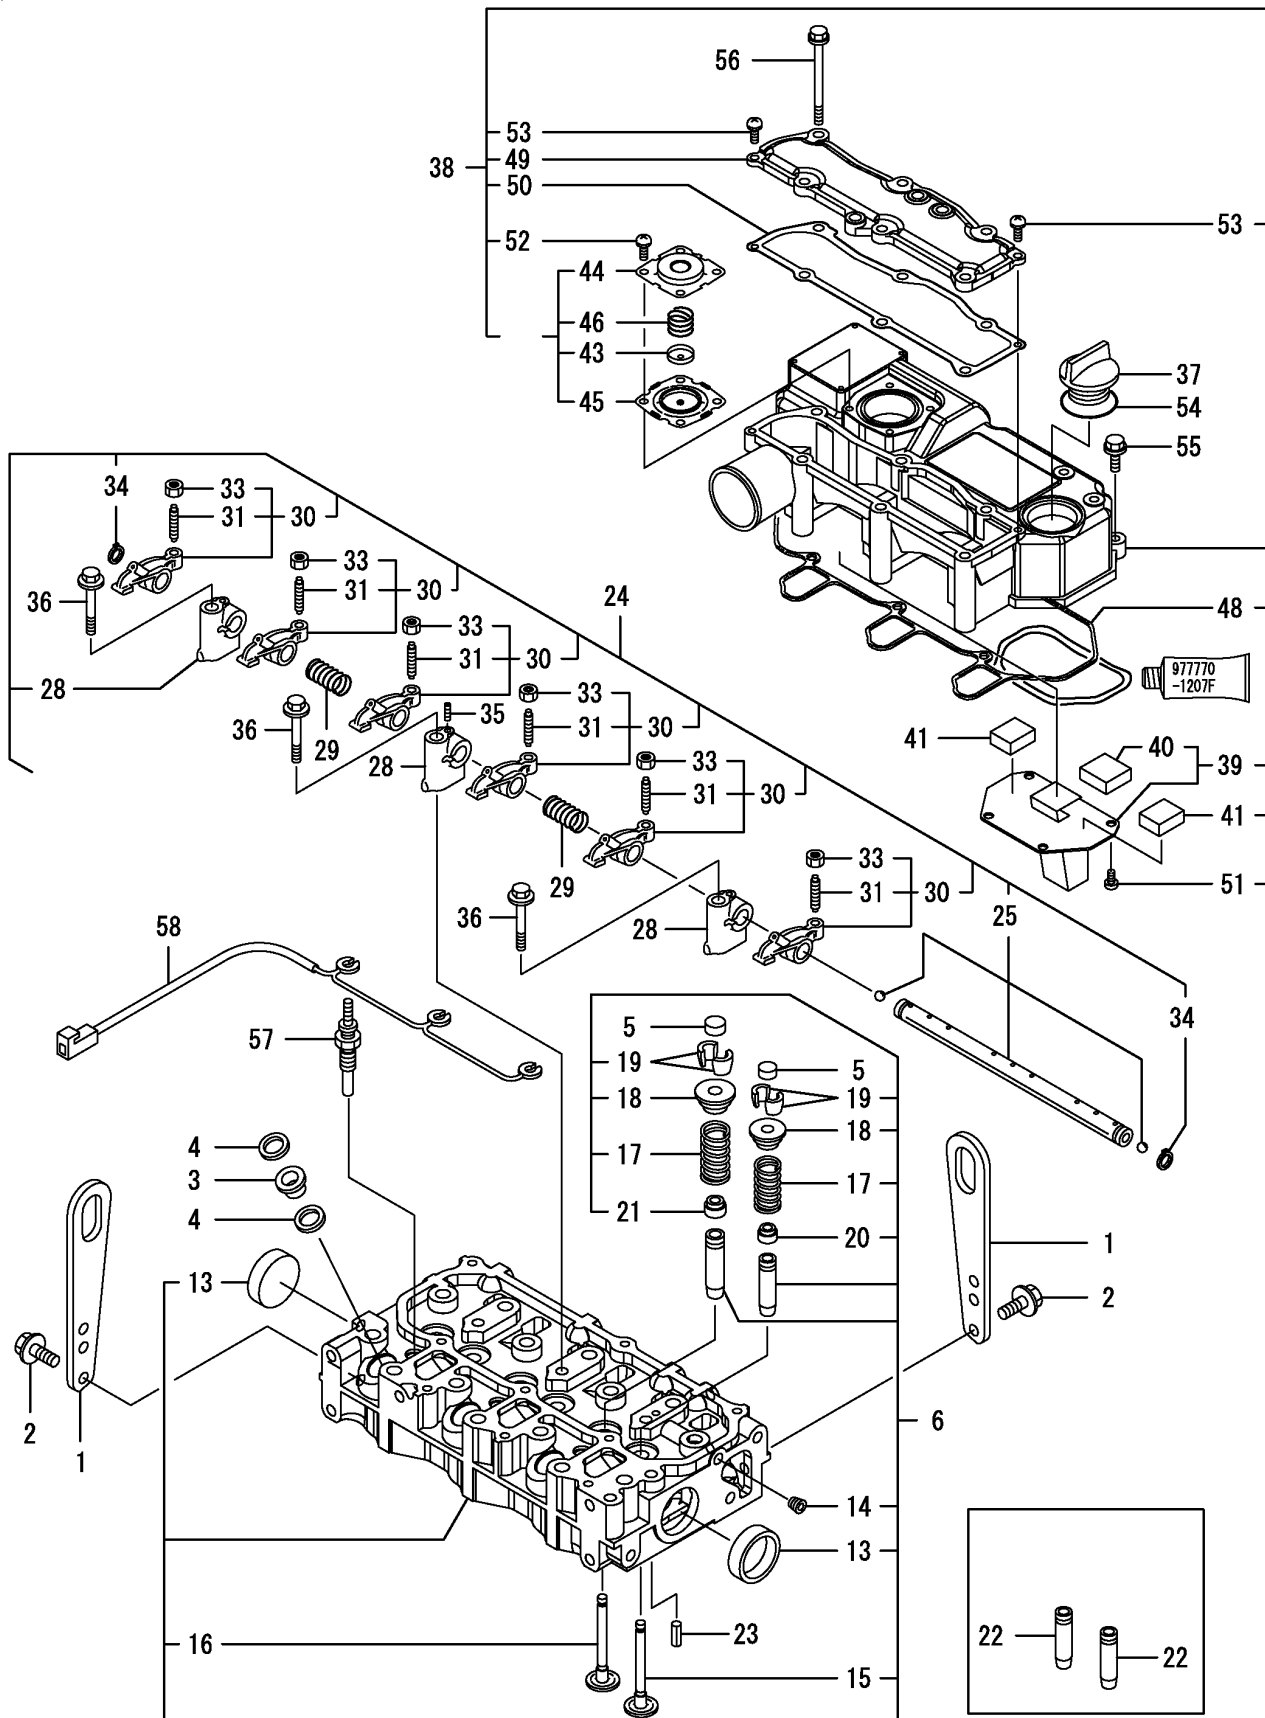


Ref No.	Part Number	Description
1	YA-129900-07900	Lifter, Engine
2	YA-26106-080162	Bolt, M 8 x 16 Plated
3	YA-129901-11450	Protector, Nozzle
4	YA-119600-11460	Gasket, Nozzle
5	YA-105010-11490	Cap, Valve
6	YA-119515-11750	Head Assembly, Cylinder
13	YA-119285-11990	Plug 35
14	YA-23876-005000	Plug Pt, 1/16, Screw
15	YA-119515-11101	Valve, Intake
16	YA-119515-11110	Valve, Exhaust
17	YA-119717-11131	Spring, Valve
18	YA-129508-11180	Retainer, Spring
19	YA-119717-11190	Cotter, Valve
20	YA-119717-11340	Seal, Valve Stem
21	YA-119717-11350	Seal, Valve Stem
22	YA-119515-11800	Guide, Valve
23	YA-22351-060012	Spring Pin, 6 x 12
24	YA-119515-11200	Support Assembly, Arm
25	YA-119515-11240	Shaft Assembly, Rocker
28	YA-119717-11260	Support, Rocker Arm
29	YA-119515-11280	Spring, Shaft
30	YA-119717-11650	Arm Assembly, Rocker
31	YA-129150-11230	Screw, Valve
33	YA-129150-11750	Nut, M8 x P1.0

Ref No.	Part Number	Description
34	YA-22242-000120	Circlip 12
35	YA-26979-050162	Screw, M 5 x 16
36	YA-26106-080402	Bolt, M8 x 40 Plated
37	YA-124160-01751	Cover, Filler
38	YA-119515-11380	Bonnet Assembly, Head
39	YA-119717-03031	Plate, Baffle
40	YA-119717-03070	Baffle, Breather
41	YA-119717-03070	Baffle, Breather
43	YA-119802-03110	Plate, Diaphragm
44	YA-119802-03121	Cover, Diaphragm
45	YA-119802-03131	Diaphragm
46	YA-119802-03141	Spring, Diaphragm
48	YA-119515-11310	Gasket, Bonnet
49	YA-119515-11320	Cover, Bonnet
50	YA-119515-11330	Gasket, Bonnet Cover
51	YA- 22857-500100	Screw, 5 x 10, Tapping
52	YA-22857-500100	Screw, 5 x 10, Tapping
53	YA-22857-500160	Screw, 5 x 16
54	YA-24311-000320	O-Ring, 1A P-32.0
55	YA-26106-060202	Bolt, M 6 x 20 Plated
56	YA-26106-060752	Bolt, M 6 x 75 Plated
57	YA-119717-77800	Plug, Glow
58	YA-119717-77820	Connector, Glow Plug

Yanmar Engine - Exhaust Manifold (Figure 5)

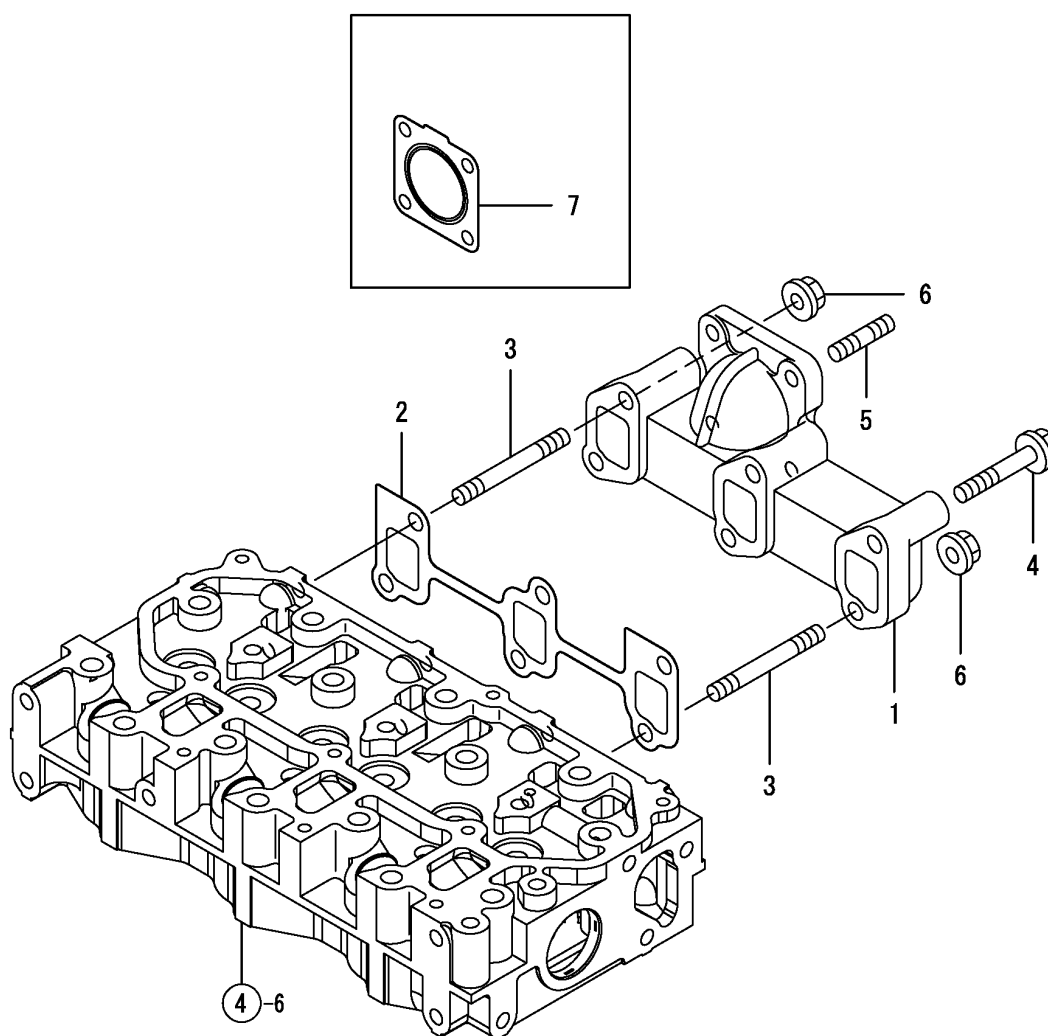


Ref No.	Part Number	Description
1	YA-119718-13100	Manifold, Exhaust
2	YA-119717-13110	Gasket, Manifold
3	YA-119717-13600	Stud, M8 x 50
4	YA-119802-13620	Bolt, M 8 x 50 Plated
5	YA-119131-18320	Bolt, M 8 x 22
6	YA-26306-080002	Nut
7	YA-119515-13200	Gasket, Silencer

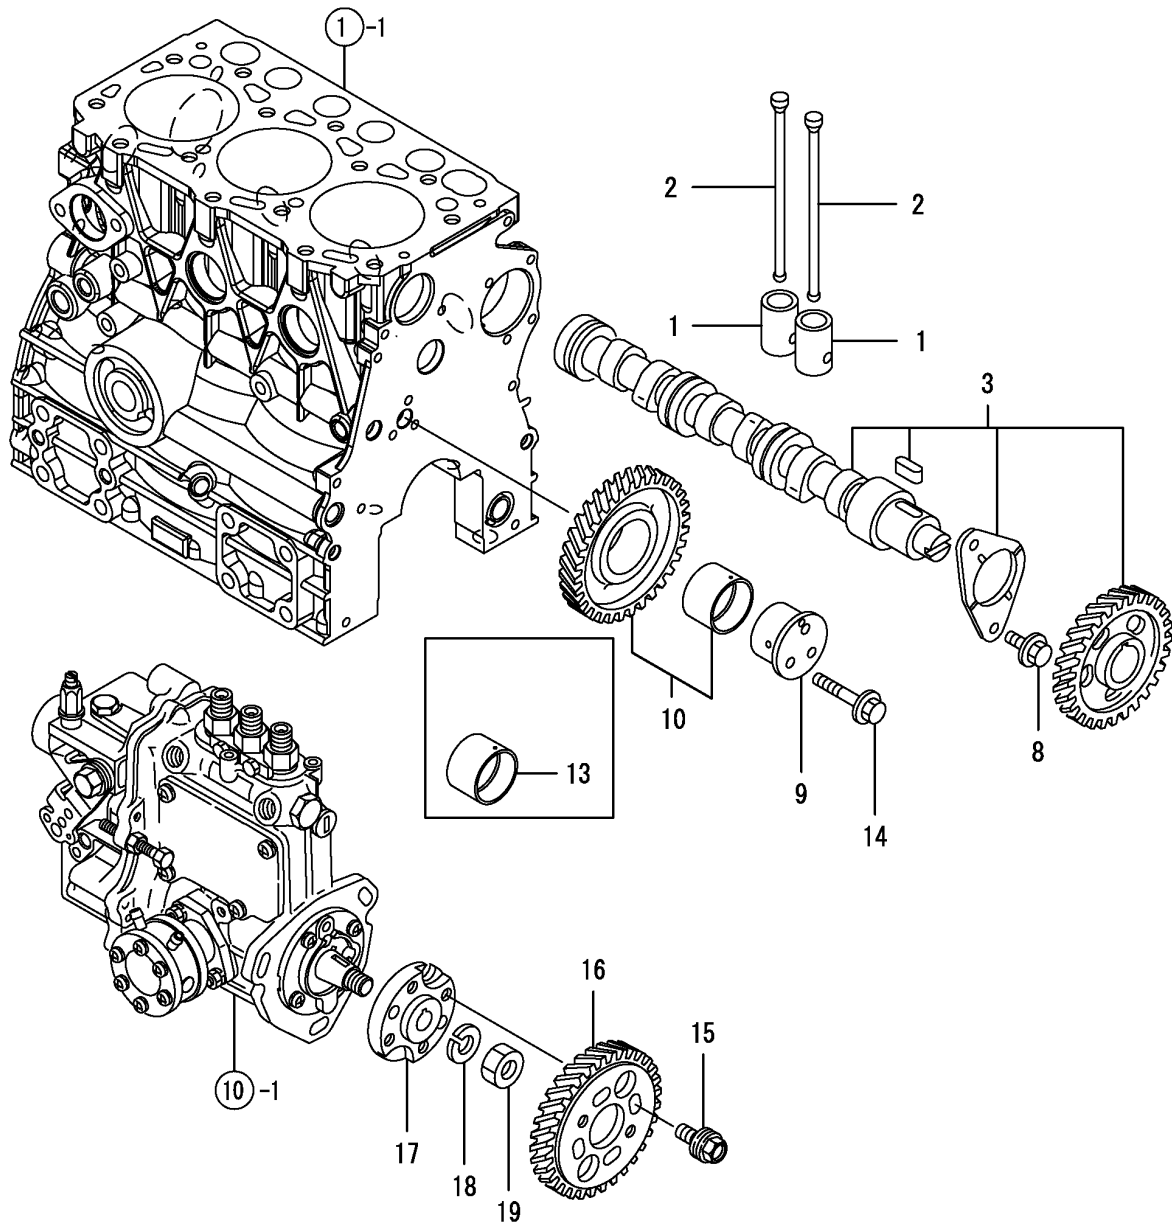


Ref No.	Part Number	Description
1	YA-119620-14200	Tappet
2	YA-119515-14400	Rod, Push
3	YA-119515-14581	Camshaft Assembly
8	YA-26106-060122	Bolt, M 6 x 12 Plated
9	YA-119717-25050	Shaft, Idle Gear
10	YA-119717-25100	Gear Assembly, Idle
13	YA-119717-25911	Bush, Idle Gear

Ref No.	Part Number	Description
14	YA-26106-060352	Bolt, M 6 x 35 Plated
15	YA-129150-25301	Bolt, FI-P
16	YA-119717-25930	Gear, Pump
17	YA-119717-51150	Flange
18	YA-22217-120000	Spring Washer 12
19	YA-26716-120002	Nut 12

Yanmar Engine - Crankshaft & Piston

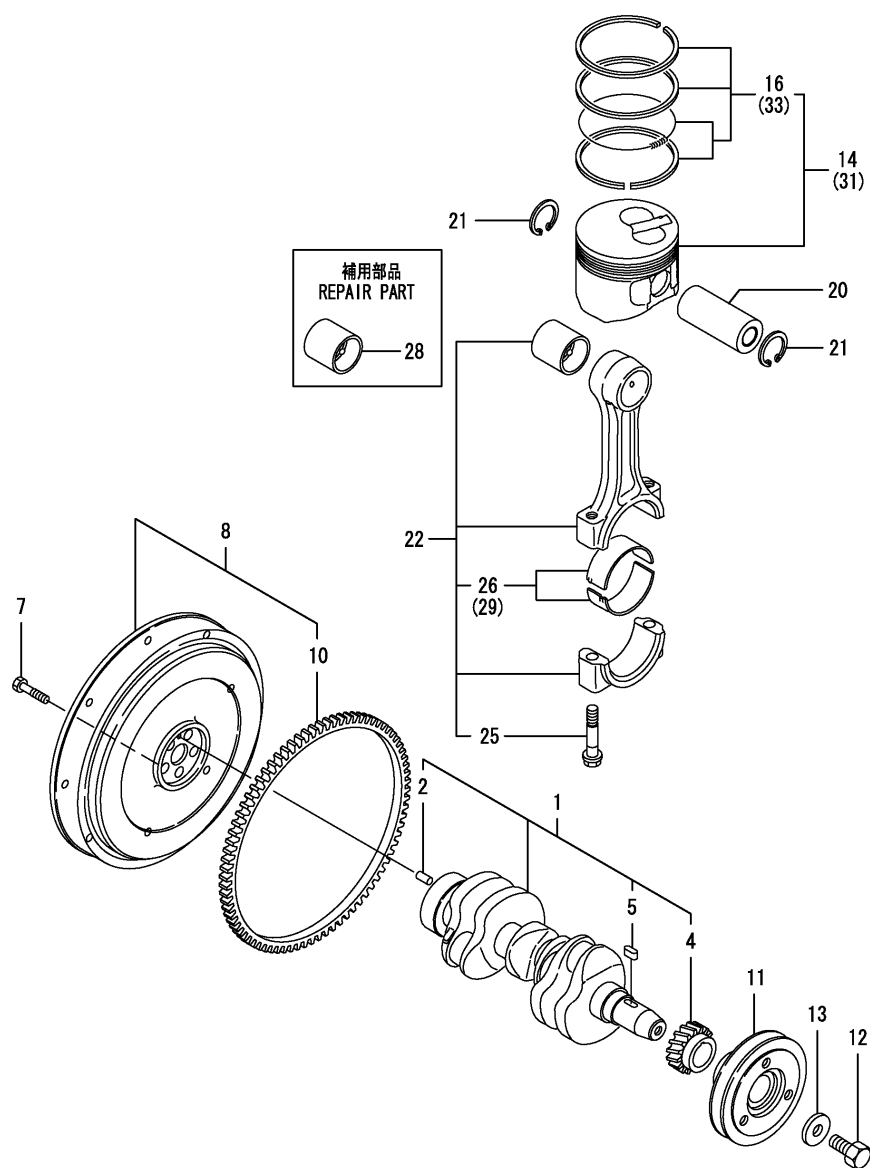


Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	YA-119515-21700	Crankshaft Assembly	16	YA-119515-22500	Ring Set
2	YA-129100-01580	Parallel Pin 8 x 16	20	YA-119515-22300	Pin, Piston
4	YA-119717-21200	Gear, Crankshaft	21	YA-22252-000220	Circlip 22
5	YA-22512-040120	Key, 4 x 12	22	YA-119515-23000	Rod Assembly, Connecting
7	YA-119620-21500	Bolt, Flywheel	25	YA-119717-23200	Bolt, Connecting Rod
8	YA-119515-21580	Flywheel Assembly	26	YA-119515-23601	Metal Assembly, Crank Pin
10	YA-124950-21600	Gear, Ring	28	YA-119717-23910	Bush, Piston Pin
11	YA-119717-21650	V-Pulley, Crankshaft	29	YA-119515-23611	Bearing, Pin
12	YA-119621-21680	Bolt M12 x 1.25, Flange	31	YA-119515-22900	Piston Assembly
13	YA-119620-21941	Washer	33	YA-119515-22550	Ring Set
14	YA-119515-22080	Piston Assembly			

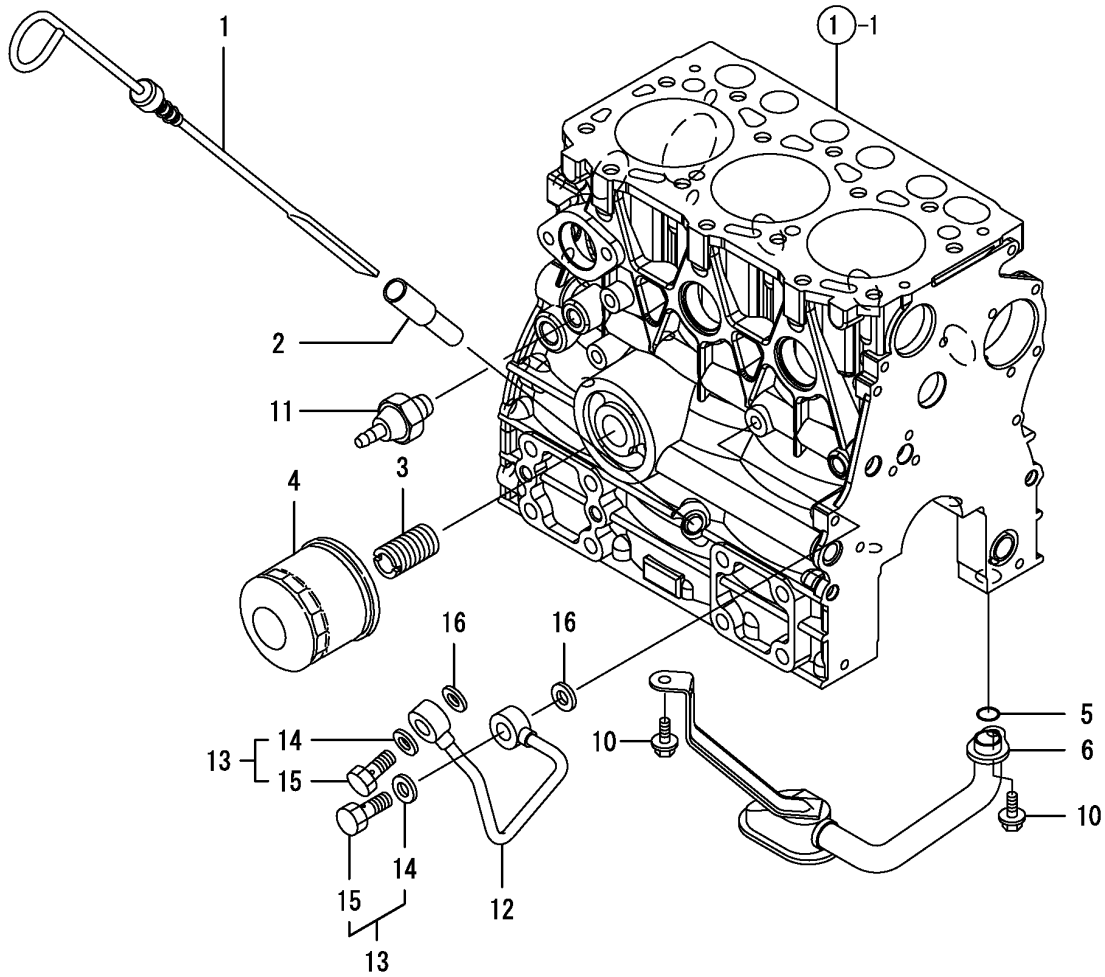

Ref No.	Part Number	Description
1	YA-119515-34801	Dipstick, Lub. Oil
2	YA-121520-34810	Guide, Dipstick
3	YA-129100-35140	Stud
4	YA-119305-35151	Filter Assembly, Lub. Oil
5	YA-119717-32060	O-Ring, P15.0
6	YA-119515-35080	Pipe Assembly, Lub. Oil
10	YA-26106-060102	Bolt, 6 x 10 Plated


Ref No.	Part Number	Description
11	YA-114250-39450	Switch
12	YA-119717-39210	Pipe Assembly, Hydraulic
13	YA-129005-59830	Bolt Assembly, Joint
14	YA-22190-080002	Seal Washer
15	YA-23857-030000	Joint Bolt
16	YA-22190-080002	Seal Washer

Yanmar Engine - Fuel Injection Valve

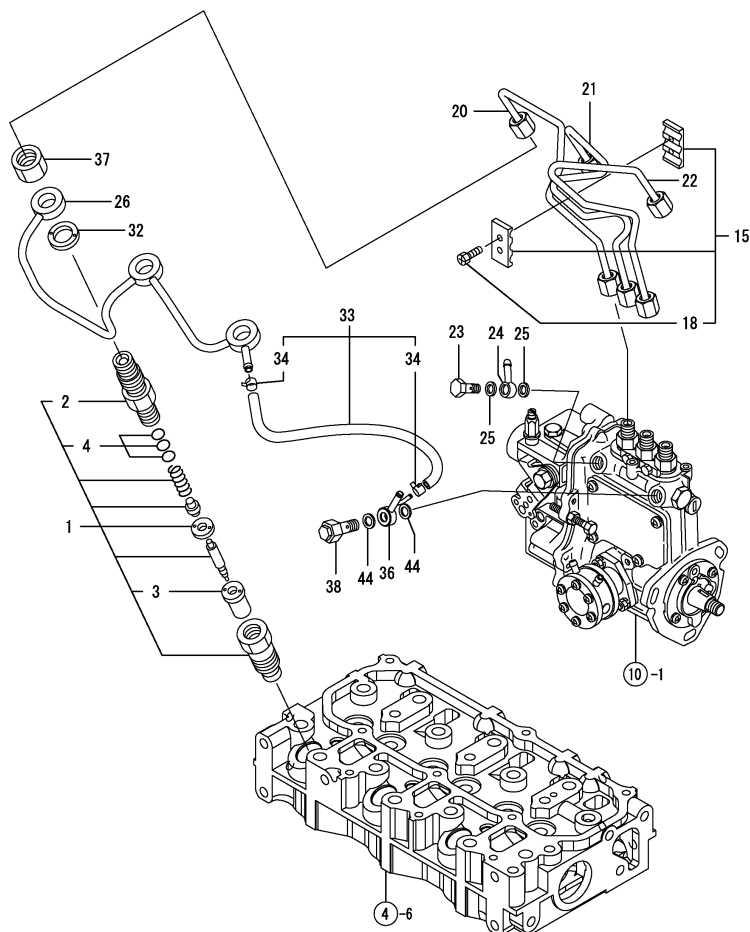

Y00W4110 12 FUEL INJECTION VALVE
3TNV70-ACB 1:08.07/2: 3: PLUS


Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	YA-119515-53001	Valve Assembly, Injection	24	YA-101304-59020	Joint 12, Pipe
2	YA-118200-53010	Holder, Nozzle	25	YA-22190-120002	Seal Washer 12
3	YA-119515-53010	Nozzle Assembly	26	YA-119515-59540	Pipe Assembly, Return
4	YA-129901-53800	Shim Set	32	YA-129901-59560	Gasket, Return
15	YA-129150-59120	Retainer, Inj. Pipe	33	YA-119416-59520	Pipe, Fuel Return
18	YA-129150-59131	Bolt, M 4 x 14, Hex Sckt.	34	YA-124066-59100	Clamp
20	YA-119546-59810	Pipe, Fuel Injection	36	YA-119840-59570	Joint
21	YA-119546-59820	Pipe, Fuel Injection	37	YA-119620-59700	Nut
22	YA-119546-59830	Pipe, Fuel Injection	38	YA-119813-59950	Valve Assembly, Check
23	YA-103854-39140	Bolt, Pipe Joint	44	YA-22190-120002	Seal Washer

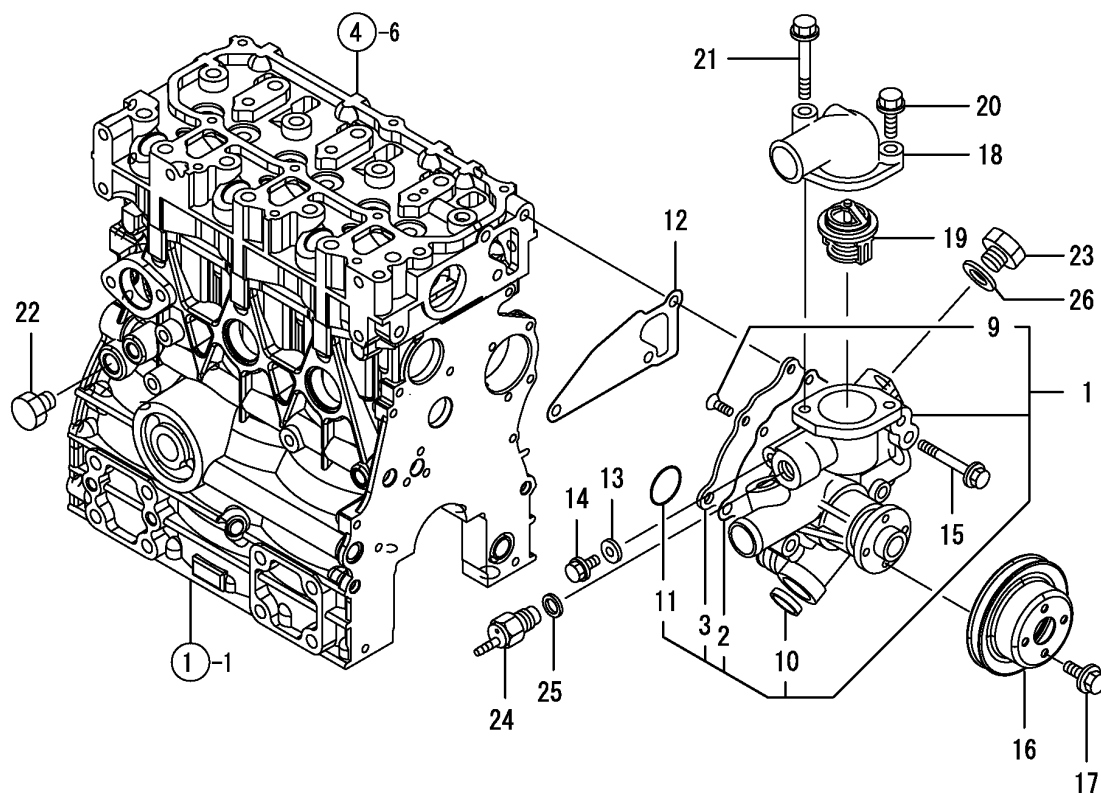

Ref No.	Part Number	Description
1	YA-11951542002P	Pump Assembly, Water
2	YA-119717-42031	Gasket
3	YA-119515-42041	Cover
9	YA-26577-060122	Screw, M 6 x 12
10	YA-27241-250000	Plug 25
11	YA-119717-42320	O-Ring
12	YA-119515-42020	Gasket, Water Pump
13	YA-23414-080000	Gasket 8, Round
14	YA-26106-080122	Bolt, M 8 x 12 Plated
15	YA-26106-080502	Bolt, M 8 x 50 Plated
16	YA-119717-42350	V-Pulley, C.W. Pump

Ref No.	Part Number	Description
17	YA-26106-060122	Bolt, M 6 x 12 Plated
18	YA-124101-49531	Cover, Thermostat
19	YA-119717-49800	Thermostat
20	YA-26106-080252	Bolt, M 6 x 25 Plated
21	YA-26106-080652	Bolt, M 6 x 65 Plated
22	YA-171056-49120	Plug, Drain
23	YA-121450-42450	Plug, M16
24	YA-12125044901Z	Switch, Thermo
25	YA-124465-44950	Gasket 16
26	YA-124465-44950	Gasket 16


Yanmar Engine - Fuel Injection Pump

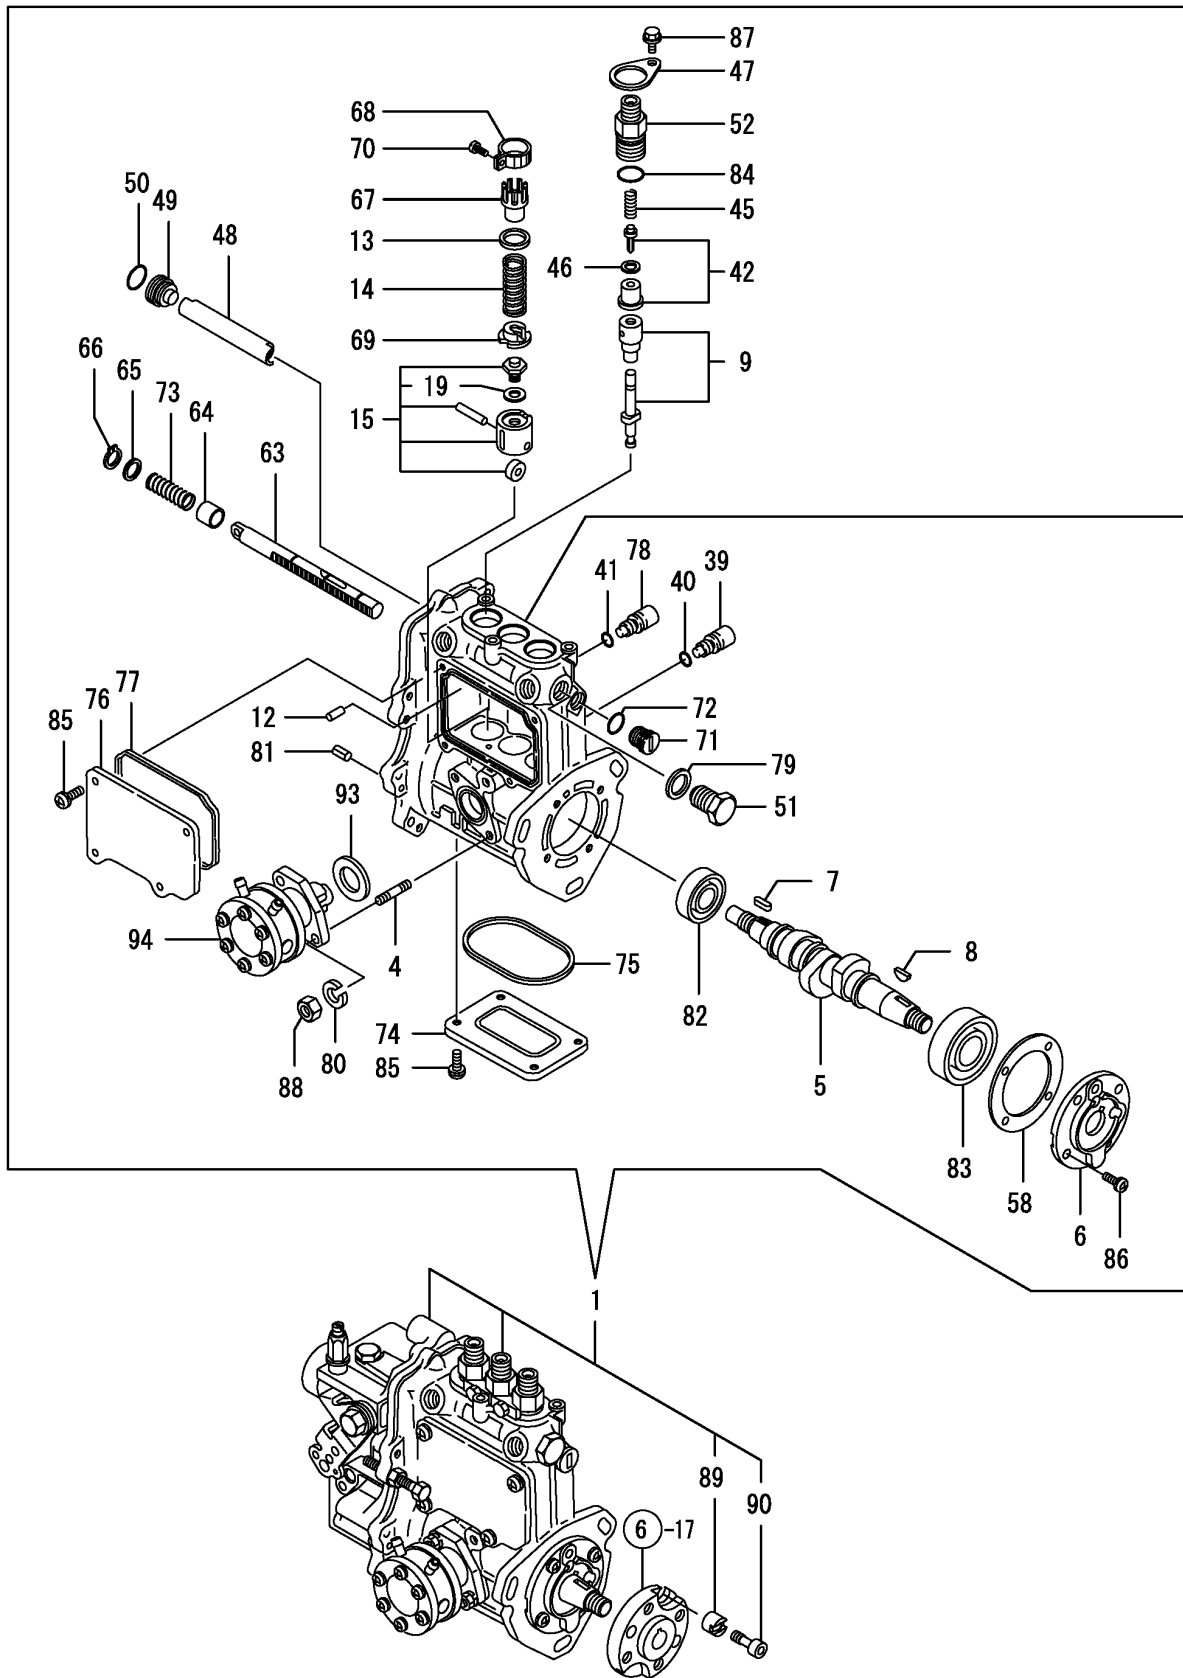

Ref No.	Part Number	Description
1	YA-719533-51350	FIE Assembly
4	YA-129155-51020	Stud, Feed Pump
5	YA-119717-51030	Camshaft
6	YA-119717-51060	Support, Bearing
7	YA-119717-51070	Parallel Pin
8	YA-122710-51090	Key
9	YA-119415-51100	Plunger Assembly
12	YA-129155-51140	Pin, Barrel Locking
13	YA-158600-51170	Seat Spring
14	YA-119717-51190	Spring, Plunger
15	YA-119717-51200	Tappet Assembly
19	YA-129155-51600	Shim Pack
39	YA-158600-51270	Stopper
40	YA-129155-51280	O-Ring
41	YA-129155-51280	O-Ring
42	YA-119717-51300	Valve Assembly, Delivery
45	YA-119717-51330	Spring, Delivery
46	YA-124550-51350	Gasket, Delivery
47	YA-118400-51370	Locking
48	YA-129155-51400	Deflector
49	YA-158600-51410	Plug
50	YA-119717-51420	O-Ring
51	YA-158600-51420	Plug
52	YA-158600-51442	Valve Assembly, Delivery
58	YA-129155-51450	Shim Set, Adjusting
63	YA-119717-51500	Rack, Control
64	YA-129155-51521	Bush, Rack
65	YA-129155-51530	Spacer, Aux. Spring

Ref No.	Part Number	Description
66	YA-129155-51540	Circlip
67	YA-129155-51550	Pinion, Control
68	YA-774307-51490	Pinion
69	YA-119717-51570	Receiver, Spring
70	YA-129100-51570	Screw
71	YA-158600-51570	Plug
72	YA-129155-51580	O-Ring
73	YA-129155-51591	Spring, Rack
74	YA-129155-51701	Cover
75	YA-119717-51711	Packing
76	YA-119717-51750	Cover, Body Side
77	YA-119717-51761	Gasket
78	YA-158600-51790	Guide, Rack
79	YA-22190-160002	Seal Washer
80	YA-22217-060000	Spring Washer
81	YA-22351-050010	Spring Pin, 5 x 10
82	YA-24101-060034	Ball Bearing
83	YA-24101-063034	Ball Bearing
84	YA-24316-000150	O-Ring
85	YA-26022-050122	Screw, M 5 x 12
86	YA-26022-060162	Screw, M 6 x 16
87	YA-26106-050102	Bolt, M 5 x 10 Plated
88	YA-26716-060002	Nut
89	YA-119717-51480	Collar, FIC Fix
90	YA-119717-51490	Bolt, Fixation
93	YA-129155-52051	Gasket
94	YA-129158-52101	Feed Pump Assembly


Yanmar Engine - Governor (Figure 11)

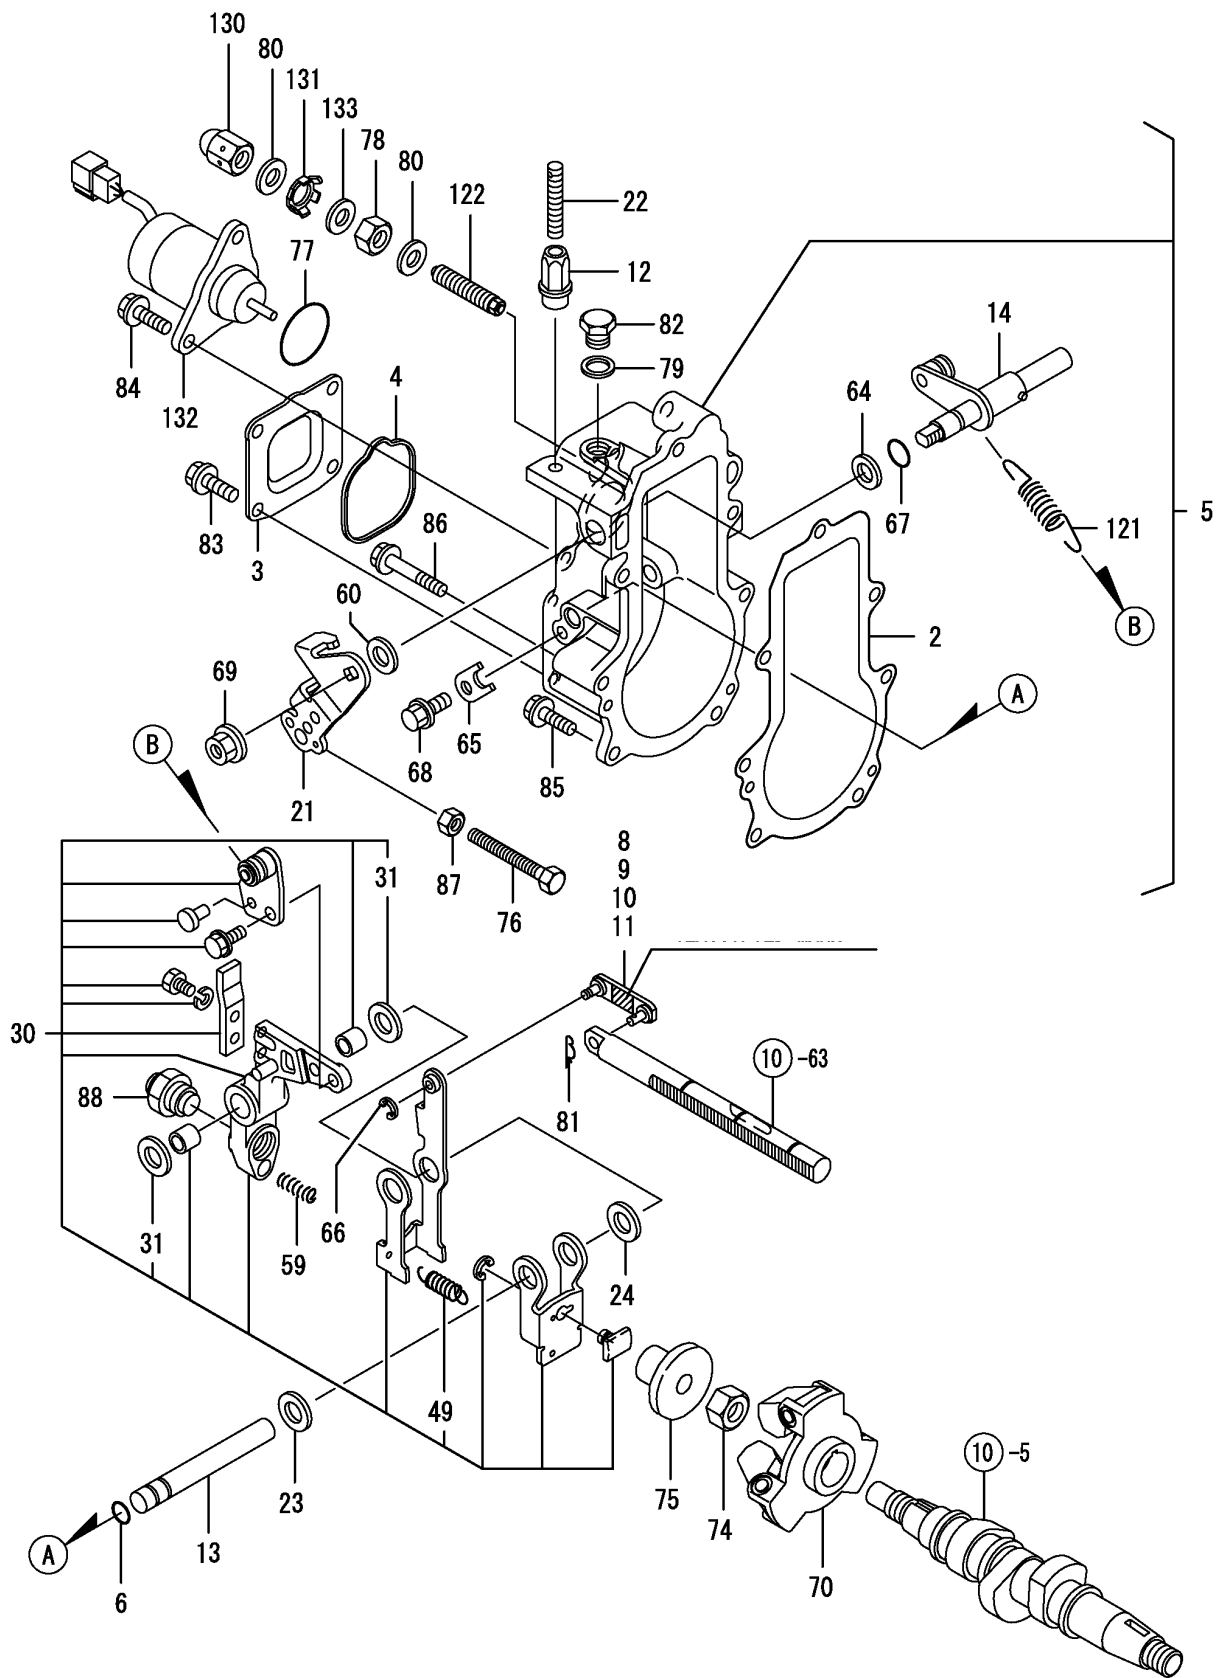

Ref No.	Part Number	Description
2	YA-119717-61050	Gasket, Case
3	YA-119717-61060	Case, Governor
4	YA-119717-61070	Gasket, Cover
5	YA-119717-61100	Case Assembly, Governor
6	YA-129155-51280	O-Ring
8	YA-119717-61120	Link
9	YA-119717-61130	Link
10	YA-119717-61140	Link
11	YA-119717-61150	Link
12	YA-129209-61370	Nut, M6
13	YA-129052-61390	Shaft, Gov. Lever
14	YA-119717-61400	Shaft Assembly, Control
21	YA-119515-61440	Lever, Control
22	YA-129470-61450	Bolt, Revol. Limit
23	YA-129156-61460	Shim
24	YA-129155-61480	Spacer Assembly
30	YA-119717-61500	Lever Assembly, Governor
31	YA-174307-51700	Shim Set
49	YA-129486-61540	Spring, Set
59	YA-129470-61650	Spring, Fuel Control
60	YA-158552-61700	Shim Assembly
64	YA-158552-61710	Shim
65	YA-119660-61901	Retainer, Shaft
66	YA-22272-000030	Circlip
67	YA-24341-000070	O-Ring

Ref No.	Part Number	Description
68	YA-26106-060102	Bolt, 6 x 10 Plated
69	YA-26366-080002	Nut, M 8
70	YA-119717-61200	Weight Assembly
74	YA-129008-61301	Nut, Governor Weight
75	YA-129155-61341	Sleeve
76	YA-129155-61460	Bolt, Idle Limit
77	YA-158552-61900	O-Ring
78	YA-129209-61920	Nut
79	YA-22190-100002	Seal Washer
80	YA-22190-120002	Seal Washer
81	YA-22372-040000	Snap Pin
82	YA-23887-100002	Plug 10
83	YA-26106-060102	Bolt, 6 x 10 Plated
84	YA-26106-060142	Bolt, M 6 x 14 Plated
85	YA-26106-060202	Bolt, M 6 x 20 Plated
86	YA-26106-060452	Bolt, M 6 x 45 Plated
87	YA-26756-060002	Lock Nut 6
88	YA-119515-61560	Angleich Assembly
121	YA-129573-61700	Spring, Governor
122	YA-158601-61700	Limiter Assembly, Fuel
130	YA-129209-61930	Cap Nut
131	YA-129209-61970	Plate
132	YA-119653-77950	Solenoid, Stop
133	YA-23414-120016	Gasket 12


Yanmar Engine - Cylinder Block (Figure 1)

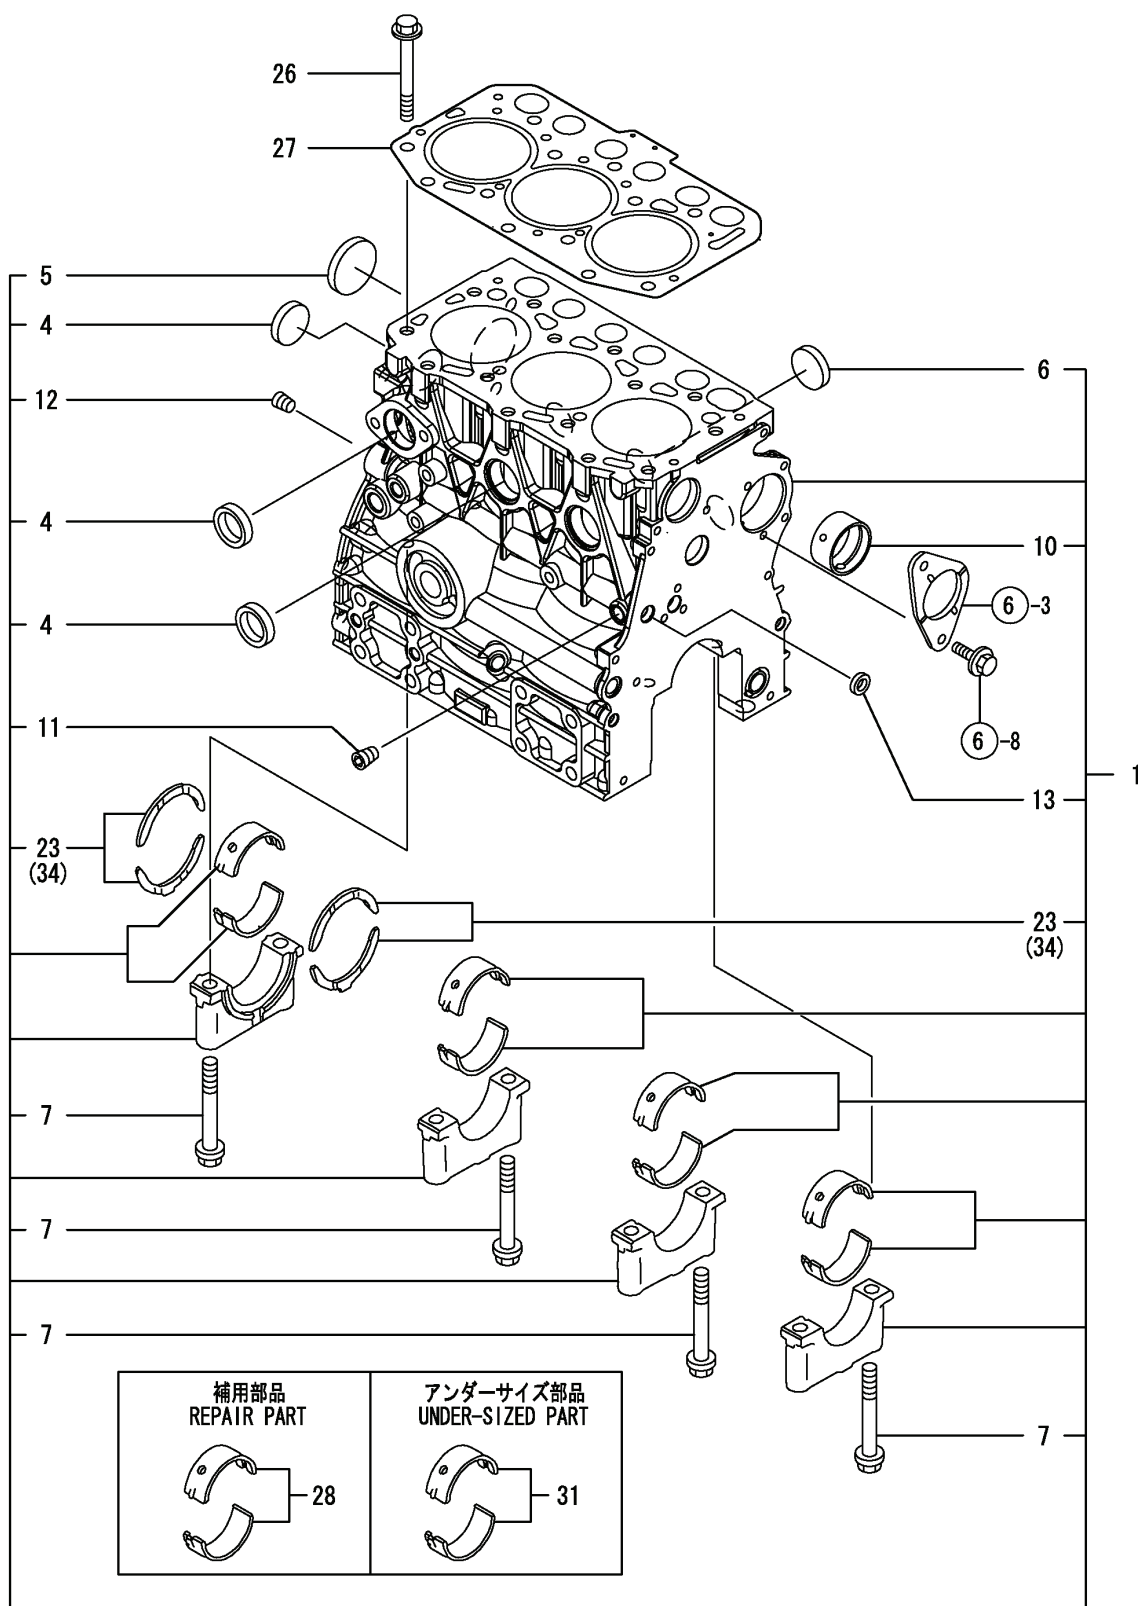

Y00W4110	1. CYLINDER BLOCK			
3TNV70-ACB	1:08.07	2:	3:	PLUS




Ref No.	Part Number	Description
1	YA-719515-01560	Block Assembly, Cylinder
4	YA-105311-01090	Plug 30
5	YA-119623-01250	Plug 45
6	YA-119285-01990	Plug 25
7	YA-119620-02020	Bolt
10	YA-119717-02411	Bush, Camshaft
11	YA-124060-01050	Plug Pt, 1/8
12	YA-124160-01910	Plug Pt, 1/4
13	YA-27241-120000	Plug 12
23	YA-119717-02930	Bearing, Thrust
26	YA-119515-01200	Bolt, Cylinder Head
27	YA-119515-01330	Gasket, Cylinder Head
28	YA-719717-02901	Main Bearing Set
31	YA-719717-02911	Main Metal
34	YA-119810-02941	Bearing, Thrust

Yanmar Engine - Starting Motor

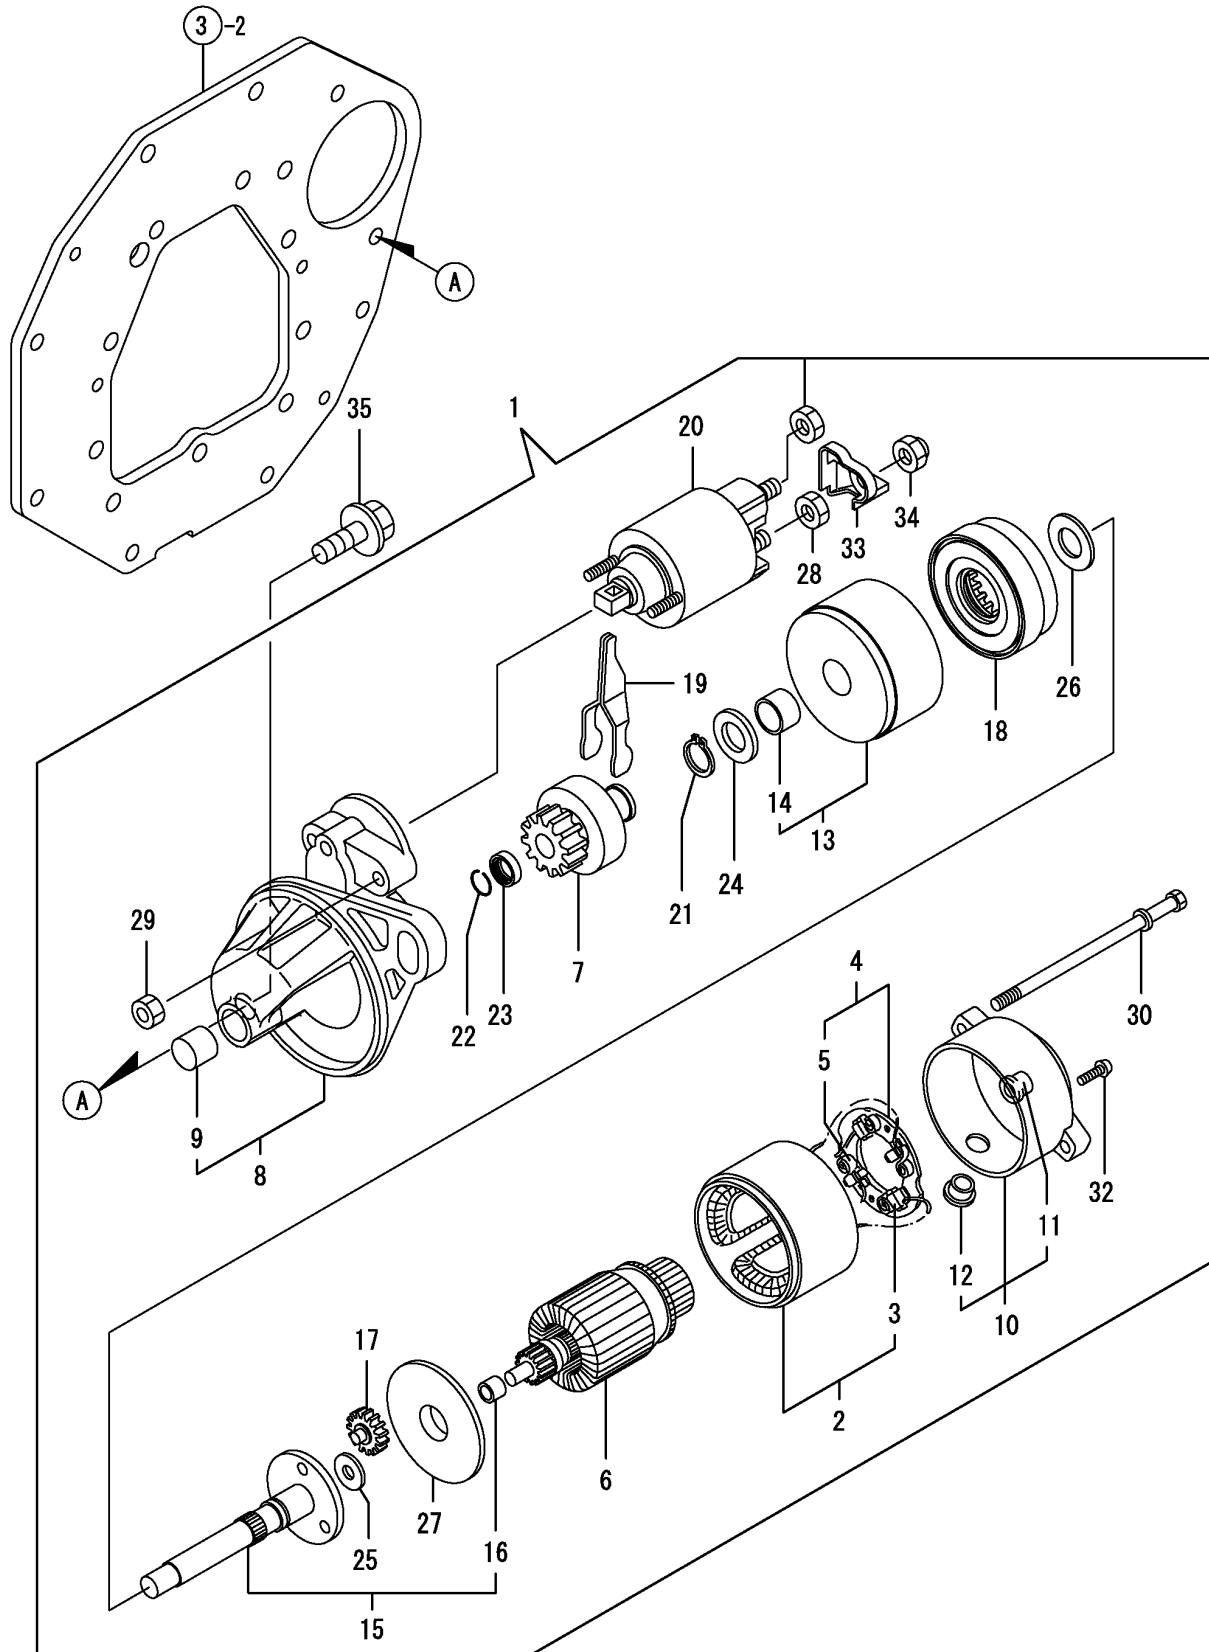


Ref No.	Part Number	Description
1	YA-11971777010Z	Starter
2	YA-X0281007750	Coil Assembly, Field
3	YA-X0280996180	Starter Kit
4	YA-X0285105190	Holder Assembly
5	YA-X0285205030	Spring
6	YA-X0282005991	Armature Assembly
7	YA-X0283006960	Clutch Sub-Assembly
8	YA-X4284001590	Housing Assembly, Starter
9	YA-X9491050100	Needle Bearing
10	YA-X0285007030	Frame Assembly
11	YA-X9491040990	Bearing
12	YA-X0280626010	Cover
13	YA-X0284105040	Bearing Sub-Assembly
14	YA-X9491034330	Bearing
15	YA-X0286105010	Shaft Sub-Assembly
16	YA-X9491034320	Bearing
17	YA-X0286305010	Gear
18	YA-X0286355010	Gear
19	YA-X0287405140	Lever
20	YA-X0534007800	Switch, Emergency
21	YA-X9055715000	Ring
22	YA-X9490721360	Ring
23	YA-X0280210331	Nut
24	YA-X9490138110	Washer
25	YA-X9490138090	Washer
26	YA-X9490138100	Washer
27	YA-X0284525010	Plate
28	YA-X9490562360	Nut
29	YA-X9490560750	Nut
30	YA-129407-77330	Bolt, Through
32	YA-X9490065670	Screw, M 4 x 6
33	YA-X0280335350	Cover Set, Terminal
34	YA-X1289510130	Nut
35	YA-26106-100252	Bolt, M 10 x 25 Plated

Yanmar Engine - Gasket Set (Figure 14)

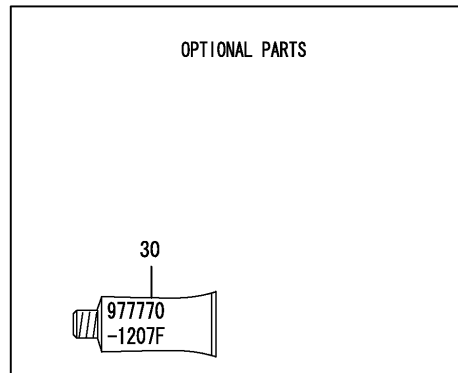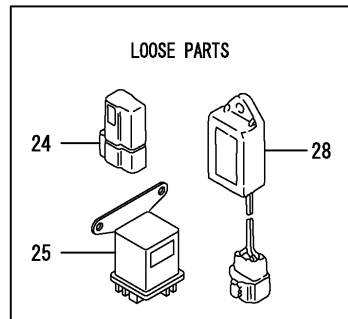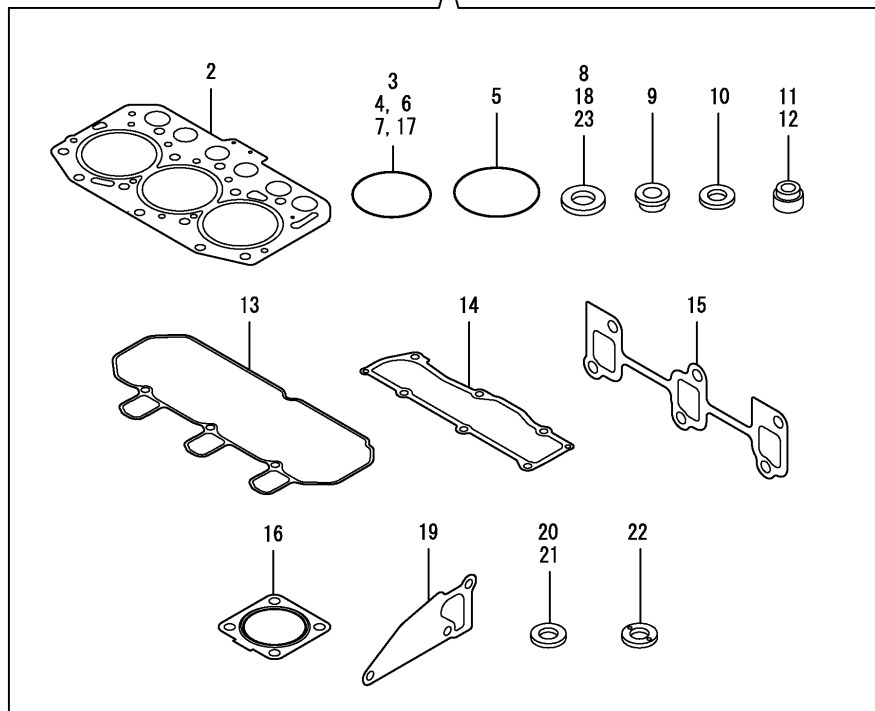


Ref No.	Part Number	Description
1	YA-719515-92620	Gasket Set
2	YA-119515-01330	Gasket, Cylinder Head
3	YA-119624-32040	O-Ring, P 12.0
4	YA-119717-32050	O-Ring, P 17.0
5	YA-121850-51960	O-Ring, F.I. Pump
6	YA-24311-000320	O-Ring, 1A P-32.0
7	YA-24341-000240	O-Ring, 1A S-24.0
8	YA-22190-160002	Seal Washer
9	YA-129901-11450	Protector, Nozzle
10	YA-119600-11460	Gasket, Nozzle
11	YA-119717-11340	Seal, Valve Stem
12	YA-119717-11350	Seal, Valve Stem
13	YA-119515-11310	Gasket, Bonnet
14	YA-119515-11330	Gasket, Bonnet Cover

Ref No.	Part Number	Description
15	YA-119717-13110	Gasket, Manifold
16	YA-119515-13200	Gasket, Silencer
17	YA-119717-32060	O-Ring, P15.0
18	YA-22190-080002	Seal Washer
19	YA-119515-42020	Gasket, Water Pump
20	YA-23414-080000	Gasket 8, Round
21	YA-124465-44950	Gasket 16
22	YA-129901-59560	Gasket, Return
23	YA-22190-120002	Seal Washer 12
24	YA-119643-66900	Diode
25	YA-119650-77911	Relay, Glow
28	YA-129211-77920	Timer
30	YA-977770-1207F	Gasket, Liquid

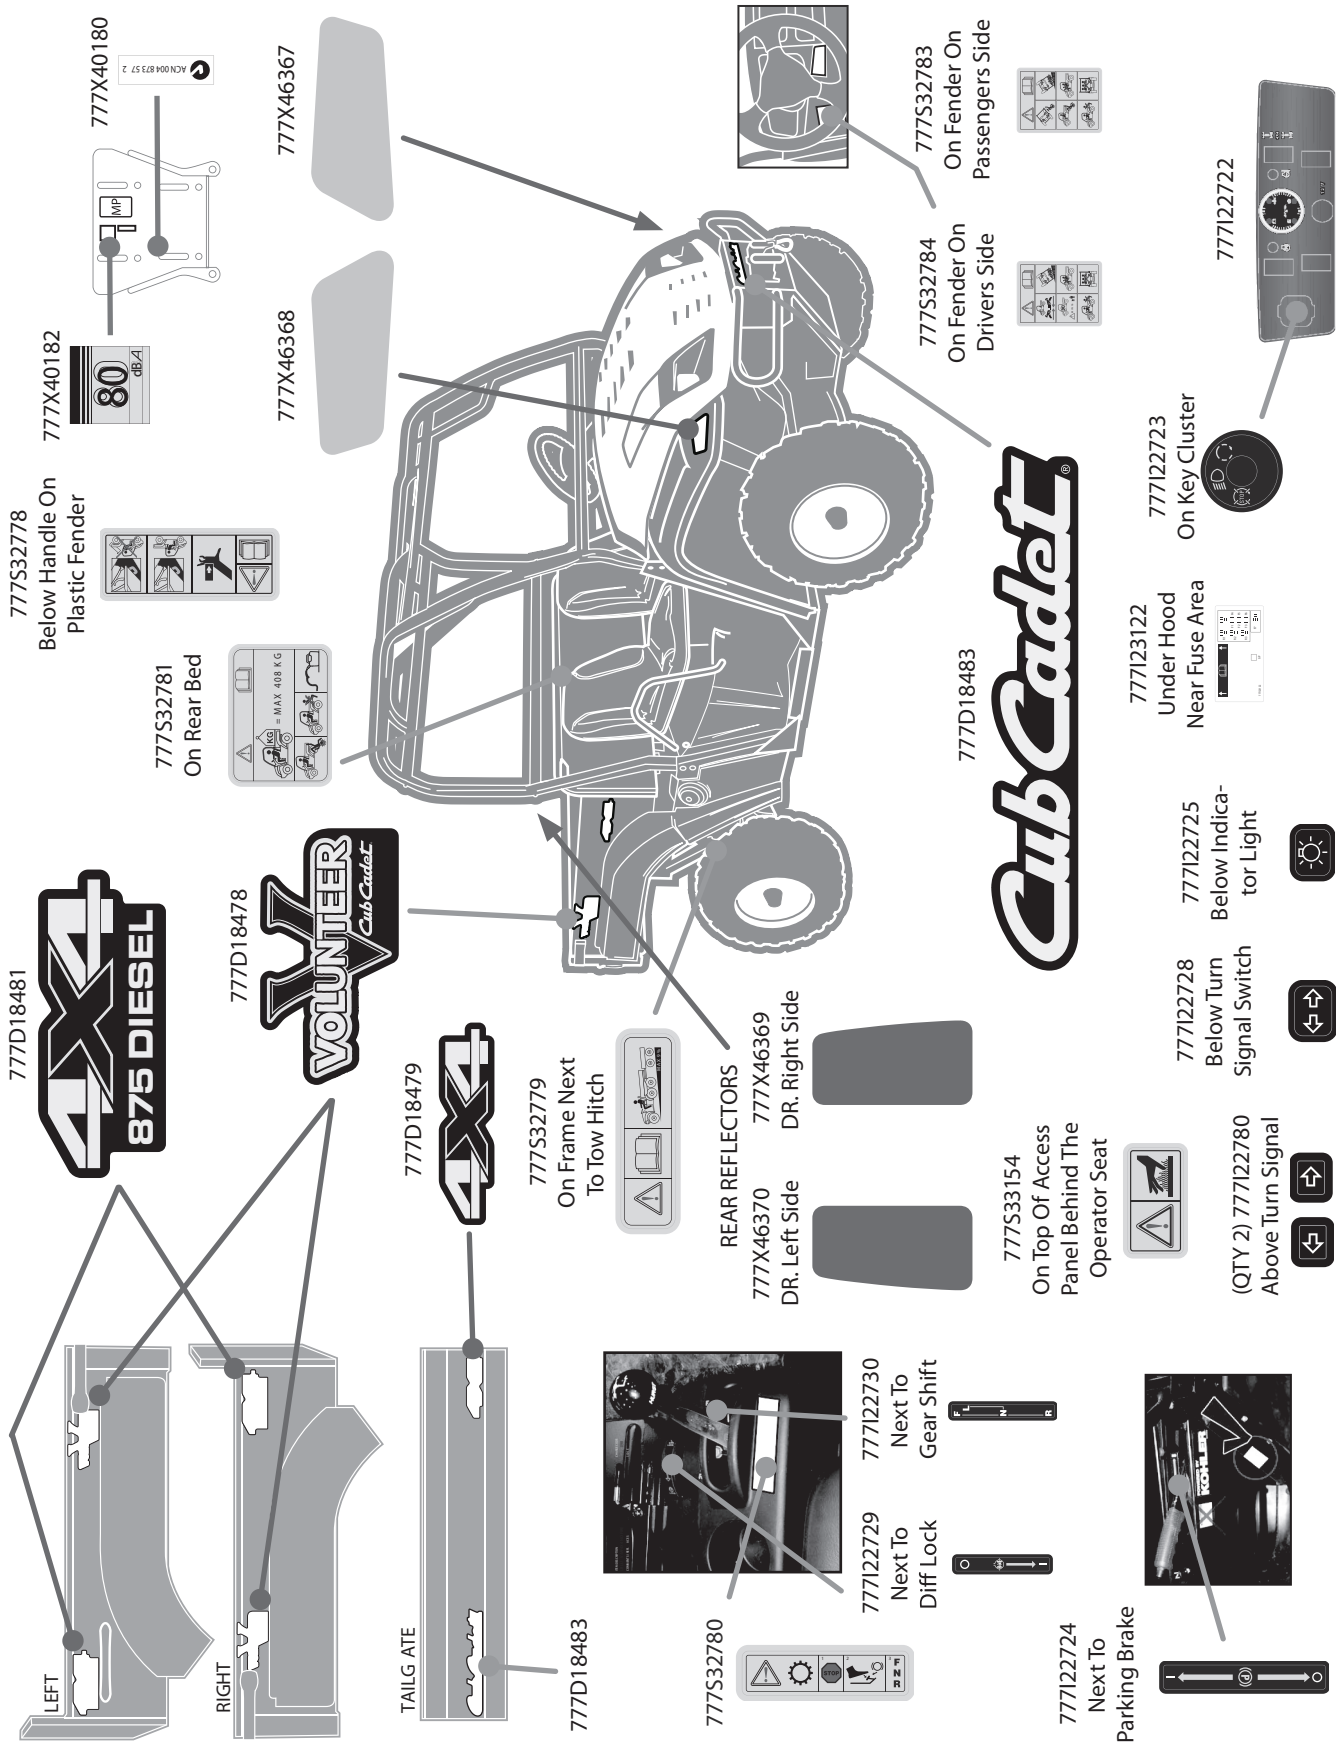

Electrical Schematic

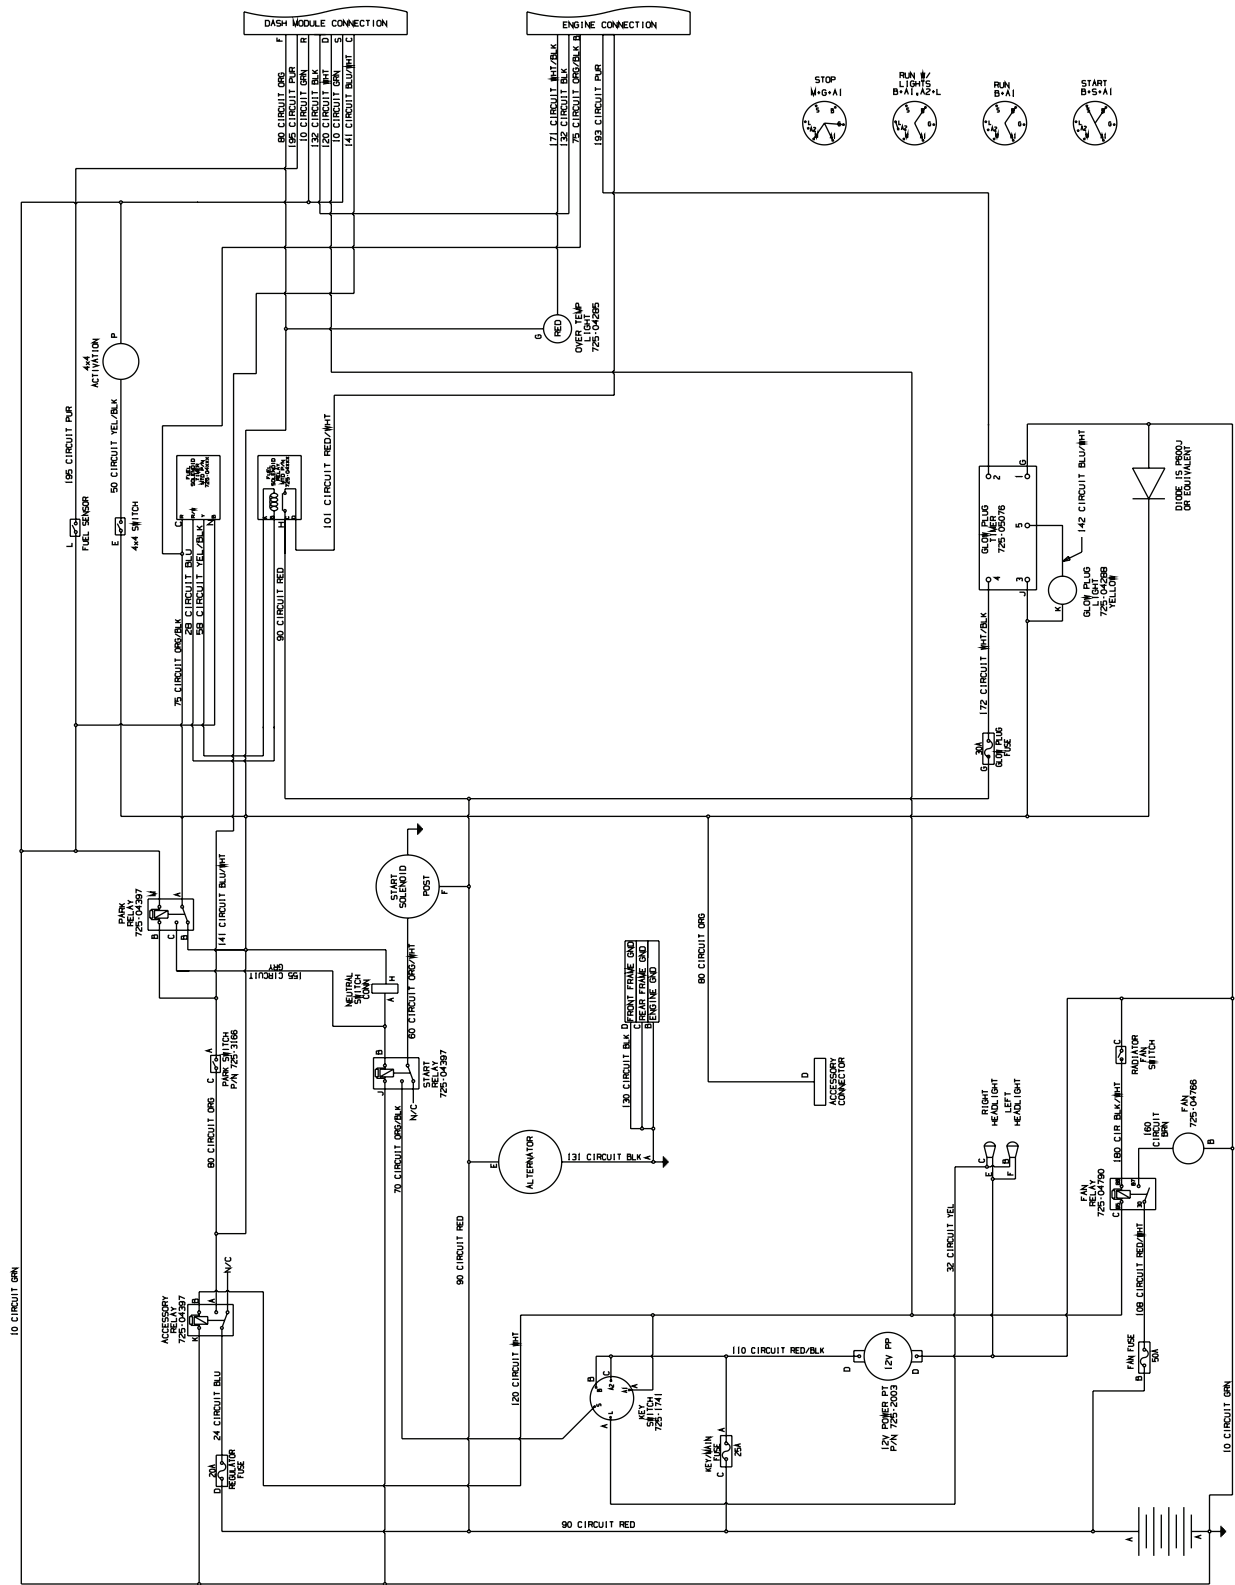

This image shows a full page of white paper with horizontal grey ruling lines. The word "Notes" is written in a large, bold, black font at the top left corner. A vertical grey margin line runs down the right side of the page, creating a narrow column next to the title. The rest of the page is filled with evenly spaced horizontal lines for writing.

[illegible]

[illegible]



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
