

OPERATOR'S MANUAL

Pro Z Series 500/700/900 Lapbar

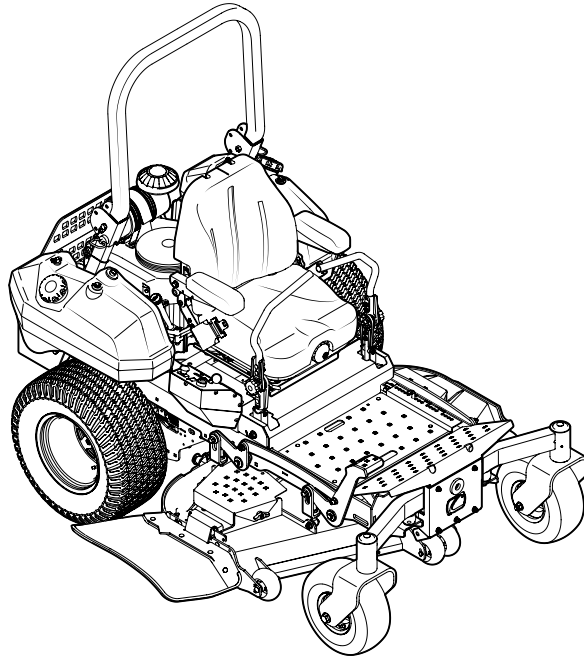


Table of Contents

<i>Safe Operation Practices</i>	2	<i>Troubleshooting</i>	28
<i>Assembly & Set-Up</i>	9	<i>Replacement Parts</i>	29
<i>Controls & Operation</i>	13	<i>Attachments & Accessories</i>	29
<i>Service</i>	20	<i>Warranties</i>	30

WARNING

**READ AND FOLLOW ALL SAFETY RULES AND INSTRUCTIONS IN THIS MANUAL
BEFORE ATTEMPTING TO OPERATE THIS MACHINE.
FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.**

NOTE: This Operator's Manual covers several models. Features may vary by model. Not all features in this manual are applicable to all models and the model depicted may differ from yours.





WARNING! This symbol points out important safety instructions which, if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate this machine. Failure to comply with these instructions may result in personal injury.

When you see this symbol, **HEED ITS WARNING!**

CALIFORNIA PROPOSITION 65



WARNING! Engine Exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



WARNING! Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.



WARNING! This machine is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrestor meeting applicable local or state laws (if any). If a spark arrestor is used, it should be maintained in effective working order by the operator. In the state of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrestor for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131, Cleveland, Ohio 44136-0019.

This spark ignition system complies with Canadian ICES-002.



DANGER! The engine manufacturer has supplied an engine owner's manual for information regarding US Environmental Protection Agency (EPA) and California Air resources Board (CARB) regulations relating to emission control systems, maintenance, and warranty. Making any unauthorized alterations or modifications to the engine, fuel, or venting systems may violate EPA and/or CARB regulations. Further information may be obtained from the engine manufacturer.



DANGER! This machine was built to be operated according to the safe operation practices in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. This machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

Training

1. Read the Operator's manual and other training material. If the operator(s) or mechanic(s) cannot read English it is the owner's responsibility to explain this material to them.
2. Become familiar with the safe operation of the machine, operator controls, and safety signs.
3. All operators and mechanics should be trained to operate or service the equipment. The owner is responsible for training them.
4. Never let children under the age of 16 or untrained people operate or service the equipment. Local regulations may further restrict the age of the operator.
5. The owner/operator can prevent and is responsible for accidents or injuries occurring to them, other people or property.

General Operation

1. Read, understand, and follow all instructions on the machine and in the manual(s) before attempting to assemble and operate. Keep this manual in a safe place for future and regular reference by each operator and for ordering replacement parts.
2. Be familiar with all controls and their proper operation. Know how to stop the machine and disengage the controls quickly.
3. Do not allow anyone to operate or maintain this machine who has not read the manual. Never permit children under the age of 16 to operate this machine.
4. Do not remove any shields, guards, labels or safety devices. If a shield, guard, label or safety device is damaged or does not function, repair or replace it before operating the machine.
5. To help avoid blade contact or a thrown object injury, keep bystanders, helpers, children and pets at least 75 feet from the machine while it is in operation. Stop machine if anyone enters the area.
6. Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones, toys, and other foreign objects that could be picked up and thrown by the blade(s). Thrown objects can cause serious personal injury.
7. Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the machine manufacturer.
8. Plan your mowing pattern to avoid discharge of material toward roads, sidewalks, bystanders and the like. Also, avoid discharging material against a wall or obstruction which may cause discharged material to ricochet back toward the operator.
9. Always wear appropriate clothing and personal protective equipment (e.g. safety glasses, long pants, gloves, hearing protection, safety shoes, hard hat) when operating or maintaining this machine. Long hair, loose fitting clothing or jewelry may get entangled in moving parts. Follow all federal, state and local guidelines regarding the use of personal protective equipment.
10. For extended use of this product, hearing protection is recommended.
11. Be aware of the mower and attachment discharge direction and do not point it at anyone. Do not operate the mower without the discharge cover or entire grass catcher in its proper place.
12. Do not put hands or feet near rotating parts or under the cutting deck. Contact with the blade(s) can amputate hands and feet.
13. A missing or damaged discharge cover can cause blade contact or thrown object injuries.
14. Stop the blade(s) when crossing gravel drives, walks, or roads and while not cutting grass.
15. Watch for traffic when operating near or crossing roadways. This machine is not intended for use on any public roadway.
16. Do not operate the machine while under the influence of alcohol or drugs.
17. Mow only in daylight or good artificial light.
18. Never carry passengers.
19. Back up slowly. Always look down and behind before and while backing to avoid a back-over accident.
20. Slow down before turning. Operate the machine smoothly. Avoid erratic operation and excessive speed. Be aware of your direction of travel to avoid accidents.
21. Disengage blade(s), set parking brake, stop engine and wait until the blade(s) come to a complete stop before removing grass catcher, emptying grass, unclogging chute, removing any grass or debris, or making any adjustments.
22. Never leave a running machine unattended. Always stop on level ground, turn off blade(s), place drive speed control levers in neutral, set parking brake, stop engine and remove key before leaving the operator position.
23. Use extra care when loading or unloading the machine on a trailer or truck. The machine should not be driven on unstable, unsecured or inadequate ramps because the machine could tip over causing serious personal injury.
24. Check overhead clearances carefully before driving under low hanging tree branches, wires, door openings etc., where the operator and/or ROPS may be struck which could result in serious injury and/or machine tip over.
25. Muffler and engine become hot and can cause a burn. Do not touch.
26. Disengage the blades, set the parking brake to the 'ON' position and make sure the speed control lever are in the neutral position before attempting to start the engine. Only start the engine from the operator's position.
27. Do not attempt to mow unusually tall, dry grass (e.g., pasture) or piles of dry leaves. Dry grass or leaves may contact the engine exhaust and/or build up on the mower deck presenting a potential fire hazard.
28. Do not stop or park the machine over dry leaves, grass, debris or other combustible material.
29. Never attempt to operate the machine without the mowing deck attached; the machine could tip over.
30. Keep the machine and especially the engine exhaust system and hydraulic components clean and free of grease, grass and leaves to reduce the potential for overheating and fire.
31. Allow the machine to cool at least 5 minutes before storing.
32. Use only accessories and attachments approved for this machine by the machine manufacturer. Read, understand and follow all instructions provided with the approved accessory or attachment.

33. Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. Operators should evaluate their ability to operate this machine safely enough to protect themselves and others from serious injury.
34. Do not operate or start machine if there is fuel or oil leaks; repair immediately.
35. When looking for oil leaks, never run your hand over hydraulic hoses, lines or fittings. Never tighten or adjust hydraulic hoses, lines or fittings while the system is under pressure. If high-pressure oil penetrates the skin seek immediate medical attention or gangrene and permanent damage may result. Do not check for hydraulic leaks with your hands, use paper or cardboard instead. Wear gloves and safety glasses when checking for leaks.
36. Do not operate machines that have been damaged or have not been properly maintained. If the machine has been damaged, then have it repaired.
37. When operating this machine in the forward direction, do not allow the speed control levers to return to the neutral position on their own. Always operate them smoothly and avoid any sudden movements of the levers when starting or stopping.
38. If situations occur which are not covered in this manual use care and good judgement. Contact your customer service representative for assistance.

Slope Operation

Slopes are a major factor related to loss of control and tip-over accidents that can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it or drive on the slope.

For your safety, use the slope gauge included as part of this manual to measure slopes before operating this machine on a sloped or hilly area. If the slope is greater than 15 degrees as shown on the slope gauge, do not operate this machine on that area or serious injury could result.

Do:

1. Mow across slopes, not up and down. Exercise extreme caution when changing direction on slopes.
2. Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
3. Use slow speed. Choose a low enough speed so that you will not have to stop while on the slope. Avoid starting or stopping on a slope. If the tires are unable to maintain traction, disengage the blades and proceed slowly and carefully straight down the slope.
4. Keep all movements on the slopes slow and gradual. Do not make sudden changes in speed or direction. Rapid acceleration could cause the front of the machine to lift and rapidly flip over backwards, which could cause serious injury or death.
5. Follow the manufacturer's recommendations for wheel weights or counterweights to improve stability.
6. Use extra care with grass catchers or other attachments. These can change the stability of the machine.

Do Not:

1. Do not turn on slopes unless necessary; then turn slowly uphill and use extra care while turning.
2. Do not mow near drop-offs, ditches or embankments. The machine could suddenly turn over if a wheel is over the edge of a cliff, ditch, or if an edge caves in.

3. Do not operate on slopes or near the edge of water such as a lake, pond, river or stream where the machine could slip, tip or roll-over into the water.
4. Do not try to stabilize the machine by putting your foot on the ground.
5. Do not use a grass catcher on slopes steeper than 15 degrees.
6. Do not mow on wet grass. Reduced traction could cause sliding and/or loss of control.
7. Do not tow heavy pull behind attachments (e.g. loaded dump cart, lawn roller, etc.) on slopes greater than 5 degrees. When going downhill, the extra weight tends to push the machine and may cause loss of traction and loss of control (e.g. machine may speed up, braking and steering ability are reduced, attachment may jack-knife and cause machine to overturn).

Children

1. Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. They do not understand the dangers. Never assume that children will remain where you last saw them.
 - a. Keep children out of the mowing area and in watchful care of a responsible adult other than the operator.
 - b. Be alert and turn machine off if a child enters the area.
 - c. Always look behind and down for small children. Use slow speed.
 - d. Never carry children, even with the blade(s) shut off. They may fall off and be seriously injured or interfere with safe machine operation.
 - e. Use extreme care when approaching blind corners, doorways, shrubs, trees or other objects that may block your vision of a child who may run into the path of the machine.
 - f. To avoid back-over accidents, always disengage blades before traveling in reverse.
 - g. Keep children away from hot or running engines. They can suffer burns from a hot muffler.
 - h. Remove key when machine is unattended to prevent unauthorized operation.
2. Never allow children under 16 years of age to operate this machine. Children 16 and over should read and understand the instructions and safe operation practices in this manual and on the machine and should be trained and supervised by an adult.

Towing

1. Do not tow heavy tow-behind attachments (e.g. loaded dump cart, lawn roller, etc.) on slopes greater than 5 degrees.
2. Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the hitch point.
3. Follow the manufacturer's recommendation for weight limits for towed equipment and towing on slopes.
4. Never allow children or others in or on towed equipment.
5. On slopes, the weight of the towed equipment may cause loss of traction and loss of control.
6. Travel slowly and allow extra distance to stop.
7. Make wide turns to avoid jack knifing

Transporting Machines

1. This machine is not intended for use on public roads. Machines operated on public roads must comply with state & local ordinances, SAE J137, and ANSI/ASABE S279 (lighting and marking requirements).

2. Use care when loading or unloading machines onto trailers and trucks.
3. If ramps are used, they must be full width, stable, have an adequate capacity rating and be secured to the trailer or truck. Ramp angle should not exceed 15 degrees and trailer or truck should be parked on level terrain.
4. Machines must be secured onto trailers and trucks with straps, chains, cables, ropes, or other means deemed adequate for that purpose. The front and rear of the machines must be secured to the trailer or truck in both the lateral and vertical directions.

Operator Protective System (OPS)

1. This machine is equipped with an Operator Protective System (OPS), which includes:
 - a. A Roll Over Protective Structure (ROPS) of the fixed or folding configuration.
 - b. Seat belt assembly with retractable function.
2. ROPS are structures designed to provide a crush-resistant space for the operator when properly seat-belted within the designated seating area of the machine in the event of a machine tip-over or roll-over. Folding ROPS shall be used in their fully upright and locked configurations except in those circumstances whereby they need to be momentarily folded-down to avoid contact with items such as tree limbs, clothes lines, guy wires, utility poles, buildings, etc. At other times and conditions, ROPS shall be in their fully upright and locked configurations.



DANGER: Damaged ROPS must be replaced prior to operator use!

3. Seat belts shall be used and shall be properly fastened about the operator's waist at all times, except when the ROPS are:
 - a. Not properly installed and/or not properly secured onto the machine.
 - b. Damaged in such manner that their structural integrity has been compromised.
 - c. Not in their fully upright and locked position.
4. Seat belts are attached to the movable portion of the seat when suspension seats are utilized, and therefore the seat-mounting base must be secured to its pivot means and the pivot means latched to the frame of the machine. Seat belts are attached to the seat or the frame of the machine when non-suspension (standard) seats are provided, however, if a suspension kit is added to a seat, the seat belt must be attached to the movable portion of the seat or suspension mechanism, the seat-mounting base must be secured to its pivot means, and the pivot means be latched to the frame of the machine.



DANGER: If ROPS are folded down or missing, seat belts shall not be fastened. Worn or damaged seat belt assemblies must be replaced prior to operator use.

5. A brush guard or canopy may deflect tree limbs, clothes lines, and other obstacles that otherwise could come in contact with the ROPS. Contact of ROPS and/or canopies by items such as tree limbs, clothes lines, guy wires, and buildings, could create hazardous conditions whereby the machine could experience a tip-over or roll-over. A canopy may provide protection for the operator from some environmental exposure (sunlight, rain, etc.).

6. The ROPS and seat belt are integral parts of this machine and should not be tampered with, modified in any manner, or removed.
7. Inspect the ROPS and seat belt assemblies on a regular basis for damage and improper operation. Replace all components that are damaged or are not functioning properly with authorized replacement parts.
8. The ROPS extends above and behind the operator position, and therefore the operator must be aware of potential contact of the ROPS with items such as trees, buildings, doorways, clothes lines, utility wires, etc., that could cause the machine to tip-over or rollover. Use caution in (or avoid) areas where the ROPS could come in contact with any structures, trees, etc.
9. Inspect the ROPS and seat belt assemblies on a regular basis for damage and improper operation. Replace all components that are damaged or are not functioning properly with authorized replacement parts.
10. Failure to use the seat belt properly could result in serious injury or death if an accidental overturn occurs. In order for the ROPS to be effective, the seat belt must be securely fastened around the operator at all times when the operator is on the machine. Contact with the ROPS during an overturn could cause serious injury or death.
11. The ROPS will not prevent machine from tip-overs or roll-overs.
12. Do not assume ROPS will protect you in a tip-over or roll-over. Injuries may still occur.

Hydraulic Devices and Systems

Hydraulic fluid escaping under pressure may have sufficient force to penetrate skin and cause serious injury. If foreign fluid is injected into the skin or eyes, see immediate medical attention or gangrene and permanent damage may result.



WARNING: Keep body and hands away from pinholes or nozzles that could inject hydraulic fluid under high pressure. Use paper or cardboard, not your hands, to search for leaks! Wear gloves and safety glasses.

Safely relieve all pressure in the system before performing any work on the system, and make sure that:

- The ignition switch is OFF
- The key is removed
- The engine spark plug wire(s) removed
- All connections to the negative terminal of the battery are removed
- The park brake is set
- All by-pass valves, if so equipped, are open
- Hydraulic controls are actuated to release pressure on pumps, cylinders, etc. If "float" positions are available, they should be used.

After the above operations are completed, it should be safe to begin disconnecting the lines or components. It is still a good idea to cover the connection with a cloth shield and then gently loosen connections.



WARNING: Make sure all hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system.

Service

Safe Handling of fuel

1. To avoid personal injury or property damage use extreme care in handling fuel. Fuel is extremely flammable and the vapors are explosive. Serious personal injury can occur when fuel is spilled on yourself or your clothes which can ignite. Wash your skin and change your clothes immediately.
 - a. Use only approved containers.
 - b. Never fill containers inside a vehicle or a truck or trailer bed with a carpeted or plastic liner. Always place containers on the ground away from your vehicle before fueling.
 - c. When practical, remove machines from the truck or trailer and refuel it on the ground. If this is not possible, then refuel equipment on a trailer with a portable container rather than from a fuel dispenser nozzle.
 - d. Keep nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
 - e. Extinguish all cigarettes, cigars, pipes and other sources of ignition.
 - f. Never fuel machine indoors or near ignition sources.
 - g. Never remove fuel cap or add fuel while the engine is hot or running. Allow engine to cool at least two minutes before refueling.
 - h. Never over fill fuel tank. Fill tank to no more than ½ inch below bottom of filler neck to allow space for expansion.
 - i. If necessary, use a funnel to avoid spillage.
 - j. Replace fuel cap and tighten securely.
 - k. If fuel is spilled, wipe off the engine and equipment. Wait 5 minutes before starting the engine.
 - l. To reduce fire hazards, keep machine free of grass, leaves, or other debris build-up. Clean up oil and fuel spillage and remove any fuel soaked debris.
 - m. Never store the machine or fuel container inside where there is an open flame, spark or pilot light as on a water heater, space heater, furnace, clothes dryer or other gas appliance.
7. Check the blade(s) and engine mounting bolts at frequent intervals for proper tightness. Also, visually inspect blade(s) for damage (e.g., excessive wear, bent, cracked). Replace the blade(s) with the original equipment manufacturer's (O.E.M.) blade(s) only, listed in this manual. "Use of parts which do not meet the original equipment specifications may lead to improper performance and compromise safety!"
8. Mower blades are sharp. Wrap the blade or wear gloves, and use extra caution when servicing them.
9. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
10. After striking a foreign object (or if abnormal vibration occurs), stop the blades and engine and thoroughly inspect the machine for any damage. Make necessary repairs before resuming operation.
11. Never attempt to make adjustments or repairs to the machine while the engine is running.
12. Grass catcher components and the discharge cover are subject to wear and damage which could expose moving parts or allow objects to be thrown. For safety protection, frequently check components and replace immediately with original equipment manufacturer's (O.E.M.) parts only, listed in this manual. "Use of parts which do not meet the original equipment specifications may lead to improper performance and compromise safety!"
13. Do not change the engine governor settings or over-speed the engine. The governor controls the maximum safe operating speed of the engine.
14. Maintain or replace safety and instruction labels, as necessary.
15. Observe proper disposal laws and regulations for gas, oil, etc. to protect the environment.

Do not modify engine

To avoid serious injury or death, do not modify engine in any way. Tampering with the governor setting can lead to a runaway engine and cause it to operate at unsafe speeds. Never tamper with factory setting of engine governor.

Notice Regarding Emissions

This machine is equipped with an engine that is certified to federal EPA emission standards for non-road engines and equipment, and where applicable to California Air Resources Board (CARB) emission standards. The engine owner's manual is supplied by the engine manufacturer, and provides additional information relating to the emission system, warranty, maintenance of the engine in accordance with EPA and/or CARB regulations. Making any unauthorized alterations or modifications to the engine, fuel, or venting systems may violate EPA and CARB regulations.

When required, models are equipped with low permeation fuel lines and fuel tanks for evaporative emission control. California models may also include a carbon canister. Please contact Customer Support for information regarding the evaporative emission control configuration for your model.

This machine is designed to run on regular, unleaded gasoline, 87 octane or higher. Never use gasoline containing methanol or gasoline containing more than 10% ethanol (i.e., E15 or E85 fuels) because the fuel system may be damaged.

General Service

1. Never run an engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless, and deadly gas.
2. Before cleaning, repairing, or inspecting, make certain the blade(s) and all moving parts have stopped. Disconnect the spark plug wires and remove the key from the ignition to prevent unintended starting.
3. Periodically check to make sure the blades come to complete stop within approximately (7) seven seconds after operating the blade disengagement control. If the blades do not stop within this time frame, your machine should be serviced.
4. Never tamper with the safety interlock system or other safety devices.
5. Regularly check the safety interlock system for proper function, as described later in this manual. If the safety interlock system does not function properly, have your machine serviced.
6. Check brake operation frequently as it is subjected to wear during normal operation. Adjust and service as required.

Safety Symbols

This page depicts and describes safety symbols that may appear on this product. Read, understand, and follow all instructions on the machine before attempting to assemble and operate.

Symbol	Description
	READ THE OPERATOR'S MANUAL(S) Read, understand, and follow all instructions in the manual(s) before attempting to assemble and operate
	WARNING— ROTATING BLADES Do not put hands or feet near rotating parts or under the cutting deck. Contact with the blade(s) can amputate hands and feet.
	WARNING—THROWN OBJECTS This machine may pick up and throw objects which can cause serious personal injury.
	WARNING—THROWN OBJECTS This machine may pick up and throw objects which can cause serious personal injury.
	BYSTANDERS Keep bystanders, helpers, children and pets at least 75 feet from the machine while it is in operation.
	WARNING— SLOPE OPERATION Do not operate this machine on a slope greater than 15 degrees.
	DANGER — ROTATING BLADES To reduce the risk of injury, keep hands and feet away. Do not operate unless discharge cover or grass catcher is in its proper place. If damaged, replace immediately.
	DANGER — ROTATING BLADES Never carry passengers. Never carry children, even with the blades off.
	DANGER — ROTATING BLADES Always look behind and down for small children. Use slow speed.
	DANGER — ROTATING BLADES To avoid back-over accidents, keep children away from the machine while it is in operation.
	DANGER — SAFETY DEVICES Keep safety devices (guards, shields, switches, etc.) in place and working.



WARNING! Your Responsibility—Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine.

SAVE THESE INSTRUCTIONS!

Slope Gauge

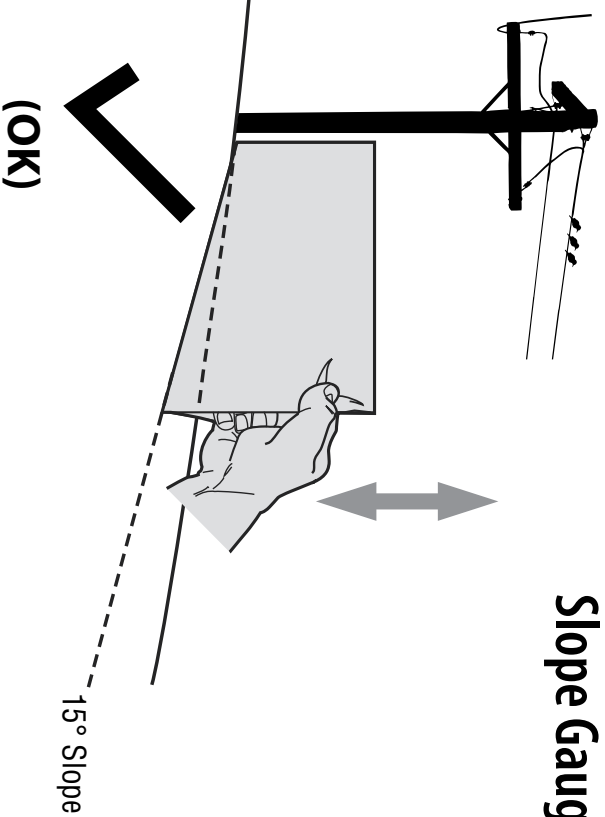


Figure 1

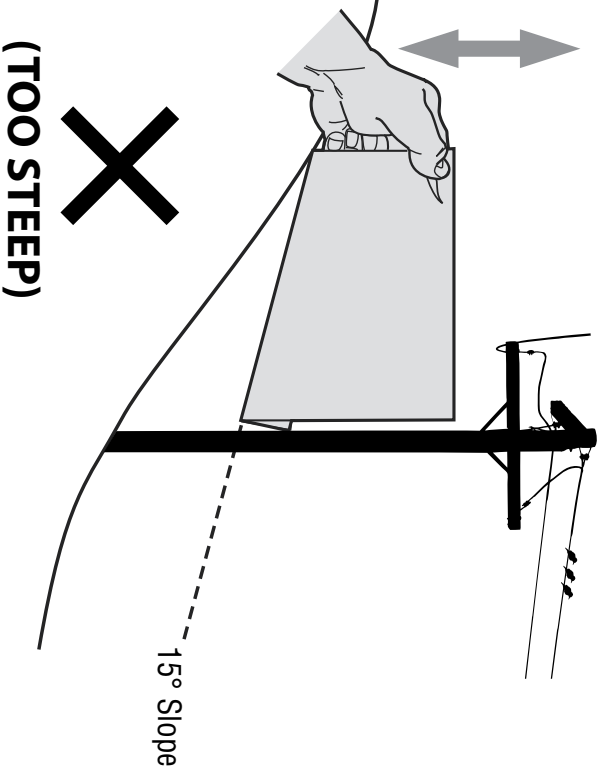



Figure 2

USE THIS SLOPE GAUGE TO DETERMINE IF A SLOPE IS TOO STEEP FOR SAFE OPERATION!

To check the slope, proceed as follows:

1. Remove this page and fold along the dashed line.
2. Locate a vertical object on or behind the slope (e.g. a pole, building, fence, tree, etc.)
3. Align either side of the slope gauge with the object (See Figure 1 and Figure 2).
4. Adjust gauge up or down until the left corner touches the slope (See Figure 1 and Figure 2).
5. If there is a gap below the gauge, the slope is too steep for safe operation (See Figure 2 above).

 15° dashed line



WARNING! Slopes are a major factor related to tip-over and roll-over accidents which can result in severe injury or death.

Do not operate machine on slopes in excess of 15 degrees. All slopes require extra caution.

Always mow across the face of slopes, never up and down slopes.

Thank You

Thank you for purchasing this product. It was carefully engineered to provide excellent performance when properly operated and maintained.

Please read this entire manual prior to operating the equipment. It instructs you how to safely and easily set up, operate and maintain your machine. Please be sure that you, and any other persons who will operate the machine, carefully follow the recommended safety practices at all times. Failure to do so could result in personal injury or property damage.

All information in this manual is relative to the most recent product information available at the time. Review this manual frequently to familiarize yourself with the machine, its features and operation. Please be aware that this Operator's Manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

If applicable, the power testing information used to establish the power rating of the engine equipped on this machine can be found at www.opei.org or the engine manufacturer's web site.

If you have any problems or questions concerning the machine, phone your local authorized service dealer or contact us directly. We want to ensure your complete satisfaction at all times.

Throughout this manual, all references to *right* and *left* side of the machine are observed from the operating position.

Contents of Carton

- Zero-Turn Tractor (1)
- Battery Installation Hardware (1)
- Seat Tilt Knob Assembly & Hardware Pack (1)
- Tractor Operator's Manual (1)
- Seat Mounting Hardware (1)
- Engine Operator's Manual (1)

NOTE: This Operator's Manual covers several models. Tractor features may vary by model. Not all features in this manual are applicable to all tractor models and the tractor depicted may differ from yours.

NOTE: All references in this manual to the left or right side and front or back of the machine are from the operating position only. Exceptions, if any, will be specified.

Tractor Preparation

TOOLS NEEDED: Safety glasses, leather gloves, wire cutters.

1. Remove the upper crating material from the shipping pallet, and cut any bands or tie straps securing the tractor to the pallet.
2. Use the deck lift pedal (a) to raise the deck to its highest position and secure in place with the clevis pin (b) attached to the tractor. See Figure 2-1.

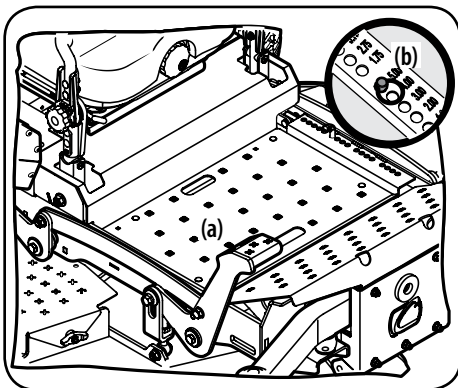


Figure 2-1

3. The two hydrostatic transmissions are equipped with a bypass valve that will allow you to manually move the tractor short distances.
4. Engage the transmission bypass valves by pulling the bypass lever (a) outward then upward and all the way back. See Figure 2-2.

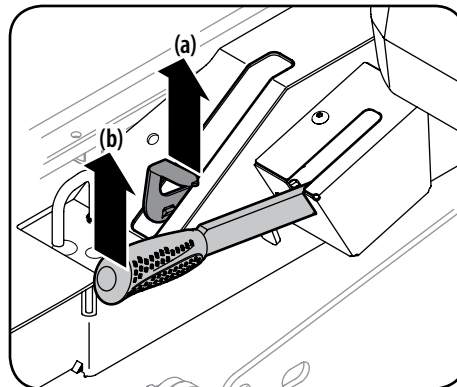


Figure 2-2



Warning! Do not tow the tractor, even with the bypass valves engaged. Serious transmission damage will result from doing so.

5. Carefully roll the tractor off the shipping pallet.
6. To release the bypass lever (a), push the lever forward.
7. To engage the parking brake, pull back completely on the parking brake lever (b).
8. Cut any wire ties holding the chute deflector up and discard any packing material.

Position Roll Over Protective System (ROPS)

1. Remove the cotter pin (a) from the locking pin (b), slide the locking pin (b) out of the ROPS on the left and right side of the ROPS. See Figure 2-3.

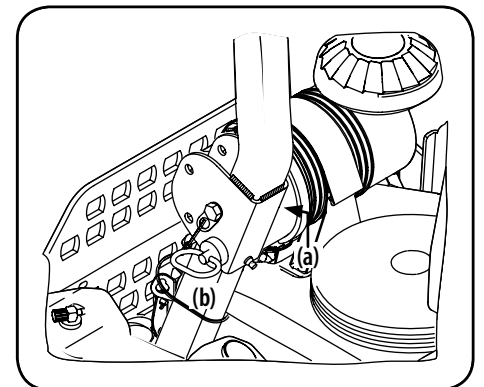


Figure 2-3

2. Move the upper ROPS section to the fully upright position, insert the locking pins (b) and secure in place with the cotter pins (b). See Figure 2-3.

Adjusting Drive Control Levers

The RH and LH drive control levers can be adjusted up or down and fore-and-aft for the comfort of the operator. Proper drive control lever and seat adjustment will result in the following:

In the neutral position with hands on the control levers,

- Operator's upper arms should be relaxed and approximately vertical.
- Operator's forearms should be approximately horizontal.

In the full forward position,

- Operator's back should stay in contact with the seat back.
- Control levers should not contact operator's legs.

In the full reverse position,

- Control levers should not contact the operator's legs or torso.

Set the seat to the preferred operating position.

- Adjustment lever is located under the front edge of the seat.

Check factory settings of control levers for the conditions listed above.

NOTE: If control lever adjustments are required, height adjustments should be made prior to angular adjustments.

To adjust the height of the drive control levers:

- Remove the flange lock nuts (a) that secure the carriage bolts (b) in the drive control levers. See Figure 2-4.

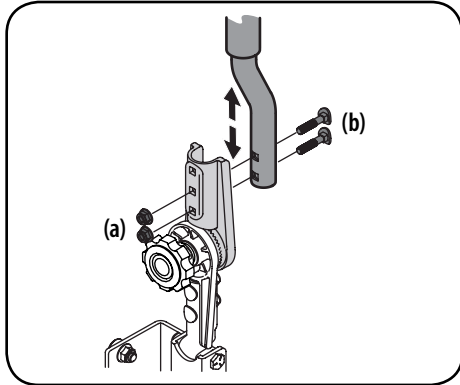


Figure 2-4

- Remove the carriage bolts (b) from the drive control levers and reposition to the second set of holes in the mounting block.
- Reinstall the carriage bolts (b) and flange lock nuts (a), and tighten to 28-34 ft-lbs.
- The same adjustments should be made to both sides of the mower.

To adjust the front-to-rear angle of the drive control levers:

- Loosen the control lever knob (a) to unlock the drive control levers. See Figure 2-5.

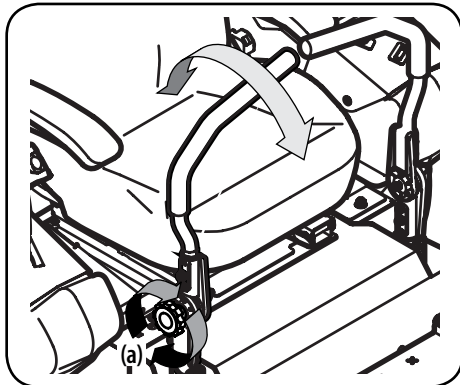


Figure 2-5

- Move drive control levers to the desired angle and retighten the drive control knob (a) to secure the lapbars in place.
- Check the results of any adjustments to the conditions described above. Repeat any adjustment procedures as required until all conditions are met.

Operator's Seat

- Remove the two flange lock nuts (b) and shoulder bolts (a) from the manual bag. See Figure 2-6.

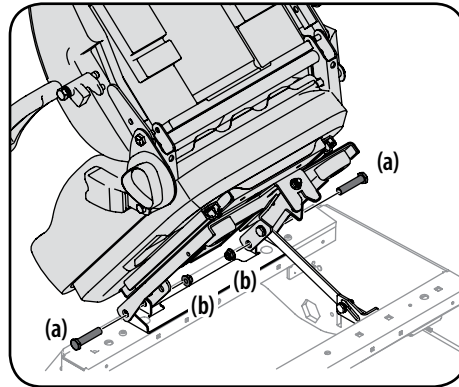


Figure 2-6

- Place the seat into position and secure the seat into place with the hardware as shown in Figure 2-6.
- Remove the shoulder screw (a) and flange lock nut (b) from manual bag and install the seat lockout bracket (c) as shown in Figure 2-7.

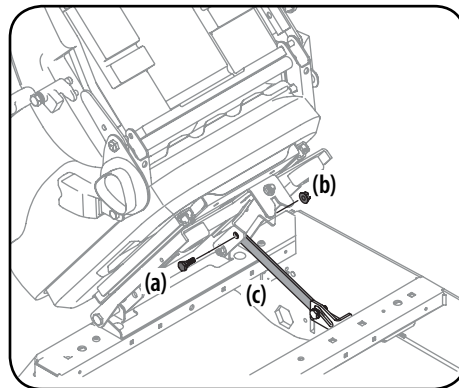


Figure 2-7

- Insert the wiring harness (a) into the bottom of the seat as shown in Figure 2-8.

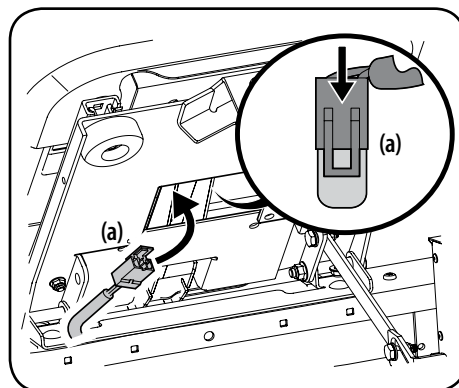


Figure 2-8

NOTE: When the wiring harness (a) is connected, be sure to push the excess wire from the wire harness (a) into the seat box hole before continuing.

- Remove the clevis pin (a) and cotter pin (b) securing the recliner bearing plate in the seat back position. See Figure 2-9.

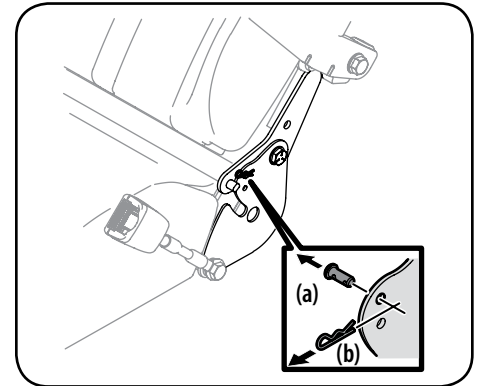


Figure 2-9

- Tilt the seat forward until the recliner bearing plate (c) is below the clevis pin (a) and then re-insert the cotter pin (b) to secure the seat in place. See Figure 2-10.

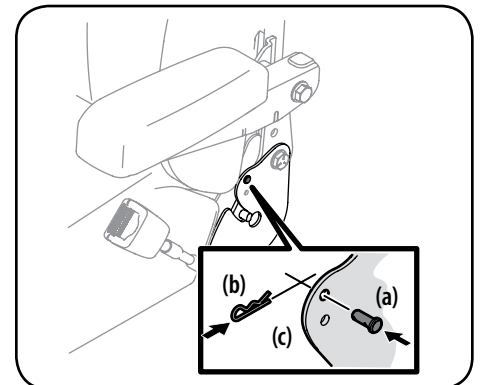


Figure 2-10

- Remove the seat tilt knob assembly from the bag and install as shown in Figure 2-11.

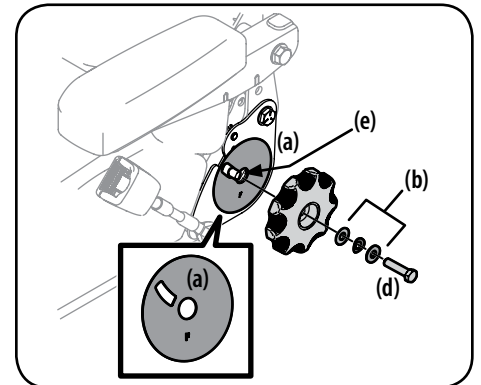


Figure 2-11

NOTE: Be sure to orient the recliner bearing plate (a) and install the washers (b) as shown in Figure 2-11. The thicker washer is on the outside.

- Slide the recliner bearing plate (a) onto the recliner pin (e). Then align the spiral on the inside of the recliner knob (c) with the recliner pin (e).
- Use a wrench to hand tighten the hex screw (d) until the recliner knob (c) is difficult to turn.
- NOTE:** Do not use power tools to install.
- Gradually loosen the hex screw (d) until the recliner knob moves freely. Do not loosen the hex screw more than one full turn.

Seat Adjustment

Proper steering column and seat adjustment will result in the following (to adjust the seat see below):

In the neutral position with hands on the steering wheel,

- Operator's upper arms should be relaxed and approximately vertical.
- Operator's forearms should be approximately horizontal.
- Operator's back should stay in contact with the seat back.
- Steering column should not contact operator's legs.

Check the results of any adjustments to the conditions described above. Repeat any adjustment procedures as required until all conditions are met.

This machine is equipped with an adjustable seat, which includes a retractable seat belt assembly and an Operator Presence Sensor (OPS). The OPS in the form of a switch, is integrated into the seat bottom and is connected to the machine electrical system. The Operator Presence Sensor must be connected to the electrical wiring harness.

The seat can be adjusted forward and backward, the armrests can be adjusted up and down (700 and 900 series), the mechanical suspension mechanism weight/ride adjustment controls for operators in the 100 to 280 lb. weight range. Turn the knob on the front of the seat clockwise to increase the weight capacity and counter-clockwise to decrease. See Figure 2-14.

NOTE: The seat base must be secured by the latch, otherwise, the seat assembly could tilt forward.

To move the seat forward or back, locate the seat adjustment rod under the seat. Push the rod (a) to the left and slide the seat forward or back into the desired position and release the rod (a) when the seat is in the desired position. See Figure 2-12.

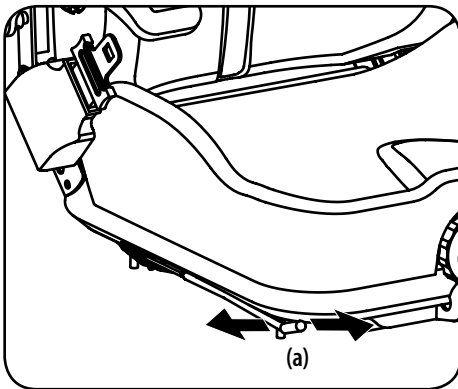


Figure 2-12

The seat tilt is controlled by the knob on the left of the seat. Turn the knob rearward to tilt the seat back, turn the knob forward to tilt the seat forward. See Figure 2-13.

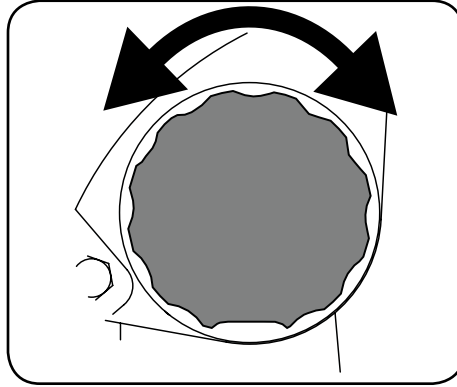


Figure 2-13

The mechanical suspension mechanism (500 and 700 series) incorporates weight/ride adjustment controls for operators in the 100 to 280 lb. weight range. Turn the knob on the front of the seat clockwise to increase the weight capacity and counter-clockwise to decrease. See Figure 2-14.

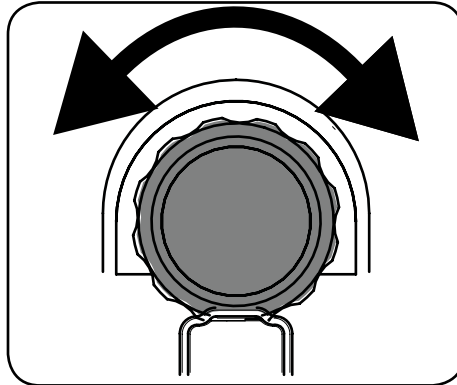


Figure 2-14

To vary the lumbar support (700 and 900 series) move the lever on the right of the seat up and down. See Figure 2-15.

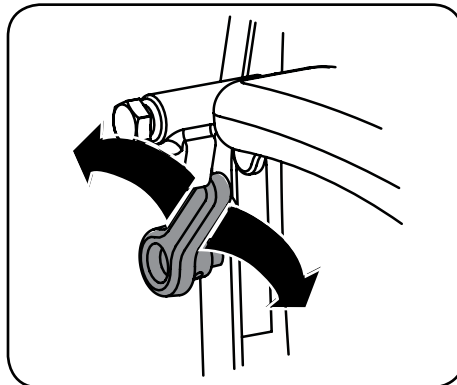


Figure 2-15

To adjust the height of the arm rests (700 and 900 series), lift the arm rest and rotate the knob under the arm rest right or left to increase or decrease the height. See Figure 2-16.

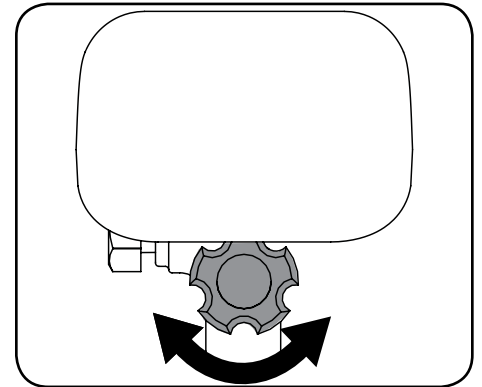


Figure 2-16

The air ride (900 series) can be adjusted up or down using the height adjustment lever on the front of the seat. Press the lever to the left (+) to raise the height of seat and to the right (-) to lower the height of the seat. See Figure 2-17.

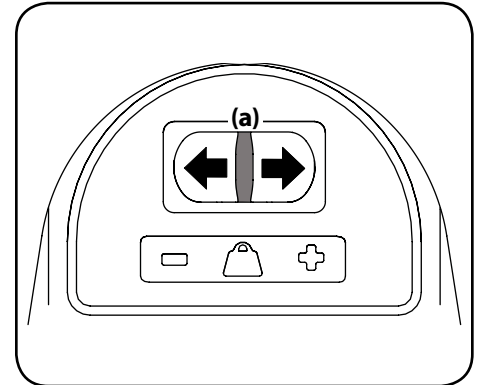


Figure 2-17

Checking Tire Pressure



Warning! Maximum tire pressure under any circumstances is 12 psi on rear tires and 25 psi on front tires. Equal tire pressure should be maintained at all times.

Inflation Pressure

Rear Tires — 10-12 psi max

Front Tires — 20-25 psi max

The tires on your tractor may be over-inflated for shipping purposes. Reduce the tire pressure before operating the tractor. Recommended operating tire pressure is 10-12 psi on rear tires and 20-25 psi on front tires.

Lubrication & Grease Points

Before operating the tractor, refer to the Service section of this manual to check the lubrication and grease points. Grease and lubricate if necessary.

Connecting the Battery Cables



California PROPOSITION 65

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.



Caution: When attaching battery cables, always connect the POSITIVE (Red) wire to its terminal first, followed by the NEGATIVE (Black) wire.

For shipping reasons, both battery cables on your equipment may have been left disconnected from the terminals at the factory. To connect the battery cables, proceed as follows:

1. Using the lever on the back of the seat frame, lift up on the lever and tilt the seat forward locking it in place with the seat prop. Remove the bolts and hex nuts from the manual bag.

NOTE: The positive battery terminal is marked POS. (+) (a). The negative battery terminal is marked NEG. (-) (b).

NOTE: If the positive battery cable (c) is already attached, skip ahead to step 4.

2. Remove the red boot (d), if present, from the positive battery terminal (a) and attach the red cable (c) to the positive battery terminal (a) with the bolt (e) and hex nut (f). See Figure 2-18.

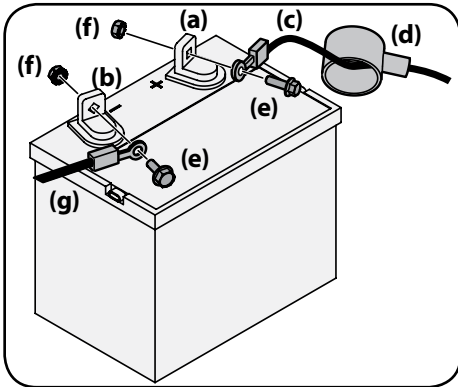


Figure 2-18

3. Position the red boot (d) over the positive battery terminal (a) to insulate it and help protect it from corrosion.
4. Attach the black cable (g) to the negative battery terminal (b) with the bolt (e) and hex nut (f). See Figure 2-18.

NOTE: If the battery is put into service after the date shown on top/side of battery, charge the battery prior to operating the machine.

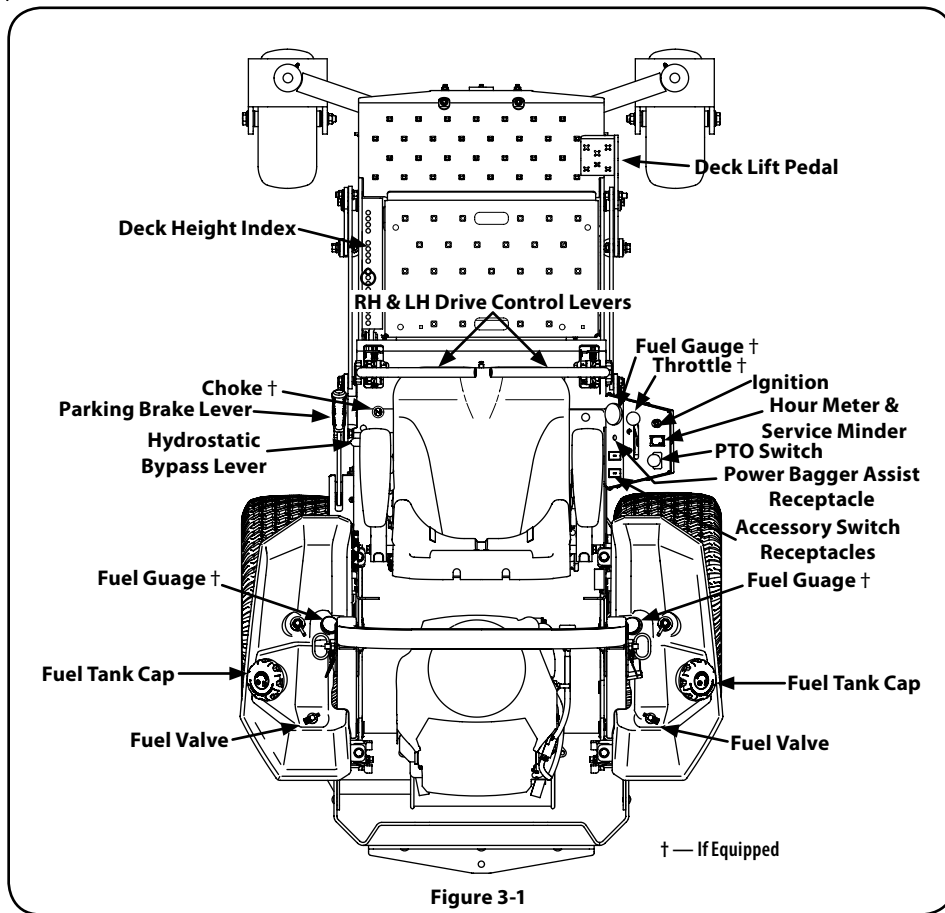


Figure 3-1

NOTE: References to LEFT, RIGHT, FRONT, and REAR indicate that position on the tractor when facing forward while seated in the operator's seat.

NOTE: This Operator's Manual covers several models. Tractor features may vary by model. Not all features in this manual are applicable to all tractor models and the tractor depicted may differ from yours.

RH and LH Drive Control Levers

The RH and LH control levers are located on each side of the operator's seat. These hinged levers pivot outward to open space to permit the operator to either sit in the tractor seat, or to dismount the tractor. The levers must be fully opened out and in the neutral position to start the tractor engine.

Each lever controls the respective RH or LH transmission. These levers control all of the movements of the tractor. Driving and steering utilizing these control levers is quite different from conventional tractors, and will take some practice to master. Refer to Operation for instructions on using the control levers.

Ignition Switch


The ignition switch is located on the RH console to the rear of the throttle control. The ignition switch has three positions as follows:

OFF — The engine and electrical system are turned off.

ON — The tractor electrical system is energized.

START — The starter motor will turn over the engine. Release the key immediately when the engine starts

NOTE: To prevent accidental starting and/or battery discharge, remove the key from the ignition switch when the tractor is not in use.

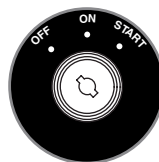

Transmission Bypass Lever

The transmission bypass lever is located next to the LH console to the left of the operator's seat.

When engaged the valves open a bypass within the hydrostatic transmissions. Refer to the Assembly & Set-Up section for instructions on using the bypass feature.




Power Take-Off (PTO) Knob


The PTO knob is located on the RH console to the right of the operator's seat.

The PTO knob operates the electric PTO clutch mounted on the bottom of the engine crankshaft. Pull the knob upward to engage the PTO clutch, or push the knob downward to disengage the clutch.

The PTO knob must be in the "OFF" position when starting the engine.

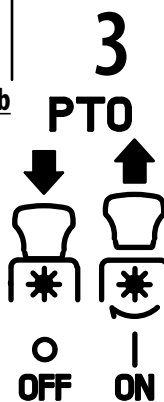

Hour Meter & Service Minder

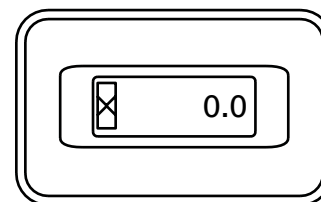

The hour meter and service minder is located on the RH console to the right of the operator's seat. It records the hours that the tractor has been operated, engine speed (RPM), and service reminders (oil, lube) in the digital display.

The hour meter and service minder is activated whenever the ignition switch is turned to the "ON" position. Keep a record of the actual hours of operation to assure all maintenance procedures are completed according to the instructions in this Operator's Manual and the Engine Operator's Manual.

Throttle

Manual Throttle (If equipped)

The throttle control is located on the RH console to the right of the operator's seat. When set in a given position, a uniform engine speed will be maintained. The throttle control moves between the fast and slow positions.

Push the throttle control handle forward to increase the engine speed. The tractor is designed to operate with the throttle control in the fast position (full throttle) when the tractor is being driven and the mower deck is engaged.

Pull the throttle control handle rearward to decrease the engine speed.



Electronic Throttle (E-Governor) Knob (If equipped)



The electronic throttle (E-governor) knob is used to control engine speed and RPM's. It also helps control fuel efficiency. The electronic throttle knob can be rotated between an ECONOMY mode and a MAXIMUM PERFORMANCE mode. The Economy mode is used for basic transportation of the tractor with the PTO disengaged and uses the least fuel. The Maximum Performance mode should be used when the PTO is engaged and uses the most fuel. The tractor should be started in the STARTING POSITION, but should always be in the MAXIMUM PERFORMANCE mode when the PTO/deck is being used. The tractor will run in any position between the two modes, but mowing quality may suffer if mowing is done at less than MAXIMUM PERFORMANCE.

Choke Knob (If equipped)

The choke knob is located on the left side of the mower next to the operator's seat. Pull the knob out to choke the engine; push the knob in/down to open the choke. Having the choke in the "ON" position helps the engine to start during initial start-up. During normal operation the choke should be "OFF".



Parking Brake Lever

The parking brake lever is located to the left of the operator's seat. When pulled up it engages the parking brake and when pushed down it releases the brake.

NOTE: If the forward or reverse drive pedal is engaged when engaging the parking brake, the engine will stop. The parking brake must be placed in the engaged position when starting the engine.

Fuel Tank Caps

The fuel tank caps are located on the top of the fuel tank on the left and right side of the seat. Turn the fill cap counter-clockwise to remove and clockwise until it clicks three times to tighten. Always re-install the fuel cap tightly onto the fuel tank after removing.



Warning! Never fill the fuel tank when the engine is running. If the engine is hot from recently running, allow to cool for several minutes before refueling. Highly flammable gasoline could splash onto the engine and cause a fire.

Seat Adjustment Lever (Not Shown)

The seat adjustment lever is located below the front/right of the seat. The lever allows for adjustment forward or rearward of the operator's seat. Refer to the Assembly & Set-Up section for instructions on adjusting the seat position.

Seat Tilt Knob (Not Shown)

The seat tilt knob is located on the left side of the seat. Refer to the Assembly & Set-Up section for instructions on adjusting the seat tilt.

Arm Rest Height Knobs (Not Shown, If Equipped)

The arm height knobs are located under the seat arms and can be used to adjust the height of the arm rests. Refer to the Assembly & Set-Up section for instructions on adjusting the arm rest position.

Mechanical Suspension Mechanism (Not Shown, If Equipped)

The mechanical suspension mechanism is located on the front of the seat and can adjust the weight/ride adjustment for operators in the 125- to 275-pound weight range. Refer to the Assembly & Set-Up section for instructions on adjusting the mechanical suspension mechanism.

Lumbar Support Lever (Not Shown, If Equipped)

The lumbar support lever is located on the right side of the seat on the seat back. Refer to the Assembly & Set-Up section for instructions on adjusting the lumbar support.

Seat Prop (Not Shown)

The seat prop is located on the left, rear side of the operator's seat. It is used to prop the seat forward.

Seat Latch (Not Shown)

The seat latch is located below the rear, center of the operators seat. The latch is used to secure the seat into the operating position. Lift the latch and tilt the seat forward access the area under the seat.

Deck Height Index



The deck height index consists of several holes located on the left of the foot platform. Each hole corresponds to a 1/4" change in the deck height position ranging from 1" at the lowest notch to 5" at the highest notch.


Deck Lift Pedal

The deck lift pedal is located on the right front corner of the foot platform, and is used to raise and lower the mowing deck.

To raise the mowing deck to the transport position, push the pedal all the way forward until the deck transportation lock snaps into position. To remove the deck from the transport position push forward on the deck lift pedal and pull up on the deck lock rod. To position the deck push the pedal all the way forward, remove the clevis pin and reinsert it in the desired cutting height and slowly release pressure on the pedal until you reach the clevis pin.

Transport Lock (Not Shown)

The transport lock is located on the left side of the operator's seat and is used to lock the deck in the transport position. Press down on the deck lift pedal and lift up on the deck lift release lever to release the deck.

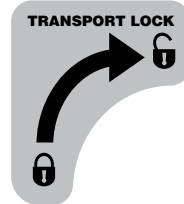

Transmission Oil Expansion Reservoir (Not Shown, If Equipped)

The 500 series is not equipped with a transmission oil expansion reservoir, the 700 and 900 series are equipped with the transmission oil expansion reservoir. The transmission oil expansion reservoir is connected by hoses to the RH and LH transmission assemblies, and is located under the seat. The function of the reservoir is to hold the natural expansion of transmission oil that occurs as the transmission warms up during operation. DO NOT FILL THE RESERVOIR.

Under normal operating conditions, no oil should be added to the reservoir. The COLD oil level should be approximately 1/4" above the bottom of the reservoir.

NOTE: Prior to the initial operation of the tractor, the oil level in the reservoir may be slightly higher than the maximum due to air in the oil lines. Operation of the tractor will eventually purge the air from the lines and the oil level will settle to the maximum.


Fuel Gauge(s)

There is a fuel gauge on top of each of the two fuel tanks or a single gauge to the right of the operator's seat on the RH console. The gauges measure the fuel level in each tank.



Fuel Valves

The fuel valves are located near the rear of each fuel tank. The valve controls the fuel flow from the right and left tank and also can shut off fuel flow to the engine. Rotate the valve counterclockwise to open the flow from the tank(s). Rotate the valve clockwise to stop the flow from the tank(s). The fuel tanks can be operated together, independently or shut the fuel flow off completely.

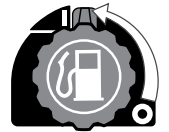

NOTE: IF both tanks are on, and one is empty the engine will not start. Be certain to make sure both tanks have fuel or that the empty tank's fuel valve is closed.

Accessory Switch/Power Bagger Assist/12 Volt Accessories Receptacles

The receptacles for optional accessories are on the RH console. See the Attachments & Accessories section for information. The receptacles are for switches for an optional electric deck lift, lights, power bagger assist, 12 volt outlet and/or an auxiliary switch.

Before Operating Your Machine

1. Before you operate the tractor, study this manual carefully to familiarize yourself with the operation of all the instruments and controls. It has been prepared to help you operate and maintain your machine efficiently.
2. Fill the fuel tank with only clean, fresh, unleaded gasoline with a pump sticker octane rating of 87 or higher. When the fuel reaches 1/2" below the bottom of the fill neck, stop. DO NOT OVERFILL. Space must be left for expansion.
3. Never use gasoline containing more than 10% ethanol or methanol.
4. Check the engine oil level as instructed in the Engine Operator's manual.
5. Check the transmission oil level. The transmission oil expansion reservoir is located beneath the operator's seat. Always wipe off the area around the reservoir fill neck before checking the oil level to prevent dirt from contaminating the oil. Remove the cap and make sure the oil level is a 1/4" above the bottom of the reservoir. If the oil level is low, fill with Castrol™ (Syntec®) Edge™.
6. Check the tire inflation pressures 10-12 psi for the rear tires, 20-25 psi for the front tires.
NOTE: New tires are over-inflated in order to properly seat the bead to the rim.
7. Check that all nuts, bolts and screws are tight.

8. Check the tension of the deck drive belts.
 - a. Remove the deck cover
 - b. The tension of the deck drive belts are maintained by a spring mechanism that adjusts for wear and stretch.
 - c. Examine the belts for cuts, fraying, and excessive wear. Replace if any of these are detected.
 - d. Replace the deck cover.
9. Check if deck is level. When correctly adjusted the mower deck should be level side to side, and the front of the deck should be approximately ¼" lower than the rear of deck. If deck needs to be leveled, refer to the Service section.
10. Lubricate all pivot points listed in the Service section.
11. Adjust the seat for operator's maximum comfort, visibility and for maintaining complete control of the machine. Refer to the Assembly & Set-Up section for instructions on adjusting the seat.

Safety Interlock System

This machine is equipped with a safety interlock system for the protection of the operator. If the interlock system should ever malfunction, do not operate the machine. Contact your authorized Cub Cadet Dealer.

- The safety interlock system will prevent the engine from cranking or starting unless the RH and LH drive control levers are moved fully outward in the neutral position, the parking brake is engaged, and the PTO is disengaged.
- To avoid sudden movement when disengaging the parking brake, the safety interlock system will shut off the engine if the RH and/or LH drive control levers are moved to a position other than the fully out in the neutral position when the parking brake is engaged.
- The safety interlock system will shut off the engine if the operator leaves the seat before engaging the parking brake.
- The safety interlock system will shut off the engine if the operator leaves the seat with the PTO engaged, regardless of whether the parking brake is engaged.

NOTE: The PTO must be disengaged to restart the engine.

Starting the Engine

For throttle/choke or throttle/automatic EFI engines proceed below, for electronic throttle/EFI engines, skip ahead to the Electronic Throttle/EFI (Electronic Fuel Injection) Engines section.

Manual Throttle/Choke or Throttle/Automatic EFI (Electronic Fuel Injection) Engines



Warning! This machine is equipped with a safety interlock system designed for protection of the operator. Do not operate the machine if any part of the interlock system is malfunctioning. Periodically check the functions of the interlock system for proper operation.



Warning! For personal safety, the operator must be sitting in the tractor seat when starting the engine.

1. Open the fuel valve(s).

NOTE: If both tanks are on, and one is empty the engine will not start. Be certain to make sure both tanks have fuel or that the empty tank's fuel valve is closed.
2. Operator must be sitting in the tractor seat with both drive control levers in the neutral/start position.
3. Engage the parking brake.
4. Make certain the PTO is in the disengaged (down) position.
5. Lift the choke knob (if equipped) into the ON position.

NOTE: If the engine is warmed up, it may not be necessary to choke the engine.

NOTE: Some tractors are equipped with EFI (Electronic Fuel Injection) engines and are not equipped with a choke.
6. Move the throttle control to midway between the SLOW  and FAST  positions.
7. Turn the ignition key clockwise to the START position and release it as soon as the engine starts; however, do not crank the engine continuously for more than 10 seconds at a time. If the engine does not start within this time, turn the key to OFF and wait at least 30 seconds to allow the engine's starter motor to cool. Try again after waiting. If after a few attempts the engine fails to start, do not keep trying to start it with the choke closed as this will cause flooding and make starting more difficult.
8. Once the engine starts, push the choke (if equipped) halfway down and as the engine warms, push the choke (if equipped) all the way down.

Electronic Throttle(E-Governor)/EFI (Electronic Fuel Injection) Engines

1. Open the fuel valve(s).

NOTE: If both tanks are on, and one is empty the engine will not start. Be certain to make sure both tanks have fuel or that the empty tank's fuel valve is closed.

NOTE: To prime a dry fuel system, turn the ignition switch to the ON position for one minute. Allow the fuel pump to cycle and prime the system. Turn the ignition switch to the OFF position.
2. Operator must be sitting in the tractor seat with both drive control levers in the neutral/start position.
3. Engage the parking brake.
4. Make certain the PTO is in the disengaged (down) position.
5. Place the Electronic Throttle knob in the STARTING POSITION.
6. Turn the ignition key clockwise to the START position and release it as soon as the engine starts; however, do not crank the engine continuously for more than 10 seconds at a time. If the engine does not start within this time, turn the key to OFF and wait at least 60 seconds to allow the engine's starter motor to cool. Try again after waiting.

NOTE: Failure to follow these guidelines can burn out the starter motor.

NOTE: Upon start-up, a metallic ticking may occur. Run engine for five minutes. If the noise continues, run the engine at the starting position for 20 minutes. If the noise persists, take the tractor to your authorized service dealer.

Cold Weather Starting

When starting the engine at temperatures near or below freezing, ensure the correct viscosity motor oil is used in the engine and the battery is fully charged. Start the engine as follows:

1. Be sure the battery is in good condition. A warm battery has much more starting capacity than a cold battery.
2. Use fresh winter grade fuel. Winter grade gasoline has higher volatility to improve starting. Do not use gasoline left over from summer.
3. Follow the previous instruction for Starting the Engine.

Using Jumper Cables To Start Engine



Warning! Batteries contain sulfuric acid and produce explosive gasses. Make certain the area is well ventilated, wear gloves and eye protection, and avoid sparks or flames near the battery.

If the battery charge is not sufficient to crank the engine, recharge the battery. If a battery charger is unavailable and the tractor must be started, the aid of a booster battery will be necessary. Connect the booster battery as follows:

1. Connect the end of one cable to the disabled tractor battery's positive terminal; then connect the other end of that cable to the booster battery's positive terminal.
2. Connect one end of the other cable to the booster battery's negative terminal; then connect the other end of that cable to the frame of the disabled tractor, as far from the battery as possible.
3. Start the disabled tractor following the normal starting instructions previously provided; then disconnect the jumper cables in the exact reverse order of their connection.
4. Have the tractor's electrical system checked and repaired as soon as possible to eliminate the need for jump starting.

Stopping the Engine

1. Disengage the PTO.
2. Move the RH and LH drive control levers fully outward in the neutral position.
3. Engage the parking brake.
4. Move the throttle to the SLOW  position and allow the engine to idle for about one minute.
5. Turn the ignition key to the OFF position and remove the key from the ignition switch.

NOTE: Always remove the key from the ignition switch to prevent accidental starting or battery discharge if the equipment is left unattended.
6. Close the fuel shut-off valve(s).

Practice Operation (Initial Use)

Operating a zero-turn tractor is not like operating a conventional type riding tractor. Although and because a zero turn tractor is more maneuverable, getting used to operating the speed control pedals and the steering wheel takes some practice.

It is strongly recommend that you locate a reasonably large, level and open "practice area" where there are no obstructions, pedestrians, or animals. You should practice operating the tractor for a minimum of 30 minutes.

Carefully move (or have moved) the tractor to the practice area. When performing the practice session, the PTO knob should not be engaged. While practicing, operate the tractor at approximately $\frac{1}{2}$ - $\frac{3}{4}$ throttle and at less than full speed in both forward and reverse.

Always wear appropriate clothing and personal protection equipment (e.g. safety glasses, long pants, gloves, hearing protection, safety shoes, hard hat) when operating or maintaining this machine. Follow all federal, state and local guidelines regarding the use of personal protective equipment.

Carefully practice maneuvering the machine using the instructions in the following section "Driving the Tractor." Practice until you are confident that you can safely operate the tractor.

Driving the Tractor



Warning! Avoid sudden starts, excessive speed and sudden stops.

1. Turn on the fuel valve(s).

NOTE: IF both tanks are on, and one is empty the engine will not start. Be certain to make sure both tanks have fuel or that the empty tank's fuel valve is closed.

2. Adjust the operator's seat to the most comfortable position that allows you to operate the controls. Refer to the Assembly & Set-Up section for instructions on adjusting the seat.
3. Move the RH and LH drive control levers inward in the neutral position. Refer to Figure 3-1.

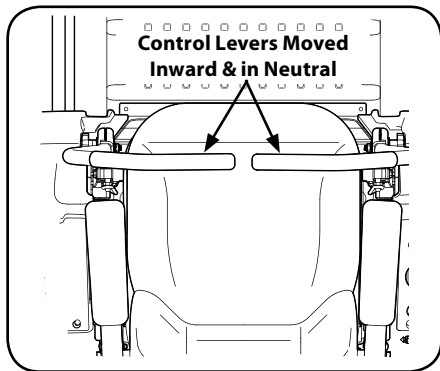


Figure 3-1

NOTE: If the control levers are not even in the neutral position, refer to the Assembly & Set-Up section for instructions to adjust the levers so that they are even.

4. Move the throttle control to the FAST position. 

NOTE: Although the tractor's engine is designed to run at full throttle, when performing a practice session the tractor must be operated at less than full throttle. This only applies to practice.



Warning! Always maintain a firm grip on the control levers. DO NOT release the control levers to slow or stop the tractor; move levers to neutral position using your hands.

5. To drive the tractor, firmly grasp the respective drive control levers with your right and left hands and continue with Driving the Tractor Forward.

Driving the Tractor Forward



Warning! Keep all movement of the drive control levers slow and smooth. Abrupt movement of the control levers can affect the stability of the tractor and could cause the tractor to flip over, which may result in serious injury or death to the operator.

1. Slowly and evenly move both drive control levers forward. The tractor will start to move forward. See Figure 3-2.

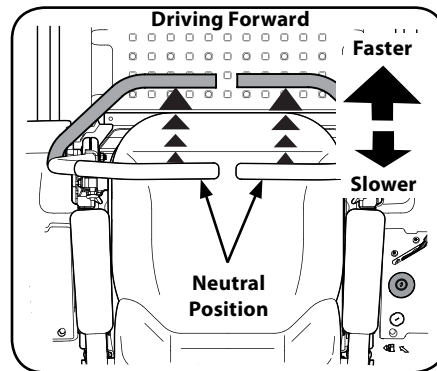


Figure 3-2

2. As the control levers are pushed farther forward the speed of the tractor will increase.
3. To slow the tractor move the controls lever rearward to attain the desired speed, or move the levers to the neutral position to stop the tractor.



Warning! Always maintain your grasp on the drive control levers. Do not release the levers to slow the tractor or to return to neutral.

Turning the Tractor While Driving Forward



Warning! When reversing the direction of travel, we recommend performing gradual 'U' turns where possible. Sharper turns increase the possibility of turf defacement, and could affect control of the tractor. ALWAYS slow the tractor before making sharp turns.

To turn the tractor while driving forward, move the control levers as necessary so that one lever is rearward of the other. The tractor will turn in the direction of the rearward control lever.

1. To turn to the left, move the left drive control lever rearward of the right lever. See Figure 3-3.

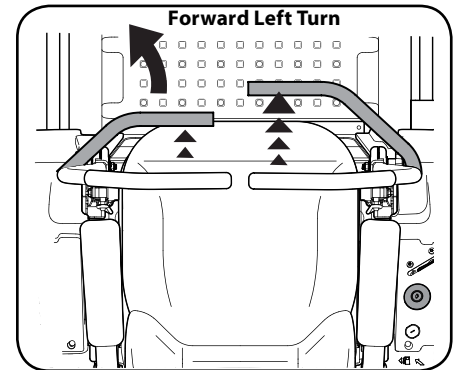


Figure 3-3

2. To turn to the right, move the right drive control lever rearward of the left lever. See Figure 3-4.

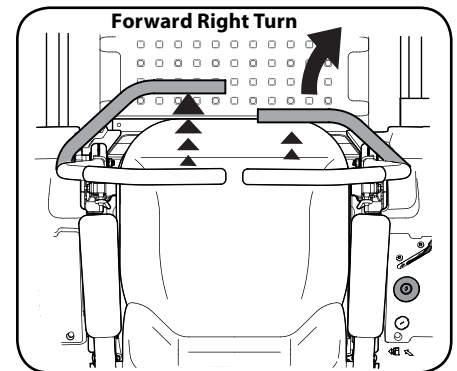


Figure 3-4

3. The greater the fore-to-aft distance between the two levers, the sharper the tractor will turn.
4. To execute a "pivot turn," move the turn side drive control lever to the neutral position, while moving the other control lever forward.

NOTE: Making a "pivot turn" on grass will greatly increase the potential for defacement of the turf.

Driving the Tractor In Reverse



Warning! Always look behind and down on both sides of the tractor before backing up. Always look behind while traveling in the reverse direction.

1. Slowly and evenly move both drive control levers rearward. The tractor will start to move in the reverse direction. See Figure 3-5.

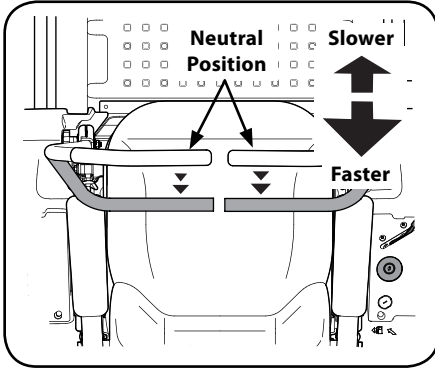


Figure 3-5

2. As the control levers are pushed farther rearward the speed of the tractor will increase.
3. To slow the tractor move the controls lever forward to attain the desired speed, or move the levers to the neutral position to stop the tractor.

Turning While Driving Rearward

To turn the tractor while driving rearward, move the control levers as necessary so that one lever is forward of the other. The tractor will turn in the direction of the forward control lever.

1. To turn to the left while traveling in reverse, move the left drive control lever forward of the right lever. See Figure 3-6.

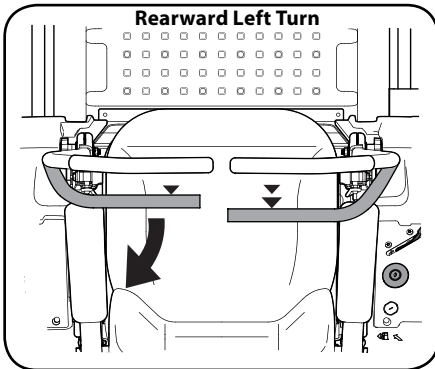


Figure 3-6

2. To turn to the right while traveling in reverse, move the right drive control lever forward of the left lever. See Figure 3-7.

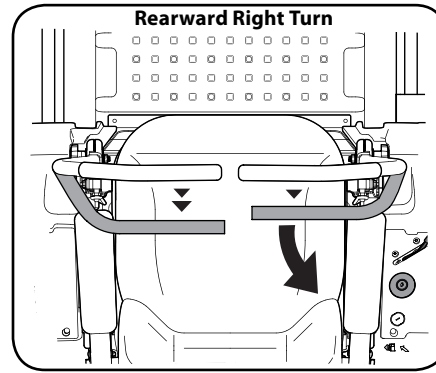


Figure 3-7

3. The greater the fore-to-aft distance between the two levers, the sharper the tractor will turn.
4. To execute a "pivot turn," move the turn side drive control lever to the neutral position, while moving the other control lever rearward.

NOTE: Making a "pivot turn" on grass will greatly increase the potential for defacement of the turf.

Executing a Zero Turn



Warning! When executing a zero turn, the tractor **MUST BE STOPPED**. Executing a zero turn while the tractor is moving can significantly reduce your control of the tractor and will cause severe turf defacement to occur.

1. Stop the forward or reverse motion of the tractor by moving the two drive control levers to neutral.
2. To turn clockwise, move the left control lever forward while simultaneously moving the right control lever rearward. See Figure 3-8.

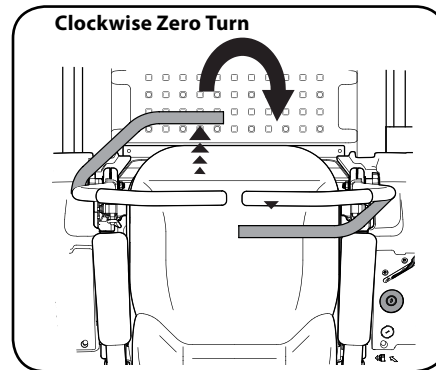


Figure 3-8

3. To turn counter-clockwise, move the right control lever forward while simultaneously moving the left control lever rearward. See Figure 3-9.

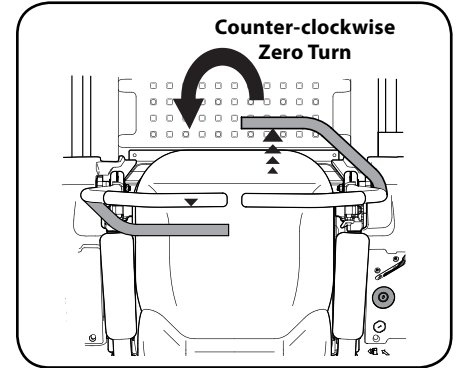


Figure 3-9

Executing a "Y" Manuever

For low traction conditions, follow these procedures for zero turns (the "Y-manuever"):

To turn clockwise (front of machine moves toward RIGHT) when traveling FORWARD:

1. Come to a stop.
2. Slowly move both lap bars rearward (no more than 1/2 maximum reverse speed) to initiate REVERSE travel,
3. Slowly move the LEFT lap bar forward while maintaining the RIGHT lap bar in the rearward travel position.
4. To stop the turn and re-initiate FORWARD travel, slowly move the RIGHT lap bar from the REVERSE travel position to a FORWARD travel position equal to that of the LEFT lap bar.
5. For counter-clockwise turns, reverse the above procedure.

Stopping the Tractor

1. Move both drive control levers to the neutral position to stop the motion of the tractor.
2. Push the PTO switch downward to the disengaged position.
3. Use the deck lift pedal (a) to raise the deck to its highest position and secure in place with the clevis pin (b) attached to the tractor. See Figure 3-10.

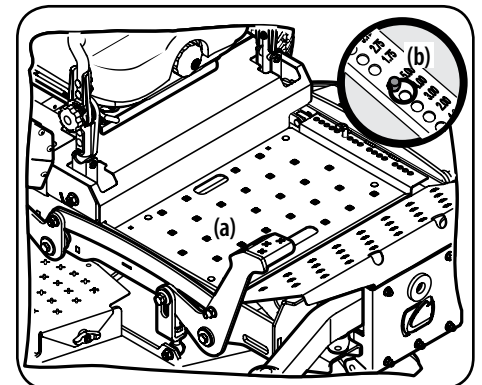


Figure 3-10

4. If dismounting the tractor, move the drive control handles fully outward in the neutral position, engage the parking brake, move the throttle control lever (if equipped) to the FAST  position, turn the ignition switch to STOP and remove the ignition key from the switch.



Warning! Do not leave the seat of the tractor without disengaging the PTO, moving drive control levers fully outward in the neutral position engaging the parking brake. If leaving the tractor unattended, turn the ignition key OFF and remove.

Driving On Slopes

Refer to the slope gauge in the Safe Operation Section to help determine slopes where you may operate safely.



Warning! Do not operate on inclines with a slope in excess of 15 degrees (a rise of approximately 2-½ feet every 10 feet). The tractor could overturn and cause serious injury.

1. Always drive across slopes, never up and down. Control the speed and direction of the tractor using primarily the control lever on the downhill side of the tractor, with the uphill control lever remaining essentially in a fixed position.
2. Avoid turning downhill if possible. Start at the bottom of a slope and work upward. Always slow down before turning.
3. Use extra care and go slowly when turning downhill.

Operating The PTO

Operate the PTO as follows:

1. Move the throttle to approximately the mid-throttle position.
2. Pull the PTO upward to the “ENGAGED” position.
3. Advance the throttle to the operating speed (full engine speed).

The operator must remain in the tractor seat at all times. If the operator should leave the seat without turning off the power take-off switch, the tractor's engine will shut off.

Using the Mower Deck



Warning! Make certain the area to be mowed is free of debris, sticks, stones, wire or other objects that can be thrown by the rotating blades.

NOTE: Do not engage the mower deck when lowered in grass. Premature wear and possible failure of the “V” belt and PTO clutch will result. Fully raise the deck or move to a non grassy area before engaging the mower deck.

1. Use the deck lift pedal (a) to raise the deck to its highest position, place the clevis pin (b) attached to the tractor into the desired index hole on the deck height index, then slowly release the deck lift pedal (a). See Figure 3-11.

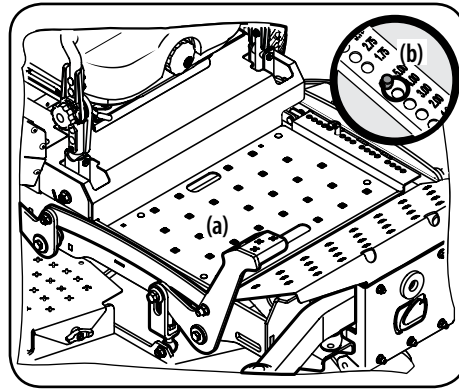


Figure 3-11

2. Mow across slopes, not up and down. If mowing a slope, start at bottom and work upward to ensure turns are made uphill.
3. On the first pass pick a point on the opposite side of the area to be mowed.
4. Engage the PTO knob and move the throttle control to the operating speed (full throttle) position.
5. Remove the clevis pin, raise the deck to the highest (transport) position and place the clevis pin in the desired position and secure with the clevis pin. Lower the mower deck to the desired height setting.
6. Slowly push the drive control levers forward to move the tractor forward, and keep the tractor headed directly toward the alignment point.

NOTE: The speed of the tractor will affect the quality of the mower cut. Mowing at full speed will adversely affect the cut quality. Control the ground speed with the drive control levers.

7. When approaching the other end of the strip, slow down or stop before turning. A U-turn is recommended unless a pivot or zero turn is required.
8. Align the mower with an edge of the mowed strip and overlap approximately 3”.
9. Direct the tractor on each subsequent strip to align with a previously cut strip.
10. To prevent rutting or grooving of the turf, if possible, change the direction that the strips are mowed by approximately 45° for the next and each subsequent mowing.



Warning! Be careful when crossing gravel paths or driveways. Disengage the PTO knob and raise the deck to the highest/transport position before crossing.

NOTE: When stopping the tractor for any reason while on a grass surface, always:

- Make sure the drive control levers are in neutral.
- Engage the parking brake.

- Shut engine off and remove the key.
- Doing so will minimize the possibility of having your lawn “browned” by hot exhaust from your tractor's running engine.

Mower Cutting Blades

The blades normally factory installed on a mower afford the best grass cutting performance on the majority of grasses and mowing conditions; however, there will be occasions whereby the grass type, stage of grass growth, soil conditions, and weather conditions will require different cutting blade types. Since the mower decks are designed so that over-lap of the cutting blades generally exceed 1.5”, there is no need for orientation of one cutting blade to an adjacent blade (i.e., the blades do not need to be “timed” nor synchronized).

Hi-lift — These are generally the best cutting blades for most grasses and mowing conditions. The Hi-Lift blades are the factory installed blades on these tractors. These blades will provide extra “lift” for the thinner leaf grasses, will handle lush grasses, and will provide maximum grass and debris discharge. These blades are generally required for material collection systems. More horsepower is required for these blades when compared to others, and they generally produce the highest noise levels.

Medium-lift — These blades require less horsepower than the hi-lift, and they generally work well in wider leaf grasses and some mulch applications.

Low-lift — These blades require less horsepower than hi-lift and medium-lift blades, and they generally work best with wide leaf grasses, sparse grass growth, and sandy soil conditions. They produce the lowest noise levels. Low-lift blades are configured without offset, and with a maximum amount of sharpened cutting edge.

Mulch — These blades are generally designed for use in cutting decks equipped with mulch baffles. The shape of the blade generally produces higher turbulence in order that the grass can be repeatedly cut and re-cut into smaller pieces. These blades generally require more horsepower than other blades. Mulch blades work best when the grasses are cut at the highest levels, minimal lengths of grasses are removed, and grass conditions are generally dry.

NOTE: Refer to the Attachment & Accessories section for a list of part numbers.

Reconfigurable Mower

	Inner Baffle	Discharge Baffle	Cutting Blades	Gauge Wheels	Front Roller	Rear Rollers
Standard set-up	Installed	Installed	Hi-lift	Low = 3 to 5"	Low = 3 to 5"	Low = 3 to 5"
Stems (Dandelion, Bahia, Buckhorn, etc.)	Removed	Installed	Hi-lift	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"
Very Lush &/or tall grass	Removed	Installed	Hi-lift	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"
Low cut height (1 to 2")	Installed	Installed	Low-lift	High = 1 to 2-½"	High = 1 to 2-½"	High = 1 to 2-½"
Mulch	Installed	Removed	Hi-lift/Mulch	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"
Material collection	Installed	Installed	Hi-lift	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"
Abrasive (sandy), dry	Removed	Installed	Low-lift	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"
Wet	Installed	Installed	Hi-lift	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"	High = 1 to 2-½" Low = 3 to 5"

Table Notes: This table is a general outline of suggested settings, mowing conditions may vary.

Inner Baffle: The inner baffle regulates grass discharge. Remove the inner baffle for high-volume grass and install the inner baffle for precision cutting.

Discharge Baffle: The discharge baffle enhances the grass discharge pattern. The discharge baffle reduces clumping and should be removed for mulching.

Gauge Wheels: The gauge wheels reduce scalping, help with precision cutting and reduce turf defacement during turns.

Rear Rollers: The rear rollers reduce scalping and gives grass a striped appearance.

Cutting Blades: The cutting blades cut grass, create grass lift and discharge grass through the discharge chute.

Discharge Chute: The discharge chute controls the mower deck discharge and enhances the discharge pattern

NOTE: To avoid damaging grass, no more than ⅓ of the grass height should be removed during a single cutting (i.e. if the grass is 6" tall, cut it to 4").

Maintenance Schedule

	Before Each use	Every 25 Hours	Every 50 Hours	Every 500 Hours	After Mowing
Check gasoline level	✓				
Check hydraulic hoses for leaks	✓				
Check tires & tire pressure	✓				
Check deck, mower and hydro drive belts	✓				
Check blades and blade bolt tightness	✓				
Check safety switches for proper operation	✓				
Check fluid level in transmission oil expansion reservoir	✓				
Check engine intake screen/cover					✓
Clean mower					✓
Blow out/clean the pump control area under floor pan					✓
Blow out/clean the pedal control area under the foot rest					✓
Lubricate wear points (see chart)			✓		✓
Grease three spindle bearings		✓			
Clean engine cooling fins & external surfaces *			✓		
Lubricate all grease fittings (see chart)			✓		
Change hydrostatic fluid & filter in transaxles †				✓	

† — After first 300 hours, change hydrostatic fluid and filter in transaxles

* — Perform more frequently under dusty conditions.

OIL CHART

Apply a few drops of SAE engine oil, grease, or use a spray lubricant. Apply the oil to both sides of pivot points. Wipe off any excess. Start engine and operate mower briefly to insure that oil spreads evenly.

Number of Oil Points	Description
DAILY	
4	Deck Suspension Pivots
4	Height Adjustment Turnbuckle Clevis Pin
2	Height Adjustment Handle Pivots
2	Height Adjustment Stop Pivots
2	Deck Lift Linkage Pivots
2	Transport Handle Pivots
1	Transport Handle Pin
2	Deck Frame Up-and-Down Pivots
WEEKLY	
1	Seat Hinge
2	Speed Control Linkage Rod End Bearings
2	Pump Control Lever Pivots
1	Brake Lever Pivot Clevis Pin
1	Brake Lever Control Rod Pivot
1	Brake Control Rod Swivel Joint
4	Brake Rod Clevis Pins
2	Brake Shaft Assembly Pivots
2	Grass Collection System Lid Hinges (If Mower is so equipped)

LUBRICATION CHART

Use a grease-gun filled with Shell Alvania RL 2 grease for the blade spindle bearings and NO. 2 Multipurpose Lithium Base Grease for the remaining fittings.

Number of Grease Fittings	Description
EVERY 25 HOURS	
3	Blade Spindle Bearings (See Figure 4-2)
WEEKLY	
2	Front Wheels (See Figure 4-3)
2	Front Wheel Spindles (See Figure 4-3)
2	Mower Deck Ball Wheels (See Figure 4-4)
2	Axle Pivot (See Figure 4-3)

Engine Oil

- Shell Rotella® T Triple Protection™ 15W40
- Shell Rimula® 15W40
- Reference your engine manual for other approved options

Hydrostatic Fluid

- Cub Drive System Fluid Plus (Shell TT-SB)
- Castrol™ (Syntec®) Edge™ 5W50

Spindle Lubricant: Use only Shell Alvania RL 2 grease. This grease is an amber-colored grease designed for high speed bearing applications. It has a base oil viscosity that reduces running losses, has been formulated for low noise, has excellent corrosion protection, and has excellent bearing lubrication.

General Purpose Lubrication: Use any NLGI grade 2 multi-purpose grease. Shell Albida EP2 is recommended. Shell Albida EP 2 is a red-colored multi-purpose grease designed for heavy-duty bearing applications. It has high base oil viscosity for mechanical stability, has been formulated for high load, low-speed applications, and has excellent lubrication and corrosion protection.

NOTE: This Operator's Manual covers several models. Tractor features may vary by model. Not all features in this manual are applicable to all tractor models and the tractor depicted may differ from yours.

Maintenance



Warning! Before performing any maintenance or repairs, disengage the PTO, move the drive control levers fully outward in the neutral position engaging the parking brake, stop the engine and remove the key to prevent unintended starting.

Lubrication

- Using a pressure lubricating gun, lubricate the front caster wheel axles with Cub Cadet 251H EP grease after every 10 hours of service.
- Periodically lubricate all other pivot points with a quality lubricating oil.

Engine

Refer to the Engine Operator's Manual for all engine maintenance intervals, procedures, specifications and instructions.

Changing the Engine Oil



Warning! If the engine has been recently run, the engine, muffler and surrounding metal surfaces will be hot and can cause burns to the skin. Exercise caution to avoid burns.

Maintain oil level as instructed in Engine Operator's Manual. Be careful not to spill oil on any of the belts.

To complete an oil change, proceed as follows:

1. Run the engine for a short time to warm the engine oil. The oil will flow more freely and carry away more impurities. Use care to avoid burns from hot oil.
2. Locate the oil drain hose on the engine. See Figure 4-1.

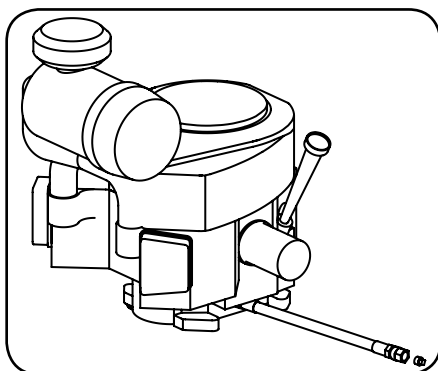


Figure 4-1

3. Remove the hose from the clip securing it to the frame.
4. Route the free end of the oil drain hose toward an appropriate oil collection container with at least a 2.5 quart capacity, to collect the used oil.

NOTE: Avoid getting oil on the muffler when draining.

5. While holding the free end of the oil drain hose over the oil collection container, unscrew the square-head hose plug from the end of the hose. See Figure 4-1. Drain the engine oil into the collection container.
6. Remove the oil filter to make sure all the oil is drained.
7. After draining the oil, wipe any residual oil from the oil drain hose. Thread the square head plug into the drain hose fitting and fully tighten the plug.
8. Replace the oil filter and refill the engine with new oil as instructed in the engine operator's manual. Refer to the Engine Operator's Manual for information regarding the volume and weight of engine oil.
9. Place the hose back into the clip securing it to the frame.

Lubrication



Warning! Before lubricating, repairing, or inspecting, always disengage PTO, set parking brake, stop engine and remove key to prevent unintended starting.

Using a pressure lubricating gun, lubricate all grease fittings and points as noted in the Lubrication Chart on page 21 and refer to the applicable figures below.

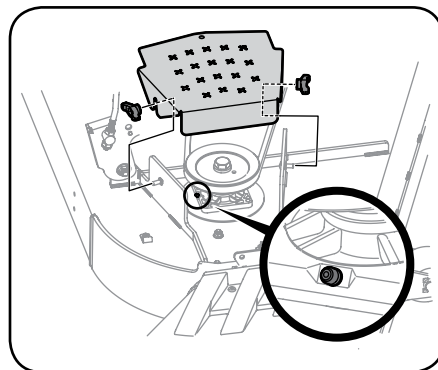


Figure 4-2

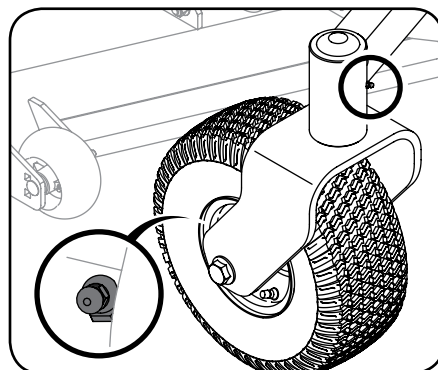


Figure 4-3

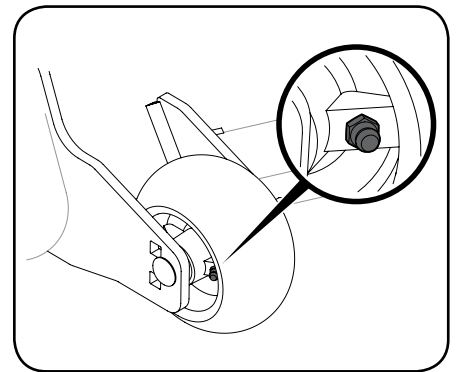


Figure 4-4

Lubricate all other pivot points with a quality lubricating oil as noted in the Oil Chart.

Tires

Check the tire air pressure after every 50 hours of operation or weekly. Keep the tires inflated to the recommended pressures. Improper inflation will shorten the tire service life and produce an uneven cut. See the tire side wall for proper inflation pressures. Observe the following guidelines:

- Do not inflate a tire above the maximum pressure shown on the sidewall of the tire.
- Do not reinflate a tire that has been run flat or seriously under inflated. Have it inspected and serviced by a qualified tire mechanic.

Battery Information



Warning!

- Should battery acid accidentally splatter into the eyes or onto the skin, rinse the affected area immediately with clean water, then neutralize with a solution of ammonia/water or baking soda/water.
- If acid spills on clothing, first dilute it with clean water, then neutralize with a solution of ammonia/water or baking soda/water.
- NEVER connect (or disconnect) battery charger clips to the battery while the charger is turned on, as it can cause sparks.
- Keep all sources of ignition (cigarettes, matches, lighters) away from the battery. The gas generated during charging can be combustible.
- As a further precaution, only charge the battery in a well ventilated area.
- Always shield eyes and protect skin and clothing when working near batteries.
- Batteries contain sulfuric acid and may emit explosive gases. Use extreme caution when handling batteries. Keep batteries out of the reach of children.

Battery Maintenance

- The battery is filled with battery acid and then sealed at the factory. However, even a "maintenance free" battery requires some maintenance to ensure its proper life cycle.
- Spray the terminals and exposed wire with a battery terminal sealer, or coat the terminals with a thin coat of grease or petroleum jelly, to protect against corrosion.

- Always keep the battery cables and terminals clean and free of corrosion.
- Avoid tipping. Even a sealed battery will leak electrolyte when tipped.



Warning! Batteries contain sulfuric acid and may emit explosive gases. Use extreme caution when handling batteries. Keep batteries out of the reach of children.

Battery Storage

1. When storing the tractor for extended periods, disconnect the negative battery cable. It is not necessary to remove the battery.
2. All batteries discharge during storage. Keep the exterior of the battery clean, especially the top. A dirty battery will discharge more rapidly.
3. The battery must be stored with a full charge. A discharged battery can freeze sooner than a charged battery. A fully charged battery will store longer in cold temperatures than hot.
4. Recharge the battery before returning to service. Although the tractor may start, the engine charging system may not fully recharge the battery.

Removing the Battery

1. Slide the seat all the way forward.
2. Remove the hex washer screw securing the battery hold-down bracket to the frame. Then flip the battery hold-down bracket up to free the battery. See Figure 4-5

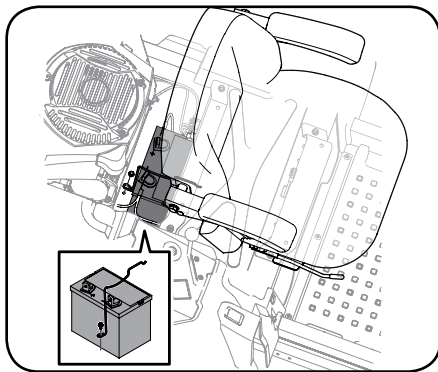


Figure 4-5

3. Remove the hex cap screw and sems nut securing the black negative battery lead to the negative battery post (marked NEG). Move the cable away from the negative battery post.
4. Remove the hex cap screw and sems nut securing the red positive battery lead to the positive battery post (marked POS).
5. Carefully lift the battery out of the tractor.

NOTE: On some models it may be necessary to slide the battery left or right to remove it.

6. Install the battery by repeating the above steps in the reverse order.

Using the Transmission Bypass Rods

If for any reason the tractor will not drive or you wish to move the tractor, the two hydrostatic transmissions are equipped with a bypass rod that will allow you to manually move the tractor short distances.



Warning! Do not tow the tractor, even with the bypass rod engaged. Serious transmission damage will result from doing so.

1. Engage the transmission bypass valves by pulling the bypass lever (a) upward and all the way back. See Figure 4-6.

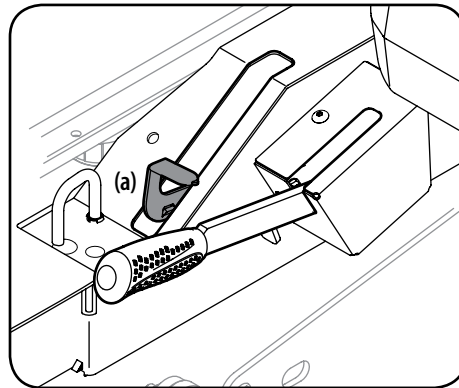


Figure 4-6

2. To release the bypass lever (a), push the lever forward.

Hydrostatic Transmission

The hydrostatic transmission on the 500 series is sealed at the factory and is maintenance-free. The fluid level cannot be checked and the fluid cannot be changed.

The 700 and 900 series are equipped with dual integrated hydrostatic pumps/transaxles that are sealed and are maintenance-free. However, this model is equipped with a transmission oil expansion reservoir. Under normal operating conditions, the oil level in the expansion reservoir does not need to be checked and no additional oil is needed. If checking the reservoir oil level, proceed as follows:



WARNING! Check the oil level ONLY before starting the tractor when the transmission oil is fully cooled.

1. Pivot the operator's seat forward and clean the reservoir cap and the area around the cap to prevent debris from contaminating the transmission oil. See Figure 4-7.

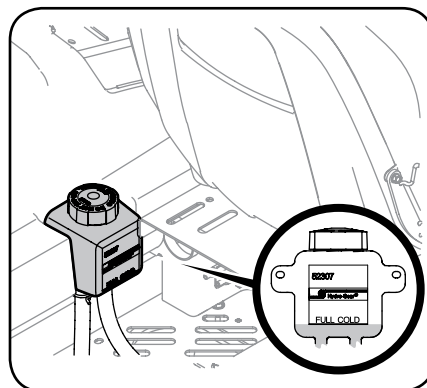


Figure 4-7

2. Turn the reservoir cap counterclockwise to re-move, then check the oil level in the reservoir. Oil should be visible at the bottom of the cup, but the oil level must NOT be above the "FULL COLD" line. See Figure 4-7. DO NOT FILL THE RESERVOIR.
3. If necessary to add oil because of some type of leakage, use a quality 20W50 motor oil and add only enough oil to bring the level to the "FULL COLD" line. Reinstall the cap and fully tighten.

NOTE: Prior to the initial operation of the tractor, the oil level in the reservoir may be slightly higher than the maximum due to air in the oil lines. Operation of the tractor will eventually purge the air from the lines and the oil level will settle to the maximum.

Tractor Storage

If your tractor is not going to be operated for an extended period of time (30 days to approximately six months), the tractor should be prepared for storage. Store the tractor in a dry and protected location. If stored outside, cover the tractor (including the tires) to protect it from the elements. The procedures outlined below should be performed whenever the tractor is placed in storage.

1. Change the engine oil and filter following the instructions provided in the Engine Operator's Manual packed with this manual.



Warning! Never store the tractor with fuel in the tank indoors or in poorly ventilated enclosures, where fuel fumes may reach an open flame, spark or pilot light as on a furnace, water heater, clothes dryer, etc.

2. If storing the tractor for 30 days or more:
 - a. To prevent gum deposits from forming inside the engine's carburetor and causing possible malfunction of the engine, the fuel system must be either completely emptied, or the gasoline must be treated with a stabilizer to prevent deterioration.



Warning! Fuel left in the fuel tank deteriorates and will cause serious starting problems.

- b. Use a fuel stabilizer for storage between 30 and 90 days:
 - Read the product manufacturer's instructions and recommendations.
 - Add to clean, fresh gasoline the correct amount of stabilizer for the capacity (approximately 3 gallons) of the fuel system.
 - Fill the fuel tank with treated fuel and run the engine for 2-3 minutes to get stabilized fuel into the carburetor.

- c. Emptying the fuel system for storage of more than 90 days:

- Prior to putting the tractor in storage, monitor fuel consumption with the goal of running the fuel tank empty.
- Run the engine until it begins to stall. Use the choke to keep the engine running until all fuel in the carburetor has been exhausted.
- Referring to the Engine Operator's Manual, drain the fuel from the carburetor bowl.

3. Clean the engine and the entire tractor thoroughly.
4. Fully charge the battery, then disconnect the negative cable at the battery to prevent possible discharge. Recharge the battery periodically when in storage.

NOTE: Remove the battery if exposed to prolonged periods of sub-freezing temperatures. Store in a cool, dry location where temperatures are above freezing.

5. Lubricate all lubrication points.

NOTE: Using a pressure washer or garden hose is not recommended for cleaning your tractor. It may cause damage to electrical components, spindles, pulleys, bearings or the engine. The use of water will result in shortened life and reduce serviceability.

Removing The Tractor From Storage

1. Check the engine oil.
2. Fully charge the battery and inflate the tires to the recommended pressure.
3. Fill the fuel tank with clean, fresh gasoline.
4. Start the engine and allow to idle for a few minutes to ensure engine is operating properly.
5. Drive the tractor without a load to make certain all the tractor systems are functioning properly.

Adjustments



Warning! Shut the engine off, remove the ignition key and engage the parking brake before making adjustments. Protect your hands by using heavy gloves when handling the blades.

Deck Leveling

NOTE: Check the tractor's tire pressure before performing any deck leveling adjustments. Refer to Tires for information regarding tire pressure. Always level the deck side-to-side before front to rear.

Side-to-Side Leveling

1. Park the mower on a flat paved surface, engage the parking brake, shut off the engine, remove the key from the ignition switch, disconnect the spark plug wires, using the deck lift pedal position the mowing deck into the 4" height of cut position (the 4" height of cut position is recommended in order for one to see and obtain a measurement. Any height of cut position is acceptable as long as a proper measurement can be taken) and rotate both outside blades so that they are perpendicular with the tractor.
2. Measure the distance from the outside of the left blade tip to the ground and the distance from the outside of the right blade tip to the ground. Both measurements taken should be equal. If they're not, proceed to the next step.
3. Adjust the eyebolt (a) at the left front of the deck so that the blade-to-ground height at the right outside blade tip matches that of the left outside blade tip. This is done by loosening the jam nuts (b) on the eyebolt (a) and tightening the upper jam nut (b) to raise the deck and loosening the jam nut (b) to lower the deck. The right outer blade tip height is fixed by the right, front eyebolt (a) so you must adjust the left outer tip to match it. See Figure 4-8.

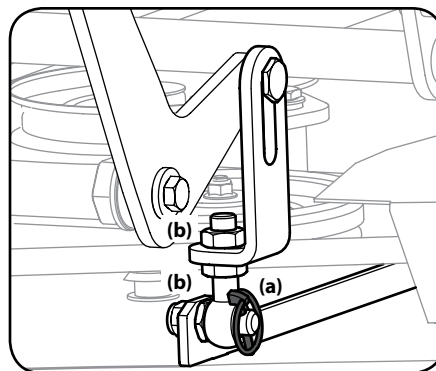


Figure 4-8

4. Once the proper adjustment is made, re-tighten the jam nuts (b).

Front-to-Back Leveling

1. Park the mower on a flat paved surface, engage the parking brake, shut off the engine, remove the key from the ignition switch, disconnect the spark plug wires, using the deck lift pedal position the mowing deck into the 4" height of cut position (the 4" height of cut position is recommended in order for one to see and obtain a measurement. Any height of cut position is acceptable as long as a proper measurement can be taken) and rotate both outside blades so that they are parallel with the tractor.
2. Measure the blade-to-ground height at the right rear blade tip. Again be sure to measure at the blade tip at the rear of the right blade when aligned along the mower centerline. The blade-to-ground height at the rear of the blade tip should be $\frac{1}{8}$ " to $\frac{1}{4}$ " higher than the front tip. This is referred to as blade pitch. The same height difference should be true for the left blade, measured front and back. The pitch should not exceed $\frac{1}{16}$ " if cut height is below 1- $\frac{1}{2}$ ".
3. Loosen the jam nuts (b) at the rear left and right of the deck eyebolts (a). Refer to Figure 4-8.
4. Start at the rear right to raise the rear of the deck, tighten the upper jam nut (b) to raise the deck or loosen the upper jam nut (b) to lower the rear of the deck.
5. Adjust the jam nut (b) at the rear left to take the "slack" out of the threaded rod.
6. Tighten both lower jam nuts (b) to secure the deck adjustment.
7. The final adjustment would be to take the "slack" out of the left rear linkage if the rear of the deck was raised by adjusting the jam nuts (b) on the eyebolt (a). Loosen the jam nuts (b) and tighten the upper jam nut (b) to remove "slack".
8. In many cases it will be necessary to adjust deck height using both eyebolt (a) adjustments and pitch adjustment to achieve the correct blade-to-ground heights. If you remember that the front right blade tip adjustment is fixed and you level to that height, adjusting the decks will be simplified.

Adjusting the Front Gauge Wheels



Warning! Keep hands and feet away from the discharge opening of the cutting deck.

The front gauge wheels on the mower deck are an anti-scalp feature, and should not ride on the ground. The front gauge wheels should be approximately $\frac{1}{4}$ - $\frac{1}{2}$ " above the ground when the deck is set in the desired height setting.

Using the deck lift handle, set the deck in the desired height setting, then check the gauge wheel distance from the ground below. If necessary adjust the front gauge wheels as follows:

1. Visually check the distance between the front gauge wheels and the ground. If the gauge wheels are near or touching the ground, they should be raised. If more than ½" above the ground, they should be lowered.
2. Remove the lock nut (a) securing one of the front gauge wheel (b) to the deck. Remove the front gauge wheel (b), hex screw (c) and spacer (d). See Figure 4-9.

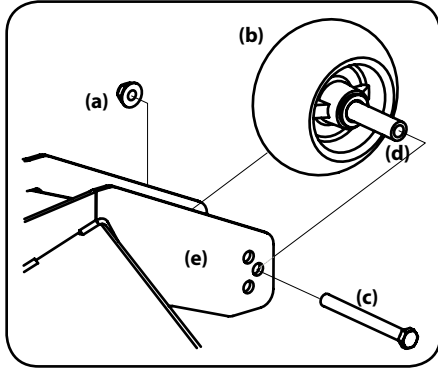


Figure 4-9

NOTE: There are a pair of front gauge wheels on the nose of the 54" and 60" decks.

3. Insert the hex screw (c) into the one of three index holes in the front gauge wheel bracket (e) that will give the front gauge wheel (b) a ¼-½" clearance with the ground.
4. Note the index hole of the just adjusted front gauge wheel (b), and adjust the other front gauge wheel (b) into the respective index hole of the other front gauge wheel bracket (e).

Service

Charging the Battery

Test and, if necessary, recharge the battery after the tractor has been stored for a period of time.

- A voltmeter or load tester should read 12.6 volts (DC) or higher across the battery terminals. See Figure 4-10.

Voltmeter Reading	State of Charge	Charging Time
12.7	100%	Full Charge
12.4	75%	90 Min.
12.2	50%	180 Min.
12.0	25%	280 Min.

Figure 4-10

- Charge the battery with a 12-volt battery charger at a MAXIMUM rate of 10 amps.

Jump Starting



WARNING! Failure to use this starting procedure can cause sparking, and the gases in the battery to explode.

1. Connect the end of one cable to the disabled machine battery's positive terminal; then connect the other end of that cable to the booster battery's positive terminal.
2. Connect one end of the other cable to the booster battery's negative terminal; then connect the other end of that cable to the frame of the disabled tractor, as far from the battery as possible.
3. Start the disabled tractor following the normal starting instructions previously provided; then disconnect the jumper cables in the exact reverse order of their connection.
4. Have the tractor's electrical system checked and repaired as soon as possible to eliminate the need for jump starting.

Servicing Electrical System

Fuse

There are two fuses located inside the left console. Lift the seat and look down at the left console to find the location of the fuses. One 30 amp fuse for the power steering and one 25 amp fuse the ignition, PTO, etc. These are standard plug-in type automotive fuses. Always use the same capacity fuse for replacement. Check the 30 amp fuse if the power steering is not working and check the 25 amp fuse for all other electrical problems.

If you have a recurring problem with blown fuses, have the tractor's electrical system checked by your Cub Cadet Service Dealer.

Safety Interlock System & Switch Operation Checks

The following operational checks should be made daily:

PTO Switch

1. Sit in the operator's seat. With the drive levers in the neutral position and the parking brake engaged, engage the PTO switch by pulling up on the knob and try to start the engine. The engine should not start. If it does, the PTO switch must be replaced. See your Cub Cadet Service Dealer.
2. If the engine does not start, disengage the PTO by pressing the knob down and start the engine. Now engage the PTO and the blades should rotate.
3. If the blades do not turn, the PTO switch must be replaced, the seat switch must be replaced or the electric PTO clutch must be repaired. See your Cub Cadet Service Dealer.

Parking Brake Switch

- Sit in the operator's seat. With the drive levers in the neutral position and the PTO disengaged, release the parking brake and try to start the engine. The engine should not start.
- If it does, the parking brake switch must be repositioned or replaced. See your Cub Cadet Service Dealer. If the engine does not start, engage the parking brake and start the engine.

Seat Switch

With the drive in the neutral position, the parking brake engaged and the PTO disengaged, start the engine. Now release the parking brake and raise up off the seat. Release the operator's seat and the engine should stop. If the engine does not stop, the seat switch must be replaced. See your Cub Cadet Service Dealer.

With the drive in the neutral position, the parking brake engaged and the PTO disengaged, sit in the operator's seat and start the engine. Engage the PTO and the blades should start to rotate. Raise up slightly off the operator's seat and the blades should stop. If the blades do not stop when you dismount from the operator's seat, the seat switch must be replaced. See your Cub Cadet Service Dealer.

Electric PTO Clutch

This clutch operates when the engine is running, the operator is in the operator's seat and the PTO is engaged. This electric clutch is a normally trouble free device. If a problem develops and the blades do not turn, first check the 25 amp fuse, then investigate the wiring harness and the connections to the seat switch, the PTO switch and the electric blade clutch. Then check the seat switch, the PTO switch and finally the electric blade clutch. If the PTO clutch is still not working properly, see an authorized service dealer.

Deck Removal

Remove the mower deck from the tractor as follows:

1. Lower the deck to the ground. Capture the deck lift by placing the clevis pin behind the lowest position.
2. Apply the parking brake. Remove ignition key and the spark plug cap.



Warning! The muffler and any surrounding parts at the rear of the tractor may be extremely hot, and could cause serious burns. Use extreme caution when near the muffler. Allow the muffler to fully cool before removing the belt from the PTO pulley.

4. Using a ½" drive in the idler pulley bracket (a), turn the wrench towards the right of the tractor and slide the PTO belt (b) off the PTO pulley (c). See Figure 4-11.

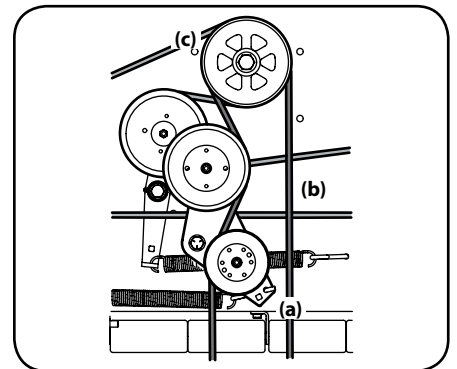


Figure 4-11

5. Remove the four lynch pins (a) that secure the deck to the deck lift assembly. See Figure 4-12.

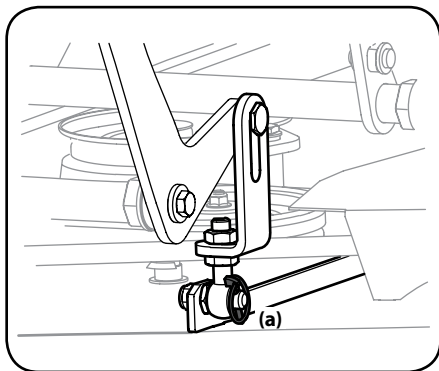


Figure 4-12



CAUTION: The spring is under tension due to the weight of the deck. When removing the lift linkage from the deck the tension of the springs will go from the deck to the deck lift pedal. Not capturing the deck lift pedal by placing the clevis pin behind the lowest position while removing the lift linkage from the deck will cause it to snap back.

6. Remove the hex screws (a) flange lock nuts (b) securing the front deck control rods (c) to the deck. See Figure 4-13.

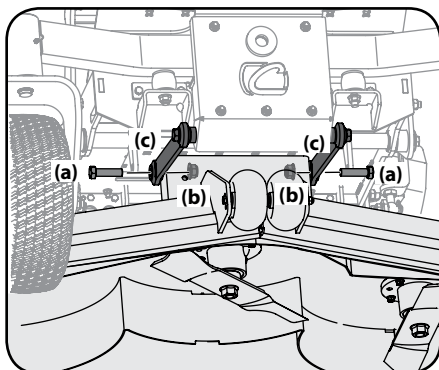


Figure 4-13

7. Turn front wheels as if to make a pivot turn.
8. Shift the deck toward the right side of the mower and remove.
9. To install reverse the process.

Replacing the PTO Belt

1. Remove the PTO belt (a) from the deck as instructed in the Deck Removal section then remove it from around the PTO clutch. See Figure 4-14.

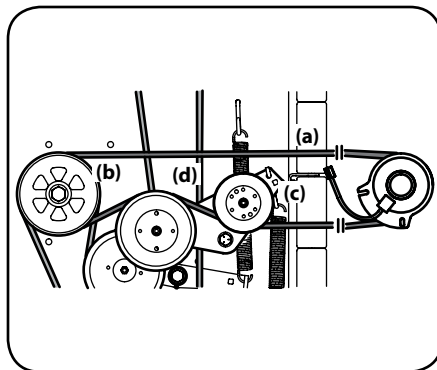


Figure 4-14

2. Route the PTO belt (a) as shown in Figure 4-14. After routing the belt around the PTO pulley (b), use a 1/2" drive in the idler pulley bracket (c) and turn towards the right of the tractor to finish routing the belt around the idler pulley (d).
3. Reinstall the deck.

Replacing the Deck Belt

1. Set the parking brake. Remove ignition key and both spark plug caps.
2. Remove the PTO belt, (refer to Deck Removal on page 24).
3. To remove the belt covers (a), remove the wing knobs (b) from the carriage screws (c) securing it to the deck. See Figure 4-15.

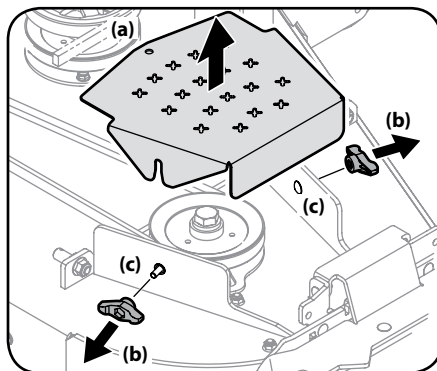


Figure 4-15

4. The speed nut should hold the carriage screw (c) and tab bolt in place, if not re-install as shown in Figure 4-15.

5. Using a 1/2" drive insert the end into the 1/2" square opening in the deck idler assembly (a) and rotate the deck idler assembly (a) clockwise. See Figure 4-16. While holding the deck idler assembly (a), loosen the deck belt from the pulley and slide the belt away from the pulley.

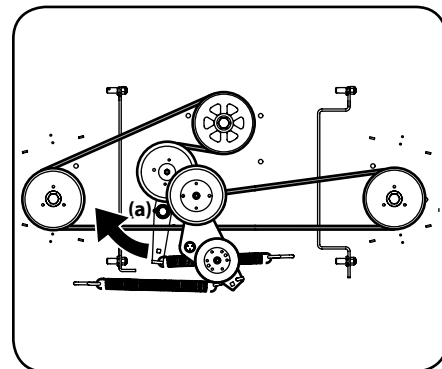


Figure 4-16



Warning! Avoid pinching injuries. Never place your fingers on the idler spring or between the belt and a pulley while removing the belt.

6. Route the new belt as shown in Figure 4-16. Then reinstall the deck and PTO belt as instructed on page 26.

Replacing the Blades



Warning! Before performing any maintenance, disengage the PTO, engage the parking brake lever, turn the ignition key to the "OFF" position and remove the key from the switch. Protect your hands by using heavy gloves when handling the blades. When servicing the mower deck, be careful not to cut yourself on the sharpened blades.

1. Remove the deck as instructed in the Deck Removal section on page 24.
2. Jack up the front of the mowing deck about one foot and block it in that position.
3. Wrap a rag around one end of the blade (a) and grasp it to prevent it from turning, or secure the blade (a) by placing a block of wood (b) between the blade (a) and the deck housing (c). See Figure 4-17.

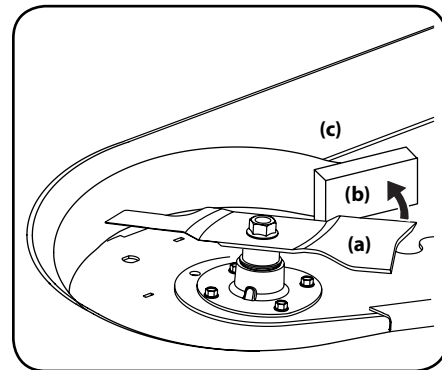


Figure 4-17

4. Use a 1-1/8" socket wrench on the pulley side of the hex screw (a) See Figure 4-18.

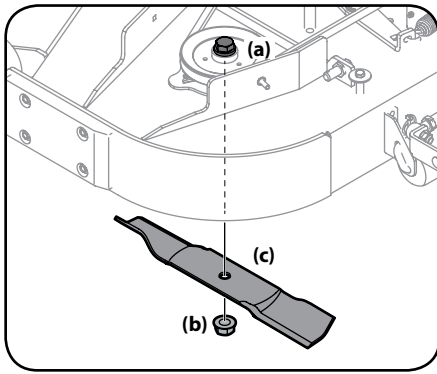


Figure 4-18

5. Remove the flange lock nut (b) at the blade (c) using a 1-1/8" wrench and remove the blade.
6. To replace the blade reverse the above process and tighten nut to 100-120 ft.-lbs.

NOTE: When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" or "Grass Side" (or with a part number stamped in it) facing the ground when the mower is in the operating position.

NOTE: Add a small amount of multi-purpose grease to the bolt threads to avoid corrosion and galvanic action.



Warning! Never mow with dull blades. Blades that are bent should be replaced. The cutting blades are sharp and can cause severe injury. Wrap the cutting surface of the blade with a rag to avoid injury.



Warning! If a blade is bent or otherwise damaged, replace the blade with a new one. Use only original equipment blades.



Warning! A poorly balanced blade will cause excessive vibration, may damage the machine and/or result in personal injury.

4. Test the blade's balance using a blade balancer. Grind metal from the heavy side until it balances evenly.

NOTE: When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" or "Grass Side" (or with a part number stamped in it) facing the ground when the mower is in the operating position.



Warning! Use a torque wrench to tighten the blade spindle hex flange nut to between 100 lbs-ft and 120 lbs-ft.

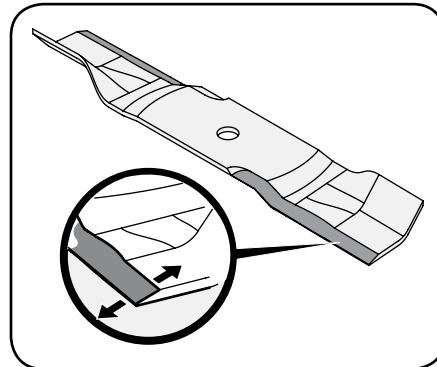


Figure 4-19

Sharpening the Blades

1. Set the parking brake.
2. Clean any debris from the blades. Keep blades sharp and free of build up at all times.
3. To properly sharpen the cutting blades, remove equal amounts of metal from both ends of the blades along the cutting edges, parallel to the trailing edge, at a 25°-30° angle. Always grind each cutting blade edge equally to maintain proper blade balance. See Figure 4-19.

Changing the Spindle Assembly

1. Remove the deck as instructed in the Deck Removal section on page 24.
2. Jack up the front of the mowing deck about one foot and block it in that position.
3. Remove the deck cover.
4. Remove the drive belts. See Replacing the Deck belt on page 26.
5. Remove the blade. See Replacing the Blades on page 26.
6. Using a 3/16" wrench or socket ratchet remove the flange lock nuts, and the hex flange bolts. Remove the spindle assembly. See Figure 4-20.

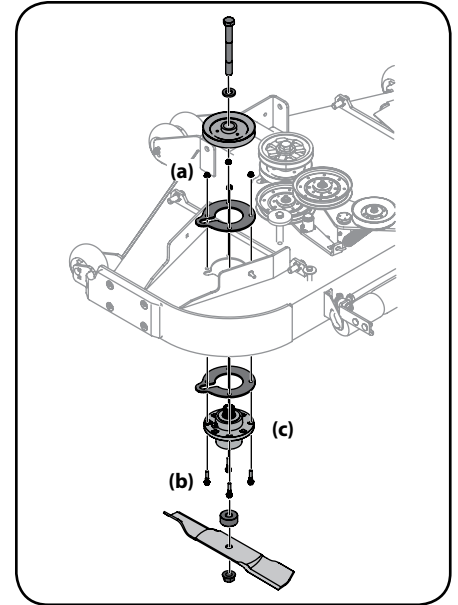


Figure 4-20

7. Reverse the process to install the spindle assembly.

Changing the Transmission Drive Belt

Several components must be removed and special tools used in order to change the tractor's transmission drive belt. See your Cub Cadet dealer to have the transmission drive belt replaced.

Tractor Creeping

Creeping is the slight forward or backward movement of the mower when the throttle is on and the drive levers are in the neutral position. If your mower creeps, see your Cub Cadet service dealer.

Problem	Cause	Remedy
Excessive vibration	1. Cutting blade loose or unbalanced. 2. Damaged or bent cutting blade.	1. Tighten blade and spindle. 2. Replace blade.
Uneven cut	1. Deck not leveled properly. 2. Dull blade. 3. Uneven tire pressure.	1. Perform side-to-side deck adjustment. 2. Sharpen or replace blade. 3. Check tire pressure in all four tires.
Mower will not mulch grass (If Equipped w/Mulching Kit)	1. Engine speed too low. 2. Wet grass. 3. Excessively high grass. 4. Dull blade.	1. Place throttle in FAST (rabbit) position. 2. Do not mulch when grass is wet. 3. Mow once at a high cutting height, then mow again at desired height or make a narrower cutting swath. 4. Sharpen or replace blade.
Engine will not start	1. One or both of the fuel tanks is empty.	1. Fill the empty tank(s) or shut of the fuel valve to the empty tank.

Replacement Parts

6

Part Number	Description
954-05127 954-04319	Deck Belt (54" Decks) Deck Belt (60/72" Decks)
954-04327 954-05128 954-05129	PTO Belt (54" Deck) PTO Belt (60" Deck) PTO Belt (72" Deck)
954-05037	Drive Belt
942-04416 942-04415 942-05179	Hi-Lift Blade, 19.0 (54" Deck) Hi-Lift Blade, 21.0 (60" Deck) Hi-Lift Blade, 25.0 (72" Deck)
918-05132	Deck Spindle
634-3159	Deck Wheel
731-11926	Deck Skid Guard
925-1707D	Battery
751-15243	Gas Cap
946-05260	Throttle Control Cable (If Equipped)
746-05341	Choke Control (If Equipped)
925-3277	Ignition Key
946-05103A	Park Brake Cable
931-05396 931-05419	Chute Assembly (54/60" Decks) Chute Assembly (72" Decks)
634-05228 634-05193 634-05192	Rear Wheel Assembly, 24 x 12-12 (554/754) Rear Wheel Assembly, 24 x 12-12 (560/760/772) Rear Wheel Assembly, 26 x 12-12 (960/972)
634-05215 634-05212 634-05211	Front Wheel Assembly, 13 x 6.5-6 (500 Series) Front Wheel Assembly 13 x 6.5-6 (700 Series) Front Wheel Assembly 16 x 6-6 (900 Series)

Attachments & Accessories

7

Part Number	Description
59A30047150	FAB Power Assist Triple Bagger
59A30037150	Front Weight Kit
19A70038100	54" Mulch Kit
19A70039100	60" Mulch Kit
490-241-0036	Rear Tire Chain Kit
59A30021150	12V Outlet Receptacle
59A30011150	Work Light Kit
59A30036150	72" Snow Blade
59A30050150	Power Deck Lift
59A30018150	Caster Wheel Kit

Part Number	Description
59A30048150	Discharge Restrictor Kit
59A30049150	Heavy Duty Striping Roller
590-488-150	Ultra Traction Tire/Rim
490-850-0008	Oil Siphon
490-850-0005	Blade Removal Tool
490-325-0020	Tire Sealant
490-900-0045	Oil Filter Wrench
490-900-0062	Armortek Non-Stick Spray
490-000-0028	Carburetor & Choke Cleaner

Phone (800) 965-4CUB to order replacement parts or a complete Parts Manual (have your full model number and serial number ready). Parts Manual downloads are also available free of charge at www.cubcadet.com.

FEDERAL and/or CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGATIONS

MTD Consumer Group Inc, the United States Environmental Protection Agency (EPA), and for those products certified for sale in the state of California, the California Air Resources Board (CARB) are pleased to explain the evaporative emission control system (ECS) warranty on your 2016-2017 small off-road equipment (outdoor equipment). In California, new outdoor equipment must be designed, built and equipped to meet the State's stringent anti-smog standards (in other states, outdoor equipment must be designed, built, and equipped to meet the U.S. EPA small off-road spark ignition engine regulations). MTD Consumer Group Inc must warrant the ECS on your outdoor equipment for the period of time listed below, provided there has been no abuse, neglect, or improper maintenance of the outdoor equipment.

Your ECS may include parts such as fuel tanks, fuel lines, fuel caps, valves, canisters, filters, vapor hoses, clamps, connectors, and other associated emission-related components.

Where a warrantable condition exists, MTD Consumer Group Inc will repair your outdoor equipment at no cost to you including diagnosis, parts, and labor.

MANUFACTURER'S WARRANTY COVERAGE:

This emission control system is warranted for two years. If any emission-related part on your outdoor equipment is defective, the part will be repaired or replaced by MTD Consumer Group Inc.

OWNER'S WARRANTY RESPONSIBILITIES:

As the outdoor equipment owner, you are responsible for performance of the required maintenance listed in your owner's manual. MTD Consumer Group Inc recommends that you retain all receipts covering maintenance on your outdoor equipment, but MTD Consumer Group Inc cannot deny warranty solely for the lack of receipts.

As the outdoor equipment owner, you should however be aware that MTD Consumer Group Inc may deny you warranty coverage if your outdoor equipment or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

You are responsible for presenting your outdoor equipment to MTD Consumer Group Inc's distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have a question regarding your warranty coverage, you should contact the MTD Consumer Group Inc Service Department at 1-800-800-7310 or at <http://support.mtdproducts.com>.

GENERAL EMISSIONS WARRANTY COVERAGE:

MTD Consumer Group Inc warrants to the ultimate purchaser and each subsequent purchaser that the outdoor equipment is: (1) designed, built, and equipped so as to conform with all applicable regulations; and (2) free from defects in materials and workmanship that cause the failure of a warranted part for a period of two years.

The warranty period begins on the date the outdoor equipment is delivered to an ultimate purchaser or first placed into service.

Subject to certain conditions and exclusions as stated below, the warranty on emission-related parts is as follows:

1. Any warranted part that is not scheduled for replacement as required maintenance in the written instructions supplied is warranted for the warranty period stated above. If the part fails during the period of warranty coverage, the part will be repaired or replaced by MTD Consumer Group Inc according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period.
 2. Any warranted part that is scheduled only for regular inspection in the written instructions supplied is warranted for the warranty period stated above. Any such part repaired or replaced under warranty will be warranted for the remaining warranty period.
 3. Any warranted part that is scheduled for replacement as required maintenance in the written instructions supplied is warranted for the period of time before the first scheduled replacement date for that part. If the part fails before the first scheduled replacement, the part will be repaired or replaced by MTD Consumer Group Inc according to subsection (4) below. Any such part repaired or replaced under warranty will be warranted for the remainder of the period prior to the first scheduled replacement point for the part.
 4. Repair or replacement of any warranted part under the warranty provisions herein must be performed at a warranty station at no charge to the owner.
 5. Notwithstanding the provisions herein, warranty services or repairs will be provided at all of our distribution centers that are franchised to service the subject engines or equipment.
 6. The outdoor equipment owner will not be charged for diagnostic labor that is directly associated with diagnosis of a defective, emission-related warranted part, provided that such diagnostic work is performed at a warranty station.
 7. MTD Consumer Group Inc is liable for damages to other engine or equipment components proximately caused by a failure under warranty of any warranted part.
 8. Throughout the off-road engine and equipment warranty period stated above, MTD Consumer Group Inc will maintain a supply of warranted parts sufficient to meet the expected demand for such parts.
 9. Any replacement part may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of MTD Consumer Group Inc.
 10. Add-on or modified parts that are not exempted by the Air Resources Board may not be used. The use of any non-exempted add-on or modified parts by the ultimate purchaser will be grounds for disallowing a warranty claim. MTD Consumer Group Inc will not be liable to warrant failures of warranted parts caused by the use of a non-exempted add-on or modified part.
-

WARRANTED PARTS:

The repair or replacement of any warranted part otherwise eligible for warranty coverage may be excluded from such warranty coverage if MTD Consumer Group Inc demonstrates that the outdoor equipment has been abused, neglected, or improperly maintained, and that such abuse, neglect, or improper maintenance was the direct cause of the need for repair or replacement of the part. That notwithstanding, any adjustment of a component that has a factory installed, and properly operating, adjustment limiting device is still eligible for warranty coverage. Further, the coverage under this warranty extends only to parts that were present on the off-road equipment purchased.

The following emission warranty parts are covered (if applicable):

1. Fuel Metering System
 - Fuel pump
 - Fuel tank
2. Evaporative Control
 - Fuel hose
 - Fuel hose clamps
 - Tethered fuel cap
 - Carbon canister
 - Vapor lines

CUB CADET LLC

MANUFACTURER'S LIMITED WARRANTY FOR

PRO Z 500/700/900 ZERO-TURN COMMERCIAL RIDING MOWER

IMPORTANT: To obtain warranty coverage owner must present an original proof of purchase and applicable maintenance records to the servicing dealer. Please see the operator's manual for information on required maintenance and service intervals.

The limited warranty set forth below is given by Cub Cadet LLC with respect to new merchandise purchased or leased and used in the United States and/or its territories and possessions, and by MTD Products Limited with respect to new merchandise purchased or leased and used in Canada and/or its territories and possessions (either entity respectively, "Cub Cadet").

Cub Cadet warrants this product (excluding its *Normal Wear Parts, Engines, Batteries* and *Attachments* as described below) against defects in material and workmanship for a period of three (3) years commencing on the date of original retail purchase or lease and will, at its option, repair or replace, free of charge, any part found to be defective in materials or workmanship.

Normal Wear Parts are warranted to be free from defects in material and workmanship for a period of thirty (30) days or one hundred (100) operation hours, whichever comes first, commencing on the date of original retail purchase or lease. Normal wear parts include, but are not limited to items such as: belts, blades, blade adapters, grass bags, rider deck wheels, seats, and tires.

Engines are warranted to be free from defects in material and workmanship for a period of three (3) years commencing on the date of original retail purchase or lease.

Batteries have a one-year prorated limited warranty against defects in material and workmanship, with 100% replacement during the first three months. After three months, the battery replacement credit is based on the months remaining in the twelve (12) month period dating back to the original date of original sale or lease. Any replacement battery will be warranted only for the remainder of the original warranty period.

Attachments — Cub Cadet warrants attachments for this product against defects in material and workmanship for a period of one (1) year, commencing on the date of the attachment's original purchase or lease. Attachments include, but are not limited to items such as: grass collectors and mulch kits.

This limited warranty shall only apply if this product has been operated and maintained in accordance with the Operator's Manual furnished with the product, and has not been subject to misuse, abuse, neglect, accident, improper maintenance, alteration, vandalism, theft, fire, water, or damage because of other peril or natural disaster. Damage resulting from the installation or use of any part, accessory or attachment not approved by Cub Cadet for use with the product(s) covered by this manual will void your warranty as to any resulting damage. In addition, Cub Cadet may deny warranty coverage if the hour meter, or any part thereof, is altered, modified, disconnected or otherwise tampered with.

HOW TO OBTAIN SERVICE: Warranty service is available, WITH PROOF OF PURCHASE AND APPLICABLE MAINTENANCE RECORDS, through your local authorized service dealer. To locate the dealer in your area:

In the U.S.A.

Check your Yellow Pages, or contact Cub Cadet LLC at P.O. Box 361131, Cleveland, Ohio 44136-0019, call 1-877-282- 8684 or log on to our website at www.cubcadet.com.

In Canada

Contact MTD Products Limited, Kitchener, ON N2G 4J1, call 1-800-668-1238 or log on to our website at www.mtdcanada.com.

Without limiting the foregoing, this limited warranty does **not** provide coverage in the following cases:

- a. Routine maintenance items such as lubricants, filters, blade sharpening, tune-ups, brake adjustments, clutch adjustments, deck adjustments, and normal deterioration of the exterior finish due to use or exposure.
- b. Service completed by someone other than an authorized service dealer.
- c. Cub Cadet does not extend any warranty for products sold or exported outside of the United States and/or Canada, and their respective possessions and territories, except those sold through Cub Cadet's authorized channels of export distribution.
- d. Replacement parts and/or accessories that are not genuine Cub Cadet parts.
- e. Transportation charges and service calls.

There are no implied warranties, including without limitation any implied warranty of merchantability or fitness for a particular purpose. No warranties shall apply after the applicable period of express written warranty above. No other express warranties beyond those mentioned above, given by any person or entity, including a dealer or retailer, with respect to any product, shall bind Cub Cadet. The exclusive remedy is repair or replacement of the product as set forth above.

The terms of this warranty provide the sole and exclusive remedy arising from the sale and/or lease of the products covered hereby. Cub Cadet shall not be liable for any incidental or consequential loss or damage including, without limitation, expenses incurred for substitute or replacement lawn care services or for rental expenses to temporarily replace a warranted product.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

In no event shall recovery of any kind be greater than the amount of the purchase price of the product sold. **Alteration of safety features of the product shall void this warranty.** You assume the risk and liability for loss, damage, or injury to you and your property and/or to others and their property arising out of the misuse or inability to use the product.

This limited warranty shall not extend to anyone other than the original purchaser or to the person for whom it was purchased as a gift.

HOW LOCAL LAWS RELATE TO THIS WARRANTY: This limited warranty gives you specific legal rights, and you may also have other rights that vary in different jurisdictions.

Cub Cadet LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019, Phone: 1-877-282-8684
MTD Products Limited, Kitchener, ON N2G 4J1, Phone: 1-800-668-1238