


DAWA

SPINNING REEL

Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)

EXLT1000D

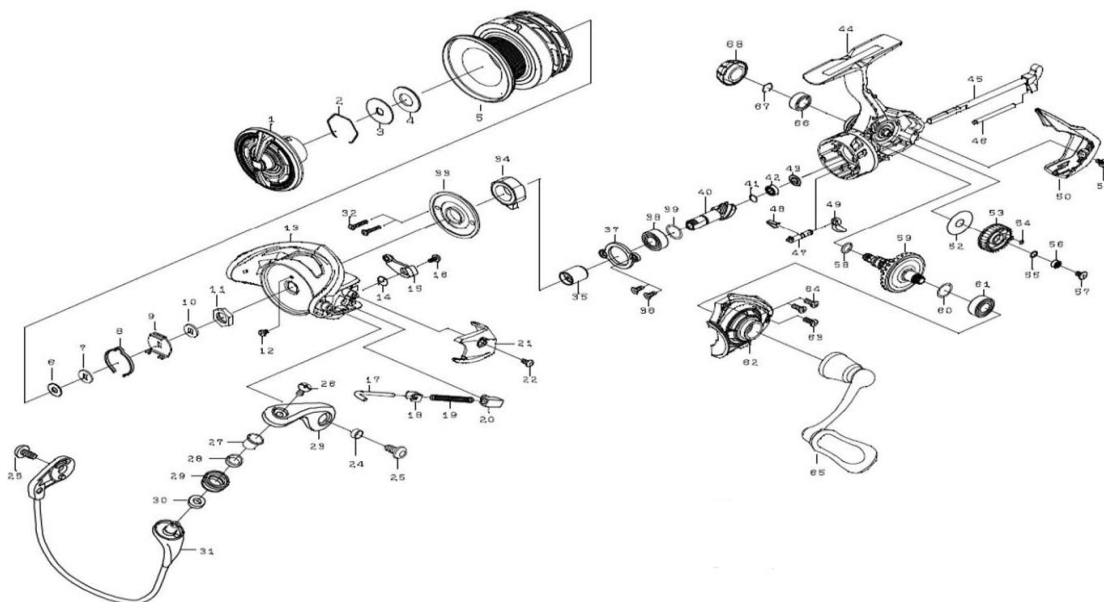

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	Q37-6801	DRAG KNOB	35	J00-1401	SPACING SLEEVE
2	Q34-6101	DRAG RETAINER	36	Q12-6201	SCREW
3	J54-7001	DRAG DISC WASHER	37	Q19-5601	BEARING PLATE
4	J67-8901	DRAG WASHER	38	G46-7302	BALL BEARING
5	Q40-1401	SPOOL ASSEMBLY	39	375-8502	GEAR WASHER
6	E39-8003	SPOOL WASHER	40	Q37-5701	PINION GEAR
7	Q34-8502	SPOOL WASHER	41	H93-1701	SPRING WASHER
8	J52-5101	CLICK LEAF SPRING	42	H95-9601	BALL BEARING
9	J54-6201	CLICK LEAF SPRING HOLDER	43	J38-7701	BEARING COLLAR
10	Q34-4001	CLICK LEAF WASHER	44	Q40-1201	BODY
11	Q12-2401	ROTOR NUT	45	Q37-5301	MAIN SHAFT
12	H02-2701	SCREW	46	Q11-9104	STABILIZER BAR
13	Q13-9515	ROTOR	47	Q11-8101	A/R CAM
14	H44-3301	BAIL TRIP LEVER SPRING	48	H69-7801	A/R CAM SPRING
15	Q13-9601	BAIL TRIP LEVER	49	Q11-8001	A/R LEVER
16	H41-7701	SCREW	50	Q37-6201	REAR COVER
17	Q13-9801	BAIL SPRING SHAFT	51	Q34-2901	SCREW
18	H57-6101	BAIL SPRING PLATE	52	H60-7902	WASHER
19	H44-2401	BAIL SPRING	53	Q37-5201	OSC GEAR
20	Q12-1501	BAIL SPRING HOLDER	54	H77-0601	O'RING
21	Q14-6501	BAIL SPRING COVER	55	H12-9201	WASHER
22	Q34-2901	SCREW	56	G46-9005	BALL BEARING
23	Q12-1613	BAIL ARM	57	Q12-6101	SCREW
24	Q12-1701	COLLAR	58	G67-0501	O'RING
25	Q34-3401	BAIL ARM SCREW	59	Q37-5801	DRIVE GEAR
26	G19-5602	SCREW	60	375-8502	DRIVE GEAR WASHER
27	G19-5501	COLLAR	61	G46-7302	BALL BEARING
28	G22-0701	COLLAR	62	Q40-1301	SIDE COVER
29	J08-9901	LINE ROLLER	63	Q34-2701	SCREW
30	Q20-3401	COLLAR	64	Q34-2601	SCREW
31	Q13-9901	BAIL ASSEMBLY	65	Q40-1701	HANDLE ASSEMBLY
32	G83-7101	SCREW	66	G52-2706	BALL BEARING
33	Q13-9401	SEALED PLATE	67	G47-2401	BEARING RETAINER
34	Q30-8301	ROLLER CLUTCH	68	Q34-5101	HANDLE CAP