

6Y2851011


  
**Daiwa**  
 COMMITTED TO TOTAL QUALITY

Please order by parts number, not key number

Bitte, Best: -Nr. angeben (Nicht "key" -Nr.)

Veuillez indiquer le numero de la pièce (Non "key" No.)

# SPINNING REEL PG1355BL

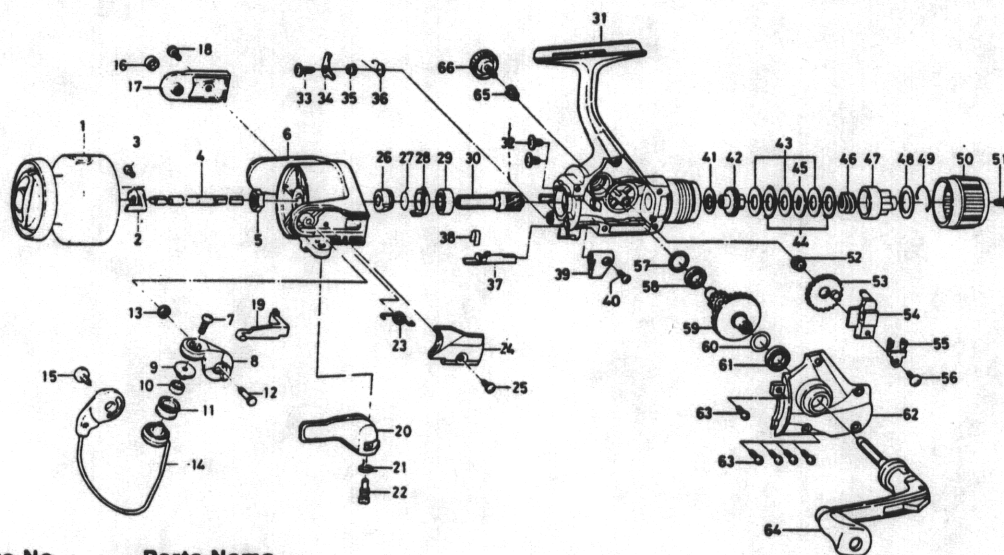

| Key NO. | Parts No.  | Parts Name                 |    |            |                             |
|---------|------------|----------------------------|----|------------|-----------------------------|
| 1       | 6-F19-6801 | Spool assembly             | 34 | 6-F19-5301 | Anti-reverse pawl           |
| 2       | 6-F19-6702 | Spool metal                | 35 | 6-L01-4302 | Anti-reverse pawl collar    |
| 3       | 6-351-1001 | Spool metal screw          | 36 | 6-L00-1501 | Anti-reverse pawl spring B  |
| 4       | 6-F19-5502 | Main shaft                 | 37 | 6-F19-5101 | Anti-reverse cam            |
| 5       | 6-341-9201 | Rotor nut                  | 38 | 6-F19-5201 | Anti-reverse cam spring     |
| 6       | 6-F11-1205 | Rotor                      | 39 | 6-F19-4901 | Anti-reverse lever          |
| 7       | 6-B67-9305 | Line roller screw          | 40 | 6-B64-6602 | Anti-reverse lever screw    |
| 8       | 6-F17-9801 | Bail arm                   | 41 | 6-B48-9902 | Drag washer A               |
| 9       | 6-F06-6301 | Line roller collar         | 42 | 6-B83-3604 | Click gear                  |
| 10      | 6-F05-5601 | Ball bearing A             | 43 | 6-L10-9601 | Drag washer B               |
| 11      | 6-F05-8901 | Line roller                | 44 | 6-L10-9701 | Eared washer                |
| 12      | 6-E49-3501 | Bail arm screw             | 45 | 6-L10-9801 | Key washer                  |
| 13      | 6-320-5901 | Bail arm screw retainer    | 46 | 6-F06-2301 | Drag coil spring            |
| 14      | 6-F18-0101 | Bail assembly              | 47 | 6-F19-5901 | Drag collar                 |
| 15      | 6-B51-5302 | Bail trip cam screw        | 48 | 6-L11-0001 | Drag collar washer          |
| 16      | 6-F17-3001 | Bail trip collar           | 49 | 6-L08-5601 | Drag washer spring          |
| 17      | 6-F17-9901 | Bail trip cover            | 50 | 6-F19-9501 | Drag knob                   |
| 18      | 6-L01-1701 | Bail trip cover screw      | 51 | 6-E03-7802 | Drag knob screw             |
| 19      | 6-E45-1601 | Bail trip lever            | 52 | 6-E29-9401 | Oscillating gear collar     |
| 20      | 6-F18-0001 | Trigger lever              | 53 | 6-E45-1302 | Oscillating gear            |
| 21      | 6-E36-9901 | Trigger spring             | 54 | 6-F19-5401 | Oscillating slider          |
| 22      | 6-E37-0001 | Trigger screw              | 55 | 6-F19-5601 | Oscillating slider retainer |
| 23      | 6-F22-2601 | Bail spring                | 56 | 6-350-8912 | Oscillating slider screw    |
| 24      | 6-E49-4201 | Bail spring cover          | 57 | 6-E50-5801 | Bearing washer              |
| 25      | 6-E36-4201 | Bail spring cover screw    | 58 | 6-E30-6801 | Ball bearing C              |
| 26      | 6-E49-2401 | Anti-reverse ratchet       | 59 | 6-F17-0001 | Drive gear                  |
| 27      | 6-F19-6301 | Anti-reverse pawl spring A | 60 | 6-373-7800 | Drive gear washer           |
| 28      | 6-F19-6201 | Spring holder              | 61 | 6-631-6901 | Ball bearing D              |
| 29      | 6-L03-6601 | Ball bearing B             | 62 | 6-F19-5703 | Side cover                  |
| 30      | 6-E51-9801 | Pinion gear                | 63 | 6-E15-8602 | Side cover screw            |
| 31      | 6-F19-4806 | Body assembly              | 64 | 6-F19-9401 | Handle assembly             |
| 32      | 6-E03-7801 | Bearing retainer screw     | 65 | 6-501-8501 | Handle collar               |
| 33      | 6-L00-1801 | Anti-reverse pawl screw    | 66 | 6-B92-5002 | Handle lock screw           |