


SPINNING REEL — PM750

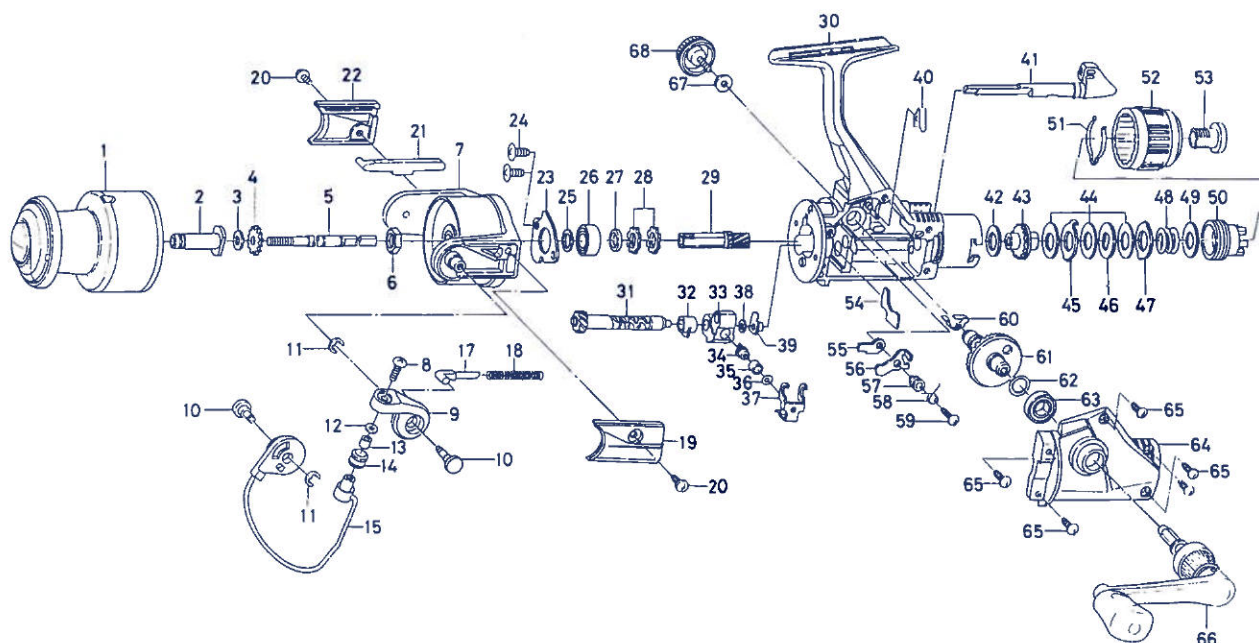

Key

Key No.	Part No.	Part Name
1	F07-5702	Spool assembly
2	F07-4601	Spool metal
3	375-3002	Spool washer
4	E13-1201	Main shaft washer
5	F07-3201	Main shaft
6	341-9201	Rotor nut
7	E36-8105	Rotor
8	B67-9304	Line roller screw
9	F01-0401	Bail arm
10	E37-1702	Bail arm screw
11	320-5901	Bail arm screw retainer
12	B55-4301	Line roller washer
13	B45-1501	Line roller bushing
14	250-3921	Line roller
15	F12-9101	Bail assembly
17	E36-8201	Bail spring shaft
18	E41-7701	Bail spring
19	E36-8302	Bail spring cover
20	E36-4202	Bail spring cover screw
21	E36-8402	Bail trip lever
22	E36-8505	Bail trip cover
23	F05-7101	Bearing retainer
24	E03-7801	Bearing retainer screw
25	375-8503	Bearing washer
26	634-1301	Ball bearing A
27	E29-6101	Spacing sleeve
28	E27-1501	Anti-reverse ratchet
29	F07-5501	Pinion gear
30	F11-1402	Body assembly
31	F12-4301	Worm shaft
32	F07-3001	Worm shaft bush
33	F07-2601	Oscillating slider
34	E12-2403	Oscillating pawl
35	E12-4601	Oscillating pawl bush

Key

Key No.	Part No.	Part Name
36	375-0800	Oscillating pawl washer
37	F07-3301	Oscillating slider cover
38	B53-6100	Worm shaft washer
39	F05-6901	Worm shaft collar
40	E26-8701	Anti-reverse cam spring
41	F07-2403	Anti-reverse lever
42	B48-9902	Drag washer A
43	F07-3701	Click gear
44	B49-0202	Drag washer B
45	B63-8301	Eared washer A
46	B49-0301	Key washer
47	B49-0102	Eared washer B
48	B92-6703	Drag coil spring
49	372-7601	Drag screw washer
50	F07-6301	Drag screw
51	B74-7702	Drag washer spring
52	F07-6601	Drag knob
53	F05-7801	Drag knob screw
54	F08-7201	Shield plate
55	B95-9301	Anti-reverse pawl plate
56	E27-1301	Anti-reverse pawl
57	B95-9501	Anti-reverse pawl collar
58	B95-9602	Anti-reverse pawl spring A
59	B00-8601	Anti-reverse pawl screw
60	E29-6902	Anti-reverse pawl spring B
61	E42-0101	Drive gear
62	375-8501	Drive gear washer
63	634-1301	Ball bearing B
64	F11-1502	Side cover
65	E13-0501	Side cover screw
66	E41-7902	Handle assembly
67	F02-0201	Handle lock washer
68	F03-5601	Handle lock screw