



Disney baby

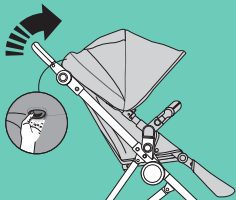

1.


Adjust To An Upright Position

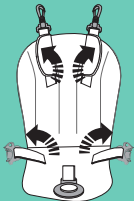

2.

Unbuckle 5 Point Harness

Two
Shoulder
Height
Positions

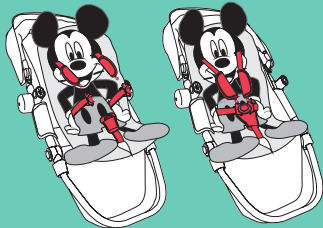

3.

Insert Seat Liner & Buckle 5 Point Harness

Care and Maintenance

Machine wash in warm water with mild detergent. Do not bleach. Tumble dry low or hang dry. Do not iron or dry clean.

Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

Failure to follow these instructions could result in serious injury or death.

Avoid serious injury from falling or sliding out. Always insure that the child is properly positioned by using the safety harness according to these instructions.