



2009

QUICK REFERENCE GUIDE

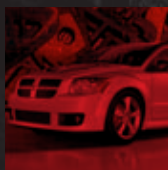

CALIBER

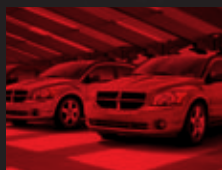

DODGE




CLIMATE CONTROLS

AIR RECIRCULATION /MAX A/C

- For window defogging, turn the recirculation button off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.
- For maximum cooling, rotate temperature control toward MAX A/C position, then push the A/C and recirculation buttons.

ODOMETER/TRIP ODOMETER RESET BUTTON

- Press the button to toggle between the odometer, trip odometers and outside temperature (select models only).

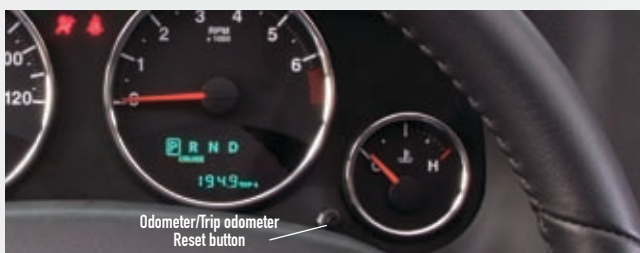



Forward/Rearward

Height Adjustment

Recliner

Lumbar

DRIVER SEAT ADJUSTMENT

FORWARD/REARWARD

- Lift up on the adjusting bar, located at the front of the seat near the floor, and release at the desired position.

RECLINER

- Lean forward before lifting the lever, located on the outboard side of the seat, then lean back to the desired position and release the handle.

HEIGHT ADJUSTMENT

- Ratchet the front lever, located on the outboard side of the seat, upward to raise the seat height. Ratchet the lever downward to lower the seat height.

REAR FOLD FLAT SEATS

- Pull the strap, located on the outboard side of the seatback, forward to fold the seat flat.



FUEL CAP

LOOSE GAS CAP MESSAGE

- If a “gas cap” message (shown as gASCAP) appears, tighten the gas cap until a “clicking” sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- If one or more of the four road tire pressures are low, the Tire Pressure Monitoring Light will illuminate and an audible chime will sound.
- Check the inflation pressure of each road tire on your vehicle and inflate to the recommended cold pressure value, shown on the placard located in the driver's door opening. The TPMS display should not be used as a tire pressure gauge when adjusting your tire pressure.
- The light will turn off once the updated tire pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressures, causing the TPMS light to turn on.** Colder temperatures will decrease tire pressure and warmer temperatures will increase tire pressure.
- If your spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner's Manual.

OIL CHANGE INDICATOR

MESSAGE

- If an “oil change” message (shown as CHAnGE Oil or Oil Change Required) appears and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

ICLE FEATURES

CLOCK SETTING

NON-TOUCH-SCREEN RADIO

- Press and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

TOUCH-SCREEN RADIO

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where "User Clock" is displayed (Navigation Radio only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word "Save" is displayed.

RECHARGEABLE FLASHLIGHT


- The flashlight is located in the headliner above the rear cargo area. Press the flashlight to release.
- Press the switch once for high, twice for low and a third time for OFF.



115V POWER OUTLET

- A 115 volt (150 watt) AC power outlet is located on the front of the center console, just below the center armrest.
- The Power Outlet will shut down if the 115 volt (150 watt) power rating is exceeded. This will require replacing the fuse protecting the system. Refer to Owner's Manual.

INSTRUMENT

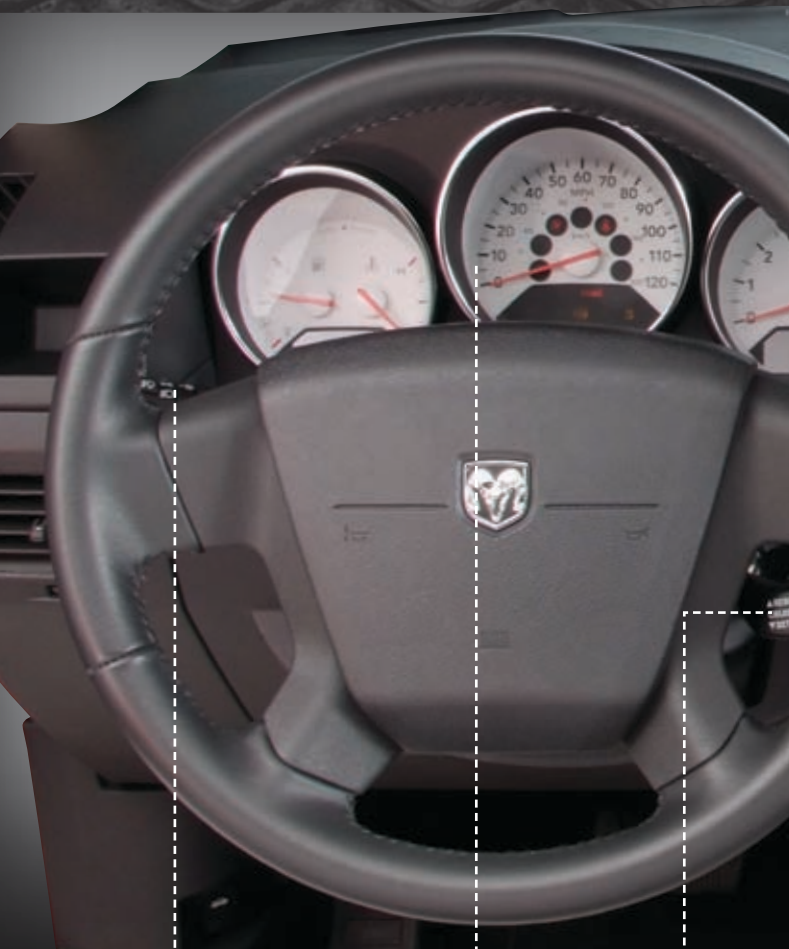

● Turn Signal/Lights Lever
(Behind Steering Wheel)

● Instrument Cluster

● Speed
Control
Lever

INSTRUMENT PANEL



Wiper/Washer
Lever (Behind
Steering Wheel)

Audio System
(Touch-Screen
Radio Shown)

Climate
Controls

Lower Switch Panel
Heated Seat Switches
Electronic Stability Program Switch
Hazard Warning Flasher



KEY FOB

LOCKING AND UNLOCKING THE DOORS/LIFTGATE

- Press the LOCK button once to lock all doors and liftgate.
- Press the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors and liftgate.
- All doors can be programmed to unlock on the first press of the UNLOCK button.
- Refer to your Owner's Manual for programming.


PANIC ALARM

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.

CONTINUOUSLY VARIABLE AUTOMATIC TRANSMISSION (CVT)

- While conventional automatic transmissions typically have 4, 5 or 6 speeds, the Continuously Variable Transmission has an infinite number of speeds. This allows it to adjust to exactly the right ratio to optimize performance and fuel economy.
- Under hard acceleration you may hear more engine noise than with a conventional transmission. The CVT may also occasionally feel like it is "shifting." These characteristics are perfectly normal and contribute to the CVT's efficiency.

LE FEATURES

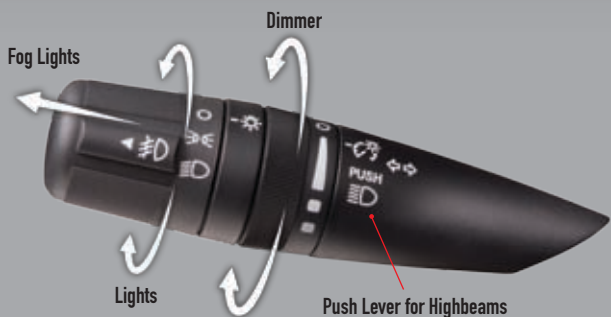

TURN SIGNAL/LIGHTS LEVER

HEADLIGHTS/PARKING LIGHTS

- Rotate the end of the lever to the first detent for parking lights and to the second detent for headlights.

INSTRUMENT PANEL DIMMER

- Rotate the center portion of the lever to the extreme bottom position to turn off the interior lighting. In this position, the interior lights will not turn on when a door is opened.
- Rotate the center portion of the lever up to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the center portion of the lever upward to the next detent position to fully brighten the odometer and radio when the parking lights or headlights are on. Refer to your Multimedia or Navigation User Manual for display dimming.
- Rotate the center portion of the lever upward to the last detent position to turn on the interior lighting.

HIGH BEAM OPERATION

- Push the lever forward to activate the high beams.

FOG LIGHTS

- Pull out the end of the lever. Fog lights only operate with parking lights or low beam headlights.

TURN SIGNALS

- Move the lever up or down to signal a lane change.



SPEED CONTROL LEVER

CRUISE ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- CRUISE will appear on the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, press down and release the lever to set a desired speed.

ACCEL/DECEL

- Press and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected set speed in memory, push the lever up and release.



WIPER/WASHER LEVER

FRONT WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Mist

- Pull down on the lever and release when a single wipe is desired.

Washer Operation

- Pull the lever toward you and hold for as long as spray is desired.

REAR WIPER

Wiper Operation

- Rotate the center portion of the lever forward to the first detent for rear wiper operation.

Washer Operation

- Rotate the center portion of the lever past the first detent to activate the rear washer.

WIND BUFFETING

- Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.
- If buffeting occurs with the sunroof open, adjust the sunroof opening, or adjust any window. This will minimize the buffeting.

81-316-0990



Caliber
First Printing
Quick Reference Guide

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com or your local Dodge dealer.

www.DODGE.com

Dodge is a registered trademark of Chrysler LLC.

