


2009

QUICK REFERENCE GUIDE

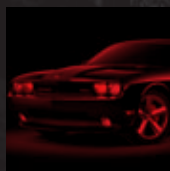

CHALLENGER



DODGE



KEY FOB

LOCKING AND UNLOCKING THE DOORS

- Press the LOCK button once to lock all the doors.
- Press the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors.
- All doors can be programmed to unlock on the first press of the UNLOCK button.
- Refer to the Owner's Manual for programming.

UNLATCH TRUNK

- Press the TRUNK button  twice within five seconds to open the trunk.

PANIC ALARM

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.

REMOTE START (AUTOMATIC TRANSMISSION ONLY)

- Press the REMOTE START button  twice within five seconds. Pressing the REMOTE START button a third time will shut the engine off.
- To drive the vehicle, press the UNLOCK button, insert the key fob in the ignition and turn to the ON/RUN position or with Keyless Go, press and release the START/STOP button once.
- With remote start, the engine will only run for 15 minutes (timeout) unless the key fob is placed in the ON/RUN position or the START/STOP button is pressed once.
- After two consecutive timeouts, the vehicle must be started with the key fob or the START/STOP button.



KEYLESS GO

TO START THE ENGINE

- With the removable START/STOP button installed in the ignition switch and the key fob with you while sitting in the vehicle, start the engine using either the Manual Transmission or Automatic Transmission procedure below.

FOR MANUAL TRANSMISSION

- With the parking brake applied, shift the transmission to Neutral. Fully depress the clutch pedal, press and hold the START/STOP button until the engine starts.

FOR AUTOMATIC TRANSMISSION


- Shift transmission to Park, depress the brake pedal, press and release the START/STOP button once.

TO STOP THE ENGINE

- Shift to Park (Automatic Transmission) or Neutral (Manual transmission) and press the START/STOP button once.

TO TURN ON ACCESSORIES WHILE THE ENGINE IS OFF

- Do not depress the brake pedal (or clutch pedal for Manual Transmission); press the START/STOP button as shown.
- The following symbol will be displayed below the speedometer in the Electronic Vehicle Information Center.

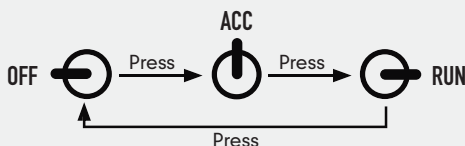

- For more information on using Keyless Go, refer to your Owner's Manual.

Rotate
Blower ControlPush Air
Recirc. ButtonRotate
Temp. ControlPush
A/C ButtonRotate
Mode ControlPush Rear
Window
Defroster
Button


CLIMATE CONTROL

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging turn the recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.


DRIVER POWER SEAT ADJUSTMENT

- The recline switch, located on the outboard side of the seat, controls seatback adjustment.
- The seat switch controls forward/back, up/down, and tilt adjustment.

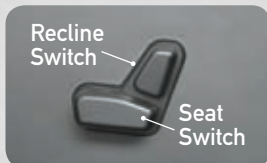

EASY ENTRY PASSENGER SEAT

- Lift the lever, located on the upper corner of the seatback, to fold and move the seat fully forward.

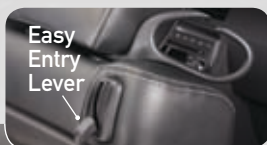

ICLE FEATURES

CLOCK SETTING

NON-TOUCH-SCREEN RADIOS

- Press and hold the TIME button until the hours blink: turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink: turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

TOUCH-SCREEN RADIOS

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where "User Clock" is displayed (Navigation Radio Only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word "Save" is displayed.
- Refer to the navigation radio user manual for additional clock setting procedures.

uconnect™ phone

- uconnect™ phone allows pairing a cellular phone equipped with the Bluetooth® Hands-Free Profile, Version 0.96 or higher. See the www.dodge.com/uconnect website for supported phones. Refer to your Owner's Manual for further information.

MANUAL TRANSMISSION 1 TO 4 SKIPSHIFT

- SKIPSHIFT is enabled when vehicle speed is between 19 MPH (30 km/h) and 21 MPH (34 km/h) and the accelerator pedal is at 1/4 throttle or less.
- For optimal fuel economy, under low acceleration conditions, your vehicle will only allow you to shift from first gear to fourth gear. Additionally, the skip shift message will appear on the Electronic Vehicle Information Center.
- Refer to your Owner's Manual for further information.

EXPRESS DOWN WINDOW FEATURE

- Press the key fob UNLOCK button once and release, then immediately press and hold the UNLOCK button again to lower the driver and passenger front windows to the desired level.

INSTRUMENT



Headlight Switch

Turn Signal/Wipers/
Washer/High Beams Lever

Remote
Audio Controls

Electronic Vehicle
Information Center
(EVIC) Controls & Display

INSTRUMENT PANEL



Engine
Start/Stop
Button/Ignition
Switch

Speed
Control
Lever

Audio System
(Non-Touch-Screen
Radio Shown)

Climate
Controls

Instrument Panel
Lower Switch Panel
Hazard Warning Switch
ESP OFF Switch
Heated Seat Switches

Remote
Audio Controls

FUEL CAP

LOOSE GAS CAP MESSAGE

- If a “gas cap” message (shown as gASCAP or Check Gascap) appears, tighten the gas cap until a “clicking” sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- If one or more of the four road tire pressures are low, the Tire Pressure Monitoring Light will illuminate and an audible chime will sound.
- Check the inflation pressure of each road tire on your vehicle and inflate to the recommended cold pressure value, shown on the placard located in the driver’s door opening. The TPMS display should not be used as a tire pressure gauge when adjusting your tire pressure.
- The light will turn off once the updated tire pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressures causing the TPMS light to turn on.** Colder temperatures will decrease tire pressure and warmer temperatures will increase tire pressure.
- If a spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner’s Manual.

OIL CHANGE INDICATOR

MESSAGE

- If an “oil change” message (shown as CHAnGE Oil or Oil Change Required) appears and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

LE FEATURES



HEADLIGHT SWITCH

AUTOMATIC HEADLIGHTS/PARKING LIGHTS/HEADLIGHTS

- Rotate the headlight switch to the first detent for parking lights and the second detent for headlights.
- Rotate the headlight switch to "A" for AUTO headlights.
- When set to "A" (AUTO), the system automatically turns the headlights on or off based on ambient light levels.

FOG LIGHTS

- Turn the headlights or parking lights on and push the headlight switch once to turn the fog lights on. Push the switch a second time to turn the fog lights off. Fog lights will not operate when high beams are on.
- A fog light symbol will illuminate in the cluster to indicate the fog lights are on.

DIMMER CONTROL

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control up to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio displays when the parking lights or headlights are on. Refer to your multimedia or navigation user manual for display dimming.
- Rotate the dimmer control up to the last detent position to turn on the interior lighting.



SPEED CONTROL LEVER

CRUISE ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- The Speed Control symbol  will appear on the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, press down and release the lever to set a desired speed.

ACCEL/DECEL


- Press and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected set speed in memory, push the lever up and release.

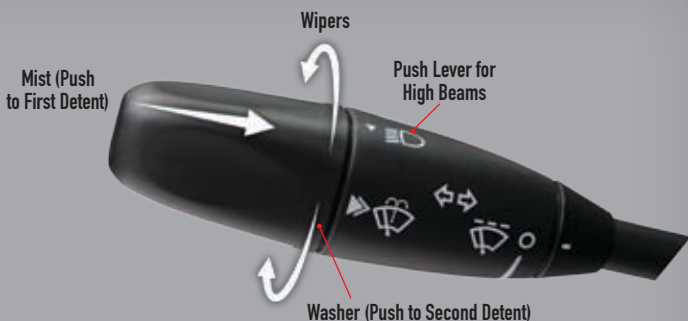

TURN SIGNAL/WIPERS/WASHER/HIGH BEAM LEVER

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times and automatically turn off.

FRONT WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of six intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Mist

- Push the end of the lever inward to the first detent and release when a single wipe is desired.

Washer Operation

- Push the end of the lever inward to the second detent and hold for as long as spray is desired.

HIGH BEAM OPERATION

- Push the lever forward to activate the high beams.

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) CONTROLS

- The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the steering wheel allows the driver to select vehicle information and Personal Settings.
- Refer to Owner's Manual for further details.

81-316-0987



Challenger
First Printing
Quick Reference Guide

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com or your local Dodge dealer.

www.DODGE.com

Dodge is a registered trademark of Chrysler LLC.

