

2009


QUICK REFERENCE GUIDE



DURANGO



DODGE

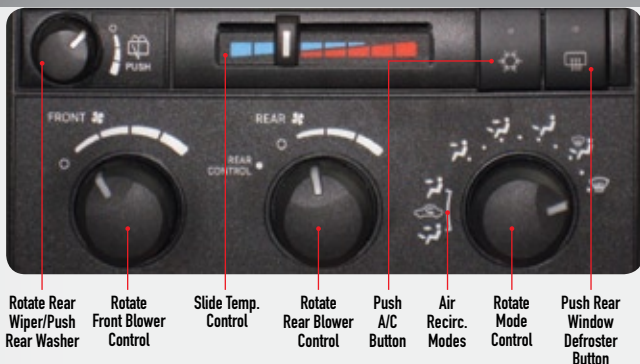

MANUAL CLIMATE CONTROLS

AIR RECIRCULATION


- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- Recirculation is not allowed in defrost or defrost/floor (mix) modes.

ACTIVATING REAR PASSENGER CLIMATE CONTROLS

- Rotate rear blower control, located on the instrument panel, to the “Rear Control” position. This enables the rear passenger climate controls located in the rear of the center console between the front seats.

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) CONTROLS

- The EVIC features a driver interactive display that is located in the overhead console. Pressing the controls on the overhead console allows the driver to select vehicle information and Personal Settings.
- Press the MENU switch to scroll through the menu options.
- Press the STEP switch to enter the selected menu option.
- Where applicable, to change/reset the selected option, press the COMPASS/FUNCTION  button down.
- Refer to Owner's Manual for further details.

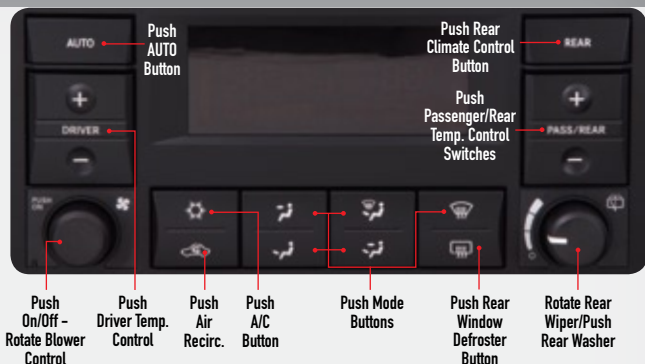

AUTOMATIC TEMPERATURE CONTROL (ATC)

AUTOMATIC OPERATION

- Press the AUTO button to turn the system on.
- Select the desired temperature by pushing the Temperature Control buttons (Driver & Passenger).
- The system will maintain the set temperature automatically.

AIR CONDITIONING (A/C)

- A/C compressor operation is automatic when you press the AUTO button. The A/C symbol  is not displayed in AUTO mode.

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- Recirculation is not allowed in defrost or defrost/floor (mix) modes. If recirculation is selected when the mode control is in defrost or defrost/floor (mix), the recirculation symbol will flash three times indicating recirculation is not available.

ACTIVATING REAR PASSENGER CLIMATE CONTROLS

- Push the rear climate controls button, located on the instrument panel to cycle through the four rear passenger climate control modes:
 - AUTO REAR – System automatically adjusts rear temperature.
 - MANUAL – Driver adjusts rear temperature and blower speed.
 - CONTROL IN REAR – Rear passengers control temperature and blower speed.
 - REAR OFF – No ventilation in rear passenger area.
- The rear passenger climate controls are located in the rear of the center console between the front seats.

FUEL CAP

LOOSE GAS CAP MESSAGE

- If a “gas cap” odometer message (shown as gASCAP) appears, tighten the gas cap until a “clicking” sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- If one or more of the four road tire pressures are low, the Tire Pressure Monitoring Light will illuminate and an audible chime will sound.
- Check the inflation pressure of each road tire on your vehicle and inflate to the recommended cold pressure value, shown on the placard located in the driver’s door opening. The TPMS display should not be used as a tire pressure gauge when adjusting your tire pressure.
- The light will turn off once the updated tire pressure has been recognized. The vehicle may need to be driven for up to 10 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressures, causing the TPMS light to turn on.** Colder temperatures will decrease tire pressure and warmer temperatures will increase tire pressure.
- If a spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner’s Manual.

OIL CHANGE INDICATOR

MESSAGE

- If an “oil change” message (shown as CHAngE Oil or Oil Change Required) appears and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

ICLE FEATURES

CLOCK SETTING

NON-TOUCH-SCREEN RADIOS

- Press and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

TOUCH-SCREEN RADIOS

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where "User Clock" is displayed (Navigation Radio Only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word "Save" is displayed.


DRIVER POWER SEAT ADJUSTMENT

- The recline switch, located on the outboard side of the seat, controls seatback adjustment.
- The seat switch controls forward/back, up/down, and tilt adjustment.

DRIVER MEMORY SEAT

- The memory seat feature allows you to save two different driver seating positions. The memory seat switches are located on the driver's door panel. With the key in the ON/RUN position, push , then 1 or 2 within five seconds.
- Push 1 or 2 to recall the saved positions.
- Key fobs may be programmed to automatically recall position 1 or 2 when UNLOCK is pushed.
- Refer to Owner's Manual for further details.

INSTRUMENT

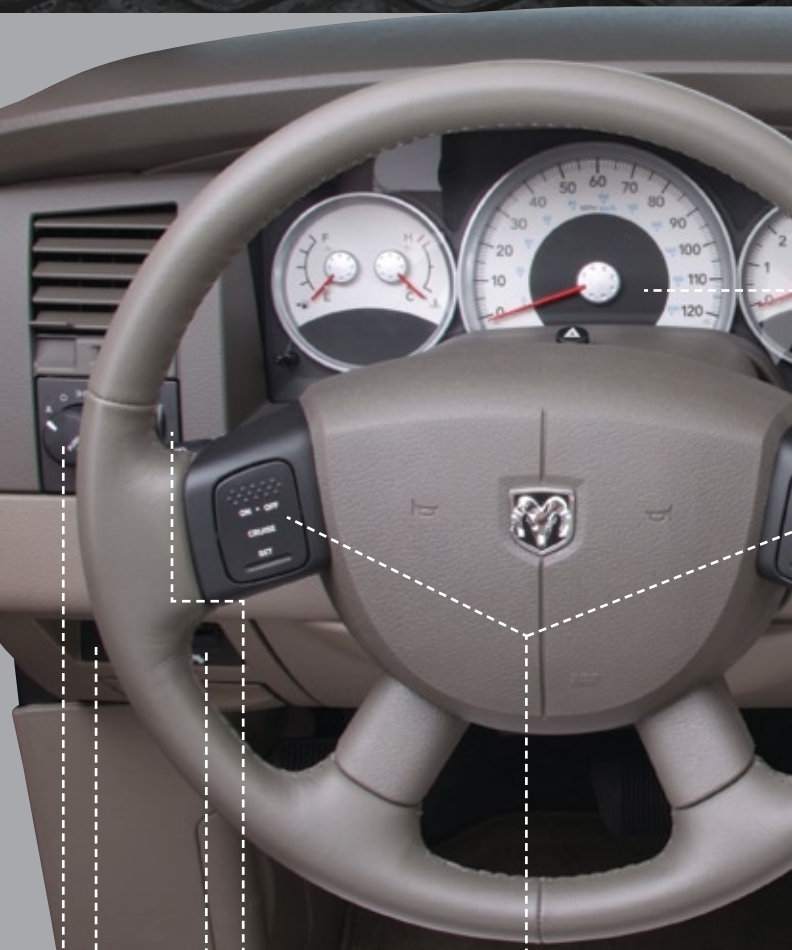

115v
Inverter
Switch


Turn Signals/Wiper/
Washer/High Beams Lever
(Behind Steering Wheel)

Speed Control
Switches

Adjustable
Pedals Switch
(Behind Steering Wheel)

Headlight
Switch

MENT PANEL

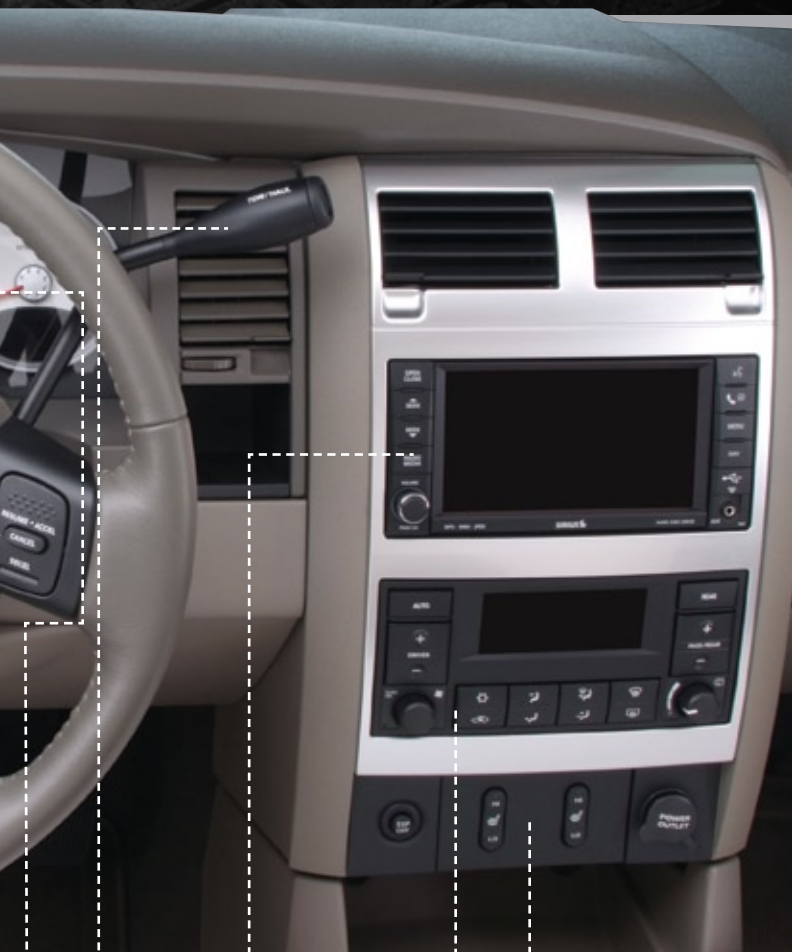

Column
Shift Lever

Instrument Cluster
(Non-Hybrid
Shown)

Audio System
(Touch-Screen
Radio Shown)

Climate
Controls

Switch Panel
Power Outlet
Heated Seat Switches
Electronic Stability Program
(ESP) Off Switch



KEY FOB

LOCKING AND UNLOCKING THE DOORS/LIFTGATE

- Press the LOCK button once to lock all the doors and liftgate.
- Press the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors and liftgate.
- All doors can be programmed to unlock on the first press of the UNLOCK button.
- Refer to Owner's Manual for programming.

POWER LIFTGATE

- The liftgate may be opened or closed manually or by pressing the LIFTGATE button twice within five seconds.

PANIC ALARM

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.

REMOTE START

- Press the REMOTE START button (x2) twice within five seconds.
- To drive the vehicle, press the UNLOCK button, insert the key in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

LE FEATURES



HEADLIGHT SWITCH

AUTOMATIC HEADLIGHTS/PARKING LIGHTS/HEADLIGHTS

- Rotate the headlight switch to the first detent for parking lights and the second detent for headlights.
- Rotate the headlight switch to “A” for AUTO headlights.
- When set to “A” (AUTO), the system automatically turns the headlights on or off based on ambient light levels.

INSTRUMENT PANEL DIMMER

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control up to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio when the parking lights or headlights are on. Refer to your multimedia or navigation user manual for radio display dimming.
- Rotate the dimmer control to the last detent position to turn on the interior lighting.

FOG LIGHTS

- Turn the headlights or parking lights on and push the headlight switch once to turn the fog lights on. Push the switch a second time to turn the fog lights off. Fog lights will not operate when the high beams are on.
- A fog light symbol will illuminate in the cluster to indicate the fog lights are on.



SPEED CONTROL

CRUISE ON/OFF

- Push the ON/OFF switch to activate the Speed Control.
- CRUISE will appear in the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF switch a second time to turn the system off.

SET

- With the Speed Control on, at a desired speed greater than 25 mph (40 km/h), push and release the Set switch.

ACCEL/DECEL

- Push and hold the Resume/Accel switch to accelerate or push and hold the Decel switch to decelerate the vehicle; release the switch to save the new set speed.
- Once a speed is set, pushing the Resume/Accel switch once or Decel switch once will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Push the Cancel switch, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF switch to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected set speed in memory, push the Resume/Accel switch and release.



TURN SIGNALS/WIPER/WASHER/HIGH BEAMS LEVER

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times then automatically turn off.

WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Washer

- Push the end of the lever in and hold for as long as spray is desired.

High Beams

- Pull the lever toward you past the detent to activate the High Beams.
- A High Beam symbol will illuminate in the cluster to indicate the High Beam lights are on.

REAR WIPER/WASHER

- A rotating switch on the Climate Control turns the rear wiper ON/OFF. Pushing this switch inward activates the rear washer.

WIND BUFFETING

- Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.
- If buffeting occurs with the sunroof open, adjust the sunroof opening, or adjust any window. This will minimize the buffeting.

81-316-0991



Durango
First Printing
Quick Reference Guide

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com or your local Dodge dealer.

www.DODGE.com

Dodge is a registered trademark of Chrysler LLC.

