


2009

QUICK REFERENCE GUIDE

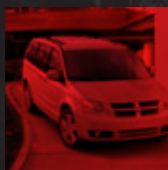

GRAND CARAVAN



DODGE



MANUAL CLIMATE CONTROLS

AIR RECIRCULATION


- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

ACTIVATING REAR PASSENGER CLIMATE CONTROLS

- Rotate the rear blower control, located on the instrument panel, to the “RR” position. This enables the rear passenger climate controls located in the headliner above the second row seats.

uconnect™ phone

- uconnect™ phone requires a cellular phone equipped with the Bluetooth® Hands-Free Profile, Version 0.96 or higher. See the www.dodge.com/uconnect website for supported phones.
- Refer to your Owner's Manual for further information.

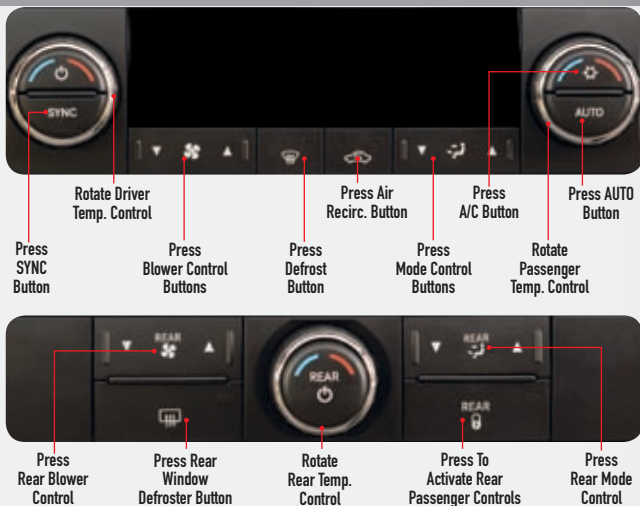

AUTOMATIC TEMPERATURE CONTROL (ATC)

AUTOMATIC OPERATION

- Press the AUTO mode button to activate the ATC system.
- Select the desired temperature by rotating the temperature controls for the driver or passenger.
- The system will maintain the set temperature automatically.

AIR CONDITIONING (A/C)

- If the A/C button is pressed while in AUTO mode, the indicator light may flash three times to indicate the air conditioning is being controlled automatically.

SYNC TEMPERATURE BUTTON

- Press the SYNC button once to control driver and passenger temperatures simultaneously. Press the SYNC button a second time to control the temperatures individually.

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- If the recirculation button is pressed while in the AUTO mode, the indicator light may flash three times to indicate the cabin air is being controlled automatically.

FUEL CAP **LOOSE GAS CAP MESSAGE**

- If a “gas cap” message (shown as gASCAP) appears, tighten the gas cap until a “clicking” sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A Tire Pressure Monitoring Light and a “low tire” message will display in your instrument cluster, along with an audible chime, if one or more of your vehicle’s four road tires are significantly under-inflated.
- Check the inflation pressure of each tire and inflate to the recommended pressure for your vehicle. The tire pressures recommended for your vehicle are found on the “Tire and Loading Information” label located on the driver’s side door opening. The TPMS light should not be used as a tire pressure gauge when adjusting your tire pressure.
- It is recommended that you check the tire pressure in the morning when tires are cool; inflate each tire to the recommended pressure for your vehicle. The light will turn off after your vehicle’s tire pressures are properly inflated and the pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressure, causing the TPMS light to turn on.** Tire pressures will also increase as the vehicle is driven - this is normal and you should not adjust for this increased pressure.
- Driving on under-inflated tires reduces your vehicle’s fuel efficiency and tire tread life. If a spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner’s Manual.

OIL CHANGE INDICATOR**MESSAGE**

- If an “oil change” message (shown as CHAngE Oil or Oil Change Required) appears, and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

CLE FEATURES

CLOCK SETTING

NON-TOUCH-SCREEN RADIOS

- Press and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

TOUCH-SCREEN RADIOS

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where “User Clock” is displayed (Navigation Radio Only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word “Save” is displayed.

POWER SLIDING DOORS

AUTOMATIC/MANUAL OPERATION

- Pull the handle once on the power sliding door for automatic operation and twice for manual operation. Refer to your Owner’s Manual for additional power sliding door features.


SLIDING SIDE DOOR CHILD PROTECTION LOCK

- When this system is engaged, the inside manual door handle will not open the sliding door even though the inside door lock is in the unlocked position.

TO ENGAGE THE CHILD PROTECTION DOOR LOCK

- Open the sliding side door.
- Slide the child protection door lock control, located on the rear of the sliding door, inward (toward the vehicle) to engage.
- Repeat steps on opposite sliding door.

INSTRUMENT

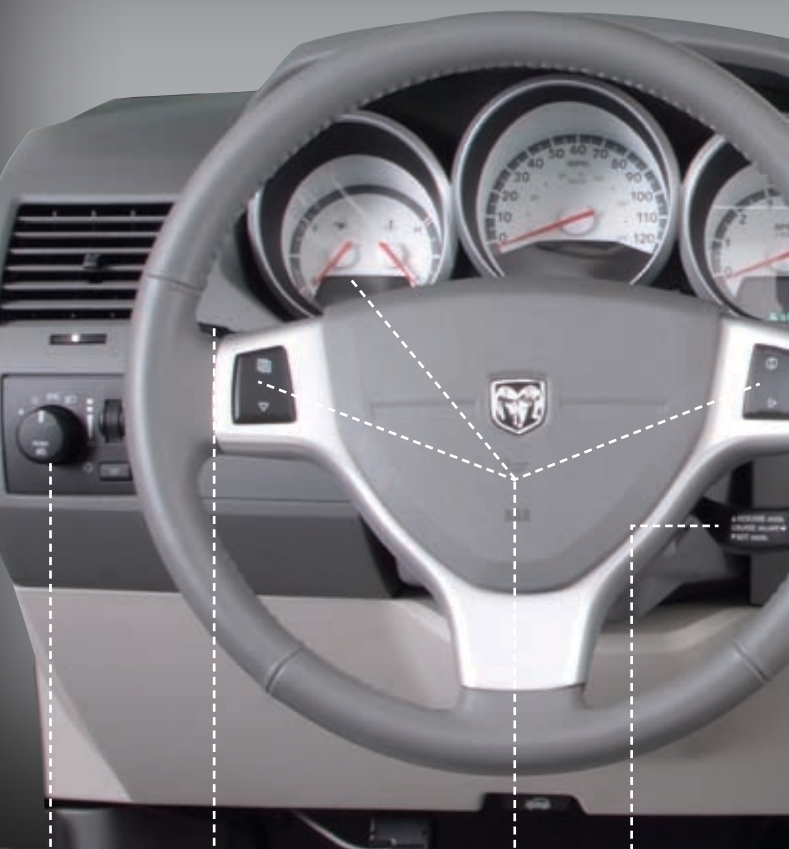

● Headlight Switch/Overhead
(Halo) Light

● Turn Signals/Wipers/Washer Lever
(Behind Steering Wheel)

● Electronic Vehicle
Information Center
(EVIC) Controls
and Display

● Speed
Control
Lever

MENT PANEL



● Gear Shifter
& Electronic
Range Selector*

● Climate
Controls

● Rear Climate Controls

● Audio System
(Touch-Screen Radio Shown)

● Switch Panel

*Refer to Owner's Manual



KEY FOB

POWER LIFTGATE/SLIDING DOORS

- To open/close the power liftgate, press the LIFTGATE button  twice within five seconds.
- To open/close the power sliding doors, press the LEFT/RIGHT sliding door button twice within five seconds.

PANIC ALARM

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.

REMOTE START

- Press the REMOTE START button  twice within five seconds. Pressing the REMOTE START button a third time shuts the engine off.
- To drive the vehicle, press the UNLOCK button, insert the key in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

UNIVERSAL CONSUMER INTERFACE – iPod™

- An iPod™ can be plugged into the vehicle's audio system, using the provided cable, through a connector located in the upper glove box. Refer to your Owner's Manual for operation.

LE FEATURES



HEADLIGHT SWITCH

AUTOMATIC HEADLIGHTS/PARKING LIGHTS/HEADLIGHTS

- Rotate the headlight switch to the first detent for parking lights and to the second detent for headlights.
- Rotate the headlight switch to "A" for AUTO headlights.
- When set to "A" (AUTO), the system automatically turns the headlights on or off based on ambient light levels.

INSTRUMENT PANEL DIMMER

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control up to increase the brightness of the instrument panel when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio when the parking lights or headlights are on. Refer to your Multimedia or Navigation User Manual for display dimming.
- Rotate the dimmer control up to the last detent position to turn on the interior lighting.

OVERHEAD (HALO) LIGHT

- Push the button to turn ON/OFF the overhead (halo) lighting.

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) CONTROLS

- The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the steering wheel allows the driver to select vehicle information and Personal Settings.



SPEED CONTROL LEVER

CRUISE ON/OFF

- Press the ON/OFF button to activate the Speed Control.
- CRUISE will appear on the instrument cluster to indicate the Speed Control is on.
- Press the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, press down and release the lever to set a desired speed.

ACCEL/DECEL

- Press and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you or apply the brakes to cancel the set speed and maintain the set speed memory.
- Press the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected set speed in memory, press the lever up and release.



TURN SIGNALS/WIPERS/WASHER LEVER

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times and automatically turn off.
- Vehicles equipped with Blind Spot Monitoring may be programmed to add a visual alert when signaling a lane change; refer to your Owner's Manual for operation.

FRONT WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Rain Sensing Wipers

- This feature senses moisture on the vehicle's windshield and automatically activates the wipers for the driver when the switch is in the intermittent positions. Refer to Owner's Manual for operation.

Mist

- Push the end of the lever inward to the first detent when a single wipe is desired.

Washer Operation

- Press the end of the lever inward to the second detent and hold for as long as spray is desired.

REAR WIPER

- Rotate the center portion of the lever forward to the first detent for rear wiper operation.

Rear Washer

- Rotate the center portion of the lever past the first detent to activate the rear washer.

MOPAR ACCESSORIES:

The following highlights just some of the Authentic Dodge Accessories by Mopar that have been engineered to customize your Dodge Grand Caravan.

EXTERIOR:

- Running Boards
- Air Deflectors
- Splash Guards
- Vehicle Cover
- Front End Cover

INTERIOR:

- Slush Floor Mats
- Door Sill Guards
- Cargo Tray

ELECTRONICS:

- Rear Seat Video
- uconnect™ web (WiFi)
- SIRIUS Satellite Radio
- Blind Spot Detection
- Park Distance Sensors
- iPod® Adapter

CARRIERS:

- Roof-Mount Carriers
- Hitch Receivers
- Trailering Accessories

To see the full line of accessories, stop by your Dodge dealer or visit **mopar.com**.

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit **mopar.com** or your local Dodge dealer.



81-316-0985
Grand Caravan
Second Printing
Quick Reference Guide

www.DODGE.com

Dodge is a registered trademark of Chrysler LLC.