



2020 JOURNEY QUICK REFERENCE GUIDE

SEATS

STADIUM TIP 'N SLIDE (7 PASSENGER MODELS)


This feature allows passengers to easily enter or exit the third-row passenger seats from either side of the vehicle.

To Move The Second-Row Passenger Seat Forward

NOTE:

Raise the 40% seatback/armrest before moving the 60% seat, to allow for full seat travel.

Move the control lever on the upper outboard side of the seatback forward. Then, in one fluid motion, the seat cushion flips upward and the seat moves forward on its tracks.

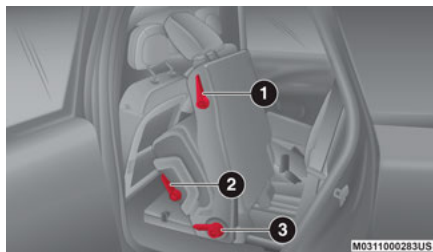

Rear Seat Lever Locations

- 1 — Tip 'n Slide Control Lever
- 2 — Forward/Rearward Adjustment Lever
- 3 — Recliner/Seatback Release Lever

To Unfold And Move The Second-Row Passenger Seat Rearward

1. Move the seatback rearward until it locks in place and then continue sliding the seat rearward on its tracks until it locks in place.
2. Push the seat cushion downward to lock it in place.
3. Adjust the seat track position as desired.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at www.mopar.com/en-us/care/owners-manual.html (U.S. Residents) or www.owners.mopar.ca (Canadian Residents).

COMFORT FEATURES

Heated Seats

The front heated seats controls are located within the climate or controls menu screen of the Uconnect system.

Heated Steering Wheel

The steering wheel contains a heating element that heats the steering wheel to one temperature setting. The heated steering wheel control is located within the Uconnect system. You can gain access to the control buttons through the climate screen or the controls screen.

SPEED CONTROL

SPEED CONTROL

When engaged, the Speed Control takes over accelerator operations at speeds greater than 25 mph (40 km/h).

The Speed Control buttons are located on the right side of the steering wheel.



Speed Control Switches

- 1 — ON/OFF
 - 2 — RES (+)/Resume/Accel
 - 3 — SET (-)/Decel
 - 4 — CANCEL
-

NOTE:

In order to ensure proper operation, the Speed Control system has been designed to shut down if multiple Speed Control functions are operated at the same time. If this occurs, the Speed Control system can be reactivated by pushing the Speed Control ON/OFF button and resetting the desired vehicle set speed.

To Activate

Push the ON/OFF button. The Cruise Control Set Indicator Light in the instrument cluster display will illuminate. To turn the system off, push the ON/OFF button a second time. The Cruise Control Set Indicator Light will turn off. The system should be turned off when not in use.

To Set A Desired Speed

Turn the Speed Control on. When the vehicle has reached the desired speed, push the SET (-) button and release. Release the accelerator and the vehicle will operate at the selected speed.

To Deactivate

A soft tap on the brake pedal, pushing the CANCEL button, or normal brake pressure while slowing the vehicle will deactivate

Speed Control without erasing the set speed memory. Pushing the ON/OFF button or placing the ignition switch in the OFF position erases the set speed in memory.

To Resume Speed

To resume a previously set speed, push the RES (+) button and release. Resume can be used at any speed above 20 mph (32 km/h).

To Increase Speed

When the Speed Control is set, you can increase speed by pushing the RES (+) button.

To Decrease Speed

When the Speed Control is set, you can decrease speed by pushing the SET (-) button.

To Accelerate For Passing

Press the accelerator as you would normally. When the pedal is released, the vehicle will return to the set speed.


PASSIVE ENTRY

KEYLESS ENTER-N-GO — PASSIVE ENTRY

The Keyless Enter-N-Go Passive Entry system is an enhancement to the vehicle's Remote Keyless Entry feature. This feature allows you to lock and unlock the vehicle's door(s) and liftgate without having to push the key fob lock or unlock buttons, as well as starting and stopping the vehicle with the push of a button.

TO UNLOCK FROM THE DRIVER OR PASSENGER SIDE

With a valid Keyless Enter-N-Go key fob located outside the vehicle and within 5 ft (1.5 m) of the driver or passenger side door handle, grab either front door handle to unlock the door automatically.

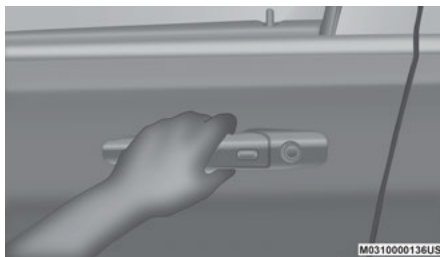

Grab The Door Handle To Unlock

TO LOCK THE VEHICLE

Both front door handles have buttons located on the outside of the handle. With one of the vehicle's Keyless Enter-N-Go key fobs located outside the vehicle and within 5 ft (1.5 m) of the driver's or passenger front door handle, push the door handle button to lock all four doors and liftgate.

Do NOT grab the door handle when pushing the door handle lock button. This could unlock the door(s).

Preventing Inadvertent Locking Of Passive Entry Key Fob In Vehicle (FOBIK-Safe)

To minimize the possibility of unintentionally locking a passive entry key fob inside your vehicle, the passive entry system is equipped with an automatic door unlock feature which will function if the ignition switch is in the OFF position.

FOBIK-Safe only executes in vehicles with passive entry. There are three situations that trigger a FOBIK-Safe search in any passive entry vehicle:


- A lock request is made by a valid passive entry key fob while a door is open
- A lock request is made by the passive entry door handle while a door is open
- A lock request is made by the door panel switch while the door is open

When any of these situations occur, after all open doors are shut, the FOBIK-Safe search will be executed. If it finds a passive entry key fob inside the car, the car will unlock and alert the customer.

NOTE:

The vehicle will only unlock the doors when a valid passive entry key fob is detected inside the vehicle. The vehicle will not unlock the doors when any of the following conditions are true:

- The doors are manually locked using the door lock knobs.
- Three attempts are made to lock the doors using the door panel switch and then close the doors.

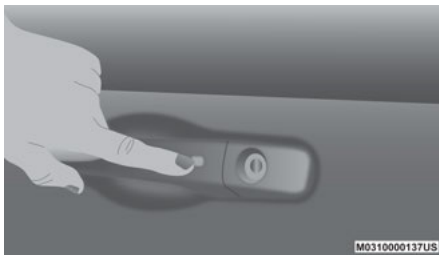

Push The Door Handle Button To Lock



Do NOT Grab The Handle When Locking

NOTE:

- After pushing the door handle button, you must wait two seconds before you can lock or unlock the doors, using either passive entry door handle. This is done to allow you to check if the vehicle is locked by pulling the door handle without the vehicle reacting and unlocking.
- If Passive Entry is disabled using Uconnect System, the key protection described in "Preventing Inadvertent Locking of Passive Entry Key Fob in Vehicle" remains active/functional.
- The Passive Entry system will not operate if the key fob battery is depleted.

LOCK OR UNLOCK THE LIFTGATE

With a valid Keyless Enter-N-Go key fob within 5 feet (1.5 meters) of the liftgate, push the electronic liftgate lock/unlock pad located to the left of the liftgate handle to unlock the liftgate. Push the button a second time to lock the liftgate.



Electronic Liftgate Lock/Unlock Pad

REMOTE START

REMOTE START — IF EQUIPPED

Push the remote start button (Ⓜ) on the key fob twice within five seconds. Pushing the remote start button a third time shuts the engine off.

With Remote Start, the engine will only run for 15 minutes (timeout) unless the keyless ignition is placed in the ON/RUN position.

Before the end of 15 minute cycle, push and release the unlock button on the key fob to unlock the doors and disarm the vehicle security alarm (if equipped). Then, prior to the end of the 15 minute cycle, push and release the START/STOP ignition button.

The vehicle must be started with the key fob after two consecutive timeouts.

SAFETY FEATURES

PARKVIEW REAR BACK UP CAMERA

You can see an on-screen image of the rear of your vehicle whenever the gear selector is put into REVERSE. The ParkView Rear Back Up Camera image appears on the display screen located on the center stack of the instrument panel.

NOTE:

If the display screen appears foggy, clean the camera lens located on the rear of the vehicle above the license plate.

INSTRUMENT CLUSTER DISPLAY

INSTRUMENT CLUSTER DISPLAY

The instrument cluster display features a driver interactive display that is located in the instrument cluster. Pushing the controls on the left side of the steering wheel allows the driver to select vehicle information and Personal Settings.



Instrument Cluster Display Controls

- 1 – Up Arrow Button
- 2 – Right Arrow Button
- 3 – BACK Button
- 4 – Down Arrow Button

- Push the **up** arrow button to scroll upward through the main menus (Fuel Economy, Vehicle Speed, Trip Info, Vehicle Info, Messages, Units, System Set-Up, Turn Menu Off) and sub menus.
- Push the **down** arrow button to scroll downward through the main menus and sub menus.
- Push the **right** arrow button for access to main menus, sub menus or to select a personal setting in the setup menu.
- Push the **BACK** button to scroll back to a previous menu or sub menu.

SELECTABLE MENU ITEMS

The instrument cluster features a driver interactive display that is located in the center of the instrument cluster. Pushing the controls on the left side of the steering wheel allows the driver to select vehicle information and Personal Settings. Push the up or down arrow buttons to scroll through the main menu feature items. To enter the submenus of a feature menu item, push the right arrow button then push the right arrow button to select or reset the submenu feature items:

- Radio Info
- Vehicle Info
- Fuel Economy
- Trip Info
- Tire Pressure
- Messages
- Vehicle Speed
- Turn Menu Off

AUTOMATIC CLIMATE CONTROLS — IF EQUIPPED

AUTO BUTTON



- Push the AUTO button on the Integrated Center Stack (ICS) Climate Controls, OR on the radio touchscreen when viewing the Climate Controls Main Screen.
- Select the desired temperature by pushing the up or down temperature buttons for the driver or passenger.
- The system will maintain the set temperature automatically.

AIR CONDITIONING A/C

- If the A/C button is pushed while in AUTO mode, the system will exit AUTO mode and stay in A/C. The mode and blower will retain the closest mode and blower position to those used in AUTO.
- MAX A/C sets the control for maximum cooling performance.
- Press and release to toggle between MAX A/C and the prior settings. The button on the touchscreen illuminates when MAX A/C is on.
- In MAX A/C, the blower level and mode position can be adjusted. Pushing other settings will cause the MAX A/C operation to switch to the prior settings and turn MAX A/C off.

SYNC TEMPERATURE BUTTON

- Press the “SYNC” button on the touchscreen to control the driver and passenger temperatures simultaneously. Press the “SYNC” button on the touchscreen a second time to control the temperatures individually.

AIR RECIRCULATION

- Use Recirculation for maximum A/C operation.
- For window defogging, turn the recirculation button off.
- If the recirculation button is pushed while in the AUTO mode, the indicator light may flash three times to indicate the cabin air is being controlled automatically.

STEERING WHEEL AUDIO CONTROLS

LOCATION

The steering wheel audio controls are located on the rear surface of the steering wheel.



Steering Wheel Audio Controls

FUNCTION

Right Switch


- Push the switch up or down to increase or decrease the volume.
- Push the button in the center to change modes AM/FM/CD/SAT.

Left Switch

- Push the switch up or down to search for the next listenable station.
- Push the button in the center to select the next preset station.

FRONT USB PORT/AUDIO JACK (AUX) PORT

USB PORT

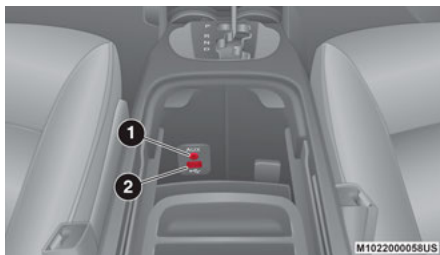

Center Console Media Hub

- 1 — AUX Port
 - 2 — USB Port
-

This feature allows an iPod® or external USB device to be plugged into the USB port. The USB port supports certain iPod® and iPhone® devices. The USB port also supports playing music from external USB devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's® website for iPod® software updates. Connect your iPod® or compatible device using a USB cable connected to the USB port. USB memory sticks with audio files can also be used. Then, audio from the device can be played on the vehicle's sound system while providing the artist, track title, and album information on the radio display (if available on device). When connected, the iPod®/USB device can be controlled using the radio or steering wheel audio controls to play, skip to the next or previous track, browse, and list the contents.

AUX/AUDIO JACK

The AUX/audio jack provides a means to connect a portable audio device, such as an MP3 player, to the vehicle's sound system. This requires the use of a 3.5 mm stereo audio patch cable. AUX mode is entered by pushing the Media button. Once in Media mode, select the AUX button when the audio jack is connected. Volume on the connected device may need to be adjusted to optimize audio quality.

DRIVE DODGE MOBILE APP

NOTE:

The Owner's Mobile App content is applicable to vehicles sold in the US market and are not available from the Canadian App Store® or Google Play Store.

KEY FEATURES

- Owner Information For Your Vehicle
- Accident Assistant
- Online Service Scheduling
- Roadside Assistance
- Maintenance History
- And More

To get this FREE application, go directly to the App Store® or Google Play Store and enter the search keyword "Dodge".

The DRIVE DODGE Application is the essential app for owners of Dodge brand vehicles. The app puts driver and lifestyle information right in the palm of your hand, anywhere you

go. Whether it's providing information about specific product features, taking a tour through your vehicle's equipment, staying up to date on your vehicle's health, knowing what steps to take following an accident, or scheduling your next appointment, we know you'll find the app an important extension of your Dodge vehicle. Simply download the FREE app, select your make and model and enjoy the ride.

FEATURES/BENEFITS

- Available for free on iOS and Android™ smartphones and tablets.
- Select Dodge brand vehicles from model year 2011 to current model year.
- You can also add other Chrysler, Jeep®, Ram, FIAT or Alfa Romeo vehicles.*
- Easy access to vehicle information anywhere you go using categories, bookmarks, search and an A-Z index.
- Vehicle information such as operating instructions, maintenance, service history, vehicle controls and emergency procedures.

- Find a dealer or an FCA-certified repair facility.
- Easily document and email an accident report.
- A parking reminder that allows you to drop a pin on your location and navigate back to your vehicle.
- Contact customer care with one click.
- Access to vehicle heritage, parts, accessories, and social media networks.
- Schedule your next service appointment.
- Available in English and Spanish.

*App supports selected vehicles from model year 2011 to present.

To get this FREE application, go directly to the App Store® or Google Play Store and enter the search keyword "Dodge".



Whether it's providing information about specific product features, taking a tour through your vehicle's heritage, knowing what steps to take following an accident or scheduling your next appointment, we know you'll find the app an important extension of your Dodge brand vehicle.

Simply download the app, select your make and model and enjoy the ride. To get this app, go directly to the App Store® or Google Play® Store and enter the search keyword "Dodge" (U.S. residents only).

U. S.



mopar.com/om

**DOWNLOAD A FREE ELECTRONIC COPY OF THE MOST UP-TO-DATE
OWNER'S MANUAL, UCONNECT AND WARRANTY BOOKLETS**

Canada



owners.mopar.ca

©2019 FCA US LLC. ALL RIGHTS RESERVED. TOUS DROITS RÉSERVÉS.

DODGE IS A REGISTERED TRADEMARK OF FCA US LLC OR FCA CANADA INC., USED UNDER LICENSE. DODGE EST UNE MARQUE DÉPOSÉE DE FCA US LLC OU FCA CANADA INC., UTILISÉE SOUS LE PERMIS.

APP STORE IS A REGISTERED TRADEMARK OF APPLE INC. GOOGLE PLAY STORE IS A REGISTERED TRADEMARK OF GOOGLE.