

2009
QUICK REFERENCE GUIDE



RAM¹⁵⁰⁰



DODGE



MANUAL CLIMATE CONTROLS

AIR RECIRCULATION / MAX A/C

- Rotate the Temperature Control to the MAX A/C position to automatically turn on both Air Conditioning and Recirculation.
- For window defogging push the recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

ELECTRONIC RANGE SELECT (ERS)

- ERS allows you to limit the highest available gear when the shift lever is in the DRIVE position.
- Move the console shift lever left (-) or right (+), or toggle the switch on the column shift lever down (-) or up (+) to select the desired top gear.
- For maximum deceleration (engine braking) move the console shift lever left (-), or toggle the switch on the column shift lever down (-). Your vehicle will automatically select the lowest safe gear for optimal engine braking.
- To disable ERS, push and hold the console shift lever to the right (+) or push and hold the column shift lever switch up (+) until "D" is displayed in the odometer.

uconnect™ phone

- uconnect™ phone is a voice-activated, hands-free, in-vehicle, communications system. uconnect™ phone allows you to dial a phone number with your cellular phone using voice commands.
- uconnect™ phone allows a cellular phone equipped with the Bluetooth® Hands-Free Profile, Version 0.96 or higher. See the www.dodge.com/uconnect website for supported phones. Refer to your Owner's Manual for further information.



AUTOMATIC TEMPERATURE CONTROL (ATC)

- Rotate both the Mode Control and Blower Control to the AUTO position.
- Select the desired temperature by pushing the up or down temperature buttons for the driver or passenger.
- The system will maintain the set temperature automatically.

AIR CONDITIONING (A/C) ❄️

- If the A/C button is pushed while in the AUTO mode, the indicator light may flash three times to indicate the cabin air is being controlled automatically.

SYNC TEMPERATURE BUTTON

- Push the SYNC button once to control the driver and passenger temperatures simultaneously. Push the SYNC button a second time to control the temperatures individually.

AIR RECIRCULATION 🚗

- Use recirculation for maximum A/C operation.
- For window defogging push the recirculation off.
- If the recirculation button is pushed while in the AUTO mode, the indicator light may flash three times to indicate the cabin air is being controlled automatically.



DRIVER POWER SEAT ADJUSTMENT

POWER SEAT

- The recline switch, located on the outboard side of the seat, controls seatback adjustment.
- The seat switch controls forward/back, up/down, and tilt adjustment.

POWER LUMBAR

- Push the front of the switch to increase the lumbar support; push the back of the switch to decrease lumbar support.

DRIVER MEMORY SEAT

- The memory seat feature allows you to save two different driver seating positions. With the key in the ON/RUN position, push (S), then 1 or 2 within five seconds.
- Push 1 or 2 to recall the saved positions.
- Key fobs may be programmed to automatically recall position 1 or 2 when UNLOCK is pushed.
- Refer to your Owner's Manual for programming instructions.

CLE FEATURES

CLOCK SETTING

NON-TOUCH-SCREEN RADIO

- Push and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Push the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Push the TUNE/SCROLL control knob to save the time change.

TOUCH-SCREEN RADIO

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where "User Clock" is displayed (Navigation radio only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word "Save" is displayed.

KEY FOB

REMOTE START

- Push the REMOTE START button  twice within five seconds. Pushing the REMOTE START button a third time shuts the engine off.
- To drive the vehicle, push the UNLOCK button, insert the key in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

PANIC ALARM

- Push the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and push the button a second time to turn the panic alarm off.

INSTRUMENT



Headlight Switch

Turn Signal/
Wiper/Washer/
High Beam Lever
(Behind Steering Wheel)

Electronic Vehicle
Information Center
(EVIC) Controls
and Display

Speed
Control
Lever

Ignition
Switch

MENT PANEL



Electronic Range Selection
(On Shifter Lever)

Audio System
(Touch-Screen
Radio Shown)

Lower Switch Panel
Heated Steering
Wheel Switch
Park Assist Switch
Heated Seat Switches

Climate
Controls

Upper Switch Panel
Tow/Haul Switch
ESP Off Switch
Hazard Warning
Flasher Switch
115V Power
Inverter Switch
Rear Park Assist
Switch

FUEL CAP

LOOSE GAS CAP MESSAGE

- If a loose gas cap symbol  appears, tighten the gas cap until a “clicking” sound is heard.
- If the symbol continues to appear for more than three days after tightening the gas cap, see your dealer.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A Tire Pressure Monitoring Light and a “low tire” message will display in your instrument cluster, along with an audible chime, if one or more of your vehicle’s four road tires are significantly under-inflated.
- Check the inflation pressure of each tire and inflate to the recommended pressure for your vehicle. The tire pressures recommended for your vehicle are found on the “Tire and Loading Information” label located on the driver’s side door opening. The TPMS light should not be used as a tire pressure gauge when adjusting your tire pressure.
- It is recommended that you check the tire pressure in the morning when tires are cool; inflate each tire to the recommended pressure for your vehicle. The light will turn off after your vehicle’s tire pressures are properly inflated and the pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressure, causing the TPMS light to turn on.** Tire pressures will also increase as the vehicle is driven - this is normal and you should not adjust for this increased pressure.
- Driving on under-inflated tires reduces your vehicle’s fuel efficiency and tire tread life. If a spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner’s Manual.

OIL CHANGE INDICATOR

MESSAGE

- If an “oil change” message (shown as CHAnGE Oil or Oil Change Required) appears and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

LE FEATURES



HEADLIGHT SWITCH

INSTRUMENT PANEL DIMMER

- Rotate the dimmer control to the extreme left position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control to the right to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the dimmer control to the right to the next detent position to fully brighten the odometer and radio displays when the parking lights or headlights are on. Refer to your Multimedia or Navigation User Manual for radio display dimming.
- Rotate the dimmer control to the right to the last detent position to turn on the interior lighting.

CARGO LIGHT

- Push the button once to turn the cargo light on; push a second time to turn the light off.
- A cargo light symbol will illuminate in the cluster to indicate the cargo light is on.

FOG LIGHTS

- Turn the headlights or parking lights on and push the headlight switch once to turn the fog lights on. Push the switch a second time to turn the fog lights off. Fog lights will not operate when high beams are on.
- A fog light symbol will illuminate in the cluster to indicate the fog lights are on.



SPEED CONTROL LEVER

CRUISE ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- A Speed Control symbol will appear in the cluster to indicate the Speed Control is on.
- Push the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, push down and release the lever to set a desired speed.

ACCEL/DECEL


- Push and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected speed in memory, push the lever up and release.

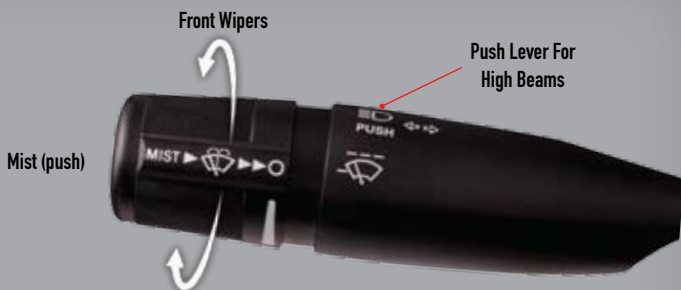

TURN SIGNALS/WIPERS/WASHERS/HIGH BEAM LEVER

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times then automatically turn off.

WIPERS

Intermittent, High and Low operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Mist

- Push the end of the lever inward to the first detent for a single wipe to clear mist.

Washer operation

- Push the end of the lever inward to the second detent to spray washer fluid and operate the wipers.

High Beams

- Push the lever forward to activate the High Beams.
- A High Beam symbol will illuminate in the cluster to indicate the High Beam lights are on.

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) CONTROLS

- The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the steering wheel allows the driver to select vehicle information and Personal Settings.

MOPAR ACCESSORIES:

The following highlights just some of the Authentic Dodge Accessories by Mopar that have been engineered to customize your Dodge Ram.

CHROME:

- Tubular Side Steps
- Front Air Deflectors
- Bodyside Moldings
- Wheels
- Bed Rails
- Grille

BEDS:

- Bed Caps
- Bed Liners
- Tonneau Covers

EXTERIOR:

- Body Kit
- Hood
- Running Boards
- Front Air Deflectors
- Splash Guards
- Trailering Accessories

ELECTRONICS:

- uconnect™ web (WiFi)
- SIRIUS Satellite Radio
- iPod® Adapter
- Rear Seat Video
- Heated Seats
- Lighting Accents

To see the full line of accessories, stop by your Dodge dealer or visit mopar.com.

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit mopar.com or your local Dodge dealer.



81-316-0980
Ram 1500
Second Printing
Quick Reference Guide

www.DODGE.com

Dodge is a registered trademark of Chrysler LLC.