

Maintenance Schedule

(Miles) Kilometers [Months]	(7,500) 12 000 [6]	(15,000) 24 000 [12]	(22,500) 36 000 [18]	(30,000) 48 000 [24]	(37,500) 60 000 [30]
Change engine oil and engine oil filter. (Under no circumstances should oil change intervals exceed 12 000 km (7,500 mi) or 6 months, which ever comes first).	X	X	X	X	X
Lubricate Front Drive Shaft Fitting (4X4).	X	X	X	X	X
Rotate tires.	X	X	X	X	X
Lubricate outer tie rod ends.	X	X	X	X	X
Inspect the transfer case fluid (4X4).				X	
Change front and rear axle fluid (4X4).		X		X	
Replace fuel filter element.		X		X	
Inspect the brake linings, replace if necessary.			X		
Inspect and adjust parking brake if necessary.			X		
Inspect front wheel bearings.				X	
Inspect drive belt, replace as necessary.			X		

488 MAINTENANCE SCHEDULES

(Miles) Kilometers [Months]	(45,000) 72 000 [36]	(52,500) 84 000 [42]	(60,000) 97 000 [48]	(67,500) 109 000 [54]	(75,000) 121 000 [60]
Change engine oil and engine oil filter.	X	X	X	X	X
Lubricate Front Drive Shaft Fitting (4X4).	X	X	X	X	X
Rotate tires.	X	X	X	X	X
Lubricate outer tie rod ends.	X	X	X	X	X
Change the transfer case fluid (4X4).			X		
Change front and rear axle fluid (4X4).	X		X		X
Change the automatic transmission fluid & filter if using your vehicle for any of the following: police, taxi, fleet or frequent trailer towing.			X		
Change manual transmission fluid.			X		
Flush and replace engine coolant at 60 months, if not replaced at 100,000 miles (160 000 km).***					X
Inspect drive belt, replace as necessary.	X				X
Replace fuel filter element.	X		X		X

(Miles) Kilometers [Months]	(45,000) 72 000 [36]	(52,500) 84 000 [42]	(60,000) 97 000 [48]	(67,500) 109 000 [54]	(75,000) 121 000 [60]
Inspect the brake linings, replace if necessary.	X			X	
Inspect and adjust parking brake if necessary.	X			X	
Inspect front wheel bearings.			X		
Replace Crankcase Ventilation Filter (CCV).				X	
Clean EGR Valve**.				X	
Clean EGR Cooler**.				X	

490 MAINTENANCE SCHEDULES

(Miles) Kilometers [Months]	(82,500) 133 000 [66]	(90,000) 145 000 [72]	(97,500) 157 000 [78]	(100,000) 160 000	(105,000) 169 000 [84]
Change engine oil and engine oil filter.	X	X	X		X
Lubricate Front Drive Shaft Fitting (4X4).	X	X	X		X
Rotate tires.	X	X	X		X
Lubricate outer tie rod ends.	X	X	X		X
Flush and replace engine coolant, if not replaced at 60 mos.***				X	
Inspect the transfer case fluid (4X4).		X			
Change front and rear axle fluid (4X4).		X			X
Inspect drive belt, replace as required.*		X			X
Replace fuel filter element.		X			X
Inspect front wheel bearings.		X			
Inspect brake linings.		X			X
Inspect and adjust parking brake if necessary.		X			X

(Miles) Kilometers [Months]	(112,500) 181 000 [90]	(120,000) 193 000 [96]	(127,50) 205 0000 [102]	(135,000) 217 000 [108]	(142,500) 229 000 [114]	(150,000) 241 000 [120]
Change engine oil and engine oil filter.	X	X	X	X	X	X
Lubricate Front Drive Shaft Fitting (4X4).	X	X	X	X	X	X
Rotate tires.	X	X	X	X	X	X
Lubricate outer tie rod ends.	X	X	X	X	X	X
Flush and replace engine coolant at 120 months, if not replaced at 100,000 miles (161 000 km).***						X
Inspect drive belt, replace as required.*		X		X		X
Change transfer case fluid (4X4).		X				
Check transfer case fluid level (4X4).						X
Change front and rear axle fluid (4X4).		X		X		X
Change the automatic transmission fluid & filter.		X				X
Change manual transmission fluid.		X				
Replace fuel filter element.		X		X		X
Inspect front wheel bearings.		X			X	

492 MAINTENANCE SCHEDULES

(Miles) Kilometers [Months]	(112,500) 181 000 [90]	(120,000) 193 000 [96]	(127,50) 205 0000 [102]	(135,000) 217 000 [108]	(142,500) 229 000 [114]	(150,000) 241 000 [120]
Inspect the brake linings, replace if necessary.	X			X		
Inspect and adjust parking brake if necessary.	X			X		
Adjust valve lash clearance.						X
Replace Crankcase Ventilation Filter (CCV).				X		
Clean the EGR Valve.				X		
Clean the EGR Cooler.				X		

Inspection and service should also be performed anytime a malfunction is observed or suspected. Retain all receipts.

*This maintenance is not required if belt was previously replaced.

**The EGR Valve and EGR Cooler maintenance will be covered by the manufacturer only at this maintenance interval, for vehicles registered in California, Maine, Massachusetts, New York and Vermont.

CAUTION!

*****The manufacturer highly recommends that all cooling system service, maintenance, and repairs be performed by your local authorized dealer.**

WARNING!

You can be badly injured working on or around a motor vehicle. Do only that service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.