


2009

QUICK REFERENCE GUIDE

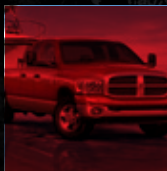


RAM

TRUCK 2500/3500 GAS



DODGE

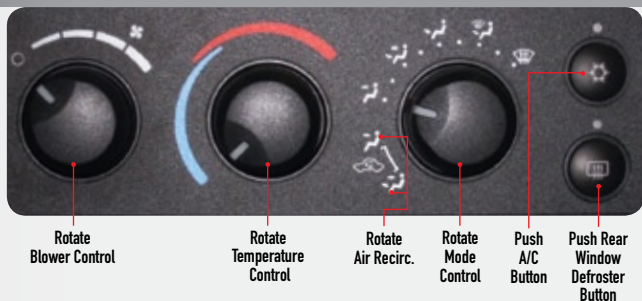

SINGLE ZONE CLIMATE CONTROL

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- Recirculation is not allowed in defrost or defrost/floor (mix) modes.

FUEL CAP

LOOSE GAS CAP MESSAGE

- If a “gas cap” odometer message (shown as gASCAP) appears, tighten the gas cap until a “clicking” sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.


OIL CHANGE INDICATOR

MESSAGE

- If an “oil change” message (shown as CHANgE Oil) appears and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

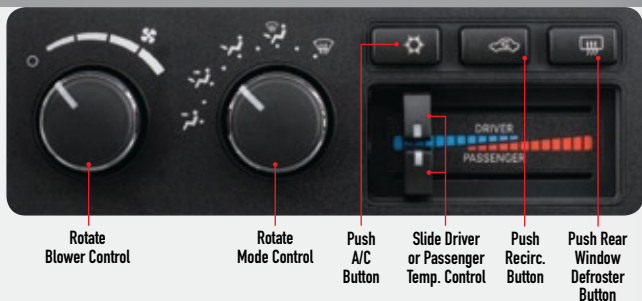

DUAL ZONE CLIMATE CONTROL

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging, turn recirculation off.
- Recirculation is not allowed in defrost or defrost/floor (mix) modes.

DRIVER POWER SEAT ADJUSTMENT

- The seat switch, located on the outboard side of the seat, controls forward/back, up/down, and tilt adjustment.


DRIVER MANUAL RECLINE ADJUSTMENT

- Lift the rear lever, located on the outboard side of the seat, lean back and release at the desired position.



LUMBAR ADJUSTMENT

- Rotate the dial located on the outboard side of the seatback to adjust lumbar (lower back) support.

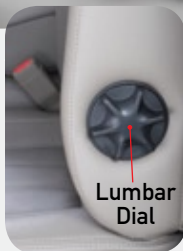

TIRE PRESSURE MONITORING SYSTEM (TPMS) - 2500 ONLY**DESCRIPTION**

- The Tire Pressure Monitoring System (TPMS) on your vehicle has two different tire pressure settings based on vehicle loading. The Tire Light Load Inflation switch is located on the instrument panel below the climate controls.
- The "Light Load Inflation" and "Max Load Inflation" tire pressures recommended for your vehicle based on vehicle loading are found on the Supplemental Tire Pressure Information label located on the rear face of the driver's front door.
- When the vehicle is in the "Light Load Inflation" setting, the Tire Light Load Inflation switch indicator light is ON. The indicator light is OFF when in the "Max Load Inflation" setting.

LIGHT LOAD INFLATION (INDICATOR LIGHT ON)

- If the passenger and cargo are less than the Light Load Pressure definition shown on the Supplemental Tire Pressure Information label, inflate or deflate your tires to the correct "Light Load Inflation" pressure. If the indicator light is not on, reset by pushing the switch once. Additionally, the "Tire Pressure LT Load Set" message will appear in the overhead console.
- If the light on the switch flashes ON and OFF, the system will not allow switching mode settings until the tire pressures have been set to the Light Load Inflation as indicated on the Supplemental Tire Pressure Information label.

MAX LOAD INFLATION (INDICATOR LIGHT OFF)

- If the passenger and cargo exceed the Light Load Pressure definition shown on the Supplemental Tire Pressure Information label, inflate or deflate your tires to the correct "Max Load Inflation" pressure. If the indicator light is on, reset by pushing the switch once. Additionally, the "Tire Pressure Max Load Set" message will appear in the overhead console.
- If the tire pressure monitoring light and a "low tire" message appears in the cluster, inflate the tire pressures to the "Max Load Inflation" setting as indicated on the Supplemental Tire Pressure Inflation label.

VEHICLE FEATURES

TIRE PRESSURE MONITORING SYSTEM (TPMS) - 2500 ONLY



TPMS MESSAGES

- A Tire Pressure Monitoring Light and a “low tire” message will display along with an audible chime if one or more of your vehicle’s four road tires are significantly under-inflated when operating in either TPMS mode.
- It is recommended that you check the tire pressure in the morning when the tires are cool; inflate each tire to the recommended pressure for your vehicle. The light will turn off after your vehicle’s tire pressures are properly inflated and the pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before light will turn off.
- **Temperature changes can affect tire pressures, causing the TPMS light to turn on.** Tire pressures will also increase as the vehicle is driven – this is normal and you should not adjust for this increased pressure.
- Driving on under-inflated tires reduces your vehicle’s fuel efficiency and tire tread life. If your spare tire is in use on the vehicle, the TPMS light may turn on. Refer to your Owner’s Manual.

CLOCK SETTING

NON-NAVIGATION RADIO

- Press and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

NAVIGATION RADIO

- The Navigation radio automatically updates clock time via Global Positioning Satellite (GPS).
- Press and hold the TIME button for three seconds to enter the Clock Setup Screen.
- Highlight “Displayed Clock: User Defined Clock” and press ENTER.
- Highlight the “HR+” or “-” and press ENTER to adjust hours or highlight the “MIN+” or “-” and press ENTER to adjust minutes.
- Select DONE to exit from the clock setting mode and press ENTER to save your changes.

INSTRUMENT



● Speed Control Switches

● Turn Signals/Wiper/Washer/
High Beams Lever
(Behind Steering Wheel)

● Column
Shift Lever

● Adjustable
Pedal Switch
(Behind Steering Wheel)

● Headlight Switch
(Behind Steering Wheel)

MENT PANEL



Four-Wheel
Drive Switch

Audio System
(Navigation
Radio Shown)

Climate
Controls

Lower Switch Panel
Heated Seat Switches
Power Sliding Back Glass Switch
ESP Off Switch
Tire Light Load Inflation Switch

VEHIC



KEY FOB

LOCKING AND UNLOCKING THE DOORS

- Push the LOCK button once to lock all doors.
- Push the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors.
- All doors can be programmed to unlock on the first push of the UNLOCK button.
- Refer to the Owner's Manual for programming.

PANIC ALARM

- Push the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and push the button a second time to turn the panic alarm off.

REMOTE START (AUTOMATIC ONLY)

- Push the REMOTE START button (x2) twice within five seconds.
- To drive the vehicle, push the UNLOCK button, insert the key in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

uconnect™ phone

- uconnect™ phone requires a cellular phone equipped with the Bluetooth® Hands-Free Profile, Version 0.96 or higher. See the www.dodge.com/uconnect website for supported phones. Refer to your Owner's Manual for further information.

LE FEATURES



HEADLIGHT SWITCH

PARKING LIGHTS/HEADLIGHTS

- Rotate the headlight switch to the first detent for parking lights and the second detent for headlights.

INSTRUMENT PANEL DIMMER

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is open.
- Rotate the dimmer control up to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio displays when the parking lights or headlights are on.
- Rotate the dimmer control to the last detent position to turn on the interior lighting.

FOG LIGHTS

- Turn the headlights or parking lights on and push the headlight switch once to turn the fog lights on. Push the switch a second time to turn the fog lights off. Fog lights do not operate when the high beams are on.
- A fog light symbol will illuminate in the cluster to indicate the fog lights are on.

CARGO LIGHT

- Push the button once to turn the cargo light on; push a second time to turn the light off.
- A cargo light symbol will illuminate in the cluster to indicate the cargo light is on.



SPEED CONTROL

CRUISE ON/OFF

- Push the ON/OFF switch to activate the Speed Control.
- CRUISE will appear on the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF switch a second time to turn the system off.

SET

- With Speed Control on, push and release the Set switch to set a desired speed.

ACCEL/DECEL


- Push and hold the Resume/Accel switch to accelerate or push and hold the Decel switch to decelerate the vehicle; release the switch to save the new set speed.
- Once a speed is set, pushing the Resume/Accel switch once or Decel switch once will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Push the Cancel switch, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF switch to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected set speed in memory, push the Resume/Accel switch and release.

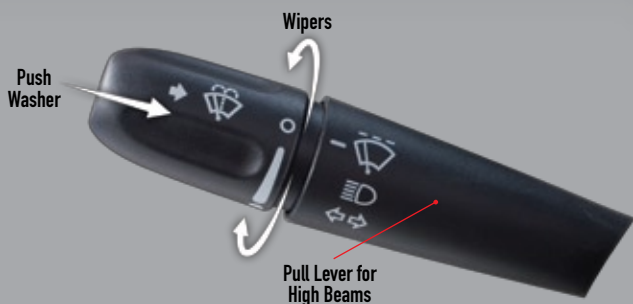

TURN SIGNALS/WIPER/WASHER/HIGH BEAMS LEVER

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times then automatically turn off.

WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Washer

- Push in on the end of the lever and hold for as long as spray is desired.

HIGH BEAMS

- Pull the lever toward you to activate the High Beams.
- A High Beam symbol will illuminate in the cluster to indicate the High Beam lights are on.

TILT STEERING WHEEL

- The control handle is located behind the steering wheel at the end of the steering column.
- To unlock, pull the handle toward you.
- Move the steering wheel up or down to the desired position, then push the handle away from you to lock into place.

81-316-0995



Ram 2500/3500
First Printing
Quick Reference Guide

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com or your local Dodge dealer.

www.DODGE.com

Dodge is a registered trademark of Chrysler LLC.

