



SRT

2014 VIPER USER GUIDE





If you are the first registered retail owner of your vehicle, you may obtain a complimentary printed copy of the Owner's Manual, Navigation/Uconnect® Manuals or Warranty Booklet by calling 1-855-778-8326 (U.S.) or 1-800-387-1143 (Canada) or by contacting your dealer.

IMPORTANT

This User Guide is intended to familiarize you with the important features of your vehicle. The DVD enclosed contains your Owner's Manual, Navigation/Uconnect® Manuals, Warranty Booklets, Tire Warranty and Roadside Assistance (new vehicles purchased in the U.S.) or Roadside Assistance (new vehicles purchased in Canada) in electronic format. We hope you find it useful. Replacement DVD kits may be purchased by visiting www.techauthority.com. Copyright 2017 FCA US LLC.

The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in a collision and personal injury. FCA US LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous and could lead to a serious collision. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some States or Provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

TABLE OF CONTENTS

INTRODUCTION/WELCOME

WELCOME FROM FCA US LLC	2
-------------------------	---

CONTROLS AT A GLANCE

DRIVER COCKPIT	4
INSTRUMENT CLUSTER	6

GETTING STARTED

KEY FOB	8
ENGINE STARTING/STOPPING	9
SECURITY ALARM	10
SEAT BELT	11
SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — AIR BAGS	12
CHILD RESTRAINTS	13
FRONT SEATS	16
ADJUSTABLE PEDALS	18
ADJUSTABLE FOOT REST	18
TILT / TELESCOPING STEERING COLUMN	19

OPERATING YOUR VEHICLE

SRT ENGINE BREAK-IN RECOMMENDATIONS	20
TURN SIGNALS/WIPER/WASHER/HIGH BEAMS LEVER	21
HEADLIGHT SWITCH	22
SPEED CONTROL	23
LAUNCH MODE	24
ELECTRONIC CONTROL DAMPING SYSTEM	25
ELECTRONIC STABILITY CONTROL	26
MANUAL TRANSMISSION 1 TO 4 SKIP SHIFT	27
ADDING FUEL	27
EMERGENCY FUEL FILLER DOOR RELEASE	28
AUTOMATIC TEMPERATURE CONTROL (ATC)	30
PARKVIEW® REAR BACK-UP CAMERA	31

ELECTRONICS

YOUR VEHICLE'S SOUND SYSTEM	32
IDENTIFYING YOUR RADIO	34
Uconnect® ACCESS	35
Uconnect® 8.4A	49
Uconnect® 8.4AN	67
STEERING WHEEL AUDIO CONTROLS	86
ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)	86
PERFORMANCE PAGES	87
PROGRAMMABLE FEATURES	88
UNIVERSAL GARAGE DOOR OPENER (HomeLink®)	90
POWER OUTLETS	93

UTILITY

TRAILER TOWING WEIGHTS (MAXIMUM TRAILER WEIGHT RATINGS)	94
RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)	94

WHAT TO DO IN EMERGENCIES

ROADSIDE ASSISTANCE	95
INSTRUMENT CLUSTER WARNING LIGHTS	95
IF YOUR ENGINE OVERHEATS	98
TIREFIT KIT	99
JUMP-STARTING	104
TOWING A DISABLED VEHICLE	107
FREEING A STUCK VEHICLE	107
EVENT DATA RECORDER (EDR)	108

MAINTAINING YOUR VEHICLE

ENGINE COMPARTMENT	109
FLUIDS AND CAPACITIES	110
MAINTENANCE SCHEDULES	111
SRT — MAINTENANCE RECORD	114
FUSES	115
SUMMER/THREE-SEASON TIRES	117
TIRE PRESSURES	118
WHEEL AND WHEEL TRIM CARE	118
EXTERIOR BULBS	120

CONSUMER ASSISTANCE

FCA US LLC CUSTOMER CENTER	121
FCA CANADA INC. CUSTOMER CENTER	121
ASSISTANCE FOR THE HEARING IMPAIRED	121
PUBLICATIONS ORDERING	121
REPORTING SAFETY DEFECTS IN THE UNITED STATES	122

MOPAR® ACCESSORIES

AUTHENTIC ACCESSORIES BY MOPAR®	123
---------------------------------	-----

FAQ (How To?)

FREQUENTLY ASKED QUESTIONS	124
----------------------------	-----

INDEX	125
-------	-----

INTRODUCTION/WELCOME

WELCOME FROM FCA US LLC

Congratulations on selecting your new FCA US LLC vehicle. Be assured that it represents precision workmanship, distinctive styling, and high quality - all essentials that are traditional to our vehicles.

Your new FCA US LLC vehicle has characteristics to enhance the driver's control under some driving conditions. These are to assist the driver and are never a substitute for attentive driving. They can never take the driver's place. Always drive carefully.

Your new vehicle has many features for the comfort and convenience of you and your passengers. Some of these should not be used when driving because they take your eyes from the road or your attention from driving. Never text while driving or take your eyes more than momentarily off the road.

This guide illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This guide may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this guide that are not available on this vehicle. FCA US LLC reserves the right to make changes in design and specifications and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

This User Guide has been prepared to help you quickly become acquainted with the important features of your vehicle. It contains most things you will need to operate and maintain the vehicle, including emergency information.

The DVD includes a computer application containing detailed owner's information which can be viewed on a personal computer or MAC computer. The multimedia DVD also includes videos which can be played on any standard DVD player (including the Uconnect® Touchscreen Radios if equipped with DVD player capabilities). Additional DVD operational information is located on the back of the DVD sleeve.

For complete owner information, refer to your Owner's Manual on the DVD in the owner's kit provided at the time of new vehicle purchase. For your convenience, the information contained on the DVD may also be printed and saved for future reference.

FCA US LLC is committed to protecting our environment and natural resources. By converting from paper to electronic delivery for the majority of the user information for your vehicle, together we greatly reduce the demand for tree-based products and lessen the stress on our environment.

INTRODUCTION/WELCOME

VEHICLES SOLD IN CANADA

With respect to any vehicles sold in Canada, the name FCA US LLC shall be deemed to be deleted and the name FCA Canada Inc. used in substitution.

WARNING!

- Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.
- Always make sure that objects cannot fall into the driver foot well while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.
- Failure to properly follow floor mat installation or mounting can cause interference with the brake pedal and accelerator pedal operation causing loss of control of the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Never use the 'PARK' position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- Refer to your Owner's Manual on the DVD for further details.

USE OF AFTERMARKET PRODUCTS (ELECTRONICS)


The use of aftermarket devices including cell phones, MP3 players, GPS systems, or chargers may affect the performance of on-board wireless features including Keyless Enter-N-Go™ and Remote Start range. If you are experiencing difficulties with any of your wireless features, try disconnecting your aftermarket devices to see if the situation improves. If your symptoms persist, please see an authorized dealer.

CHRYSLER, DODGE, JEEP, RAM TRUCK, SRT, ATF+4, MOPAR and Uconnect are registered trademarks of FCA US LLC.

COPYRIGHT ©2016 FCA US LLC



CONTROLS AT A GLANCE

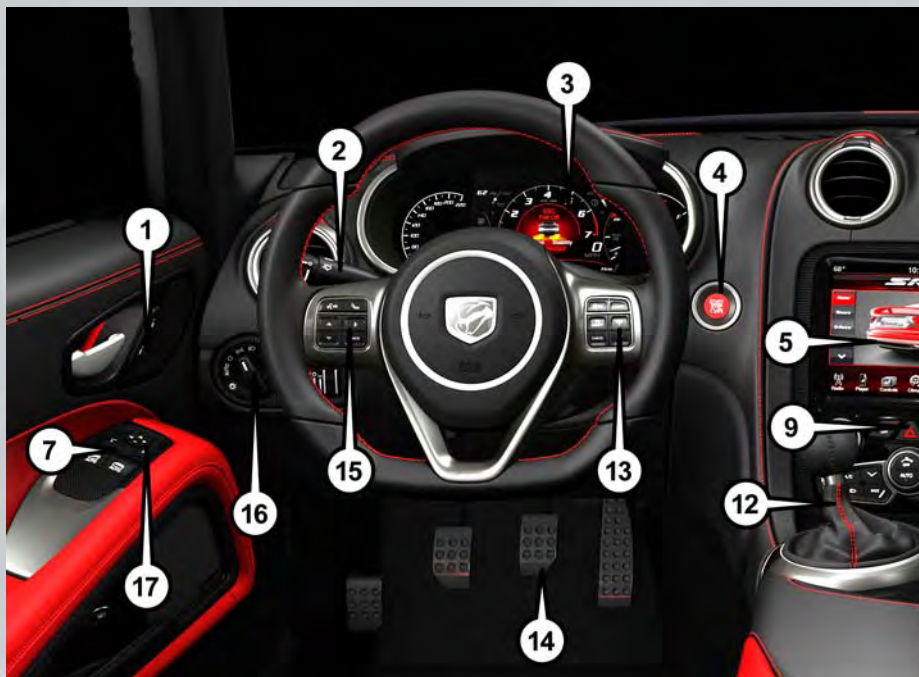

DRIVER COCKPIT

1. Power Door Locks
2. Turn Signal/Wiper/Washer/High Beams Lever (behind steering wheel) pg. 21
3. Instrument Cluster
4. Ignition Start/Stop Button (behind steering wheel) pg. 9
5. Identifying Your Radio pg. 34
6. Passenger Door Handle
7. Power Windows
8. Glove Compartment
9. Hazard Button

CONTROLS AT A GLANCE



10. Power Outlet pg. 93
11. Emergency Brake
12. Automatic Climate Control (behind gear shifter)
 - Automatic Climate Controls pg. 30
 - Air Conditioning (A/C) pg. 31
 - Recirculation pg. 31
13. Electronic Speed Control pg. 23
14. Adjustable Pedals pg. 18
15. Electronic Vehicle Information Center (EVIC) Buttons pg. 86
16. Headlight Switch pg. 22
17. Power Mirrors

CONTROLS AT A GLANCE



INSTRUMENT CLUSTER

Warning Lights



- Low Fuel Warning Light



- Battery Charge Light**



- Oil Pressure Warning Light



- Anti-Lock Brake (ABS) Light**



- Air Bag Warning Light**



- Electronic Throttle Control (ETC) Light



- Tire Pressure Monitoring System (TPMS) Light



- Engine Temperature Warning Light



- Seat Belt Reminder Light

BRAKE




- Malfunction Indicator Light (MIL)**



- Electronic Stability Control (ESC) Activation/Malfunction Indicator Light*

(See page 95 for more information.)

CONTROLS AT A GLANCE

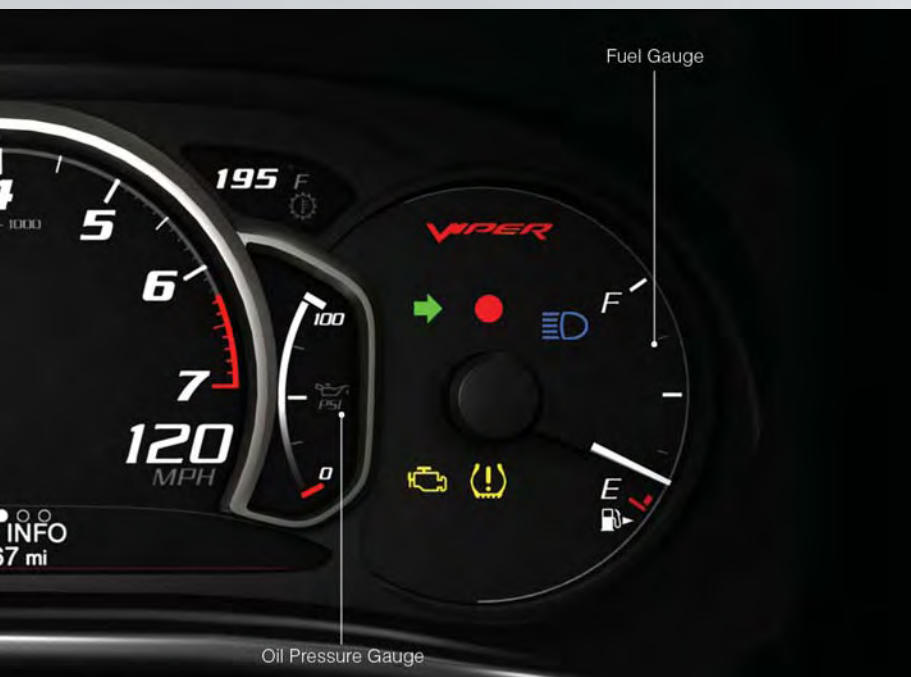

Indicators



- Turn Signal Indicators



- High Beam Indicator



- Vehicle Security Indicator*



- Electronic Speed Control Set Indicator



- Electronic Stability Control (ESC) Off Indicator*



- Door Ajar Indicator***



- Trunk Ajar Indicator***



- Windshield Washer Fluid Low Indicator***



- Door Unlock Indicator***

* If equipped

** Bulb Check with Ignition On

*** This display shows the Electronic Vehicle Information Center (EVIC) messages when the appropriate conditions exist.

GETTING STARTED

KEY FOB

Locking And Unlocking The Doors

- Press the LOCK button once to lock all the doors. Press the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors.
- All doors can be programmed to unlock on the first press of the UNLOCK button. Refer to Programmable Features in this guide.

NOTE:

The Door Unlock Indicator  will illuminate in the instrument cluster when one or both doors are unlocked. When the door are locked, the indicator will not illuminate.



1 — Liftgate
2 — Unlock

3 — Lock
4 — Panic

Opening The Liftgate

- Press the LIFTGATE button two times within five seconds to open the liftgate.

Panic Alarm

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.

Emergency Key

- Should the battery in the vehicle or the Key Fob transmitter go dead, there is an emergency key located in the Key Fob. To remove the emergency key, slide the button at the back of the Key Fob sideways with your thumb and then pull the key out with your other hand.

NOTE:

In case the ignition switch does not change with the push of a button, the key fob may have a low or dead battery. In this situation, a back up method can be used to operate the ignition switch. Put the nose side of the key fob (side opposite of the Emergency Key) against the ENGINE START/STOP button and push to operate the ignition switch.

GETTING STARTED

WARNING!

- Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- When leaving the vehicle, always remove the key fob from the ignition and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the ignition of a vehicle equipped with Keyless Enter-N-Go™ in the ACC or ON/RUN mode. A child could operate power windows, other controls, or move the vehicle

ENGINE STARTING/STOPPING

NOTE:

In case the ignition switch does not change with the push of a button, the key fob may have a low or dead battery. In this situation, a back up method can be used to operate the ignition switch. Put the nose side of the key fob (side opposite of the Emergency Key) against the ENGINE START/STOP button and push to operate the ignition switch.

Starting


1. Fully apply the parking brake.
2. Press the clutch pedal to the floor.
3. Place the shift lever in NEUTRAL.
4. Press the red ENGINE START/STOP button located on the instrument panel. Release the button when the engine starts.

NOTE:

The engine will not start unless the clutch pedal is pressed to the floor.

Stopping

1. Bring the vehicle to a complete stop.
2. Fully apply the parking brake.
3. Press the clutch pedal to the floor.
4. Place the shift lever in NEUTRAL/1st Gear.
5. Press the ENGINE START/STOP button once. The ignition switch will return to the OFF position.

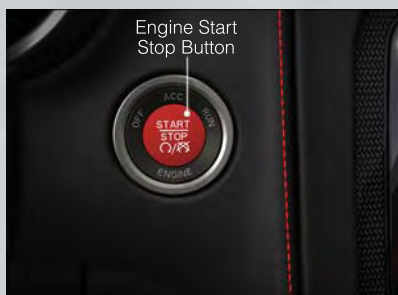

GETTING STARTED

SECURITY ALARM

To Arm:

Follow these steps to arm the Vehicle Security Alarm:

- Press LOCK on the interior power door lock switch with the driver and/or passenger door open.
- Press the LOCK button on the Remote Keyless Entry (RKE) transmitter.
- The Vehicle Security Light in the instrument cluster will flash for 16 seconds. This shows that the Vehicle Security Alarm is arming. During this period, if a door is opened, the ignition is cycled to ON/RUN, or the power door locks are unlocked in any manner, the Vehicle Security Alarm will automatically disarm.

NOTE:

- During the 16-second arming period, if a door is opened or the ignition is cycled to ON/RUN, the Vehicle Security Alarm will automatically disarm.
- Once armed, the Vehicle Security Alarm disables the unlock switch on the driver door trim panel and passenger door trim panel.

NOTE:

Using the key to open the liftgate while the Vehicle Security Alarm is armed will not trigger the theft alarm.

To Disarm:

The Vehicle Security Alarm can be disarmed using any of the following methods:

- Press the UNLOCK button on the Remote Keyless Entry (RKE) transmitter.
- Cycle the vehicle ignition system out of the OFF position.

SEAT BELT

- Be sure everyone in your vehicle is in a seat and using a seat belt properly.
- Position the lap belt across your thighs, below your abdomen. To remove slack in the lap portion, pull up a bit on the shoulder belt. To loosen the lap belt if it is too tight, tilt the latch plate and pull on the lap belt. A snug belt reduces the risk of sliding under the belt in a collision.
- Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the belt.
- A shoulder belt placed behind you will not protect you from injury during a collision. You are more likely to hit your head in a collision if you do not wear your shoulder belt. The lap and shoulder belt are meant to be used together.
- A belt that is too loose will not protect you properly. In a sudden stop you could move too far forward, increasing the possibility of injury. Wear your seat belt snugly.
- A frayed or torn belt could rip apart in a collision and leave you with no protection. Inspect the belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system. Seat belt assemblies must be replaced after a collision if they have been damaged (bent retractor, torn webbing, etc.).
- The seat belts for both front seating positions are equipped with pretensioning devices that are designed to remove slack from the seat belt in the event of a collision.
- A deployed pretensioner or a deployed air bag must be replaced immediately.

NOTE:

When the ignition switch is first turned to the ON/RUN position, this light will turn on for four to eight seconds as a bulb check. During the bulb check, if the driver's seat belt is unbuckled, a chime will sound. After the bulb check or when driving, if the driver or front passenger seat belt remains unbuckled, the Seat Belt Indicator Light will flash or remain on continuously.

WARNING!

In a collision, you and your passengers can suffer much greater injuries if you are not buckled up properly. You can strike the interior of your vehicle or other passengers, or you can be thrown out of the vehicle. Always be sure you and others in your vehicle are buckled up properly.

Seat Belt Guide Loop

- The seat belt should be routed through the seat belt guide loop located on the outboard side of the seat while it is in use.
- To utilize the seat belt guide loop, unsnap the guide loop retainer by pulling up on the head of the retainer and pulling the seat belt guide loop outward.

GETTING STARTED

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — AIR BAGS

- This vehicle has Advanced Front Air Bags for both the driver and right front passenger as a supplement to the seat belt restraint system. The Advanced Front Air Bags will not deploy in every type of collision.
- Advanced Front Air Bags are designed to provide additional protection by supplementing the seat belts in certain frontal collisions depending on several factors, including the severity and type of collision. Advanced Front Air Bags are not expected to reduce the risk of injury in rear, side, or rollover collisions.
- If the Air Bag Warning Light  is not on during starting, stays on, or turns on while driving, have the vehicle serviced by an authorized service center immediately.
- This vehicle has an Occupant Classification System (“OCS”) in the right front passenger seat. The OCS is designed to deactivate the front passenger Advanced Front Air Bag for an unoccupied seat and for occupants classified in a category other than a properly seated adult. This could be a child, teenager, or even an adult.
- The Passenger Air Bag Disable (“PAD”) Indicator Light (an amber light located in the center of the instrument panel) tells the driver and front passenger when the passenger Advanced Front Air Bag is deactivated. The PAD Indicator light illuminates the words “PASSENGER AIR BAG OFF” to show that the Passenger Advanced Front Air Bag will not inflate during a collision.
- Refer to the Owner's Manual on the DVD for further details regarding the Supplemental Restraint System (SRS).

WARNING!

- Relying on the air bags alone could lead to more severe injuries in a collision. The air bags work with your seat belt to restrain you properly. In some collisions, the air bags won't deploy at all. Always wear your seat belts even though you have air bags.
- Being too close to the steering wheel or instrument panel during Advanced Front Air Bag deployment could cause serious injury, including death. Air bags need room to inflate. Sit back, comfortably extending your arms to reach the steering wheel or instrument panel.
- Do not drive your vehicle after the air bags have deployed. If you are involved in another collision, the air bags will not be in place to protect you.
- After any collision, the vehicle should be taken to an authorized dealer immediately.

CHILD RESTRAINTS

Children 12 years or younger should ride properly buckled up in a rear seat, if available. According to crash statistics, children are safer when properly restrained in the rear seats rather than in the front.

Every state in the United States and all Canadian provinces require that small children ride in proper restraint systems. This is the law, and you can be prosecuted for ignoring it.

NOTE:

- For additional information, refer to www.seatcheck.org or call 1-866-SEATCHECK.
- Canadian residents should refer to Transport Canada's website for additional information: <http://www.tc.gc.ca/eng/roadsafety/safedrivers-childsafety-index-53.htm>

There are tether strap anchorages behind each rear seating position. Access ports to the tether anchors are located in the panel between the rear seat and the rear window. The tether anchors are underneath access covers in the carpet covering the back of the seat where you see the tether anchorage symbol.


WARNING!

- In a collision, an unrestrained child, even a tiny baby, can become a projectile inside the vehicle. The force required to hold even an infant on your lap could become so great that you could not hold the child, no matter how strong you are. The child and others could be severely injured or killed. Any child riding in your vehicle should be in a proper restraint for the child's size.
 - Improper installation of a child restraint to the LATCH anchorages can lead to failure of an infant or child restraint. The child could be severely injured or killed. Follow the manufacturer's directions exactly when installing an infant or child restraint.
 - An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchor positions directly behind the child seat to secure a child restraint top tether strap.
 - Rearward-facing child seats must never be used in the front seat of a vehicle with a front passenger air bag. An air bag deployment could cause severe injury or death to infants in this position.
-
- You may use the LATCH anchorage system until the combined weight of the child and the child restraint is 65 lbs (29.5 kg). Use the seat belt and tether anchor instead of the LATCH system once the combined weight is more than 65 lbs (29.5 kg).

GETTING STARTED

Installing The Child Restraints Using The Vehicle Seat Belts

- The front passenger seating position is equipped with a Switchable Automatic Locking Retractor (ALR) that is designed to keep the lap portion of the seat belt tight around the child restraint. Any seat belt system will loosen with time, so check the belt occasionally, and pull it tight if necessary.
- There is a tether strap anchor located behind the child tether access cover behind the passenger seat.
- Always use the tether anchor when using the seat belt to install a forward facing child restraint, up to the recommended weight limit of the child restraint.

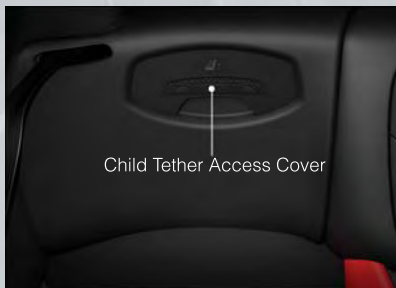

To Install A Child Seat Using An ALR:

1. Pull enough of the seat belt webbing from the retractor to pass it through the belt path of the child restraint. Do not twist the belt webbing in the belt path.
2. Slide the latch plate into the buckle until you hear a "click."
3. Pull on the webbing to make the lap portion tight against the child seat.
4. To lock the seat belt, pull down on the shoulder part of the belt until you have pulled all the seat belt webbing out of the retractor. Then, allow the webbing to retract back into the retractor. As the webbing retracts, you will hear a clicking sound. This means the seat belt is now in the Automatic Locking mode.

GETTING STARTED

5. Try to pull the webbing out of the retractor. If it is locked, you should not be able to pull out any webbing. If the retractor is not locked, repeat the last step.
6. Finally, pull up on any extra webbing to tighten the lap portion around the child restraint while you push the child restraint rearward and downward into the vehicle seat.
7. If the child restraint has a top tether strap and the seating position has a top tether anchorage, connect the tether strap to the anchorage and tighten the tether strap. See below for directions to attach a tether anchor.
8. Test that the child restraint is installed tightly by pulling back and forth on the child seat at the belt path. It should not move more than 1 inch (25.4 mm) in any direction.

Installing The Top Tether Strap With The Vehicle Seat Belt:

- When installing a forward-facing child restraint, always secure the top tether strap, up to the tether anchor weight limit, when the child restraint is installed with the vehicle seat belt.
- There is a tether strap anchor located behind the child tether access cover behind the passenger seat. To attach a child restraint tether strap to the anchor:
 1. Move the seat forward.
 2. Move the seatback to its full forward position.
 3. Remove the child tether access cover by prying either side with a screwdriver or similar tool, as shown.

NOTE:

While the child tether is in use, keep the access cover in a safe place so that it can be replaced after use of the child tether.

4. Pass the child restraint tether hook through either opening in the seatback underneath the head restraint.
5. Attach the tether hook to the anchor loop.
6. Move the seat to its farthest rearward position. Apply body pressure to the seat to be sure the seat adjusters have latched.
7. Return the seatback to an upright position.
8. Remove slack from the tether strap according to the child restraint manufacturer's directions.

GETTING STARTED

WARNING!

- In a collision, an unrestrained child, even a tiny baby, can become a projectile inside the vehicle. The force required to hold even an infant on your lap could become so great that you could not hold the child, no matter how strong you are. The child and others could be severely injured or killed. Any child riding in your vehicle should be in a proper restraint for the child's size.
- Rearward-facing child seats must never be used in the front seat of a vehicle with a front passenger air bag. An air bag deployment could cause severe injury or death to infants in this position.
- Only use a rearward-facing child restraint in a vehicle with a rear seat.
- Improper installation of a child restraint to the LATCH anchorages can lead to failure of an infant or child restraint. The child could be severely injured or killed. Follow the manufacturer's directions exactly when installing an infant or child restraint.
- An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchor positions directly behind the child seat to secure a child restraint top tether strap.
- If your vehicle is equipped with a split rear seat, make sure the tether strap does not slip into the opening between the seatbacks as you remove slack in the strap.

FRONT SEATS

Power Seats

- The power seat switches are located on the outboard side of the front seat cushions.
- The power seat switch controls forward, rearward, up and down adjustments. Push the switch forward, rearward, up or down and the seat will move in the direction of the switch. Release the switch when the desired position has been reached.
- The recline switch controls the angle of the seatback. Press the switch forward or rearward and the seatback will move in either direction.



GETTING STARTED

Manual Seats

Forward/Rearward

- Lift up on the adjusting bar located at the front of the seat near the floor and release at the desired position. Then, using body pressure, move forward and backward on the seat to be sure that the seat adjusters have latched.

Recliner

- Lean forward in the seat and lift the recliner lever, then lean back to the desired position and release the lever.
- Lift the lever to return the seatback to an upright position.

Height Adjustment

- Ratchet the front lever, located on the outboard side of the seat, upward to raise the seat height.
- Ratchet the lever downward to lower the seat height.



CAUTION!

Do not place any article under a power seat or impede its ability to move as it may cause damage to the seat controls. Seat travel may become limited if movement is stopped by an obstruction in the seat's path.


WARNING!

- Adjusting a seat while the vehicle is moving is dangerous. The sudden movement of the seat could cause you to lose control. The seat belt might not be properly adjusted, and you could be severely injured or killed. Only adjust a seat while the vehicle is parked.
- Do not ride with the seatback reclined so that the seat belt is no longer resting against your chest. In a collision, you could slide under the seat belt and be severely injured or killed. Use the recliner only when the vehicle is parked.

GETTING STARTED

ADJUSTABLE PEDALS

- The adjustable pedals can be moved in any position of the engine start/stop button (OFF/ACC/RUN).
- The adjustable pedal switch is located to the left side of the steering column.
- Press the switch forward to move the pedals forward (toward the front of the vehicle).
- Press the switch rearward to move the pedals rearward (toward the driver).

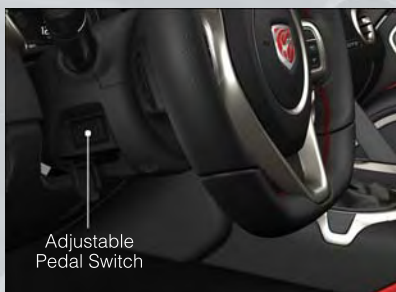

CAUTION!

Do not place any article under the adjustable pedals or impede its ability to move, as it may cause damage to the pedal controls. Pedal travel may become limited if movement is stopped by an obstruction in the adjustable pedal's path.

WARNING!

Do not adjust the pedals while the vehicle is moving. You could lose control and have a collision. Always adjust the pedals while the vehicle is parked.

ADJUSTABLE FOOT REST

- The adjustable foot rest can be adjusted forward or rearward and rotated upward or downward to allow for greater driving comfort.
- To adjust the pedal:
 1. Adjust the seat and steering column to a comfortable position.
 2. Using a 13 mm socket wrench, loosen the nut on the pedal.
 3. Slide the pedal either forward or rearward and rotate it upward or downward as desired.
 4. Tighten the nut, being careful not to over tighten it.



TILT / TELESCOPING STEERING COLUMN

- The tilt release lever is located below the multifunction lever on the left side of the steering column.
- To tilt the column, simply pull the release lever rearward toward you and then move the steering wheel upward or downward as desired.
- Push the release lever forward to lock the column firmly in place.



WARNING!

Do not adjust the steering wheel while driving. The tilt adjustment must be locked while driving. Adjusting the steering wheel while driving or driving without the tilt adjustment locked could cause the driver to lose control of the vehicle. Failure to follow this warning may result in you and others being severely injured or killed.

OPERATING YOUR VEHICLE

SRT ENGINE BREAK-IN RECOMMENDATIONS

- A long break-in period is not required for the drivetrain (engine, transmission, and rear axle) in your new vehicle.
- Drive moderately during the first 500 miles (800 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.
- While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes to a good break-in. However, wide-open throttle acceleration in low gear can be detrimental and should be avoided.
- The engine oil is a high performance synthetic lubricant, the transmission fluid, and axle lubricant installed at the factory is high-quality and energy-conserving. Oil, fluid, and lubricant changes should be consistent with anticipated climate and conditions under which vehicle operations will occur. For the recommended viscosity and quality grades, refer to “Maintaining Your Vehicle”.

NOTE:

A new engine may consume some oil during its first few thousand miles (kilometers) of operation. This should be considered a normal part of the break-in and not interpreted as an indication of difficulty.

CAUTION!

Never use Non-Detergent Oil or Straight Mineral Oil in the engine or damage may result.

OPERATING YOUR VEHICLE

TURN SIGNALS/WIPER/WASHER/HIGH BEAMS LEVER



Wipers

Intermittent, Low And High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Washer Operation

- Push the end of the lever inward to the second detent and hold for as long as spray is desired.

Mist Feature

- When a single wipe to clear off road mist or spray from a passing vehicle is needed, push the washer knob, located on the end of the multifunction lever, inward to the first detent and release. The wipers will cycle one time and automatically shut off.

High Beams

- Push the lever away from you to activate the high beams.
- A high beam symbol will illuminate in the cluster to indicate the high beams are on.

NOTE:

For safe driving, turn off the high beams when oncoming traffic is present to prevent headlight glare and as a courtesy to other motorists.

OPERATING YOUR VEHICLE

HEADLIGHT SWITCH

Automatic Headlights/Parking Lights/Headlights

- Rotate the headlight switch, located on the instrument panel to the left of the steering wheel, to the first detent from the off position for parking light  and to the second detent for headlight .
- Rotate the headlight switch to “AUTO” for AUTO headlights.
- When set to AUTO, the system automatically turns the headlights on or off based on ambient light levels.



Instrument Panel Dimmer

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control up to increase the brightness of the instrument panel when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio when the parking lights or headlights are on. Refer to your Uconnect®/Radio User Manual on the DVD for display dimming.
- Rotate the dimmer control up to the last detent position to turn on the interior lighting.

OPERATING YOUR VEHICLE

SPEED CONTROL

- The Electronic Speed Control switches are located on the steering wheel.

Cruise ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- CRUISE  will appear on the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF button a second time to turn the system off.

SET

- With the Speed Control on, push and release the SET – button to set a desired speed.

Accel/Decel

- Once a speed is set, pushing the RES + button once or the SET – button once will increase or decrease the set speed approximately 1 mph (1.6 km/h).

Resume

- To resume a previously selected set speed in memory, push the RES + button and release.

Cancel

- Push the CANCEL button, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.



WARNING!

- Leaving the Electronic Speed Control system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose control and have a collision. Always leave the Electronic Speed Control system off when you are not using it.
- Electronic Speed Control can be dangerous where the system cannot maintain a constant speed. Your vehicle could go too fast for the conditions, and you could lose control. A collision could be the result. Do not use Electronic Speed Control in heavy traffic or on roads that are winding, icy, snow-covered or slippery.

OPERATING YOUR VEHICLE

LAUNCH MODE

- This system maximizes acceleration traction for straight line racing.

1. Bring vehicle to a complete stop.
2. Set the steering wheel for straight ahead driving.
3. Fully depress the clutch and select the first gear position.
4. Press and release the “LAUNCH” Button (Located on the steering wheel controls).
5. Rapidly press the accelerator pedal to the floor within 1/2 second.



NOTE:

If the cluster launch EVIC message indicates all conditions are correct for launch and the throttle is pressed to the floor quickly (within approximately 1/2 second) the system will hold the engine speed to a preset speed (below the engine rev limiter speed).

6. Release the clutch aggressively. Do not ride the clutch.
- Release the accelerator pedal to deactivate launch control. Pressing the launch control button or actuating the brakes will also deactivate launch control.

NOTE:

- Launch Mode brings the engine to optimum launch RPM and waits for the driver to release the clutch. Launch Mode then uses engine throttle only to achieve controlled wheelslip for maximum acceleration through first gear.
- If the cluster launch EVIC message indicates all conditions are correct for launch and the throttle is pressed to the floor quickly (within approximately 1/2 second) the system will hold the engine speed to a preset speed (below the engine rev limiter speed).
- Launch Mode can be used in any of the Electronic Stability Control (ESC) Modes.

WARNING!

Launch Mode is intended for off-highway or off-road use only and should not be used on any public roadways. It is recommended that this feature be used in a controlled environment, and within the limits of the law. The capabilities of the vehicle as measured by the performance pages must never be exploited in a reckless or dangerous manner, which can jeopardize the user's safety or the safety of others. Only a safe, attentive, and skillful driver can prevent accidents.

OPERATING YOUR VEHICLE

ELECTRONIC CONTROL DAMPING SYSTEM

- This vehicle may be equipped with an electronic controlled dampening system. This system reduces body roll and pitch in many driving situations including cornering, acceleration and braking.
- This system allows for a street suspension damping setting or a firmer race suspension damping setting. There are two modes of operation:

STREET MODE

- This mode will give a sporty, but comfortable ride.
- This mode is driver selectable when the vehicle is placed in STREET mode (press the “STREET” button on the Instrument Panel).

NOTE:

The suspension mode will lock and stay in whatever the driver selects even when the ignition is turned off and the car restarted.

- This mode is intended for a smoother ride on the various types of pavement and road conditions while still providing damping levels appropriate extreme capabilities.



Press “RACE” Button Press “STREET” Button

RACE MODE

- Race mode is driver selectable when the vehicle is placed in RACE mode (press the “RACE” button on the Instrument Panel).
- This mode is for track use only and will supply maximum grip to the tires.
- When RACE mode is enabled, a Shock symbol with “RACE” next to it will light up in the instrument cluster.

NOTE:

The RACE setting will provide a firmer ride.

OPERATING YOUR VEHICLE

ELECTRONIC STABILITY CONTROL

- The ESC corrects for oversteering and understeering the vehicle by applying the brake of the appropriate wheel. Engine power may also be reduced to assist in counteracting the condition of oversteer or understeer and help the vehicle maintain the desired path.
- In full on mode ESC utilizes sensors in the vehicle to determine the path that the driver intends to steer the vehicle and compares it to the actual path of the vehicle. When the actual path does not match the intended path, the ESC applies the brake of the appropriate wheel to assist in counteracting the condition of oversteer or understeer.

Electronic Stability Control (ESC) Operating Modes

- The ESC system may have five available operating modes:

ESC On

- This is the normal operating mode for the ESC system. Whenever the vehicle is started, the ESC system will be in this mode. The ESC On mode should be used for most driving situations. The ESC should only be turned OFF for specific reasons as noted in the following paragraphs.

ESC Full Off

- The ESC Off mode is intended for off-highway or off-road use only and should not be used on any public roadways. In this mode, all TCS and ESC stability features are turned OFF. To enter the "Full Off" mode, press and hold the "ESC Off" switch for five seconds while the vehicle is stopped with the engine running. After five seconds, a chime will sound, the "ESC Activation/Malfunction Indicator Light" will illuminate, and the "ESC OFF" message will display in the vehicle cluster (left of the odometer). The "ESC OFF" message may appear in the Electronic Vehicle Information Center (EVIC). To turn ESC ON again, momentarily press the "ESC Off" switch.

Sport Mode

- Sport mode has reduced traction control and reduced stability control. To enter the "Sport Mode" mode, press the "ESC" switch once (located on the steering wheel). The "ESC SPORT" light will illuminate, and the "ESC SPORT" message will display in the vehicle cluster (left of the odometer).

Track Mode

- Track Mode has no traction control and has reduced stability control. To enter the "Track Mode" mode, press the "ESC" switch twice. The "ESC TRACK" light will illuminate, and the "ESC TRACK" message will display in the vehicle cluster (left of the odometer).

OPERATING YOUR VEHICLE

Rain Mode

- Rain mode offers increased traction control and stability control for low traction conditions such as wet roads, dry roads during cold temperatures, or when the driver wants enhanced stability due to lack of familiarity or experience with the vehicle's response. To enter the "Rain Mode" mode, press the "ESC" switch three times. The "ESC RAIN" light will illuminate, and the "ESC RAIN" message will display in the vehicle cluster (left of the odometer).

 
NOTE:

Some models may not offer "Sport" or "Track" Mode.

WARNING!

The Electronic Stability Control System (ESC) cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase the traction afforded by prevailing road conditions. ESC cannot prevent all accidents, including those resulting from excessive speed in turns, driving on very slippery surfaces, or hydroplaning. ESC also cannot prevent accidents resulting from loss of vehicle control due to inappropriate driver input for the conditions. Only a safe, attentive, and skillful driver can prevent accidents. The capabilities of an ESC equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

MANUAL TRANSMISSION 1 TO 4 SKIP SHIFT



- Skip Shift is enabled when vehicle speed is greater than 16 MPH (26 km/h) but less than 18 MPH (29 km/h) and the accelerator is at 20% or less.
- For optimal fuel economy, under low acceleration conditions, your vehicle will only allow you to shift from first gear to fourth gear. Additionally, the skip shift message will appear in the tachometer.
- Refer to your Owner's Manual on the DVD for further information.

ADDING FUEL

1. Press the fuel filler door release switch (located in the driver's door map pocket).
2. Open the fuel filler door.
3. There is no fuel filler cap. A flapper door inside the pipe seals the system.
4. Insert the fuel nozzle fully into the filler pipe – the nozzle opens and holds the flapper door while refueling.

NOTE:

Only the correct size nozzle opens the latches allowing the flapper door to open.

5. Fill the vehicle with fuel – when the fuel nozzle "clicks" or shuts off the fuel tank is full.
6. Remove the fuel nozzle and close the fuel door.

OPERATING YOUR VEHICLE

NOTE:

A funnel is provided (located in the trunk in the spare tire area) to open the flapper door to allow for emergency refueling with a gas can.

CAUTION!

To avoid fuel spillage and overfilling, do not “top off” the fuel tank after filling.

WARNING!

- Never have any smoking materials lit in or near the vehicle when the fuel door is open or the tank is being filled.
- Never add fuel when the engine is running. This is in violation of most state and federal fire regulations and may cause the “Malfunction Indicator Light” to turn on.
- A fire may result if fuel is pumped into a portable container that is inside of a vehicle. You could be burned. Always place fuel containers on the ground while filling.

EMERGENCY FUEL FILLER DOOR RELEASE

- If you are unable to open the fuel filler door, use the fuel filler door emergency release procedure by following the proceeding steps.
 1. Open the liftgate.
 2. Locate the carpet access door (on the right side inner trim panel of the trunk).




OPERATING YOUR VEHICLE

3. Pull the edge of the access door on the right side inner trim panel to expose the emergency release cable.



4. Pull the release cable to release the fuel door.
5. Return the release cable to the original position (inside the inner trim panel) and push the carpet back into the original position.

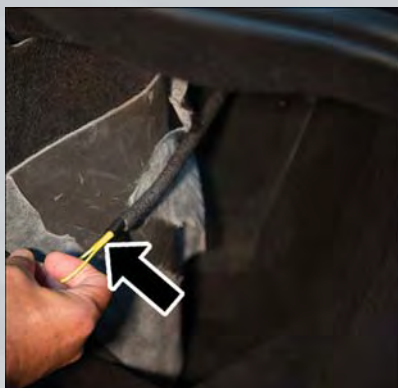

OPERATING YOUR VEHICLE

AUTOMATIC TEMPERATURE CONTROL (ATC)

Touchscreen Automatic Climate Controls



Climate Control Knobs



- Press the AUTO button or AUTO soft-key.
- Select the desired temperature by pushing the up or down temperature buttons for the driver or passenger.
- The system will maintain the set temperature automatically.

NOTE:

At wide open throttle (WOT) the A/C will momentarily shut Off.

OPERATING YOUR VEHICLE

Air Conditioning (A/C)

- If the air conditioning button is pressed while in AUTO mode, the system will exit AUTO mode and stay in A/C. The mode and blower will be set at the closest mode and blower position that the system was operating in AUTO.

Air Recirculation / Max A/C

- Rotate the Temperature Control to the MAX A/C position to automatically turn on both Air Conditioning and Recirculation.
- For window defogging, turn the recirculation button off.
- Recirculation is not allowed in defrost/floor (mix) modes for approximately five minutes. Recirculation is allowed in floor mode.

Heated Mirrors

- The mirrors are heated to melt frost or ice. This feature is activated whenever you turn on the defroster.

PARKVIEW® REAR BACK-UP CAMERA

- You can see an on-screen image of the rear surroundings of your vehicle whenever the shift lever is put into REVERSE. The ParkView® Rear Back-Up Camera image will be displayed in the touchscreen display along with a caution note to “check entire surroundings” across the top of the screen. After five seconds this note will disappear.
- If the rearview mirror or touchscreen display appears foggy, clean the ParkView® camera located above the licence plate.

WARNING!

Drivers must be careful when backing up; even when using the ParkView® Rear Back-Up Camera. Always check carefully behind your vehicle, and be sure to check for pedestrians, animals, other vehicles, obstructions, or blind spots before backing up. You must continue to pay attention while backing up. Failure to do so can result in serious injury or death.



YOUR VEHICLE'S SOUND SYSTEM

1. Uconnect® Voice Command  Button pg. 63
2. Uconnect® Phone  Button pg. 60
3. Steering Wheel Audio Controls (Left) pg. 86
4. Steering Wheel Audio Controls (Right) pg. 86
5. Volume Knob/Audio Mute Button
6. ASSIST Button pg. 41



- 7. 911 Button pg. 41
- 8. Uconnect® 8.4 Radio pg. 34
- 9. Screen Off Button
- 10. Back Button
- 11. Tune/Scroll Knob/Browse/Enter Button
- 12. Media Hub: Audio Jack, USB Port, and SD Card Slot (located inside center console) pg. 72

ELECTRONICS

IDENTIFYING YOUR RADIO

Uconnect® 8.4A

NOTE:

The 8.4A and 8.4AN look similar, but there are some differences.

- 8.4" Touchscreen
- Navigation-ready, see dealer for details
- Climate soft-key in lower menu bar
- HD Button will NOT be visible on right side of screen when viewing AM or FM
- SiriusXM Travel Link feature NOT listed within Apps



Uconnect® 8.4A

Uconnect® 8.4AN

- 8.4" Touchscreen
- Navigation with 3D City and Terrain Modeling Standard
- Climate soft-key in lower menu bar
- HD Button will be visible on right side of screen when viewing AM or FM
- SiriusXM Travel Link feature listed within Apps



Uconnect® 8.4AN

Uconnect® ACCESS

Uconnect® Access (If Equipped — Available On Uconnect® 8.4A And Uconnect® 8.4AN)

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Uconnect® Access enhances your ownership and driving experience by connecting your vehicle with a built-in cellular connection. Uconnect® Access provides:

- The ability to remotely lock/unlock your doors and start your vehicle from virtually anywhere, with the Uconnect® Access App, Owner Connect website and Uconnect® Care (Vehicle must be within the United States and have network coverage).
- The functionality to turn your vehicle into a WiFi Hotspot.
- Theft Alarm Notification via text or email.
- Voice Texting so you can compose, send and receive text messages with your voice while keeping your hands on the wheel. Requires a cell phone that supports Bluetooth Message Access Profile (MAP).

Before you drive, familiarize yourself with the easy-to-use Uconnect® System.

1. The ASSIST and 9-1-1 buttons are located on your rearview mirror. The ASSIST Button is used for contacting Roadside Assistance, Vehicle Care and Uconnect® Care. The 9-1-1 Button connects you to emergency services.

NOTE:

Vehicles sold in Canada and Mexico DO NOT have 9-1-1 Call system capabilities. 9-1-1 or other emergency line operators in Canada and Mexico may not answer or respond to 9-1-1 system calls.

2. The Uconnect® “Apps” button on the menu bar at the bottom right corner of the radio touchscreen. This is where you can begin your registration process, manage your Apps and purchase WiFi on demand.
3. The Uconnect® Voice Command and Uconnect® Phone buttons are located on the left side of your steering wheel. These buttons let you use your voice to give commands, make phone calls, send and receive text messages hands-free, enter navigation destinations, and control your radio and media devices.

Included Trial Period For New Vehicles

Your new vehicle may come with an included trial period for use of the Uconnect® Access Services starting at the date of vehicle purchase (date based on vehicle sales notification from your dealer). To activate the trial, you must first register with Uconnect® Access. After the trial period, if you wish to continue your Uconnect® Access Services you can choose to purchase a subscription.

Features And Packages

- After the trial period, you can subscribe to continue your service by visiting the Uconnect® Store located within the Mopar Owner Connect website (MoparOwnerConnect.com). If you need assistance, U.S. residents can call Uconnect® Care at 855-792-4241.
- For the latest information on packages and pricing information: U.S. residents visit DriveUconnect.com.

*Uconnect® Access Registration (Uconnect® 8.4A And 8.4AN Only,
U.S. 48 Contiguous States And Alaska)*

NOTE:

Should you require assistance anytime during the registration process, simply call Uconnect® Care at 855-792-4241.

1. From the parked vehicle with the radio touchscreen powered on, select the “Apps” button on the touchscreen located near the bottom right-hand corner.
2. Press “Register” on the reminder screen or select “Uconnect Registration” under the 'Favorites' tab.
3. The Uconnect® Access Registration App will open and display step-by-step instructions to start your registration.
4. Enter your email address into the radio touchscreen.
5. A message will display on the touchscreen indicating your email submission was accepted. In a few minutes, you will receive an email which will allow you to register your vehicle for Uconnect® Access. You should open this email and begin your Uconnect® Access registration "online" within 72 hours.
6. A final message will display on the touchscreen allowing you to check on the status of your email submission. To exit the registration, press the X in the upper right corner.
7. Check for an email from Uconnect® Access that contains your personalized registration link. If you don't see it, check your spam or junk email folder. Open the email and click on the link to continue registering.

NOTE:

For security reasons, this link is valid for 72 hours from the time you submit your email address into the radio touchscreen. If the link has expired, simply re-enter your email address into the Uconnect® Registration App on the radio touchscreen to receive another link.

- The secured registration link will take you through the Uconnect® Access registration process step by step.
 - To unlock the full potential of Uconnect® Access in your vehicle, you will need to create or validate an existing Mopar Owner Connect account (previously Owner Center). Uconnect® along with Mopar Owner Connect have joined forces to create one destination to manage all of your vehicle needs - from managing your Uconnect® Access account to tracking service history and finding recommended accessories for your vehicle. If you already have a Mopar Owner Connect account, log in to the website with your existing user name and password. For assistance with this web based registration process, U.S. residents can call Uconnect® Care at 855-792-4241.
 - At this point your vehicle is registered with Uconnect® Access. Apps will be downloaded the next time you start your vehicle. It may take over 30 minutes for all of the apps to install. If the apps have not appeared after 72 hours, please contact Uconnect® Care. The recommended next steps are to:
8. Set up your Payment Account. (Provides the option to purchase WiFi Hotspot and renew your subscription).

Download The Uconnect® Access App

If you own a compatible Apple or Android® powered device, the Uconnect Access App allows you to remotely lock or unlock your doors, start your engine or activate your horn and lights from virtually anywhere (Vehicle must be within the United States and have network coverage). You can download the App from Mopar Owner Connect or from the Apple App or Google Play store. For Uconnect® phone compatibility - visit UconnectPhone.com or call 1-877-855-8400.

Set Up Your Via Mobile Profile

Complete your Via Mobile Profile online during registration of your Uconnect® Access system. Access this page by logging into your Mopar Owner Connect account (moparownerconnect.com), going to Edit Profile, then Via Mobile Profile.

1. Download the Uconnect® Access App.

If you haven't done so already, download the Uconnect® Access App to an Apple or Android® compatible smartphone. This is required to use Via Mobile Apps in your vehicle. Visit App Store (iPhone®) or Google Play (Android) to download the app by searching for "Uconnect Access App."

2. From the Via Mobile Profile page on (moparownerconnect.com), set up your Via Mobile Apps. If you already have an account with these apps, click “Set Up” to enter your information. If you do not have an account, you can create a new one.

Aha™ (www.aharadio.com)

- Enter your email address and password for Aha™, or create a new Aha™ account.
- You can link your Facebook, Twitter or Slacker accounts on the Aha™ website.

iHeartRadio (www.iheart.com)

- Click “Sign Up” if you’re new to iHeartRadio, or “Log In” to enter your iHeartRadio account information.
- Select “Activate” to continue,
- Select “Close” to complete activation.

Pandora® (www.pandora.com)

- Enter your Pandora® username/email address and password, then click “Save.”

Slacker (www.slacker.com)

- Enter your Slacker username/email address and password, then click “Save.”

3. Invite Family and Friends.

Invite family and friends to use the Via Mobile Apps in your vehicle using their own account preferences (vehicle must be setup for Via Mobile).

Renewing Subscriptions And Purchasing Wifi (Uconnect® 8.4A And 8.4AN Only, U.S. 48 Contiguous States And Alaska)

Subscriptions and WiFi can be purchased from the Uconnect® Store within your vehicle, and online at Mopar Owner Connect. If you need help press the ASSIST button on the rearview mirror, then select Uconnect® Care (or dial 855-792-4241).

Purchasing Online

You can renew your subscription to a package or purchase WiFi from the Mopar Owner Connect website.

1. Log In to the Mopar Owner Connect website (moparownerconnect.com) with your username/email and password.
2. Click on the “Shop” tab, then click on the Uconnect Store.
3. From the Uconnect® Store, select the Application (App) you wish to purchase.
4. This will launch the selected App into purchase mode along with providing additional information. The purchase process begins when you press the “Buy” button on the touchscreen.

5. The Uconnect® Store will display a “Purchase Overview” message confirming the financial details for the App you are about to purchase. Press the “Purchase” key to continue.
6. The Uconnect® Store will ask you to “Confirm Payment” using your default payment method on file in your Payment Account. Press the “Complete” key to continue.
7. The Uconnect® Payment Account will then ask for your “Payment Account PIN.” After entering this four digit PIN, press the “Complete” key to make the purchase.
8. You will receive a confirmation message that your purchase has been submitted. Press the OK button to end the process.

Purchasing From Your Vehicle

You must first register and set up a Uconnect® Access Payment Account online (log in to moparownerconnect.com to set up and manage your Payment Account).

NOTE:

- Purchased apps can take up to 30 minutes to download, depending on your vehicle's cellular coverage at time of purchase. If your download takes more than 30 minutes, please contact Uconnect® Care by pressing the ASSIST button on the rear view mirror or by calling 855-792-4241.
- You can also purchase apps or renew your subscription to a package from the Mopar Owner Connect website. Log In to the Mopar Owner Connect website (moparownerconnect.com) with your user name and password, and click on the “Store” tab.

Using Uconnect® Access

Getting Started With Apps

Applications (Apps) and features in your Uconnect® Access system deliver services that are customized for the driver and are certified by FCA US LLC. Two different types are:

1. **Built-In Features** — use the built-in 3G Cellular Network on your Uconnect® 8.4A or 8.4AN radio.
2. **Uconnect® Access via Mobile (if equipped)** — uses the Uconnect Access app and your smartphone's data plan to access your personal Pandora®, iHeartRadio, Aha™ and Slacker accounts from the vehicle and control them using the vehicle touch-screen. Customer's data plan charges will apply.

Get started with your Uconnect® Access apps by pressing the Uconnect® “Apps” button on the menu bar at the bottom right corner of the radio touchscreen. Available apps and features are organized by the tabs on the left of the screen:

Favorite Apps — This is the default screen when you first press the “Apps” button on the touchscreen, and is a good place to put the apps you use most frequently. To make an App a “favorite”, press the “settings” button on the touchscreen to the right of the app, and select “Make a favorite.”

All Apps — Organizes your Uconnect® Access apps (when available).

Running Apps — Press this tab to see which apps are currently running.



Favorite Apps

Maintaining Your Uconnect® Access Account

Reinstalling An App (Uconnect® 8.4A And 8.4AN Only)

You can easily correct many Application related issues you may be experiencing by resetting the App back to the factory setting. From the vehicle's radio touchscreen, complete the following steps:

1. Press the “Uconnect® App” and open the Uconnect® Store and go to My Apps.
2. In My Apps, select “Settings” and then “Reinstall App” and lastly, “Continue”.
3. Your Apps have been successfully re-installed.

Canceling Your Subscription

Should you want to cancel your subscription, you can remove your account information using the same procedure contained in the Selling Your Vehicle section.

Selling Your Vehicle

When you sell your vehicle, we recommend that you remove your Uconnect® Access Account information from the vehicle. You can do this using the radio touchscreen in the vehicle (**Uconnect® 8.4A and 8.4AN only**) or on the Mopar Owner Connect website (moparownerconnect.com). Removing your account information cancels your subscription and makes your vehicle factory-ready for a new owner/subscriber.

1. From your vehicle's radio touchscreen, select the "Uconnect® Store" from the Apps icon.
2. Select "My Apps", then "Settings" and then "Remove Uconnect® Account".
3. Enter your Uconnect® Security PIN, select "Proceed to Remove Vehicle from Uconnect Account".

For additional information on Uconnect®:

- U.S. residents - visit DriveUconnect.com or call 1-877-855-8400.
- Canadian Residents - visit DriveUconnect.com or call, 1-800-465-2001 (English) or 1-800-387-9983 (French).

Built-In Features (Uconnect® 8.4A And 8.4AN Only)

1. **Assist Call** – The rear view mirror contains an ASSIST push button which (once registered) automatically connects the vehicle occupants to one of these predefined destinations for immediate support:
 - **Roadside Assistance Call** — If you get a flat tire, or need a tow, you'll be connected to someone who can help anytime. Additional fees may apply. Additional information in this section.
 - **Uconnect® Access Care** — In vehicle support for Uconnect® Access System, Apps and Features.
 - **Vehicle Care** — Total support for your FCA US LLC vehicle.



2. **Emergency 9-1-1 Call (If Equipped)** — The rear view mirror contains a 9-1-1 button that, when pressed, will place a call to a local 9-1-1 operator to request help from local police, fire or ambulance personnel in the event of an emergency. If this button is accidentally pressed, you will have 10 seconds to cancel the call. To cancel, press the 9-1-1 Call button again or press the “cancellation button” shown on the touchscreen. After 10 seconds has passed, the 9-1-1 call will be placed and only the 9-1-1 operator can cancel it. The LED light on the rearview mirror will turn green once a connection to a 9-1-1 operator has been made. The green LED light will turn off once the 9-1-1 call is terminated. Have an authorized dealer service the vehicle if the rearview mirror light is continuously red. **If a connection is made between a 9-1-1 operator and your vehicle, you understand and agree that 9-1-1 operators may, like any other 9-1-1 call, record conversations and sounds in and near your vehicle upon connection.**
3. **Roadside Assistance (If Equipped)** — If your vehicle is equipped with this feature and within wireless range, you may be able to connect to Roadside Assistance by pressing the “Assist” button on the rearview mirror. You will be presented with Assist Care options. Make a selection by touching the prompts displayed on the radio. If Roadside Assistance is provided to your vehicle, you agree to be responsible for any additional roadside assistance service costs that you may incur. In order to provide Uconnect® Services to you, we may record and monitor your conversations with Roadside Assistance, Uconnect® Care or Vehicle Care, whether such conversations are initiated through the Uconnect® Services in your vehicle, or via a landline or mobile telephone, and may share information obtained through such recording and monitoring in accordance with regulatory requirements. You acknowledge, agree and consent to any recording, monitoring or sharing of information obtained through any such call recordings.
4. **Yelp®** — Customers have the ability to search for nearby destinations or a point of interest (POI) either by category or custom search by using keywords (for example, “Italian restaurant”). Searching can be done by voice or using the touchscreen keypad. Using the touchscreen, launch Yelp® by selecting the “Apps” icon, touch the “All Apps” tab, and then touch “Yelp.” Using voice recognition press the Voice Command (VR) button on the steering wheel and say “Launch Yelp®.”
5. **Security Alarm Notification** — The Security Alarm Notification feature notifies you via email or text (SMS) message when the vehicle’s factory-installed security alarm system has been set-off. There are a number of reasons why your alarm may have been triggered, one of which could be that your vehicle was stolen. If so, please see the details of the Stolen Vehicle Assistance service below. When you register, Security Alarm Notification is automatically set to send you an email at the mail address you provide should the alarm go off. You may also opt to have a text message sent to your mobile device.

6. **Stolen Vehicle Assistance** — If your vehicle is stolen, contact local law enforcement immediately to file a stolen vehicle report. Once this report has been filed, Uconnect® care can help locate your vehicle. The Uconnect® Care agent will ask for the stolen vehicle report number issued by local law enforcement. Then, using GPS technology and the built-in wireless connection within your vehicle, the Uconnect® Care agent will be able to locate the stolen vehicle and work with law enforcement to help recover it. (Vehicle must be within the United States, have network coverage and must be registered with Uconnect® Access with an active subscription that includes the applicable feature).
7. **WiFi Hotspot** — WiFi Hotspot is on-demand WiFi 3G connectivity that's built-in and ready to go whenever you are. Once your vehicle is registered for Uconnect® Access, you can purchase a Wifi Hotspot subscription at the Uconnect® Store. After you've made your purchase, turn on your signal and connect your devices. It's never been easier to bring your home or office with you.

Your vehicle must have a working electrical system in order for any of the in vehicle Uconnect® features to operate.

Uconnect® Access Remote Features

If you own a compatible iPhone® or Android® powered device, the Uconnect® Access App allows you to remotely lock or unlock your doors, start your engine or activate your horn and lights from virtually anywhere (Vehicle must be within the United States and have network coverage). You can download the App from Mopar Owner Connect or from the App Store (iPhone) or Google Play store. Visit UconnectPhone.com to determine if your device is compatible. For Uconnect® Phone customer support and to determine if your device is compatible.

U.S. residents - visit UconnectPhone.com or call 1-877-855-8400

Remote Start — This feature provides the ability to start the engine on your vehicle, without the keys and from virtually any distance. You can send a request to your vehicle in one of two ways:

1. Using the Uconnect® Access App from a compatible smartphone.
2. From the Mopar Owner Connect website.
 - You can also send a command to turn-off an engine that has been remote started.
 - After 15 minutes if you have not entered your vehicle with the key, the engine will shut off automatically.
 - This remote function requires your vehicle to be equipped with a factory-installed Remote Start system. To use this feature after the Uconnect® Access App is downloaded, login with your user name and Uconnect® Security PIN.
 - You can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent. Login to Mopar Owner Connect (moparownerconnect.com) and click on Edit Profile to manage Uconnect® Notifications.

Remote Door Lock/Unlock — This feature provides the ability to lock or unlock the door on your vehicle, without the keys and from virtually any distance. You can send a request to your vehicle in one of three ways:

1. Using the Uconnect® Access App from a compatible smartphone.
2. From the Mopar Owner Connect website.
3. By contacting the Uconnect® Care on the phone.

To use this feature after the Uconnect® Access App is downloaded, login using your user name and Uconnect® Security PIN. Press the “App” button on your smartphone with the closed lock icon to lock the door, and press the “open lock” icon to unlock the driver’s door.

You can set-up notifications for your account to receive an E-mail or text (SMS) message every time a command is sent. Login to Mopar Owner Connect (moparownerconnect.com) and click on Edit Profile to manage Uconnect® Notifications.

Remote Horn And Lights — It’s easy to locate a vehicle in a dark, crowded or noisy parking area by activating the horn and lights. It may also help if you need to draw attention to your vehicle for any reason. You can send a request to your vehicle in one of three ways:

1. Using the Uconnect® Access App from a compatible smartphone.
2. From the Mopar Owner Connect website.
3. By contacting the Uconnect® Care on the phone.

To use this feature after the Uconnect® Access App is downloaded, login using your user name and Uconnect® Security PIN. You can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent. Login to Mopar Owner Connect (moparownerconnect.com) and click on Edit Profile to manage Uconnect® Notifications.

Voice Texting (U.S. Residents Only) — Want to dictate a personal message? Register with Uconnect® Access to take advantage of a new, cloudbased Voice Texting service, an enhancement to Voice Text Reply.

Voice Texting allows you to compose a new text or reply to an incoming text message. Before you attempt to use the Voice Texting feature, check to ensure you have the following:

1. A paired, Bluetooth® enabled phone with the Message Access Profile (MAP). Not all Bluetooth® enabled phones support MAP, including all iPhones® (Apple iOS). Visit UconnectPhone.com for system and device compatibility information.
2. An active Uconnect® Access trial or paid subscription. Press the “U” button on the lower right hand corner of the touchscreen to begin the registration process.
3. Accept the Allow MAP profile request on your smart phone. (Please refer to device manufacturer instructions for details).

To Send A Text Message:

1. Press the "Uconnect® Phone" button.
2. Wait for the beep.
3. Say "Text."
4. Uconnect® will prompt you "Say the phone number, or full name and phone type of the contact you want to send a message to."
5. Wait for the beep and say a contact that is in your phonebook, or a mobile phone number that you would like to send the message to.
6. Uconnect® will prompt you "Please say the message that you would like to send." (If you do not hear this prompt, you may not have an active subscription with Uconnect® Access).
7. Wait for the beep, and then dictate any message up to 140 characters. If you exceed 140 characters, you will hear the following prompt: "Message was too long; your message will be truncated."
8. Uconnect® will then repeat the message back to you.
9. Uconnect® will prompt you: "To add to your message, say "Continue"; To delete the current message and start over, say "Start Over"; to send the current message, say "Send"; to hear the message again, say "Repeat".
10. If you are happy with your message and would like to send it, wait for the beep and say "Send".
11. Uconnect® will then say "Sending your message."

Sample Commands For Voice Text Reply And Voice Texting

Example Command	Action
"Text John Smith"	Send a message to specific contact in address book
"Text 123 - 456 - 7890"	Send 123 - 456 - 7890 a message from your phonebook
"Show messages"	See recent text messages listed by number on Uconnect® screen
"Listen to/view (message number four, for example)"	Hear messages or read it on Uconnect® screen
"Reply"	Send a voice text reply to a current message
"Forward text/message to "John Smith"	Forward current text to specific contact in address book
"Forward text/message to "123 - 456 - 7890"	Forward current text to specific phone number

Uconnect® Access Via Mobile (If Equipped — Available On Uconnect® 8.4A And Uconnect® 8.4AN)


Uconnect® Access via Mobile offers additional apps such as Aha™, iHeartRadio, Pandora® and Slacker Radio. It uses your smartphone's existing data plan to access Uconnect® System-enabled apps, which you can control using both your touchscreen and steering wheel controls. Customer's data plan charges will apply.

To get started using Via Mobile apps, first register your Uconnect® Access system where you'll be guided through the setup of your Via Mobile (requires a compatible Android or iPhone® smartphone). Please refer to "Uconnect® Access Registration" for more information.

The Uconnect® Access app is compatible with select iPhone® and Android smartphones. Visit UconnectPhone.com to confirm that your smartphone is compatible with Uconnect®. Once you've confirmed your smartphone is compatible, pair it to the vehicle touchscreen via Bluetooth® to use Via Mobile apps. If using an iPhone®, a USB cable may also be supported for the data connection.

Launch the Uconnect® Access App on your smartphone, and login with your username and password that was set up during registration. Accept the Terms and Conditions.

- Ensure that Via Mobile data has been turned on under "Settings" in the Uconnect® Access App.
- A green indicator next to the words Via Mobile will show when it is ready to provide data to the radio (a blue indicator when data is being sent). A red indicator means that it is not ready to provide data.

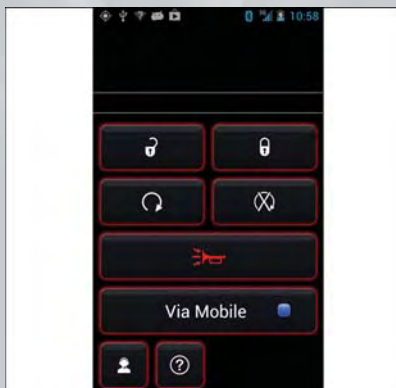

Each time you want to use a Via Mobile app in your vehicle, the Uconnect Access App must be running on your smartphone and the smartphone must be paired via Bluetooth®.



If equipped, the Via Mobile apps can be found by selecting the “Apps” soft-key in the lower right corner of the radio touchscreen. Via Mobile apps are listed under the “All Apps” tab. The words “Via Mobile” will appear after the app name indicating it is a Via Mobile app.



Via Mobile apps can also be launched through Voice Recognition by pressing the VR button on the steering wheel and stating “launch” and then the name of the app. For example, you can say “launch Aha via Mobile.”

NOTE:

For detailed information on how to use Via Mobile apps visit the Mopar Owner Connect website (www.moparownerconnect.com) and login using the username and password you set up when registering for Uconnect® Access.

A message will be displayed to remind you that Via Mobile apps utilize the data plan on your connected smartphone to provide content. Many smartphones have a limit to how much data they can utilize before incurring additional charges. The amount of data being used varies by smartphone device, cellular service provider and specific app. Check your mobile phone service plan for more details.* Touch “OK” to continue or the “X” to exit.

(*Additional smartphone data usage charges may apply.)

Determine If Your Vehicle Is Via Mobile-Enabled

To see if your Uconnect® 8.4A or 8.4AN system is equipped with Via Mobile, press the “Apps” button on the touchscreen, then press the “All Apps” tab on the left side of the touchscreen. If you see Aha™, iHeartRadio, Pandora® and Slacker then your system is capable of playing Via Mobile apps (registration required).

Earlier vehicles with Uconnect® 8.4A or 8.4AN may qualify for a software upgrade to enable Via Mobile. Call Uconnect Care at 855-792-4241 and please have the last eight characters of your Vehicle Identification Number (VIN) available, or visit:

DriveUconnect.com/features/via-mobile/

- Click on Help & Support > Select your Brand > System Updates

Via Mobile Apps — If Equipped


- **Aha™** — Aha™ makes it easy to instantly access your favorite Web content on the go. Choose from over 40,000+ stations spanning internet radio, personalized music, news, entertainment, hotels, weather, audiobooks, Facebook®, Twitter®, and more.
- **iHeartRadio** — iHeartRadio provides instant access to more than 1,500 live radio stations from across the country and allows listeners to create custom music stations inspired by their favorite artists or songs.
- **Pandora®** — Pandora® gives people the music and comedy they love anytime, anywhere. Personalized stations launch instantly, with the input of a favorite artist, track, comedian, or genre.
- **Slacker** — Enjoy millions of songs and hundreds of handcrafted stations.

NOTE:

For detailed information on how to use Via Mobile apps visit the Mopar Owner Connect website (moparownerconnect.com) and log in using the username and password you set up when registering for Uconnect® Access.

Uconnect® 8.4A

Uconnect® 8.4A AT A GLANCE

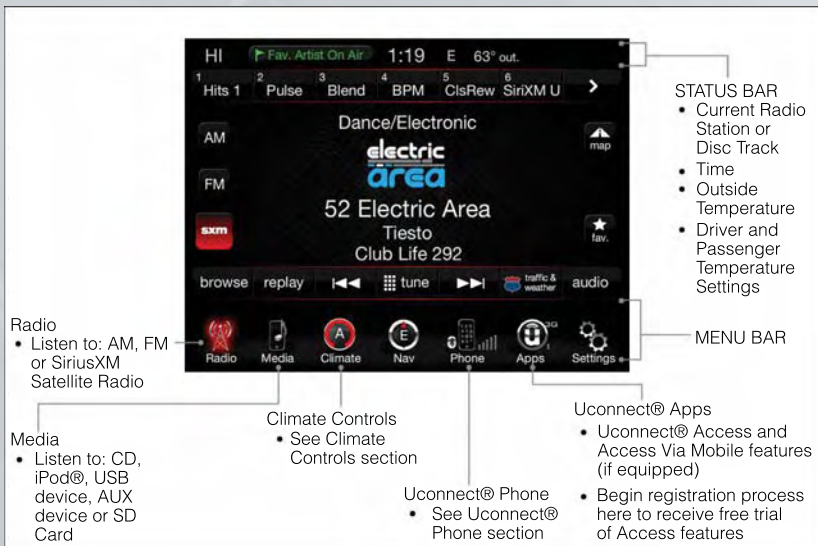

Displaying The Time

- If the time is not currently displayed on the radio or player main page, touch the “Settings” soft-key or the “Apps” soft-key and then the “Settings” soft-key. In the Settings list, touch the “Clock” soft-key then touch the check box next to “Show Time” in Status Bar.

Setting The Time

- Model 8.4AN synchronizes time automatically via GPS, so it should not require any time adjustment. If you do need to set the time manually, follow the instructions below for Model 8.4A.
- For Model 8.4A, turn the unit on, then touch the “time display” at the top of the screen. Touch “Yes”.
- If the time is not displayed at the top of the screen, touch the “Controls” soft-key or the “Apps” soft-key and then the “Settings” soft-key. In the Settings screen, touch the “Clock” soft-key, then check or uncheck this option.
- Touch + or – next to Set Time Hours and Set Time Minutes to adjust the time.
- If these features are not available, uncheck the Sync with GPS box.
- Touch X to save your settings and exit out of the Clock Setting screen.

Audio Settings

- Touch of the “Audio” soft-key to activate the Audio settings screen to adjust Balance/Fade, Equalizer, and Speed Adjusted Volume.
- You can return to the Radio screen by touching the X located at the top right.

Balance/Fade

- Touch the “Balance/Fade” soft-key to Balance audio between the front speakers or fade the audio between the rear and front speakers.
- Touching the “Front, Rear, Left, or Right” soft-keys or touch and drag the Speaker Icon to adjust the Balance/Fade.

Equalizer

- Touch the “Equalizer” soft-key to activate the Equalizer screen.
- Touch the + or - soft-keys, or by touching and dragging over the level bar for each of the equalizer bands. The level value, which spans between plus or minus 9, is displayed at the bottom of each of the Bands.

Speed Adjusted Volume

- Touch the “Speed Adjusted Volume” soft-key to activate the Speed Adjusted Volume screen. The Speed Adjusted Volume is adjusted by touching the + and - buttons or by touching and dragging over the level bar. This alters the automatic adjustment of the audio volume with variation to vehicle speed.

Surround Sound

- Touch the “Surround Sound” soft-key, select On or Off followed by pressing the “arrow back” soft-key. When this feature is activated, it provides simulated surround sound mode.

RADIO



- To access the Radio mode, touch the Radio soft-key at the lower left of the screen.

Selecting Radio Stations

- Touch the desired radio band (AM, FM or SXM) soft-key.

Seek Up/Seek Down

- Touch the Seek arrow soft-keys for less than two seconds to seek through radio stations.
- Touch and hold either arrow soft-key for more than two seconds to bypass stations without stopping. The radio will stop at the next listenable station once the arrow soft-key is released.

Direct Tune

- Tune directly to a radio station by pressing the “Tune” button on the screen, and entering the desired station number.

Store Radio Presets

- Your radio can store 36 total preset stations, 12 presets per band (AM, FM and SXM). They are shown at the top of your radio screen. To see the 12 preset stations per band, press the arrow soft-key at the top right of the screen to toggle between the two sets of six presets.
- To set a station into memory press and hold the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

SiriusXM PREMIER OVER 160 CHANNELS

- Get every channel available on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio®, every MLB® and NHL® game, every NASCAR® race, Martha Stewart and more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.
- To access SiriusXM Satellite Radio, touch the SXM soft-key on the main Radio screen.
- The following describes features that are available when in SiriusXM Satellite Radio mode.

Seek Up/Seek Down

- Touch the Seek arrow soft-keys for less than two seconds to seek through channels in SXM mode.
- Touch and hold either arrow soft-key for more than two seconds to bypass channels without stopping. The radio will stop at the next listenable channel once the arrow soft-key is released.

Direct Tune

- Tune directly to a SXM channel by pressing the Tune soft-key on the screen, and entering the desired station number.

Jump

- Automatically tells you when Traffic & Weather for a favorite city is available, and gives you the option to switch to that channel. Touch Jump to activate the feature. After listening to Traffic and Weather, touch Jump again to return to the previous channel.

Fav

- Activates the favorites menu. You can add up to 50 favorite artists or songs. Just touch Add Fav Artist or Add Fav Song while the song is playing. You will then be alerted any time one of these songs, or works by these artists, is playing on other SiriusXM channels.

SiriusXM Parental Controls

- You can skip or hide certain channels from view if you do not want access to them. Touch the More soft-key, then the Settings soft-key, next touch the Sirius Setup soft-key, then select Channel Skip. Touch the box, check-mark, next to the channel you want skipped. They will not show up in normal usage.
- SiriusXM also offers the option to permanently block selected channels. Call (1-888-601-6297 for U.S. customers, 1-877-438-9677 for Canadian customers) and request the Family-Friendly Package.

Browse

- Lets you browse the SiriusXM channel listing or Genre listing. Favorites, Game Zone, Weather and Jump settings also provide a way to browse the SiriusXM channel list.

Browse Sub-Menu	Sub-Menu Description
All	Shows the channel listing.
Genre	Provides a list of all genres, and lets you jump to a channel within the selected genre.
Presets	Lets you scroll the list of Preset satellite channels. Touch the channel, or press Enter on the Tune knob, to go to that channel. Touch the trash can icon to delete a preset. Your presets are also shown at the top of the main Satellite Radio screen.
Favorites	Lets you manage artists and songs in the Favorites list and configure Alert Settings to let you know when favorite songs or artists are playing on other channels. Also, view a list of channels airing any of your Favorites.
Game Zone	Provides alerts when your favorite sports teams are starting a game which is being aired on other SiriusXM channels, or when their game score is announced. You can select and manage your Teams list here, and configure alerts.
Jump	Lets you select your favorite cities for Traffic & Weather information, which is used by the Jump feature on the main satellite radio screen.

Replay

- Lets you replay up to 44 minutes of the content of the current SiriusXM channel.

Replay Option	Option Description
Play/Pause	Touch to Pause content playback. Touch Pause/Play again to resume playback.
Rewind/RW	Rewinds the channel content in steps of five seconds. Touch and hold to rewind continuously, then release to begin playing content at that point.
Fast Forward/FW	Forwards the content, and works similarly to Rewind/RW. However, Fast Forward/FW can only be used when content has been previously rewind.
Replay Time	Displays the amount of time in the upper center of the screen by which your content lags the Live channel.
Live	Resumes playback of Live content at any time while replaying rewind content.

- SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 for U.S. residents and 1-888-539-7474 for Canadian residents to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com (US residents) or www.siruisxm.ca (Canadian residents).** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet

radio service is available throughout our satellite service area and in AK and HI.
© 2013 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

Disc Operation — If Equipped

- Your vehicle may have a remote CD player located in the lower center console storage bin, or in the lower center bench seat bin.
- CD/Disc Mode is entered by either inserting a CD/Disc or by touching the Media button located on the side of the display. Once in Media Mode, select Disc.
- Gently insert one CD into the CD player with the CD label facing as indicated on the illustration located on the Disc player.

Seek Up/Down Buttons

- Press to seek through Disc tracks.
- Hold either button to bypass tracks without stopping.

Browse

- Touch the Browse soft-key to scroll through and select a desired track on the Disc. Touch the Exit soft-key if you wish to cancel the browse function.

MEDIA HUB – PLAYING iPod/USB/MP3 DEVICES

- There are many ways to play music from iPod®/MP3 players or USB devices through your vehicle's sound system. Touch your Media soft-key to begin.

Audio Jack (AUX)

- The AUX allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicle's sound system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Touching the AUX soft-key will change the mode to auxiliary device if the audio jack is connected, allowing the music from your portable device to be heard through the vehicle's speakers. To activate the AUX, plug in the audio jack.
- The functions of the portable device are controlled using the device buttons. The volume may be controlled using the radio or portable device.
- To route the audio cable out of the center console, use the access cut out in the front of the console.



USB Port

- Connect your iPod® or compatible device using a USB cable into the USB Port. USB Memory sticks with audio files can also be used. Audio from the device can be played on the vehicle's sound system while providing metadata (artist, track title, album, etc.) information on the radio display.
- When connected, the iPod®/compatible USB device can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.
- The iPod® battery charges when plugged into the USB port (if supported by the specific device).
- To route the USB/iPod® cable out of the center console, use the access cut out.

NOTE:

When connecting your iPod® device for the first time, the system may take several minutes to read your music, depending on the number of files. For example, the system will take approximately 5 minutes for every 1000 songs loaded on the device. Also during the reading process, the Shuffle and Browse functions will be disabled. This process is needed to ensure the full use of your iPod® features and only happens the first time it is connected. After the first time, the reading process of your iPod® will take considerably less time unless changes are made or new songs are added to the playlist.

- The USB port supports certain Mini, Classic, Nano, Touch, and iPhone® devices. The USB port also supports playing music from compatible external USB Mass Storage Class memory devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's website for iPod® software updates.

SD Card

- Play songs stored on an SD card inserted into the SD card slot.
- Song playback can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.

Bluetooth® Streaming Audio

- If equipped with Uconnect® Voice Command, your Bluetooth-equipped iPod® devices, cell phones or other media players, may also be able to stream music to your vehicle's sound system. Your connected device must be Bluetooth-compatible, and paired with your system (see Uconnect® Phone for pairing instructions). You can access the music from your connected Bluetooth® device by touching the Bluetooth® soft-key while in Media mode.

Uconnect® 8.4A & 8.4AN Available Media Hubs

Uconnect® 8.4A & 8.4AN	Media Hub (USB, AUX Ports)	Media Hub (SD, USB, AUX Ports)	Remote USB Port (Fully Functional)	Remote USB Port (Charg- ing Only)	Dual Charging Ports
	-	S	S	O	O

S = Standard Equipment

O = Optional Equipment

iPod®/CD/AUX CONTROLS



NAVIGATION (DEALER-ACTIVATED OPTION)

- Your Uconnect® 8.4A is “Navigation-Ready”, and can be equipped with Navigation at an extra cost. Please see your dealer for details.
- The information in the section below is only applicable if the Navigation has been activated.

Changing the Navigation Voice Prompt Volume

1. Touch the Settings soft-key.
2. In the Settings menu, touch the Guidance soft-key.
3. In the Guidance menu, adjust the Nav Volume by touching the + or – Nav Volume Adjustment soft-keys.



Finding Points of Interest (POI)

- From the main Navigation menu, touch the Where To? soft-key, then touch the Points of Interest soft-key.
- Select a Category and then a subcategory, if necessary.
- Select your destination and touch the Yes soft-key.

Finding a Place by Spelling the Name

- From the Main Navigation Menu touch the Where to? soft-key, touch the Points of Interest soft-key and then touch the Spell Name soft-key.
- Enter the name of your destination.
- Touch the List soft-key.
- Select your destination and touch the Yes soft-key.

Entering a Destination Address

- From the main Navigation menu touch the Where To? soft-key, then touch the Address soft-key.
- Follow the on-screen prompts (country, state/province, city, street) to enter the address and touch the Yes soft-key.
- Destination entry is not available while your vehicle is in motion. However, you can also use Voice Command to enter an address while moving. See Voice Command Tips for more information.

Setting Your Home Location

- Touch the NAV soft-key in the menu bar to access the Navigation system and the Main Navigation menu.
- Touch the Where To? soft-key, then touch the Go Home soft-key.
- You may enter your address directly, use your current location as your home address, or choose from recently found locations.
- To delete your Home location (or other saved locations) so you can save a new Home location, touch the Where To? soft-key from the Main Navigation menu, then touch the Go Home soft-key, and in the Yes screen touch the Options soft-key. In the Options menu touch Clear Home. Set a new Home location by following the previous instructions.

Go Home

- A Home location must be saved in the system. From the Main Navigation menu, touch the Where To? soft-key, then touch the Go Home soft-key.



- Your route is marked with a blue line on the map. If you depart from the original route, your route is recalculated. A speed limit icon could appear as you travel on major roadways.

Adding a Stop

- To add a stop you must be navigating a route.
- Touch the Menu soft-key to return to the Main Navigation menu.
- Touch the Where To? soft-key, then search for the extra stop. When another location has been selected, you can choose to cancel your previous route, add as the first destination or add as the last destination.
- Touch the desired selection and touch the Yes soft-key.

Taking a Detour

- To take a detour you must be navigating a route.
- Touch the Detour soft-key.

NOTE:

If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

- For more information, see your Uconnect® Supplement Manual.

Uconnect® Phone (Bluetooth® HANDS FREE CALLING)

- If the Uconnect® Phone Button  exists on your steering wheel, then you have the Uconnect® Phone features.
- The Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).
- The Uconnect® Phone allows you to dial a phone number with your mobile phone using simple voice commands or using screen soft-keys.
- Refer to the Understand The Features Of Your Vehicle section of your vehicle's Owner's Manual on the DVD for further details.

NOTE:

The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® Hands-Free Profile, Version 1.0 or higher. For Uconnect® customer support, call 1-877-855-8400 or visit www.UconnectPhone.com. Canadian Residents: call 1-800-465-2001 (English) or 1-800-387-9983 (French).

Pairing a Phone

- To use the Uconnect® Phone feature, you must first pair your Bluetooth® phone with the Uconnect® system.

Start pairing procedure on the radio

- Touch the Phone soft-key and then the Settings soft-key. Next, touch Add Device.
- Uconnect® Phone will display an “In progress” screen while the system is connecting.

Start pairing procedure on mobile phone

- Search for available devices on your Bluetooth® enabled mobile phone. This is usually within Settings or Options under “Bluetooth”. See your mobile phone's manual for details.
- When your phone finds the system, select “Uconnect” as the paired device. You may be prompted by your phone to download the phonebook. This is so you can make calls by saying the name of your contact (PBAP-Phone Book Access Profile).

Complete the pairing procedure

- When prompted on the phone, verify with the radio password shown on the Uconnect® Screen.
- If your phone asks you to accept a connection request from Uconnect®, select “Yes”. If available, check the box telling it not to ask again – that way your phone will automatically connect each time you start the vehicle.

Select the mobile phone's priority level

- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting Yes will make this phone the highest priority. This phone will take precedence over other paired phones within range. Only one phone can be paired at a time.

- You are now ready to make hands-free calls. Press the Uconnect® Phone button on your steering wheel to begin.

Making A Phone Call

- Press the Uconnect® Phone button .
- After the BEEP, say “dial” then the number (or “call” then the name as listed in your phone; see Phonebook).

NOTE:

You can also initiate a call by using the touchscreen on the Phone main screen.

Receiving A Call – Accept (And End)

- When an incoming call rings/is announced on Uconnect®, press the Phone button .
- To end a call, press the Phone button .

Mute (Or Unmute) Microphone During Call

- During a call, touch the mute soft-key on the Phone main screen to mute and unmute the call.

Transfer Ongoing Call Between Handset And Vehicle

- During an on-going call, touch the Transfer soft-key on the Phone main screen to transfer an on-going call between handset and vehicle.

Common Phone Commands (Examples)

- “Call John Smith”
- “Call John Smith mobile”
- “Dial 1 248 555 1212”
- “Call Emergency”
- “Call Towing Assistance”
- “Redial”

Phonebook

- Uconnect® radios will automatically download your phonebook from your paired phone, if this feature is supported by your phone. Entries are updated each time that the phone is connected. If your phone book entries do not appear, check the settings on your phone. Some phones require you to enable this feature manually.
- Your phonebook can be browsed on your radio screen, but editing can only be done on your phone. To browse, touch the Phone soft-key, then the Phonebook soft-key.
- Favorite phonebook entries can be saved as Favorites for quicker access. Favorites are shown at the top of your main phone screen.

Voice Command Tips (8.4 and 8.4N ONLY)

- Using complete names (i.e; Call John Doe vs. Call John) will result in greater system accuracy.
- You can “chain” commands together for faster results. Say “Call John Doe, mobile”, for example.
- If you are listening to available voice command options, you do not have to listen to the entire list. When you hear the command that you need, press the  button on the steering wheel, wait for the beep and say your command.

Changing The Volume Of The Voice Command Prompts

- Start a dialogue by pressing the Phone button  , then say a command, for example - "Help."
- Use the radio VOLUME/MUTE rotary knob to adjust the Uconnect® audio prompt volume to a comfortable level. Please note that the Uconnect® audio prompt volume setting for Uconnect® is different than the audio system.

NOTE:

To access help, press the Uconnect® Phone  button on the steering wheel and say "help." Touch the display or push either  or  button and say "cancel" to cancel the help session.

Voice Texting

- Uconnect® Phone can read or send new text messages from your mobile phone.
- Your mobile phone must be MAP (Message Access Profile) compatible to support SMS via Bluetooth® to use this feature. If the Uconnect® Phone determines your phone is not compatible with SMS messaging over Bluetooth® the “Messaging” button will be greyed out and the feature will not be available for use.

NOTE:

For mobile phone compatibility and pairing instructions, please visit www.UconnectPhone.com.

WARNING!

- Any voice commanded system should be used only in safe driving conditions following applicable laws regarding phone use. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing you and others to be severely injured or killed.
- In an emergency, to use Uconnect® Phone, your mobile phone must be:
 - turned on,
 - paired to Uconnect® Phone,
 - and have network coverage.

VOICE COMMAND QUICK REFERENCE

Uconnect® 8.4A Voice Command Quick Reference

- If the Uconnect® Voice Command  button exists on your steering wheel, you have the Voice Command feature, which is optimized for the driver. The Voice Command feature lets you keep your hands on the wheel, your eyes on the road, and control navigation and media sources.
- When you press the Voice Command  button located on the steering wheel, you will hear a beep. After the beep, give your command. If you do not know what commands to say, you can say “help” and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command  button, after the beep, say your command.

NOTE:

All phone oriented voice commands are accessible by first pressing the Phone Pick Up  button, not the Voice Command button. To end a call, simply press the Phone Hang Up  button. In some vehicles, the Phone Pickup  button serves the dual purpose of ending calls as well.

Voice Command (VR) User TIPS

- To hear available commands, press the Uconnect® Voice Command button and say “Help”. You will hear available commands for the menu displayed.
- At any time, you can say the words “Cancel” or “Help”. These commands are universal and can be used from virtually any menu. All other specific commands can be used depending upon the active application.
- You can interrupt the system prompts at any time by pressing the Uconnect® Voice Command button while the system is speaking. After the beep, you can say a command.
- You can ‘chain’ commands together for faster results. Say “Navigate to 1234 Main Street Hometown, California”, for example.
- For best performance, adjust the rearview mirror to provide at least ½ in (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.
- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Make sure that no one other than you is speaking during a Voice Command period.

Steering Wheel Buttons

- You can control many of your radio features using your voice. Press either the VR  or Phone Pick Up  button on your steering wheel.

Available Radio Soft–Key Voice Commands



Types of Voice Commands Available	Steering Wheel Buttons to Press:	(1) Radio Mode	(2) Climate Controls	(3) Navigation	(4) Phone Mode	(5) APPS	(6) Settings
	Uconnect® Voice Command (VR) Button	AM/FM & Satellite Band Control	Temperature Control	Destination Selection and View	-	Yelp®	-
	GENERAL						
	Uconnect® Phone Pick Up Button	-	-	-	Call Initiation, Call Management, Pre-defined Voice Text Reply	-	-


Voice Command Examples – Uconnect® 8.4A

While In:	Voice Command Example:
GENERAL	
Anytime	“Go to Radio” (Media, Climate, Navigation, Phone, Apps) – Settings, and Controls are not Voice Command accessible “Cancel” “Help” (to listen to suggested commands specific to current need) “Repeat” “Launch Yelp®” – Required 1st voice command to launch Yelp® app “Yelp® Search” – Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button
RADIO	
AM/FM	“Tune to AM950”, “Tune to 95.5FM (preset 5)”
Satellite Band Control	“Tune to Satellite Channel 80's on 8”, Tune to Satellite Channel 32 (preset 4)
MEDIA	
Media Devices Control (Functionality is dependent on compatibility between devices and radio)	“Browse” (show) “artist” (albums, music) “Show paired phones” (devices) “Play song – Maple Leaf Rag” (artist - Scott Joplin, genre - rock, album - Ragtime Favorites) “Shuffle” – available with iPod®, USB and SD Card
CLIMATE	
Temperature Control	“Set temperature to 70 degrees” – single climate zone vehicles
NAVIGATION	
Destination Selection & View	“Go Home” – destination previously defined by driver “Repeat guidance” – hear the last navigation prompt “Cancel Route” “View Map”
PHONE	
Call Initiation (Requires that phone has been Bluetooth® paired with radio)	“Dial 123-456-7890” (phone number) “Call John Smith mobile” (home, office, other) “Redial” “Show outgoing” (recent) “calls”
Call Management	“Search for John Smith” (any contact name in address book) “Show (display list) contacts”

While In:	Voice Command Example:
PHONE	
Voice Texting (Available during trial period or if subscribed to Uconnect® Access Advantage)	Create a text message using Voice Command Capability "Send a message to John Smith (123-456-7890)" "Show Messages" "Listen to" (view) "number 4" "Reply" "Send Text" "Forward text" (message) "to John Smith" (phone type, number)
Voice Text Reply (Radio audibly recognizes these 18 pre-formatted SMS messages as you speak)	Forward one of 18 pre-formatted SMS messages to incoming calls/text messages: "Yes." "No." "Okay." "I can't talk right now." "Call me." "I'll call you later." "I'm on my way." "Thanks." "I'll be late." "I will be <number> minutes late." "See you in <number> minutes" "Stuck in traffic." "Start without me." "Where are you?" "Are you there yet?" "I need directions." "I'm lost." "See you later."
APPS	
Yelp® (Yelp® adds it's own audible prompts, and response time varies depending on carrier coverage speed)	"Launch Yelp®" – Required 1st voice command to launch Yelp® app "Yelp® Search" – Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button "Hotel" (restaurant, gas station, mail, hospital) – for nearest desired general POI "Italian restaurants" – for nearest specified POI category

Uconnect® 8.4AN

Uconnect® 8.4AN AT A GLANCE

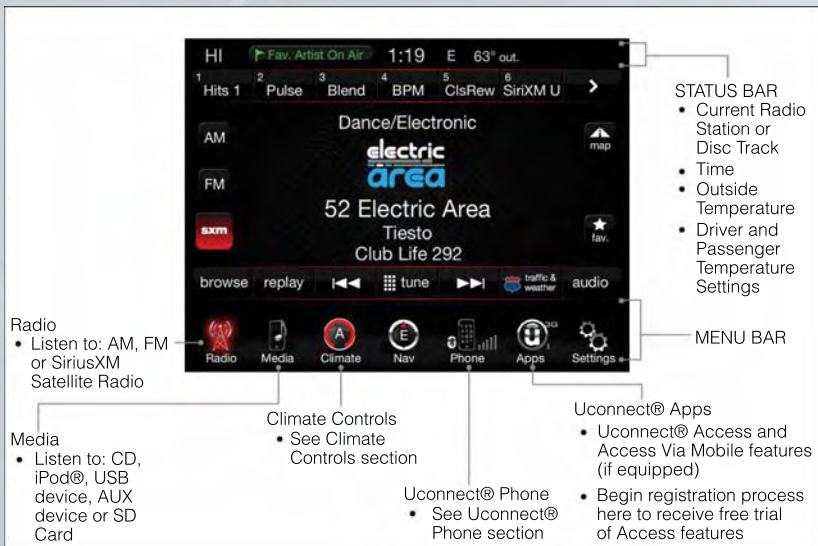

Displaying The Time

- If the time is not currently displayed on the radio or player main page, touch the “Controls” soft-key or the “Apps” soft-key, then the “Settings” soft-key. In the Settings list, touch the “Clock” soft-key then touch the check box next to “Show Time” in Status Bar.

Setting The Time

- Model 8.4AN synchronizes time automatically via GPS, so it should not require any time adjustment. If you do need to set the time manually, follow the instructions below for Model 8.4A.
- For Model 8.4A, turn the unit on, then touch the “Time” display at the top of the screen. Touch “Yes”.
- If the time is not displayed at the top of the screen, touch the “Controls” soft-key or the “Apps” soft-key, then the “Settings” soft-key. In the Settings screen, touch the “Clock” soft-key, then check or uncheck this option.
- Touch + or – next to Set Time Hours and Set Time Minutes to adjust the time.
- If these features are not available, uncheck the Sync Time box.
- Touch X to save your settings and exit out of the Clock Setting screen.

Audio Settings

- Touch the “Audio” soft-key to activate the Audio settings screen to adjust Balance/Fade, Equalizer and Speed Adjusted Volume.
- You can return to the Radio screen by touching the X located at the top right.

Balance/Fade

- Touch the “Balance/Fade” soft-key to balance audio between the front speakers or fade the audio between the rear and front speakers.
- Touching the “Front, Rear, Left, or Right” soft-keys or touch and drag the blue Speaker Icon to adjust the Balance/Fade.

Equalizer

- Touch the “Equalizer” soft-key to activate the Equalizer screen.
- Touch the + or - soft-keys, or by touching and dragging over the level bar for each of the equalizer bands. The level value, which spans between plus or minus 9, is displayed at the bottom of each of the Bands.

Speed Adjusted Volume

- Touch the “Speed Adjusted Volume” soft-key to activate the Speed Adjusted Volume screen. The Speed Adjusted Volume is adjusted by touching the volume level indicator. This alters the automatic adjustment of the audio volume with variation to vehicle speed.

Surround Sound

- Touch the “Surround Sound” soft-key, select On or Off followed by pressing the “arrow back” soft-key. When this feature is activated, it provides simulated surround sound mode.

RADIO



- To access the Radio mode, touch the Radio soft-key at the lower left of the screen.

Selecting Radio Stations

- Touch the desired radio band (AM, FM or SXM) soft-key.

Seek Up/Seek Down

- Touch the Seek arrow soft-keys for less than two seconds to seek through radio stations.
- Touch and hold either arrow soft-key for more than two seconds to bypass stations without stopping. The radio will stop at the next listenable station once the arrow soft-key is released.

Direct Tune

- Tune directly to a radio station by pressing the “Tune” button on the screen, and entering the desired station number.

Store Radio Presets

- Your radio can store 36 total preset stations, 12 presets per band (AM, FM and SXM). They are shown at the top of your radio screen. To see the 12 preset stations per band, press the arrow soft-key at the top right of the screen to toggle between the two sets of six presets.
- To set a station into memory press and hold the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

HD Radio

- HD Radio technology (available on Uconnect® 8.4AN) allows broadcasters to transmit a high-quality digital signal.
- With an HD radio receiver, the listener is provided with a clear sound that enhances the listening experience. HD radio can also transmit data such as song title or artist.

SiriusXM PREMIER OVER 160 CHANNELS

- Get every channel available on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio®, every MLB® and NHL® game, every NASCAR® race, Martha Stewart and more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.
- To access SiriusXM Satellite Radio, touch the SXM soft-key on the main Radio screen.
- The following describes features that are available when in SiriusXM Satellite Radio mode.

Seek Up/Seek Down

- Touch the Seek arrow soft-keys for less than two seconds to seek through channels in SXM mode.
- Touch and hold either arrow soft-key for more than two seconds to bypass channels without stopping. The radio will stop at the next listenable channel once the arrow soft-key is released.

Direct Tune

- Tune directly to a SXM channel by pressing the Tune soft-key on the screen, and entering the desired station number.

Jump

- Automatically tells you when Traffic & Weather for a favorite city is available, and gives you the option to switch to that channel. Touch Jump to activate the feature. After listening to Traffic and Weather, touch Jump again to return to the previous channel.

Fav

- Activates the favorites menu. You can add up to 50 favorite artists or songs. Just touch Add Fav Artist or Add Fav Song while the song is playing. You will then be alerted any time one of these songs, or works by these artists, is playing on other SiriusXM channels.

SiriusXM Parental Controls

- You can skip or hide certain channels from view if you do not want access to them. Touch the More soft-key, then the Settings soft-key, next touch the Sirius Setup soft-key, then select Channel Skip. Touch the box, check-mark, next to the channel you want skipped. They will not show up in normal usage.
- SiriusXM also offers the option to permanently block selected channels. Call (1-888-601-6297 for U.S. customers, 1-877-438-9677 for Canadian customers) and request the Family-Friendly Package.

Browse

- Lets you browse the SiriusXM channel listing or Genre listing. Favorites, Game Zone, Weather and Jump settings also provide a way to browse the SiriusXM channel list.

Browse Sub-Menu	Sub-Menu Description
All	Shows the channel listing.
Genre	Provides a list of all genres, and lets you jump to a channel within the selected genre.
Presets	Lets you scroll the list of Preset satellite channels. Touch the channel, or press Enter on the Tune knob, to go to that channel. Touch the trash can icon to delete a preset. Your presets are also shown at the top of the main Satellite Radio screen.
Favorites	Lets you manage artists and songs in the Favorites list and configure Alert Settings to let you know when favorite songs or artists are playing on other channels. Also, view a list of channels airing any of your Favorites.
Game Zone	Provides alerts when your favorite sports teams are starting a game which is being aired on other SiriusXM channels, or when their game score is announced. You can select and manage your Teams list here, and configure alerts.
Jump	Lets you select your favorite cities for Traffic & Weather information, which is used by the Jump feature on the main satellite radio screen.

Replay

- Lets you replay up to 44 minutes of the content of the current SiriusXM channel.

Replay Option	Option Description
Play/Pause	Touch to Pause content playback. Touch Pause/Play again to resume playback.
Rewind/RW	Rewinds the channel content in steps of five seconds. Touch and hold to rewind continuously, then release to begin playing content at that point.
Fast Forward/FW	Forwards the content, and works similarly to Rewind/RW. However, Fast Forward/FW can only be used when content has been previously rewound.
Replay Time	Displays the amount of time in the upper center of the screen by which your content lags the Live channel.
Live	Resumes playback of Live content at any time while replaying rewound content.

- SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 for U.S. residents and 1-888-539-7474 for Canadian residents to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com (US residents) or www.siriusxm.ca (Canadian residents).** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2013 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

Disc Operation — If Equipped

- Your vehicle may have a remote CD player located in the lower center console storage bin, or in the lower center bench seat bin.
- CD/Disc Mode is entered by either inserting a CD/Disc or by touching the Media button located on the side of the display. Once in Media Mode, select Disc.
- Gently insert one CD into the CD player with the CD label facing as indicated on the illustration located on the Disc player.

Seek Up/Down Buttons

- Press to seek through Disc tracks.
- Hold either button to bypass tracks without stopping.

Browse

- Touch the Browse soft-key to scroll through and select a desired track on the Disc. Touch the Exit soft-key if you wish to cancel the browse function.

MEDIA HUB – PLAYING iPod/USB/MP3 DEVICES

- There are many ways to play music from iPod®/MP3 players or USB devices through your vehicle's sound system. Touch your Media soft-key to begin.

Audio Jack (AUX)

- The AUX allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicle's sound system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Touching the AUX soft-key will change the mode to auxiliary device if the audio jack is connected, allowing the music from your portable device to be heard through the vehicle's speakers. To activate the AUX, plug in the audio jack.



- The functions of the portable device are controlled using the device buttons. The volume may be controlled using the radio or portable device.
- To route the audio cable out of the center console, use the access cut out in the front of the console.

USB Port

- Connect your iPod® or compatible device using a USB cable into the USB Port. USB Memory sticks with audio files can also be used. Audio from the device can be played on the vehicle's sound system while providing metadata (artist, track title, album, etc.) information on the radio display.
- When connected, the iPod®/compatible USB device can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.
- The iPod® battery charges when plugged into the USB port (if supported by the specific device).
- To route the USB/iPod® cable out of the center console, use the access cut out.

NOTE:

When connecting your iPod® device for the first time, the system may take several minutes to read your music, depending on the number of files. For example, the system will take approximately 5 minutes for every 1000 songs loaded on the device. Also during the reading process, the Shuffle and Browse functions will be disabled. This process is needed to ensure the full use of your iPod® features and only happens the first time it is connected. After the first time, the reading process of your iPod® will take considerably less time unless changes are made or new songs are added to the playlist.

- The USB port supports certain Mini, Classic, Nano, Touch, and iPhone® devices. The USB port also supports playing music from compatible external USB Mass Storage Class memory devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's website for iPod® software updates.

SD Card

- Play songs stored on an SD card inserted into the SD card slot.
- Song playback can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.

Bluetooth® Streaming Audio

- If equipped with Uconnect® Voice Command, your Bluetooth-equipped iPod® devices, cell phones or other media players, may also be able to stream music to your vehicle's sound system. Your connected device must be Bluetooth-compatible, and paired with your system (see Uconnect® Phone for pairing instructions). You can access the music from your connected Bluetooth® device by touching the Bluetooth® soft-key while in Media mode.

Uconnect® 8.4A & 8.4AN Available Media Hubs

Uconnect® 8.4A & 8.4AN	Media Hub (USB, AUX Ports)	Media Hub (SD, USB, AUX Ports)	Remote USB Port (Fully Functional)	Remote USB Port (Charging Only)	Dual Charging Ports
	-	S	S	O	O

S = Standard Equipment

O = Optional Equipment

iPod®/CD/AUX CONTROLS

Repeat music track

Music source:

- USB/iPod®
- SD Card
- AUX
- Bluetooth®
- Disc

Browse music by:

- Folder
- Artist
- Playlist
- Song
- Album
- Genre

Music track and time

Shuffle music tracks

Music track information

Show songs currently in queue to be played

NAVIGATION

- Touch the Nav soft-key in the menu bar to access the Navigation system.

Changing the Navigation Voice Prompt Volume

1. Touch the View Map soft-key from the Nav Main Menu.
2. With the map displayed, touch the Settings soft-key in the lower right area of the screen.
3. In the Settings menu, touch the Guidance soft-key.
4. In the Guidance menu, adjust the Nav Volume by touching the + or – soft-keys.



Finding Points of Interest

- From the main Navigation menu, touch the Where To? soft-key, then touch the Points of Interest soft-key.
- Select a Category and then a subcategory, if necessary.
- Select your destination and touch the Yes soft-key.

Finding a Place by Spelling the Name

- From the Main Navigation Menu touch the Where to? soft-key, touch the Points of Interest soft-key, then touch the Spell Name soft-key.
- Enter the name of your destination.
- Touch the Done soft-key.
- Select your destination and touch the Yes soft-key.

One-Step Voice Destination Entry

- Enter a navigation destination without taking your hands off the wheel.
- Just press the VR  button on the steering wheel, wait for the beep and say something like, "800 Chrysler Drive Auburn Hills MI."

NOTE:

Destination entry is not available while your vehicle is in motion. However, you can also use Voice Commands to enter an address while moving. Refer to Common Navigation Voice Commands in the Uconnect® Voice Command section.

Setting Your Home Location

- Touch the NAV soft-key in the menu bar to access the Navigation system and the Main Navigation menu.
- Touch the Where To? soft-key, then touch the Go Home soft-key.
- You may enter your address directly, use your current location as your home address, or choose from recently found locations.
- To delete your Home location (or other saved locations) so you can save a new Home location, touch the Where To? soft-key from the Main Navigation menu, then touch the Go Home soft-key, and in the Yes screen touch the Options soft-key. In the Options menu touch the Clear Home soft-key. Set a new Home location by following the previous instructions.

Go Home

- A Home location must be saved in the system. From the Main Navigation menu, touch the Where To? soft-key, then touch the Go Home soft-key.



- Your route is marked with a blue line on the map. If you depart from the original route, your route is recalculated. A speed limit icon could appear as you travel on major roadways.

Adding a Stop

- To add a stop you must be navigating a route.
- Touch the Menu soft-key to return to the Main Navigation menu.
- Touch the Where To? soft-key, then search for the extra stop. When another location has been selected, you can choose to cancel your previous route, add as the first destination or add as the last destination.
- Touch the desired selection and touch the Yes soft-key.

Taking a Detour

- To take a detour you must be navigating a route.
- Touch the Detour soft-key.

NOTE:

If the route you are currently taking is the only reasonable option, the device may not calculate a detour. For more information, see your Uconnect® User's Manual.

SiriusXM TRAFFIC (US Market Only)

Don't drive through traffic. Drive around it.

- Avoid congestion before you reach it. By enhancing your vehicle's navigation system with the ability to see detailed traffic information, you can pinpoint traffic incidents, determine average traffic speed and estimate travel time along your route. Since the service is integrated with a vehicle's navigation system, SiriusXM Traffic can help drivers pick the fastest route based on traffic conditions.
- 1. Detailed information on traffic speed, accidents, construction, and road closings.
- 2. Traffic information from multiple sources, including police and emergency services, cameras and road sensors.
- 3. Coast-to-coast delivery of traffic information.
- 4. View conditions for points along your route and beyond. Available in over 130 markets.

SiriusXM TRAVEL LINK (US Market Only)

- In addition to delivering over 130 channels of the best sports, entertainment, talk, and commercial-free music, SiriusXM offers premium data services that work in conjunction with compatible navigation systems. SiriusXM Travel Link brings a wealth of useful information into your vehicle and right to your fingertips.
- Weather -- Check variety of local and national weather information from radar maps to current and 5-day forecast.
- Fuel Prices -- Check local gas and diesel prices in your area and route to the station of your choice.
- Sports Scores -- In-game and final scores as well as weekly schedules.
- Movie Listings -- Check local movie theatres and listings in your area and route to the theater of your choice.
- SiriusXM Travel Link feature is completely integrated into your vehicle. A few minutes after you start your vehicle, Travel Link information arrives and updates in the background. You can access the information whenever you like, with no waiting.
- To access SiriusXM Travel Link, touch Apps soft-key, then the SiriusXM Travel Link soft-key.

NOTE:

SiriusXM Travel Link requires a subscription, sold separately after the 1 year trial subscription included with your vehicle purchase.

- SiriusXM Travel Link is only available in the United States.

Fuel Prices	Check local gas and diesel prices in your area and route to the station of your choice.
Movie Listings	Check local movie theatres and listings in your area and route to the theater of your choice.
Sports Scores	In-game and final scores as well as weekly schedules.
Weather	Check variety of local and national weather information from radar maps to current and 5-day forecast.

Uconnect® Phone (Bluetooth® HANDS FREE CALLING)

- If the Uconnect® Phone Button  exists on your steering wheel, then you have the Uconnect® Phone features.
- The Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).
- The Uconnect® Phone allows you to dial a phone number with your mobile phone using simple voice commands or using screen soft-keys.
- Refer to the Understand The Features Of Your Vehicle section of your vehicle's Owner's Manual on the DVD for further details.

NOTE:

The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® Hands-Free Profile, Version 1.0 or higher. For Uconnect® Customer Support: U.S. residents visit www.UconnectPhone.com or call 1-877-855-8400. Canadian Residents – visit www.UconnectPhone.com or call, 1-800-465-2001 (English) or 1-800-387-9983 (French).

Pairing a Phone

- To use the Uconnect® Phone feature, you must first pair your Bluetooth® phone with the Uconnect® system.

Start pairing procedure on the radio

- Touch the Phone soft-key and then the Settings soft-key. Next, touch Add Device.
- Uconnect® Phone will display an “In progress” screen while the system is connecting.

Start pairing procedure on mobile phone

- Search for available devices on your Bluetooth® enabled mobile phone. This is usually within Settings or Options under “Bluetooth”. See your mobile phone's manual for details.
- When your phone finds the system, select “Uconnect” as the paired device. You may be prompted by your phone to download the phonebook. This is so you can make calls by saying the name of your contact (PBAP-Phone Book Access Profile).

Complete the pairing procedure

- When prompted on the phone, verify with the radio password shown on the Uconnect® Screen.
- If your phone asks you to accept a connection request from Uconnect®, select “Yes”. If available, check the box telling it not to ask again – that way your phone will automatically connect each time you start the vehicle.

Select the mobile phone's priority level

- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting Yes will make this phone the highest priority. This phone will take precedence over other paired phones within range. Only one phone can be paired at a time.
- You are now ready to make hands-free calls. Press the Uconnect® Phone button on your steering wheel to begin.

Making A Phone Call

- Press the Uconnect® Phone button .
- After the BEEP, say “dial” then the number (or “call” then the name as listed in your phone; see Phonebook).

NOTE:

You can also initiate a call by using the touchscreen on the Phone main screen.

Receiving A Call – Accept (And End)

- When an incoming call rings/is announced on Uconnect®, press the Phone button .
- To end a call, press the Phone button .

Mute (Or Unmute) Microphone During Call

- During a call, touch the mute soft-key on the Phone main screen to mute and unmute the call.

Transfer Ongoing Call Between Handset And Vehicle

- During an on-going call, touch the Transfer soft-key on the Phone main screen to transfer an on-going call between handset and vehicle.

Common Phone Commands (Examples)

- “Call John Smith”
- “Call John Smith mobile”
- “Dial 1 248 555 1212”
- “Call Emergency”
- “Call Towing Assistance”
- “Redial”

Phonebook

- Uconnect® radios will automatically download your phonebook from your paired phone, if this feature is supported by your phone. Entries are updated each time that the phone is connected. If your phone book entries do not appear, check the settings on your phone. Some phones require you to enable this feature manually.
- Your phonebook can be browsed on your radio screen, but editing can only be done on your phone. To browse, touch the Phone soft-key, then the Phonebook soft-key.
- Favorite phonebook entries can be saved as Favorites for quicker access. Favorites are shown at the top of your main phone screen.

Voice Command Tips (8.4 and 8.4N ONLY)

- Using complete names (i.e; Call John Doe vs. Call John) will result in greater system accuracy.
- You can “chain” commands together for faster results. Say “Call John Doe, mobile”, for example.
- If you are listening to available voice command options, you do not have to listen to the entire list. When you hear the command that you need, press the  button on the steering wheel, wait for the beep and say your command.

Changing The Volume Of The Voice Command Prompts

- Start a dialogue by pressing the Phone button , then say a command, for example - "Help."
- Use the radio VOLUME/MUTE rotary knob to adjust the Uconnect® audio prompt volume to a comfortable level. Please note that the Uconnect® audio prompt volume setting for Uconnect® is different than the audio system.

NOTE:

To access help, press the Uconnect® Phone  button on the steering wheel and say "help." Touch the display or push either  or  button and say "cancel" to cancel the help session.

Voice Texting

- Uconnect® Phone can read or send new text messages from your mobile phone.
- Your mobile phone must be MAP (Message Access Profile) compatible to support SMS via Bluetooth® to use this feature. If the Uconnect® Phone determines your phone is not compatible with SMS messaging over Bluetooth® the “Messaging” button will be greyed out and the feature will not be available for use.

NOTE:

For mobile phone compatibility and pairing instructions, please visit www.UconnectPhone.com.

WARNING!

- Any voice commanded system should be used only in safe driving conditions following applicable laws regarding phone use. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing you and others to be severely injured or killed.
- In an emergency, to use Uconnect® Phone, your mobile phone must be:
 - turned on,
 - paired to Uconnect® Phone,
 - and have network coverage.

VOICE COMMAND QUICK REFERENCE

Uconnect® 8.4AN Voice Command Quick Reference

- If the Uconnect® Voice Command  button exists on your steering wheel, you have the Voice Command feature, which is optimized for the driver. The Voice Command feature lets you keep your hands on the wheel, and your eyes on the road.
- When you press the Voice Command  button located on the steering wheel, you will hear a beep. After the beep, give your command. If you do not know what commands to say, you can say “help” and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command  button, after the beep, say your command.

NOTE:

All phone oriented voice commands are accessible by first pressing the Phone Pickup  button, not the Voice Command button. To end a call, simply press the Phone Hang Up  button. In some vehicles, the Phone Pickup  button serves the dual purpose of ending calls as well.

Voice Command (VR) User TIPS

- To hear available commands, press the Uconnect® Voice Command button and say “Help”. You will hear available commands for the menu displayed.
- At any time, you can say the words “Cancel” or “Help”. These commands are universal and can be used from virtually any menu. All other specific commands can be used depending upon the active application.
- You can interrupt the system prompts at any time by pressing the Uconnect® Voice Command button while the system is speaking. After the beep, you can say a command.
- You can ‘chain’ commands together for faster results. Say “Call Joe Doe mobile”, for example.
- For best performance, adjust the rearview mirror to provide at least ½ in (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.
- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Make sure that no one other than you is speaking during a Voice Command period.

Steering Wheel Buttons

- You can control many of your radio features using your voice. Press either the VR  or Phone Pick Up  button on your steering wheel.

Available Radio Soft-Key Voice Commands



Types of Voice Commands Available	Steering Wheel Buttons to Press:	(1) Radio Mode	(2) Climate Controls	(3) Navigation	(4) Phone Mode	(5) APPS	(6) Settings
	Uconnect® Voice Command (VR) Button	AM/FM & Satellite Band Control	Temperature Control	Destination Selection and View	-	Yelp®	-
	GENERAL						
	Uconnect® Phone Pick Up Button	-	-	-	Call Initiation, Call Management, Pre-defined Voice Text Reply	-	-

Voice Command Examples – Uconnect® 8.4AN

While In:	Voice Command Example:
GENERAL	
Anytime	“Go to Radio” (Media, Climate, Navigation, Phone, Apps) – Settings, and Controls are not Voice Command accessible “Cancel” “Help” (to listen to suggested commands specific to current need) “Repeat” “Launch Yelp®” – Required 1st voice command to launch Yelp® app “Yelp® Search” – Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button
RADIO	
AM/FM	“Tune to AM950”, “Tune to 95.5FM (preset 5)”
Satellite Band Control	“Tune to Satellite Channel 80's on 8”, Tune to Satellite Channel 32 (preset 4)
MEDIA	
Media Devices Control (Functionality is dependent on compatibility between devices and radio)	“Browse” (show) “artist” (albums, music) “Show paired phones” (devices) “Play song – Maple Leaf Rag” (artist - Scott Joplin, genre - rock, album - Ragtime Favorites) “Shuffle” – available with iPod, USB and SD Card
CLIMATE	
Temperature Control	“Set temperature to 70 degrees” – single climate zone vehicles
NAVIGATION	
Destination Selection & View	“Navigate to” (Destination) 123 Any Street, Any town, Any State (any full address) “Go Home” – destination previously defined by driver “Repeat guidance” – hear the last navigation prompt “Cancel Route” “View Map”
PHONE	
Call Initiation (Requires that phone has been Bluetooth® paired with radio)	“Dial 123-456-7890” (phone number) “Call John Smith mobile” (home, office, other) “Redial” “Show outgoing” (recent) “calls”
Call Management	“Search for John Smith” (any contact name in address book) “Show (display list) contacts”

While In:	Voice Command Example:
PHONE	
Voice Texting (Available during trial period or if subscribed to Uconnect® Access Advantage)	Create a text message using Voice Command Capability "Send a message to John Smith (123-456-7890)" "Show Messages" "Listen to" (view) "number 4" "Reply" "Send Text" "Forward text" (message) "to John Smith" (phone type, number)
Voice Text Reply (Radio audibly recognizes these 18 pre-formatted SMS messages as you speak)	Forward one of 18 pre-formatted SMS messages to incoming calls/text messages: "Yes." "No." "Okay." "I can't talk right now." "Call me." "I'll call you later." "I'm on my way." "Thanks." "I'll be late." "I will be <number> minutes late." "See you in <number> minutes" "Stuck in traffic." "Start without me." "Where are you?" "Are you there yet?" "I need directions." "I'm lost." "See you later."
APPS	
SiriusXM Travel Link (Traffic function is not voice command accessible within SiriusXM Travel Link)	"Show Fuel prices" "Show Current Weather" – provides access to Forecast as well "Show Weather map" – multiple map formats available "Show Sports" "Show Movie listings" "Show My favorites"
Yelp® (Yelp® adds its own audible prompts, and response time varies depending on carrier coverage speed)	"Launch Yelp®" – Required 1st voice command to launch Yelp® app "Yelp® Search" – Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button "Hotel" (restaurant, gas station, mail, hospital) – for nearest desired general POI "Italian restaurants" – for nearest specified POI category

ELECTRONICS

STEERING WHEEL AUDIO CONTROLS


- The steering wheel audio controls are located on the rear surface of the steering wheel.

Right Switch

- Press the switch up or down to increase or decrease the volume.
- Press the button in the center to change modes AM/FM/SAT.


Left Switch

- Press the switch up or down to search for the next listenable station or select the next or previous track.
- Press the button in the center to select the next preset radio station.

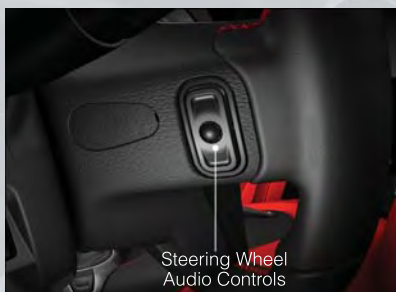

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)

- The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the left side of the steering wheel allows the driver to select vehicle information and Personal Settings. For additional information, refer to Programmable Features in this guide.
- Press and release the UP arrow  button to scroll upward through the main menus (Fuel Economy, Trip A, Trip B, Audio, Stored Messages, Screen Set Up) and sub menus.
- Press and release the DOWN arrow  button to scroll downward through the main menus and sub menus.
- Press and release the RIGHT arrow  button for access to main menus, sub menus or to select a personal setting in the setup menu.
- Press the BACK/LEFT arrow  button to scroll back to a previous menu or sub menu.

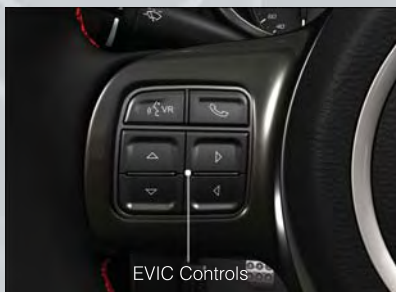

NOTE:

Pressing the BACK/LEFT arrow will override the EVIC five second “pop up” messages and return you to the menu screen.


Compass Calibration

- This compass is self-calibrating, which eliminates the need to set the compass manually. When the vehicle is new, the compass may appear erratic and the EVIC will display “CAL” until the compass is calibrated.
- You may also calibrate the compass by completing one or more 360 degree turns (in an area free from large metal or metallic objects) until the “CAL” message displayed in the EVIC turns off. The compass will now function normally.

PERFORMANCE PAGES

Electronic Vehicle Information Center (EVIC)

- The EVIC can be used to program the following Performance Features. Press the UP or DOWN button until Performance Features displays, then press the RIGHT arrow button. Scroll through the settings using the UP or DOWN buttons. Press the RIGHT arrow button to change the setting. Press the Left arrow button to scroll back to a previous menu or sub menu.

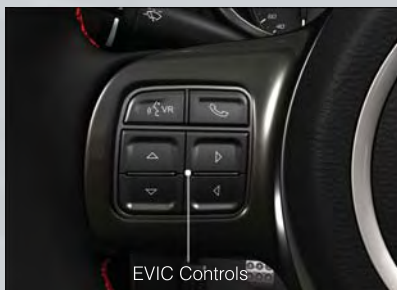

- 0-60 mph (0-100 km/h)
- Braking Distance
- 1/8 Mile
- 1/4 Mile
- Current G-Force
- Peak G-Force
- Digital Speedometer

Uconnect® SRT Performance Pages

- To access the SRT Performance Pages, touch the Uconnect® “+APPS” soft-key then listed under Information Apps, select “Performance Pages.” Press the UP or DOWN soft-key to cycle through the features. Press the feature soft-key to select that feature.
- The Performance Page include the following:
 - Timers
 - Engine Values
 - Digital Gauge Displays
 - 0-60 mph (0-100 km/h)
 - Braking Distance
 - 1/8 Mile
 - 1/4 Mile
 - Instantaneous G-Force
 - Peak G-Force
 - Digital Speedometer

PROGRAMMABLE FEATURES

EVIC Selectable Menu Items

- The EVIC can be used to select and configure which vehicle information is displayed. To step to each main menu feature press and release the UP $\triangle$ or DOWN ∇ button once for each step. A step from the last item in the list will cause the first item in the feature list to be displayed. The following features are in the Main menu:

- | | |
|-------------------------|-------------|
| • Tachometer | • Trip Info |
| • Digital Vehicle Speed | • Audio |
| • Vehicle Info | • Messages |
| • SRT | • DTC |
| • Fuel Economy | • Hibernate |

NOTE:

For features in the EVIC that can be reset (Average Fuel Economy), the EVIC prompts a reset with a RIGHT arrow button graphic and the word RESET next to it.

Uconnect® Customer Programmable Features

- The Uconnect® system allows you to access Customer Programmable feature settings such as Display, Clock, Safety/Assistance, Lights, Doors & Locks, Engine Off Operation, Compass Settings, Audio, Phone / Bluetooth and SiriusXM Setup through soft-keys.
- Touch the Apps soft-key on the bottom of the screen, then touch the Settings soft-key to access the Settings screen. When making a selection, scroll up or down until the preferred setting is highlighted, then press and release the preferred setting until a check-mark appears next to the setting, showing that setting has been selected. The following feature settings are available:

• Display	• Clock
• Safety / Assistance	• Doors & Locks
• Compass	• Engine Off Options
• Phone / Bluetooth	• Audio
• Lights	• SiriusXM Setup

Key Fob Programmable Features

- The following features may also be programmed by using the Key Fob transmitter or the ignition switch and driver's door lock switch.

NOTE:

Pressing the LOCK button while you are inside the vehicle will activate the Vehicle Security Alarm. Opening a door with the Vehicle Security Alarm activated will cause the alarm to sound. Press the UNLOCK button to deactivate the Vehicle Security Alarm.

Unlock On First Press

- To unlock either the driver's side, or all doors, on the first press of the UNLOCK button:
 - Press and hold the LOCK button for at least four seconds, but no longer than 10 seconds. Then, press and hold the UNLOCK button while still holding the LOCK button.
 - Release both buttons at the same time.

Auto Unlock Doors On Exit

- To have all of the vehicle doors unlock when any door is opened:
 - Enter your vehicle and close all the doors, and fasten your seat belt.
 - Cycle the ignition switch between the LOCK and ON position four times, ending in the LOCK position (do not start the engine).
 - Press the power door UNLOCK switch to unlock the doors. A single chime will indicate that programming is complete.

Sound Horn With Lock

- To turn the horn chirp on or off when the doors are locked:
 - Press the LOCK button for at least four seconds, but no longer than 10 seconds. Then, press the PANIC button while still holding the LOCK button.
 - Release both buttons at the same time.

Flashing Lights With Lock

- The turn signal lights flashing, when the doors are locked or unlocked, feature can be turned on or off. To turn this feature on or off:
 - Press and hold the UNLOCK button for at least four seconds, but no longer than 10 seconds. Then, press and hold the LOCK button while still holding the UNLOCK button.
 - Release both buttons at the same time.

UNIVERSAL GARAGE DOOR OPENER (HomeLink®)

- HomeLink® replaces up to three hand-held transmitters that operate devices such as garage door openers, motorized gates, lighting or home security systems. The HomeLink® unit is powered by your vehicles 12 Volt battery.
- The HomeLink® buttons that are located in the overhead console or sunvisor designate the three different HomeLink® channels.
- The HomeLink® indicator is located above the center button.


Before You Begin Programming HomeLink®

- Ensure that your vehicle is parked outside of the garage before you begin programming.
- For efficient programming and accurate transmission of the radio-frequency signal, it is recommended that a new battery be placed in the hand-held transmitter of the device that is being programmed to the HomeLink® system.
- Erase all channels before you begin programming. To erase the channels, place the ignition switch into the ON/RUN position, then press and hold the two outside HomeLink® buttons (I and III) for up to 20 seconds or until the red indicator flashes.

NOTE:

Erasing all channels should only be performed when programming HomeLink® for the first time. Do not erase channels when programming additional buttons.

- If you have any problems, or require assistance, please call toll-free 1-800-355-3515 or, on the Internet at www.HomeLink.com for information or assistance.

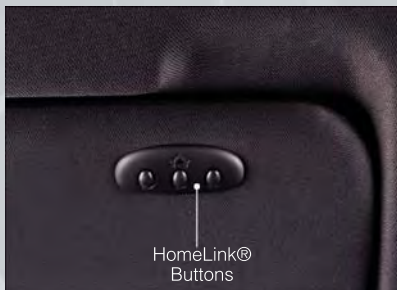

Programming A Rolling Code

- For programming Garage Door Openers that were manufactured after 1995. These Garage Door Openers can be identified by the “LEARN” or “TRAIN” button located where the hanging antenna is attached to the Garage Door Opener. It is NOT the button that is normally used to open and close the door. The name and color of the button may vary by manufacturer.
1. Place the ignition switch into the ON/RUN position.
 2. Place the hand-held transmitter 1 to 3 in (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
 3. Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
 4. Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
 5. At the garage door opener motor (in the garage), locate the “LEARN” or “TRAINING” button. This can usually be found where the hanging antenna wire is attached to the garage door opener motor. Firmly press and release the “LEARN” or “TRAINING” button.

NOTE:

You have 30 seconds in which to initiate the next step after the LEARN button has been pressed.

6. Return to the vehicle and press the programmed HomeLink® button twice (holding the button for two seconds each time). If the device is plugged in and activates, programming is complete.

NOTE:

If the device does not activate, press the button a third time (for two seconds) to complete the training.

7. To program the remaining two HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

Programming A Non-Rolling Code

- For programming Garage Door Openers manufactured before 1995.
1. Turn the ignition switch to the ON/RUN position.
 2. Place the hand-held transmitter 1 to 3 in (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
 3. Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
 4. Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
 5. Press and hold the programmed HomeLink® button and observe the indicator light.

NOTE:

- If the indicator light stays on constantly, programming is complete and the garage door (or device) should activate when the HomeLink® button is pressed.
- To program the two remaining HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

Using HomeLink®

- To operate, press and release the programmed HomeLink® button. Activation will now occur for the programmed device (i.e., garage door opener, gate operator, security system, entry door lock, home/office lighting, etc.,). The hand-held transmitter of the device may also be used at any time.

WARNING!

- Your motorized door or gate will open and close while you are programming the universal transceiver. Do not program the transceiver if people or pets are in the path of the door or gate.
- Do not run your vehicle in a closed garage or confined area while programming the transceiver. Exhaust gas from your vehicle contains Carbon Monoxide (CO) which is odorless and colorless. Carbon Monoxide is poisonous when inhaled and can cause you and others to be severely injured or killed.

POWER OUTLETS


- The auxiliary 12 Volt (13 Amp) power outlets can provide power for in-vehicle accessories designed for use with the standard “cigar lighter” plug. The 12 Volt power outlets have a cap attached to the outlet indicating “12V DC”, together with either a key symbol or a battery symbol.
- The auxiliary power outlets can be found in the following locations:
 - To the right of the shifter on the console
 - Inside the upper lid of the center storage compartment — if equipped.



- Rear area of the center console.

NOTE:

- Do not exceed the maximum power of 160 Watts (13 Amps) at 12 Volts. If the 160 Watt (13 Amp) power rating is exceeded, the fuse protecting the system will need to be replaced.
- Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlet as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your new vehicle warranty.

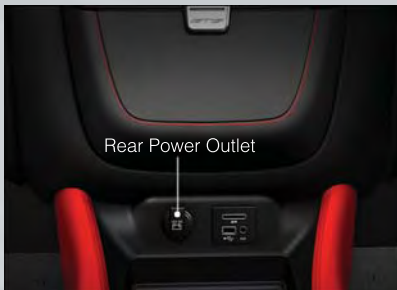

UTILITY

TRAILER TOWING WEIGHTS (MAXIMUM TRAILER WEIGHT RATINGS)

Trailer towing with this vehicle is not recommended.

RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)

Towing This Vehicle Behind Another Vehicle (Flat Towing With All Four Wheels On The Ground)

Towing Condition	Wheels OFF The Ground	Manual Transmission
Flat Tow	None	NOT ALLOWED
Dolly Tow	Front	NOT ALLOWED
	Rear	NOT RECOMMENDED
On Trailer	All	OK

NOTE:

If the vehicle requires towing, make sure all four wheels are off the ground.

CAUTION!
Towing this vehicle in violation of the above requirements can cause severe transmission damage. Damage from improper towing is not covered under the New Vehicle Limited Warranty.

WHAT TO DO IN EMERGENCIES

ROADSIDE ASSISTANCE

- Dial toll-free 1-800-521-2779 for U.S. Residents or 1-800-363-4869 for Canadian Residents.
- Provide your name, vehicle identification number, license plate number, and your location, including the telephone number from which you are calling.
- Briefly describe the nature of the problem and answer a few simple questions.
- You will be given the name of the service provider and an estimated time of arrival. If you feel you are in an “unsafe situation”, please let us know. With your consent, we will contact local police or safety authorities.

INSTRUMENT CLUSTER WARNING LIGHTS



- Electronic Stability Control (ESC) Activation/Malfunction Indicator Light

- The “ESC Activation/Malfunction Indicator Light” in the instrument cluster will come on when the ignition switch is turned to the ON/RUN position. It should go out with the engine running. If the “ESC Activation/Malfunction Indicator Light” comes on continuously with the engine running, a malfunction has been detected in the ESC system.
- If this light remains on after several ignition cycles, and the vehicle has been driven several miles (kilometers) at speeds greater than 30 mph (48 km/h), we recommend you drive to the nearest service center and have the vehicle serviced immediately.



- Tire Pressure Monitoring System (TPMS) Light

- Each tire, including the spare (if provided), should be checked monthly, when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)
- As an added safety feature, your vehicle has been equipped with a Tire Pressure Monitoring System (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.
- **IF THE LIGHT STARTS FLASHING INDICATING A LOW TIRE PRESSURE, ADJUST THE AIR PRESSURE IN THE LOW TIRE TO THE AIR PRESSURE SHOWN ON THE VEHICLE PLACARD OR TIRE INFLATION PRESSURE LABEL LOCATED ON THE DRIVER'S DOOR.**

NOTE:

AFTER INFLATION, THE VEHICLE MAY NEED TO BE DRIVEN FOR 20 MINUTES BEFORE THE FLASHING LIGHT WILL TURN OFF.

- Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

WHAT TO DO IN EMERGENCIES

- Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue each time the vehicle is restarted as long as the malfunction exists.
- When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle, to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

NOTE:

Tire pressures change by approximately 1 psi (7 kPa) per 12° F (7° C) of air temperature change. Keep this in mind when checking tire pressure inside a garage, especially in the Winter. Example: If garage temperature is 68°F (20°C) and the outside temperature is 32°F (0°C), then the cold tire inflation pressure should be increased by 3 psi (21 kPa), which equals 1 psi (7 kPa) for every 12°F (7°C) for this outside temperature condition.

CAUTION!

The TPMS has been optimized for the original equipment tires and wheels. TPMS pressures and warning have been established for the tire size equipped on your vehicle. Undesirable system operation or sensor damage may result when using replacement equipment that is not of the same size, type, and/or style. Aftermarket wheels can cause sensor damage. Do not use tire sealant from a can, or balance beads if your vehicle is equipped with a TPMS, as damage to the sensors may result.

- Engine Temperature Warning Light

- This light warns of an overheated engine condition.
- If the light turns on or flashes continuously while driving, safely pull over and stop the vehicle. If the A/C system is on, turn it off. Also, shift the transmission into NEUTRAL and idle the vehicle. If the temperature reading does not return to normal, turn the engine off immediately.
- We recommend that you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.

WARNING!

A hot engine cooling system is dangerous. You or others could be badly burned by steam or boiling coolant.

WHAT TO DO IN EMERGENCIES

BRAKE - *Brake Warning Light*

- The Brake Warning light illuminates when there is either a system malfunction or the parking brake is applied. If the light is on and the parking brake is not applied, it indicates a possible brake hydraulic malfunction, brake booster problem or an Anti-Lock Brake System problem.
- Please have your vehicle serviced immediately.

WARNING!

Driving a vehicle with the red brake light on is dangerous. Part of the brake system may have failed. It will take longer to stop the vehicle. You could have a collision. Have the vehicle checked immediately.



- Malfunction Indicator Light (MIL)

- Certain conditions, such as a poor fuel quality, etc., may illuminate the MIL after engine start. The vehicle should be serviced if the light stays on through several typical driving cycles. In most situations, the vehicle will drive normally and not require towing.
- If the MIL flashes when the engine is running, serious conditions may exist that could lead to immediate loss of power or severe catalytic converter damage. We recommend you do not operate the vehicle. Have the vehicle serviced immediately.



- Electronic Stability Control (ESC) OFF Indicator Light

- This light indicates the Electronic Stability Control (ESC) is off.



- Charging System Light

- This light shows the status of the electrical charging system. If the charging system light remains on, it means that the vehicle is experiencing a problem with the charging system.
- We recommend you do not continue driving if the charging system light is on. Have the vehicle serviced immediately.



- Oil Pressure Warning Light

- This light indicates low engine oil pressure. If the light turns on while driving, stop the vehicle and shut off the engine as soon as possible. A chime will sound when this light turns on.
- We recommend you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.



- Anti-Lock Brake (ABS) Light

- This light monitors the Anti-Lock Brake System (ABS).
- If the light is not on during starting, stays on, or turns on while driving, we recommend you drive to the nearest authorized dealer immediately and have the vehicle serviced immediately.

WHAT TO DO IN EMERGENCIES

- *Electronic Throttle Control (ETC) Indicator Light*

- This light informs you of a problem with the Electronic Throttle Control (ETC) system.
- If a problem is detected, the light will come on while the engine is running. Cycle the ignition when the vehicle has completely stopped and the shift lever is placed in the NEUTRAL position; the light should turn off.
- If the light remains lit with the engine running, your vehicle will usually be drivable; however, see an authorized service center immediately. If the light is flashing when the engine is running, immediate service is required and you may experience reduced performance, an elevated/rough idle or engine stall and your vehicle may require towing.

- *Air Bag Warning Light*

- If the light is not on during starting, stays on, or turns on while driving, have the vehicle serviced by an authorized dealer immediately.

IF YOUR ENGINE OVERHEATS

- In any of the following situations, you can reduce the potential for overheating by taking the appropriate action.
- On the highways — slow down.
- In city traffic — while stopped, shift the transmission to NEUTRAL, but do not increase engine idle speed.

NOTE:

There are steps that you can take to slow down an impending overheat condition:

- If your air conditioner (A/C) is on, turn it off. The A/C system adds heat to the engine cooling system and turning the A/C off can help remove this heat.
- You can also turn the temperature control to maximum heat, the mode control to floor and the blower control to high. This allows the heater core to act as a supplement to the radiator and aids in removing heat from the engine cooling system.

CAUTION!

Driving with a hot cooling system could damage your vehicle. If the temperature gauge reads HOT (H), pull over and stop the vehicle. Idle the vehicle with the air conditioner turned off until the pointer drops back into the normal range. If the pointer remains on HOT (H), and you hear continuous chimes, turn the engine off immediately, and call for service.

WARNING!

You or others can be badly burned by hot engine coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never try to open a cooling system pressure cap when the radiator or coolant bottle is hot.

WHAT TO DO IN EMERGENCIES


TIREFIT KIT

- Your vehicle may be equipped with a TIREFIT Kit.
- Small punctures up to 1/4" (6 mm) in the tire tread can be sealed with TIREFIT. Foreign objects (e.g., screws or nails) should not be removed from the tire. TIREFIT can be used in outside temperatures down to approximately -4°F (-20°C).
- This kit will provide a temporary tire seal, allowing you to drive your vehicle up to 100 miles (160 km) with a maximum speed of 55 mph (90 km/h).

TIREFIT Storage

- The TIREFIT kit is located in the trunk.

TIREFIT Kit Components And Operation

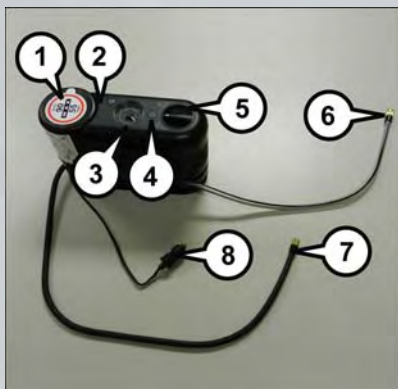

- 1 – Sealant Bottle
- 2 – Deflation Button
- 3 – Pressure Gauge
- 4 – Power Button

- 5 – Mode Select Knob
- 6 – Sealant Hose (Clear)
- 7 – Air Pump Hose (Black)
- 8 – Power Plug

Using The Mode Select Knob And Hoses

- Your TIREFIT kit is equipped with the following symbols to indicate the air or sealant mode.



Selecting Air Mode

- Turn the Mode Select Knob (5) to this position for air pump operation only. Use the Black Air Pump Hose (7) when selecting this mode.



Selecting Sealant Mode

- Turn the Mode Select Knob (5) to this position to inject the TIREFIT Sealant and to inflate the tire. Use the Sealant Hose (clear hose) (6) when selecting this mode.

WHAT TO DO IN EMERGENCIES

Using The Power Button

- Push and release the Power Button (4) once to turn On the TIREFIT kit. Push and release the Power Button (4) again to turn Off the TIREFIT kit.

Using The Deflation Button

- Press the Deflation Button (2) to reduce the air pressure in the tire if it becomes over-inflated.

TIREFIT Usage Precautions

- Replace the TIREFIT Sealant Bottle (1) and Sealant Hose (6) prior to the expiration date (printed on the bottle label) to assure optimum operation of the system. Refer to “Sealing a Tire with TIREFIT” section (F) “Sealant Bottle and Hose Replacement”.
- The Sealant Bottle (1) and Sealant Hose (6) are a one tire application use. After each use, always replace these components immediately at an authorized dealer.
- When the TIREFIT sealant is in a liquid form, clean water, and a damp cloth will remove the material from the vehicle or tire and wheel components. Once the sealant dries, it can easily be peeled off and properly discarded.
- For optimum performance, make sure the valve stem on the wheel is free of debris before connecting the TIREFIT kit.
- You can use the TIREFIT air pump to inflate bicycle tires. The kit also comes with two needles, located in the Accessory Storage Compartment (on the bottom of the air pump) for inflating sport balls, rafts, or similar inflatable items. However, use only the Air Pump Hose (7) and make sure the Mode Select Knob (5) is in the Air Mode when inflating such items to avoid injecting sealant into them. The TIREFIT Sealant is only intended to seal punctures less than 1/4 in (6 mm) diameter in the tread of your vehicle.
- Do not lift or carry the TIREFIT kit by the hoses.

Sealing A Tire With TIREFIT

(A) Whenever You Stop To Use TIREFIT:

1. Pull over to a safe location and turn on the vehicle's Hazard Warning flashers.
2. Verify that the valve stem (on the wheel with the deflated tire) is in a position that is near to the ground. This will allow the TIREFIT Hoses (6) and (7) to reach the valve stem and keep the TIREFIT kit flat on the ground. This will provide the best positioning of the kit when injecting the sealant into the deflated tire and running the air pump. Move the vehicle as necessary to place the valve stem in this position before proceeding.
3. Place the transmission in PARK (auto transmission) or in Gear (manual transmission) and cycle the ignition to the OFF position.
4. Set the parking brake.

WHAT TO DO IN EMERGENCIES

(B) Setting Up To Use TIREFIT:

1. Turn the Mode Select Knob (5) to the Sealant Mode position.
2. Uncoil the Sealant Hose (6) and then remove the cap from the fitting at the end of the hose.
3. Place the TIREFIT kit flat on the ground next to the deflated tire.
4. Remove the cap from the valve stem and then screw the fitting at the end of the Sealant Hose (6) onto the valve stem.
5. Uncoil the Power Plug (8) and insert the plug into the vehicle's 12 Volt power outlet.
6. Do not remove foreign objects (e.g., screws or nails) from the tire.

(C) Injecting TIREFIT Sealant Into The Deflated Tire:

- Always start the engine before turning ON the TIREFIT kit.

NOTE:

Manual transmission vehicles must have the parking brake engaged and the shift lever in NEUTRAL.

- After pressing the Power Button (4), the sealant (white fluid) will flow from the Sealant Bottle (1) through the Sealant Hose (6) and into the tire.

NOTE:

Sealant may leak out through the puncture in the tire.

- **If the sealant (white fluid) does not flow within 0 – 10 seconds through the Sealant Hose (6):**

1. Press the Power Button (4) to turn Off the TIREFIT kit. Disconnect the Sealant Hose (6) from the valve stem. Make sure the valve stem is free of debris. Reconnect the Sealant Hose (6) to the valve stem. Check that the Mode Select Knob (5) is in the Sealant Mode position and not Air Mode. Press the Power Button (4) to turn On the TIREFIT kit.
2. Connect the Power Plug (8) to a different 12 Volt power outlet in your vehicle or another vehicle, if available. Make sure the engine is running before turning ON the TIREFIT kit.
3. The Sealant Bottle (1) may be empty due to previous use. Call for assistance.

NOTE:

If the Mode Select Knob (5) is on Air Mode and the pump is operating, air will dispense from the Air Pump Hose (7) only, not the Sealant Hose (6).

WHAT TO DO IN EMERGENCIES

- **If the sealant (white fluid) does flow through the Sealant Hose (6):**

1. Continue to operate the pump until sealant is no longer flowing through the hose (typically takes 30 - 70 seconds). As the sealant flows through the Sealant Hose (6), the Pressure Gauge (3) can read as high as 70 psi (5 kPa). The Pressure Gauge (3) will decrease quickly from approximately 70 psi (5 kPa) to the actual tire pressure when the Sealant Bottle (1) is empty.
2. The pump will start to inject air into the tire immediately after the Sealant Bottle (1) is empty. Continue to operate the pump and inflate the tire to the pressure indicated on the tire pressure label on the driver-side latch pillar (recommended pressure). Check the tire pressure by looking at the Pressure Gauge (3).

- **If the tire does not inflate to at least 26 psi (1.8 kPa) pressure within 15 minutes:**

- The tire is too badly damaged. Do not attempt to drive the vehicle further. Call for assistance.

NOTE:

If the tire becomes over-inflated, press the Deflation Button to reduce the tire pressure to the recommended inflation pressure before continuing.

- **If the tire inflates to the recommended pressure or is at least 26 psi (1.8 Bar) pressure within 15 minutes:**

1. Press the Power Button (4) to turn off the TIREFIT kit.
2. Remove the Speed Limit sticker from the top of the Sealant Bottle (1) and place the sticker on the instrument panel.
3. Immediately disconnect the Sealant Hose (6) from the valve stem, reinstall the cap on the fitting at the end of the hose, and place the TIREFIT kit in the vehicle storage location. Quickly proceed to (D) "Drive Vehicle".

(D) Drive Vehicle:

- Immediately after injecting sealant and inflating the tire, drive the vehicle 5 miles (8 km) or 10 minutes to ensure distribution of the TIREFIT Sealant within the tire. Do not exceed 55 mph (88 km/h).

(E) After Driving:

- Pull over to a safe location. Refer to "Whenever You Stop to Use TIREFIT" before continuing.
1. Turn the Mode Select Knob (5) to the Air Mode position.
 2. Uncoil the Air Pump Hose (7) (black in color) and screw the fitting at the end of hose (7) onto the valve stem.
 3. Uncoil the power plug and insert the plug into the vehicles 12 Volt power outlet.
 4. Check the pressure in the tire by reading the Pressure Gauge (3).
- **If tire pressure is less than 19 psi (1.3 kPa), the tire is too badly damaged. Do not attempt to drive the vehicle further. Call for assistance.**

WHAT TO DO IN EMERGENCIES

If the tire pressure is 19 psi (1.3 kPa) or higher:

1. Press the Power Button (4) to turn on TIREFIT and inflate the tire to the pressure indicated on the tire and loading information label on the driver-side door opening.
2. Disconnect the TIREFIT kit from the valve stem, reinstall the cap on the valve stem and unplug from 12 Volt outlet.
3. Place the TIREFIT kit in its proper storage area in the vehicle.
4. Have the tire inspected and repaired or replaced at the earliest opportunity at an authorized dealer or tire service center.
5. Replace the Sealant Bottle (1) and Sealant Hose (6) assembly at your authorized dealer as soon as possible. Refer to “(F) Sealant Bottle and Hose Replacement.”

NOTE:

- If the tire becomes over-inflated, press the Deflation Button to reduce the tire pressure to the recommended inflation pressure before continuing.
- When having the tire serviced, advise the authorized dealer or service center that the tire has been sealed using the TIREFIT service kit.

(F) Sealant Bottle And Hose Replacement:

1. Uncoil the Sealant Hose (6) (clear in color).
2. Locate the round Sealant Bottle release button in the recessed area under the sealant bottle.
3. Press the Sealant Bottle release button. The Sealant Bottle (1) will pop up. Remove the bottle and dispose of it accordingly.
4. Clean any remaining sealant from the TIREFIT housing.
5. Position the new Sealant Bottle (1) in the housing so that the Sealant Hose (6) aligns with the hose slot in the front of the housing. Press the bottle into the housing. An audible click will be heard indicating the bottle is locked into place.
6. Verify that the cap is installed on the fitting at the end of the Sealant Hose (6) and return the hose to its storage area (located on the bottom of the air pump).
7. Return the TIREFIT kit to its storage location in the vehicle.

CAUTION!

- The metal end fitting from Power Plug (8) may get hot after use, so it should be handled carefully.
- Failure to reinstall the cap on the fitting at the end of the Sealant Hose (6) can result in sealant contacting your skin, clothing, and the vehicle's interior. It can also result in sealant contacting internal TIREFIT kit components which may cause permanent damage to the kit.

WHAT TO DO IN EMERGENCIES

WARNING!

- Do not attempt to seal a tire on the side of the vehicle closest to traffic. Pull far enough off the road to avoid the danger of being hit when using the TIREFIT kit.
- Do not use TIREFIT or drive the vehicle under the following circumstances:
 - If the puncture in the tire tread is approximately 1/4 in. (6 mm) or larger.
 - If the tire has any sidewall damage.
 - If the tire has any damage from driving with extremely low tire pressure.
 - If the tire has any damage from driving on a flat tire.
 - If the wheel has any damage.
 - If you are unsure of the condition of the tire or the wheel.
- Keep TIREFIT away from open flames or heat source.
- A loose TIREFIT kit thrown forward in a collision or hard stop could endanger the occupants of the vehicle. Always stow the TIREFIT kit in the place provided. Failure to follow these warnings can result in injuries that are serious or fatal to you, your passengers, and others around you.
- Take care not to allow the contents of TIREFIT to come in contact with hair, eyes, or clothing. TIREFIT is harmful if inhaled, swallowed, or absorbed through the skin. It causes skin, eye, and respiratory irritation. Flush immediately with plenty of water if there is any contact with eyes or skin. Change clothing as soon as possible, if there is any contact with clothing.
- TIREFIT Sealant solution contains latex. In case of an allergic reaction or rash, consult a physician immediately. Keep TIREFIT out of reach of children. If swallowed, rinse mouth immediately with plenty of water and drink plenty of water. Do not induce vomiting! Consult a physician immediately.
- TIREFIT is not a permanent flat tire repair. Have the tire inspected and repaired or replaced after using TIREFIT. Do not exceed 55 mph (88 km/h) until the tire is repaired or replaced. Failure to follow this warning can result in injuries that are serious or fatal to you, your passengers, and others around you.

JUMP-STARTING

- If your vehicle has a discharged battery it can be jump-started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack.
- Jump-starting can be dangerous if done improperly so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack follow the manufacturer's operating instructions and precautions.



WHAT TO DO IN EMERGENCIES

Preparations for Jump-Start

- The battery is stored under an access cover in the trunk. Remote battery posts are located on the left side of the engine compartment for jump-starting.

NOTE:

The remote battery posts are viewed by standing on the left side of the vehicle looking over the fender.

- Set the parking brake, shift the transmission into gear and turn the ignition to OFF.
- Turn off the heater, radio, and all unnecessary electrical accessories.
- If using another vehicle to jump-start the battery, park the vehicle within the jumper cables reach, set the parking brake and make sure the ignition is OFF.

Jump-Starting Procedure

1. Connect the positive (+) end of the jumper cable to the remote positive (+) post of the discharged vehicle.
2. Connect the opposite end of the positive (+) jumper cable to the positive (+) post of the booster battery.
3. Connect the negative end (-) of the jumper cable to the negative (-) post of the booster battery.
4. Connect the opposite end of the negative (-) jumper cable to the remote negative (-) post of the vehicle with the discharged battery.
5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes, and then start the engine in the vehicle with the discharged battery.

Once the engine is started, remove the jumper cables in the reverse sequence:

1. Disconnect the negative (-) jumper cable from the remote negative (-) post of the vehicle with the discharged battery.
2. Disconnect the negative end (-) of the jumper cable from the negative (-) post of the booster battery.
3. Disconnect the opposite end of the positive (+) jumper cable from the positive (+) post of the booster battery.
4. Disconnect the positive (+) end of the jumper cable from the remote positive (+) post of the discharged vehicle.
5. If frequent jump-starting is required to start your vehicle you should have the battery and charging system inspected at your authorized dealer.

WHAT TO DO IN EMERGENCIES

CAUTION!

- Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, starter motor, alternator or electrical system may occur.
- Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.
- Accessories that can be plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (i.e., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery discharges sufficiently to degrade battery life and/or prevent the engine from starting.

WARNING!

- When temperatures are below the freezing point, electrolyte in a discharged battery may freeze. Do not attempt jump-starting because the battery could rupture or explode and cause personal injury. Battery temperature must be brought above freezing point before attempting a jump-start.
- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the ignition switch is on. You can be injured by moving fan blades.
- Remove any metal jewelry, such as watch bands or bracelets, that might make an inadvertent electrical contact. You could be severely injured.
- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.
- Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.
- Failure to follow this procedure could result in personal injury or property damage due to battery explosion.
- Do not connect the cable to the negative post (-) of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

WHAT TO DO IN EMERGENCIES

TOWING A DISABLED VEHICLE

Do not tow with sling-type equipment. Only use flatbed equipment. Always comply with applicable state or local towing ordinances.

CAUTION!

- Failure to follow these towing methods can cause severe transmission damage. Such damage is not covered by the New Vehicle Limited Warranty.
- If the vehicle being towed requires steering, the ignition switch must be in the ON/RUN position.
- Do not attempt to use sling-type equipment when towing. When securing the vehicle to a flatbed truck, do not attach to front or rear suspension components. Damage to your vehicle may result from improper towing.

FREEING A STUCK VEHICLE

- If your vehicle becomes stuck in mud, sand or snow, it can often be moved by a rocking motion. Turn your steering wheel right and left to clear the area around the front wheels. Then shift back and forth between 2nd gear and REVERSE. Using minimal accelerator pedal pressure to maintain the rocking motion, without spinning the wheels, is most effective.

WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause tire damage or failure. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) when you are stuck. Do not let anyone near a spinning wheel, no matter what the speed.

WHAT TO DO IN EMERGENCIES

EVENT DATA RECORDER (EDR)

- This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:
 - How various systems in your vehicle were operating.
 - Whether or not the driver and passenger safety belts were buckled/fastened.
 - How far (if at all) the driver was depressing the accelerator and/or brake pedal.
 - How fast the vehicle was traveling.
- These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE:


EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

- To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

MAINTAINING YOUR VEHICLE

ENGINE COMPARTMENT

8.4L Engine

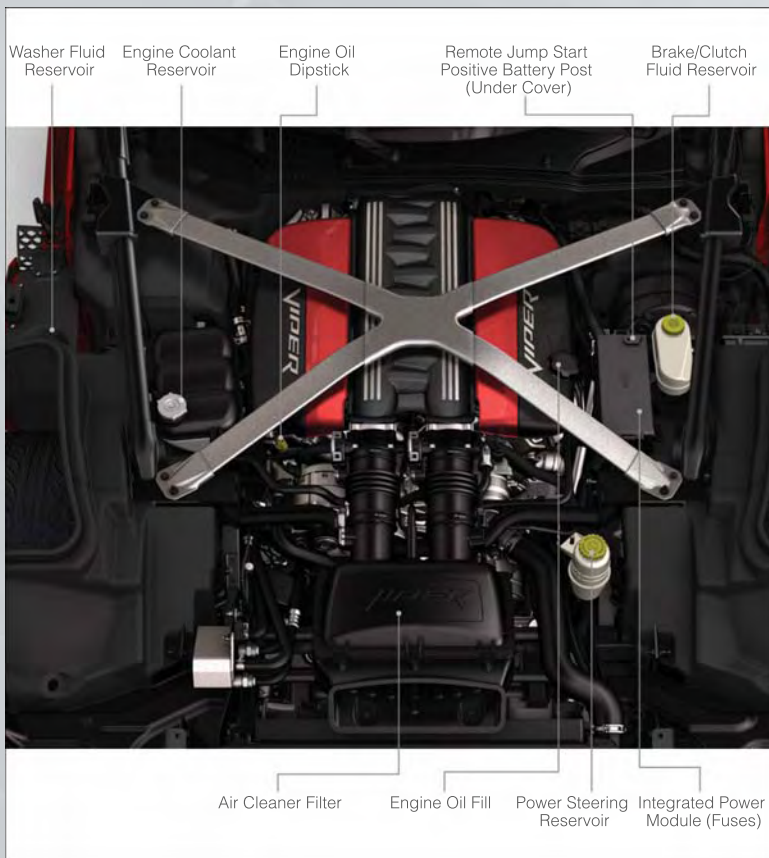

MAINTAINING YOUR VEHICLE

FLUIDS AND CAPACITIES

Component	Fluid, Lubricant, or Genuine Part	Capacities
Engine Coolant — 8.4L Engine	MOPAR® Antifreeze/ Coolant Five Year/150,000 Mile Formula OAT (Organic Additive Technology) or equivalent.	16 Quarts (15 Liters) Includes heater and coolant recovery bottle filled to MAX level.
Engine Oil with Filter — 8.4L Engine	We recommend you use a full synthetic 0W-40 engine oil such as MOPAR® or Pennzoil Ultra™ or equivalent engine oil.	11 Quarts (10.4 Liters)
Engine Oil Filter	We recommend you use MOPAR® Engine Oil Filters.	—
Spark Plug — 8.4L Engine	We recommend you use MOPAR® Spark Plugs, see your authorized dealer.	—
Manual Transmission	MOPAR® ATF+4® Automatic Transmission Fluid or equivalent licensed ATF+4® product.	3.4 Quarts (3.2 Liters)
Axle Rear — 8.4L Engine	We recommend you use Castrol SAF-XJ/SAE 75W-140 Synthetic Gear and Axle Lubricant.	1.5 Quarts (1.4 Liters)
Brake Master Cylinder	We recommend you use MOPAR® Brake and Clutch Fluid DOT 4 Motor Vehicle.	—
Power Steering Reservoir	We recommend you use MOPAR® Power Steering Fluid + 4, MOPAR® or ATF+4® Automatic Transmission Fluid.	—
Fuel Selection — 8.4L Engine	We recommend you use Premium Unleaded 91 Octane Only or Higher	16 Gallons (61 Liters) (Approximate)

MAINTAINING YOUR VEHICLE

CAUTION!

- Mixing of engine coolant (antifreeze) other than specified Organic Additive Technology (OAT) engine coolant (antifreeze), may result in engine damage and may decrease corrosion protection. Organic Additive Technology (OAT) engine coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) engine coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT engine coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS-12106), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based engine coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based engine coolant (antifreeze). Use of propylene glycol-based engine coolant (antifreeze) is not recommended.

MAINTENANCE SCHEDULES

The Scheduled Maintenance services listed in this manual must be done at the times or mileages specified to protect your vehicle warranty and ensure the best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions, such as dusty areas and very short trip driving. Inspection and service should also be done anytime a malfunction is suspected.

NOTE:

Under no circumstances should oil change intervals exceed 6,000 miles (10 000 km) or six months, whichever comes first.

CAUTION!

Failure to perform the required maintenance items may result in damage to the vehicle.

MAINTAINING YOUR VEHICLE

At Each Stop For Fuel

- Check the engine oil level about five minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

Once A Month

- Check tire pressure and look for unusual wear or damage. Rotate tires at the first sign of irregular wear, even if it occurs before your next scheduled service.
- Inspect the battery, and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, power steering, and transmission, and add as needed.
- Check all lights and all other electrical items for correct operation.

At Each Oil Change

- Change the engine oil filter.
- Inspect the exhaust system.

NOTE:

Also, inspect the exhaust system if you notice a change in the sound of the exhaust system, or if the exhaust fumes can be detected inside the vehicle.

- Inspect the brake hoses.
- Inspect the suspension components.
- Lubricate door hinges and check springs.
- Check the engine coolant level, hoses, and clamps.
- Check power steering fluid level.

MAINTAINING YOUR VEHICLE

MAINTENANCE CHART

Miles:	6,000	12,000	18,000	24,000	30,000	36,000	42,000	48,000	54,000	60,000	66,000	72,000	78,000
Or Months:	6	12	18	24	30	36	42	48	54	60	66	72	78
Or Kilometers:	10,000	20,000	30,000	40,000	50,000	60,000	70,000	80,000	90,000	100,000	110,000	120,000	130,000
Change the engine oil and engine oil filter.	X	X	X	X	X	X	X	X	X	X	X	X	X
Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before scheduled maintenance.	X	X	X	X	X	X	X	X	X	X	X	X	X
Inspect the brake linings; replace if necessary.		X		X		X		X		X		X	
Inspect the exhaust system.		X		X		X		X		X		X	
Change Brake Fluid				X				X				X	
Adjust the parking brake on vehicles equipped with four wheel disc brakes.					X					X			
Change the manual transmission fluid.						X						X	
Inspect the manual transmission fluid, add as necessary.		X		X				X		X			
Change the rear axle fluid.			X			X			X			X	
Inspect front suspension, tie rod ends, and boot seals, for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.		X		X		X		X		X		X	
Replace the engine air cleaner.					X					X			
Replace the air conditioning filter.		X		X		X		X		X		X	

NOTE:

Flush and replace the engine coolant at 120 months if not done at 150,000 miles (240,000 km).

- Refer to the Owner's Manual on the DVD for complete maintenance schedule.

MAINTAINING YOUR VEHICLE

	Odometer	Date	Signature, Authorized Service Center
6,000 Miles (10,000 km) or 6 Months			
12,000 Miles (20,000 km) or 12 Months			
18,000 Miles (30,000 km) or 18 Months			
24,000 Miles (40,000 km) or 24 Months			
30,000 Miles (50,000 km) or 30 Months			
36,000 Miles (60,000 km) or 36 Months			
42,000 Miles (70,000 km) or 42 Months			

	Odometer	Date	Signature, Authorized Service Center
48,000 Miles (80,000 km) or 48 Months			
54,000 Miles (90,000 km) or 54 Months			
60,000 Miles (100,000 km) or 60 Months			
66,000 Miles (110,000 km) or 66 Months			
72,000 Miles (120,000 km) or 72 Months			
78,000 Miles (130,000 km) or 78 Months			

MAINTAINING YOUR VEHICLE

FUSES

Power Distribution Center (Fuses)

- The Power Distribution Center is located in the engine compartment on the driver's side of the vehicle. This center contains fuses and relays.

Cavity	Relay	Cartridge Fuse	Mini-Fuse	Description
3	—	40 Amp Green	—	Rad Fan
4	—	40 Amp Green	—	Rad Fan Rly High
5	—	40 Amp Green	—	ABS/ESP Pump Feed
6	—	40 Amp Green	—	Starter
7	—	40 Amp Green	—	CBC (Ext. Lighting #1)
8	—	40 Amp Green	—	CBC (Ext. Lighting #2)
9	—	30 Amp Pink	—	Interior Lighting/Washer Pump
10	—	30 Amp Pink	—	CBC (Power Lock)
11	—	Jumper Black	—	B+ Jumper
12	—	25 Amp Natural	—	ABS/ESP Valve Feed
13	—	—	20 Amp Yellow	Horn
14	—	—	10 Amp Red	A/C Clutch
15	—	—	10 Amp Red	Diagnostic, Fuel Door, Stop Switch
16	—	—	15 Amp Blue	KIN, RF Hub
17	—	—	25 Amp circuit breaker	Power Seats
18	—	30 Amp Pink	—	Driver Door Mod
19	—	30 Amp Pink	—	Passenger Door Mod
20	—	30 Amp Pink	—	Rear Window Defroster
21	—	20 Amp Blue	—	Wiper
22	—	—	—	B+ Jumper
23	—	—	15 Amp Blue	HVAC MOD, Cluster, ICS-Switch Bank
24	—	—	25 Amp Natural	PCM- Powertrain Control Module
25	—	—	25 Amp Natural	Fuel Pump
26	—	—	20 Amp Yellow	ASD #1
27	—	—	20 Amp Yellow	ASD #2
28	—	—	—	Spare
29	—	40 Amp Green	—	HVAC Blower
30	—	20 Amp Yellow	—	RR Power Outlet, Adj. Pedals, UCI
31	—	—	—	B+ Jumper
32	—	Jumper Black	—	B+ Jumper

MAINTAINING YOUR VEHICLE

Cavity	Relay	Cartridge Fuse	Mini-Fuse	Description
33	—	20 Amp Yellow	—	Run Acc relay, Front Power Outlet, Driver Door Window Switch
34	—	—	—	B+ Jumper
35	—	—	—	Spare
36	—	—	10 Amp Red	ORC Mod Run
37	—	—	15 Amp Blue	Cluster, Camera
38	—	—	20 Amp Yellow	Active Damping Suspension
39	—	—	10 Amp Red	HVAC Module, In Car Temp, Blower Relay
40	—	—	—	Spare
41	G8VA	—	—	Run/Start
42	G8VA	—	—	Fuel Door
43AC (Forward Fuse)	—	—	10 Amp Red	Steering Column Control Module
43BE (Rearward Fuse)	—	—	10 Amp Red	Tire Pressure Module
44AC (Forward Fuse)	—	—	10 Amp Red	Rear View Mirror, Aux Port Jumper.
44BE (Rearward Fuse)	—	—	10 Amp Red	Battery Saver
45	—	—	10 Amp Red	PCM- Powertrain Control Module, Fuel Pump Relay.
46	—	—	10 Amp Red	ESC Module, Stop Lamp Switch
47	—	—	10 Amp Red	ORC Module, Passenger Seat OCM
48	—	—	10 Amp Red	Steering Column Control Module
49	—	—	25 Amp Natural	Amplifier
50	HC Micro	—	—	Rad Fan
51	HC Micro	—	—	Rad Fan Relay LOW/HIGH
52	HC Micro	—	—	Starter Relay

MAINTAINING YOUR VEHICLE

Cavity	Relay	Cartridge Fuse	Mini-Fuse	Description
53	HC Micro	—	—	Rear Window Defroster Relay
54	HC Relay	—	—	Rad Fan Relay High
55	HC Micro	—	—	Wiper ON/OFF
56	HC Micro	—	—	Wiper LO/HI
57	G8VA	—	—	Horn Relay
58	G8VA	—	—	A/C Clutch Relay
59	HC Micro	—	—	HVAC Blower
60	HC Micro	—	—	Fuel Pump
61	G8VA	—	—	Run Relay #1
62	G8VA	—	—	Run Relay #2
63	HC Micro	—	—	ASD #1
64	HC Micro	—	—	ASD #2
65	G8VA	—	—	Run Acc relay, Front Power Outlet, Driver Door Window Switch

NOTE:

A 15 Amp fuse for the radio system is located in-line at the battery positive terminal.

SUMMER/THREE-SEASON TIRES

- This vehicle may be equipped with wheels and tires to enhance traction in both wet and dry conditions.
- Summer tires are not intended to be driven in snow or on ice.
- Summer tires have significantly reduced grip in temperatures below 50°F (10°C)
- Use summer tires only in sets of four.

NOTE:

Summer tires will not contain the all season designation or mountain/snowflake symbol on the sidewall of the tire.

WARNING!

Do not use summer tires in snow/ice conditions. You could lose control, resulting in severe injury or death. Driving too fast for conditions also creates the possibility of loss of vehicle control.


MAINTAINING YOUR VEHICLE

TIRE PRESSURES

- Check the inflation pressure of each tire, including the spare tire, at least monthly and inflate to the recommended pressure for your vehicle.
- The tire pressures recommended for your vehicle are found on the “Tire and Loading Information” label located on the driver’s side door opening.

NOTE:

Refer to the Owner's Manual on the DVD for more information regarding tire warnings and instructions.

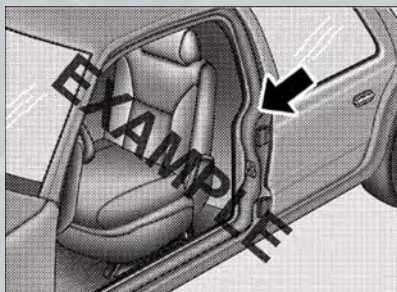

WARNING!

- Overloading of your tires is dangerous. Overloading can cause tire failure, affect vehicle handling, and increase your stopping distance. Use tires of the recommended load capacity for your vehicle. Never overload them.
- Improperly inflated tires are dangerous and can cause collisions. Under-inflation is the leading cause of tire failure and may result in severe cracking, component separation, or “blow out”. Over-inflation reduces a tire’s ability to cushion shock. Objects on the road and chuck holes can cause damage that results in tire failure. Unequal tire pressures can cause steering problems. You could lose control of your vehicle. Over-inflated or under-inflated tires can affect vehicle handling and can fail suddenly, resulting in loss of vehicle control.

WHEEL AND WHEEL TRIM CARE

All wheels and wheel trim, especially aluminum and chrome plated wheels, should be cleaned regularly using mild (neutral Ph) soap and water to maintain their luster and to prevent corrosion. Wash wheels with the same soap solution recommended for the body of the vehicle.

Your wheels are susceptible to deterioration caused by salt, sodium chloride, magnesium chloride, calcium chloride, etc., and other road chemicals used to melt ice or control dust on dirt roads. Use a soft cloth or sponge and mild soap to wipe away promptly. Do not use harsh chemicals or a stiff brush. They can damage the wheel’s protective coating that helps keep them from corroding and tarnishing.

MAINTAINING YOUR VEHICLE

NOTE:

Many aftermarket wheel cleaners contain strong acids or strong alkaline additives that can harm the wheel surface.

CAUTION!

Avoid products or automatic car washes that use acidic solutions or strong alkaline additives or harsh brushes. These products and automatic car washes may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, MOPAR Wheel Cleaner or equivalent is recommended.

When cleaning extremely dirty wheels including excessive brake dust, care must be taken in the selection of tire and wheel cleaning chemicals and equipment to prevent damage to the wheels. Mopar Wheel Treatment or Mopar Chrome Cleaner or their equivalent is recommended or select a non-abrasive, non-acidic cleaner for aluminum or chrome wheels. Do not use any products on Dark Vapor or Black Satin Chrome Wheels. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty.

CAUTION!

Do not use scouring pads, steel wool, a bristle brush, metal polishes or oven cleaner. These products may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, MOPAR Wheel Cleaner or equivalent is recommended.

NOTE:

If you intend parking or storing your vehicle for an extended period after cleaning the wheels with wheel cleaner, drive your vehicle for a few minutes before doing so. Driving the vehicle and applying the brakes when stopping will reduce the risk of brake rotor corrosion.

Dark Vapor Or Black Satin Chrome Wheels**CAUTION!**

If your vehicle is equipped with Dark Vapor or Black Satin Chrome wheels DO NOT USE wheel cleaners, abrasives or polishing compounds. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty. USE ONLY MILD SOAP AND WATER WITH A SOFT CLOTH. Used on a regular basis; this is all that is required to maintain this finish.

MAINTAINING YOUR VEHICLE

EXTERIOR BULBS

LIGHT BULBS – Exterior	Bulb Number
Low/High Beam Headlamp	HID (Serviced at Authorized Dealer)
Front Park/Turn Signal Lamp	LED (Serviced at Authorized Dealer)
Daytime Running Lamp (DRL)	LED (Serviced at Authorized Dealer)
Front Side Marker Lamp	2821M
Center High-Mounted Stop Lamp (CHMSL)	LED (Serviced at Authorized Dealer)
Tail/Stop/Turn Signal Lamp	LED (Serviced at Authorized Dealer)
Rear Marker Lamp	2821M
Backup Lamp	LED (Serviced at Authorized Dealer)
License Lamp	LED (Serviced at Authorized Dealer)

CONSUMER ASSISTANCE

FCA US LLC CUSTOMER CENTER

P.O. Box 21-8004 Auburn Hills, MI 48321-8004 Phone: 1-855-SRT-TEAM

FCA CANADA INC. CUSTOMER CENTER

P.O. Box 1621 Windsor, Ontario N9A 4H6 Phone: 1-800-465-2001 (English) Phone: 1-800-387-9983 (French)

ASSISTANCE FOR THE HEARING IMPAIRED

- To assist customers who have hearing difficulties, the manufacturer has installed special TDD (Telecommunication Devices for the Deaf) equipment at its customer center. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with the manufacturer by dialing 1-800-380-CHRY. Canadian residents with hearing difficulties that require assistance can use the special needs relay service offered by Bell Canada. For TTY teletypewriter users, dial 711 and for Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

WARNING!

Engine exhaust, some of its constituents, and certain vehicle components contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm.

PUBLICATIONS ORDERING

- **If you are the first registered retail owner of your vehicle**, you may obtain one free printed copy of the Owner's Manual, Warranty Booklet or Radio Manuals on your DVD by calling 1-800-423-6343 (U.S.) or 1-800-387-1143 (Canada) or by contacting your dealer.
- Replacement User Guide kits or DVDs or, if you prefer, additional printed copies of the Owner's Manual, Warranty Booklet or Radio Manuals may be purchased by visiting www.techauthority.com or by calling 1-800-890-4038 (U.S.) or 1-800-387-1143 (Canada). Visa, Master Card, American Express and Discover orders are accepted. If you prefer mailing your order, please call the above numbers for an order form.

NOTE:

- A street address is required when ordering manuals (no P.O. Boxes).
- The Owner's Manual and User Guide electronic files are also available on the Chrysler, Jeep, Ram Truck, Dodge and SRT websites.
- Click on the "For Owners" tab, select "Owner/Service Manuals", then select your desired model year and vehicle from the drop down lists.

CONSUMER ASSISTANCE

REPORTING SAFETY DEFECTS IN THE UNITED STATES

- If you believe that your vehicle has a defect that could cause a collision or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying the manufacturer.
- If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your authorized dealer and the manufacturer.
- To contact NHTSA, you may either call the Auto Safety Hotline toll free at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., West Building, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada

- If you believe that your vehicle has a safety defect, you should contact the Customer Service Department immediately. Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/eng/roadsafety/safedrivers-childsafety-index-53.htm>
- French Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/securiteroutiere/>

AUTHENTIC ACCESSORIES BY MOPAR®

- The following highlights just some of the many Authentic Viper Accessories by Mopar® featuring a fit, finish, and functionality specifically for your Viper.
- In choosing Authentic Accessories you gain far more than expressive style, premium protection, or extreme entertainment, you also benefit from enhancing your vehicle with accessories that have been thoroughly tested and factory-approved.
- For the full line of Authentic Viper Accessories by Mopar®, visit your local dealership or online at mopar.com for U.S. residents and mopar.ca for Canadian residents.

PERFORMANCE:

- Brake Rotors
- Carbon Fiber X-Brace
- Headers & J-Pipe

EXTERIOR:

- Custom Wheels
- Vehicle Dust Covers
- Wheel Locks

INTERIOR:

- Premium Carpet Floor Mats
- Door Sill Guards
- Pedal Kits
- Premium Carpet Cargo Mat
- Shift Knobs
- Unique Katzkin Leather Interiors

ELECTRONICS:

- Harman Kardon® Speaker Upgrade
- Battery Charger
- Wireless Charging Pad

FAQ (How To?)

FREQUENTLY ASKED QUESTIONS

GETTING STARTED

- How do I adjust my foot rest? pg. 18
- How do I adjust my pedals? pg. 18

OPERATING YOUR VEHICLE

- How does my speed control work? pg. 23

ELECTRONICS

Which radio is in my vehicle?

- Uconnect® 8.4A pg. 49
- Uconnect® 8.4AN pg. 67

How do I activate the Audio Jack?

- Uconnect® 8.4A pg. 72
- Uconnect® 8.4AN pg. 72

How do I set the clock on my radio?

- Uconnect® 8.4A pg. 49
- Uconnect® 8.4AN pg. 67
- How do I pair my cell phone via Bluetooth® with the Uconnect® Hands-Free Voice Activation System? pg. 60
- How do I use my USB port to listen to audio through my touch-screen radio? pg. 72
- How do I configure my Universal Garage Door Opener (HomeLink®)? pg. 90

UTILITY

- How do I know how much I can tow with my Viper? pg. 94

WHAT TO DO IN EMERGENCIES

- What do I do if my TPMS warning light is blinking? pg. 95
- How do I Jump-Start my vehicle? pg. 104

MAINTAINING YOUR VEHICLE

- Where is my Fuse Block located? pg. 115
- What type of oil do I use? pg. 110
- How often should I change my engine's oil? pg. 113
- What should my tire pressure be set at? pg. 118

Adding Fuel	27	Overheating	98
Adjustable Pedals	18	Starting	9
Airbag	12	Stopping	9
Air Conditioning	30, 31	Event Data Recorder	108
Alarm (Security Alarm)	10	Exterior Lights	120
Arming System (Security Alarm)	10		
Audio Systems (Radio)	51, 69	Fluid Capacities	110
Automatic Headlights	22	Fluids	110
Automatic Temperature Control (ATC)	30	Freeing A Stuck Vehicle	107
Automatic Transmission		Fuel	
Fluid Type	110	Adding	27
Axle Fluid	110	Specifications	110
		Fuse	115
Back-Up Camera	31	Fuses	115
Belts, Seat	11		
Brake Fluid	110	Garage Door Opener (HomeLink®)	90
Break-In Recommendations,			
New Vehicle	20	Headlights	
Bulb Replacement	120	Automatic	22
		Dimmer Switch	22
Calibration, Compass	87	High Beam	21
Climate Control	30	High Beam/Low Beam Select (Dimmer)	
Compass Calibration	87	Switch	21
Cooling System		HomeLink® (Garage Door Opener)	90
Coolant Capacity	110		
Cruise Control (Speed Control)	23	Instrument Cluster	6
Cruise Light	23	Indicators	7
Customer Assistance	121	Interior and Instrument Lights	5
Customer Programmable Features	88	Intermittent Wipers (Delay Wipers)	21
		Introduction	2
Defects, Reporting	122		
Dimmer Control	22	Jump Starting	104
Dimmer Switch, Headlight	22		
		Key Fob	8
Electronics		Key Fob Programmable Features	89
Your Vehicle's Sound System	32, 33	Keyless Enter-N-Go	
Electronic Speed Control (Cruise		Starting/Stopping	9
Control)	23	Keyless Entry System	8
Electronic Stability Control (ESC)	26		
Emergency, In Case of		Lap/Shoulder Belts	11
Brake Warning Light	97	LATCH (Lower Anchors and Tether for	
Freeing Vehicle When Stuck	107	Children)	13, 14
Overheating	98	Lights	
Emergency Key	8	Tire Pressure Monitoring (TPMS)	95
Engine			
Break-In Recommendations	20	Maintenance Record	114
Compartment	109	Maintenance Schedule	111, 113
Oil Selection	110		

INDEX

MOPAR® Accessories	123	Spark Plugs	110
Navigation	56, 74	Speed Control	
New Vehicle Break-In Period	20	Cancel	23
		Resume	23
		Set	23
Oil, Engine		Steering	
Capacity	110	Tilt Column	19
Outlet		Stuck, Freeing	107
Power	93	Supplemental Restraint System -	
Overheating, Engine	98	Airbag	12
Pedals, Adjustable	18	Temperature Control, Automatic (ATC)	30
Placard, Tire and Loading		Tether Anchor, Child Restraint	15
Information	118	Tilt Steering Column	19
Power		TIREFIT	99
Outlet (Auxiliary Electrical Outlet)	93	Tires	
Seats	16	Air Pressure	118
Steering	110	Towing	94
Programmable Electronic		Disabled Vehicle	107
Features	87, 88	Recreational	94
		Towing Vehicle Behind a Motorhome	94
Rain Sensitive Wiper System	21	Trailer Towing	
Rear Camera	31	Trailer and Tongue Weight	94
Rear ParkSense System	31	Trailer Weight	94
Recreational Towing	94	Transmission	
Replacement Bulbs	120	Fluid	110
Reporting Safety Defects	122		
Rocking Vehicle When Stuck	107	Uconnect® 8.4A	49
		Uconnect® 8.4AN	67
Schedule, Maintenance	111		
Seat Belts	11	Washers, Windshield	21
Seats	16	Wheel and Wheel Trim Care	118
Adjustment	17	Windshield Washers	21
Power	16	Windshield Wipers	21
SIRIUS Travel Link	78		



*drive***SRT**.com

This guide has been prepared to help you get quickly acquainted with your new SRT and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation/Uconnect® Manuals, and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com (U.S.), www.mopar.ca (Canada) or your local SRT high performance dealer.

DRIVING AND ALCOHOL

Drunken driving is one of the most frequent causes of accidents. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a friend, or use public transportation.

WARNING!

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower, and your judgment is impaired when you have been drinking. Never drink and then drive.



***DOWNLOAD A FREE
ELECTRONIC COPY OF
THE OWNER'S MANUAL
OR WARRANTY BOOKLET***

by visiting the Owners tab at:

www.driveSRT.com (U.S.)

www.driveSRT.ca (Canada)