


Electric Silicone Brush Set

Juego de cepillos eléctricos de silicona

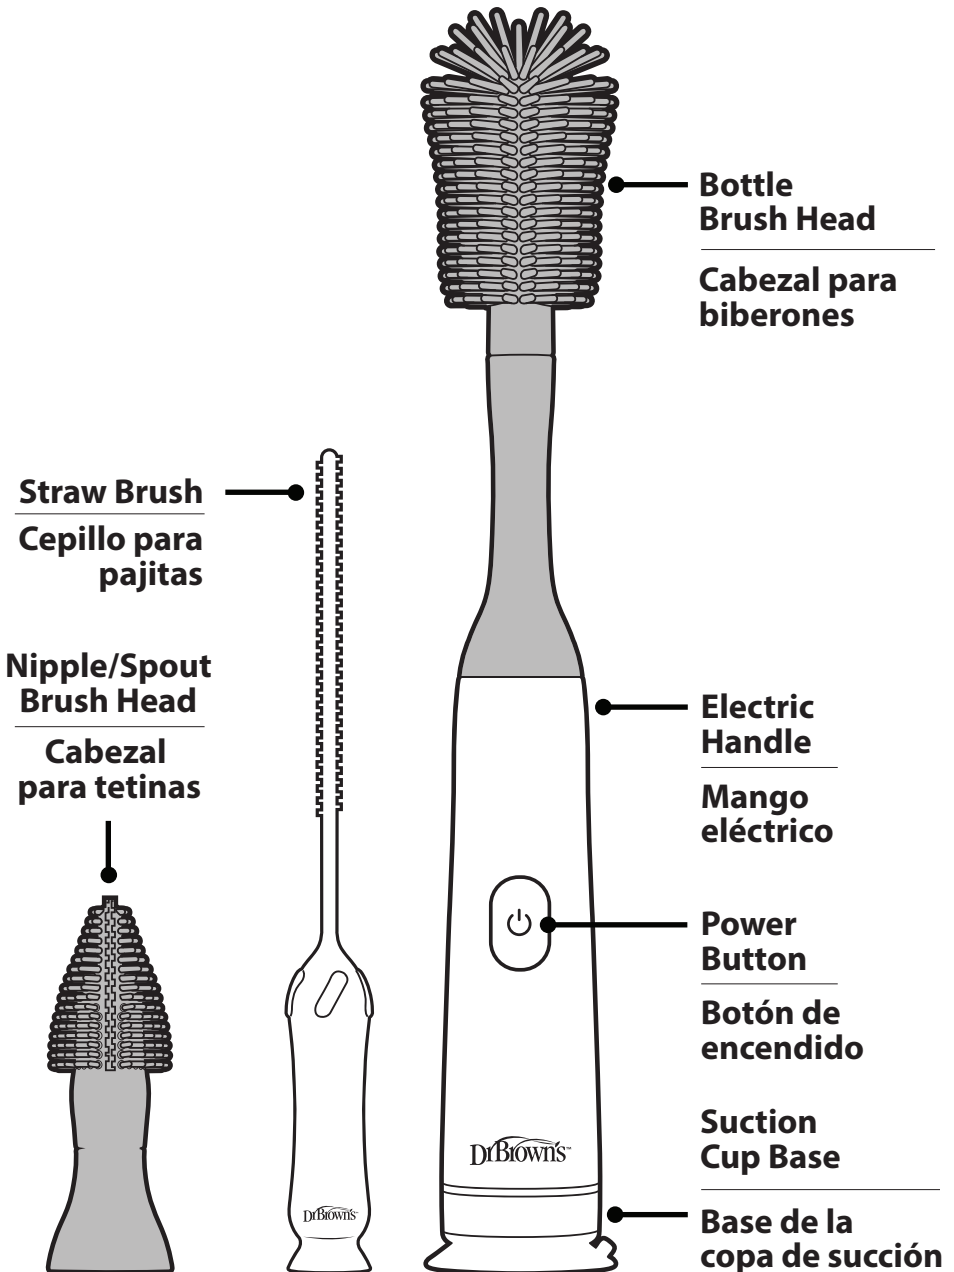

Specifications:
Li-ion Battery: 3.7V / 1200mAh
Charging Input: 5V / 0.6A
Waterproof Grade: IPX5

⚠️ IMPORTANT SAFEGUARDS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR INJURY TO PERSONS

When using electrical appliances, basic safety precautions should be followed, including the following:

Read all instructions before operating. Detailed instructions are available online at **drbrownsbaby.com/customer-support**. Failure to operate the product correctly can result in damage to the product and/or personal property, and cause serious injury.

To reduce the risk of fire or electrical shock:

- Do not operate any product with a damaged cord or plug or after the product malfunctions or has been damaged in any manner. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Use only with Listed/Certified Information Technology (Computer) Equipment or ITE Power Supply or Class 2 Power Unit. The measured maximum output power is less than 15W.
- Do not use or charge the product below 41°F/5°C or above 95°F/35°C. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.
- Keep away from heated surfaces. Do not expose to fire or excessive temperature. Exposure to fire or temperature above 266°F/130°C may cause explosion.
- The use of accessory attachments not recommended by the manufacturer may cause injuries.
- Do not use for anything other than intended use.
- Servicing must be performed by a qualified repair person using only identical replacement parts ensuring safety of the product is maintained.
- Do not attempt disassembly.
- Do not modify or attempt to repair the product or battery pack.
- Do not immerse the charging cord or handle in water or other liquid. Do not place or store brush where it can fall or be pulled into a tub or sink.
- Do not use while charging.
- Do not use without a brush head or the suction cup base attached.
- Household use only. Do not use outdoors.
- Do not incinerate.

To reduce the risk of injury:

- Keep the product and its cord out of reach of children. This product shall not be used or played with by children. Close supervision is necessary when any product is used near children.
- The battery must be removed from the product before it is scrapped; the product must be disconnected from the supply mains when removing the battery; the battery is to be disposed of safely.
- Do not attempt to remove Li-ion batteries from the device before disposal. Send electronic devices containing Li-ion batteries to certified electronic recyclers in electronics takeback service, or contact your local solid waste or household hazardous waste collection program for more options.
- The used batteries and hazardous materials disposal must comply with local regulations.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes seek medical help. Liquid ejected from the battery may cause irritation or burns.

SAVE THESE INSTRUCTIONS

Cleaning: Wash prior to each use. Bottle Brush Head, Spout Brush Head, and Straw Brush are safe for use in dishwasher (top rack only) electric sterilizer, or boiling water. Spot clean Electric Handle as needed.

⚠️ WARNING! Do not microwave Electric Handle or Straw Brush.


HOW TO USE

1. Snap Bottle Brush Head or Spout Brush Head onto Electric Handle.
2. Make sure the Suction Cup Base is attached to the Electric Handle and locked before use. Twist the suction cup base to the left to unlock, and twist it to the right to lock.
3. Press Power Button to turn on.
 - Press **once** to enter low speed.
 - Press **twice** to enter high speed.
 - Press **three times** to turn off.

The Power Light will be on while in use.

Blue: Electric Handle is on and in use.

Flashing Red: Battery is low.

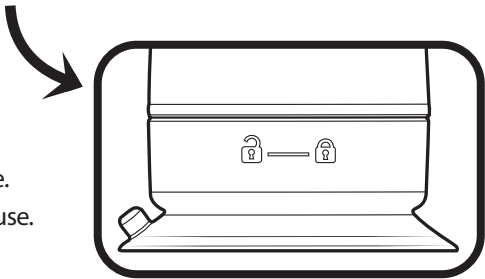

CHARGING

The Power Light will turn red and flash when battery is low. The red light will continue to flash until battery is depleted.

Connect the USB charging cable to a 5V/0.6A USB power adapter (not included) then plug into an outlet. Only use a 5V/0.6A adapter for charging.

Remove the Suction Cup Base and connect the USB charging cable into the charging port on the bottom of the Electric Handle. The Power Light will remain red while charging and turn green when fully charged. **Note: When inserting the USB charging cable into the charging device, please keep hands dry.**

The Electric Handle cannot be used while charging.

Each charge lasts about 40 minutes. It takes about 3 hours for Electric Handle to fully charge.

CAUTION:

- Do not press too hard or bend the brush while cleaning as this can damage the motor or cause the battery protection circuit to engage. To reset the battery protection circuit, connect the USB charging cable.
- Do not use the Electric Handle without Suction Cup Base attached. Make sure the Suction Cup Base is locked onto the Electric Handle before use. Water can enter the USB port and damage the motor.
- Do not use the Electric Handle without a brush head attached.

This device complies with Part 15 of the FCC Rules and ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Importer: Dr. Brown's Company
Address: 4433 Fyler Ave., St. Louis, MO 63116
Phone: 800-778-9001

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

