


UNBONDING THE GENERATOR

Removing the Generator Bond



TO THE INSTALLER: If connecting the generator to a standard 2-pole transfer switch or interlock, then it would be advised to remove the jumper bond before making the connection.

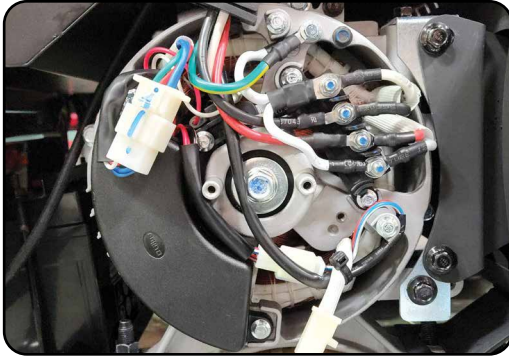

DANGER: Removing the generator bond will make the generator ungrounded and not safe to operate without being properly grounded through the home. **NEVER** run the generator with a removed bond while not connected to a ground.




DANGER: Removing the generator bond will disable the GFCI protection function, increasing the risk of electric shock.



WARNING: The following procedure should only be performed by a qualified electrician.

NOTE: After performing the unbonding procedure please ensure the generator is properly labeled as a floating neutral with the below label or equivalent.

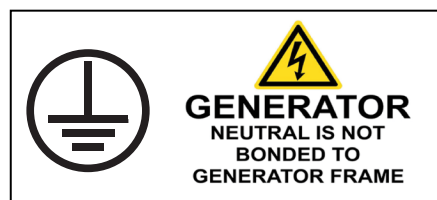


UNBONDING THE GENERATOR (CONTINUED)

Removing the Generator Bond



1. Remove generator cover

Remove the (2) 7mm bolts on the generator cover, then pull the cover off the generator.

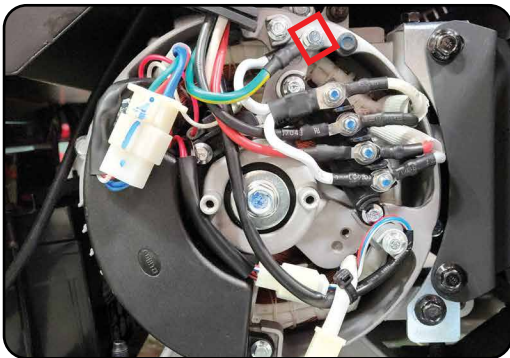


2. Locate ground bolt location

The ground bolt is located on the top right of the generator end cap.



3. Remove white wire on bolt

Remove the ground bolt and remove the (white) jumper wire from the ground bolt location. Once the white wire is removed, reinstall ground bolt with (yellow/green) ground wire attached.

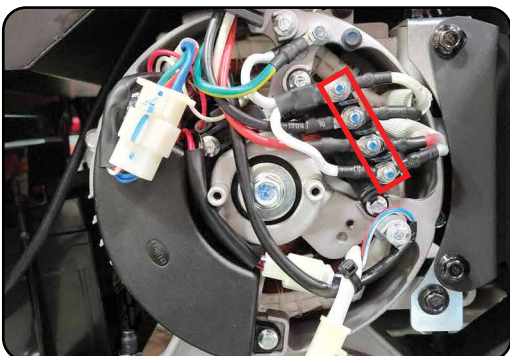


4. Locate terminal block

The 4-wire terminal block is located on the upper right corner of the generator end cap.



5. Remove top terminal nut

Remove the top terminal nut where the first (white) neutral wire is attached. Leave all wires in place on the bolt.

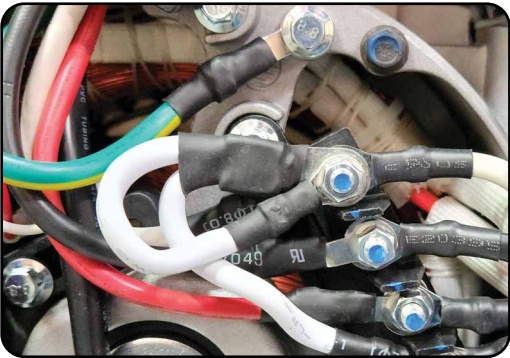

6. Loop jumper wire to terminal bolt

Move the disconnected end of the (white) jumper wire and loop it to the terminal bolt with the nut removed; then, replace the terminal nut. **Note: The wire loop should be positioned in a way that the stator cover can still be installed and the center shaft isn't making contact with the jumper wire.**



7. Replace generator cover

Bolt the generator end cover back onto the generator head.