


UNBONDING THE GENERATOR

Removing the Generator Bond



TO THE INSTALLER: If connecting the generator to a standard 2-pole transfer switch or interlock, then it would be advised to remove the jumper bond before making the connection.

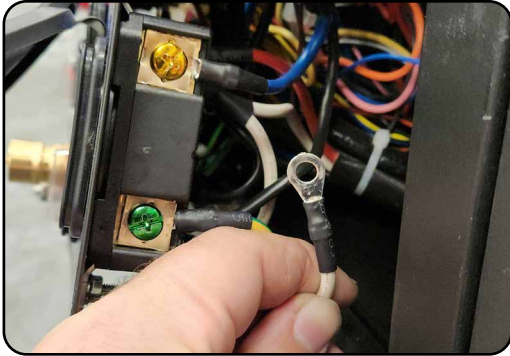

DANGER: Removing the generator bond will make the generator ungrounded and not safe to operate without being properly grounded through the home. **NEVER** run the generator with a removed bond while not connected to a ground.




DANGER: Removing the generator bond will disable the GFCI protection function, increasing the risk of electric shock.



WARNING: The following procedure should only be performed by a qualified electrician.

NOTE: After performing the unbonding procedure please ensure the generator is properly labeled as a floating neutral with the below label or equivalent.

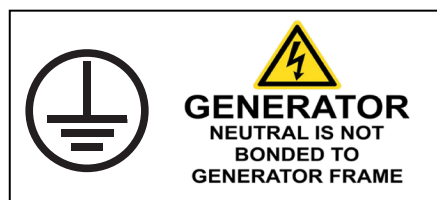

UNBONDING THE GENERATOR (CONTINUED)

Removing the Generator Bond (Continued)




1. Remove fuel valve center screw

The fuel valve knob will be located on the lower left hand corner of the panel. Remove the center screw with a screwdriver, then remove the fuel valve knob from the panel.




2. Remove screws around panel

Remove the screws around the control panel with a screw driver.

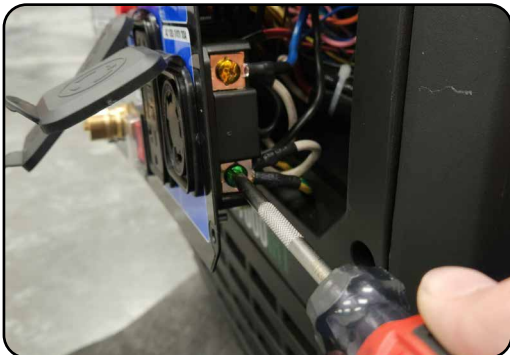


3. Remove ground neutral screw

Locate the 30A receptacle and lean the panel forward. Unscrew the ground/neutral bond screw behind the lower right corner of the receptacle with a screwdriver.

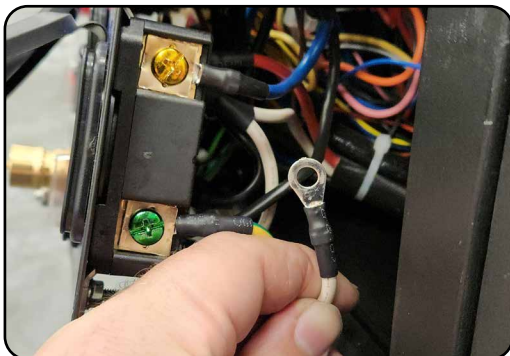

4. Remove neutral wire

After the screw is removed, remove the (white) neutral wire from the screw and leave the (yellow/green) ground wire in place on the screw. Replace the screw with the (yellow/green) ground wire attached.

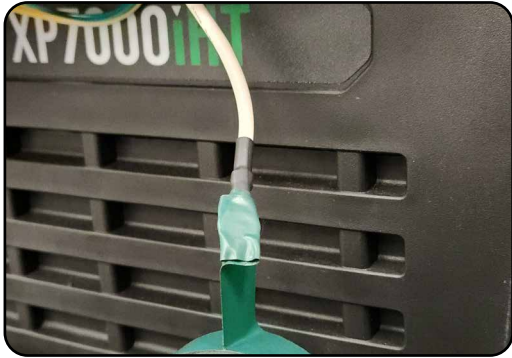

5. Insulate the loose white wire

Wrap the metal exposed end of the disconnected (white) neutral wire with electrical tape to ensure that it doesn't make contact with any of the other circuits.



6. Reassemble panel

Screw all sides of the panel back in. **Note: Verify none of the panel wires get pinched when installing.** Reinstall fuel valve center screw; and reinstall the outer panel housing.