

DYMO®

LabelManager™ 160E

Quick Start Guide

Getting Started

The DYMO® LabelManager™ 160E printer uses DYMO D1 cassettes in 1/4" (6 mm), 3/8" (9 mm), and 1/2" (12 mm) widths. Cassettes are available in a wide range of colors.

For complete information on using your printer, download the *DYMO LabelManager 160E User Guide* from support.dymo.com.



Download
User Guide

Registering Your Printer

 
Visit www.dymo.com/register to register your printer online. During the registration process, you will need the serial number, which is located inside the back cover of the printer.

Inserting the Batteries

The printer is powered by six AAA alkaline batteries.

To insert the batteries

- 1 Press the thumb latch on the back of the printer to remove the battery compartment cover.
- 2 Insert the batteries following the polarity markings (+ and -).
- 3 Replace the battery compartment cover.

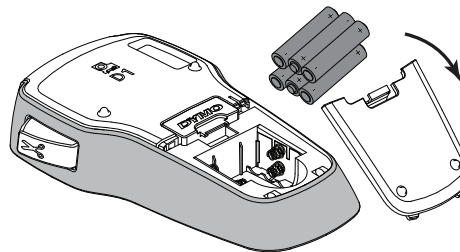

Safety Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.
- Remove the batteries if the printer will not be used for a long period of time.

Inserting the Label Cassette

Your label maker uses DYMO D1 label cassettes.



 
Caution: The cutter blade is extremely sharp. Keep fingers and other body parts away from cutter blade and do not press the cutter button.

To insert the label cassette

- 1 Lift the label cassette cover to open the label compartment.
- 2 Make sure the tape and ribbon are taut across the mouth of the cassette and that the tape passes between the label guides.

If necessary, turn the ribbon rewind spool clockwise to tighten the ribbon.

- 3 Insert the cassette with the label facing out and positioned between the label guides.
- 4 Press firmly until cassette clicks into place.

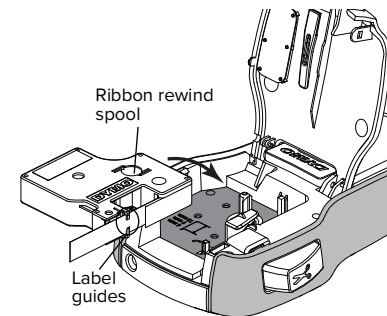


Using the Printer for the First Time

The first time you turn on the power, you are asked to select the language and label width settings.

To print a label

 - 1 Enter text and format to create a custom message.
- 2 Press .
- 3 Press the cutter button to cut the label.
- 4 Remove the backing from the label to expose the adhesive, and then stick!

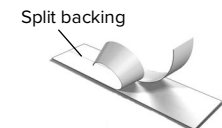

Limited Warranty

Your electronic DYMO product is sold with a 1-year warranty from the date of purchase or delivery (whichever is later) against defects in material and workmanship. DYMO will repair or replace your product free of charge on the following conditions:

- 1 Products returned under this warranty must be accompanied by a description of the defect together with a copy of the product's proof of purchase and your full contact and delivery details: name, telephone, complete address – street, house number, postal code, city, country.
- 2 Products returned to DYMO must be adequately packaged. DYMO will accept no liability for goods lost or damaged in transit from the customer.
- 3 Products must have been used strictly in accordance with operating instructions supplied. DYMO will have no liability for defects caused by accident, misuse, alteration or neglect.
- 4 DYMO accepts no liability for any consequential loss, damage or expense of any kind resulting from the machines or accessories or the use thereof, save that liability for death or bodily injury caused by such products is not excluded.
- 5 DYMO label printers are designed for use only with DYMO-branded labels. This warranty does not cover any malfunction or damage caused by the use of third-party labels.
- 6 This warranty does not affect your statutory rights as a consumer.

What to do if your product is defective?

DYMO offers you the following service options:

- **DYMO Website:** In most situations a visit to www.dymo.com will give you the right assistance. In the Customer Support area, you will find information about your DYMO product, such as Frequently Asked Questions and solutions to known problems. The User Guide also gives you additional information.
- **DYMO Help Desk:** You can also contact the DYMO Help Desk where an associate will help you to determine the exact nature of the problem and advise you what to do next:
US 1 877 724 8324

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

