

Bio SpeedCLEAN™ VX300

Model No. A6072

Owner's Manual

 
PLEASE READ
AND SAVE THESE
INSTRUCTIONS



Instructions

PLEASE CAREFULLY READ THIS MANUAL BEFORE OPERATING THIS MACHINE

- Do not use this vacuum to clean up liquids such as water, detergent or other wet fluids.
- Do not use this vacuum to clean up small granules such as flour, cement or plaster powder or large objects such as toys or balls of paper. That will cause the vacuum to become blocked and overheat.
- Use a damp cloth with mild detergent to clean the outside of this machine. Make sure it is unplugged from the wall outlet before cleaning it.
- Do not store this vacuum in very high or low temperatures. Do not let it sit in the sun. Store it in a cool, dry spot.
- Charge the batteries fully before using it the first time. If this unit is stored a long time, you may need to recharge the batteries before using it again.
- When the usage time is becoming shorter as the batteries weaken, it may be necessary to replace the battery pack.
- Charge the battery pack only with the adaptor that is provided with this machine. Do not disassemble the battery pack or get it close to liquids. Do not place the battery pack near high temperatures. Do not disassemble the battery pack.
- If this vacuum is not working properly, contact custserv@edenpure.com. Do not try to repair the unit yourself.
- Do not let children play with or use this machine or the battery pack.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

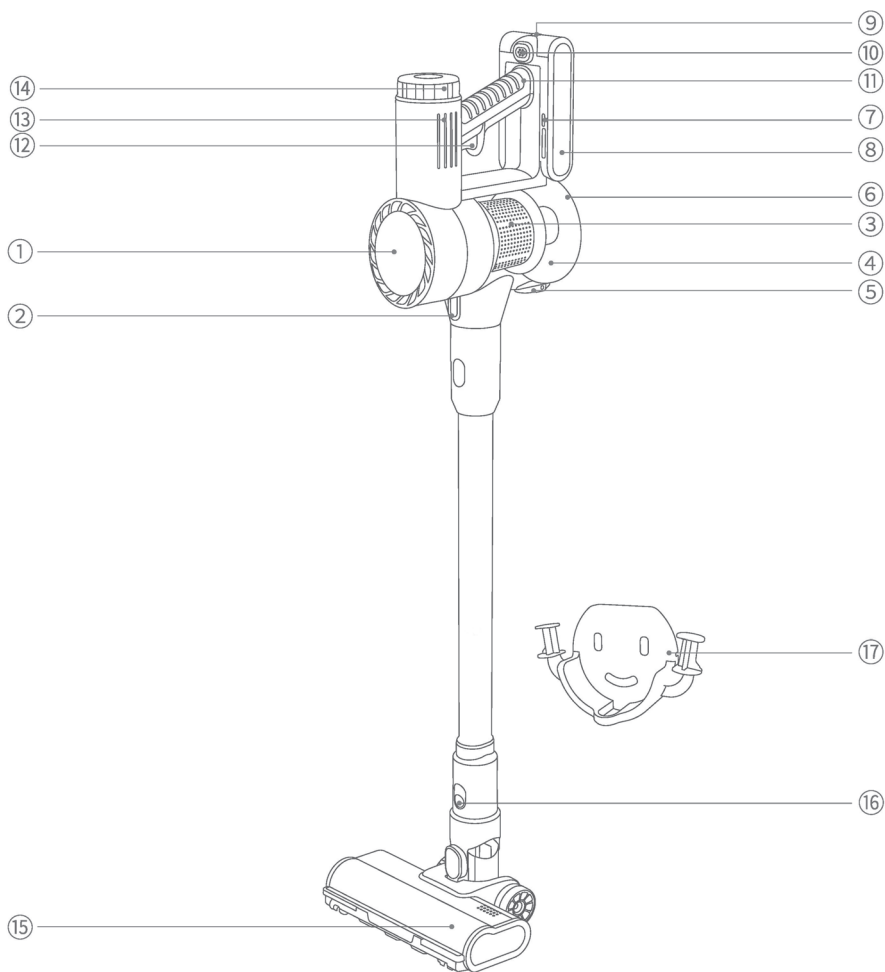

① Touch Screen

② Interface

③ Filter

④ Dust Cup

⑤ Dust Cup Release Button

⑥ Dust Cup Cover

⑦ Mode Button

⑧ Battery Pack

⑨ Charging Port

⑩ Battery Release Button

⑪ Handle

⑫ Power Switch

⑬ Air Outlet

⑭ Air Outlet Filter

 
⑮ Tumbler

⑯ Interface

⑰ Wall Bracket


Multiple Applicable Modes

Installation: When connecting the accessories, when a click is heard, it means that the installation is complete.

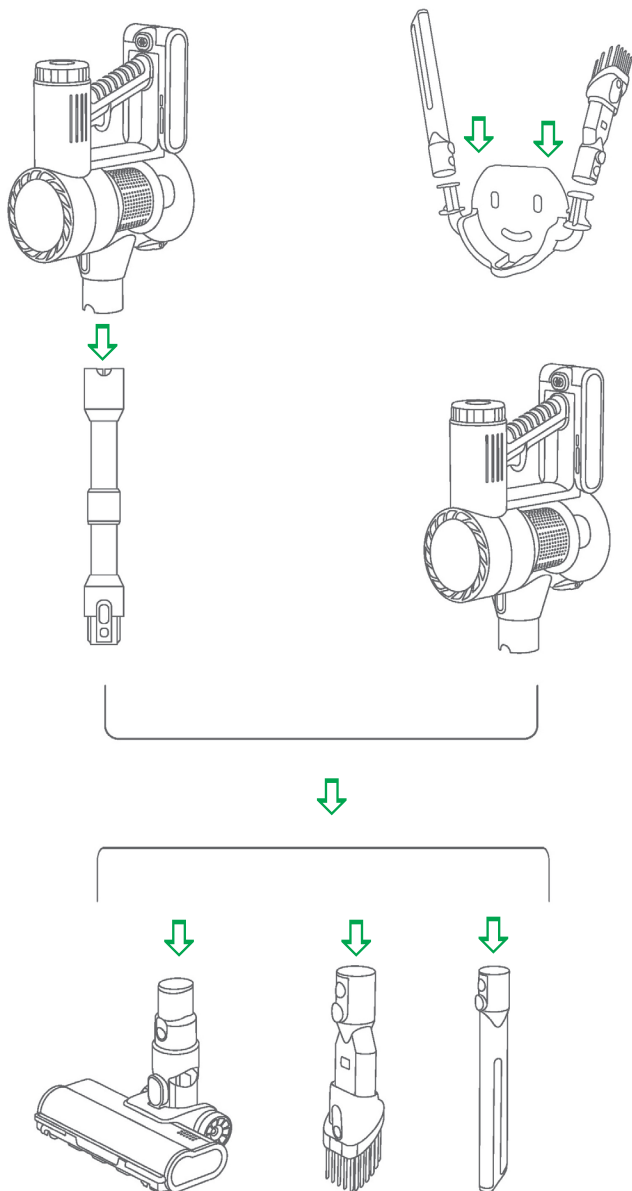


Charging Modes

 
1. Connect the charger directly to the battery pack charging port to charge the main unit.

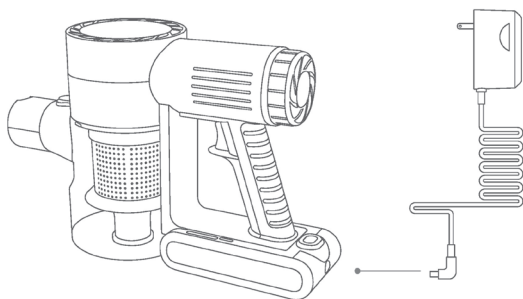

 2. Mount the wall mount on the wall first, hang the vacuum cleaner on the mount, then connect the adapter to the battery charging port to charge the unit.

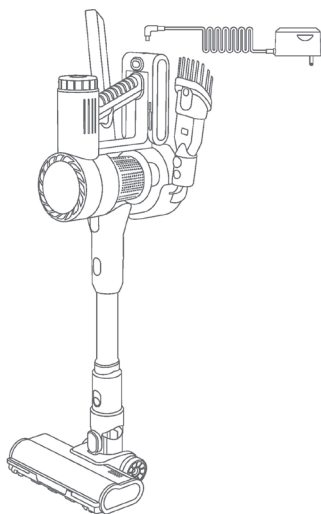

 3. Remove the battery from the main unit, then connect the charger to the battery pack charging port to charge it.

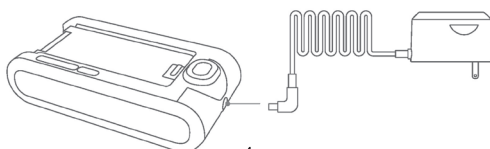

Charging Indicator

There are three charging indicators on the battery: 30%  , 60%  and 100%  . By following these three markers, you can clearly see the current charge level of the battery. We recommend fully charging the battery before each use to get the best cleaning experience.

Touch Screen

1. After powering on, the touch screen displays the power level. (Standard/Medium/MAX)
2. Touch “” on the screen to adjust the suction power.
3. When the brushes become tangled with hair, the icon E3 is displayed on the touch screen to indicate that the brushes need to be cleaned. When the dust cup is overflowing, the icon E7 is displayed on the touch screen to indicate that you need to clean the cup.



Standard



Medium



MAX



 
Hair Tangle Tip



Clean Dust Cup Tip

Accessories


Telescopic Tool: To connect the accessories to the main machine.

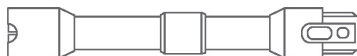

Long Flat Crevice Tool: For cleaning narrow areas such as sofa crevices, windows, tables and chairs.



 
2-in-1 Brush: For cleaning carpets, beds curtains, ceilings, etc.

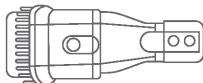

How To Use


1. Preparation

 Before use, please make sure the main machine is fully charged. Before using it for the first time, charge it for 5 hours to ensure the normal operation of the machine, and then select the brush head with different functions according to the area to be cleaned.

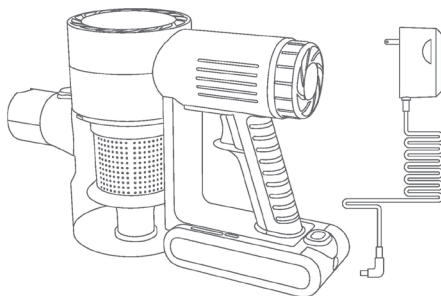


2. Operation

 Press the power button to start the machine, press the power button again to stop the machine. The vacuum cleaner has two modes: Max/Standard. Please press the “+/-” button to adjust the suction power level.

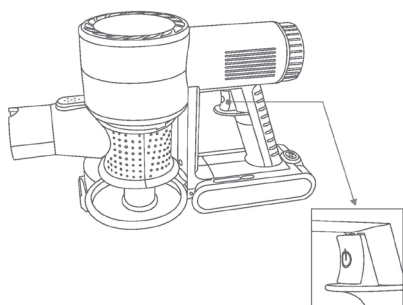

Start/Off


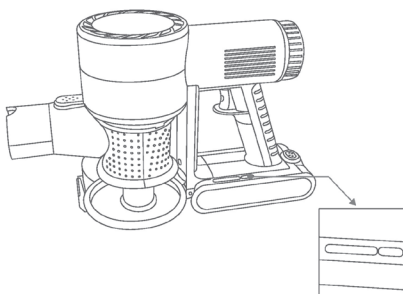 


Adjust Suction Power


Daily Maintenance

Cleaning:

  
1. First turn off the power switch and press the dust cup release button to empty the waste. Turn the dust cup clockwise to separate it from the main unit.
2. Remove the filter screen from the top of the dust cup.

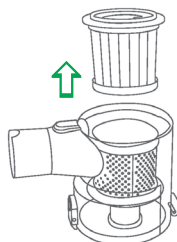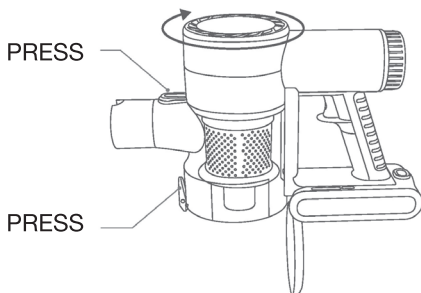

 3. Separate the filter screen from the cartridge.
4. Clean the filter screen and cartridge.

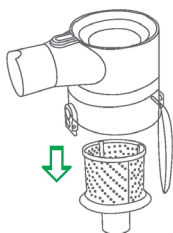

 5. Dry for 24 hours.
6. Wait until completely dry before using.

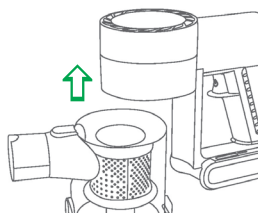


Air outlet filter cleaning:

1. Turn off the power switch and turn counterclockwise to remove the filter cartridge from the air outlet.

2. Clean the filter cartridge.

 3. Wait until completely dry before installing and using.

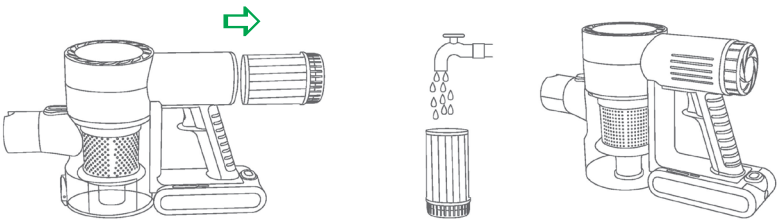

Note: Regular cleaning of the cartridge will maintain good suction power.

Product Specifications

Model Number	A6072
Rated Voltage	28.8V
Rated Input	100-240V – 50/60Hz 1.2A
Rated Output	35Vdc, 1A
Charging Time	3.5 Hours
Running Time	13-40 Minutes
Max Model (30Kpa)	13 Minutes
Mid Model (10Kpa)	40 Minutes
Weight	5.071 lbs.
Noise	<70db
Battery Capacity	2500mAh x8
Dust Cup Capacity	0.6L

This vacuum comes with a 1 year limited component warranty. If your unit does not appear to be working properly, please contact our service center by calling 1-800-225-6595. Prior to your call, we encourage you to visit our service related website www.edenpuresupport.com for troubleshooting tips and service instructions if needed.

EdenPURE®
7584 Whipple Avenue NW
N. Canton, OH 44720
custserv@edenpure.com

To place an order call 1-800-360-1070 or go to www.edenpure.com