


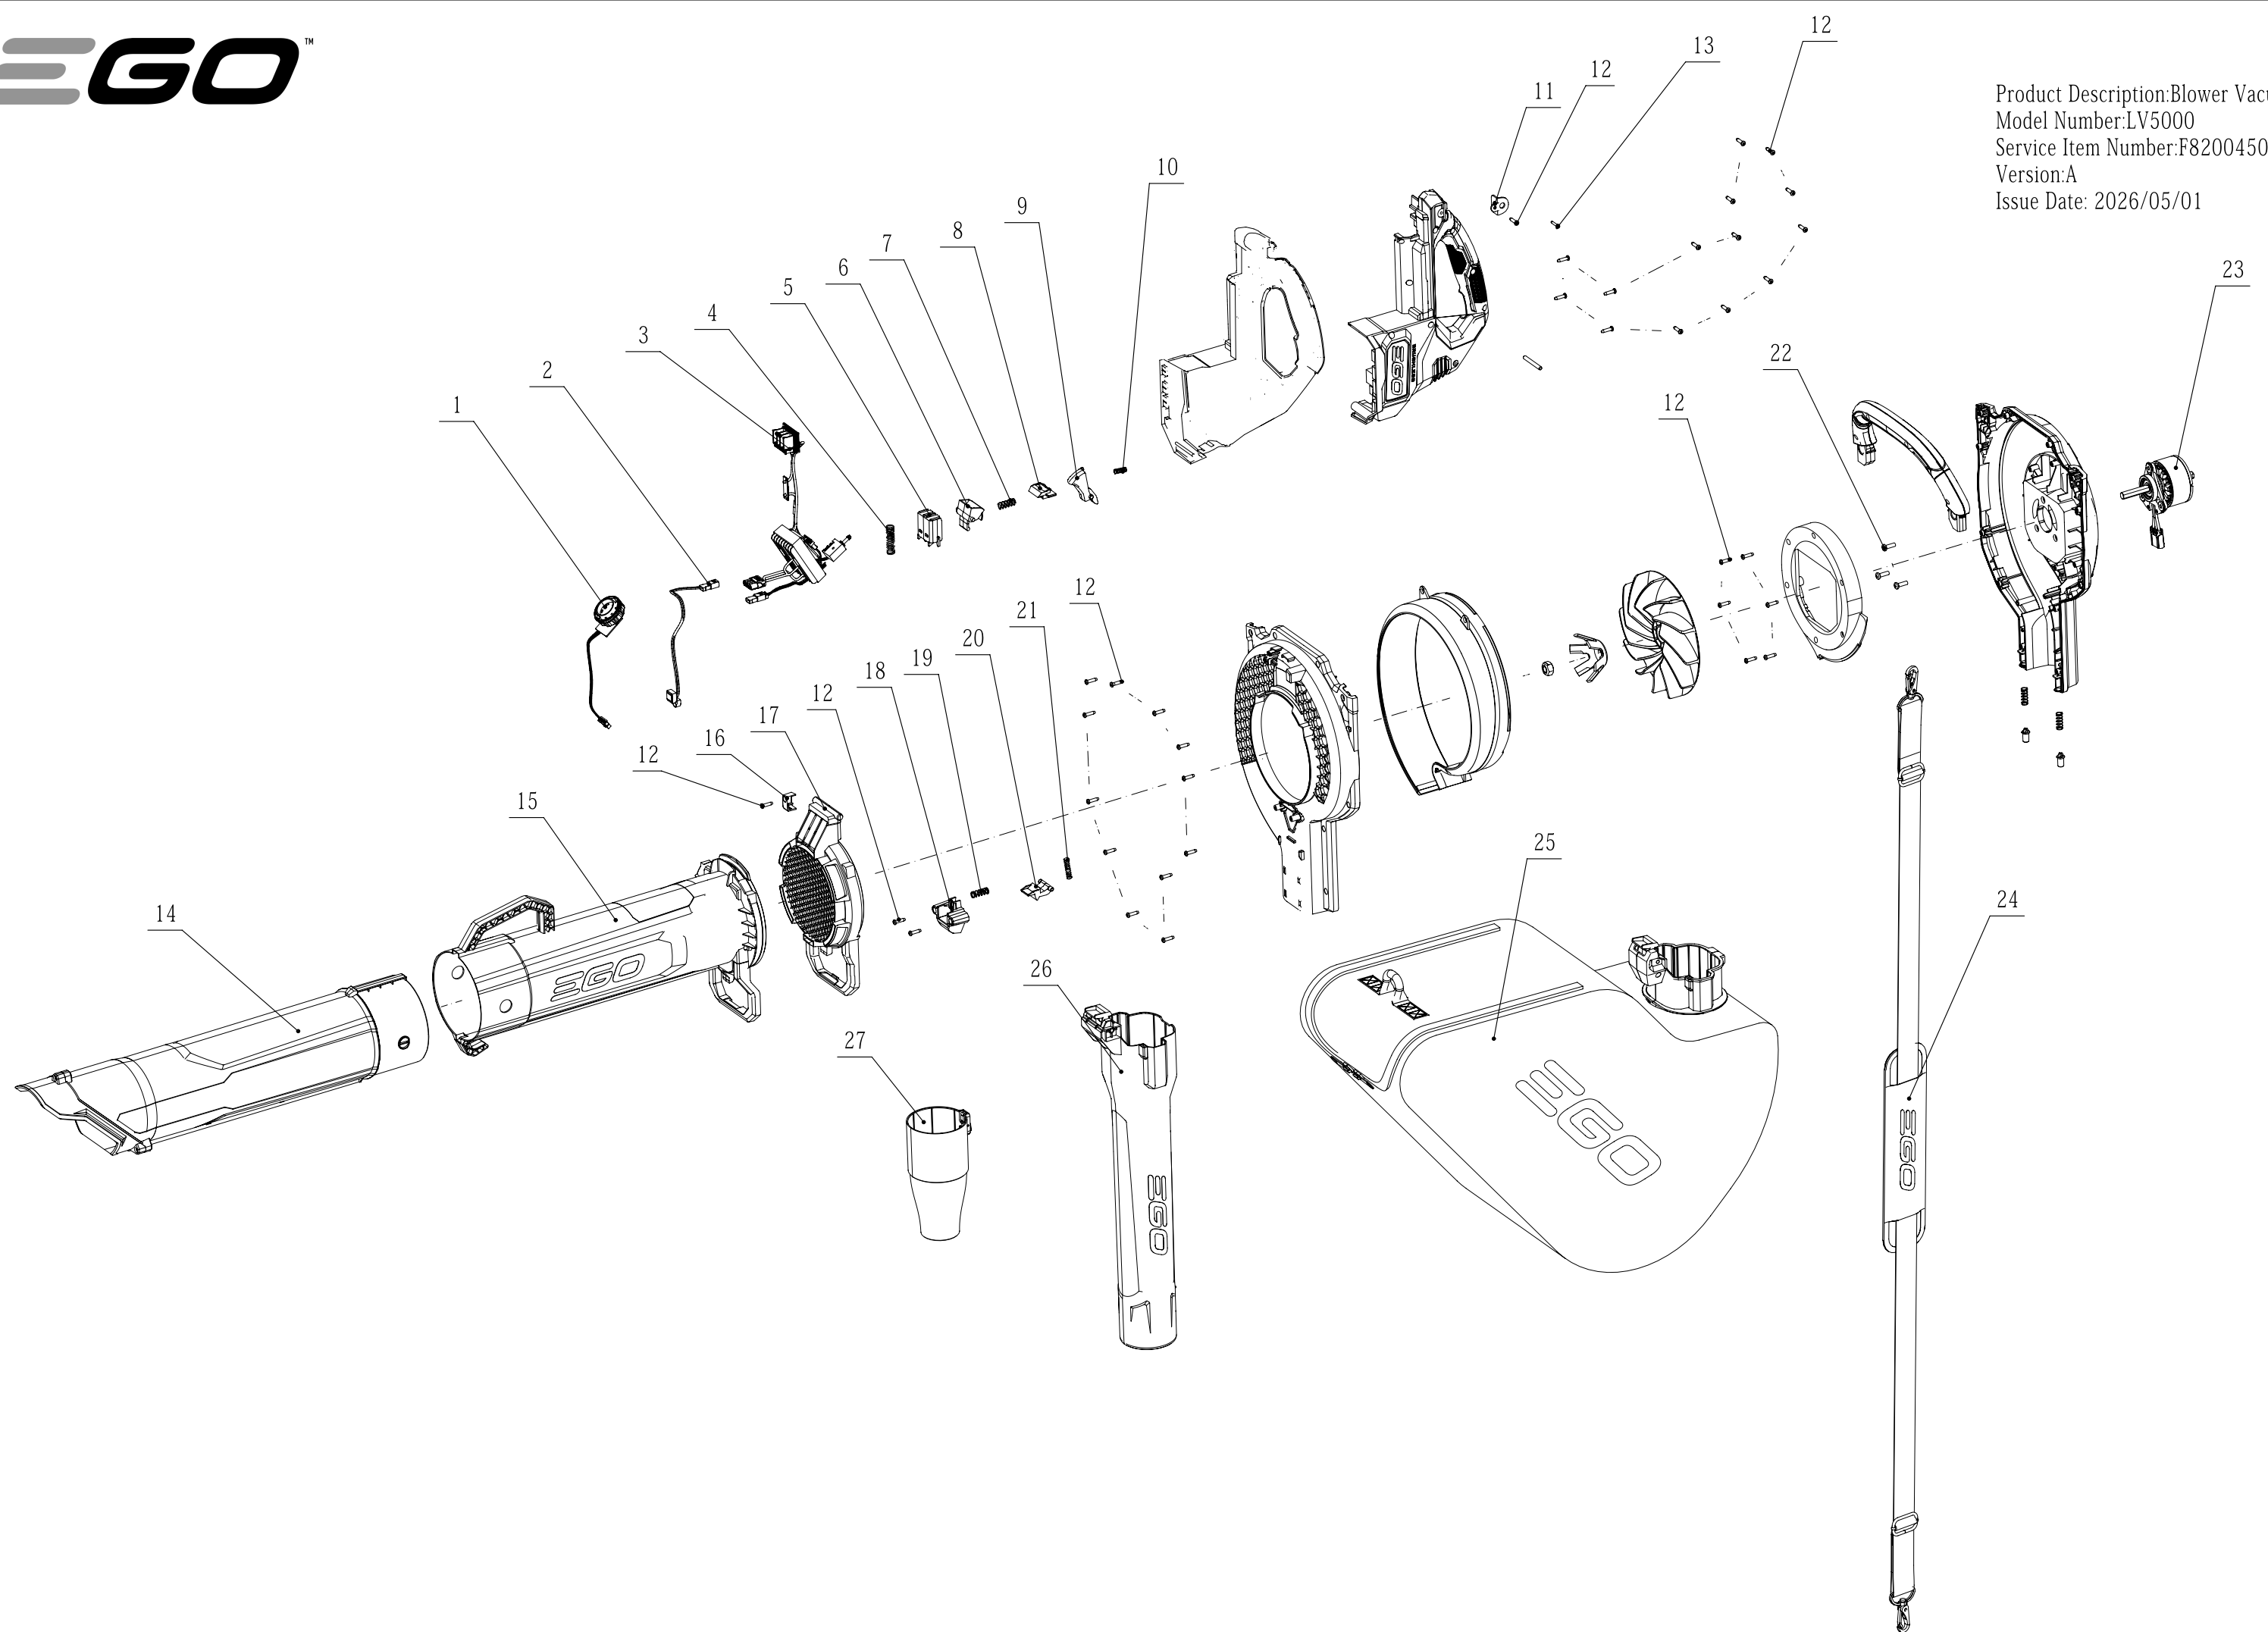

Service Part List_LV5000_Version A

No.	Product Model#	Part Number	Description	Qty
1	LV5000	2832379001	Speed Regulation Electric Assembly	1
2	LV5000	2832378001	Hall Electric Assembly	1
3	LV5000	2832860001	Electric Assembly	1
4	LV5000	3660818001	Compression Spring	1
5	LV5000	3131427001	Sliding Block	1
6	LV5000	3127498001	Power Pack Button	1
7	LV5000	3660013003	Spring1	1
8	LV5000	3127497001	Power Pack Button	1
9	LV5000	3135977001	Trigger	1
10	LV5000	3660088003	Knob-reset Spring	1
11	LV5000	3705909001	Hook	1
12	LV5000	5610294001	Tapping Screw	36
13	LV5000	5610274003	Self Tapping Screw	1
14	LV5000	2851741001	Blow Tube Assembly	1
15	LV5000	2851420002	Blow Tube Assembly	1
16	LV5000	3135975001	Cover Plate	1
17	LV5000	3136160001	Fan Baffle	1
18	LV5000	3135976001	Cover Plate	1
19	LV5000	3660303002	Spring	3
20	LV5000	3136159001	Release Button	1
21	LV5000	3660693001	Compression Spring	1
22	LV5000	5620051009	Screw	3
23	LV5000	2730444001	DC Motor	1
24	LV5000	3800262001	Harness	1
25	LV5000	2853810001	Leaf collection bag	1
26	LV5000	2851737001	Blow Tube Assembly	1
27	LV5000	2851831001	Cone Nozzle Assembly	1