

EPSON Stylus® Photo 1280

Printer Basics

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. The information contained herein is designed only for use with this EPSON printer. EPSON is not responsible for any use of this information as applied to other printers.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

A Note Concerning Responsible Use of Copyrighted Materials

Digital cameras and scanners, like photocopiers, conventional cameras, and ink jet printers, can be misused by improper copying and reprinting of copyrighted material. While some countries' laws permit limited copying of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. EPSON encourages each user to be responsible and respectful of the copyright laws when using digital cameras, scanners, and ink jet printers.

Trademarks

EPSON, EPSON Stylus, EPSON Photo Stickers, and MicroWeave are registered trademarks, and PRINT Image Matching is a trademark of SEIKO EPSON CORPORATION.

EPSON Print Lab, EPSON PhotoCenter, EPSON Connection, and EPSON Store are service marks, and ColorLife, EPSON Software, PhotoEnhance, and BorderFree are trademarks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

The ENERGY STAR emblem does not represent EPA endorsement of any product or service.

Printed in USA.



Printed on recycled paper.

Contents

WELCOME!	1
PRINT Image Matching and Exif Print	1
About PRINT Image Matching	1
About Exif Print	2
About Your Software	2
About Your Documentation	4
Warnings, Cautions, Notes, and Tips	4
Viewing Your On-Screen Reference Guide	4
 LOADING PAPER	 7
Loading Sheets	7
Loading Envelopes	8
Loading Roll Paper	10
If the Roll Paper Jams or Feeds Incorrectly	13
Removing and Storing Roll Paper	14
 PRINTING FROM START TO FINISH	 15
Basic Printing in Windows	16
Selecting the Settings You Use Most Often	18
Basic Printing on a Macintosh	19
Printing with OS 8.5.1 to 9.x	19
Printing with OS X	21
Customizing Your Print Settings	25
Customizing Windows Print Settings	25
Customizing Macintosh Print Settings	29
Selecting the Correct Media Type	32

Printing BorderFree Photos	33
BorderFree Printing with Windows	33
BorderFree Printing with Macintosh OS 8.5.1 to 9.x	34
PRINT Image Matching and Exif Print	34
Using Film Factory	35
Using the P.I.M. II Plug-in for Adobe Photoshop	39
MAINTAINING YOUR PRINTER	43
Cleaning the Print Head	43
Running the Head Cleaning Utility	44
Examining the Nozzle Check Pattern	45
Replacing an Ink Cartridge	45
Removing and Installing Ink Cartridges	46
Aligning the Print Head	49
Cleaning the Printer	51
Transporting the Printer	52
PROBLEM SOLVING	53
Identifying Printer Parts	54
Diagnosing Printer Problems	55
Checking the Control Panel Lights	55
Running a Printer Check	57
Problems and Solutions	58
Problems Setting Up the Printer or Installing Software	58
Printing Problems	59
Print Quality Problems	60
Problems with Paper Feeding	63
Solving Miscellaneous Printout Problems	64

Uninstalling and Reinstalling Printer Software	65
Windows	65
Macintosh OS 8.5.1 to 9.x	66
Where To Get Help	67
Photo Software Technical Support	68
NOTICES	69
Windows System Requirements	69
Macintosh System Requirements	70
ENERGY STAR Compliance	70
Important Safety Instructions	71
Ink Cartridge Safety Instructions	72
FCC Compliance Statement	73
Declaration of Conformity	74
Epson America, Inc. Limited Warranty	75
INDEX	77

Welcome!

Your EPSON Stylus® Photo printer delivers state-of-the-art print quality for both professional and home office users. With resolutions up to 2880 × 720 dpi, it's the ideal output device for everything from exhibition prints to family photos. You can print edge-to-edge, borderless prints on a variety of roll paper sizes, or on single sheets of special EPSON® photo papers available in popular print sizes.

PRINT Image Matching and Exif Print

Your EPSON Stylus 1280 printer supports both digital image formats to give you the best photo prints possible.

- PRINT Image Matching™ (both P.I.M. and P.I.M. II)
- Exif Print

About PRINT Image Matching

EPSON's revolutionary PRINT Image Matching (P.I.M.) technology lets your digital camera and printer work together automatically to produce the best prints possible. Digital camera manufacturers that support PRINT Image Matching include EPSON, Casio®, JVC®, Konica®, Kyocera®, Minolta®, Nikon®, Olympus®, Panasonic®, Pentax®, Ricoh®, Sanyo®, and Toshiba®. Go to www.printimagematching.com to see if your camera supports PRINT Image Matching.

Even if your camera doesn't include PRINT Image Matching technology, your EPSON Stylus Photo 1280 still gives great photo printing results. You just won't have the automatic adjustments that P.I.M. provides.

With PRINT Image Matching, the digital camera manufacturer can set specific printing options for each camera model. These options include:

- Contrast, sharpness, and brightness
- Gamma level, color space, and color saturation
- Shadow point, highlight point, and color balance

The camera saves this information in each image file. Your printer—along with EPSON Software™ Film Factory™ and P.I.M. II Plug-in for Adobe® Photoshop®—uses the information to ensure the most accurate image reproduction.

About Exif Print

The Exif (Exchangeable Image File) Print format includes information about your digital camera settings in JPEG files so your printer and application can use the data to create accurate print settings. Most digital cameras store Exif Print information such as shutter speed, metering, flash, exposure settings, resolution, and lens use in the JPEG image file. Your printer—along with EPSON Software Film Factory and the P.I.M. II Plug-in for Adobe Photoshop—uses the information to ensure the most accurate image reproduction.

About Your Software

The printer software CD-ROM that came with your printer includes all the software you need for printing. (You must have a CD-ROM or DVD drive installed on your computer.)

- Your printer driver runs your printer and lets you control how your documents look. You can't use your printer without it.

Note: It's a good idea to check EPSON's support web site periodically for possible updates to your printer driver. Visit <http://support.epson.com> and check the section for your product to see if there is a new driver available, free of charge, for downloading to your computer. Download instructions are posted for your convenience.

- Your bonus photo software includes these applications:



EPSON Software Film Factory

Photo management software that lets you organize, beautify, and print your photos in a flash. Supports PRINT Image Matching (both P.I.M. and P.I.M. II) and Exif Print.



Adobe Photoshop Elements (Windows® XP, 98, Me, 2000, and NT 4.0, and Macintosh® OS 8.6 or later)


Offers unique features designed specifically for amateur photographers, hobbyists, and business users who want an easy-to-use yet powerful digital imaging solution.

Adobe Photoshop LE (Windows 95 and Macintosh OS 8.5x)

Your gateway to the Photoshop experience, Adobe Photoshop Limited Edition provides a basic set of the image-editing tools preferred by graphic design professionals.

P.I.M. II Plug-in for Adobe Photoshop (Windows® XP, 98, Me, 2000, and NT 4.0, and Macintosh® OS 8.6 or later)

Lets you retain PRINT Image Matching and Exif Print image quality when you import JPEG or TIFF files from your P.I.M., P.I.M. II, or Exif Print-enabled digital camera. (Works with Photoshop 6.0 and 7.0, and Photoshop Elements 1.0 and 2.0.)

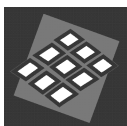

Monaco Systems™ MonacoEZcolor™ software offer (Windows XP, 98, Me, and 2000, and Macintosh OS 8.6 or later)

Lets you build ICC device profiles for accurate color between scanned, displayed, and printed images. Your printer CD-ROM contains a demo version of the software.



EPSON PhotoCenter is EPSON's free photo-sharing web site where you can store, organize, and share your photos; print high-resolution photos straight from the web; and order prints and custom photo gifts. Your printer software installer lets you add a link to the EPSON PhotoCenter on your desktop.

About Your Documentation

To set up your printer and install its software, see the *Start Here* sheet. This book contains system requirements, important safety information, and instructions on:

- Viewing your on-screen *Reference Guide*
- Printing with Windows or on a Macintosh
- Maintaining the printer
- Solving basic problems

Warnings, Cautions, Notes, and Tips

Please follow these guidelines:

Warning: Warnings must be followed carefully to avoid bodily injury.

Caution: Cautions must be observed to avoid damage to your equipment.

Note: Notes contain important information about your printer.

Tip: Tips contain additional hints for better printing.

Viewing Your On-Screen Reference Guide

Your printer software CD-ROM includes an on-screen *Reference Guide* for your printer. The manual is in HTML format, so you need a browser—such as Microsoft® Internet Explorer 3.0 or later or Netscape Navigator™ 3.0 or later—to view it. If you are using a different browser, the pages may not display correctly. (A browser is not included on the printer software CD-ROM.)

Follow these steps to copy the *Reference Guide* to your computer:

1. Insert your printer software CD-ROM.


2. **Windows:** (If you're using Windows XP, first click **Start**.) Double-click  **My Computer**, double-click your  CD-ROM or DVD drive icon, then double-click the  **EPSON** icon.

Macintosh: Double-click the  **EPSON** icon in your CD-ROM window. (You may have to double-click the **EPSON** icon on your desktop first.)

3. On the Install Menu, click **Install Reference Guide**.

A shortcut icon for your guide appears on your desktop. To view the guide, just double-click the icon.


When you first open the *Reference Guide*, you see this screen:

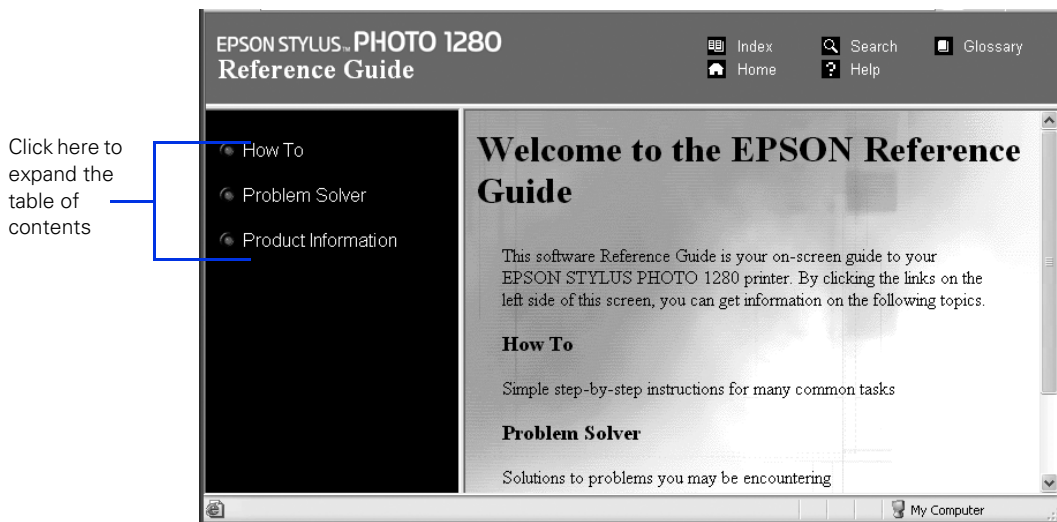

Click a topic on the left to expand the table of contents. After expanding the table of contents, you can click on the topic you want to view.

If there's a right arrow ▶, click it to view subtopics, then click on a topic to go to it.

Click the down arrow ▼ to close a subtopic list.

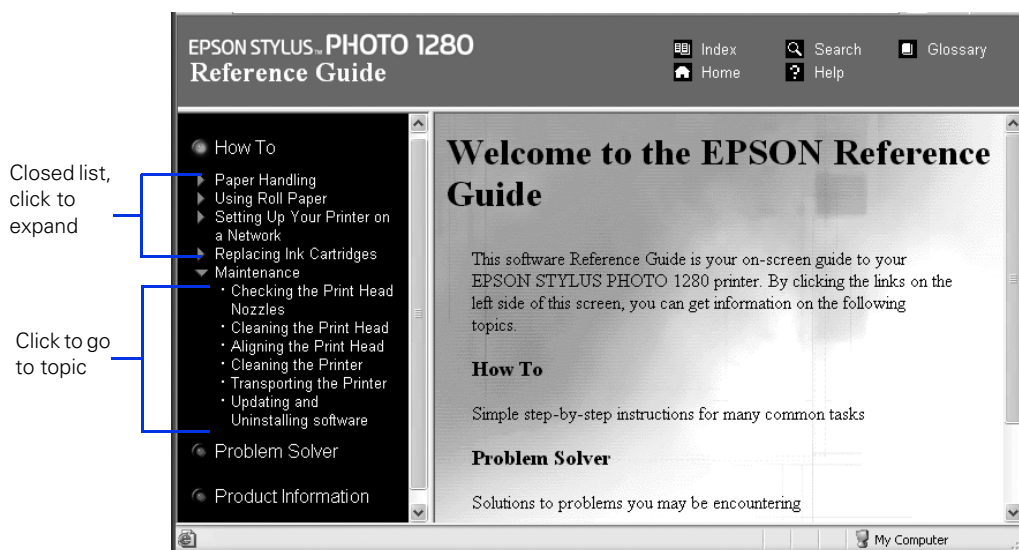

Note: If you see an icon for a graphic when viewing your *Reference Guide* in Netscape Navigator, click the **Reload** button to load the graphic.

Loading Paper

This chapter explains how to load plain paper and envelopes. It also describes how to load, remove, and store roll paper, and what to do if your roll paper jams or feeds incorrectly. For instructions on loading special media, see your on-screen *Reference Guide*.


Follow the instructions in these sections:

- “Loading Sheets” below
- “Loading Envelopes” on page 8
- “Loading Roll Paper” on page 10

Loading Sheets

Make sure your printer and computer are turned on.

1. Place your paper against the right edge of the sheet feeder and slide the left edge guide against the paper. (Don't push the paper down into the feeder.)
2. Pull out the output tray extensions.

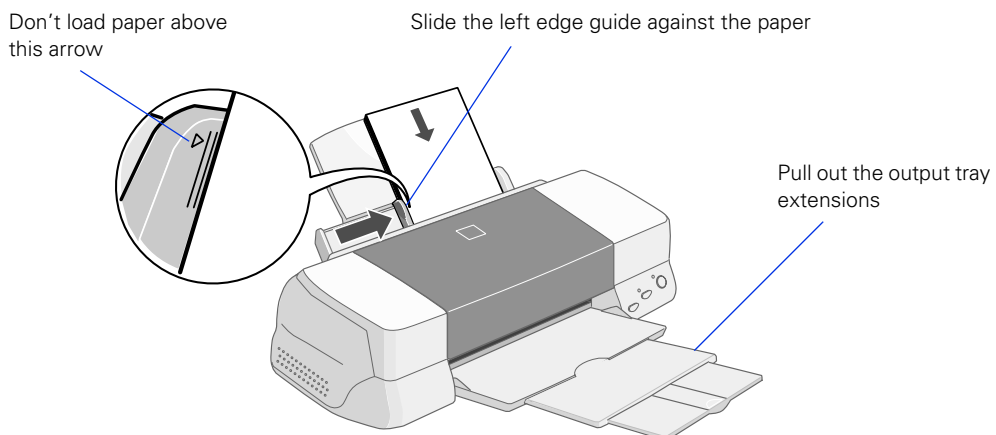

Follow these guidelines when loading paper:


- Load the printable side face up. It's usually whiter or brighter than the other side.
- Always load the short edge first, even when printing in landscape mode.
- Load letterhead or preprinted paper top edge first.
- Load up to 20 sheets of EPSON Photo Paper, Glossy Photo Paper, or Matte Paper Heavyweight.
- Load EPSON Premium Glossy, Semigloss, and Luster Photo Paper one sheet at a time.
- Don't load paper above the arrow on the left edge guide.

Loading Envelopes


You can load up to 10 envelopes at a time, flap edge first and printable side up.

Tip: For best results, press each envelope flat before loading it, or load one envelope at a time.

1. Place the envelopes against the right edge of the sheet feeder and slide the left edge guide against them.

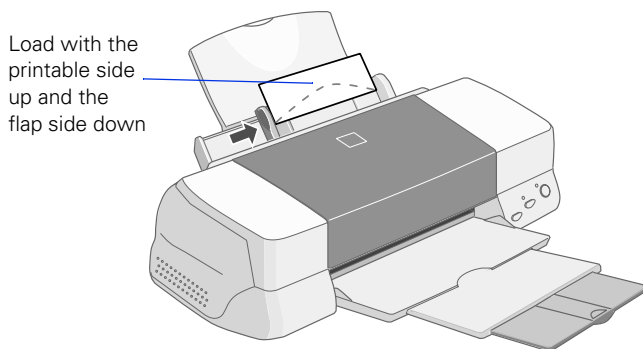

2. Set your printer's thickness lever to the **+** position. (Remember to move the thickness lever back to the **0** position when you're done printing envelopes.)

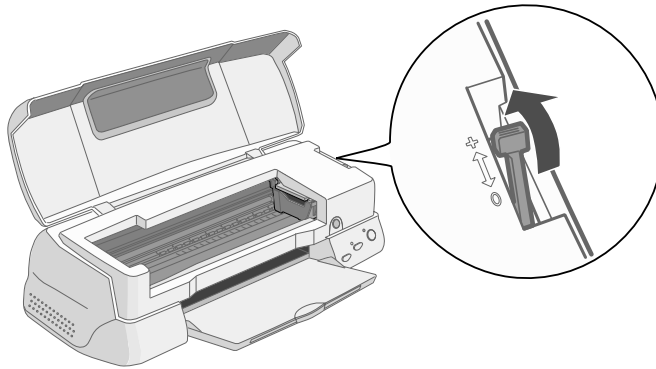


3. Select **Plain paper** as the Media Type setting and choose the correct envelope size as the Paper Size setting. See page 16 (Windows), page 22 (Macintosh OS X), or page 19 (Macintosh OS 8.5.1 to 9.x) for more information.


Loading Roll Paper

This procedure illustrates how to load 4-inch wide roll paper, but you can follow the same steps to load wider roll paper. Before you begin, turn on your computer and printer.


1. Remove the paper support and lower the output tray. Then insert the paper support adapter into the positioning slots on the back of the printer, as shown. (The down arrows on the adapter should be positioned above the slots.)

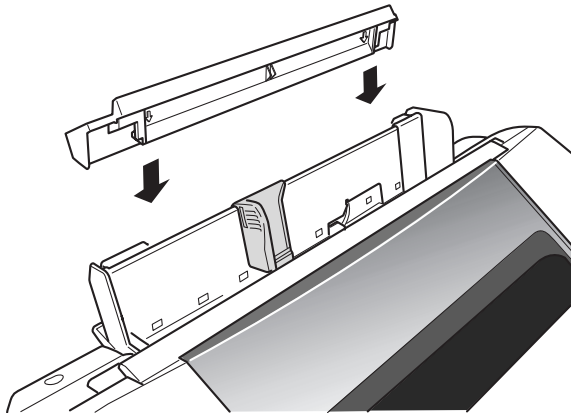

2. Set the roll paper onto the roll paper holders. Avoid touching the printable side of the roll paper as much as possible.

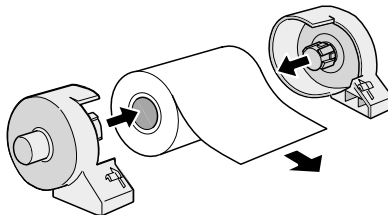


3. Before loading the paper, make sure the edge is cut cleanly—at a 90 degree angle in each corner—to ensure proper loading. If necessary, trim the edge using a straight-edge tool or triangle.

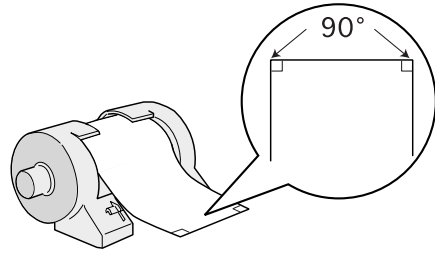


Note: Make sure that the end of the roll paper is cut perpendicular to the edges. A diagonal cut may cause paper feeding problems.

4. If necessary, uncurl the paper. Locate the uncurling sheet that came inside the printer box. Insert the paper inside the uncurling sheet and roll it in the direction opposite to the paper's curl. (This step is especially important with roll paper that is wider than 4 inches.)

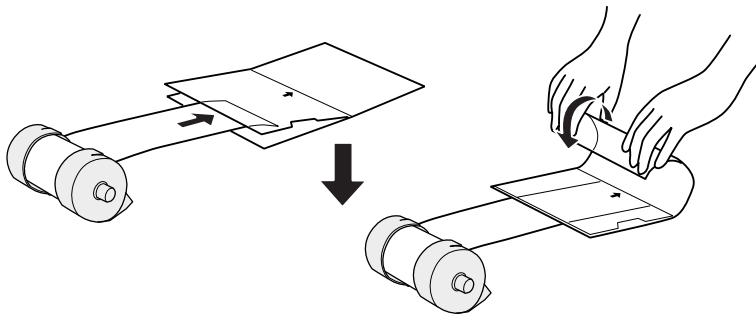


5. Insert the tabs on the roll paper holders into the slots on the paper support adapter. As you face the front of the printer, insert the tab on the right roll paper holder into the slot at the right end of the adapter, and the tab on the left roll paper holder into the appropriate slot to the left.

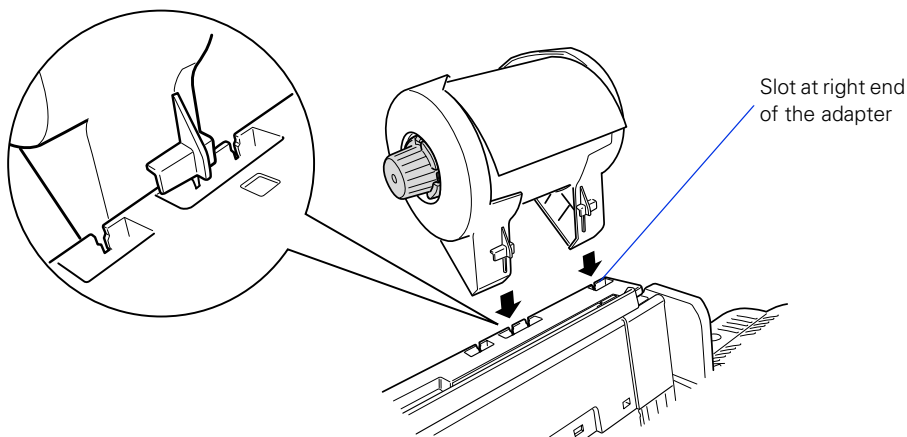


Note: It's important to insert the tab on the right roll paper holder into the slot at the right end of the adapter. Otherwise your roll paper won't load correctly, and you may see an error.

6. Feed the end of the paper into the printer as far as it will go, then slide the left edge guide against the paper.

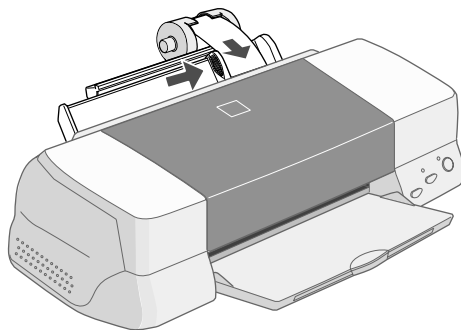

7. Gently rotate the roll backward to remove any slack from the paper.
8. Make sure the output tray is open but the extensions are closed, and leave ample room at the front of the printer for your paper to eject smoothly.

9. Gently hold the paper in place as you press and release the  roll paper button to feed the paper into the printer.

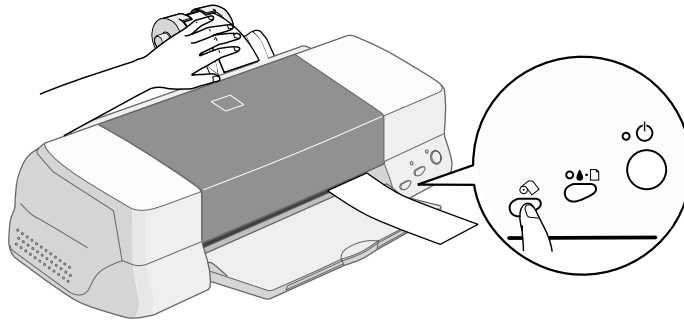

Note: Don't force the paper to feed into the printer. Allow the paper to move automatically.

Make sure to press the  roll paper button when you feed roll paper. Pressing the  maintenance button by mistake may cause paper feeding problems.

If the Roll Paper Jams or Feeds Incorrectly

If the paper feeds incorrectly, do the following:

1. Press the  roll paper button for three seconds to rewind the paper. (You may have to do this more than once to rewind the paper completely.)

If the paper is jammed and won't rewind, turn the printer off. Then cut the roll at a point a few inches away from where it exits the printer. Make your cut as straight as possible to avoid further feeding problems. Gently pull the roll backward to rewind it, and then turn the printer on again.


2. After you rewind the paper, the  maintenance light comes on. Press the  maintenance button to turn the light off.
3. Reload the paper, making sure the end is straight and not damaged. If necessary, trim the end again before reloading.

Removing and Storing Roll Paper

When you finish a print job on roll paper, you can position the paper for another print job or remove it from the printer. Follow these steps:

1. Press the  roll paper button. The printer prints a small line on the roll paper to show you where to cut it and feeds the paper forward.
2. If you want to continue printing on roll paper, press the  roll paper button again; the paper feeds back into the printer. Then send the next print job; the paper will move into the correct loading position before printing.

If you're finished printing on roll paper, follow the rest of the steps to remove it.

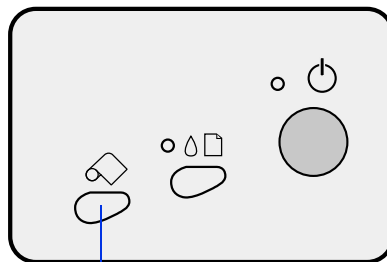

Roll paper button

3. Cut the roll paper on the side of the line facing away from the printer. Make your cut as straight as possible to avoid feeding problems.

Note: Don't pull on the paper as you cut it; you may damage your printout.

It's a good idea to use a ruler or straight edge to make sure the end of the roll paper is cut at right angles. A diagonal cut may cause paper feeding problems.

4. Hold down the  roll paper button for about three seconds. The roll paper feeds backward, so you can remove it from the sheet feeder. (You may need to repeat this step to back it all the way out.)
5. Remove the roll paper from the holder and return the unused roll to its original package.

Store your printout in a resealable plastic bag. Keep both printed and unused roll paper away from high temperatures and humidity and out of direct sunlight.

Note: After you rewind the roll paper, the  maintenance light remains on. You must press the  maintenance button to turn the light off before you can resume printing.

Printing from Start to Finish

Here's what to do to print a basic document—such as a photograph or newsletter—from loading the paper to selecting print settings to controlling the print job.


Follow the instructions in these sections:

- “Basic Printing in Windows” on page 16
- “Basic Printing on a Macintosh” on page 19
- “Customizing Your Print Settings” on page 25
- “Selecting the Correct Media Type” on page 32
- “Printing BorderFree Photos” on page 33
- “PRINT Image Matching and Exif Print” on page 34

Basic Printing in Windows

This section describes the basic steps for printing with Windows. Make sure you have paper in the printer. After you create your document in a software program, follow these steps to print:


1. From the File menu, click **Print**. You see your application's Print window (your window may look slightly different):

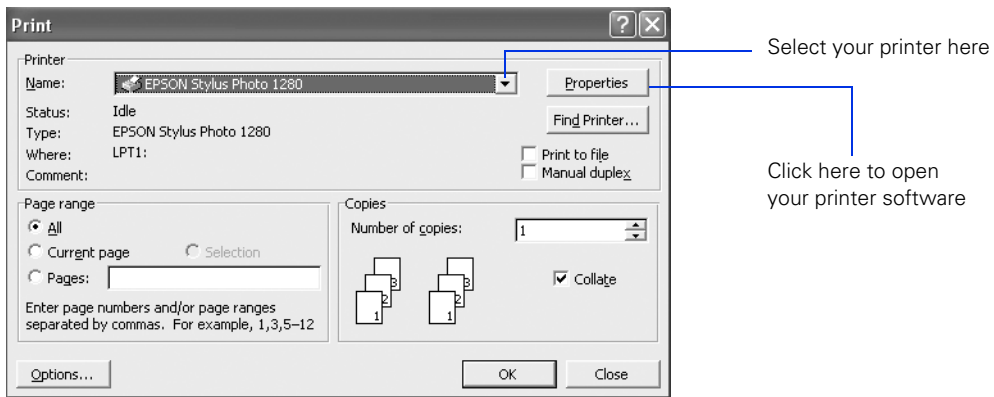

2. Make sure your EPSON Stylus Photo printer is selected.
3. Click **Properties** or **Preferences**. (If you see a **Setup**, **Printer**, or **Options** button, click it. Then click **Properties** or **Preferences** on the next screen.)


Note: If you click the print icon on your application's tool bar instead of selecting **Print** from the File menu, you may not get the option to change the printer software settings before printing.

You see your printer settings window.

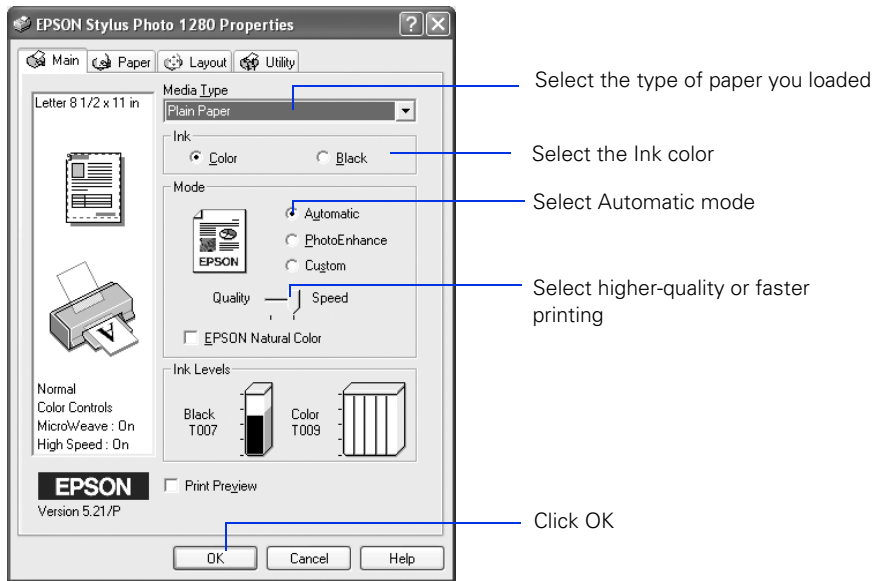

4. Make the following settings:


- Choose the Media Type for your paper. If you're not sure which setting to select, see page 32.
- For Ink, select **Color** to print a color document or black and white photograph, or **Black** to print a grayscale or black text document.
- Set the Mode to **Automatic**. It's the easiest way to get good printing results on all types of paper.
- Set the slider in the Mode box to **Quality** or **Speed** to select high-quality or faster printing. (The slider may not be available for some Media Types.)

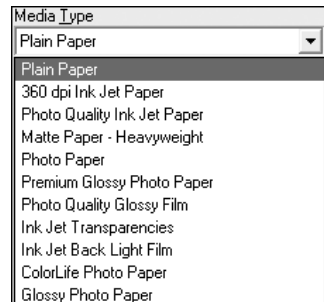

5. Click **OK** to save your settings, return to the Print window, and print.

Note: For more information about printer settings, click the **Help** button. You can also right-click any item on the screen and then click **What's This?**.

After a moment, this window appears and shows the progress of your print job. You can use the buttons to cancel, pause, or restart printing. You can also see how much ink you have left.

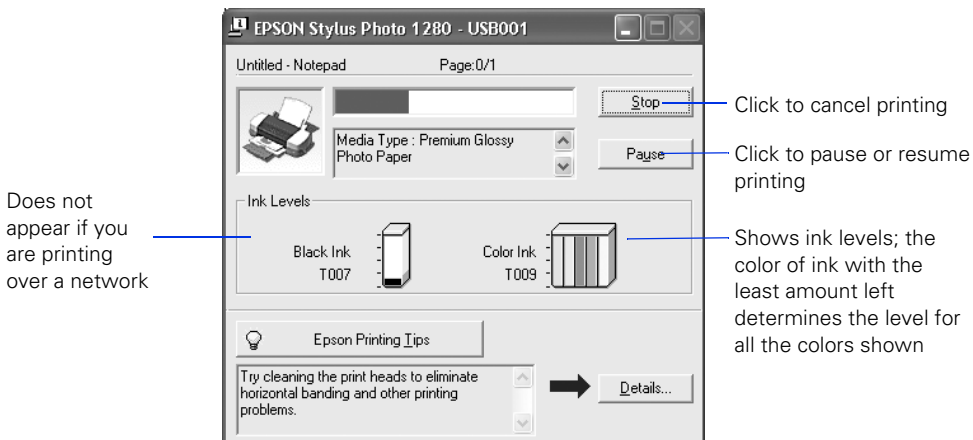

Selecting the Settings You Use Most Often

Your printer settings apply only to the program you're currently using. If you usually print one type of document in different applications—for example, text on letter-size paper—you can change the Windows default printer settings for all your programs.

1. **Windows XP:** Click Start > Control Panel > Printers and Other Hardware > Printers and Faxes.

Other Windows systems: Click Start > Settings > Printers.

2. Right-click your EPSON Stylus Photo printer icon.
3. Select **Properties** (Windows XP, 98, or Me), **Printing Preferences** (Windows 2000), or **Document Defaults** (Windows NT).
4. If you have Windows XP, click the **Printing Preferences** button.
5. Select the default settings you want to use for all your applications. Click **OK** when you're finished.

If you want different settings for a particular document, you can still change the settings in your application program. However, if you want to change your default settings, you must repeat this procedure.

Basic Printing on a Macintosh


After you create a document in a software program, follow the steps in one of these sections to print it using the basic printing settings:

- For Macintosh OS 8.5.1 to 9.x applications, see the next section.
- For Macintosh OS X applications, see page 21.

Printing with OS 8.5.1 to 9.x


Before you begin, make sure you selected your printer in the Chooser, as described on the *Start Here* sheet.

1. From the File menu, click **Page Setup**. You see a window like the following:

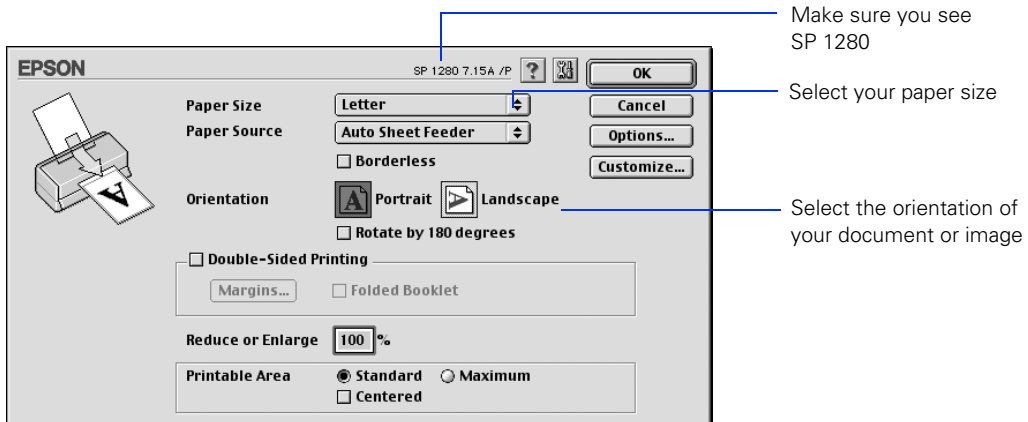

2. Make sure your EPSON Stylus Photo Printer (SP 1280) is selected. If not, you need to select your printer in the Chooser, as described on the *Start Here* sheet.
3. Select the correct Paper Size, Orientation, and other settings. Then click OK.

4. From the File menu, click **Print**. You see a window like the following:

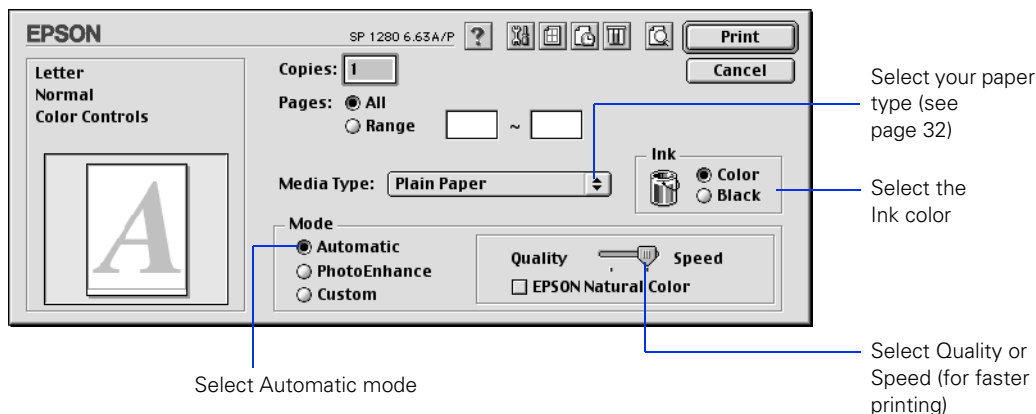

5. Make the following settings:

- Choose the Media Type for your paper (click the arrow to display the **Media Type** list). If you're not sure which setting to select, see page 32.
- For Ink, select **Color** to print a color document or black and white photograph, or **Black** to print a grayscale or black text document.
- Set the Mode to **Automatic**. It's the easiest way to get good printing results on all types of paper.
- Set the slider in the Mode box to **Quality** or **Speed** to select higher quality or faster printing. (The slider may not be available for your Media Type.)




6. You can also do the following:

- Click to reduce or enlarge your printed image, print multiple layouts, or add a watermark.
- Click to control background printing.
- Click , then click **Preview** to preview your print job.
- Click to check your ink levels.

7. Click **Print** to start printing.

If you turned on background printing, you can select **EPSON Monitor3** from the Macintosh Application menu to see this window:

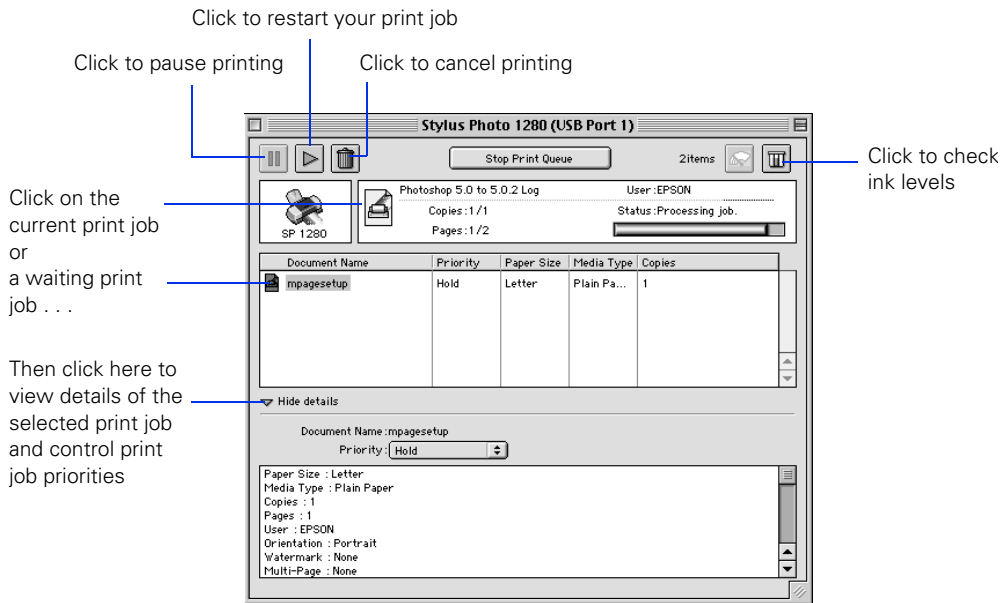

Tip: If you're not using background printing and you need to cancel printing, hold down the **⌘** key and press the **.** (period) key.


Printing with OS X

If you're using an OS X compatible printing application, follow the steps below to print a document. (If you're using an application that's compatible only with Macintosh Classic mode, follow the steps on page 19 instead.)


Before you begin, make sure you added your printer to the Print Center as described on the *Start Here* sheet.

1. Open a photo or document.
2. From the File menu, select **Page Setup**.

3. Select the following Page Setup settings as necessary:

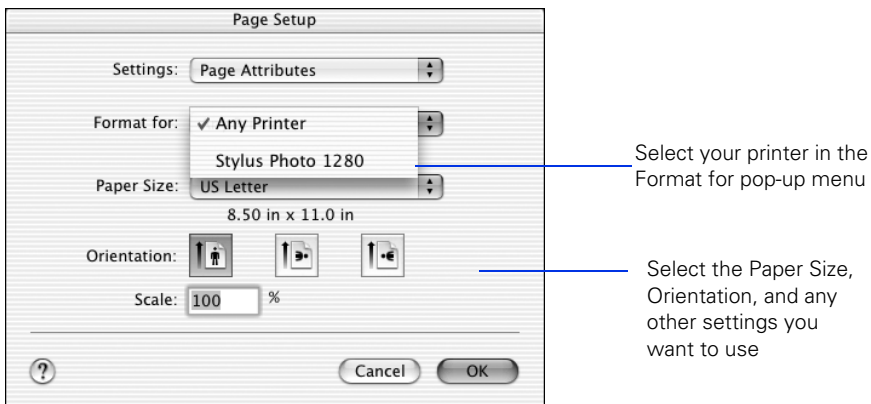


4. When you're finished, click OK.
5. Select **Print** from the File menu. You see a screen like this:

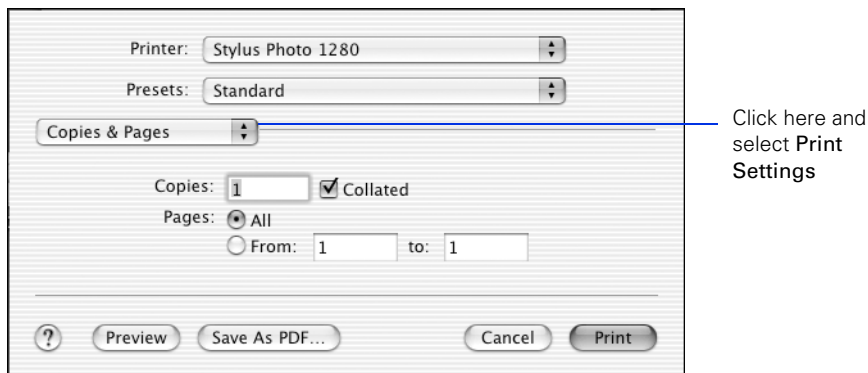

6. Select **Print Settings** from the pull-down menu.

You see the following window:

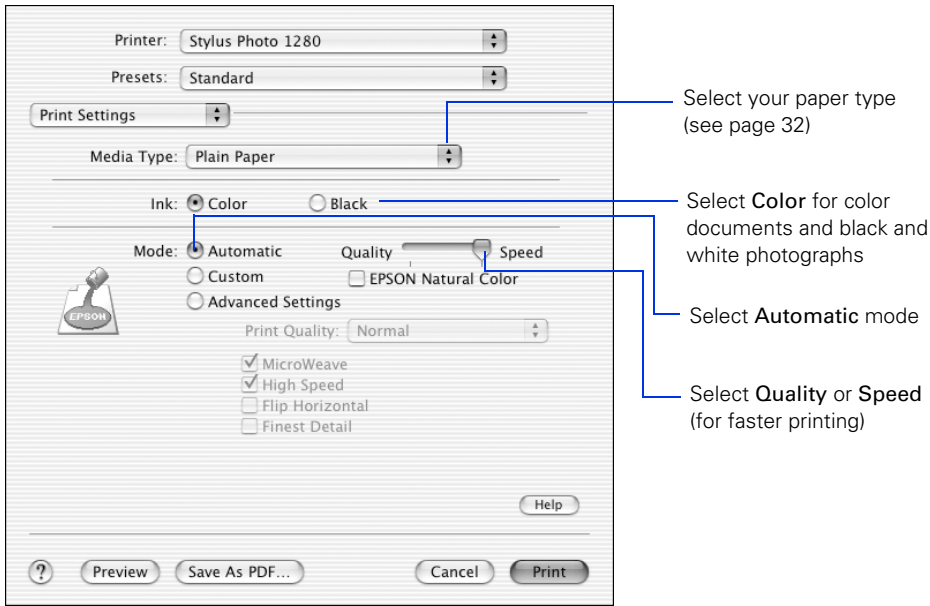

Tip: For more information about printer settings, click **Help**. The Macintosh OS X printer driver contains a subset of the settings available with the Macintosh OS 8.5.1 to 9.x printer driver described in this book. For example, double-sided printing is not available on Macintosh OS X.

7. Make the following settings:

- Choose the Media Type for your paper. If you're not sure which setting to select, see page 32.
- For Ink, select **Color** to print color documents or black and white photographs, and **Black** to print grayscale or black text documents.
- Set the mode to **Automatic**. It's the easiest way to get good printing results on all types of paper.
- Set the slider in the Mode box to **Quality** or **Speed** to select higher quality or faster printing. (The slider may not be available for your Media Type.)

8. You can also select these options in the pull-down menu:
- **Copies & Pages**, to select the number of copies or a page range
 - **Layout**, to select page layout options
 - **Output Options**, to save your print job as a PDF file
 - **Color Management**, to select ColorSync[®], adjust the color controls, change the gamma setting, or turn off color adjustments by the printer software
 - **Summary**, to view a list of all your selections
 - **Save Custom Setting**, to save your selections for future use.
9. Click Print.
10. To monitor the progress of your print job, click the  **Print Center** icon when it appears in the dock on the bottom of your desktop. For OS X 10.2, double-click Stylus Photo 1280 in the printer list. You see a screen like this:




11. Monitor the progress of your print job or do one of the following:
- Click the print job, then click **Delete** to delete the job.
 - Click the print job, then click **Hold** to pause printing.
 - Click a print job marked “Hold” and click **Resume** to resume printing.
 - If multiple print jobs are listed, click a print job, then click the **Priority** arrow as necessary to reorder the jobs (not available for OS X 10.2).
12. When you’re finished, close Print Center.

Customizing Your Print Settings

You can use advanced settings for color matching, printing at a higher resolution, or selecting a variety of special effects and layouts.

Customizing Windows Print Settings


1. On the Main tab, click Custom.

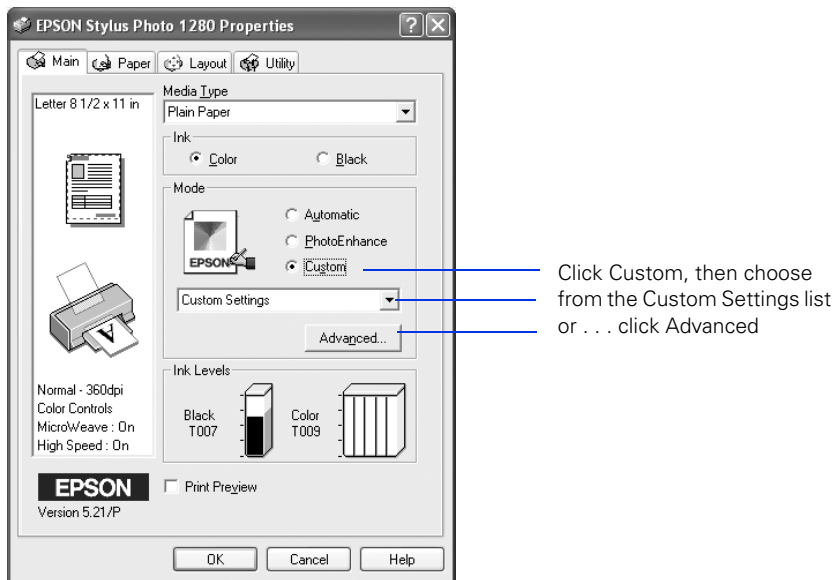

2. Optionally, select one of these settings from the Custom Settings list:
 - **Economy:** For printing rough drafts of text on plain paper.
 - **ICM (Image Color Matching):** For matching colors as closely as possible with ICM-compatible monitors or scanners.
 - **sRGB (standard Red Green Blue):** For color matching with other sRGB devices, or for images designed for the Web. See your Windows help for details.

3. Click the **Advanced** button. You see the Advanced window:

Note: You must click **Custom** to see the **Advanced** button.

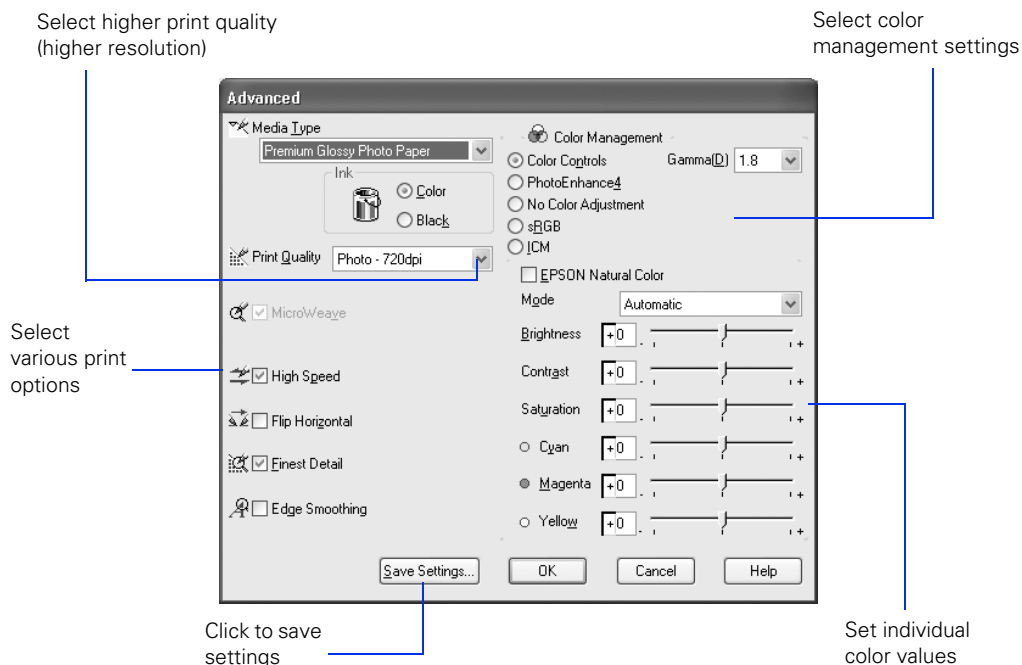


4. For higher quality printing (higher resolution), select **Photo - 1440dpi** or **SuperPhoto - 2880dpi** (if available for your Media Type). Then click **OK**.

Note: Printing is slower at higher resolutions. For more information about advanced settings, click the **Help** or  button.

5. Set any other advanced settings you want to use.
6. If you want to save your custom settings as a group, click **Save Settings**. Then enter a name for your settings in the Custom Settings window and click **Save**.


Note: When you want to use them again, you can select this group of settings in the Custom Settings list on the Main menu. You must click **Custom** to see the Custom Settings list.

7. Optionally, click the **Paper** tab to change paper size, page orientation, or the paper source. If you're printing on roll paper, change the Paper Source to **Roll Paper**.

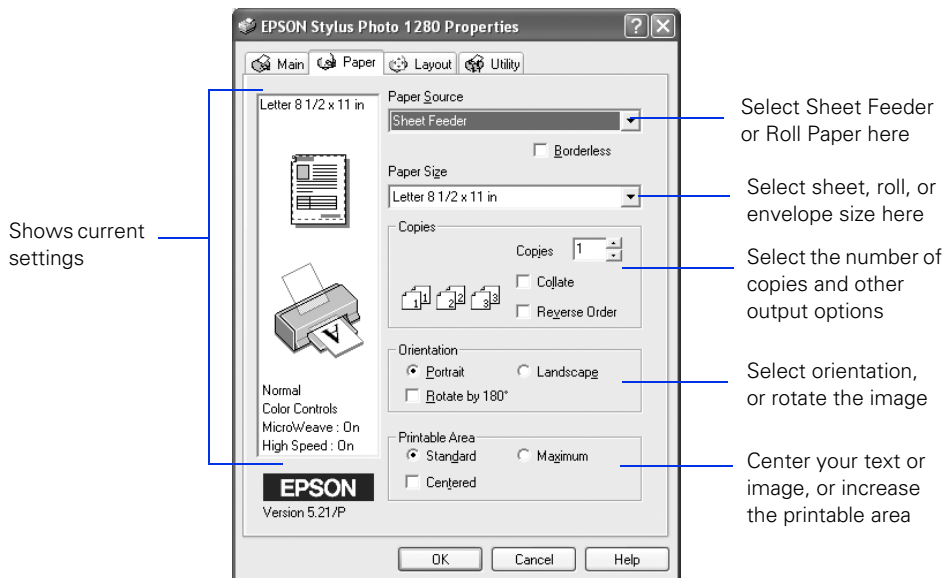

Tip: If your program's Print window includes options for setting the number of copies, orientation, or paper source, check these before you print to make sure they're correct.


8. Optionally, click the **Layout** tab to make layout settings:

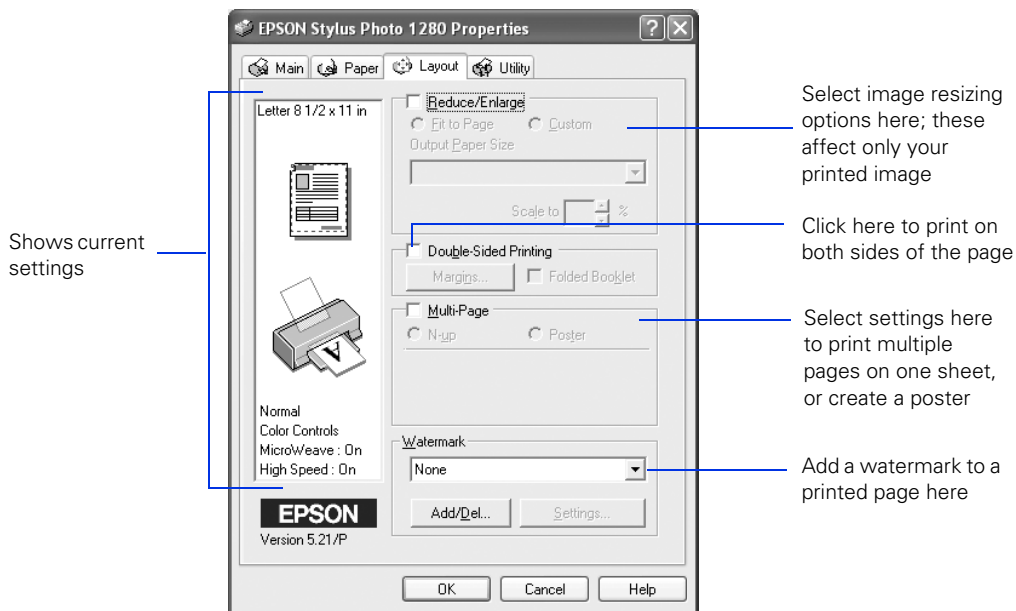


9. Click **OK** to save your settings and return to the Print window, then click **OK** (or **Print**) to print.

Customizing Macintosh Print Settings

1. On the printer settings window, click **Custom**, then click the Custom Settings list to open it.

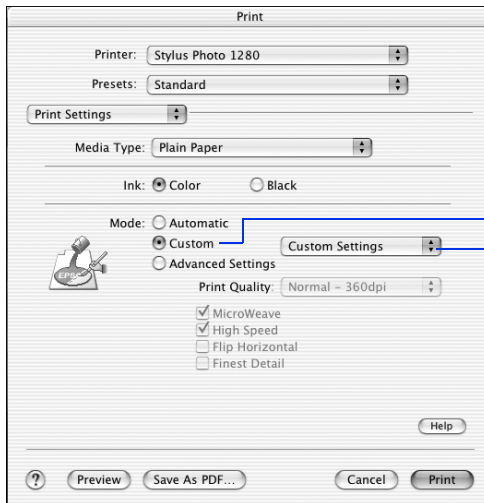

Macintosh OS X

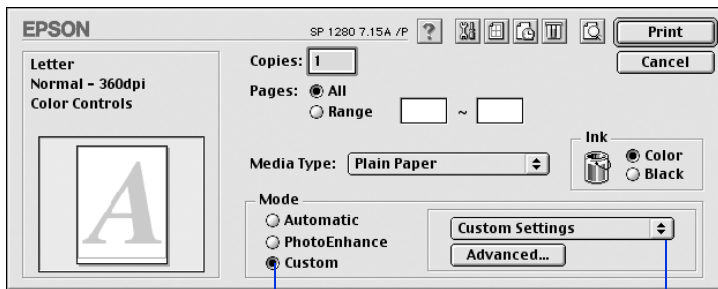


Macintosh
OS 8.5.1 to 9.x

Click Custom, then click the Custom Settings list that appears


2. Optionally, select one of these settings from the Custom Settings list:
 - **Economy:** For printing rough drafts of text on plain paper.
 - **ColorSync:** For matching printed colors as closely as possible with ColorSync compatible devices.

- To access advanced settings, click **Advanced Settings** (OS X) or the **Advanced** button (OS 8.5.1 to 9.x). You see this window:

Note: For OS 8.5.1 to 9.x, you must click **Custom** to see the **Advanced** button.

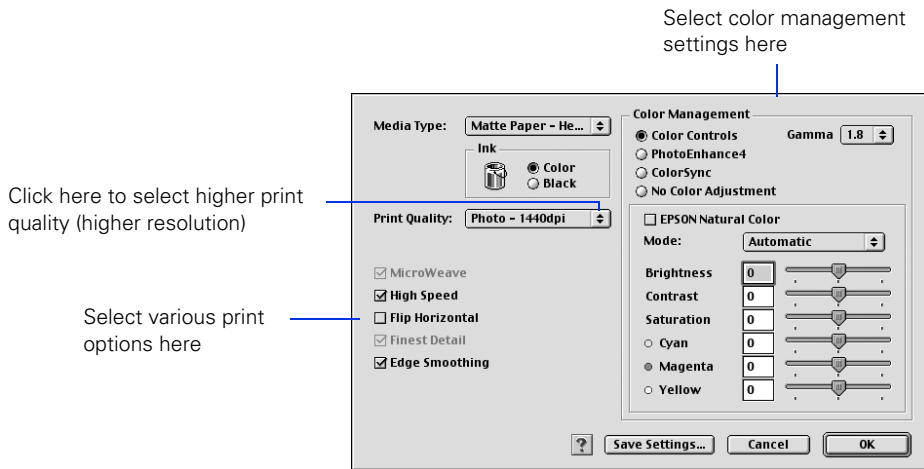

Macintosh OS 8.5.1 through 9.x

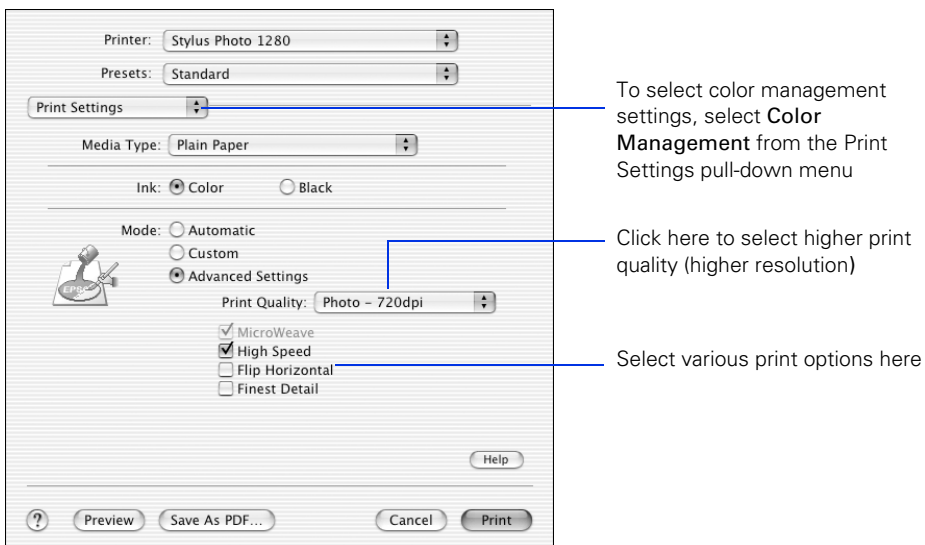

Macintosh OS X

Note: For more information on advanced settings, click **Help** (OS X) or  (OS 8.5.1 to 9.x).

4. For higher quality printing (higher resolution), select **Photo - 1440dpi** or **Photo - 2880dpi** (if available for your Media Type).
5. Set any other advanced settings you want to use.
6. For OS 8.5.1 to 9.x, click **Save Settings** if you want to save your advanced settings as a group. Enter a name for your settings in the window that appears and click **Save**.


Note: When you want to use them again, you can select this group of settings from the Custom Settings list on the printer settings dialog box.

7. **OS 8.5.1 to 9.x:** Click **OK** to save your settings, then click **Print**.

OS X: Click **Print**.

Selecting the Correct Media Type

Select the correct Media Type setting so your printer knows what kind of paper you're using and adjusts the ink coverage accordingly.

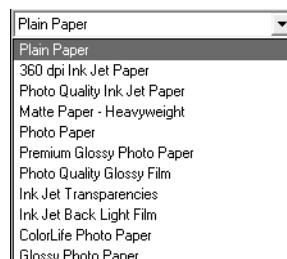

For this paper . . .	Select this Media Type setting
Plain paper sheets or envelopes EPSON Premium Bright White Paper	Plain paper
EPSON Iron-On Transfer Paper	360 dpi Ink Jet Paper
EPSON Photo Quality Ink Jet Paper EPSON Photo Quality Ink Jet Cards EPSON Photo Quality Self Adhesive Sheets	Photo Quality Ink Jet Paper
EPSON Matte Paper Heavyweight EPSON Double-Sided Matte Paper	Matte Paper - Heavyweight
EPSON Photo Paper	Photo Paper
EPSON Glossy Photo Paper EPSON All-Purpose Glossy Paper EPSON Photo Quality Glossy Paper EPSON Glossy Photo Greeting Cards EPSON Panoramic Glossy Photo Paper	Glossy Photo Paper
EPSON Premium Glossy Photo Paper (including roll paper) EPSON Premium Luster Photo Paper (including roll paper) EPSON Semigloss Photo Paper (including roll paper)	Premium Glossy Photo Paper
EPSON ColorLife Photo Paper	ColorLife Photo Paper
EPSON Photo Stickers®	Photo Quality Glossy Film
EPSON Ink Jet Transparencies	Ink Jet Transparencies

Printing BorderFree Photos

You can print your photos with no margins, extending the image all the way to the edges of the page. Although BorderFree printing is a bit slower, you get beautiful snapshots or enlargements, without trimming. (Not available with Macintosh OS X.)

You can print BorderFree photos on a variety of paper types and sizes. See the inside back cover for a complete list of paper types, sizes, and ordering information.

BorderFree Printing with Windows

Follow these steps to print BorderFree photos:


1. Start your photo application and open your photo file.
2. Click **File > Print**. Then click **Properties** or **Preferences**.
3. Select your paper type as the Media Type option. (See the inside back cover for a list of paper types that are compatible with BorderFree printing.)
4. Select **Quality** (for higher quality) or **Speed** (for faster printing) using the slider.
5. Click the **Paper** tab. You see the following:
6. Choose **Sheet Feeder** as your Paper Source.
7. Click the **Borderless** checkbox. Read the message and click **OK**.
8. Select your Paper Size setting, then click **OK**.
9. Click **OK** or **Print**.



BorderFree Printing with Macintosh OS 8.5.1 to 9.x

Follow these steps to print BorderFree photos.

1. Start your photo application and open your photo file.
2. Click **File > Page Setup**.
You see the following:
3. Select your Paper Size.
4. Choose **Auto Sheet Feeder** as the Paper Source.
5. Click the **Borderless** checkbox. Read the message and click **OK**.
6. When you've finished making page setup settings, click **OK**.
7. Click **File > Print**.
8. Select your paper type as the Media Type option. (See the inside back cover for a list of paper types that are compatible with BorderFree printing.)
9. Select **Quality** (for higher quality) or **Speed** (for faster printing) using the slider. Then click **Print**.

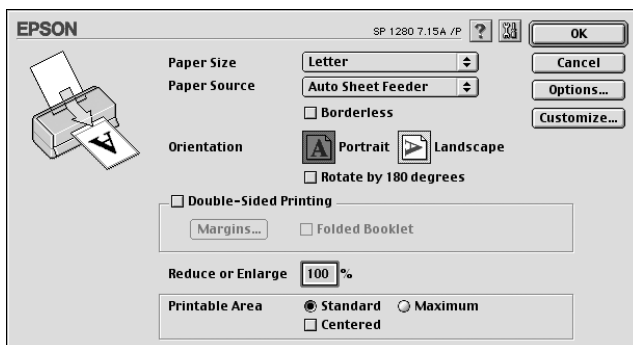

PRINT Image Matching and Exif Print

With PRINT Image Matching and Exif Print, special print settings such as white balance, color saturation, and exposure time are saved in your digital photo files. When you use compatible programs like Film Factory and the P.I.M. II Plug-in for Adobe Photoshop, these settings are automatically included in your print file to produce the best prints possible.

Note: For instructions on using the P.I.M. II Plug-in for Adobe Photoshop, see page 39.

Using Film Factory


In addition to supporting PRINT Image Matching and Exif Print, Film Factory is a useful tool for organizing, retouching, and printing all of your digital images.

Note: If you're running Mac OS X and want to print P.I.M. and Exif Print-enabled digital photos, use the P.I.M. II Plug-in for Adobe Photoshop (see page 39 for details). Although Film Factory for Mac OS X does not support P.I.M. and Exif Print, you can still use its other features to print beautiful photo prints.

Opening Your Photos in Film Factory

Follow these steps to print photos with Film Factory:

1. Start Film Factory. You see the main Film Factory screen:

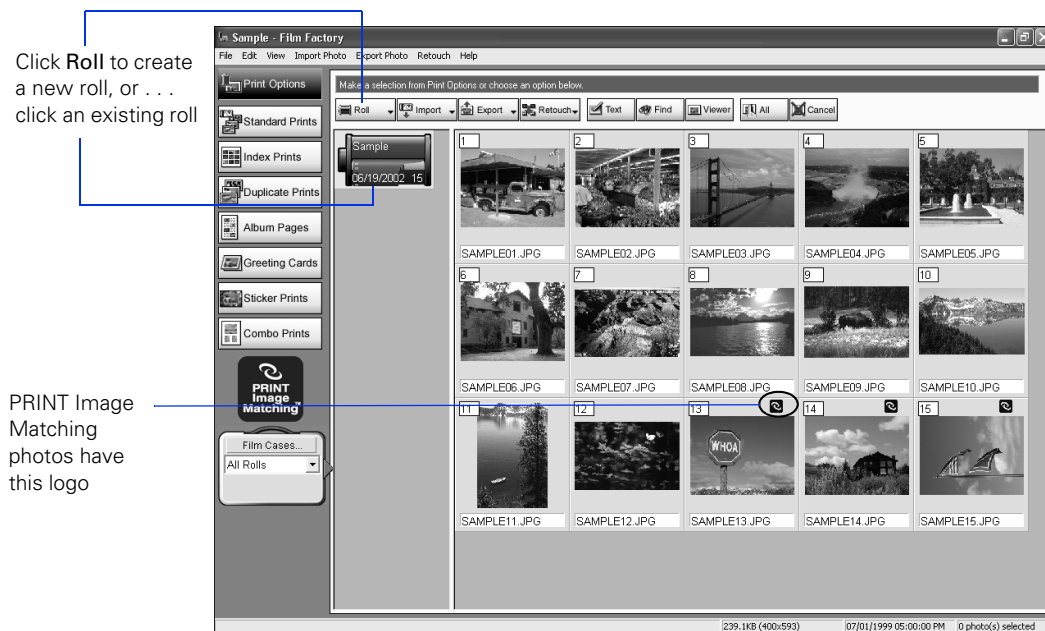

Note: If you need help with Film Factory, select it from the Help menu or check the on-screen *Getting Started Guide* that was installed with Film Factory.

2. Select a “roll of film” or click the Roll button and select **New Roll**.

If you created a new roll or you want to add photos to an existing roll, you need to import the photos. Click the **Import** button, then:


- Click **From File** to import a photo from your computer's hard drive.
 - Click **From Removable Media** to import a photo from a disk or CD-ROM.
 - Click **From PC Card** to import a photo from a PC card in a card reader.
 - Click **From Twain Device** to import a photo from a scanner or digital camera. If your device is already selected, the software will open. If not, click **Import Settings**, and select your scanner or digital camera. (Not applicable to OS X.)
3. Optionally, right-click (Windows) or Ctrl-click (Macintosh) a photo thumbnail to display information about the PRINT Image Matching or Exif Print data in the photo file.

If your photos were taken with a digital camera that supports PRINT Image Matching, the  P.I.M. logo appears in your photo thumbnails. Although no logo appears on photo thumbnails for Exif Print, most newer digital cameras support one of these technologies.

Note: If you retouched a PRINT Image Matching photo, the  P.I.M. logo may not appear.

4. Click the photo you want to print, or click the **All** button at the top of the screen to select all the photos in a roll.
5. Click a button on the left to select a print option. For example, click the **Standard Prints** button. You see buttons for each step you need to follow, as shown.
6. Click **Import & Retouch** to retouch or edit your photo, if necessary.


Note: You can rotate, trim, and correct for red eyes and still retain P.I.M. or Exif Print data with your photograph. However, if you adjust other settings, such as brightness and color, these settings are not retained. For this reason, it is a good idea to make a copy of the original image before you edit it.

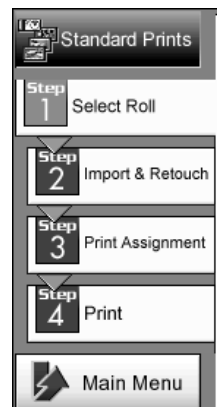

7. When you're ready to print, continue with the steps in the next section.


Printing Your Photos

1. When you're ready to print, click the **Print Assignment** button. You see this screen:

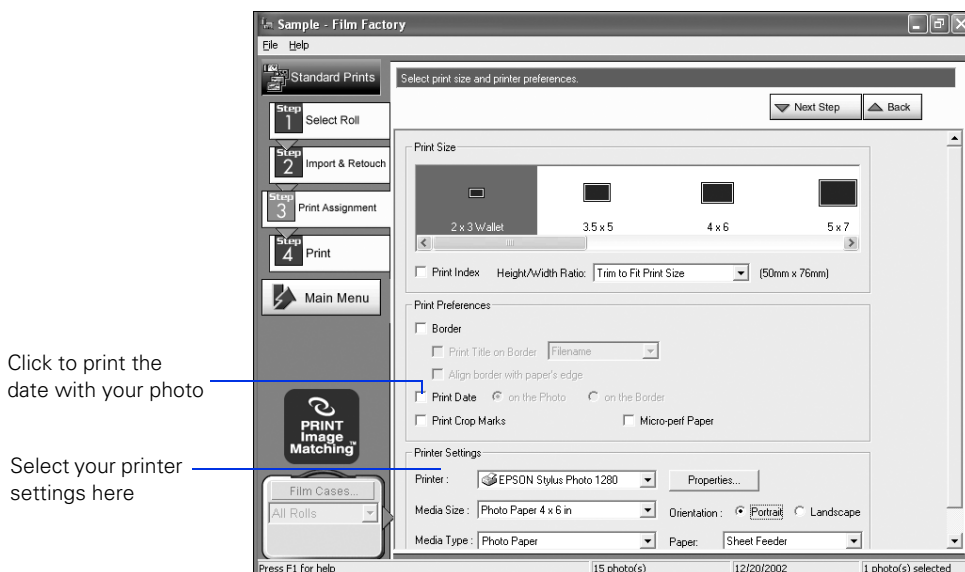

2. **Windows and Macintosh OS 8.5.1 to 9.x:** Select these options in the Printer Settings box at the bottom of the screen, in this order:


- 1 Make sure your printer is selected

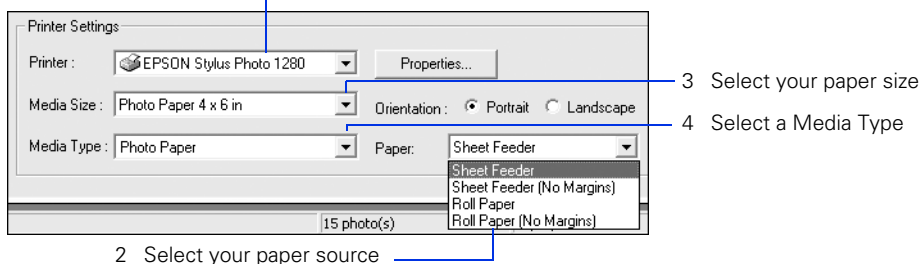

If you want to print BorderFree photos, select either **Sheet Feeder (No Margins)** or **Roll Paper (No Margins)** as your paper source. Also, select one of the following Media Type options: **Glossy Photo Paper**, **Premium Glossy Photo Paper**, or **Matte Paper - Heavyweight**. See the inside back cover for information about media that support BorderFree printing.

Macintosh OS X: Click the **Properties** button. Select your printer in the **Format for** menu, select the correct **Paper Size** setting, and click **OK**. (Neither BorderFree printing nor roll paper support are available for OS X.)

3. If you want to print the current date with your photo, click the **Print Date** box.
4. Click the **Print** button on the left side of the screen. You see more options:

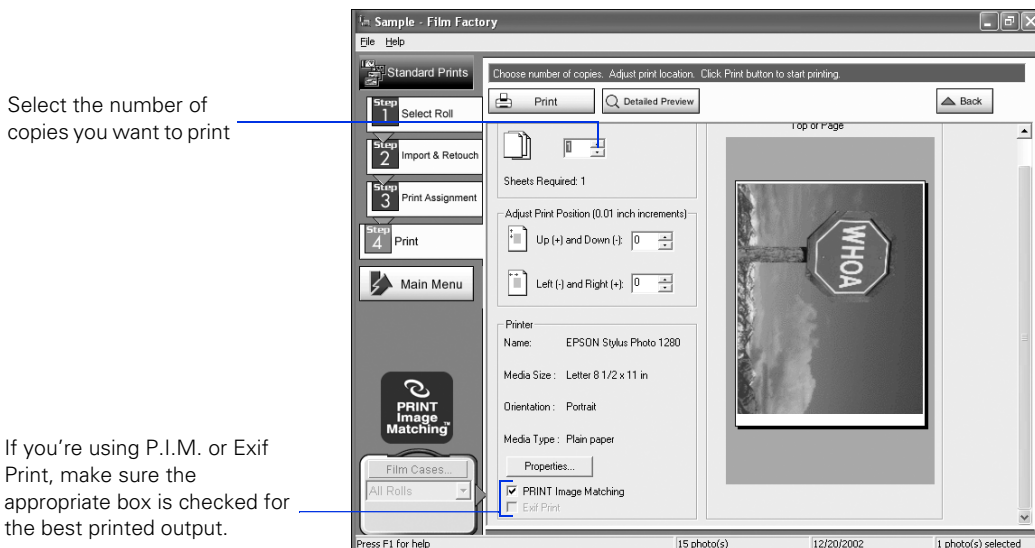

5. If your photo doesn't look right in the preview, click the **Back** button to change your settings. (Click the **Detailed Preview** button for a closer look.)
6. Select the number of copies you want to print.
7. Leave the **PRINT Image Matching** or **Exif Print** box checked for the best results when printing photos containing **PRINT Image Matching** or **Exif Print** data.
8. Click the  **Print** button at the top of the screen.
 - **Windows:** Your pictures are printed.
 - **Macintosh OS 8.5.1 to 9.x:** You see the Print window; click **Print**. Your pictures are printed.
 - **Macintosh OS X:** You see the Print window. Select **Print Settings** from the **Copies & Pages** pull-down menu. Then select your **Media Type** and other print settings as necessary, and click **Print**.

Store your prints in resealable plastic bags, photo albums, or glass-covered picture frames. Keep your pictures and unused paper away from high temperatures, humidity, and direct sunlight. Make sure you return unused paper to its original package.

Using the P.I.M. II Plug-in for Adobe Photoshop

Like Film Factory, the P.I.M. II Plug-in for Adobe Photoshop allows you to retain the special image settings saved in digital photo files from your P.I.M., P.I.M. II, or Exif Print-enabled digital camera. It works with Photoshop 6.0 or 7.0, and Photoshop Elements 1.0 and 2.0. You'll also need to install the ICC profiles for your printer if you're running Windows (see the *Start Here* sheet for instructions). If you have a Macintosh, the ICC profiles were installed with your printer driver.

You can crop, rotate, resize, work with layers, play with filters, and even make selective color adjustments to the image while retaining your PRINT Image Matching or Exif Print settings. However, you can't use global color adjustments (such as Auto Levels, Auto Contrast, Auto Color, etc.) and retain the settings. Also, if you save the image and then try to use your new Photoshop file in another software program that supports PRINT Image Matching or Exif Print, it won't be recognized as a P.I.M. or Exif Print image. Copy the original file and make your changes to the copy so the original retains its information for use in other programs.

Note: Photoshop doesn't retain the PRINT Image Matching or Exif Print information separately in the header file when you import your image. Instead, it converts that information in the file and embeds a color space called EPSON RGB 2001. This profile supports all the PRINT Image Matching and Exif Print color advantages and enhancements.


Importing an Image

1. If you're using Photoshop Elements, change your color settings before importing a PRINT Image Matching or Exif Print image.
 - For Windows or Macintosh OS 8.5.1 to 9.x, select **Color Settings** from the Edit menu, then select **Full color management - optimized for Print** and click OK.
 - For Macintosh OS X, select **Color Settings** from the Photoshop Elements menu, then select **Full color management - optimized for Print** and click OK.

2. Open the File menu and select **Import > PRINT Image Matching II**. You see a window like this:
3. Open the folder containing your images. (In Windows, all your files are listed; on a Macintosh, only PRINT Image Matching or Exif Print files appear.)
4. Select the image you want to import.
5. To see a preview of the selected image, check the **Image Preview** box.
6. Select your import option: **PRINT Image Matching II**, **Exif Print**, or **Color extension only**.
7. Click the **Open** button. Your image opens and the window remains on the screen.



Note: If you see this screen, select **Use the embedded profile** and click **OK**.

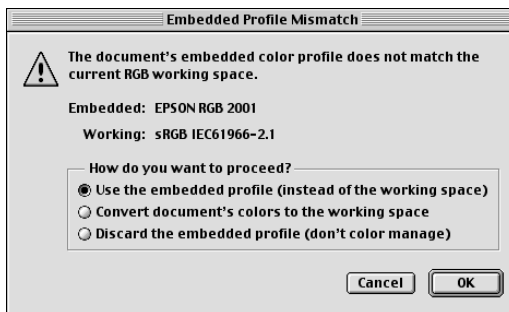

8. Select and open more images, or click **Cancel** to close the Open PRINT Image Matching II file window. (If you don't want the window to remain on the screen after you open a file, uncheck **Import consecutively**.)
9. Follow the steps in the next section to print your image.

To keep the header information intact for use in other PRINT Image Matching or Exif Print-enabled programs, keep the original file; don't use the Photoshop **Save** command. Instead use **Save As** to rename the file. It won't contain header information, but will retain the image quality achieved by these technologies, as long as the file is saved with the ICC profile embedded.

Note: If you overwrite your original file, you will lose all PRINT Image Matching or Exif Print header information.

Printing an Image

PRINT Image Matching and Exif Print images are converted into the EPSON RGB 2001 color space. To retain their quality and enhancements, don't change the color space.

Note: The illustrations in the sections below show Macintosh screens; Windows screens will look different, but the settings are the same.

1. Open the File menu, then:

Photoshop 7.0 or Elements: Select **Print Preview** (or **Print with Preview**). Make sure the **Show More Options** checkbox is selected, then select **Color Management** from the Output pull-down menu.


Photoshop 6.0: Select **Print**.

You see this window:

Photoshop 7.0/Elements



Photoshop 6.0

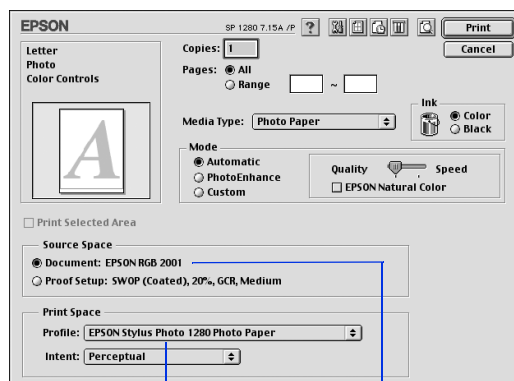

Select the profile for your printer and paper

Make sure this source is selected

2. In the Source Space box, make sure the **EPSON RGB 2001** option is selected.
3. In the Print Space box, select the **Stylus Photo 1280** profile for the paper you're printing on. We recommend **Perceptual** as the Intent setting.
4. **Photoshop 7.0 or Elements:** Click **Print**.

Photoshop 6.0: Skip to step 5.

5. **Windows:** Click **Properties** or **Preferences**. Then select the **Media Type** setting.

Macintosh OS 8.5.1 to 9.x: Select the **Media Type** setting.

Macintosh OS X: Select **Print Settings** from the **Copies & Pages** pull-down menu. Then select your **Media Type**.

6. **Windows:** Click **Custom**, then click the **Advanced** button that appears. You see the **Advanced** screen.

Macintosh OS 8.5.1 to 9.x: Under **Mode**, click **Custom**, then click the **Advanced** button that appears. You see the **Advanced** screen.

Macintosh OS X: Select **Color Management** from the **Print Settings** pull-down menu.

7. **Windows:** Select **No Color Adjustment** and click **OK**.

Macintosh OS 8.5.1 to 9.x: Select **No Color Adjustment** and click **OK**.

Macintosh OS X: Select **No Color Adjustment**.

8. Continue clicking **OK** (Windows) or click **Print** (Macintosh) to print your photo.

Maintaining Your Printer

This section describes maintenance procedures to keep your printer working at its best and preparation steps for moving your printer. Follow the instructions in these sections:

- “Cleaning the Print Head” below
- “Replacing an Ink Cartridge” on page 7
- “Aligning the Print Head” on page 11
- “Cleaning the Printer” on page 13
- “Transporting the Printer” on page 14

For more details, see your on-screen *Reference Guide*, as described on page 4.

Cleaning the Print Head

If your printed image is unexpectedly light, or dots are missing from the image, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly. Cleaning the print head uses ink, so clean it only if print quality declines.

This section explains how to clean the print head using the printer’s Head Cleaning utility, which is the recommended method when the printer is connected directly to your computer (not over a network).

You can also clean the print head by holding down the ⏻ maintenance button on the control panel for three seconds (when the ⏻ maintenance light is off).

Caution: When you don’t turn on your printer for a long time, the print quality can decline. It’s a good idea to turn on your printer at least once a month to maintain good print quality.

Running the Head Cleaning Utility

Follow these steps to run the Head Cleaning utility:

1. Make sure the printer is on but not printing, and the ⚡ maintenance light is off.

Note: You can't clean the print head if the ⚡ maintenance light is flashing or on. Replace the appropriate ink cartridge instead.

2. **Windows:** Open an application and select **Print** from the File menu. Click **Properties** or **Preferences**. Then click the **Utility** tab.


Macintosh OS 8.5.1 to 9.x: Open an application and select **Print** from the File menu. Then click the  **Utility** button at the top of the dialog box.

Macintosh OS X: Open the **Applications** folder on your hard drive. Double-click **EPSON Printer Utility** and select **SP 1280** in the printer list. Then click **OK**.

3. On the Utility menu, click the **Head Cleaning** button.

4. Follow the instructions on the screen to clean the print head.

Cleaning takes about 30 seconds, during which the printer makes some noise and the ⚡ power light flashes.

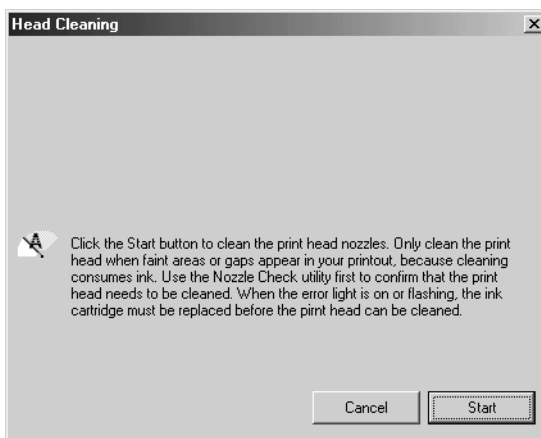

Caution: Never turn off the printer while the ⚡ power light is flashing, unless the printer hasn't moved or made noise for more than 5 minutes.

5. When the ⚡ power light stops flashing, run a nozzle check to confirm that the print head nozzles are clean.

Make sure paper is loaded in the printer and click **Print nozzle check pattern** (Windows) or **Confirmation** (Macintosh). Then click **Next**. The nozzle check pattern prints (see the next section for details).

6. If the nozzle check pattern has no gaps in its lines, click **Finish**.

If the pattern has white lines, click **Clean** to clean the print head again.

If you don't see any improvement after cleaning three or four times, check the solutions in "Print Quality Problems" on page 22. You can also turn the printer off and wait overnight—this allows any dried ink to soften—and then try cleaning the print head again.


Examining the Nozzle Check Pattern

Examine the nozzle check pattern you print. It should look something like this:



Each staggered horizontal and straight vertical line should be complete, with no gaps in the dot pattern. If your printout looks okay, you're done.

If there are gaps in the lines, clean the print head again; see page 5 for instructions.

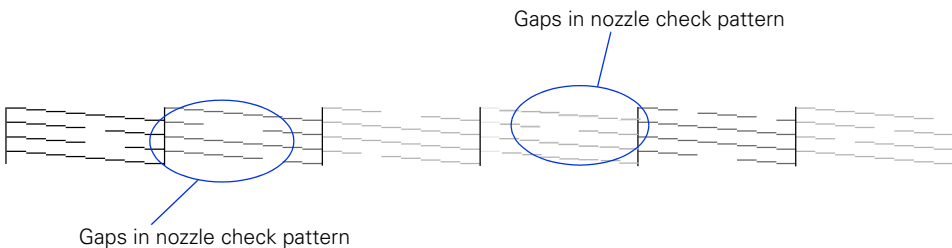

Replacing an Ink Cartridge

When the ⚙ maintenance and ⏻ power lights are both flashing, one of your ink cartridges is low on ink. This is a good time to make sure you have a new cartridge. When the ⚙ maintenance and ⏻ power lights both stay on, an ink cartridge is empty and you need to replace it.

Caution: You cannot print if either ink cartridge is empty. Leave the empty cartridge installed in the printer until you have obtained a replacement; otherwise the ink remaining in the print head nozzles may dry out.

When an installed ink cartridge is more than six months old, you may also need to replace it if you notice that your printouts don't look as good as they used to. If print quality doesn't improve after cleaning and aligning the print head, you can replace the cartridge even if the ⏻ maintenance and ⏻ power lights aren't flashing.

Use these EPSON ink cartridges within six months of installing them and before the expiration date on the package:

■ Black: T007201

■ Color: T009201

Caution: To ensure good results, use genuine EPSON ink cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranty.

When you need new ink cartridges, contact your dealer or call the EPSON StoreSM at (800) 873-7766. You can also visit the EPSON Store at www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.


Removing and Installing Ink Cartridges

Be sure you have a new ink cartridge before you begin. Once you start the ink cartridge replacement procedure, you must complete all the steps in one session.

Follow these steps to replace ink cartridges:

1. Make sure the printer is turned on and not printing.
2. Open the printer cover and press the ink cartridge replacement button. The print head moves left to the ink cartridge replacement position.

Caution: To avoid damaging the printer, never move the print head by hand.

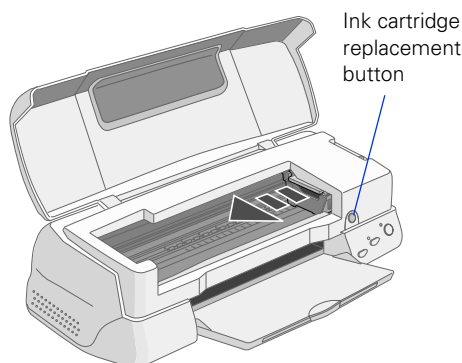


3. Check the ink levels in the printer driver to see which cartridge you need to replace:

Windows: Check the ink level graphic in the printer software. See page 16 for instructions on opening the software.

Macintosh OS 8.5.1 to 9.x: Click the  ink level icon in your main printer settings dialog box. See page 20 for instructions on accessing the dialog box.

Macintosh OS X: Open the **Applications** folder on your hard drive. Double-click **EPSON Printer Utility** and select **SP 1280** in the printer list. Click **OK**, then click **EPSON StatusMonitor**.


4. The color cartridge is on the right and the black cartridge is on the left. Pull up the ink cartridge clamp. The cartridge rises from its holder.

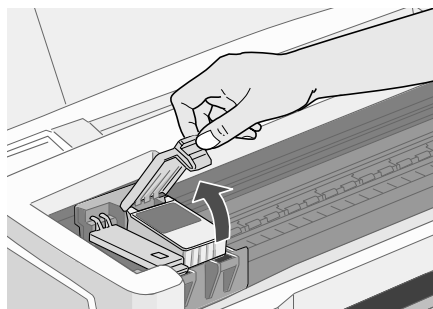

5. Lift the cartridge out of the printer and dispose of it carefully.

Warning: Keep ink out of the reach of children.


If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them immediately with water.

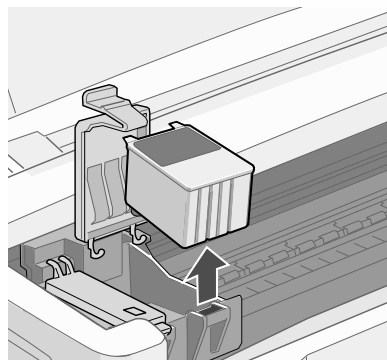

6. Unwrap the new ink cartridge. Then remove *only* the yellow tape seal on top.



Caution: You must remove the yellow seal from the top of the cartridge or you will permanently damage the cartridge.

Don't touch the green circuit board on the back of the cartridge; you may inhibit normal operation and printing.

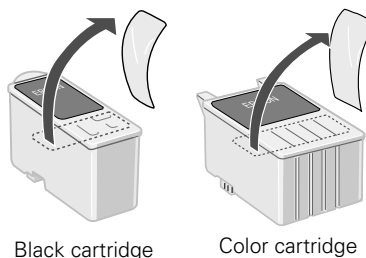


7. Tilt the new cartridge toward you slightly as you insert it. Lower the cartridge so that the tabs rest on the hooks.

Caution: Don't place the cartridge tabs *under* the hooks on the holder clamp; you may damage the clamp when you close it.

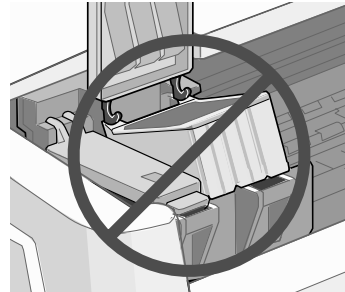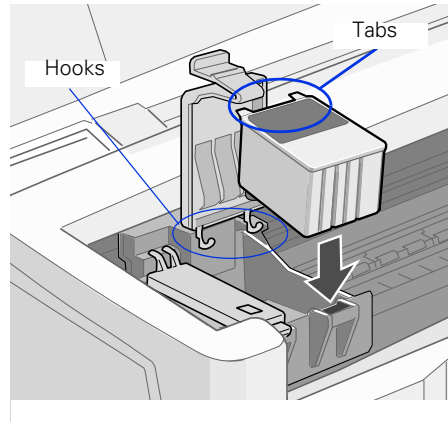

8. Press down firmly on the ink cartridge clamp until it snaps into place.
9. If you need to replace the other ink cartridge, repeat steps 4 through 8 before continuing with step 10.

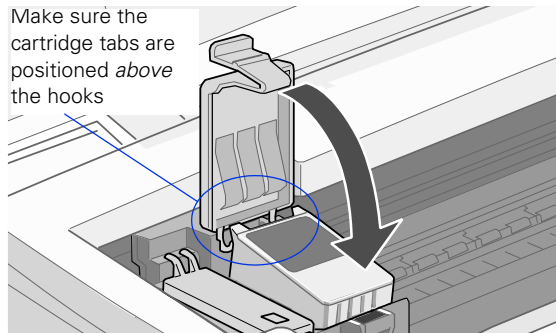

10. Press the ink cartridge replacement button and close the printer cover. The printer moves the print head and begins charging the ink delivery system.

The  power light flashes, and the printer makes noise. Charging takes about one minute. When it's finished, the  power light stops flashing and stays on.

Caution: Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made noise for more than 5 minutes.

Aligning the Print Head

If your printouts contain misaligned vertical lines, you may need to align the print head. Your printer must be connected to a local port, not on a network, to use the Print Head Alignment utility. Follow these steps:

1. Make sure the printer is on but not printing, and letter-size paper is loaded.

Tip: For best results, load EPSON ink jet paper in the printer whenever you check the print head alignment.


2. **Windows:** Open an application and select **Print** from the File menu. Click **Properties** or **Preferences**. Then click the **Utility** tab.

Macintosh OS 8.5.1 to 9.x: Click the  Utility button.

Macintosh OS X: Open the **Applications** folder on your hard drive.

Double-click **EPSON Printer Utility** and select **SP 1280** in the printer list. Then click **OK**.

3. You see the Utility menu. Click the **Print Head Alignment** button.
4. Follow the instructions on the screen to print an alignment page for black printing. You see this window on your screen:

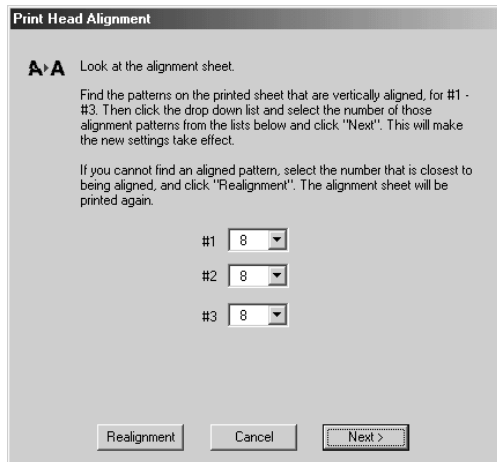

- On the test page, select the pattern with the two vertical lines most precisely printed on top of each other. You may need to use a magnifying glass or loupe.


Select one pattern each for rows 1, 2, and 3. Enter the number of the best pattern for each row in the corresponding boxes on the screen. Then click **Next**.

If you can't find an aligned pattern, enter the number of the best pattern and click

Realignment to print another test page. Then repeat this step.

- Follow the instructions on the next two screens to print an alignment pattern for color printing.
- On the test page, select the pattern that is the least grainy. Select one pattern for each of the two rows and enter its number in the corresponding boxes on the screen. Then click **Finish**.

If you can't find a smooth pattern, enter the number of the best pattern and click **Realignment** to print another test page. Then repeat this step.

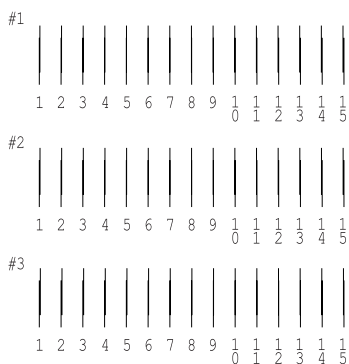

Cleaning the Printer

To keep your printer working at its best, you should clean it several times a year. Follow these steps:

1. Turn off the printer and wait for the  power light to go out.
2. Unplug the power cord and disconnect the printer cable.
3. Remove all the paper, then use a soft brush to clean any dust or dirt from the sheet feeder.
4. Clean ink out of the printer's interior with a soft, damp cloth.

Caution: Don't touch the gears inside the printer.

Never use a hard or abrasive brush, or alcohol or thinner for cleaning; they can damage the printer components and case.

Don't get water on the printer components, and don't spray lubricants or oils inside the printer.

Don't use any cleaning sheets included with special media; they may jam inside the printer.

Transporting the Printer

If you move your printer some distance, you need to prepare it for transportation in its original box or one of a similar size. Follow these steps:


Caution: To avoid damage, always leave the ink cartridges installed when transporting the printer.

Be sure to remove the tape used in step 4 after installing the printer in its new location.

1. Turn on the printer, wait until the print head locks in the far right position, then turn the printer off.
2. Unplug the power cord from the electrical outlet. Then disconnect the printer cable from the printer.
3. Remove any paper from the printer and remove the paper support.
4. Open the printer cover. Secure the ink cartridge holder to the printer with tape as shown, then close the printer cover.
5. Push in the output tray extensions and close the tray.
6. Repack the printer and attachments in the original box using the protective materials that came with it. See the *Start Here* sheet for details.

Keep the printer level as you transport it.

After transporting the printer, **remove** the tape securing the print head and test your printer. If you notice a decline in print quality, clean the print head (see page 5); if output is misaligned, align the print head (see page 11).

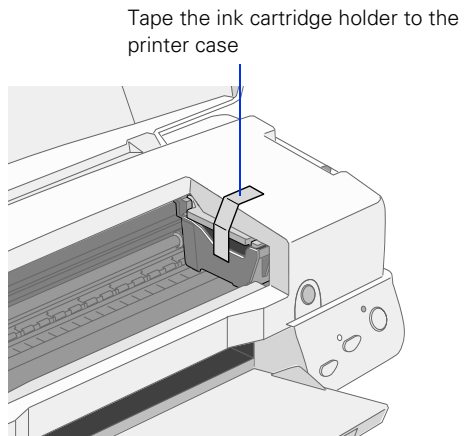



Problem Solving

This section gives you the basics for diagnosing and solving printer problems.

- First see “Diagnosing Printer Problems” on page 17 to help determine what the cause of the problem may be.
- Then see “Problems and Solutions” on page 20 for solutions to common setup and printing problems.

Caution: It’s a good idea to check EPSON’s support web site periodically for possible updates to your printer driver. Visit <http://support.epson.com> and check the section for your printer to see if there is a new driver available, free of charge, for downloading to your computer. Download instructions are posted for your convenience.


Identifying Printer Parts

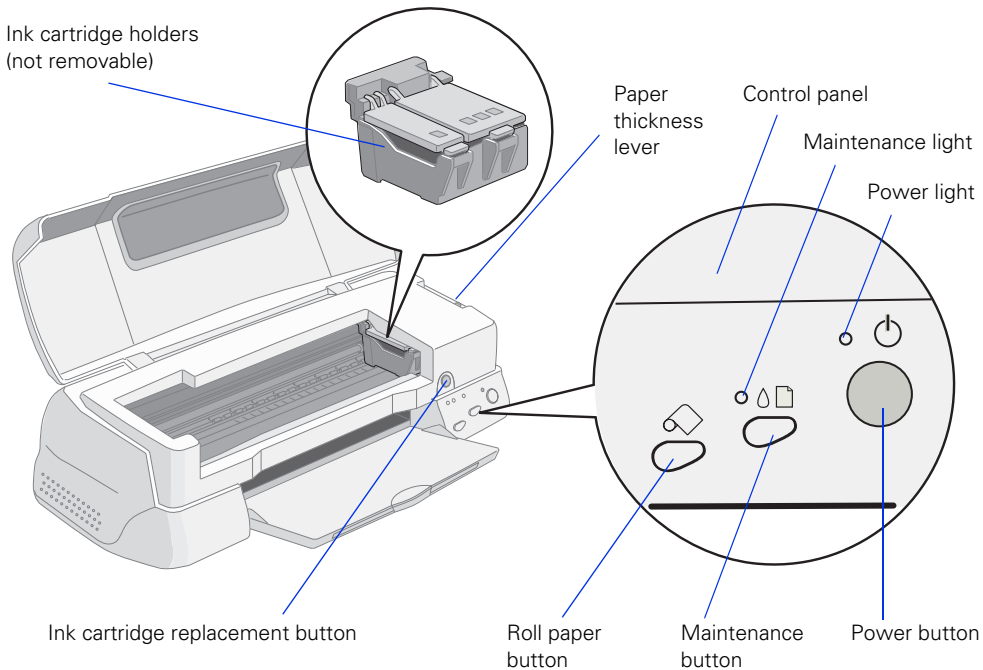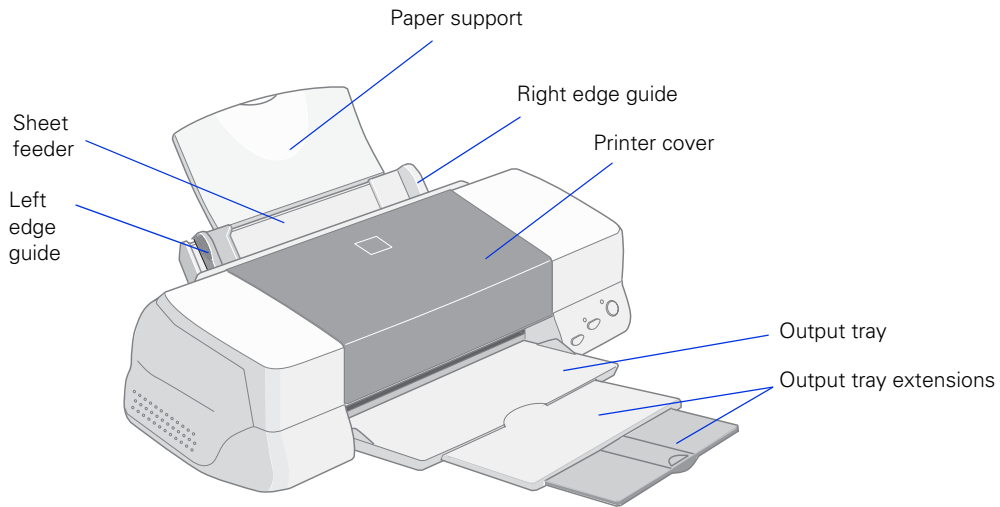

Diagnosing Printer Problems

You can diagnose some problems by checking the printer's control panel lights, as described in this section, or running a printer check, as described on page 19.

Checking the Control Panel Lights

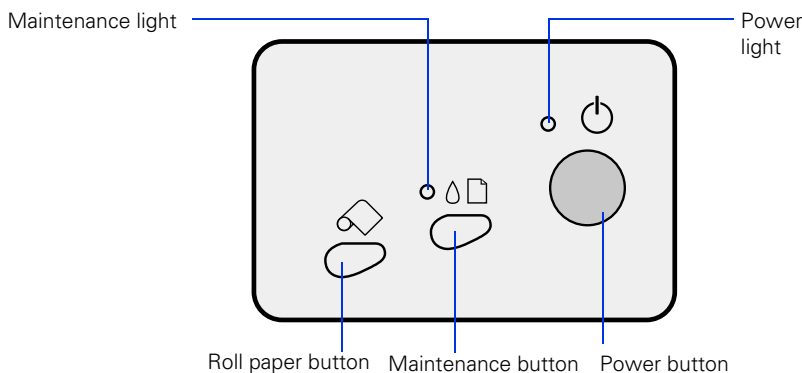

Follow the guidelines below when you check the control panel lights:

 is on or flashes	The  power light is on when the printer is ready to print. It flashes when the printer is receiving a print job, charging ink, or cleaning the print head. It also flashes when the print head moves to the ink cartridge replacement position.
 and  flash	When both the lights flash, one of the ink cartridges is low on ink. To find out which cartridge is low on ink, do one of the following: ■ Windows: Check the ink level graphic in the printer software. See page 16 for instructions on opening the software. ■ Macintosh OS 8.5.1 to 9.x: Click the  ink level icon in the printer settings dialog box. See page 20 for instructions on accessing the dialog box. ■ Macintosh OS X: Choose Applications > EPSON Printer Utility > SP 1280 > EPSON StatusMonitor. Then replace the ink cartridge as described on page 7.

⏻ and ⚙ are on	When both lights are on, one of the ink cartridges is out of ink. Determine which cartridge is empty. Then replace the cartridge as described on page 7. If both lights come on after you've replaced a cartridge, you may have installed a cartridge your printer can't use.
⏻ is off and ⚙ is on	Jammed paper may be blocking movement of the print head, or you may have an internal error. Turn off the printer, open the cover, and check for any jammed paper. Also, make sure you removed all the packing material, as described on the <i>Start Here</i> sheet. Then turn the printer back on. If the error isn't cleared, contact your dealer or EPSON. See page 29 for contact information.
⏻ flashes and ⚙ is on	Paper is out or loaded incorrectly, or you have a paper jam. If paper is out or loaded incorrectly, load or reload your paper. Then press the ⚙ maintenance button to turn off the ⚙ maintenance light and resume printing. (If you're printing on roll paper, press the ⚙ maintenance button to turn off the ⚙ maintenance light, then press the ⌂ roll paper button to resume printing.) If paper is jammed, do one of the following: ■ If you're printing on sheet paper, press the ⚙ maintenance button to try to clear the jam. If that doesn't work, turn off the printer and gently pull the paper forward (toward the output tray) to pull it out. Then turn the printer on and press the ⚙ maintenance button to resume printing. ■ If you're printing on roll paper, press the ⌂ roll paper button for at least three seconds to clear the jam. If that doesn't work, see page 13 for details about clearing roll paper jams.
⏻ and ⚙ are off	When both lights are off, the printer is not receiving power. Try these solutions: ■ Make sure the printer is turned on. ■ Turn off the printer, plug in the power cord securely, and turn the printer on again. ■ Make sure the outlet is working and is not controlled by a switch or timer. If in doubt, try another outlet.

Running a Printer Check

You can run a printer check to determine whether a problem comes from the printer itself or some other source. Follow these steps:

1. Make sure both the printer and computer are turned off. Then disconnect the interface cable from the printer.
2. Make sure letter-size or larger paper is loaded in the printer.
3. Hold down the ⏻ maintenance button, then press and release the ⏻ power button. Continue holding down the ⏻ maintenance button until the ⏻ power light starts to flash, then release it.

The printer prints one page showing its ROM version number, ink counter, and a nozzle check pattern. Only the nozzle check pattern is shown below. (If the pattern has gaps in its dots, you need to clean the print head; see page 5.)



4. To end the check, turn the printer off after it prints the check page. Then reconnect the interface cable and turn on your printer and computer.

If the check page prints, the problem probably lies in your software settings, the interface cable, or your computer. Another possibility is that your printer or application software may not be installed correctly.

If the check page doesn't print, you may have a problem with your printer. Try the suggestions in "Problems and Solutions" beginning on page 20. If nothing seems to work, contact your dealer or EPSON as described on page 29.

Problems and Solutions

Here are some troubleshooting tips if you have any problems setting up your printer, installing software, or printing.

Problems Setting Up the Printer or Installing Software

The printer makes noise after ink cartridge installation.

- The first time you install ink cartridges, the printer must charge its ink delivery system for about two minutes. Wait until charging finishes (the  power light stops flashing) before you turn off the printer or it may charge improperly and use excess ink the next time you turn it on. If the printer stops moving or making noise, but the  power light is still flashing after 5 minutes, turn off the printer. If the light is still flashing when you turn it back on, contact EPSON as described on page 29.
- Make sure the ink cartridge clamps are locked down completely and no packing material remains in the printer. Turn off the printer, wait a moment, then turn it back on to clear the error.

You're having problems installing the printer software.

- Make sure your printer is turned on and the printer cable is securely connected at both ends. Then carefully follow the installation instructions on the *Start Here* sheet. Also make sure your system meets the requirements beginning on page 31.
- Close your other applications, including any screen savers and virus protection software, and install again.
- For Windows NT or 2000, if you see an error message or your software doesn't install correctly, you may not have software installation privileges. Contact your System Administrator.
- If your printer icon (SP 1280) doesn't appear in the Macintosh Chooser, you may have an extension conflict. Turn off any unnecessary extensions and restart your computer.

- For Windows 2000, don't select **Block** under **Control Panel> System> Hardware> Driver Signing**; select **Ignore** or **Warn** instead.
- Make sure Windows XP, Me, 2000, or 98 was preinstalled on your system. The USB Printer Device Driver may not install correctly if you've upgraded your system from an earlier version of Windows.
- Make sure the Universal Serial Bus Controller is working properly. See your Windows online help system for details. If it's not working, contact your computer manufacturer.
- If you're printing over a network, see your on-screen *Reference Guide* for instructions on configuring your printer for use on a network.

Printing Problems

The ⏻ power light is on, but nothing prints.

- Make sure the interface cable is connected securely and the cable meets the system requirements on page 31 or 32.

- Run a printer check as described on page 19. If the check page prints, make sure your printer and application software are installed correctly.
- If you're printing on a network, you need to set up your printer for network printing, as described in your on-screen *Reference Guide*.

The printer sounds as though it is printing, but nothing prints.

- Make sure the print head nozzles are not clogged. To clean the print head, see page 5.
- The printer won't operate properly if it's tilted or at an angle. Place it on a flat, stable surface.

Your printer makes noise when you turn it on or after it has been sitting for awhile.

Your printer is performing routine maintenance.

Printing is too slow.

Make sure your system meets the requirements listed in “Notices.” If you’re printing a high-resolution image, you need more than the minimum requirements listed.

You may also need to:

- Clear space on your hard disk or run a defragmentation utility.
- Close open applications that you’re not using.
- Increase your system’s memory (RAM).

For the fastest printing, try these tips:

- Choose **Black** ink if your document doesn’t include color.
- Set the Quality/Speed slider to **Speed**.
- Turn **MicroWeave®** off and/or turn **High Speed** on. In Windows and Macintosh OS 8.5.1 to 9.x, these settings are on the Advanced window. In Macintosh OS X, these settings are on the Print Settings window.
- If you’re using the parallel port, enable ECP/DMA mode. See your computer documentation or contact the manufacturer for help.


Print Quality Problems

You see banding (light lines).



- The print head nozzles may need cleaning; see page 5 for instructions.
- Make sure the Media Type setting matches the paper you loaded; see page 32 for guidelines.
- Make sure the printable side of the paper is face up. It’s usually whiter or shinier.
- The ink cartridges may need replacing. To replace an ink cartridge, see page 7.
- Try using Automatic mode. See page 16 (Windows), page 20 (Macintosh OS 8.5.1 to 9.x) or page 23 (Macintosh OS X) for instructions.
- Run the Print Head Alignment utility; see page 11 for instructions.

- Set the paper thickness lever to the **0** position. Set the lever to the **+** position when you print on thicker paper or envelopes. You may also need to turn off **High Speed** in the printer software.

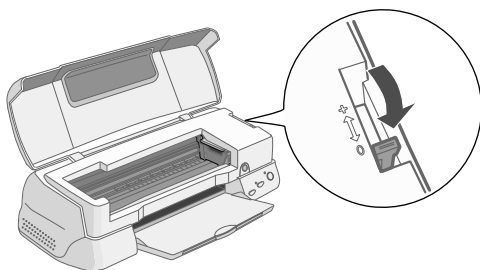

Your printout is blurry or smeared.



- Make sure your paper isn't damp or curled, or loaded face down (the printable side should be face up). If it's damp or curled, reload a new stack of paper.
- Use a support sheet with special paper, or try loading your paper one sheet at a time.
- Make sure your paper meets the specifications listed in the on-screen *Reference Guide*.

- Use EPSON papers to ensure proper saturation and absorption of genuine EPSON inks.
- Run the Print Head Alignment utility. See page 11 for instructions.
- Check the paper thickness lever position. If it's in the **+** position, your printer is set for thicker paper or envelopes. If you've loaded other paper, your image may smear. For most papers, set the paper thickness lever to the **0** position, as shown to the left.
- Remove each sheet from the output tray after printing, especially when you're printing on transparencies.

Your printout is faint or has gaps in the image.



- The print head nozzles may need cleaning; see page 5 for instructions.
- The ink cartridges may be old or low on ink. To replace an ink cartridge, see page 7.

- Make sure the Media Type setting matches the paper you loaded. See page 32 for guidelines.
- Make sure your paper isn't damaged, old, dirty, or loaded face down. If it is, reload a new stack of paper with the printable side up; it is usually whiter or shinier than the other side.

You see wrong or missing colors.

- If you're printing color images, make sure both your application and printer software are set for color printing.
- The print head nozzles may need cleaning; see page 5 for instructions.
- The ink cartridges may be old or low on ink. To replace an ink cartridge, see page 7.
- Try turning off PhotoEnhance.™ Also check if you're using a special effect that alters image colors, like Sepia.
- Try using Automatic mode. See page 16 (Windows), page 20 (Macintosh OS 8.5.1 to 9.x), or page 23 (Macintosh OS X) for instructions.

- The color profiles built into your printer software automatically reference your monitor profile. Make sure that your monitor is calibrated correctly.
- Try changing the Gamma setting on the Advanced dialog box (Windows or Macintosh OS 8.5.1 to 9.x) or the Color Management dialog box (OS X).
- Your printed colors can never exactly match your on-screen colors. However, you can use a color management system—such as ICM (Windows) or ColorSync (Macintosh)—to get as close as possible. See page 25 or page 29 for details.

Your printout is grainy.

- Try using a higher quality paper.
- Select a higher Print Quality (resolution) setting. See page 25 or page 29 for instructions.
- You may need to increase the image resolution or print it in a smaller size; see your software documentation.
- Run the Print Head Alignment utility. See page 11 for instructions.

Problems with Paper Feeding

Too many copies are printing.

Check the Copies setting in both your printer software and application.

Paper doesn't eject fully or is wrinkled.

- If the paper doesn't eject fully, you may have set the wrong paper size. Press the ⏻ maintenance button to eject the paper, then select the correct paper size.
- If it's wrinkled when it ejects, the paper may be damp or too thin. Reload new paper.

Paper doesn't feed correctly or jams in the printer.

- If paper doesn't feed, remove it from the sheet feeder, reload it against the right edge, then slide the left edge guide against the paper.
- If multiple pages feed at once, remove the stack from the sheet feeder, fan the edges to separate the sheets, and carefully reload it.

- If paper jams, press the ⏻ maintenance button for several seconds to clear the jam. If that doesn't work, turn off the printer and gently pull the paper forward (toward the output tray) to pull it out. Reload the paper and press the ⏻ maintenance button.
- If you try to print while the ⏻ maintenance light is on, your paper won't feed properly. Press the ⏻ maintenance button to turn off the light before you print.

If your paper loads incorrectly or jams frequently:

- Use new, smooth, high-quality paper, loaded printable side up.
- Don't load paper above the arrow mark on the left edge guide.
- Place the paper against the right edge and slide the left edge guide against it, but not too tightly.

Roll paper doesn't feed correctly.

- To load paper correctly, gently hold the paper in place with your hand while you press the ⏻ button. Don't force the paper to feed into the printer. Allow it to feed automatically.
- Use a triangle or other tool to make sure the end of the roll is cut perpendicular to the edges. If the end is cut on a diagonal, the paper may not feed smoothly.

- If you see a paper jam error message, press the ⏏ roll paper button for at least three seconds to clear the error.
- If the ⏏ maintenance light is on, press the ⏏ maintenance button and wait for the light to go off. Then press the ⏏ roll paper button to resume printing.
- Always select **Roll Paper** as the Paper Source setting. If **Sheet Feeder** (or **Auto Sheet Feeder**) is selected, paper will feed unnecessarily after each print job. In addition, a great deal of paper may feed unnecessarily when you turn your computer off and then on again.
- If extra paper feeds after a print job or after you turn on the printer, press the ⏏ roll paper button for three seconds to rewind the paper. (You may need to repeat this step to rewind the paper completely.) Then press the ⏏ maintenance button to turn off the ⏏ maintenance light. Finally, reload the paper and press the ⏏ roll paper button again to resume printing.
- If paper is curled, roll the paper inside the uncurling sheet in the direction opposite to the paper's curl. You don't need to uncurl the entire roll—only about 9.3 inches. See page 11 for details.

Solving Miscellaneous Printout Problems

The image is inverted, as if viewed in a mirror.

Turn off **Flip Horizontal** in the Advanced dialog box or the mirror setting in your application. (If you're printing on EPSON Iron-On Transfer Paper, the image *should* be inverted.)

The printer prints blank pages.

- Make sure your printer is selected in Windows, or as the active printer in the Macintosh Chooser or Print Center.
- The print head nozzles may need cleaning. See page 5.

The margins are incorrect.

- Make sure the paper settings in your printer software are correct for your paper size. See page 16 (Windows), page 19 (Macintosh OS 8.5.1 to 9.x), or page 21 (Macintosh OS X) for instructions.
- See your software documentation for instructions on choosing the correct margins for your paper size. The margins must be within the printable area of the page. See "Printer Specifications" in your on-screen *Reference Guide*.

Image size or position is incorrect.

Make sure paper and layout options are set correctly.

You see incorrect characters.

- Make sure the interface cable is securely connected and meets the system requirements on page 31 or page 32. Then try printing again.
- Make sure your printer is selected in Windows, or as the active printer in the Macintosh Chooser or Print Center.
- If you're using a switch box or USB hub with your printer, connect the printer directly to your computer.

Uninstalling and Reinstalling Printer Software

You may need to uninstall and then reinstall your printer software. For example, this might be necessary when you upgrade your Windows operating system. You don't need to uninstall your photo software or on-screen *Reference Guide*, and you won't see the license agreement when you reinstall your software.

Note: You don't need to uninstall your printer driver for OS X; you can reinstall the printer driver over the old driver.

Windows

1. **Windows XP:** Click **Start**, then click the **Control Panel** icon. On the next screen, click **Add or Remove Programs**.
Other Windows systems: Double-click  **My Computer**, then double-click the **Control Panel** icon. Finally, double-click **Add/Remove Programs**.
2. Click **EPSON Printer Software** in the program list, and click the **Add/Remove** button (**Change/Remove** button on Windows XP and 2000).
3. In the next window, make sure your EPSON Stylus Photo printer icon is selected and click **OK**. Then follow the on-screen instructions.

4. For all systems except Windows XP, click **EPSON USB Printer Devices** in the program list if you're using a USB port; then click the **Add/Remove** (or **Change/Remove**) button.
5. Restart your computer when you're done. Then follow the instructions on the *Start Here* sheet to reinstall your software.

Macintosh OS 8.5.1 to 9.x

1. Insert your printer software CD-ROM and double-click the  **EPSON** icon in your CD-ROM window. (If you don't see the window, double-click the  **EPSON** icon that appears on your desktop.)
2. Click **Install Printer Driver**.
3. On the installer screen, click the arrow in the Easy Install list at the top and select **Uninstall**. Then click the **Uninstall** button at the bottom and follow the instructions.
4. Restart your Macintosh, then follow the instructions on the *Start Here* sheet to reinstall your software.

Where To Get Help

If you need help with your printer or Film Factory, see the contact information below. See the information on page 30 if you need help with the other photo software that came on your printer CD-ROM.

EPSON provides technical assistance 24 hours a day through the electronic support services and automated telephone services listed in the following table:

Service	Access
World Wide Web	From the Internet, you can reach EPSON Support at http://support.epson.com . At this site, you can download drivers and other files, look at product documentation, access troubleshooting information, and receive technical advice through e-mail.
Automated Telephone Services	A variety of automated help services are available 24 hours a day, seven days a week. To use these services, you must have a touch tone telephone and call (800) 922-8911 . Your SoundAdvice SM Express Code is 68000. Use this code to quickly select the EPSON Stylus Photo 1280 in EPSON SoundAdvice.

To speak to a technical support representative, dial:

- U.S.: (562) 276-7296, 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM, Saturday.
- Canada: (905) 709-2567, 6 AM to 6 PM, Pacific Time, Monday through Friday.

Toll or long distance charges may apply. Before you call, please have the following information ready:

- Product name (EPSON Stylus Photo 1280)
- Product serial number (located on the back of the printer)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration and operating system version
- Description of the problem

You can purchase ink cartridges, paper, manuals, and accessories from EPSON at (800) 873-7766, or visit www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

Photo Software Technical Support

If you need help with the bonus photo software that came with your printer, please contact the software manufacturer, as listed below.

Software	Web site	E-mail	Telephone
Adobe Photoshop Elements or LE	www.adobe.com/support/main.html	techdocs@adobe.com	(206) 675-6126 6:00 AM to 5:00 PM, PST, Monday through Friday (pay support)
MonacoEZcolor	www.ezcolor.com/faq.html	support@monacosys.com	(888) 749-9944 9:00 AM to 5:00 PM, EST, Monday through Friday

Notices

This chapter includes system requirements, safety instructions, legal notices, and other important information.

Windows System Requirements

To use your printer and its software, your system should have:

- A Microsoft® Windows® compatible PC with a Pentium® or better processor, 200 MHz or faster, recommended
- Windows XP, Windows Me, Windows 2000, Windows 98, Windows 95, or Windows NT 4.0
- 64MB of RAM (128MB or more recommended)
- 150MB of free hard disk space (200MB or more recommended)
- VGA or better display adapter and monitor
- CD-ROM or DVD drive for installing the printer software
- Parallel connection: a high-speed, bidirectional IEEE-1284 compliant parallel cable, up to 10 feet long (3 meters); the cable must have a D-SUB, 25-pin, male connector for your computer, and a 36-pin, Centronics® compatible connector for the printer.

USB connection: a computer running Windows XP, Windows Me, Windows 2000, or Windows 98 with a Windows-compliant USB port and a shielded USB “AB” cable up to 6.5 feet (2 meters) long.

Caution: Using an improperly shielded USB cable—especially a cable more than 6.5 feet (2 meters) long—may cause the printer to malfunction.

Macintosh System Requirements

To use your printer and its software, your system should have:

- An Apple® iMac™ series or Power Macintosh® G3 or G4 with built-in USB port
- Mac® OS 8.5.1 to OS 9.x, and OS X 10.1 to OS X 10.2
- 64MB of available RAM (more recommended)
- 150MB of free hard disk space (200MB recommended)
- VGA display or better
- CD-ROM or DVD drive for installing the printer software
- A shielded USB “AB” cable up to 6.5 feet (2 meters) long.

Caution: Using an improperly shielded USB cable—especially a cable more than 6.5 feet (2 meters) long—may cause the printer to malfunction.

ENERGY STAR Compliance

As an ENERGY STAR Partner, EPSON has determined that this product meets the ENERGY STAR guidelines for energy efficiency. The EPA ENERGY STAR office equipment program is a voluntary partnership with the computer and office equipment industry to promote the introduction of energy-efficient personal computers, monitors, printers, fax machines, and copiers in an effort to reduce air pollution caused by power generation.



Important Safety Instructions

Before using your printer, read the following safety instructions to make sure you use the printer safely and effectively:

- Be sure to follow all warnings and instructions marked on the printer.
- Use only the type of power source indicated on the printer's label.
- Connect all equipment to properly grounded power outlets. Avoid using outlets on the same circuit as photocopiers or air control systems that regularly switch on and off.
- Place the printer near a wall outlet where the plug can be easily unplugged.

Placez l'imprimante près d'une prise de contact où la fiche peut être débranchée facilement.

- Do not let the power cord become damaged or frayed.
- If you use an extension cord with the printer, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- Keep your printer and computer system away from potential sources of electromagnetic interference, such as loudspeakers or cordless telephone base units.
- Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- Leave enough room around the printer for sufficient ventilation.
- Do not place the printer near a radiator or heating vent or in direct sunlight.
- Place the printer on a flat, stable surface that extends beyond the printer base in all directions. The printer will not operate properly if it is tilted or at an angle.
- Turn off and unplug the printer before cleaning. Clean with a damp cloth only. Do not spill liquid on the printer.
- Always turn the printer off using the  power button. The  power light flashes briefly and then goes off. Don't switch off the power strip or unplug the printer until the  power light is off.
- Do not block or cover the openings in the printer's case or insert objects through the slots.
- Except as specifically explained in this manual, do not attempt to service the printer yourself.

- Unplug the printer and refer servicing to qualified service personnel under the following conditions:

If the power cord or plug is damaged; if liquid has entered the printer; if the printer has been dropped or the case damaged; if the printer does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.

Ink Cartridge Safety Instructions

- Keep ink cartridges out of the reach of children and do not drink the ink.
- Be careful when you handle used ink cartridges; there may be ink remaining around the ink supply port. If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water.
- Do not put your hand inside the printer or touch the cartridge during printing.
- Do not move the print head by hand. You may damage the printer.
- Install the ink cartridge immediately after you remove it from its foil package. Leaving the cartridge unpacked for a long time before use can result in reduced print quality.
- Do not use an ink cartridge beyond the date printed on the cartridge carton. For best results, use up the ink cartridges within six months of first installing them.
- Store ink cartridges in a cool, dark place.
- After bringing an ink cartridge inside from a cold storage site, allow it to warm up at room temperature for at least three hours before using it.
- Do not shake an ink cartridge; this can cause leakage.
- Do not dismantle the ink cartridges or try to refill them. This could damage the print head.
- Do not touch the green IC chip on the side of the cartridge. This may affect normal operation and printing.
- If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge touches. Do not touch the ink cartridge ink supply port or surrounding area.
- Before transporting the printer, make sure the print head is capped in the far right position and the ink cartridges are in place. Tape the ink cartridge holder to the printer case to make sure it remains in the proper position.

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity

According to 47CFR, Part 2 and 15 for Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers:

We: EPSON AMERICA, INC.
Located at: MS: 3-13
3840 Kilroy Airport Way
Long Beach, CA 90806-2469
Telephone: (562) 290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name EPSON
Type of Product: Ink Jet Printer
Model: EPSON Stylus Photo 1280: P158A

Epson America, Inc. Limited Warranty

What Is Covered: Epson America, Inc. (“Epson”) warrants to the first retail purchaser that the EPSON printer covered by this limited warranty statement, if purchased and used in the United States or Canada, conforms to the manufacturer’s specifications and will be free from defects in workmanship and materials for a period of one (1) year from the date of original purchase. Epson also warrants that the consumable ink cartridges enclosed with the printer will perform to the manufacturer’s specified usage, which usage may expire before the expiration of the limited warranty for the EPSON printer. For warranty service, you must provide proof of the date of original purchase.

What Epson Will Do To Correct Problems: Should your EPSON printer prove defective during the warranty period, please call the EPSON ConnectionSM at (562) 276-7296 (U.S.) or (905) 709-2567 (Canada) for warranty repair instructions and return authorization. An Epson service technician will provide telephone diagnostic service to determine whether the printer requires service. If service is needed, Epson will, at its option, exchange or repair the printer without charge for parts or labor. If Epson authorizes an exchange for the defective unit, Epson will ship a replacement printer to you, freight prepaid, so long as you use an address in Canada or the U.S. (excluding Puerto Rico and U.S. Possessions). Shipments to other locations will be made freight collect. You are responsible for securely packaging the defective unit and returning it to Epson within five (5) working days of receipt of the replacement. Epson requires a debit or a credit card number to secure the cost of the replacement printer in the event that you fail to return the defective one. If your printer is being repaired, Epson will direct you to send your printer to Epson or its authorized service center, where the printer will be fixed and sent back to you. You are responsible for packing the printer and for all costs to and from the Epson authorized service center. When warranty service involves the exchange of the printer or a part, the item replaced becomes Epson property. The replacement printer or part may be new or refurbished to the Epson standard of quality, and, at Epson’s option, may be another model of like kind and quality. Epson’s liability for replacement of the covered printer will not exceed the original retail selling price of the covered printer. Exchange products and parts assume the remaining warranty period of your original product covered by this limited warranty.

What This Warranty Does Not Cover: This warranty covers only normal use in the United States and Canada. This warranty is not transferable and will not apply to products purchased from an end user. This warranty does not cover any color change or fading of prints or reimbursement of materials or services required for reprinting. This warranty does not cover damage to the EPSON product caused by parts or supplies not manufactured, distributed or certified by Epson. This warranty does not cover ribbons, ink cartridges or third party parts, components, or peripheral devices added to the EPSON product after its shipment from Epson, e.g., dealer or user-added boards or components. Epson is not responsible for warranty service should the Epson label or logo or the rating label or serial number be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters such as fire, flood, and lightning, improper electrical current, software problems, interaction with non-Epson products, or service other than by an Epson Authorized Servicer. If a claimed defect cannot be identified or reproduced, you will be held responsible for the costs incurred.

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSON OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, NEITHER EPSON AMERICA, INC. NOR ITS AFFILIATES SHALL BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE EPSON PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

In Canada, warranties include both warranties and conditions.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Epson America, Inc. ● P.O. Box 93012 ● Long Beach, CA 90809-3012

Index

Numerics

360 dpi Ink Jet Paper setting, 32

A

Accessories, 46, 67

Adobe Photoshop, P.I.M. II plug-in for, 39 to 42

Aligning print head, 49 to 50

Automatic mode, 17, 20, 23

B

Banding, 60 to 61

Basic printing

Macintosh OS 8.5.1 to 9.x, 19 to 21

Macintosh OS X, 21 to 24

Windows, 16 to 18

Blank pages, 64

Blurry images, 61

Booklet, printing, 28

BorderFree printing, 33 to 34, 37

Bright White Paper, 32

Browser, 4

Buttons, printer, 54

C

Cable, printer, 69 to 70

Cancelling printing, 18, 21, 24

Centering text or image, 27

Characters, incorrect, 65

Checking printer, 57

Cleaning

print head, 43 to 45

printer, 51

sheets, 51

Collating print jobs, 17

Color Management settings

Mac OS 8.5x to 9.x, 29 to 30

Mac OS X, 24

Windows, 26

Color problems, 62

ColorLife Photo Paper, 32

ColorSync, 24, 29

Control panel, 54, 55 to 56

Controlling printing, 18, 21, 24

Copies setting, 63

Customizing print settings

Macintosh, 29 to 31

Windows, 25 to 28

D

Default settings, Windows, 18

Documentation, 4 to 6

Double-Sided Matte Paper, 32

Double-sided printing, 23, 28

E

Economy setting, 25, 29

Electronic manual, 4 to 6

Elements, Photoshop

description, 3

using P.I.M. II Plug-in, 39 to 42

EPSON

accessories, 46, 67

help, 67

Monitor3, 21

papers, 32

PhotoCenter, 3

Store, 46, 67

support site, 53

Error lights, 54, 55 to 56

Exif Print
description, 2
with Film Factory, 35 to 38
with plug-in for Photoshop, 39 to 42

F

Faint images, 61
Film Factory, 35 to 39
Flip Horizontal setting, 64

G

Gamma setting, 26, 30
Glossy media, 32

H

Head Cleaning utility, 43 to 45
Help, EPSON, 67
High Speed setting, 60
Holding a print job, 18, 21, 24

I

ICC profiles, using with P.I.M. II Plug-in,
39 to 42
ICM setting, 25
Image, resizing, 28
Incorrect characters, 65
Incorrect colors, 62
Ink cartridge
replacing, 45 to 48
safety instructions, 72
Ink jet transparencies, 32
Ink level, 18, 20, 45, 47, 55
Ink setting, 17, 20, 23
Installation problems, 58 to 59
Inverted image, 64
Iron-On Transfer Paper, 32, 64

J

Jams, paper, 13, 56, 63 to 64

L

Landscape orientation, 22, 27
Layout problems, 65
Layout settings, 19, 24, 28
Lever, thickness, 61
Lights, 54, 55 to 56
Loading paper, 7 to 13

M

Macintosh
basic printing, 19 to 24
cancelling printing, 21, 24
customizing print settings, 29 to 31
Media Type setting, 20, 23
printer status, 21, 24
prioritizing print jobs, 21, 24
saving your settings, 24, 31
setting resolution, 30
system requirements, 70
USB, 70
Maintaining printer, 43 to 51
Marginless printing, 33 to 34, 37
Margins, incorrect, 64
Matte papers, 32
Media Type setting, 17, 20, 23, 32
MicroWeave setting, 60
Mirror images, 64
MonacoEZcolor, 3, 68
Monitor3, EPSON, 21
Monitoring ink level, 18, 20, 21, 45, 47, 55
Moving printer, 52

N

Network printing, 59
Noise, printer, 59
Nozzle check pattern, 44 to 45, 57

O

Orientation setting, 22, 27, 33

P

P.I.M. II Plug-in, 3, 39 to 42

Page Setup, Macintosh, 19, 21

Panoramic paper, 32

Paper

- EPSON, 32

- feeding problems, 13, 63 to 64

- jams, clearing, 56

- loading, 7 to 13

- orientation, 22, 33

- Source setting, 19, 27, 37

- thickness lever, 61

- type, setting, *see* Media Type setting

Paper Size setting, 19, 22, 27

Pausing printing, 18, 21, 24

Photo Paper, 32

Photo software, 3, 68

Photo Stickers, 32

PhotoCenter, 3

Photoshop, 3, 68

- using P.I.M. II Plug-in, 39 to 42

Portrait orientation, 22, 27

Poster, printing, 28

Power light, 55

Premium Bright White Paper, 32

Previewing print job, 20

Print dialog box, 16

Print head

- aligning, 49 to 50

- cleaning, 43 to 45

PRINT Image Matching

- description, 1 to 2

- plug-in for Photoshop, 39 to 42

- with Film Factory, 35 to 39

Print quality problems, 60 to 62

Printable area, increasing, 27

Printer

- cable, 69 to 70

- check, 57

- cleaning, 51

- control panel, 54, 55 to 56

- maintaining, 43 to 51

- noise, 59

- parts, 54

- problems, 55 to 57, 59 to 60

- status, 18, 21

- transporting, 52

Printing

- basic, 16 to 24

- booklet, 28

- BorderFree, 33 to 34, 37

- controlling, 18, 21, 24

- customizing, 25 to 31

- double-sided, 23, 28

- increasing printable area, 27

- on roll paper, 27

- poster, 28

- previewing, 20

- prioritizing print jobs, 21, 24

- rough drafts, 25, 29

- setting higher resolution, 26, 30

- slow, 60

- with PRINT Image Matching, *see* PRINT Image Matching

Problems

- installing software, 58 to 59

- miscellaneous, 64 to 65

- paper feeding, 13, 63 to 64

- print quality, 60 to 62

- printing, 59 to 60

Profiles, ICC, using with P.I.M. II Plug-in, 39 to 42

Progress Meter, 18

Q

Quality/Speed setting, 17, 20

R

- Reference Guide, 4 to 6
- Reinstalling software, 65 to 66
- Resizing image, 28
- Resolution, setting higher, 26, 30
- Roll paper
 - clearing jams, 56
 - feeding problems, 13, 63 to 64
 - loading, 10 to 13
 - printing, 27
 - removing, 14
 - storing, 14
- Rotating image, 27

S

- Safety instructions, 71 to 72
- Saving settings, 24, 26, 31
- Self adhesive sheets, 32
- Service, 67 to 68
- Slow printing, 60
- Smears, 61
- Software
 - photo, 3, 68
 - problems, solving, 58 to 59
 - uninstalling, 65 to 66
 - updates, 53
- Source, Paper, 19, 27, 37
- sRGB setting, 25
- Stickers, 32
- Support, 67 to 68
- System requirements, 69 to 70

T

- Technical support, 67 to 68
- Thickness lever, 61
- Transfer Paper, Iron-On, 32, 64
- Transparencies, 32
- Transporting printer, 52
- Troubleshooting, 53 to 65

U

- Uninstalling software, 65 to 66
- Updates, software, 53
- USB, 66, 69, 70
- Utilities
 - Head Cleaning, 43 to 45
 - Print Head Alignment, 49 to 50

W

- Watermark, adding, 20, 28
- Windows
 - basic printing, 16 to 18
 - cancelling printing, 18
 - customizing print settings, 25 to 28
 - default settings, 18
 - layout settings, 28
 - Media Type setting, 17
 - printer status, 18
 - saving your settings, 26
 - setting higher resolution, 26
 - system requirements, 69
 - uninstalling software, 65
 - USB, 66, 69
- World Wide Web, 67

EPSON Ink Jet Papers

Use EPSON paper and inks to get the same photo quality results that earn EPSON printers all of their awards! EPSON papers are specially coated to work with EPSON genuine inks. You'll notice that when prints come out of your printer, your image is crisp and smooth. Here are details about just a few of EPSON's papers, your printer's ink cartridges, and EPSON project ideas:



Borderless Premium Glossy Photo Paper

Water-resistant, photographic-weight paper featuring EPSON's BorderFree™ technology, this paper lets you print frame-ready photos in a matter of minutes.

ColorLife Photo Paper

ColorLife™ Photo Paper delivers colorful, fade-resistant photos with a smooth satin finish. Results are brilliant, professional images that look and feel like traditional photographs.



Matte Paper Heavyweight

Professional-looking, flat matte finish for printing photos and graphics on a non-glossy surface. Perfect for digital fine art work. Your prints last longer than with other media, especially when you display them under glass or store them in photo albums.

EPSON Ink Cartridges



For best results, always use genuine EPSON ink cartridges.

T007201 (Black)

T009201 (Color)

For more information on other EPSON products and fun project ideas, look for the EPSON Print LabSM Series at www.printlabseries.com.



See the inside back cover for a partial list of EPSON papers and ordering information.

How To Order EPSON Ink and Paper

To order EPSON ink cartridges and paper, call (800) 873-7766 or visit the EPSON Store at www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.



EPSON Ink Cartridges

T007201 (Black)

T009201 (Color)

EPSON Papers

Paper name	Size	Part number
EPSON Premium Bright White Paper	Letter (8.5 x 11 inches)	S041586
EPSON Photo Quality Ink Jet Paper	Letter (8.5 x 11 inches)	S041062
EPSON Photo Quality Ink Jet Cards	A6 (4.1 x 5.8 inches)	S041054
EPSON Glossy Photo Paper (EPSON Photo Paper)	4 x 6 inches, non-perforated, BorderFree	S041458
	Letter (20, 100, or 500 sheets, respectively)	S041141/ S041272/ S041271
	Panoramic (8.3 x 23 inches)	S041145
	13 inches x 32.8 feet (Super B Roll)	S041233
EPSON ColorLife Photo Paper	Letter (8.5 x 11 inches)	S041500
	13 x 14 inches	S041501
EPSON Double-Sided Matte Paper	Letter (8.5 x 11 inches)	S041568
EPSON Matte Paper Heavyweight	Letter (8.5 x 11 inches)	S041257
	8 x 10 inches, BorderFree	S041467
	11 x 14 inches	S041468
	Super B (13 x 19 inches)	S041263
EPSON Premium Glossy Photo Paper	Letter (8.5 x 11 inches)	S041286
	5 x 7 inches, BorderFree	S041464
	8 x 10 inches, BorderFree	S041465
	11 x 14 inches	S041466
	Super B (13 x 19 inches)	S041289
	4 inches x 26.2 feet (Roll)	S041302
	8.3 inches x 26.2 feet (Roll)	S041376
EPSON Premium Semigloss Photo Paper	Letter (8.5 x 11 inches)	S041331
	Super B (13 x 19 inches)	S041327
	4 inches x 26.2 feet (Roll)	S041329
EPSON Premium Luster Photo Paper	Letter (8.5 x 11 inches)	S041405
	8.3 inches x 26.2 feet (Roll)	S041408
EPSON Photo Stickers Kit (CD-ROM/paper)	A6 (4.1 x 5.8 inches)	S041144-KIT
EPSON Photo Quality Glossy Film	Letter (8.5 x 11 inches)	S041072
EPSON Ink Jet Transparencies	Letter (8.5 x 11 inches)	S041064
EPSON Glossy Photo Greeting Cards	Letter (8.5 x 11 inches); perforated edges	S041606
EPSON Photo Quality Self Adhesive Sheets	A4 (8.3 x 11.7 inches)	S041106
EPSON Iron-On Transfer Paper	Letter (10 or 50 sheets)	S041153/ S041155