 


Start Here

EPSON Stylus® CX6400

1 Unpack

- 1** Make sure you have all the parts shown here. If any parts are missing, contact EPSON® as described on the back of this sheet.

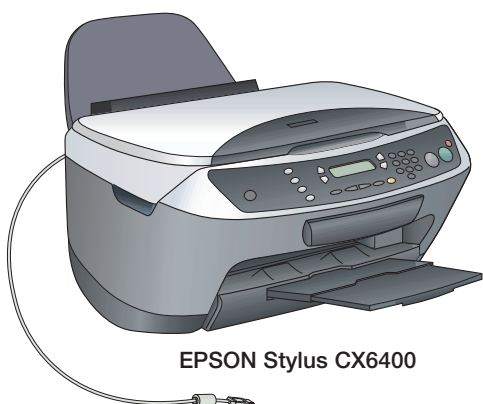

 
EPSON Stylus CX6400



Software
CD-ROM




Quick Reference

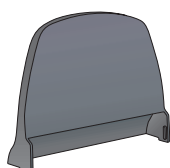

Paper support



 
Ink cartridges




Feeder guard

- 2** Remove all blue packing tape from the printer.

 
- 3** Lift up the scanner section. If it doesn't open, make sure you have removed all the tape.

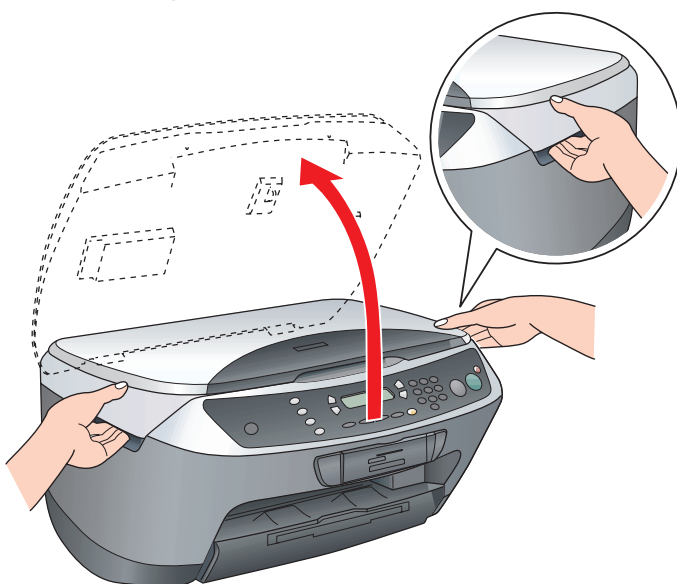

 - 4** Peel off the tape from the ink cartridge holder.

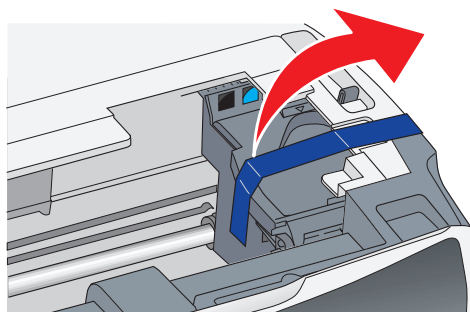


- 5** Close the scanner section.

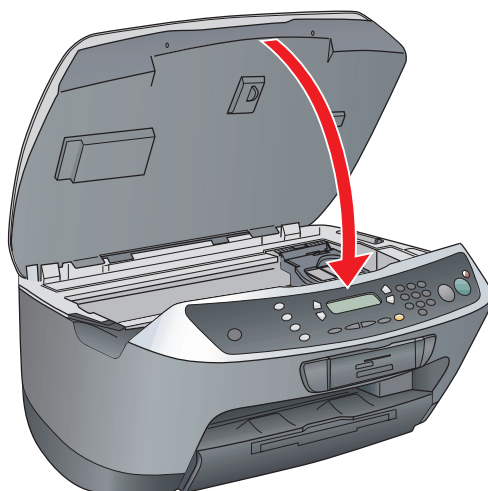 


2

Attach the Parts

 - 1 Insert the paper support into the slots behind the printer, as shown.

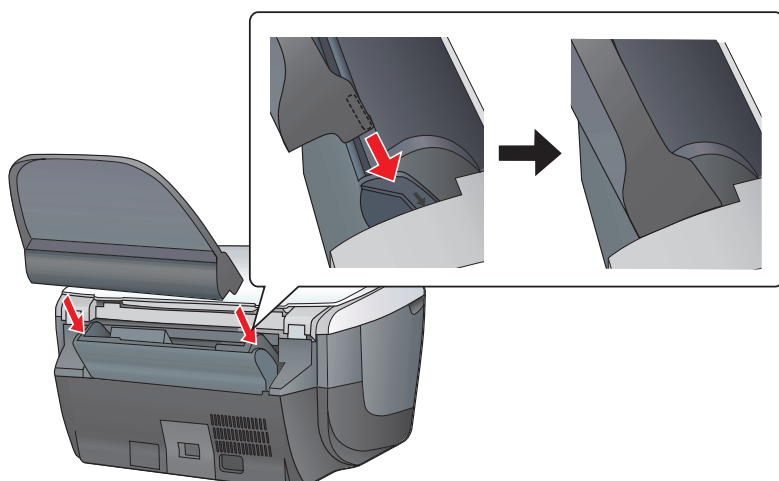

 - 2 Lower the feeder guard into the slots behind the scanner lid. (Insert the hinges on the feeder guard into the corresponding slots on the printer.)

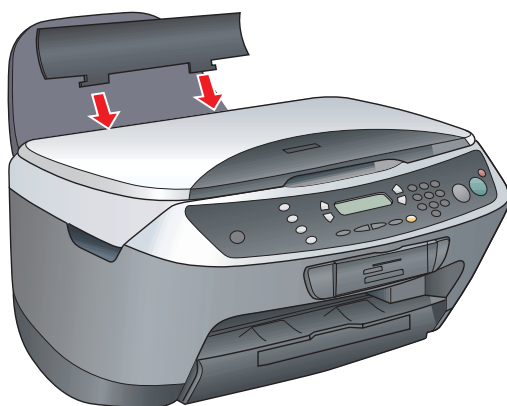


3


Plug In and Turn On

- 1 Plug the Stylus CX into a grounded electrical outlet.

 Caution: Do not connect the USB cable until instructed.

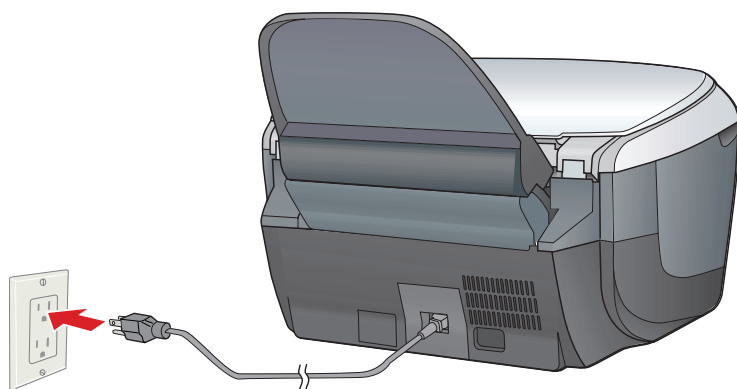

 - 2 Press and hold the On button until the green lights come on.

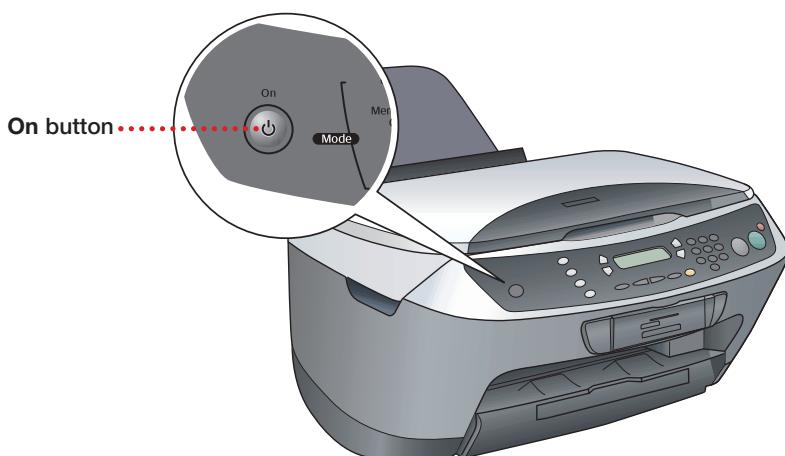


4


Install Ink Cartridges

1 Wait until you see “Initial Charge” displayed on the control panel.

 2 Lift up the scanner section.

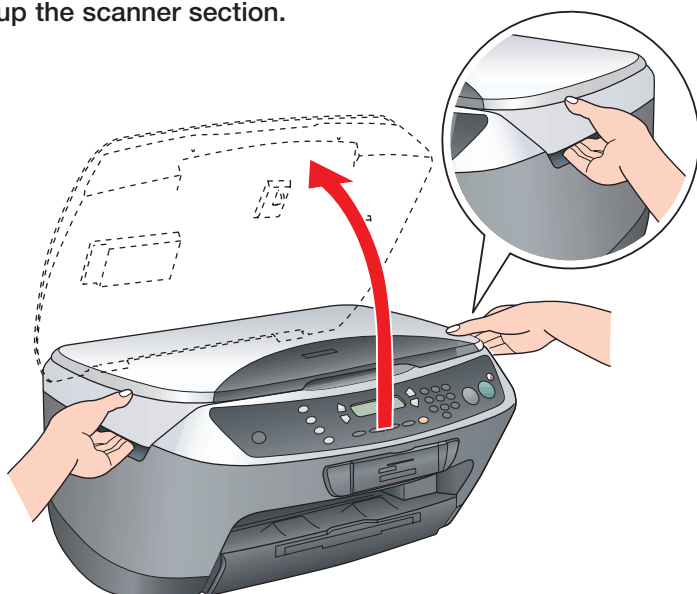

 
3 Shake the package of ink cartridges four or five times. Then remove the cartridges from the package.

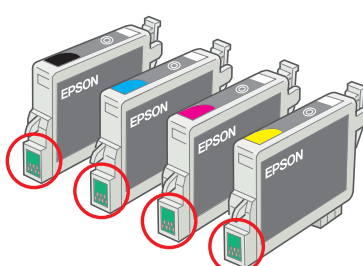


Don't touch the green part

Caution: You must install all cartridges and leave them installed for all types of printing. To avoid damaging the Stylus CX, never move the print head by hand.

 
4 Open the cartridge cover.

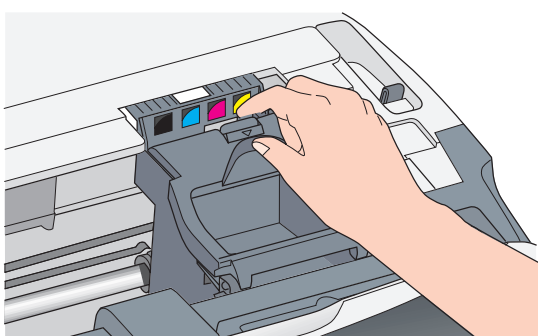

5 Place each cartridge in its holder.

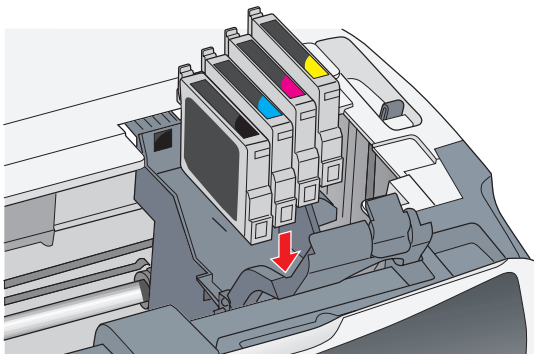 


 6 Press down on each cartridge until it clicks into place.

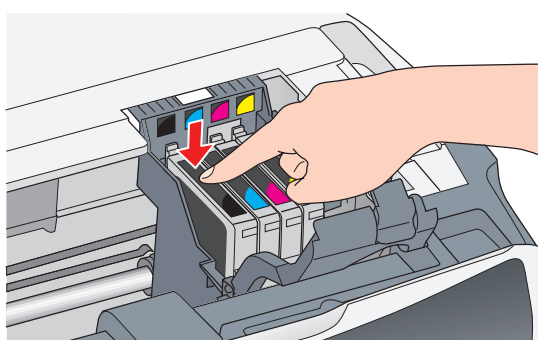

continue

 - 7** Close the ink cartridge cover, then close the scanner section.

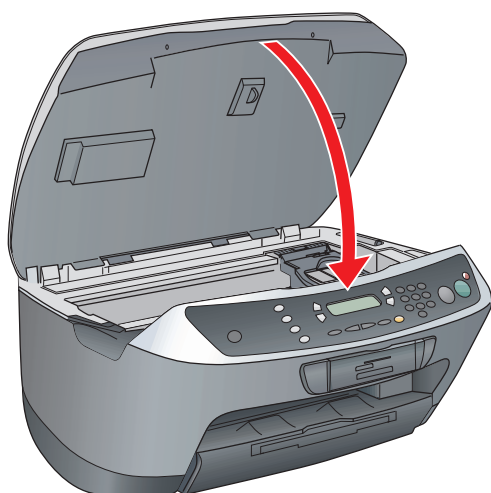


The Stylus CX begins charging the ink delivery system.


Charging takes about 2 minutes. The green light flashes and the Stylus CX makes various sounds. Don't turn it off while the green light is flashing or you'll waste ink.

5 Load Paper

 
- 1** Extend the output tray.

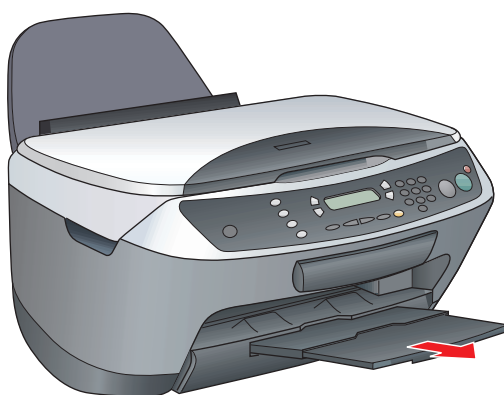

- 2** Slide the edge guide to the left.

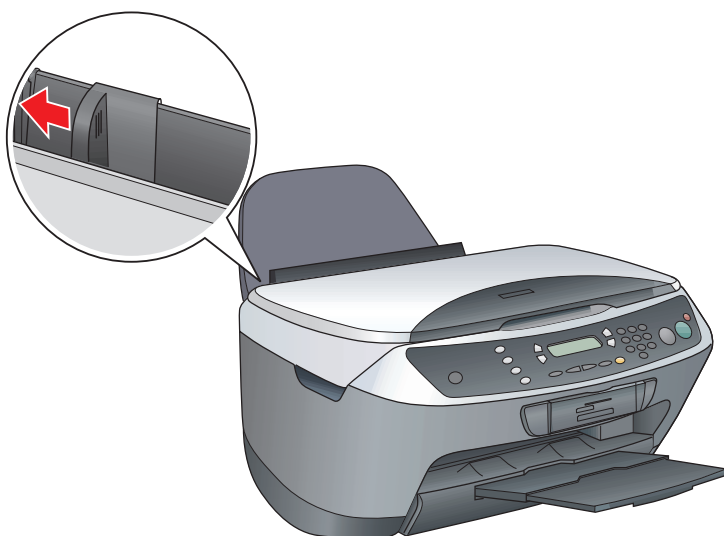 

 - 3** Place a stack of paper against the right side of the feeder, but don't push it in. Slide the edge guide against the paper.

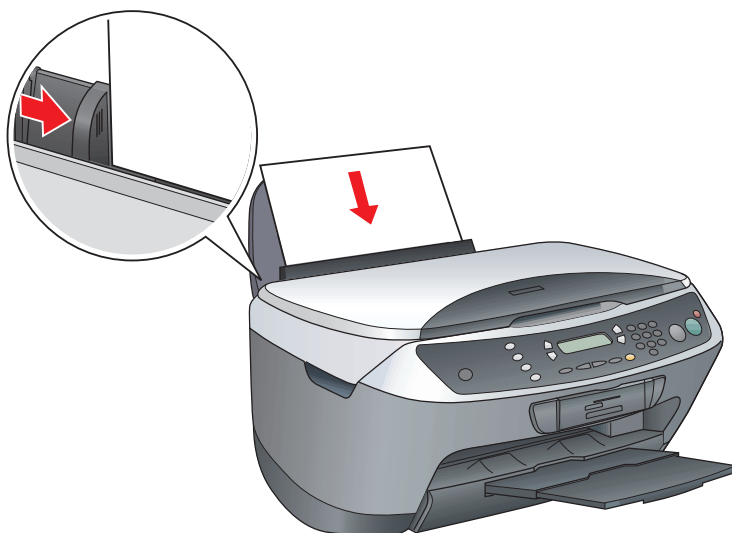

Install Software and Connect to Your Computer

 
The software works with Windows® 98, Me, 2000, and XP, and Macintosh® OS 8.6 to 9.x and 10.2 to 10.3. Follow the steps below (for Windows), or the steps in the next column (for Macintosh).

Note: There is a Security Lock program on your CD-ROM that lets you prevent unauthorized use of your CX6400. See the *Quick Reference* booklet for instructions on installing and using it.


Windows

- 1 Make sure the Stylus CX is not connected to your computer, then turn on your computer.

Note: If your Stylus CX is turned on and connected to your computer, you may see several New Hardware Wizard screens. Click **Cancel** for each of these screens and disconnect your Stylus CX. You can't install your software that way.

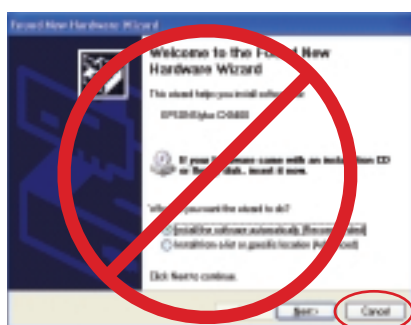

 
- 2 Insert your Stylus CX software CD-ROM in your CD-ROM or DVD drive.

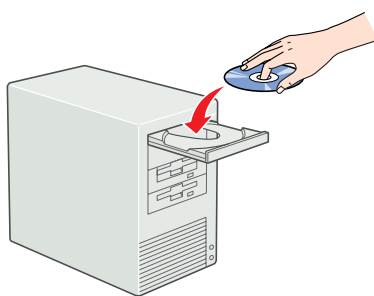

- 3 Wait until you see this screen, then click **Install**.

Note: If the install screen doesn't open automatically, do the following:


 
For Windows XP: click **Start** > **My Computer**. Then double-click the EPSON CD-ROM icon.

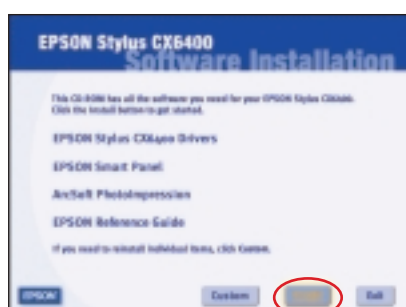

For Windows 98/Me/2000: double-click **My Computer**. Then double-click the EPSON CD-ROM icon.

- 4 Read the license agreement, then click **Agree**. Several messages display on your screen.

  - 5 When you see this screen, make sure your Stylus CX is turned on, then plug the USB cable into any available USB port on your computer.

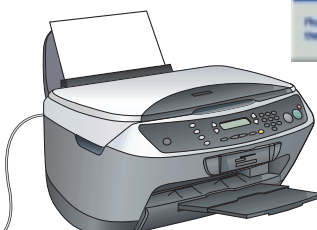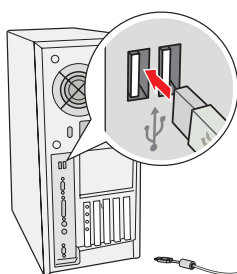

After you connect your Stylus CX, Windows displays several messages. If you don't see the messages, make sure your Stylus CX is turned on.

- 6 Click **Next** and continue following the instructions on the screen to install the rest of your software, including EPSON Smart Panel™, ABBYY® FineReader® Sprint, and ArcSoft® PhotoImpression™.

Note: It will take several minutes to install the remaining software. Don't cancel the installation.

 
- 7 At the completion screen, print a test page, if desired. When done, click **Exit**.
- 8 When you see the Product Registration screen, register your Stylus CX as instructed. At the last screen, click **Done** or close your browser.
- 9 At the last screen, click **OK**. Then remove the CD-ROM and restart your computer.

Now you're ready to copy, scan, and print. See the *Quick Reference* booklet or your on-screen CX6400 Reference Guide for instructions.

Macintosh

- 1 Insert your Stylus CX6400 software CD-ROM into your CD-ROM or DVD drive.

- 2 If necessary, double-click the  EPSON CD-ROM icon, then double-click the  EPSON installer icon. You see this screen:

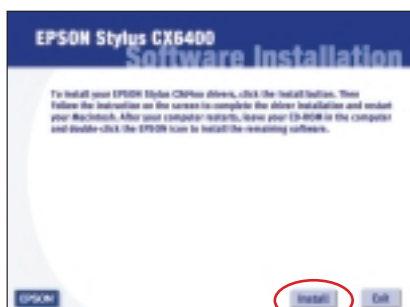

- 3 Click **Install**.

 
- 4 When you see the license agreement, click **Agree** to continue.

Note: If you're installing on Macintosh OS X, you may see an **Authenticate** message several times during installation. Enter your administrator name and password, if necessary.


- 5 For Macintosh OS X: Continue with the following steps.

For Macintosh OS 8.6 to 9.x: Follow any on-screen instructions, then continue with step 10.

- 6 Click **Install** at the EPSON Scan Installer screen to install the scanner portion of your software.

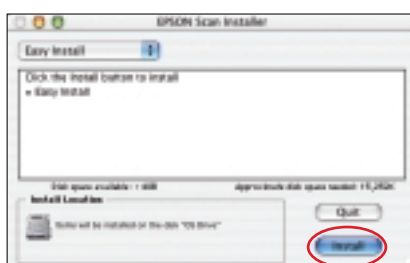

 
- 7 When the software finishes installing, you see this screen. Click **Quit**.



- 8 Follow the on-screen instructions to install additional software components.

Note: Click **Quit** when each part finishes installing.

 - 9 When you see a message about restarting your computer, leave in the CD-ROM and click **Restart**.



- 10 After restarting, double-click the  EPSON CD-ROM icon, if necessary, then double-click the  EPSON installer icon to reopen the Software Installation screen.



- 11 Click **Install** to install the remaining software.

 
Note: It will take several minutes to install the remaining software. Don't cancel the installation.

If you're installing on Macintosh OS 8.6 to 9.x, you may need to update your Carbon Library. Follow the instructions on the screen.

- 12 At the end of the installation, click **Exit**.

- 13 When you see the Product Registration screen, register your Stylus CX as instructed. At the last screen, click **Quit** or close your browser.

- 14 Make sure your Stylus CX6400 is turned on, then plug the USB cable into any available USB port on your Macintosh.

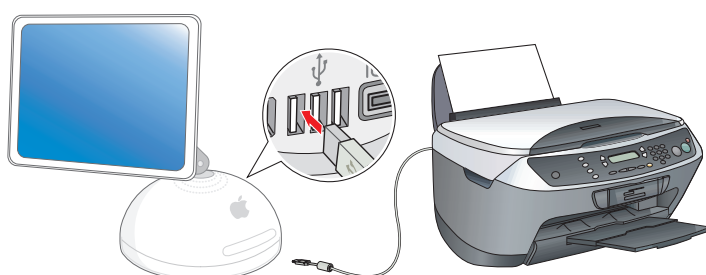

Follow the instructions in the next column to add the Stylus CX to the Print Center or Printer Setup Utility (for OS X) or the Chooser (for OS 8.6 to 9.x).

 
Selecting the Stylus CX for Mac OS X

- 1** Open the OS X Applications folder, then open the Utilities folder and start Print Center or the Printer Setup Utility.




If you see this screen, click Add.

- 2** On the Printer List screen, click the Add button.
- 3** On the next screen, select **EPSON USB** from the pull-down menu.
- 4** Click **Stylus CX6400**.

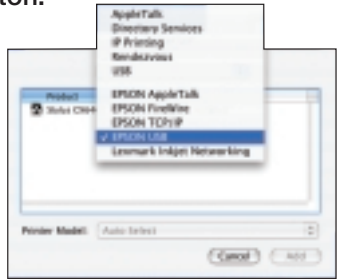

Note: If the CX6400 doesn't appear, make sure it is turned on and securely connected to you Macintosh.

 - 5** Open the **Page Setup** pull-down menu at the bottom of the screen and select **All**.
- 6** Click the **Add** button. You see the Printer List again with the Borderless feature available.
- 7** Close Print Center. You're ready to copy, scan, and print.

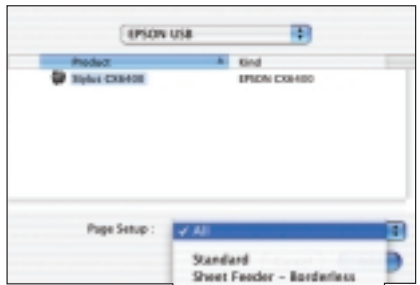

- 8** Now start up your Macintosh in OS 9.x. Follow the instructions in the previous column to install the OS 9.x drivers and optional software for Macintosh Classic programs.

Selecting the Stylus CX for Mac OS 8.6 to 9.x

- 1** Open the Chooser from the Apple menu.
- 2** Select **CX6400**, then select your USB port and turn on background printing.
- 3** Close the Chooser. You're ready to copy, scan, and print.



Any Problems?

If the red **!** error light is on, check the message on the Stylus CX. Try turning the Stylus CX off and then back on to clear the error. If your problem is listed here, try these suggestions. For more information, see your *Quick Reference* booklet, software Help, or on-screen *EPSON Reference Guide*.

The Found New Hardware Wizard appears on your screen.

Click **Cancel** and follow the steps in section 6. Disconnect the Stylus CX before installing the software.

You see an error message when you try to print or scan.

Make sure your Stylus CX is connected to your computer, plugged into a power source, and turned on.

The Stylus CX doesn't work.

Make sure you removed the tape from the ink cartridge holder, as described in section 1. Turn the Stylus CX off and then on again.

Make sure the ink cartridges are pushed all the way down.

Check the LCD screen to see if you or someone else set the Security Lock. See your *Quick Reference* booklet for details.

Make sure your EPSON Stylus CX6400 software is installed correctly.

Any Questions?

Here's where to look for answers:

EPSON Stylus CX6400 Quick Reference booklet



On-screen Reference Guide

Double-click the **CX6400 Reference Guide** icon on your desktop to view your *Reference Guide*.

On-screen help for EPSON Smart Panel, ArcSoft PhotoImpression, EPSON Scan, and ABBYY FineReader Sprint.

Click the **Help** button or question mark that appears on the screen when you're using any of these programs.

EPSON Technical Support (Stylus CX6400 and EPSON Scan)

- **World Wide Web**
<http://support.epson.com>
- **Automated Telephone Services**
To use these services, you must have a touch tone telephone and call (800) 922-8911. Your EPSON SoundAdviceSM Express Code is 70495. Use this code to quickly select your product in SoundAdvice.
- **To speak to a Technical Support Representative**
Dial (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Software Technical Support

Software	Telephone and Fax	Internet and E-mail
EPSON Smart Panel	(510) 445-8616 Fax: (510) 445-8601	www.newsoftinc.com tech@newsoftinc.com
ArcSoft PhotoImpression	(510) 440-9901 8:30 AM to 5:30 PM, Pacific Time, Monday–Friday Fax: (510) 440-1270	www.arcsoft.com/techmain support@arcsoft.com
ABBYY FineReader Sprint	(510) 226-6719 Fax: (510) 226-6069	www.abbyyusa.com support@abbyyusa.com

Need Paper and Ink?

For the best prints and copies, use genuine EPSON ink and paper. You can buy them from your local store or from the EPSON StoreSM at (800) 873-7766 or www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

Look for these cartridges and paper:



T0441 Standard Capacity Black Ink Cartridge	T0431 High Capacity Black Ink Cartridge	T0442 Cyan Ink Cartridge	T0443 Magenta Ink Cartridge	T0444 Yellow Ink Cartridge
--	--	------------------------------------	---------------------------------------	--------------------------------------



Premium Bright White Paper
Ultra-smooth white paper perfect for everyday use—especially two-sided documents.



DURABrite® Ink Glossy Photo Paper
Heavier weight paper for long-lasting enlargements and snapshots.



Double-Sided Matte Paper
The ideal paper for high quality printing of brochures, newsletters, or flyers.