

 
Start Here

EPSON Stylus® CX6300


Please read these instructions before using the printer.

1 Unpack


- 1 Make sure you have all the parts shown here. If any parts are missing, contact EPSON® as described on the back of this sheet.

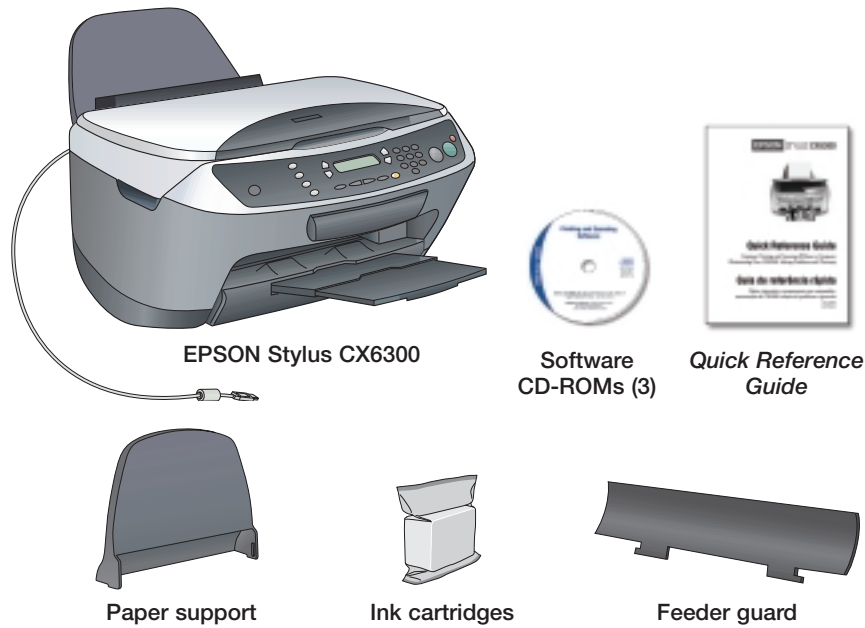


- 2 Remove all blue packing tape from the Stylus CX.
- 3 Lift up the scanner unit. If it doesn't open, make sure you have removed all the tape.

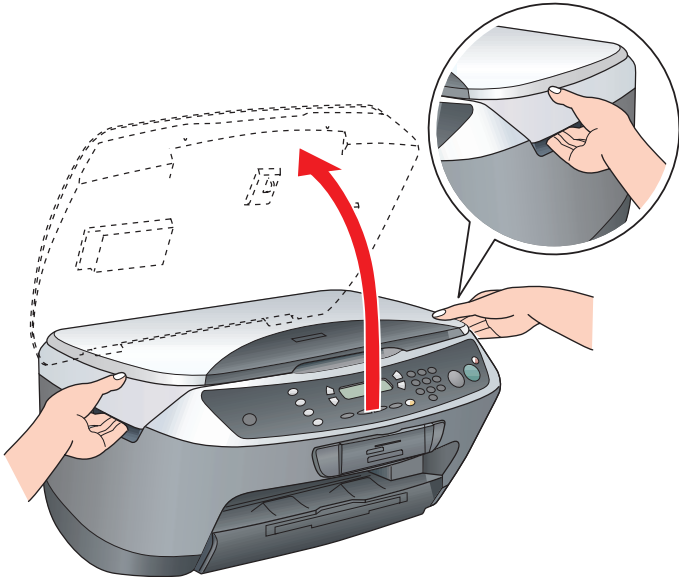

- 4 Peel off the tape from the ink cartridge holder.

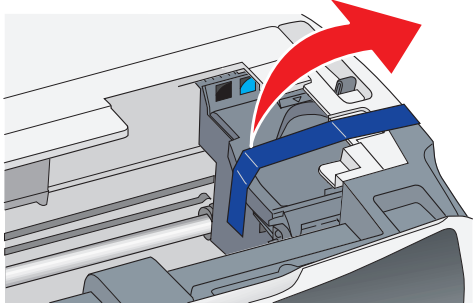


- 5 Lower the scanner unit.

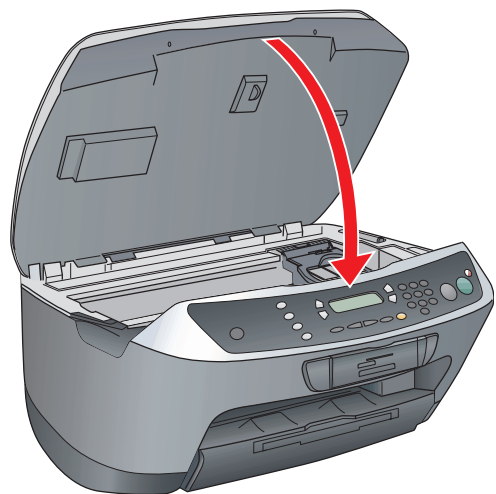


2 Attach the Parts

- 1 Insert the paper support into the slots behind the Stylus CX, as shown.

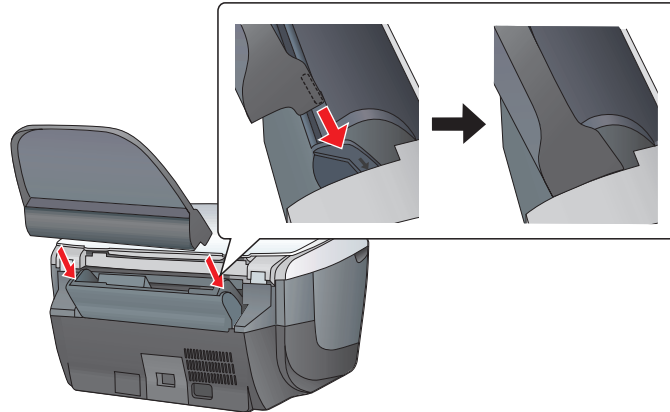


- 2 Lower the feeder guard into the slots behind the scanner lid. (Insert the hinges on the feeder guard into the corresponding slots on the Stylus CX.)

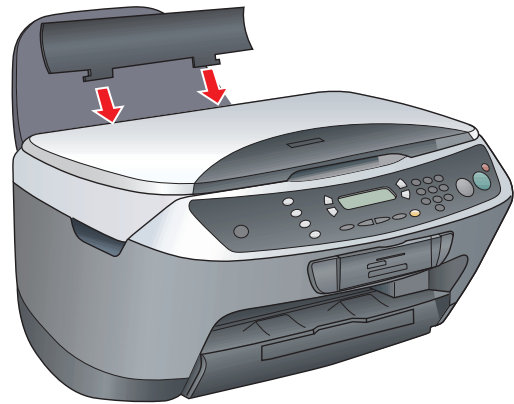


3 Plug In and Turn On

- 1 Plug the Stylus CX into a grounded electrical outlet.
- Caution:** Do not connect the USB cable yet.
- 2 Press and hold the On button until the green lights come on.

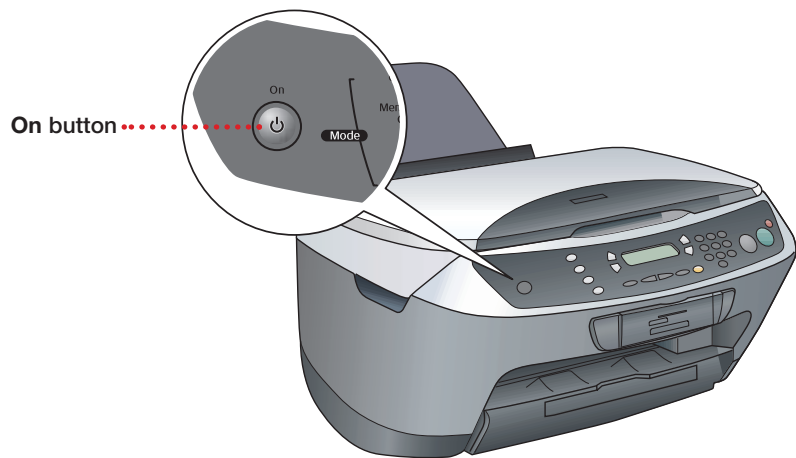

4 Select the Language

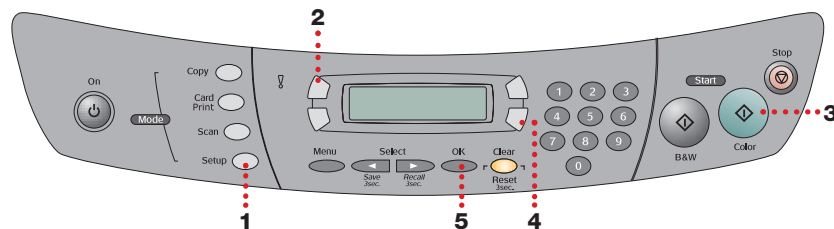


You can change the control panel interface language from English to French, Spanish or Portuguese. Press the **Setup** button (1), then press the top button on the left side of the LCD screen until **Language** (2) appears. Press the **Color** button (3), then press the bottom button on the right side of the LCD screen until the language you want appears (4). Press the **OK** button (5) to save the setting.

5 Install Ink Cartridges


Note: The ink cartridges included with the CX6300 have a lower yield due to the ink loading process. This process is only performed the first time you turn on the device and guarantees a better performance.

Caution: Keep ink cartridges out of the reach of children and don't drink the ink.

- 1 Wait until you see "Initial Charge" displayed on the control panel.
- 2 Lift up the scanner unit.

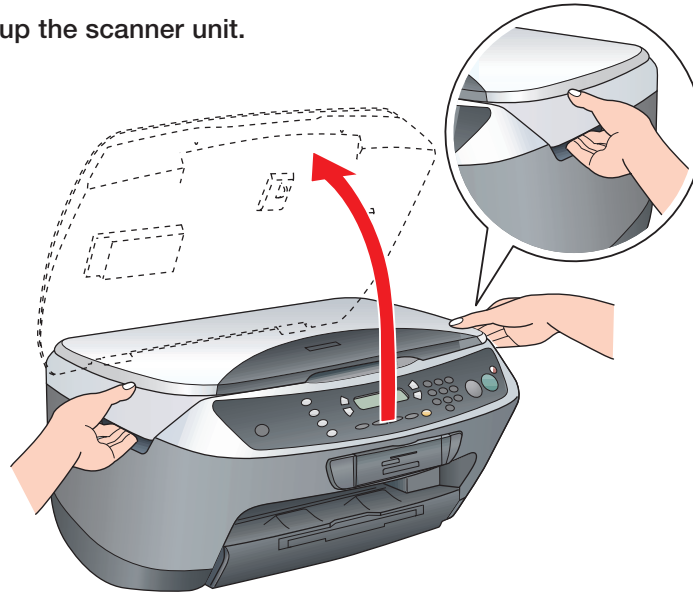


- 3 Shake the package of ink cartridges four or five times. Then remove the cartridges from the package.

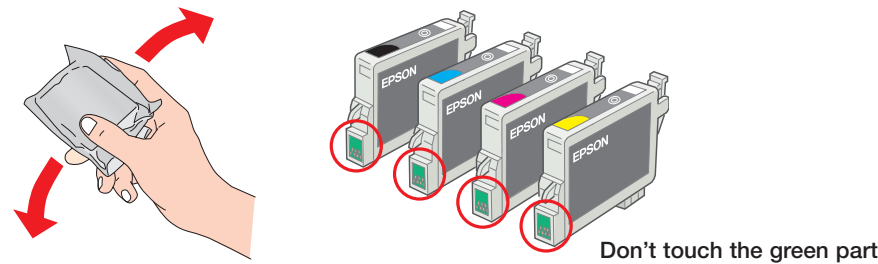


Caution: You must install all cartridges and leave them installed for all types of printing. To avoid damaging the Stylus CX, never move the print head by hand.


- 4 Open the cartridge cover.

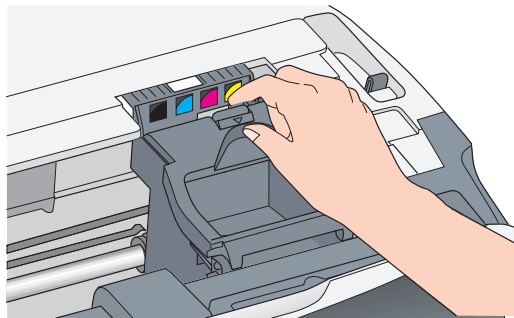


- 5 Place each cartridge in its holder.

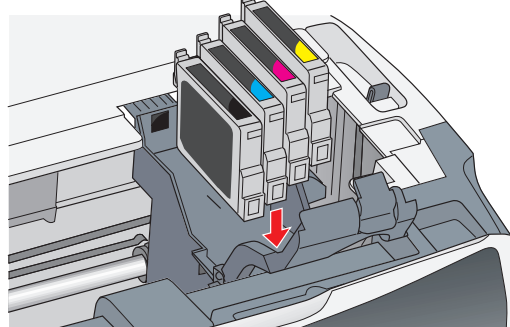

- 6 Press down on each cartridge until it clicks into place.

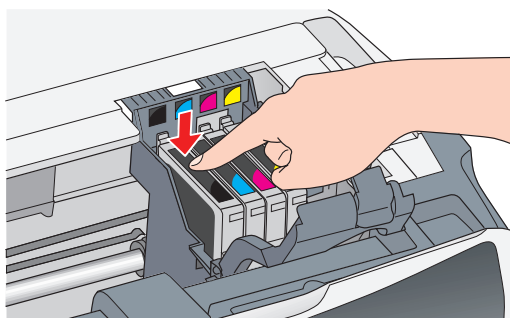

- 7 Close the ink cartridge cover, then close the scanner section.

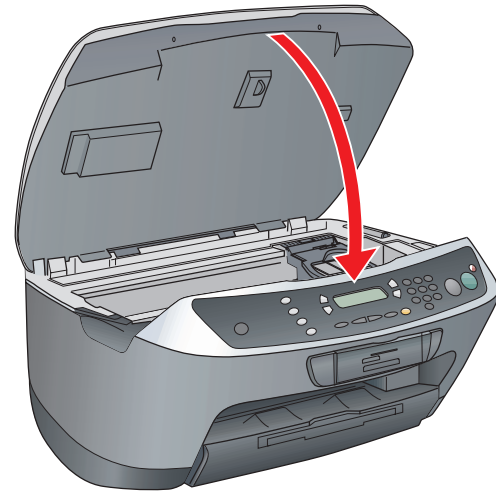


The Stylus CX begins charging the ink delivery system.


Charging takes about 2 minutes. The green light flashes and the Stylus CX makes various sounds. Don't turn it off while the green light is flashing or you'll waste ink.

6 Load Paper


- 1 Extend the output tray.

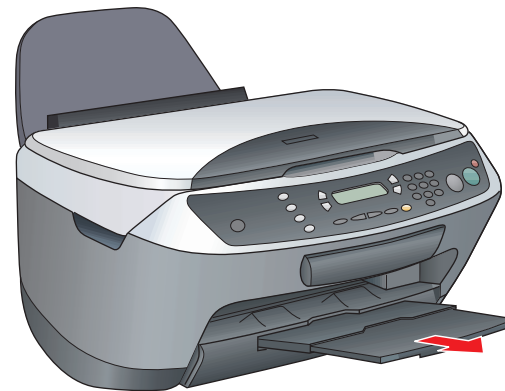

- 2 Slide the edge guide to the left.

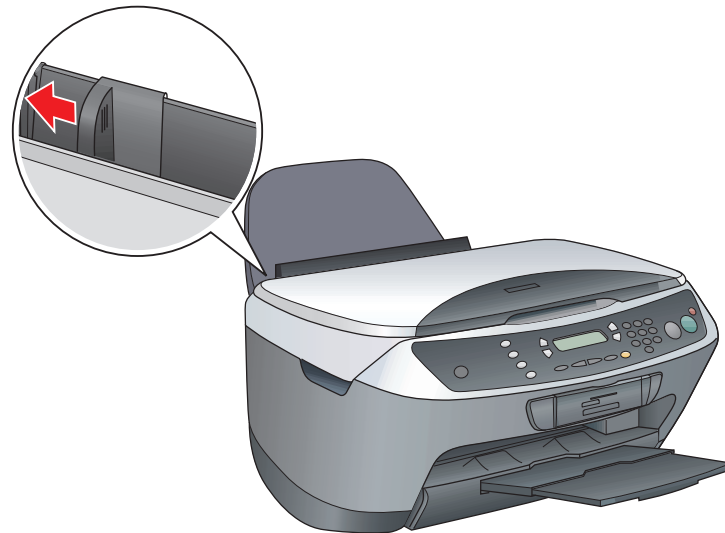

- 3 Place a stack of paper against the right side of the feeder, but don't push it in. Slide the edge guide against the paper.

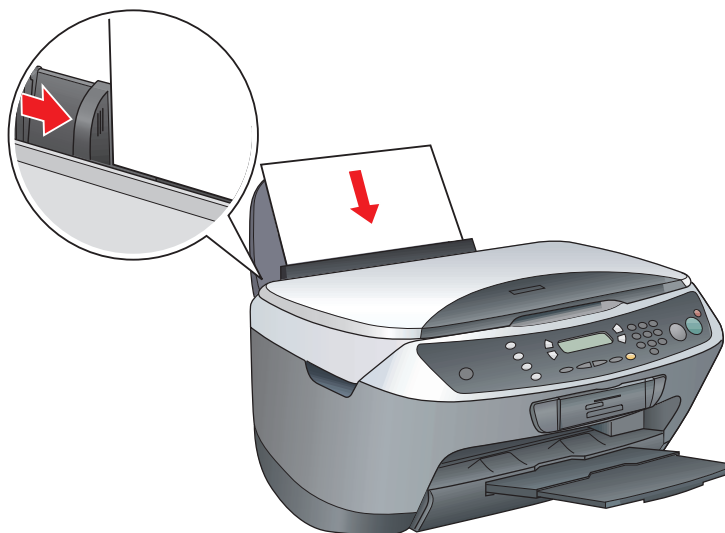

continue

Turn over.....➡


Install Software and Connect to Your Computer

The software works with Windows® 98, Me, 2000, and XP, and Macintosh® OS 8.6 to 9.x and 10.2.x - 10.3.x. Follow the steps below (for Windows), or the steps in the next column (for Macintosh).

Note: There is a Security Lock program on your CD-ROM that lets you prevent unauthorized use of your CX6300. See the *Quick Reference Guide* for instructions on installing and using it.


Windows

- Make sure the Stylus CX is not connected to your computer, then turn on your computer.

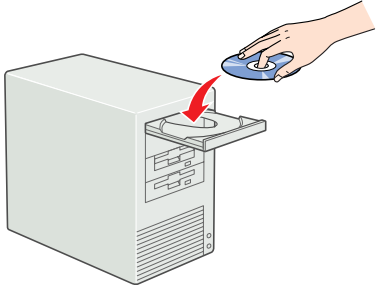Note: If your Stylus CX is turned on and connected to your computer, you may see several New Hardware Wizard screens. Click **Cancel** for each of these screens and disconnect your Stylus CX. You can't install your software that way.
- Insert your English Stylus CX software CD-ROM in your CD-ROM or DVD drive.
 
- Wait until you see this screen, then click **Install**.
 

Note: If the install screen doesn't open automatically, do the following:

For Windows XP: Click **Start** > **My Computer**. Then double-click the **EPSON CD-ROM** icon.

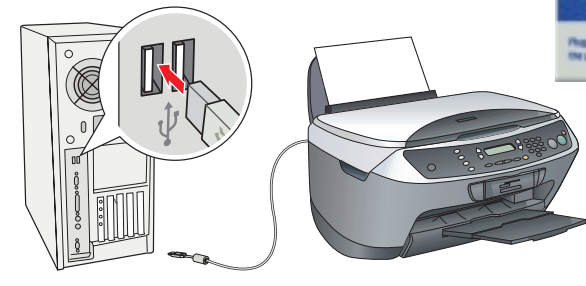For Windows 2000/Me/98: Double-click **My Computer**. Then double-click the **EPSON CD-ROM** icon.
- Read the license agreement, then click **Agree**. Several messages display on your screen.
- When you see this screen, make sure your Stylus CX is turned on, then plug the USB cable into any available USB port on your computer.
 


After you connect your Stylus CX, Windows displays several messages. If you don't see the messages, make sure your Stylus CX is turned on.
- Click **Next** and continue following the instructions on the screen to install the rest of your software, including EPSON Smart Panel,™ ABBYY® FineReader® Sprint, and ArcSoft PhotolImpression.™





Note: It will take several minutes to install the remaining software. Don't cancel the installation.
- At the completion screen, print a test page, if desired. When done, click **Exit**.
- You will see a message asking if you would like to register your product. Click **OK** to launch you browser, or click **Cancel** to close the registration screen.
- When you're done, remove the CD-ROM and restart your computer.

Now you're ready to copy, scan, and print. See the *Quick Reference Guide* or your on-screen *CX6300 Reference Guide* for instructions.


Macintosh

- Insert the English Stylus CX6300 software CD-ROM into your CD-ROM or DVD drive.
- If necessary, double-click the **EPSON** CD-ROM icon, then double-click the **EPSON** installer icon. You see this screen:
 
- Click **Install**.
- When you see the license agreement, click **Agree** to continue.

Note: If you're installing on Macintosh OS X, you may see an Authenticate message several times during installation. Enter your administrator name and password, if necessary.
- For Macintosh OS X: Continue with the following steps.

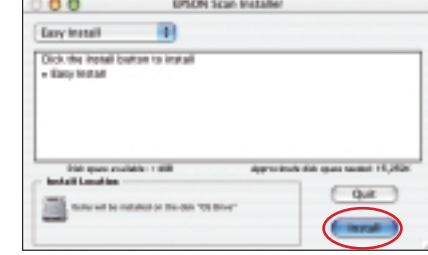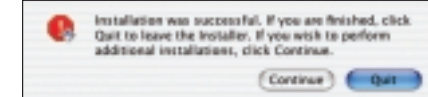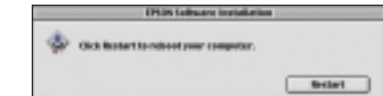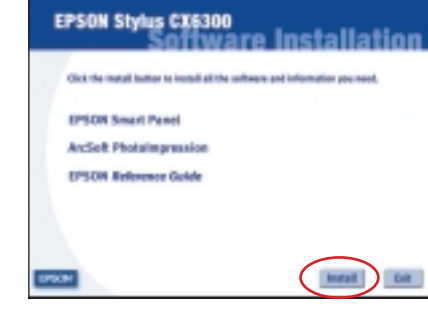
For Macintosh OS 8.6 to 9.x: Follow any on-screen instructions, then continue with step 10.
- Click **Install** at the EPSON Scan Installer screen to install the scanner portion of your software.
 
- Click **Quit** when each part finishes installing.
 
- Follow the on-screen instructions to install additional software components. The system will automatically restart when the first part of the software installation is complete. Go to step 10.
- When you see a message about restarting your computer, leave in the CD-ROM and click **Restart**.
 
- After restarting, double-click the **EPSON** CD-ROM icon, if necessary, then double-click the **EPSON** installer icon to reopen the Software Installation screen.
 




Note: It will take several minutes to install the remaining software. Don't cancel the installation.

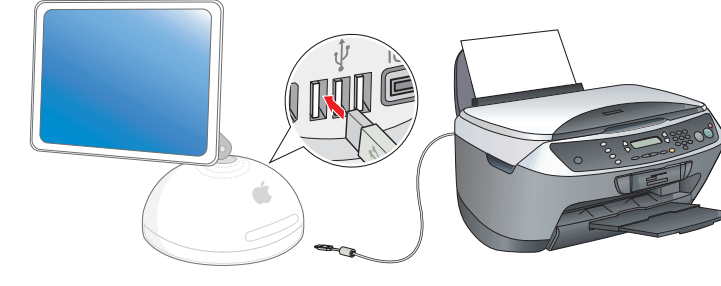If you're installing on Macintosh OS 8.6 to 9.x, you may need to update your Carbon Library. Follow the instructions on the screen.
- Click **Install** to install the remaining software.
- At the end of the installation, click **Exit**.
- You will see a message asking if you would like to register your product. Click **OK** to launch you browser, or click **Cancel** to close the registration screen.
- Make sure your Stylus CX6300 is turned on, then plug the USB cable into any available USB port on your Macintosh.
 
- When you're done, remove the CD-ROM and restart your computer.

Follow the instructions in the next column to add the Stylus CX to the Print Center (for OS X) or the Chooser (for OS 8.6 to 9.x).

Adding the Stylus CX to Print Center for Mac OS X

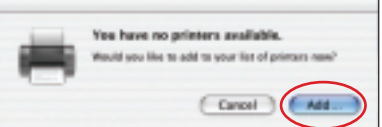- Open the OS X Applications folder, then open the Utilities folder and double-click **Print Center**.
 

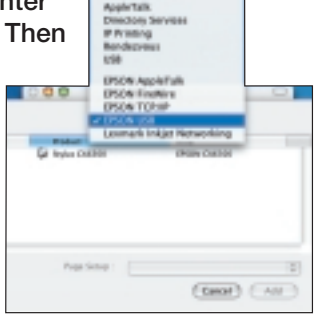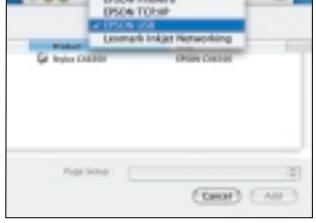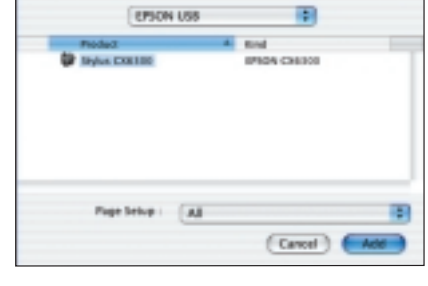If you see this screen, click **Add**.
- If the Stylus CX6300 already appears in the printer list, click it, then click **Add**.
 
- If the Stylus CX6300 doesn't appear in the printer list, make sure it is connected and turned on. Then click **Add**.
 
- Select **EPSON USB** at the top of the next screen.
 
- Click **Stylus CX6300**. The Page Setup pull-down menu at the bottom of the screen becomes active.
- Open the **Page Setup** pull-down menu and select **All**.
- Click the **Add** button. You see the Printer List again with the Borderless feature available.
- Close **Print Center**. You're ready to copy, scan, and print.
- Now start up your Macintosh in OS 9.x. Follow the instructions in the previous column to install the OS 9.x drivers and optional software for Macintosh Classic programs.

Selecting the Stylus CX in the Chooser for Mac OS 8.6 to 9.x

- Open the Chooser from the Apple® menu.
 
- Select **CX6300**, then select your USB port and turn on background printing.
- Close the **Chooser**. You're ready to copy, scan, and print.

Any Problems?

If the red ! error light is on, check the message on the Stylus CX. Try turning the Stylus CX off and then back on to clear the error. If your problem is listed here, try these suggestions. For more information, see your *Quick Reference Guide*, software Help, or on-screen *EPSON Reference Guide*.

- | | |
|---|--|
| <p>The Found New Hardware Wizard appears on your screen.</p> | <p>Click Cancel and follow the steps in section 7. Disconnect the Stylus CX before installing the software.</p> |
| <p>You see an error message when you try to print or scan.</p> | <p>Make sure your Stylus CX is connected to your computer, plugged into a power source, and turned on.</p> |
| <p>The Stylus CX doesn't work.</p> | <p>Make sure you removed the tape from the ink cartridge holder, as described in section 1.</p> <p>Turn the Stylus CX off and then on again.</p> <p>Make sure the ink cartridges are pushed all the way down.</p> <p>Check the LCD screen to see if you or someone else set the Security Lock. See your <i>Quick Reference</i> booklet for details.</p> <p>Make sure your EPSON Stylus CX6300 software is installed correctly.</p> |

Any Questions?

Here's where to look for answers:

EPSON Stylus CX6300 Quick Reference Guide

On-screen EPSON Reference Guide

Double-click the **CX6300 Reference Guide** icon on your desktop to view your *CX6300 Reference Guide*.

On-screen Help for EPSON Smart Panel, ArcSoft PhotolImpression, EPSON Scan, and ABBYY FineReader Sprint

Click the **Help** button or question mark that appears on the screen when you're using any of these programs.

EPSON Technical Support

- World Wide Web**
http://www.latin.epson.com
- Telephone Services**

Country	Telephone number	Country	Telephone number
Argentina	(54-11) 4346-0300	Mexico	
Chile	(56-2) 230-9500	Mexico City	(52-55) 532-84008
Colombia	(57-1) 523-5000	Other cities	(01-800) 506-0700
Costa Rica	(50-6) 210-9555	Peru	(51-1) 224-2336
	(1-800) 377-6627	Venezuela	(58- 212) 240-1111

Software Technical Support

Software	Telephone and Fax	Internet and E-mail
EPSON Smart Panel	(510) 445-8616 Fax: (510) 445-8601	www.newsoftinc.com tech@newsoftinc.com
ArcSoft PhotolImpression	(510) 440-9901 8:30 AM to 5:30 PM, Pacific Time, Monday–Friday Fax: (510) 440-1270	www.arcsoft.com/techmain support@arcsoft.com
ABBYY FineReader Sprint	(510) 226-6719 Fax: (510) 226-6069	www.abbyyusa.com support@abbyyusa.com

EPSON Ink and Paper

For the best prints and copies, use genuine EPSON ink and paper. You can buy them from your local store. Call EPSON for dealer referral.

Look for these cartridges and paper:

- | | | | |
|---|--|---|--|
|  <p>T046120
Black Ink Cartridge</p> |  <p>T047220
Cyan Ink Cartridge</p> |  <p>T047320
Magenta Ink Cartridge</p> |  <p>T047420
Yellow Ink Cartridge</p> |
|---|--|---|--|
-
- | | | |
|---|--|--|
|  <p>Premium Bright White Paper
Ultra-smooth white paper perfect for everyday use—especially double-sided documents.</p> |  <p>Glossy Photo Paper
Heavier weight paper for long-lasting enlargements and snapshots.</p> |  <p>Double-Sided Matte Paper
The ideal paper for high quality printing of brochures, newsletters, or flyers.</p> |
|---|--|--|

EPSON and EPSON Stylus are registered trademarks and EPSON Smart Panel is a trademark of SEIKO EPSON CORPORATION.
General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights to those marks.
© 2004 Epson America, Inc. 1/04
Printed in: XXXXX
XX.XX-XX